

# UX-1

## WIRELESS CONTROLLER FOR PLAYSTATION 3™

Thank you for purchasing the VX-1 Wireless Controller for PS3™ from Gioteck.

We hope that this product will go beyond your expectations for a quality made accessory.

Please read this booklet thoroughly before using the product and review the PS3™ manual for additional details regarding PS3™ operation.


Thank you & enjoy!

### PRECAUTIONS



This product has been designed with the highest concern for safety. However, any electrical device, if used improperly, has the potential to cause harm. To help ensure risk-free operation please pay attention to the following guidelines.

- Use only as intended. This is a precision product, handle with care.
- Contains small parts. Not suitable for children under 3 years of age.
- Store in a dry & dust free area. Do not store in areas of extreme heat or cold, and avoid direct sunlight or heat sources eg. heaters.
- Do not allow the product to get wet or dirty; doing so may cause damage.
- Do not clean with benzene, paint thinner, acetone, alcohol, or other such solvents.
- Do not take the product apart; doing so will void your warranty and may cause electrical shock.

### WARNINGS

 This symbol indicates important installation, operational or maintenance instructions. Always follow these instructions closely.

### ENVIRONMENT

-  Please help to conserve the environment by recycling the inner cardboard packaging of this product.
-  This product should NOT be disposed of in normal household waste. It should be disposed of separately. Please take it to an electrical waste collection point.


### LEGALS

This product complies with the following legal regulations. For further information go to [www.gioteck.com](http://www.gioteck.com)

**Caution:** The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. **Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

 Gioteck hereby declares that this product is in compliance with the essential requirements and other provisions of Directive 2004/108/EC. To view the full version of the Declaration of Conformity please go online to [doc.gioteck.com](http://doc.gioteck.com)

 N28707

 
 
 
# UX-1

## WIRELESS CONTROLLER FOR PS3™

### FEATURES & DETAILS

#### GB

- 01 | Home Button with LED feedback
- 02 | Directional Pad
- 03 | Function Buttons
- 04 | Select Button
- 05 | Start Button
- 06 | L3 Thumbstick
- 07 | R3 Thumbstick
- 08 | R1 Button
- 09 | R2 Button
- 10 | L1 Button
- 11 | L2 Button
- 12 | Mini-USB Port
- 13 | Battery Compartment
- 14 | USB Dongle

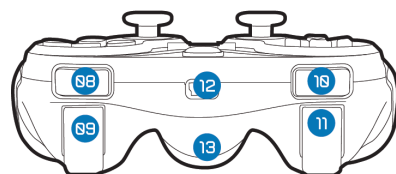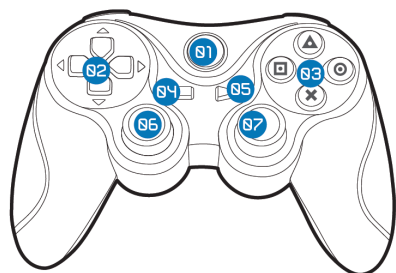

#### FR

- 01 | Touche Home avec DEL de retour
- 02 | Touches directionnelles
- 03 | Touches de fonction
- 04 | Touche SELECT
- 05 | Touche START
- 06 | Touche L3
- 07 | Touche R3
- 08 | Touche R1
- 09 | Touche R2
- 10 | Touche L1
- 11 | Touche L2
- 12 | Port mini-USB
- 13 | Compartiment des piles
- 14 | Dongle USB

#### ES

- 01 | Botón Home con indicador LED
- 02 | Botones de dirección
- 03 | Botones de función
- 04 | Botón SELECT
- 05 | Botón START
- 06 | Botón L3
- 07 | Botón R3
- 08 | Botón R1
- 09 | Botón R2
- 10 | Botón L1
- 11 | Botón L2
- 12 | Mini conector USB
- 13 | Compartimento de pilas
- 14 | Llave USB

#### IT

- 01 | Tasto HOME con LED di stato
- 02 | Tasto direzionale
- 03 | Tasti funzione
- 04 | Tasto SELECT
- 05 | Tasto START
- 06 | Tasto L3
- 07 | Tasto R3
- 08 | Tasto R1
- 09 | Tasto R2
- 10 | Tasto L1
- 11 | Tasto L2
- 12 | Connettore Mini-USB
- 13 | Alloggiamento della batteria
- 14 | Dongle USB

#### DE

- 01 | Home-Taste mit LED-Feedback
- 02 | Steuerkreuz
- 03 | Funktionstasten
- 04 | Select-Taste
- 05 | Start-Taste
- 06 | L3-Thumbstik
- 07 | R3-Thumbstick
- 08 | R1-Taste
- 09 | R2-Taste
- 10 | L1-Taste
- 11 | L2-Taste
- 12 | Mini-USB-Port
- 13 | Batteriefach
- 14 | USB-Dongle

#### PT

 
 
- 01 | Botão Home com aviso LED
- 02 | Botões Direcionais
- 03 | Botões de Função
- 04 | Botão SELECT
- 05 | Botão START
- 06 | Manipulo Analógico L3
- 07 | Manipulo Analógico R3
- 08 | Botão R1
- 09 | Botão R2
- 10 | Botão L1
- 11 | Botão L2
- 12 | Porta Mini-USB
- 13 | Compartimento das Pilhas
- 14 | Adaptador USB

#### CZ

- 01 | Tlačítka Domů s podsvícením LED
- 02 | Směrová podložka
- 03 | Funkční tlačítka
- 04 | Tlačítka Vybrat
- 05 | Tlačítka Start
- 06 | Tlačítka L3
- 07 | Tlačítka R3
- 08 | Tlačítka R1
- 09 | Tlačítka R2
- 10 | Tlačítka L1
- 11 | Tlačítka L2
- 12 | Mini USB port
- 13 | Prostor pro baterie
- 14 | Adaptér USB

### SET UP

- 1) Connect the USB dongle into a USB port on your PS3 and switch on your console.
- 2) The LED on the dongle will begin to flash.
- 3) The player channel will set up automatically and assign your VX-1 controller to your PS3.

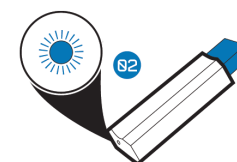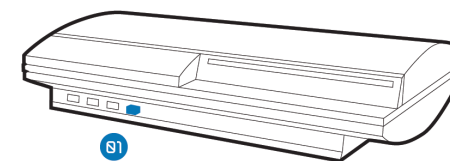

### ASSIGNING CONTROLLERS

To add multiple controllers (up to 7) or assign your controller to a different port go to: **Accessory settings > Reassign controller**. Once connected 1 or 2 LEDs around the home button will light.



ASSIGNED TO PORT 2



ASSIGNED TO PORT 5

### SLEEP MODE

The VX-1 will go into sleep mode if not used for 5 mins. To wake the controller, press the Home button.



FOR TROUBLESHOOTING & VIEW THIS MANUAL ONLINE:  
[WWW.GIOTECK.COM](http://WWW.GIOTECK.COM)



