

**USER MANUAL FOR  
i-MOBIL F-1  
V 1.0**

## Copyright and Acknowledgements

Copyright © i-MOBIL. All rights reserved. Reproduction, transfer, distribution or storage of any part or all of the content in this manual in any form without the prior written permission of i-MOBIL is prohibited.

Operating a policy of continuous development, i-MOBIL reserves the right to make changes and improvements to any of the products described in this manual without prior notice.

Under no circumstances shall i-MOBIL be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The content of this manual is provided “as is”. Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or content of this document. i-MOBIL reserves the right to revise this document or withdraw it at any time without prior

---

notice.

## Table Contents

<b>FOR YOUR SAFETY .....</b>	<b>7</b>
<b>FRONT / SIDE VIEW OF THE PHONE .....</b>	<b>10</b>
<b>SIMPLIFIED MANUAL .....</b>	<b>13</b>
<b>■ BEFORE USING .....</b>	<b>13</b>
<b>■ SLIDING AND LOCKING KEYPADS .....</b>	<b>13</b>
<b>■ SIM LOCK .....</b>	<b>14</b>
<b>■ CALL FUNCTION .....</b>	<b>15</b>
<b>■ NAMES .....</b>	<b>15</b>
<b>■ QUICK ACCESS TO MENU .....</b>	<b>16</b>
<b>■ ONE KEYPRESS TO WAP .....</b>	<b>17</b>
<b>■ ONE KEYPRESS TO V-MEMO .....</b>	<b>17</b>
<b>■ QUICK ACCESS TO CAMERA .....</b>	<b>17</b>
<b>■ GETTING START .....</b>	<b>19</b>
<b>■ INSTALLING/CHANGING BATTERY .....</b>	<b>19</b>
<b>■ INSERT/CHANGE SIM CARD .....</b>	<b>20</b>
<b>■ CHARGING THE BATTERY .....</b>	<b>20</b>
<b>■ SWITCH ON / OFF .....</b>	<b>22</b>
<b>■ MAKING AND ANSWRING CALLS .....</b>	<b>23</b>

---

■ MAKING CALLS.....	23
■ ANSWERING CALLS .....	25
■ OPTIONS.....	26
<b>NAVIGATING THROUGH MENUS.</b>	<b>28</b>
<b>NAMES.....</b>	<b>29</b>
■ SEARCH.....	29
■ ADD .....	30
■ EDIT.....	31
■ ERASE .....	32
■ SPEED DIAL .....	33
■ SETTING .....	33
■ COPY .....	34
■ MOVE.....	35
<b>MESSAGE.....</b>	<b>36</b>
■ SMS.....	36
■ MMS .....	40
■ BROADCAST.....	46
■ VOICE MAIL .....	47
<b>MULTIMEDIA .....</b>	<b>48</b>
■ CAMERA .....	48
■ V-MEMO .....	51

---

■ MEDIA FOLDER .....	53
■ FM RADIO.....	54
<b>RECORD .....</b>	<b>56</b>
■ DIALED .....	56
■ RECEIVED .....	57
■ MISSED .....	57
■ ERASE .....	57
■ TIME INFO.....	58
■ COST INFO.....	58
■ GPRS INFO.....	59
<b>SERVICE.....</b>	<b>60</b>
■ CALL DIVERT .....	60
■ CALL BARRING.....	62
■ CALL WAITING.....	64
<b>SETTINGS.....</b>	<b>66</b>
■ AUDIO SETTING .....	66
■ PHONE SETTING .....	69
■ CALL SETTING .....	74
■ NETWORK SECU.....	77
■ TOOLS .....	80
■ STK .....	85

<b>GAMES.....</b>	<b>86</b>
<b>WAP.....</b>	<b>88</b>
■ HOME.....	88
■ ENTER URL .....	89
■ FAVOURITES .....	90
■ PUSH MESSAGES INBOX .....	90
■ TOOLS .....	91
■ HISTORY .....	93
<b>APPENDIX.....</b>	<b>95</b>
■ TECHNICAL DATA.....	95
■ USE AND MAINTENANCE .....	97
■ PROBLEMS AND SOLUTIONS.....	99

## For Your Safety



Switch off mobile in hospitals where sensitive medical equipment in.



Switch off mobile at a refueling point, or near chemicals and blasting areas.



SIM card can be removed from the phone, keep it in a safe place out of the reach of young children.



Don't use incompatible power supplies.



Don't dismantle the phone or battery by yourself, instead of qualified personnel.

**Damaged Seal will cause the invalidation of the warranty.**



Uses only approved accessories, and follow the local rules about useless batteries.



Mobile is a radio transmitter / receiver, so it may interrupt PC, TV, and radio nearby.



Switch off mobile in an aircraft, for wireless devices can cause interference in aircraft.



Use earphone while driving to avoid traffic accident.

Attention: The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types N5603 (FCC ID: TTP05F-1) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 0.409 W/kg and when properly worn on the body is 0.210 W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.5cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

**Warning: Improper use will cause invalidation of the warranty**

## Front / Side View of the Phone



Illustration 1 (for reference only)

## ■ Index of the Mobile Key

<b>1</b>	<b>Receiver</b>	Phone answering
<b>2</b>	<b>LCD</b>	260K TFT
<b>3</b>	<b>Number Key</b>	Input number and characters, or swiftly shift to menu
<b>4</b>	<b>Mouthpiece</b>	Phone speaking
<b>5</b>	<b>Left/Right function key</b>	Performs the function indicated at the bottom left corner of LCD.
<b>6</b>	<b>Navigation Key</b>	Left/Right/Up/Down
<b>7</b>	<b>OK Key</b>	Select the highlighted manual or item by pressing this key to confirm; for detailed functions refers to the following manual
<b>8</b>	<b>Dial Key</b>	Dial numbers and answer a call
<b>9</b>	<b>Power Key</b>	Long press to switch on/off the mobile; short press to end or reject a call & exit from any functions at any time
<b>10</b>	<b>Speaker</b>	Play the sound
<b>11</b>	<b>Camera</b>	Built-in with 300K pixels
<b>12</b>	<b>Side key</b>	Long press to turn on LCD when

		slide is closed; Long press to reject from standby mode; Long press to turn off alarm when it is on; Long press to capture when slide is open.
13	Port	Port for Earphone

Please refer to the illustration 1 while you read this user menu.

## SIMPLIFIED MANUAL

### ■ BEFORE USING

1. Insert the SIM card into mobile  
**Support the SIM Card with a voltage of 1.8V and 3V**
2. Please charge the battery for 12 hours without break before using the phone for the first time.
3. At stand-by mode or in main menu, making a call by pressing numbers, and then press **Dial Key**.
4. Press **Power Key** or close the slide to end up a call.

### ■ SLIDING AND LOCKING KEYPADS

1. Move up the slide to unlock the keypad automatically.
2. Move down the slide completely to lock the keypad automatically.
3. Long press **Left Function Key** to lock/unlock

---

the keypad when the slide is closed.

**Note: Please move up and down the slide properly. Do not press the bottom battery cap hardly.**

## ■ SIM Lock

Situations below may appear while using other SIM card:

1. After other SIM card is inserted, words "Enter PIN" will appear while Power On the phone. Please key in the PIN number accordingly.
2. After keying in the PIN number, words "Please Restart the Mobile Phone" will be displayed. Please restart your mobile phone in order to activate the normal use.

If the PIN number is wrong, times of keying in will be shown on the display. After 5 times' of keying in, the phone will be locked up permanently, words "Please update the software to activate the phone" will be displayed.

## ■ CALL FUNCTION

1. Press **Dial Key** or **OK Key** to receive an incoming call.
2. When the slide is closed, press **Side Key** to reject calls; when the slide is open, press **Power Key** or simply close the slide to end calls.
3. Adjusting speaker Volume during a call: Press **Left/Right Navigation Key**.
4. Redial number: Press **Dial Key**, then use **Up/Down Navigation Key** to select the number you are looking for. Press **Dial Key** to connect the call.

## ■ NAMES

1. Under the sleep mode (slide is open or unlocked), press **Right Function Key** to bring up names list. Scroll **Up/Down** by using the **Navigation Key**, or you can use the **# Key** and **\* Key** to turn the page up and down, then press **OK Key**.
2. If you would like to use names during a call, press

---

**Left Function Key** to get into the next menu. Using **Up/Down Navigation Key** to select **Names** and press **OK Key**.

## ■ **QUICK ACCESS TO MENU**

1. Under the sleep mode (slide is open or unlocked), press **OK key** to enter main menu and press the “up”, “down”, “left” and “right” Navigation Key to enter into **Audio Setting**, **Camera**, **FM Radio** and **SMS**
2. press **Left Function Key** to surf **Wap** and press **Right Function Key** to bring up **Names** entry. Press **Dial Key** to check the latest dialed numbers and long press **# Key** to switch on/off the speaker.
3. Under main menu, use **Up/Down Left/Right Navigation Key** to select icons you want and press **OK Key** to enter. Press **Dial Key** to see the dialed number. Short press **Power Key** to return to main menu directly.
4. Press **Left/Right Navigation Key** to select among the 2nd level menu while **Up/Down Navigation Key** for the 3rd level menu. Press **OK Key** to enter the 3<sup>rd</sup> level menu.

---

5. Press **Right Function Key** to return to the previous Menu or short press the **Power Key** to return to the main menu directly.

## ■ **ONE KEYPRESS TO WAP**

Under sleep mode or the slide is closed but unlocked, press **Left Function Key** to menu of wap.

## ■ **ONE KEYPRESS TO V-MEMO**

Under sleep mode, long press Number Key 1 to record voice. When record, press Left Function Key to play or save.



## ■ **QUICK ACCESS TO CAMERA**

Under sleep mode or main menu, long press **Side Key**, activate viewfinder(general mode) and press **OK** to capture the picture, then press **OK** to store the picture.


## GETTING START

### ■ INSTALLING/CHANGING BATTERY

1. Make sure the phone is switched off before changing battery.
2. Change Battery

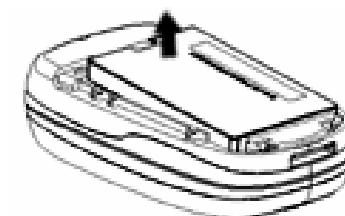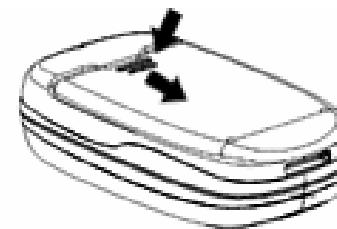

3. Install Battery

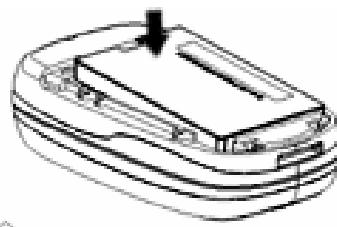

## ■ INSERT/CHANGE SIM CARD

1. Make sure your phone is switched off and the battery is removed before you insert/change the SIM card.
2. Face the gold color contact point of SIM card towards the cellular phone and push in the SIM card into the slot.




**This phone only supports 1.8 volt and 3 volt SIM cards.**

## ■ CHARGING THE BATTERY

1. Make sure the battery is inserted into the phone correctly before charging.

2. Connect the lead of the charger to the socket on the bottom of the phone and plug to an AC wall socket

**Warning: Please DO NOT remove the battery while charging!**

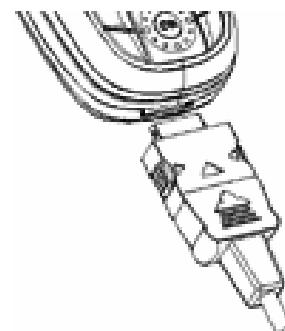

3. The animation **charging** is displayed when the phone is turned off. The phone can work while charging. Please keep charging the battery continuously for 12 hours when you use the phone for the first time and make sure the battery has been fully charged.
4. Black screen will appear during charging if the voltage of the battery is too low (e.g. Not in use for a long time, etc.). The animation Charging will appear after several minutes.

## ■ SWITCH ON / OFF

1. Long press the Power Key to turn on or off the mobile phone.

Enter PIN code if asked (shown as \*\*\*\*). Please refer to [Settings/Network Security/PIN](#) for more information.

## MAKING AND ANSWRING CALLS

### ■ MAKING CALLS

#### [Making Calls by Pressing Number Key](#)

1. (Slide is open or unlocked) Press the phone number by using **Number Key** under sleep mode or main menu mode. To edit the number, press “up” & “down”, and “left” & “right” **Navigation Key** to move the cursor and then press the **Erase** one time to clear one number left to the cursor. Or long press this key to delete all numbers left to the cursor in this line. Long press "1", key in \*86; Long press "9", key in 060. For International Call, long press the **\*** **Key** until change to “+” and then follow by entering the number. To reach an extension number, enter the switchboard number at first, long press **# key** until it changes to “P”, and then enter the extension number.).
2. Press **Dial Key** to make the call.

3. To end up the call, short press **Power Key** or simply close the slide.
4. Press **Dial Key** to bring 20 records of the dialed numbers under sleep mode or main menu mode. Select a number, press **OK Key** and then press **Dial Key** to make the call. If you want to **Dial /Send Message / Erase / Save**, press **Option**.

## Making Calls by Using Names

1. When the slide is open or unlocked, enter into the names by using **Right Function Key**, then select the name by using **Navigation Key**, press **OK** to bring up the names entries.
2. When you enter into names entries, you can press **Dial Key** to call the default number, or select another number by using **Up/Down Navigation Key**, press **Dial Key** to call.
3. You can also enter **Names/Search** menu to find the number you are looking for.

## Redial the last Dialed/Received/Missed

1. In the main menu mode, use **Up/Down Navigation Key** to select last Calls and press **OK Key** to enter.
2. Press **Left/Right Navigation Key** to select among **Dialed/Received/Missed**.
3. Press **Up/Down Navigation Key** to the number you are looking for and press **Dial Key** to connect.

## Speed Dial

1. Long press **Number Key** 2-8 in the main menu for speed dialing. Numbers are requested to be pre-set to different number Key before dialing. (Please refer to **Names/Speed Dial**).
2. After pressing a number key, the phone will connect it automatically.

## ANSWERING CALLS

1. Press the **Dial Key** to answer calls.
2. Short press **Power Key** or **Reject** to end or reject calls.
3. Adjusting Receiver Volume while speaking on the

---

phone: press **Left/Right Navigation Key**.

## ■ **OPTIONS**

This mobile phone provides varies functions during calls (many of them are based on Network Service which must be applied from Network Operators firstly). Below are the functions that the phone provides by pressing **Option** during a call. Use **Up/Down Navigation Key** to select the following functions. Press **OK Key** to confirm.

1. **Hold**: To select this function, user can receive another incoming call or dial another number without hang up the current call.
2. **Dial New**: Select this function to make another call while you are on the phone. (The current calling will be held automatically).
3. **End this call**: Select this function to end the current call.
4. **End all calls**: Select this Function to end up all the calls.
5. **Send DTMF**: DTMF means duple tone & multiply frequency. If this function is selected, the dialed

number will be sent as DTMF meaning that you will be connected to the number with extension # automatically (Refer to Making a Call).

6. **Mute**: Select this Function to switch on/off the sound of the microphone.
7. **Names**: Enter into names to select the number needed.
8. **Main Menu**: Select this Function to display the main menu during a call.
9. **Conference Call**: This option appears when there are more than three phones being connected with. Select this Function to enable call conference function. (This function requires network support, please apply with the Network Operators.

## Navigating Through Menus

### Names

Search  
Add  
Edit  
Erase  
Speed Dial  
Setting  
Copy  
Move

### Message

SMS  
MMS  
Broadcast  
Voice Mail

### Multimedia

Camera  
V-memo  
Media Folder  
FM Radio

### Record

Dialed  
Received  
Missed  
Erase  
Time Info  
Cost Info  
GPRS Info

### Service

Call Divert  
Call Barring  
Call Waiting

### Setting

Audio Setting  
Phone Setting  
Call Setting  
Network Secu.

### Extras

### Tools

STK

### Games

Game1  
Game2  
Setting

### WAP

Home  
Enter URL  
Favourites  
Push messages  
inbox  
Tools  
History

## NAMES

You can save the name, default number, cell phone number, office number, home phone number, and email address to your mobile phone in the Phone book record. But you can only save one phone number to your SIM. There are totally 500 entries you can save to your mobile phone. User can use the following function to operate the phone. When **Fixed Dialing** is **on**, **Names** can not be entered. Under the sleep mode, press **Right Function Key** to show the name list under **Fixed Dialing**. Details of Fixed Dialing please refers to **Call Setting/Fixed Dialing**.

### ■ SEARCH

Under the main menu, use **Up/Down Navigation Key** to select **Names**.

1. **By Name:** enter a name or the first letter of a name, then press **Search**. Or find by Group, press **Up/Down Navigation Key** to the group needed and press **OK** to find. Press the **# \*** to change the page.
2. Scroll to select a names entry and press **Dial**, the number will be connected automatically.
3. Press **Option** to dial, send message, edit, erase, group,

and etc.

4. Press **Exit** to return to the above menu or short press **Power Key** to return to the main menu.
5. Press **Ok** to select the phone number under **Fixed Dialing**, which you can make a call or send SMS only.

## ■ ADD

Under main menu mode, scroll **Up**, **Down**, **Left**, **Right** to select **Names**, press **Right Navigation Key** once to see the menu **Add** containing following choices:

1. Use **Up/Down Navigation Key** to select **To -> Phone To ->SIM Card**. Press **OK Key** or **Left Function Key** to bring up the new record that you can input the following info. Please also input the area code when you entry the numbers by using the **Number Key**.

### **To save in the phone:**

**1<sup>st</sup> Line:** To enter a name.

**2<sup>nd</sup> Lind:** To enter default number (This number will be recognized by the mobile when you select

the record and press **Dial Key**

**3<sup>rd</sup> Line:** To enter a mobile number.

**4<sup>th</sup> Line:** To enter an office number.

**5<sup>th</sup> Line:** To enter a home number.

**6<sup>th</sup> Line:** To enter an email address.

### **To save in the SIM card**

- 1<sup>st</sup> Line:** To enter a name.
- 2<sup>nd</sup> Lind:** To enter default number
2. When finishing the entry, press **Save** or **OK** to store the record.
3. Press **Exit** to return to the previous menu or short press the **Power Key** to the main menu.

## ■ EDIT

You can edit your entry by pressing the **Right/Left Navigation Key** under the menu of **names**.

1. All the records will be listed under the screen of **Edit**. Use **Up/Down Navigation Key** to select the record you want to edit. You can use the **“#” Key** and **“\*” Key** to turn page down and up to select the records.

Press **OK** to get into the record screen and scroll up and down to select the info you want to change.

2. Use **Save** to store the edited information.
3. Press **Exit** to return to the previous menu or short press **Power Key** to the main menu.

## ■ ERASE

You can erase your record by pressing **Left/Right Navigation Key** under the menu of **Names**.

1. **One by One**: Press **OK** to get into **Erase** menu. Use **Up/Down Navigation Key** to select the record you want to delete. Press **OK Key** to confirm.
2. **SIM Card**: If you want to erase all the records in you SIM Card, select **SIM Card** and press **OK** to confirm.
3. **Phone**: To erase all the records that saved in your mobile phone, select **Phone**, and Press **OK** to confirm.
4. Press **Exit** to return to the previous menu or short press the **Power Key** to the main menu.

## ■ SPEED DIAL

Select **Names** under main menu and press **Left/Rightt Key** to view **speed dial** menu. You can set up 8 speed dial numbers from #2 to #8.

1. Use **Up/Down Navigation Key** to select the speed dial number you would like to set up. The number has not been set up will be displayed as “Empty”, press **OK Key** to bring up the name list. Use **Up/Down Navigation Key** to select a name entry in which you will select a number as Speed Dial number. Press **OK Key** to confirm.
2. If you select the number that has been set up before, press **Option** to edit or erase.
3. Press **Exit** to return to the previous menu or short press **Power Key** to the main menu.

## ■ SETTING

You can set up your names by pressing the **Left/Right Navigation Key** to get into the **Setting** menu.

1. **Status**: You can check your names status by pressing **OK**.

2. **Own Number:** You can find out your own number by pressing **OK**.
3. **Group Tone:** You can set up 4 group Ring tone by pressing **OK**. After you get into the **Group Tone** menu, use **Up/Down Navigation Key** to select the group name, press **OK** to bring you to the next menu, select the incoming tone by use **Up/Down Navigation Key**. Press **OK** to confirm.

## ■ COPY

Select **Names** under main menu and press **Left/Right Navigation Key** to view **Copy** menu.

1. Choose **SIM → Phone** or **Phone → SIM**, press **Ok** to enter
2. You can choose **One By One** or **All** from SIM card to Phone, or from Phone to SIM Card.
3. Press **Ok** to enter **One By One**, all names will be shown. Choose the one you want to copy and press **Ok**.
4. Press **Ok Key** to enter **All**, all default numbers can be copied from SIM card to Phone or from Phone to SIM card.

## ■ Move

Choose **Name** under the main menu, press **Left / Right Navigation Key** to see the menu of **Move**. Press **Up/Down Key** to select:

1. Choose **SIM → Phone** or **Phone → SIM**, press **Ok** to enter
2. You can choose **One By One** or **All** from SIM card to Phone, or from Phone to SIM Card.
3. Press **Ok** to enter **One By One**, all names will be shown. Choose the one you want to move and press **Ok**.
4. Press **Ok Key** to enter **All**, all default numbers can be moved from SIM card to Phone or from Phone to SIM card.

## MESSAGE

### SMS

Scroll **Up/Down** to select **Message** under the main menu mode, press **OK** to get into the 3rd level menu of **SMS**. Press **Up/Down Navigation Key** to select the wanted sub-menu. Press **OK Key** to confirm. Password is needed to get into a certain number of 3<sup>rd</sup> level menus if you have set up **Phone Lock** in **Settings/Network Secu**.

When **Fixed Dialing** is **On**, please note:

1. Please add SMS info center number to the list of **Fixed Dialing**. SMS info center number can be found under **Message/Setting/Info Center**.
2. When you need to enter the call number after entering the message, press **Ok** only to show the name list of **Fixed Dialing**.

Fixed Dialing please refer to **Call Setting/Fixed Dialing**.

### New

1. You can enter no more than 160 English letters (space

included) for each message if **New** is selected. This mobile supports continuous SMS sending up to 6 items including 912 English letters.

2. Press **Option** to **Send**, **Save to SIM**, **Send to Group**, **Save to Phone**, **Insert Name**, **Insert Number**.
3. Short press **Erase** to delete the letter left to the cursor; long press **Erase** to delete all letters. Short press **Power Key** to return to the Main Menu without saving the SMS.

### Received

All the SMS received are shown in this menu (including messages that been read and not been read). Select **Erase All** to delete all messages received

1. Press **Up/Down Navigation Key** to select the **SMS** and press **Read** to read its content, the sender's number (or name), date and time. If the message is too long and you cannot read them all in one screen, use **Up/Down Navigation Key** to turn the page up and page down.
2. **Reply**: To reply this SMS by pressing **OK Key** or **Left Function Key**.

- **Erase:** To delete this message.
- **Forward:** To send this message out again.
- **Edit:** To edit the content of the message and save it
- **Call:** To call the sender
- **Extract:** to extract useful data such as number and URLfrom the message.
- **Send to Group:** To send this message to a number of people.
- **Save to SIM:** To save the message to SIM card.
- **Save to Phone:** To save the message to the phone (this does not work if the SIM card is with big capacity).

3. Press **Exit** to return to the previous menu or short press **Power Key** to the main menu.

## Saved

All the saved message (**In SIM Card** and **In Phone**) are shown in this menu (with either saved or sent status). Press **Up/Down Navigation Key** to select the menu and press **Option** to enter.

Press **Navigation Key Up/Down** to select messages stored

in SIM card or Mobile. Press **OK Key** to enter into list.

1. Press **Up/Down Navigation Key** to select one to read. Use **Up/Down Navigation Key** to page up and page down the content of the message. (All the message will be saved **In SIM Card** but not **In Phone** if the SIM card is with big capacity).
2. Press **OK Key** or **Left Function Key** to bring up the next menu. Use the **Up/Down Navigation Key** to select functions including **Erase**, **Send**, **Edit**, **Extract** **Sent to Group** , and **save to phone**. (Please refer to the same function in Received SMS). Press **OK** to confirm. The SMS **In SIM Card** can be saved to the phone. You can pick up numbers and URL from message in Extract.
3. Press **Right Function Key** to return to the previous menu or short press **Power Key** to the main menu

## Setting

1. **Info. Center** is a set number for receiving or sending SMS from the network. This number must be set before using SMS. Press **OK** to get into this selection and save the number after setting.

2. **Delivery Rept.:** Use **Up/Down Navigation Key** to select **On** and **Off** to turn the function of **delivery report** on or off after you sent the message. Press **OK** to confirm.
3. Select **Validity** to set the saving period of the message.
4. **Memory Status** shows the SMS memory space in SIM card and phone
5. Press **Right Function Key** to **Exit** to the previous menu, or short press **Power Key** to the Main Menu.

## Template

Ten preloaded common use phrases are included in the Template which can be used to speed reply SMS.

## ■ MMS

Select **Message** under Main Menu mode, press **OK** and then the “right” **Navigation Key** once to get into **MMS** menu. Use **Up/Down Navigation Key** to select the sub-menu you want and press **OK** to confirm. MMS requires network support. Please make sure your SIM card supports MMS or consults your network operator before using this function. Password is needed to get into some

**3<sup>rd</sup> level menus** if you select **Phone Lock** in **Settings/Network Secu.**

## New MMS

Select **New MMS** to create a new MMS by typing in words directly or press the left function key to select the following **options**: (please press **# key** to choice the way of input)

1. **Send:** Type in the recipient's phone number and other relative information, e.g. Cc., Bcc. Use comma between numbers or e-mail addresses. Press **send** to send the MMS.
2. **Insert:** Select this option to insert **Images**, **Sound**, **New Image** and **Slide** to the current MMS. Press **OK** to get into the option you want and press **Up/Down Navigation Key** to scroll in relevant listings, and then press **OK** to confirm.
3. **Template:** This function is to set the display mode of words and images by **above/below** or **Auto**. Press **Up/Down Navigation Key** to select and press **OK** to confirm. All the words and images will be displayed the way you select.
4. **Preview:** Select this option to preview the new MMS.

You can also use **Up/Down Navigation Key** to turn the page up and down.

### 5. **Save**: To save the new MMS.

## Inbox

Newly received MMS is saved to the **Inbox**. Press **Up/Down Navigation Key** to select the one you like to read and press **OK** to confirm. Then you can select from the options below to operate.

### 1. **Read**: To read the current MMS, press **Up/Down Navigation key** to change the page; or press the **Option** to do the following option:

- **Extract**: To pick out images, sound, etc. from the current MMS and **save** them. Pictures and voices are stored in picture folder and voice folder respectively in Multimedia Folder.

- **Erase**: To delete the current MMS.
- **Forward**: Type in the recipient's mobile phone number and other relevant info. Such as Cc., Bcc. and press **OK** to forward the MMS.
- **Reply**: Press **Up/Down Navigation Key** to scroll

and press **OK** to select between reply by SMS mode or by MMS mode. Then type in the content and press **OK** to send.

- **Dail**: to dial the number of current MMS sender.
- 2. **Erase**: To delete the current MMS.
- 3. **Details**: Information of the topic, sent date, number and size, etc. of the current MMS.
- 4. Press **Right Function Key** to **Exit** to the previous menu, or short press **Power Key** to the Main Menu.

## Outbox

All the MMS you haven't sent out are saved this this outbox. Please refer to the **Saved MMS**.

## Sent MMS

All the Sent MMS are in this menu, press **Up/Down Navigation Key** to select and press **OK** to read. Then you can select from the options below to operate.

1. **Read**: To read the current MMS. After you read your MMS, you can simply Exit by using **Right Function**

**Key**; or use the **Left Function Key** to do the following option:

- a) **Extract**: To pick out images, sound, etc. from the current MMS and **Save** them.
- b) **Erase**: To delete the current MMS.
- c) **Forward**: Type in the recipient's mobile phone number and other relevant info. Such as Cc., Bcc. and press **OK** to forward the MMS.
- d) **Reply**: Press **Up/Down Navigation Key** to scroll and press **OK** to select between reply **By SMS** mode or **By MMS** mode. Then type in the content and press **OK** to send.

2. **Erase**: Press **OK** to delete the current MMS.
3. **Details**. Information of the size or other aspect of the current MMS.
4. **Edit**: Similar function to the same option in SMS.

Press **Exit** to the previous menu, or short press **Power Key** to the Main Menu.

### Saved MMS

All the Saved MMS are in this menu, press **Up/Down Navigation Key** to select and press **OK** to read.

1. **Read**: To read the current MMS. Long press **Up/Down Navigation Key** to change page. Press **Option** to extract, erase, forward and reply.
2. **Erase**: To delete the current MMS.
3. **Details**: Information of current MMS including size and etc.
4. **Edit**: Similar function to the same option in SMS.
5. **Send**: Edit or enter recipient's mobile number and other information, say forward or cc. Then press **Confirm** to send MMS (only for files in folder Outbox/Saved MMS).

### Setting

1. **MMS profile**: Get into this option to select the relevant WAP information
2. **Delivery Rept.**: Includes **Send Rept.** and **Read Rept.**, and each of them has two statuses **ON** and **OFF**. Select to set the display of the sending and reading information of the MMS. Press **Up/Down Navigation Key** to select and press **OK** to confirm.
3. **Validity**: To set the saving period of the MMS.

4. **Download status:** This option includes **Deferred Dld** and **Immediate Dld**. Press **Up/Down Navigation Key** to select and press **OK** to confirm.
5. **Slide Duration:** Press **Up/Down Navigation Key** to select and press **OK** to confirm the slide duration of the MMS.

Press the **Right Function Key** to **Exit** to the previous menu, or short press **Power Key** to the Main Menu.

## ■ BROADCAST

This function requires network support, please contact the network operator.

1. Press **OK** to get into **Read**, then the activated Broadcast message will be displayed. “No Message” is displayed if there is no broadcast message available in the activated topic. Press **Next** to show another message.
2. Select **Topics** to do the **User Defined** or **Activate** the set topic. Press **Up/Down Navigation Key** to select between the following function if you selected **User Defined**.

- **Add:** To add the topics;
- **Edit:** To edit the current topic;
- **Erase:** To erase the current topic.

3. Press the **Right Function Key** to **Exit** to the previous menu, or short press **Power Key** to the Main Menu.

## ■ VOICE MAIL

**Voice Mail** is based on network service, so please contact the relevant network operator to apply for this service. Select **Message** in Main Menu, press **Left/Right Navigation Key** three times to select **Voice Mail**. Press **Up/Down Navigation Key** to select between **Get V-mail** and **V-mail Box No.**

1. Press **Ok** to get into **Get V-mail** and dial the V-mail box number.
2. Press **OK** to get into the **V-mail Box No.** to edit the number. Use **Left/Right Navigation Key** to move the cursor. Press **Right Function Key** to Clear the number left to the cursor. Press **Left Function Key** to Save after the editing.

Press **Right Function Key** to **Exit** to the previous menu, or short press **Power Key** to the Main Menu.

# MULTIMEDIA

## CAMERA

### Take Photo

**Shortcut**—When the slide is open under standby mode, from home screen, long press **Side Key** to activate the Camera (general mode) and viewfinder. Press **OK** to capture and again **OK** to store the picture.

Choose **Multimedia** under Main Menu, press **Left/Right Navigation Key** to see the third menu of **Camera**. Press **Up/Down Navigation Key** to select and press **OK** to enter.

**Note: It is impossible to take a photo when the slide is closed.**

### General Photo

1. Use **Up/Down Navigation Key** to zoom in and zoom out (When the size of the photo is set as 640\*480, the focus of the camera can not be adjusted by

pressing **UP/Down Navigation Key** ), press **OK key** to take and save the picture.

2. Press **Left Function Key** to get into **setting** screen and **Right Function Key** to quit, press **Left /Right Navigation Key** to change the picture size , quality , brightness , effect ; Press **Up/Down Navigation Key** to change the current setting. Press **OK Key** to take a photo.
3. After action above, press **OK Key** to save the picture. Then it will return to home screen automatically. Or press **Right Function Key** to abort saving and return to the viewfinder.
4. Under viewfinder, press **Right Function Key** to quit.

### Sticker Photo

1. When you get into Sticker photo viewfinder, press **Left/ Right Navigation Key** to change the frame. Press **Up/Down Navigation Key** to zoom in and out. Press **OK Key** to take photo.
2. Setting is the same as in General Photo.(The size doesn't adjust.)

3. After action above, press **OK Key** to save the picture. Then it will return to the viewfinder automatically.

## Album

Scroll **Up/Down** by using the **Navigation Key** to select between **General Photo**, **Sticker Photo** Press **OK Key** to get into next sub-menu. But if you have used the phone lock function (**Settings / Network Security / Phone Lock**), you have to enter your password to get into the 3rd level menu. Press **Option** to:

1. **Rename**: Change the name of current photo.
2. **Erase**: Erase selected photo.
3. **Erase All**: Erase all photos.
4. **Set As Wallpaper**: You can settle the photo as wallpaper.

## Setting

1. You can set up default 1. **Size**, 2. **Effect**, 3. **Quality**, 4. **Brightness** by using **Up/Down Navigation Key**. Press **OK Key** to confirm.
2. Press **Exit** to return to the upper menu or short press

3. Press **Power Key** to return to main menu

## ■ V-memo

Choose **Multimedia** under Main Menu, press **Left/Right Navigation Key** to see the third menu of **V-memo**. Press **Up/Down Navigation Key** to select and press **OK** to enter.

### Add New

Under this menu, press **Up / Down Navigation Key** and **OK** to choose and select **Voice Memo** and **Ring Tone**.

### Voice Memo

Under this Menu, it shows the Total time that you can use to record on the menu, and the Recorded time which you have already taken. Press **OK Key** stop the record and brings you the next menu for to **Play** and **Save**. Select the function and press **OK** to confirm:

1. **Play**: To play the current recording.

2. **Save**: To Save the current recording.
3. Press **Exit** to return to the previous menu, or short press the **Power Key** to return to the Main Menu.

## RING TONE

Same as V-MEMO.

### Saved

Under this menu, press **Up / Down Navigation Key** and **OK** to choose and select **Voice Memo** and **Ring Tone**.

### Voice Memo

Press **Up/Down Navigation Key** to select the record that you have already saved. Press **OK** to play the record. Select the function during play:

1. **Rename**: To edit the title of the current saved record.
2. **Erase**: To Erase the current saved record.
3. **Erase ALL**: To Erase all the current saved record.

4. **Detail**: Display the title, length, and record date of current record.
5. Press **Exit** to return to the previous menu, or short press the **Power Key** to return to the Main Menu.

## RING TONE

Same as the **Voice Memo**, additionally add following operation:

1. **Incoming tone** : Set saved ring tone as **Incoming Tone**.
2. **Message Tone**: Set saved ring tone as **Message Tone**.

## ■ Media Folder

Select Media Folder under the main menu and press **Right/ Left Navigation Key** to see the third menu. Press **Up /Down Navigation Key** to select and press **OK** to enter.

Enter **Media Folder** can browse multimedia files saved in

the phone, such as: [Album](#), [Download Image](#), [Download Midi](#), [PC Image](#), [PC Midi](#), [Voice Memo](#). Also, you can erase them. Because the memory of the phone for the files are shared, the space of file in every folder will be changed according to the arrangement

Password is needed to get into some 3<sup>rd</sup> level menus if you select [Phone Lock](#) in [Settings](#)/[Network Secu](#).

## ■ FM Radio

Select [Multimedia](#) under the main menu and press **Left / Right Key** to choose “[FM Radio](#)” and **OK** key to enter the third menu.

You can listen to the channel of last time. Press **Left/Right Key** or earphone key for selecting channels; Press **Up/Down Key** for adjusting volume; Press **Right Function Key** to exit FM; Short press **Power key** or close the slide off to the mode of background play directly.

Press **Option** on the interface of FM player ,then you can select:

1. [Background Play](#): to play FM radio under the mode of background.

2. [Name Channel](#): to name the present channel.
3. [Delete Channel](#): to delete the present channel.
4. [Manual Tuning](#): to tune the channel manually by increase or decrease 0.1MHz.
5. [Auto Tuning](#): to search channels automatically.
6. [Input Frequency](#): to set the frequency number yourself.
7. [Search All](#): to search all channels from 87.5MHz ~ 108MHz and save the channels automatically.

**Note: When listen to the radio, the earphone must be connected with the phone always, acting as the antenna for tuning the channel. It can save 40 channels altogether.**

# RECORD

The phone will keep the record of the **Dialed**, **Received** and **Missed** number. To find this record by select **Record** under the main menu mode or simply press the **Dial Key** under the sleep mode.

Each record includes dialed times, the name of incoming calls (if they are saved in the names), the numbers, time of dialed and missed, and lasting time of the call.

After get into the Record Menu, you can use the **Up/Down Navigation Key** to select one of the record by using **OK Key** or **Left Function Key** and follow the operations: **Dial**, **Send Message**, **Erase** and **Save** (if the name has not been saved before), or Press **Dial Key** to call the number in the record.

## ■ DIALED

There are 20 dialed records can be saved to **Dialed**. Each record can show 5 call history. Press **Up/Down Navigation Key** to select the record you like to use. Or press the **Right Function Key** to **Exit** to the previous

menu, or short press **Power Key** to the Main Menu.

## ■ RECEIVED

Similar with **Dialed**, 20 of the last received numbers can be saved in **Received**. Each record can show 5 call history. Press **Up/Down Navigation Key** to select the record you need. Or press **Right Function Key** to **Exit** to the previous menu, or short press **Power Key** to the Main Menu.

## ■ MISSED

20 of the latest missed numbers can be saved to **Missed**. Each record can show 5 call history. Press **Up/Down Navigation Key** to select the record you need. Or press **Right Function Key** to **Exit** to the previous menu, or short press **Power Key** to the Main Menu.

## ■ ERASE

Select **Erase** to delete the **Dialed**, **Received**, **Missed** or **All** records. Press **Up/Down Navigation Key** to select and press **OK** to confirm. Then press **OK** again to delete the record or press **Exit** to quit.

## ■ TIME INFO

1. Select **Time Info.** to view the time information of the calls, includes Total calling time, Outgoing calling time and Incoming calling time.
2. Select **Erase Time Info.** to delete the information above. Press **OK** to delete or press **Right Function Key** to exit.

## ■ COST INFO

Select **Cost Info.** to view the information of the call cost. (This function requires network support, please contact the network operator). Press **Up/Down Navigation Key** to select and press **OK** to get into each Info.. Press the **Right Function Key** to **Exit** to the previous menu, or short press **Power Key** to the Main Menu.

1. To select **Last Call** menu and press **OK** to see the cost for the last call.
2. To select **ALL Calls** menu and press **OK** to see the cost for all the calls you made.
3. Select **Clear Logs** and input the correct PIN2 code to delete all the cost records.

4. Select **Cost Units** to check the cost rate. Input the correct PIN2 code to re-set the cost rate.
5. Select **Max Cost** to check the maximum cost available. Or re-set the Maximum cost after inputting the correct PIN2 code

(The above options can be set or deleted without inputting PIN2 code for some SIM cards).

## ■ GPRS INFO.

Select GPRS Info. to view the data flow information of the internet browsing (this function requires network service support, please contact the network operator). Under the menu of **GPRS Info.**, you can find **Current Conn.**, **All Conn.**, and **Last Conn,Clear Logs**. Press **Up/Down Navigation Key** to select and press **OK** to confirm. Select **Clear Logs** to delete relevant information. Press **Right Function Key** to **Exit** to the previous menu, or short press **Power Key** to the Main Menu.

# SERVICE

Select **Service** under the main menu; use **Left/Right Navigation Key** and press **OK Key** to get into the next menu:

## ■ CALL DIVERT

You can divert the incoming calls to a number you have set by using this function. (This function needs network support, please contact with network provider to apply for this service.) When **Fixed Dialing** is **On**, calls can not be diverted.

There are several conditions to divert incoming calls. And each condition has three selections: **On**; **Off**; **Status**. Use **Up/Down Navigation Key** to select and press **OK** to confirm. Press the **Right Function Key** to **Exit** to the previous menu, or short press **Power Key** to the Main Menu.

### **Unconditional**

To select **Unconditional** you can divert all the incoming calls to a number you have already set on any conditional.

Press **OK** to get into next sub-menu which has **On/Off/Status**.

1. **On**: Press **OK** to bring you to the next sub-menu **Set Number/Voice Mail**.
  - a. **Set Number**: Enter the number or using **Light Key** to search the record from your phone book. Press **OK** after you finish entering the number to confirm.
  - b. **Voice Mail**: To select **Voice Mail**, your phone will search the voice mail number automatically for you if you have already have this service. If not, it will bring you to the screen that you can enter the voice mail number. Enter the number press **OK** to save.
2. **Off**: Select **Off** and press **OK** to turn off this function.
3. **Status**: To select this menu, you can check out that you have turned on or off this function.
4. Press the **Right Function Key** to **Exit** to the previous menu, or short press **Power Key** to the Main menu

### **No Reply**

To use this function, if there is no answer during the period of time (which you have to set the time range), the incoming calls will be diverted to another the number that

you have already set.

### Busy

To use this function, if the line is busy, all the incoming calls will be diverted to another number that you have already set.

### Not Available

To use this function, if you are in the network service area or you turn the power off, all the incoming calls will be diverted to another number that you have already set.

### Cancel All

Select this function to cancel all the above divert settings.

## ■ CALL BARRING

You can use this function to set up the numbers that you like to forbid to dial or to bar the numbers you don't like to receive. (This function requires network service support, please contact the network operator).

Select **Service** under the main menu, press **OK** and **Right Navigation Key** once to get into **Call Barring**. Under this menu, you can use **Up/Down Navigation Key** to select the followings. Get into each of the following menu; you will

see three of the sub-menu **On/Off/Status**. After you finish the setting, press **Right Function Key** to **Exit** to the previous menu, or short press **Power Key** to the Main Menu.

### Outgoing

By using this function you can forbid to dial all the numbers. Use **Up/Down Navigation Key** to select **Outgoing** and press **OK** to the next menu that you can turn **On** this function by select **On** and press **OK** follow by entering the network password. You can also turn **Off** this function by selecting **Off** and Press **OK** follow by entering the network password. To check out whether you have turned on or off this function, select **Status** and Press **OK**.

### Intl. Out

By using this function, you can forbid to dial all the international calls.

### Dial Local

To set up this function, you only can dial the local numbers.

### Incoming

Select this function to bar all the numbers that you don't

like to receive.

## Roaming In

Turn on this function; the mobile will not receive any calls when it is roaming.

## Cancel All

Select this function to cancel all the above setting after entering the password.

## Password

To select this function, you can change the password (If user apply for the relevant service, the network provider will give you this password.)

## ■ CALL WAITING

In this menu, user can set the function on or off. Press **Up/Down Navigation Key** to the item you want to choose. Finish the operation, press the **Right Function Key** to **Exit** to the previous menu, or short press **Power Key** to the Main.

Choose **On** to turn on the call waiting function. If there is an incoming call while you are on the phone, the incoming number will be displayed on your screen..

Choose **Off**, the call waiting function will be deactivated.

Choose **Status**, the mobile will tell whether the call waiting function is active or inactive.

# SETTINGS

## AUDIO SETTING

Under the main menu mode, use **Up/Down Navigation Key** to select **Setting**. Press **OK** to bring up the **Audio Setting** Menu. Use **Up/Down Navigation Key** to select the sub-menu. Press **OK** to confirm.

### Set Profile

1. Use **Up/Down Navigation Key** to select between **Normal, Meeting, Outdoor, VIP, and Silent**. Press **OK** to confirm the select.
2. Press the **Right Function Key** to **Exit** to the previous menu, or short press **Power Key** to the Main.

### Edit Profile

1. Use **Up/Down Navigation Key** to select the item you like to edit. Press **OK** to enter to the next sub-menu.
2. Use **Up/Down Navigation Key** to select the following menu by pressing **OK** to enter and press **Exit** to return to the above menu or short press **Power Key** to return to the main menu:

### Incoming Tone

1. After get into this menu, use **Up/Down Navigation Key** to select the tone. Press **OK** to confirm the incoming tone
2. Press the **Right Function Key** to **Exit** to the previous menu, or short press **Power Key** to the Main.

### Message Tone

You can select one of the message tones by using **Up/Down Navigation Key** after you get into this Menu. Press **OK** to confirm. Press the **Right Function Key** to **Exit** to the previous menu, or short press **Power Key** to the Main.

### Volume:

You can adjust the volume of the **Speaker, Ring Tone, and Message Tone** by select the menu of **Volume**.

- 1). Use **Up/Down Navigation Key** to select between the

menu of Speaker, Ring Tone, and Message Tone. Press **OK** and use the **Left/Right Navigation Key** to adjust the volume. Press **OK** to save.

- 2). Press the **Right Function Key** to **Exit** to the previous menu, or short press **Power Key** to the Main.

## Keypad Tone

To select the **Keypad Tone** by using **Up/Down Navigation Key**, you can turn the volume **On** or **Off**.

## Power On Tone

To select the **Power On Tone**, you can turn **On** or **Off** the tone when you turn on your mobile phone

## Slip Tone

To select the **SlipTone**, you can turn **On** or **Off** the tone when you move up the slide.

## System Tone

You can turn the system tone that includes when the system has been set up successfully, failed, saved, or deleted **On** or **Off**.

## Vibration

To turn the Vibration **On** or **Off** when you receive an incoming call.

## ■ PHONE SETTING

Under the Main Menu mode, use **Up/Down Navigation Key** to select **Setting**. Use **Left/Right Navigation Key** to select **Phone setting** menu. Press **OK** to bring you to the next sub-menu.

## Language

Use **Up/Down Navigation Key** to select different **Language** press **OK** to enter. From this sub-menu you can select the language. Press **OK** to confirm. Press the **Right Function Key** to **Exit** to the previous menu, or short press

Power Key to the Main.

## Back Light

Select this option by using **Up/Down Navigation Key**. Press **OK** to bring up the following menu.

### a. Backlight Timer

Select backlight timer by using **Up/Down Navigation Key**, press **OK Key** or the **Left Function Key** to confirm. To select the timer between **5 Sec., 10 Sec., 15 Sec., 25 Sec.** and **Always On** by use **Navigation Key**. Press the **Right Function Key** to **Exit** to the previous menu, or short press **Power Key** to the Main.

### b. Backlight Level

The backlight level of the screen and keypad can be adjusted by entering to this menu.

1. Use **Left/Right Navigation Key** to adjust.
2. Press the **Right Function Key** to **Exit** to the previous menu, or short press **Power Key** to the Main.

## Input Methods

Select input methods which are in common use from all methods provided. Then you can switch among these

selected input methods by short press the **# Key**.

1. Use **Up/Down Navigation Key** to select the input method press **OK** to confirm. User can have the multiple choices.
2. Press the **Right Function Key** to **Exit** to the previous menu, or short press **Power Key** to the Main.

## Wallpaper

Use **Up/Down Navigation Key** to select Bitmap or Flash. Press **OK** to enter. Use the **Navigation Key** again to select the one and press **OK** or **Left Function Key** to view. Press **OK Key** or **Left Function Key** to save the one as your wallpaper.

- 1 Use **Up/Down Navigation Key** to select Bitmap or Flash. Press **OK Key** or **Left Function Key** to save the one as menu background.
- 2 Press the **Right Function Key** to **Exit** to the previous menu, or short press **Power Key** to the Main.

## Time & Date

Select this option to edit the time and date on the phone.

1. Use **Up/Down Navigation Key** to select **Time &**

Date, press **OK** to bring you up next menu, Set Time and Set Date.

2. Select Set Time, press **OK** to bring you a screen that you can input the time. Press **OK Key** or the **Left Function Key** to save and return to the previous menu.
3. Select Set Date, press OK to bring you a screen that you can input the year, month, and date. Press **OK Key** or the **Left Function Key** to save and return to the previous menu.
4. Press the **Right Function Key** to **Exit** to the previous menu, or short press **Power Key** to the Main Menu.

## Auto ON/Off

Activate this function to pre-set the time to turn the Power On/Off Automatically.

1. Use **Up/Down Navigation Key** to select between Auto On and Auto Off. Press **OK** to confirm.
2. Use **Up/Down Navigation Key** to select ON or Off, press **OK** to confirm the selection.
3. If the user selected On from the menu of Auto On or Auto Off, it requires to input the time that you like to

turn the power on or off each date automatically. After finish the input, press **OK Key** or **Left Function Key** to save and return to the previous menu.

4. Press the **Right Function Key** to **Exit** to the previous menu, or short press **Power Key** to the Main Menu.

## Factory Settings

You can use this function to reset your mobile to the Factory Setting (default setting). If you set up your system to the default setting, you will lose all the settings you made before. So please carefully use this function.

1. When you select Factory Settings, press **OK** to enter. It will ask you **Restore Factory Settings?** Press **OK** or the **Left Function Key**.
2. Press **Right Function Key** to give up or the short press the **Power Key** to return to the previous menu.
3. It will not delete your phone book or the other info which you have saved to your phone when you use this function.
4. The time and the date you have set up will also not be changed when use this function.

## ■ CALL SETTING

Under the main menu mode, use up and down **Navigation Key** to select **Settings**. Press right **Navigation Key** twice to the sub-menu **Call setting**.

### Outgoing ID

To set up this function, you can choose to show or block your ID from the receivers. But it needs your local network support.

1. Under the **Call Setting** menu, Select **Outgoing ID**, press **OK** to enter to the next menu. Select **On** or **Off** by using up and down **Navigation Key**.
2. Press **OK** to confirm.
3. To return to the previous menu or to the main menu, press **Right Function Key** or short press the **Power Key** to return to the Main Menu.

### Minute Reminder

To use this function, you will hear a reminder sound for each minute. To set up the function, please refer to the above.

### Fixed Dialing

1. To use this function, you only can dial the specified number. Enter the PIN2 number (which you need to order the service from your local phone company), press **OK** to confirm.
2. If you have entered correct PIN number, it will bring up a sub-menu. Use **Up/Down Navigation Key** and press **OK** to select the followings.
  - **Phone Number List:** Listed all the numbers that have already set up with. Use **Up/Down Navigation Key** to select the number. Press **OK** to confirm.
  - **Add:** You can add more numbers from this menu. Press **Save** to confirm after you finish entering the number.
  - **Edit:** You can edit the names and numbers on the list.
  - **Erase:** Use **Up/Down Navigation Key** to select the number you want to erase from your **Fixed Number List**. Press **OK** to confirm.
  - **Status:** Use **Up/Down Navigation Key** to select **On** or **Off**, and press **Ok** to turn this function on or off.

3. Press **Exit** to return to the previous menu or short press the **Power Key** to return to the main menu.

## Ejected Calls

You can refuse to receive the number by using this function. Enter the password (default password is 1234), press **OK** to enter the sub-menu to set up this function.

1. **Number List**: Select this and press **OK** to bring up the Ejection Number List which you have already set up. You can select number to edit. Press **OK** to confirm.
2. **Add**: To add a new number that you want to eject. Enter the number or use **Left Function Key** to bring up your phone book list. Press **OK** to confirm after finish the entering the number.
3. **Erase**: If you want take the number out of your ejected number list, select the number by using **Up/Down Navigation Key**, press **OK** to confirm.
4. **Status**: Use **Up/Down Navigation Key** to select **On** or **Off** to turn this function on or off.
5. To return to the previous menu or the main menu, press **Right Function Key** or short press the **Power Key**.

**Key** to return to the main menu.

## ■ NETWORK SECU.

Under the main menu mode, use **Up/Down Navigation Key** to select **Settings**. Press “right” **Navigation Key** three times to the sub-menu **Network Security**. Use **Up/Down Navigation Key** to select between the followings, press **Enter** to bring up the next menu.

### Choose Net

You can choose the net **Automatically** or **Manually**.

1. **Automatic**: Select **Automatic**, press **OK**. The net will search the best network service automatically for you.
2. **Manual**: Use **Up/Down Navigation Key** to select **Manual**, press **OK** to confirm. The net will search the entire available networks in your area. Use **Up/Down Navigation Key** to select the one you want, press **OK** to confirm.
3. To return to the previous menu or the main menu, press **Right Function Key** or short press the **Power Key**.

## Choose Band Mode

You can choose EGS/DCS or PCS only.

1. Press Up/Down Navigation Key to select, and then press Ok Key.
2. Press Exit to return the above menu or short press Power Key return to the main menu.

## PIN

You can set up your PIN number from here. There are normally 4 numbers. After you finish entering the number press **OK** to confirm and return to the previous menu.

Press **Right Function Key** or short press the **Power Key** to return to the previous menu or the main menu.

**Warning: If you continuously enter the wrong PIN three times, your SIM card will be locked. (You have to contact your local phone company to unlock the phone). If you continuously enter the wrong number ten times, your SIM card will be damaged and no long to can be used. (You have to buy a new SIM Card from your local phone company).**

## Phone Lock

You can turn on or off, and change or setting your phone password from this menu. You need enter the password to get into some of the menus (such as **SMS**, **MMS**, **Album**, and **Film**) when you set up this phone lock function.

1. Use **Up/Down Navigation Key** to select between the sub-menu, press **OK** to confirm.
2. Input password, press **OK** to confirm.
3. If the password is correct, you can turn on or off of this function. You also can edit your password; you need enter your new password twice, and then press the **OK key** to confirm.
4. To return to the previous menu or the main menu, press **Right Function Key** or short press the **Power Key**

**The default of the password is 1234.**

# EXTRAS

## ■ TOOLS

Select **Extras** under the main menu, and press **Left / Right Navigation Key** to enter the third menu of **Tools**. Press **Up/Down Navigation Key** and **Ok** to enter.

### Alarm

Enter the menu and press **Up/Down Key** to select **Set time** and **Alarm Status** and press **Ok** to enter.

#### Set Time

1. Press **OK** to select **Set Time**. Input the time (24 Hours) by using the **Number Key**. Moving the cursor by using **Left/Right Navigation Key**. Press **OK** to Save and bring you to the next menu.
2. It will bring you to the menu that you can set up the alarm to the status of **Repeat off**, **Repeat Daily**, and

**Repeat Weekly** after you finish entering the time by pressing **OK**. Use **Up/Down Navigation Key** to select the function you like. Press **OK** to confirm and return back to the previous menu.

3. After finishing the setting, press **Right Function Key** to return to the previous menu or short press the **Power Key** to the Main Menu.

#### Alarm Status

1. Press **OK** to enter this menu. It shows the alarm status. You can press **Left Function Key** to enter to the next menu to **Modify / Reset** or turn the **Alarm Off**.
  - **Modify/Reset**: To modify or reset the current alarm.
  - **Alarm Off**: Select **Alarm Off** and press **OK** to turn off the alarm.
2. After finishing the setting, press **Right Function Key** to return to the previous menu or short press the **Power Key** to the Main Menu

## Memo

Under the menu, press **Up/Down Navigation Key** to choose **Add** and **View All**, and press **Ok Key** to enter.

### Add

1. Enter the memo contents by using the **Number Key**. You can short press the **# Key** to change the way of input. After you finish the entry, press **OK** to save it and get into next menu that you can turn **On** or **Off** the function.
2. Use **Up/Down Navigation Key** to select **On** or **Off**. Press **OK** to confirm.
3. If you select **On**, you need to select the date by using **Navigation Key**, and then enter the time. Press **OK** to save.
4. After finishing the setting, press **Right Function Key** to return to the previous menu or short press the **Power Key** to the Main Menu.

### View All

To select **View all**, you can read all the memos you have

saved in you phone.

1. You can press **Left Function Key** to enter to the next menu to **View/ Edit** or **Delete**.
  - **View**: Press **OK** to view. Press **Right Function Key** to turn to the previous menu.
  - **Edit**: Make a correction, and then press **OK** to confirm.
  - **Delete** : Press **OK** to delete the current memo.
2. After finishing the setting, press **Right Function Key** to return to the previous menu or short press the **Power Key** to the Main Menu.

## World Time

1. Use **Left/Right Navigation Key** to move the line around the world map to set up your time zone. Press **OK** to Confirm.
2. After finishing the setting, press **Right Function Key** to return to the previous menu or short press the **Power Key** to the Main Menu.

## Calculator

You can use this calculator to do some basic calculations, such as plus, subtract, multiply, and divided, etc.

1. To enter the numbers by using **Number Key**; Press the **# Key** to input decimal point“.”; Press **\*** **Key** to input “00”; Press “up”, “down”, “left”, and “right” **Navigation Key** input operation mark “-、 ÷、 +、 ×” .
2. Press **OK Key** to calculate the result. If the computation out of the range, the phone will give you tips.
3. Press **Right Function Key** to erase a number. Press the **Left Function Key** or **Dial Key** to clear the screen.
4. When you clear the screen, press **Right Function Key** to return to the previous menu, or short press the **Power Key** to return to the Main Menu.

## Calendar

1. Use “up”, “down”, “left”, and “right” **Navigation Key** to move the cursor around to change

the date; You can also press **# Key** and **\*** **Key** to find the months.

2. After finishing the use, press **Right Function Key** to return to the previous menu or short press the **Power Key** to the Main Menu.

## ■ STK

Choose **Extras** under the main menu, press **Left / Right Navigation Key** to see the third menu of **STK**.

In addition to the functions available on the phone, your SIM card may provide additional services that you can access in menu **STK**. For availability, rates and information on using SIM services, contact please refer to the user menu provided by your SIM card service provider.

# GAMES

User can play two games from this mobile. You also can use the **Navigation Key** and **OK Key** to do the same.

1. Use **Left/Right Navigation Key** to select the game you like to play. Press **Ok** to bring up the next menu which you can select to **Start** playing game, learn the **Instruction** for how to play, and see the **Top Score** you have made before.
2. You can always exit the game by pressing **Right Function Key** to the previous menu, or short press the **Power Key** to return to the Main Menu.
3. To set up the **Music Volume** and **Key Backlight** while you play the game, use the **Right Navigation Key** three times to the **Setting** screen under the menu of **Game**.
1. **Music Volume**: Select **Music Volume** and Press **OK** to the next menu. Use **Up/Down Navigation Key** to select the volume from the level **High**, **Medium**, **Low**, or **Off**. Press **OK** to confirm and return to the

previous Menu.

2. **Key Backlight**: Select this menu and press **OK** to the next menu. Select **On** or **Off** to turn on or off the Key Backlight. Press **OK** to confirm and back to the previous menu.
4. When you finish the setting, press **Right Function Key** to return to the previous menu, or short press the **Power Key** to return to the Main Menu.

# WAP

## ■ HOME

Select **WAP** under the Main Menu by using **Navigation Key Up/Down** to select Home.

1. Press **OK** to get into the set Home page. Press **Exit** or short press the **Power Key** to return to Main Menu.
2. The following functions can be selected when browsing the Wap by pressing **Left Function Key**:

- **Refresh**: To refresh the content webpage.
- **Back**: To return to the previous page.
- **Stop**: Select **Stop** to cut the connection with the Wap.
- **Image**: Select image to save or send. (This function only appears when you choose a particular image).
- **Enter URL**: To input any available website address and get connected.
- **Add To Favourites**: To save the current website to bookmark.

- **Set As Homepage**: To set the current website as homepage.
- **History**: To view the history
- **Favourites**: To switch to the Favorite menu
- **Home**: To return to the homepage.
- **Main Menu**: To return to the previous page that you have just visited.

3. Press **Exit** to the previous menu or short press the **Power Key** to the Main Menu after your browsing.

## ■ ENTER URL

Select **WAP** under the Main Menu. Press **Navigation Key Up/Down**, and then press **Option** to view sub-menus. Press **Number Key** to enter letters within the frame. After entering letters, press **Option** and then press **Up/Down Navigation Key** to select settings.

- **Standard phrases**: To select the general network format.
- **Add to Favourites**: To add the current website address to Favourites.

- **Save as Homepage:** To save the current page as homepage.

3. Press **Exit** to previous menu.

## ■ FAVOURITES

Choose the **Wap** under the main menu. Press **Up/Down Navigation Key**, and select to view the menu of **Favourite**.

1. Use **Up/Down Navigation Key** to select saved website and press **OK** to view the sub-menu.
2. Use **Up/ Down Navigation Key** to select and press **Ok Key** to enter.
3. Press **Exit** to return the previous menu.

## ■ PUSH MESSAGES INBOX

Press **Navigation Key Up/Down**, and then press **Option** to view sub-menus.

Some relative information is displayed in the messages sent from the server in Push Message. Select this option to connect to the message directly.

## ■ TOOLS

Select **WAP** under the Main Menu, use **Up/Down Navigation Key** to select sub-menu. Press **OK** to enter to the next menu.

### Profiles

Some settings have already been listed in this Menu.

Use **Up/Down Navigation Key** to select a certain setting and press **OK** to enter.

### Set as active

Select this function to activate the current webpages.

### Edit

Scroll **Up/Down Navigation Key** to select item needed. Press **OK** to confirm. Press **Exit** to return to the previous menu.

- **Name:** To edit a name.
- **Direct Connection:** To set connection status as On/Off.
- **IP Adress:** To change IP.
- **Connection Type:** To set temporary or continuous
- **Data Connection:** To set the type of data

connection.

- **Home:** To enter web address of homepage. After press **Exit**, press **Ok** to save or press **Cancel** to exit.

### Add new

Press **Up/Down Navigation Key** to select and add a new setting.

### Delete

Press **OK** to delete the current setting, or press **Exit** to cancel delete and quit.

### Data Connections

To set data connection type.

### Cache

1. Press **Up/Down Navigation Key** to select the cache mode. Press **Option** to set.
2. Press **Exit** to return to the previous menu.

### Cookies

1. Press **Up/Down Navigation Key** to select the cookies mode. Press **Option** to set.

2. Press **Exit** to return to the previous menu.

### Clear History

Press **OK** to delete current empty tmp. file. Press **Cancel** to stop delete and quit.

### Settings

To set image and default (same as Cache Mode)

### Security

Press **Select** to view security certificate of the website.

### Statistics

To sum up data flow received and sent. Press **Exit** to the previous menu.

### ■ HISTORY

Under the main menu, select **WAP** by using **Up/Down**

**Navigation Key.** Press **Option** to enter to the next sub-menu.

1. Use **Up/Down Navigation Key** to select the sub-menu. Press **Option** to set the records.
2. Press **Exit** to the previous Menu

## APPENDIX

### ■ TECHNICAL DATA

Length	Width	Height	Weight
84.6mm	43.2mm	23.2mm	81g (including battery)

### Accessories

### Battery

Type	Capacity
Li	600mAh

The battery life is depending on SIM card, network and usage settings, usage style and environment.

## Safety of the Battery

1. Please use the battery provided by the original manufacturer. Using of any other fitting will lead to the nullity of all the warranty. And the manufacturer of the phone will take no responsibility in repairing the phones damaged by wrong use of the fittings.
2. Please keep any metal things (e.g. Key in your pocket) away from the contact point of your battery to avoid short circuit.
3. Don't bend or open the batter by force
4. Please keep the batter away from water and fire.
5. The battery can only be charged under the situation similar with the room temperature. The battery can not be charged under 0C (32F) or above 45C (113F ).

## Speed Charger

The Speed Charger can help you to charge the battery faster. Plug the charger to an AC wall socket and plug the other end to the charger port of the phone. Please make sure the batter is correctly inserted on the phone before

charging. Please do not remove the battery while charging.

## ■ USE AND MAINTENANCE

This mobile is designed by excellent technique, please use carefully.

The following suggestion will help you use and maintain the mobile better.

1. Keep the phone and all parts in a safe place out of the reach of young children.
2. Please keep dry. Rainwater, humidity and any kinds of liquid or moisture might contain mineral which could corrode the circuit.
3. Kinetic parts maybe damaged if you put or use the phone in a dirty place.
4. Please do not put the mobile in a high-temperature place. High-temperature might shorten the life of electron sets, destroy the battery and distort or melt some plastic part.
5. Please do not keep the mobile in a low-temperature

place. When move it from low-temperature to high-temperature, interior may engender humidity, and this might cause damage to the PCB.

6. Please don't trying to dismantle the mobile. The wrong disposal performed by non-professionals may destroy the setting.
7. Please don't throw, thump or shake the mobile. Rough usage of the mobile will damage the internal main board.
8. Please don't use pungency chemicals, detergent or caustic detergents to clean the mobile. If you want to clean it, please wipe it slightly with rag with some suave soap water.
9. Please don't paint on the phone. Color might hinder the kinetic and affect normal manipulate.
10. Use the substituted antenna we provide, or other eligible antenna. Usage of disapproved antenna or other parts might damage the mobile.
11. If the mobile was wetted, please switch it off and remove the battery. Make sure the mobile has dried for

24 hours before using it again.

12. When you use the mobile, please turn down the volume, the backlight and the contrast; and reduce the displaying time of the keypad's backlight. All the above operation will help you to elongate the standby time.
13. Keep metal (except the charger port and data cable port originally provided) away from the charger port of the mobile to avoid short circuit.

## ■ PROBLEMS AND SOLUTIONS

Problems:	Solutions:
Display “Locked” when the phone is on.	Wrong PIN number input, contact with the “Network Operator”.
No Signal level is displayed	Lost connection with the network. The phone may be in a place without network service. Please move to another location or contact your service centre for help.

No reaction of the keypad or slow reaction	The operation speed of the screen is slow under low temperature which is normal. Please try again in a place warmer.
No display on the screen while charging	Low battery, or out of the temperature range (0-45°C). Please wait for couple minutes or move the mobile to a warmer place to recharge again.
“Not Provided” or “Not Set” is displayed on the screen while using some function.	Many functions can only be used after applying the services. Please contact the network operator for details.
“SIM damaged” is display on your screen.	SIM might be damaged, please contact your service provided for help.
“Insert SIM” displayed	Please make sure that you have inserted the SIM correctly.

Incasement List			
Product Name	F-1		
Product Collocate	Collocate part	Unit	Quantity
	Phone	PCS	1
	Battery	PCS	2
	Charger	PCS	1
	CD	PCS	1
	User Manual	PCS	1
	Warranty Card	PCS	1
	Packing list	PCS	1
	Gift Wristwatch	PCS	1
Checker			
Packing Date			

Incasement List			
Product Name	F-1		
Product Collocate	Collocate part	Unit	Quantity
	Phone	PCS	1
	Battery	PCS	2
	Charger	PCS	1
	CD	PCS	1
	User Manual	PCS	1
	Warranty Card	PCS	1
	Packing list	PCS	1
	Gift Wristwatch	PCS	1
Checker			
Packing Date			