

**C-1 User Manual
EN V1.1**

Claims

All the trademarks and logos indicated as such herein, including the registered and unregistered trademarks and logos, are the property of i-MOBIL and their respective owners. The foregoing **i-MOBIL** is the trademark of i-MOBIL and can not be used without i-MOBIL's authorization.

i-MOBIL reserves its right to make changes and improvements to any of the products described in this manual without prior notice. Under no circumstances shall i-MOBIL be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The content of this manual is provided "as is". To the fullest extent permissible by law, i-MOBIL makes no representations or warranties of any kind, either express or implied, for, but not limited to, the accuracy, merchantability and fitness of this manual for a particular purpose.

Contents

FOR YOUR SAFETY	6
BRIEF INTRODUCTION	7
YOUR PHONE'S LABEL	7
PASSWORD	7
PHONE IMAGE AND KEY DEFINITION	7
BRIEF MENU TREE	8
DISPLAY ICON	9
GETTING STARTED	10
USING THE BATTERY	10
INSTALLING A MEMORY CARD AND THE SIM CARD	10
CHARGING THE BATTERY	11
LOW BATTERY WARNING	11
BATTERY TIPS	11
TURNING YOUR PHONE ON/OFF	11
KEYPAD SHORTCUTS	12
USE AND MAINTENANCE	12
BASIC FUNCTIONS	13
SIM LOCK	13
MAKING A CALL	13
ANSWERING OR REJECTING A CALL	13
DURING A CALL	13
MISSSED CALL	14
HOW TO USE MULTIMEDIA ENTERTAINMENT	15
MUSIC PLAYER	15
FM RADIO	16
VOICE RECORDER	17
MASS STORAGE	18
FILE VIEWER	18
SETTING UP RING STYLES AND DISPLAY	19
PERSONALISING A RING TYLE	19
ADJUSTING VOLUME	19
SETTING UP DISPLAY	19
SETTING UP TIME & DATE	20
SETTING UP GREETINGS AND LANGUAGE	20
USING PHONEBOOK	21
STORING A PHONEBOOK ENTRY	21
SEARCHING FOR A PHONEBOOK ENTRY	21
EDITING A PHONEBOOK ENTRY	21
DELETING PHONEBOOK ENTRY	22
ASSIGNING A GROUP	22
VIEWING AND SETTING UP 1-TOUCH DIAL	22
VIEWING MEMORY STATUS	23

USING CALL HISTORY.....	24
VIEWING CALL HISTORY	24
DELETING CALL HISTORY	24
VIEWING CALL INFORMATION	24
ENTRY METHOD	26
WHERE TO USE ENGLISH ENTRY METHOD	26
TEXT ENTRY METHODS	26
CURSOR	26
MULTI-TAP	26
T9 ENGLISH ENTRY METHOD	26
PUNCTUATION AND SPECIAL CHARACTERS.....	26
MESSAGES.....	27
VIEWING MESSAGES.....	27
CREATING MESSAGES	27
USING SMS TEMPLATE	28
DELETING MESSAGES.....	28
SETTING UP MESSAGES	28
INFORMATION MESSAGES.....	29
VOICE MAIL	29
PERSONAL ORGANIZER	30
ALARM.....	30
MEMO	30
WORLD TIME	30
CALCULATOR	31
CALENDAR.....	31
MEMORY STATUS	31
STK.....	31
CALL AND PHONE SETTINGS.....	32
MINUTE REMINDER	32
FIXED DIALING.....	32
CALL FORWARD	32
CALL BARRING.....	33
CALL WAITING	33
PHONE SETTING	33
OTHER SETTINGS.....	35
NETWORK SETTING	35
SECURITY SETTING	35
TROUBLESHOOTING	36
BATTERY INFORMATION.....	37
ACCESSORIES.....	38
SAFETY OF THE BATTERY	38
RAPID TRAVEL CHARGER.....	38
DATA CABLE	38

FOR YOUR SAFETY



SWITCH ON SAFELY Do not use in prohibited areas or when it may cause interference or danger.



SWITCH OFF IN HOSPITALS Follow any restrictions. Switch the phone off near medical equipments.



SWITCH OFF WHEN REFUELING Do not use the phone at a refueling point. Do not use near fuel or chemicals.



SWITCH OFF IN AIRCRAFT Follow any restrictions. Wireless devices can cause interference in aircraft.



ROAD SAFETY Obey all local laws. Please use the hands free kit whilst driving.



ACCESSORIES AND BATTERIES Use only approved accessories and batteries. Do not try to connect incompatible products.



BACKUP IMPORTANT INFORMATION Remember to make backup copies or keep a written record of all important information.



CONNECTING TO OTHER DEVICES When connecting to any other devices, read its user manual for detailed safety instructions. Do not try to connect incompatible products.



MAINTENANCE Only authorized and qualified personnel may repair this product.



WATER RESISTANCE Your phone is not water-resistant. Keep it dry.



INTERFERENCE All wireless devices may be susceptible to interference, which could affect performance.

Damage to the security seal will cause the warranty invalid.

Warning: Improper use will invalidate the warranty.

BRIEF INTRODUCTION

Your phone's label

The bar code label includes information about your phone, such as the serial number. Please keep it properly.

Password

Security Code

This phone includes a Personal Identity Code, to ensure your data is stored securely, activating this code means you will need to enter your PIN to access some features, e.g. the phone book.

PIN & PIN2 code

The PIN (Personal Identity Number) and PIN2 codes are 4-to 8-digit numbers that usually come from your network service provider along with the SIM card.

The PIN2 code is required to activate some network features. It can be obtained from your network provider. To set up PIN and PIN2 codes, please refer to [Other settings>Security setting](#) on **P40** of this guide.

PUK & PUK2 code



These codes are only required should you accidentally enter your SIM PIN code incorrectly and block the SIM. The PUK (Personal Unblocking Key) and PUK2 codes are 4-to 8-digit codes obtained from your network service provider.

Phone image and key definition



Scroll key	Back & Clear key	Send key	Power & End key
Scroll up and down to move through menu options, or to increase / decrease the volume.	Delete character or number	Make and answer calls	Power on or off
Press for OK or to enter the option menu	Back to the previous menu	OK or enter the option menu	End or reject calls
	Exit to standby mode (In Music player, FM radio or Voice record interface)		Lock or unlock the keypad (with # key)
			Exit to standby mode

Brief menu tree

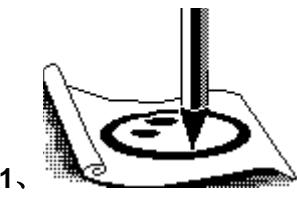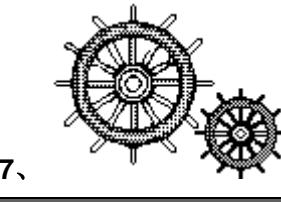		
Call Recorder	FM radio	Music Player
1、Dialled calls	1、Choose channel	Music Player
2、Missed calls	2、Name channel	
3、Received calls	3、Delete channel	
4、Delete	4、Manual tuning	
5、Call Information	5、Auto tuning	
	6、Set frequency	
	7、Search all	
		
Message	Phonebook	Service
1、SMS	1、Names	1、Call forward
2、Info. Messages	2、Add new	2、Call barring
3、Voice mail	3、Settings	3、Call waiting
		
Settings	Extras	Profiles
1、Phone	1、Voice recorder	1、Normal
2、Time & Date	2、Data connect	2、Meeting
3、Call	3、Alarm	3、Outdoor
4、Network	4、Memo	4、Car
5、Security	5、World time	5、VIP
6、Restore factory settings	6、Calculator	
	7、Calendar	

	9、Games	
	10、Memory card	
	11、SIM Tool Kit	

Display icon

-  Signal strength indicator. Vertical bars show the strength of the network connection.
-  Battery level indicator
 -  Battery full,  Low battery,  Low battery warning
-  Message inbox full
-  New message. The icon disappears after the new messages are read.
-  Silence mode. In standby, press and hold # key to turn on or off the speaker.
-  Roam indicator.
-  Alarm on. The icon disappears after the alarms are turned off.
-  Vibration on.
-  Earphone is connected and detected.
-  Back to the previous menu.
-  Exit to standby
-  Keypad locked
-  Voicemail indicator.


Note: Your phone may not appear exactly as the illustrations in this manual.

GETTING STARTED


Using the battery

Installing the battery


1. By applying gentle pressure to the rear case of the phone, slide the cover down to expose the battery.

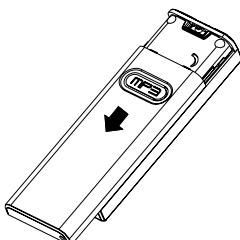

2. With the gold contacts facing into the phone clip the battery in place, positioning the top of the battery first.

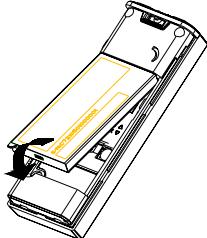

3. Replace the rear cover, by sliding it back onto the phone until it clips in place.

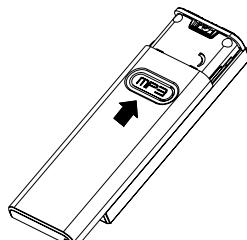


Installing a memory card and the SIM card

Warning:

- ◆ Do not bend or scratch your memory card or SIM card.
- ◆ Avoid exposing your memory card and SIM card to static electricity, water or dirt.
- ◆ As the memory card fits beneath the SIM card, please ensure that the memory card is fitted first.

1. By applying gentle pressure to the rear case of the phone, slide the cover down to expose the battery. Slide the memory card into the memory card holder with the gold contacts facing down into the phone body.

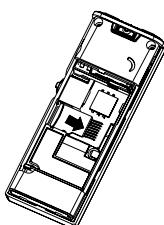


Note:

- ◆ If you need to format your memory card, please use formats FAT12 or FAT16.
- ◆ If file formats other than FAT12 or FAT16 are used the phone may not be able to read the content of the memory

card.

2. Slide the SIM card into the SIM card holder with the gold contacts facing down.

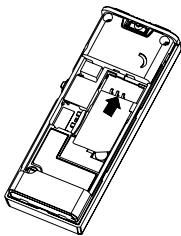


Charging the battery

Warning: To avoid damaging the phone, please do not remove the battery when the phone is charging.

To ensure the best performance of your phone's battery, please charge the battery fully before using it for the first time (Approx. 12 hours), using the method described below. Please note: some batteries require several full charge/discharge cycles to reach their best performance.

1. Make sure the battery has been installed properly before charging.
2. Open the protective USB cover and plug the travel charger into the USB connector.
3. Plug the other end of the travel charger into the electrical outlet.

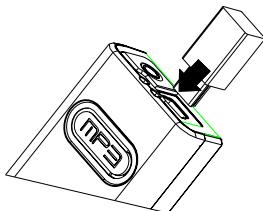

Tips:

- ◆ It may take a few seconds for your phone to display a visible charging indication if your phone is switched off.
- ◆ Your phone can be used while charging.
- ◆ It may take a few minutes for your phone to display a visible charging indication if the battery is fully discharged.
- ◆ The phone will be charged from your PC when it is connected with the USB cable, however it will take a longer time to charge than when charging with the travel charger.

Low battery warning

When the battery is low, the phone pops up messages to notify you to charge the battery. If the battery energy falls below the minimum limit, the phone will switch off automatically.

When the battery is low, the backlight may not work when pressing the keypad and some functions may not work. Please charge the battery immediately.

Battery tips

- ◆ Use only the batteries, data cable and chargers approved by the original manufacturer. Do not use a non-approved data cable or chargers , or else it may damage the battery.
- ◆ Do not short-circuit the battery. Please store the battery inside the phone to prevent accidental short circuiting of the battery contacts.
- ◆ Do not place or charger the battery in very hot, or very cold locations as temperature extremes can adversely affect the battery.
- ◆ Please keep the charger and handset out of the reach of small children.
- ◆ Please ensure that the gold contacts of the battery are kept clean and free from dirt.
- ◆ The battery can be charged and discharged hundreds of times but it will eventually wear out. Please replace the battery when the battery capacity falls to approximately 50% of its original storage capacity.

Turning your phone on/off

Power on

1. Press and hold the **Power key** for 2 seconds to turn your phone on. Your phone will display the power on animation and enter standby mode.
2. If necessary, enter your SIM card PIN code (displayed as ****) to unlock the SIM card.

3. Please refer to [Other settings>Security setting>PIN code](#) at **P40** to get more information on the PIN code.

Power off

Press and hold the **Power key** for 2 seconds to turn your phone off. Your phone will display power off animation.

Keypad shortcuts

In standby mode

Scroll key	Up	To enter SMS .
	Down	To enter main menu.
	Press	To enter Name list .
		To enter Music player .
Dial key	To enter Call history>Dialed calls .	
1 (Press and hold)	To dial voice mail.	
9 (Press and hold)	To dial emergency call (060).	

* & # key function list

	*key	#key
In standby mode	Press and hold to enter the '+' for international dialing.	Press and hold to turn the loud speaker on or off.
Name list	Press to page up.	Press to page down.
Call history		
Calendar	Press to go to last month.	Press to go to next month.
Create SMS	Press to enter into the punctuation list;	Press to switch entry method;
Music Player	Press to mark the start point for the 'loop' feature.	To select between different play modes; repeat, random.

Use and maintenance

The following suggestions will help you use and maintain your mobile.

1. Please keep dry. Rainwater, humidity and any kinds of liquid or moisture might contain minerals which could corrode the circuit.
2. Moving parts maybe damaged if you put or use the phone in a dirty or dusty place.
3. Please do not use or store the phone in a high temperature environment as this may result in damage to the electronic or plastic parts.
4. Please do not use or store the phone in a very low temperature environment.
5. Please do not use any chemicals, detergent or caustic detergents to clean the mobile. If you want to clean it, please wipe it gently using a soft cloth made damp with some soapy water.
6. Please do not paint the phone. Paint might clog the moving parts and prevent proper operation.
7. Only use the headset provided, or an approved spare.
8. If the mobile has got wet, please switch it off immediately and remove the battery. Leave it to dry thoroughly before using it again.
9. To get the maximum talk and standby times from your battery, please turn down the volume, reduce the backlight and contrast.
10. Please keep all metal objects away from the charger port on the top of the phone to avoid damaging the electronic circuits.

Basic functions

SIM Lock

The phone is special for the SIM cards of i-MOBIL. To use other SIM cards, please follow the steps below.

1. Insert the SIM card and switch on the phone.
2. Enter the password. If the password is correct, restart your phone.

Note:

- ◆ The password is provided by i-MOBIL, please contact your local service provider for detailed information.
- ◆ The phone is to be locked permanently after entering wrong password for 5 times. And it can not be used until the software is updated. Please contact your local service provider for detailed information.

Making a call

Making a call from standby mode

1. Input the phone number. To change the number, move the cursor by the **Scroll key**, press the **C key** to delete digits.
2. Press the **Dial key (Dial)**.
3. To make an international call, press and hold the ***** **key** to enter the international prefix '+' in place of the international access code.

Then input the country code, area code and phone number, and press the **Dial key (Dial)**.

Making a call by your phone book

1. In standby mode, press the **Scroll key** to enter the **Phone book**; or from main menu, select **Phone book>Names**.
2. Select an entry by the **Scroll key**, then press **Dial key (View)** to view all the phone numbers in this entry.
3. Select a number you want by the **Scroll key**, then press the **Dial key (Call)**.

Making a call by call history

Your phone stores 20 phone numbers for each **Dialled**, **Received** and **Missed calls**.

1. In standby mode, press the **Dial key** to enter the **Dialled** call list.
You can press the ***** **key** or **# key** to switch to the **Received** or **Missed** call lists.
2. Select the number you want by scrolling up or down, then press the **Dial key (Call)**.

Answering or rejecting a call

1. Press the **Dial key (Ans)** or press the **Scroll key** up to answer an incoming call; or press the **Scroll key** to enter option menu and select from **Busy**, **Reject** or **Answer**.
2. Press the **Power key (Reject)** to end or reject a call.
3. When the headset is connected, press the **Dial key** or the headset button to answer a call.

During a call

Switching to other functions

Press the **Dial key** to enter the option menu as described below. Then press the associated number key to select the option or highlight the required option by using the scroll key, and then press the **Dial key** to select.

1. Dial new
2. Hold
3. Mute
4. End this call
5. Send DTMF

6. Main menu

7. Listen

Note: Some of these 'in call' functions require your network provider to activate them. For more details please contact your network provider.

Searching names

1. During a call, press the **Dial key (option)** to enter options menu (**talk**), select **Main menu>Phone book>Names**.
2. Select a name and press the **Dial key (view)** to view the number list.

Missed Call

The phone displays 'Missed calls: X call(s)'.

1. Press the **Dial key (View)** or **Scroll key** to view the missed call list.
2. Press *** key** or **# key** to switch to missed or Received call lists.
3. In the missed call list, select the entry you want and press the **Dial key (Dial)**. Or press the **Scroll key** to view the date and time of this entry.

How to use multimedia entertainment

Music Player

The music player allows you to store and play MP3 music from the phone's memory card.

Music can be transferred to, or removed from the phones memory card, by connecting the phone to a PC with the supplied USB cable. The phone's memory card will appear as a removable drive under the PCs 'My Computer' icon. Windows can be used to click and drag files into or out of the phones memory card.

Note:

- ♦ When the phone accesses the memory card for the first time, it creates a 'Playlist' file, which is a list of all the current files it finds on the memory card. If you change the files on the memory card you MUST delete the playlist file, to ensure the handset updates its file list the next time it access the memory card.
- ♦ Your phone do not support link with Apple Macintosh computers. When connecting to PC, please only use in the circumstances of Microsoft 2000 or above.

To activate or quit the music player



1. In standby, press shortcut  to activate music player.
2. Or in the main menu, select **Music Player**, press the **Dial key** or **Scroll key** to start the player.
3. Press the **C key** to exit music player and return to standby.

Play list

1. In music player, press the **Dial key** or **Scroll key** to view the handsets current playlist. When you first start the music player, all the tracks on the handsets memory card will be automatically put in the playlist. Music tracks can be moved on or off this playlist by using the 'Add' or 'Move' features accessible under the **Dial key**.
2. Press the **Dial key** to edit the play list:
Select 'Add' to add music to the playlist from the memory card.
Select 'Move' to move tracks off the playlist. This does not delete tracks, and they can be 'Added' again, it merely removes the track from the current play list.

Select music

1. In music player, press  to jump to the previous track, press  to jump to the next one; press  to pause or continue playing the current track.
2. Or in the play list, select the music you want, press **Scroll key** to play.

Adjust the volume

In the music player, push the **Scroll key** up or down to adjust the volume.

Switch the play mode

With the music playing, press the **# key** to switch the play mode between **Sequence**, **Random**, **Sequence & Repeat** and **Random & Repeat**.

Broken-point memory repeat

It is possible to repeat part of a track. The start point for the repeat is 'marked' by pressing the ***** **key** as the required point is reached when the track is playing. To mark the end point for the repeat the ***** **key** is pressed a second time as the required point is reached in the track. The MP3 player will now loop between these two points forever. Then press the ***** **key** again to stop the loop and continue to play.

Fast forward

While playing, press and hold  to fast rewind; press and hold  to fast forward.

How to view the music information

While playing, press 4 to view the music information of the current track if there is an icon "i" displayed.

Lock keypad

In music player, press the **Power key** and then the **# key** to lock the keypad (the display will show ).

How to copy MP3 files to the phone

To manipulate the music files stored on the phone's memory card it must be connected to a PC via the USB cable provided.

When the phone is connected to the PC, it should be automatically detected.

However, if the PC fails to detect the phone, the connection can be manually established by selecting **Extras** from the phone's main menu, then selecting **Data connect**, and pressing **Connect**.

The phone's memory card will appear as a 'Removable Disk' under the My computer icon of the PC.

1. Copy MP3 files to the root directory (the folder that appears when you open the memory card) of the removable disk.
2. To ensure your phone updates its playlist, please ensure you delete the 'playlist' file on the phone's memory card.
3. When you have finished editing the contents of the Phone's memory card, close the USB connection by double clicking the 'Safely Remove Hardware' icon in the System Tray of PC and selecting 'Stop'. Then press **Exit** on the handset and disconnect the USB cable.

Note:

- ◆ If you have muted the handset's speaker by pressing the **#key** the MP3 player will only play through the headset.
- ◆ The battery consumption is higher than usual when the MP3 player is being used.
- ◆ You can download MP3 files up to the capacity of the memory card. The phone's MP3 player will read the contents of any folders put onto the phone's memory card, but can only read down two levels of folder, so it is better to keep all the content in the top level folder.

FM Radio

The FM tuner within this product have been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Tip: The FM radio uses the headset wires as an aerial, so the radio will not work unless the headset is connected.

To activate or quit the FM radio

1. From the main menu, select **FM radio** and press the **Dial key** or the **Scroll key**.
2. The radio will now display 'Searching', as it locates the radio stations.
3. The display will now show the current radio station found and start playing it through the headsets.
4. The volume can be adjusted by operating the scroll up or down.
5. To change, rename or delete stations, or to manually tune or re-tune, press the **Dial key** to enter the options menu and select from the options available.
6. Press the **C key** to exit back to main menu.

To listen to the Radio

In FM radio, press  or  to change channel. Press  to pause or continue playing the current channel.

Search channel

Tip: The FM radio stores all the channels found when the automatic search was performed. Please use the manual searching feature under the options menu to find a channel which was not found during the auto search.

Search All

In the FM radio, press the **Dial key** (≡), select **Search all** to search all FM channels and store them automatically in sequence.

Manual tuning

1. In FM radio, press the **Dial key (≡)** to select **Manual tuning**.
2. Press **◀** or **▶** to tune the frequency in 100kHz steps.
3. Press the **Dial key (Save)** or **Scroll key** to save the new station.
4. Select a station number from 1 to 40 and press the **Dial key** to save the manually tuned station.

Auto tuning

1. In FM radio, press the **Dial key (≡)** to select **Auto tuning**.
2. Press **◀** or **▶** to start auto searching. The tuning will stop at the first radio station found, and begin playing this station.
3. Press **Dial key (Save)**, select a station number from 1 to 40, press the **Dial key (Save)**. Or press **◀** or **▶** to continue searching.

Note: the radio may stop on 'silent stations', if this happens please press **◀** or **▶** to continue searching.

Edit channel name

In FM radio, press the **Dial key (≡)** to display the following options:

1. **Choose channel**: Select a stored channel and play.
2. **Name channel**: Rename the current channel.
3. **Delete channel**: Delete the current channel.

Adjust the volume

In FM radio, push the **Scroll key** up or down to adjust the volume.

Lock keypad

In FM radio, press the **Power key (🔒)** then **# key** to lock the keypad (shown as ).

Note:

The radio remembers the last radio station you were listening to, and the next time the radio is turned on, it will try to return to that station and re-commence playing it.

Voice recorder

Note: Please make sure the memory card is properly placed before entering into voice recorder, or else it does not work.

To activate or quit the Voice recorder

1. In the main menu, select **Extras>Voice recorder**.
2. In the voice recorder, press the **Power key** to go back to the previous menu.

Record voice

Select **Voice Recorder>record** to start recording.

Save record

1. During recording, press the **C key** to save record and go back to the previous menu.
2. Press the **Power key** to save the record and exit to standby mode.

Play record

In the voice recorder, select **Saved records** to enter into the saved record list. Select the record you want, press the **Dial key (Play)** or **Scroll key** to play.

Edit record

In the voice recorder, select **Saved records** to enter into the saved record list, then highlight the record you want and rename it, delete it and view details of it by using the **Scroll key** as follows:

Rename

Select **Rename**, enter the name you want and press the **Dial key** to save.

Delete

1. Select **Delete** to delete the current record.
2. Select **Delete all** to delete all the saved records.

Details

Select **Details** to view the detailed information of the current record.

Note:

1. The recording time depends on the capacity and free space of the memory card.
2. All the records are saved in the folder 'Audio' created in the memory card automatically.

Mass storage

1. In standby mode (lock or unlock), connect to PC with USB data cable. The pop-up message shows 'Activate mass storage?'. Select 'Yes' to activate mass storage; select 'No' to charge the battery by the USB data cable.
2. In the main menu, select **Extras>Data connect**.
 - a. Press the **Dial key (Select)** or **Scroll key** to enter Mass storage.
 - b. Press the **Dial key (Connect)** or **Scroll key** to enable the connection to PC.
 - c. After the connected animation is displayed, connect the USB data cable. Select **Activate**.
 - d. Select Mass storage on PC. Copy the MP3 files from PC to phone.
 - e. Double click the 'Safely Remove Hardware' icon in the System Tray of PC, select **Stop** and quit safely. And then press **Exit** on the phone. Press the **Dial key** to turn off mass storage. And then the phone can be used properly.

Note:

- ◆ Formatting the mass storage on PC is not supported, or else the phone will not work properly unless re-powered on.
- ◆ The phone can be charged via the USB connector from the PC. When the USB cable is connected, select 'Exit' on the phone when prompted to 'Link USB'.

File viewer

1. Select **Extras>Memory card>File Viewer>T-FLASH**.
2. Select a file folder, press the **Dial key** to enter the folder, or press the **Scroll key** to have the following options:
Info: To check the detailed information of the current file folder.
Delete: To delete the current file folder.
Rename: To edit the name of the current file folder.
3. Select a file, press Dial key to view the detailed information of the file, or press Scroll key to have the following options:
Info: To view the detailed information of the current file.
Delete: To delete the current file.
Rename: To edit the name of the current file.

Setting up ring styles and display

The phone comes with 5 pre-defined profiles: **Normal**, **Meeting**, **Outdoor**, **Car** and **VIP**. These profiles can be personalized by editing them.

Personalising a ring style

Open the main menu, select **Profile>Normal, Meeting, Outdoor, Car or VIP**.

Select one profile, then press the **Dial key (Select)** or **Scroll Key** to open it.

Setting an incoming call ringer alert

1. Select **Personalise>Incoming call alert**.
2. Select **Internal** to open the internal ring tone list in the phone; Select **External** to open the external ring tone list which will include the MP3 files.
3. Select the ring tone you want, then press the **Dial key (Select)** or **Scroll key**.

Setting a message ringer alert

1. Select **Personalise>Message alert tone**.
2. Select the message tone from the list and then press the **Dial key (Select)** or **Scroll key**.

Adjusting volume

1. Select **Personalise>Ring volume, Earpiece volume, Keypad volume or Vibrator**.
2. Use the **Scroll key** to adjust volume, then press the **Dial key (Select)** or **Scroll key**.
3. Press the **Dial key (Select)** or **Scroll Key** to set vibrator on/off.

Setting up display

Open the main menu, select **Settings>Phone>Screen**.

Setting display color

Select **Screen>Screen colour**, then use the **Dial key (Select)** or **Scroll key** to select the color that you want.

Setting backlight

Select **Screen>Backlight timer**, then use the **Dial key (Select)** or **Scroll key** to set the time you want.

Setting contrast

Select **Screen>Contrast**, use the **Scroll key** to adjust the brightness, then press the **Dial key (Select)** or **Scroll key** to save the brightness setting.

Setting wallpaper

Select **Screen>Wallpaper**, then use the **Dial key (Select)** or **Scroll key** to save the wallpaper setting.

Setting up Time & Date

Open the main menu, select **Settings>Time & Date**.

Setting time

1. Select **Time & Date>Time**.
2. Enter the time you need, then press the **Dial key (OK)** or **Scroll key** to save the time setting.
(e.g. If the time would be 2:45 pm, please enter 1-4-4-5)

Setting date

1. Select **Time & Date>Date**.
2. Enter the date you need, then press the **Dial key (OK)** or **Scroll key** to save the date setting.
(e.g. If the date would be Mar 15th 2005, please enter 1-5-0-3-2-0-0-5)

Setting date format

1. Select **Time & Date>Date format**.
2. Select the format you want, and then press the **Dial key (Option)** or **Scroll key** to save the date format setting.

Setting up greetings and language

Setting language

1. Open the main menu, select **Settings>Phone >language**.
2. Select the language you want, then press the **Dial key (Option)** or **Scroll key** to save the language setting.

Setting greetings

1. Open the main menu, select **Settings>Phone>Greetings**
2. Enter the greetings you want, then press the **Dial key (Save)** or **Scroll key** to save the greetings setting.

Please refer to 'Entry method' **P29** to get more information about entry method.

Tips: Greetings will be displayed before the home screen displays.

Using phonebook

You can store up to 200 entries in your phonebook.

The numbers you can store in the SIM card will vary. You can store the contact's name, phone numbers and other relative numbers in the phone book.

Storing a phonebook entry

Storing a phonebook entry from the menu

1. Open the main menu, select **Phonebook>Add new**.
2. Press the **Scroll key** to open **New**, then input the contact name and press the **Dial key** to save.
3. Use the **Scroll key** to select **Add number**, then input the phone number you want.
4. Press the **Dial key (Save)** or **Scroll key** to select **Number type**, then press the **Dial key (Save)** or **Scroll key** to save the entry.
5. Three phone numbers can be added into each entry. To add more numbers, redo the 3rd step.

Storing a phonebook entry in standby mode

1. In the home screen, input a phone number, then press the **Scroll key** to enter **Option menu>Save**.
2. If adding a new phone number to an existing entry, select **To existing** to enter phone book list.
Select the entry you want, then press the **Dial key (Select)** to save the new number.
3. If creating a new entry, select **New entry**.
(Please refer to 'Storing a phonebook entry from the menu' **P24**)

Searching for a phonebook entry

In the home screen, press the **Scroll key**; or open the main menu, then select **Phonebook>Names** to enter contact lists.
In contact lists, press the ***, # key** to page up or down.

1. To search by first letter: press the number key which the first letter of a contact's name begins with, then use the **Scroll key** to select a name you want.
2. To search by name: press the **Scroll key** to open **option** menu, select **Search**, then input the contact's name and press the **Dial key (OK)**.
3. To search by group: press the **Scroll key** to open **option** menu, select **View by group**, then select the group and press the **Dial key (OK)** or **Scroll key**, and then all the group's contact lists will appear.

Editing a phonebook entry

In the home screen, press the **Scroll key**; or open the main menu, then select **Phonebook>Names** to enter contact lists.

1. Select the contact you want, then press the **Scroll key** to open **option** menu and select **Edit**.
2. Select the contact name or phone number which needs to be changed, then press the **Scroll key** to enter editing mode.
3. After editing, press the **Dial key (Save)** or **Scroll key** to select a number type, then press the **Dial key (Save)** or **Scroll key** to save the entry.

Deleting phonebook entry

In the home screen, press the **Scroll key**; or open the main menu, then select **Phone book>Names** to enter contact lists.

Deleting a single number

1. Select the contact you want, press the **Dial key (View)** to view all phone numbers under this entry,
2. Select the phone number you want to delete, then press the **Scroll key** to enter **Option** menu and select **Delete** to delete the number.

Deleting an entry

1. Repeat the steps of 'Deleting a single number'.
After deleting all the phone numbers in this contact, this contact name will disappear automatically.
2. Or select the contact name you want, then press the **Scroll key** to enter **Option** menu directly and select **Delete**.

Deleting all phonebook entries

In your phonebook, press the **Scroll key** to enter **Option** menu, then select **Delete all>SIM card, Phone or All**.

Select **SIM card** to delete all entries in SIM card.

Select **Phone** to delete all entries in your phone.

Select **All** to delete all entries both in SIM card and your phone.

Assigning a group

Viewing group status

1. Open the main menu, select **Phonebook>Setting>View by group**.
2. Press the **Scroll key** to set the display or hide status of group.
“”: Show all the contacts under this group; “”: Hide all the contacts under this group.
3. Press the **Dial key (OK)** to save the group status and back to previous menu.

Assigning a group

1. In the phonebook list, select a contact, then press the **Scroll key** to enter **Option** menu and select **Add to group**.
2. Select the group you want to assign, and then press the **Dial key (OK)** or **Scroll key** to save the setting.

Viewing and setting up 1-touch dial

Note: On this phone you can only assign key 2 to 9 to eight numbers in SIM card s 1-touch dial numbers.

1. In the main menu, select **Phone book>Settings>1-touch dial list**. Then press the **Dial key (Select)** or **Scroll key** to view the one-digit speed dial number list.
2. In the main menu, select **Phone book>Names** to access name list. Press the **Dial key (View)** to view the details. Press the **Scroll key** to access the option menu. Select **1-touch dial**, and then select a speed dial number (from 2 to 9) for the contact, press the **Dial key (Select)** or **Scroll key** to save and back to the previous menu

automatically.

[Viewing memory status](#)

Choosing default save location

Open the main menu, select [Phonebook>Setting>Default Save Location>SIM card, Phone or Optional](#).

Select **SIM card** to save all new entries in SIM card by default.

Select **Phone** to save all new entries in phone by default.

Select **Optional** to save new entries in SIM card or phone.

Viewing memory status

Open the main menu, select [Phonebook>Setting>Status](#) to show the memory status of SIM card or phone.

Using call history

Viewing call history

Note: If the phone number has been saved in your phonebook, the contact name will be displayed in call record.

- 1, In the idle screen, press the **Dial key** (拨打) directly to view dialled calls list.
You can switch to received calls list and missed calls list by the * and # key.
- 2, Or open the main menu, select **Call record>Dialled calls, Missed calls or Received calls**.
- 3, Select a record, press the **Scroll key** to show the details.

Deleting call history

1. Open the main menu, select **Call record>Delete> Dialled calls, Missed calls, Received calls or All calls**.
Select **Dialled calls** to delete all the records in Dialled calls list.
Select **Missed calls** to delete all the records in Missed calls list.
Select **Received calls** to delete all the records in Received calls list.
Select **All calls** to delete all the records in Call history list.
2. Press the **Dial key (Select)** or **Scroll key** to delete and press the **Power key** to cancel this operation.

Viewing call information

Note:

- ◆ To set call costs and cost limit, input PIN2. Please refer to PIN2 **P7**.
- ◆ To view the last call cost and all call costs, set charge rate at first.

Cost information

Open the main menu, select **Call record>Call info.>Cost info.>Last call, All calls, Clear logs, Charge rate or Cost limits**.

Last call: Press **Dial key (Select)** or **Scroll key** to view the cost of the latest call.

All calls: Press **Dial key (Select)** or **Scroll key** to view the cost of all calls.

Clear logs: Press **Dial key** to clear.

Cost limits: Input the limitation of cost. If necessary, please input PIN2.

Open the main menu, and select **Call record>Call info.> Cost info> Charge rate>Set rate or Check rate**.

Check rate: View the current cost unit.

Set rate: Input the cost unit, then press **Dial key (Save)**. If necessary, please input PIN2.

Note: The time duration displayed in your phone may not be exact with the time duration based on which your service provider charge you. To get the exact cost information, please contact your local service provider.

Timer information

Open the main menu, select **Call record>Call info.>Timer info.>Last call or All calls**.

Last call: Press **Dial key (Select)** or **Scroll key** to view the time duration of the latest call.

All calls: Press **Dial key (Select)** or **Scroll key** to view the time duration of all calls.

Entry method

Where to use English entry method

Your phone offers a number of different text entry methods for entering text information in:

- 1) Creation or editing of contact details in the phonebook
- 2) Name searching in the phonebook
- 3) Creating SMS messages
- 4) Editing memos

Text entry methods

 ABC	Capital letter
 abc	Lowercase
 Eng _{AB}	T9 (capital letter)
 Eng _{Ab}	T9 (first letter capital)
 Eng _{ab}	T9 (lowercase)
 123	Number

Tips:

- ◆ To change between text entry methods, press the #key.
- ◆ With the T9 method selected, you can toggle between T9 entry methods by pressing and holding the space key.

Cursor

When editing, a cursor 'I' will be shown in the text string to indicate the location new characters will be entered.

Multi-tap

To enter text in Multi-tap mode, the key with the appropriate group of letters must be pressed, if the first letter of the group is required, the key is pressed once. If the second letter is required it should be pressed twice.

e.g. Input the word 'Hello'

- ◆ Switch to  ABC capital letter, then press 4 twice to input 'H'
- ◆ Switch to  abc lowercase, then press 3 two times to input 'e', press 5 three times to input 'l', press 5 three times to input 'l', then press 6 three times to input 'o'.

T9 English entry method

It's easier to use T9 to input words.

e.g. Input the word 'Hello'

Ensure you are in T9 mode (cycle through the options by pressing #), then press and hold the space key to switch to  Eng_{Ab} T9 (first letter capital) .

Press 4,3,5,5,6. As you type the phone will be trying to work out the most likely word you are trying to spell. When you have completed the word, confirm the word the phone has correctly predicted the word you require by pressing the space key, this will enter the word displayed, enter a space and move on ready to enter the next word.

If the word the phone has predicted is not the one you require, alternative words found by the same keypresses can be shown by pressing the  or  .

Press 0 to enter a space.

Punctuation and Special characters

In edit mode, press 1 to input punctuation and special characters.

Press 1 to select the alternative punctuation or special characters.

Messages

Viewing messages

Note: You must set up your message inbox before you can send and receive messages. Usually, your service provider has already set up the message in box for you.

In standby mode, push the **Scroll key** up to open **SMS** menu; or open the main menu, select **Messages>SMS>Inbox**, **Outbox** or **Saved items**.

Inbox:

1. Use the **Scroll key** to select the message you need, press the **Dial key (Read)** or **Scroll key** to read the message.
2. Press the **Dial key (Option)** or **Scroll key** to open the option menu:
 - **Reply:** To reply to the sender's number
 - **Delete:** To delete the message
 - **Forward:** To continue to send the message to other recipients
 - **Save:** To save the message
 - **Edit:** To edit the message and save
 - **Call:** To call the sender's number
 - **Extract number:** To extract the numbers embedded in the message
 - **Send to many:** To send the message to a group of persons

Outbox

1. Use the **Scroll key** to select the message you need, press the **Dial key (Read)** or **Scroll key** to read the message.
2. Press the **Dial key (Option)** or **Scroll key** to open the option menu:
 - **Delete:** To delete the message
 - **Send:** To send the message
 - **Save:** To save the message
 - **Edit:** To edit the message and save
 - **Call:** To call the sender's number
 - **Extract number:** To extract the numbers embedded in the message
 - **Send to many:** To send the message to a group of persons

Saved items

1. Use the **Scroll key** to select the message you need, press the **Dial key (Read)** or **Scroll key** to read the message.
2. Press the **Dial key (Option)** or **Scroll key** to open the option menu:
 - **Delete:** To delete the message
 - **Send:** To send the message
 - **Edit:** To edit the message and save
 - **Extract number:** To extract the numbers embedded in the message
 - **Send to many:** To send the message to a group of persons

Creating messages

Note: If you set the language as English, up to 160 English characters can be contained in each message (including space)

If you set the language as others, 70 characters can be contained in each message (including space).

In standby mode, push the **Scroll key** up to enter **SMS>Create**; or open the main menu, and select **Messages>SMS>Create**.

1. To enter the content.
2. Press the **Dial key (Option)** to access the option menu:
 - **Send:** To send the message
 - **Save:** To save the message
 - **Insert name:** To insert the names selected from the list
 - **Insert number:** To insert the numbers selected from the list
 - **Send to many:** To send the message to a group of persons
3. Press the **End key** back to previous menu.

Warning:

1. In the message entry screen, press the **C key** to delete the characters to the left of the cursor; Press and hold the **C key** to clear all the characters.
2. The SMS will be divided into at most 6 continuous pieces automatically and send them one by one if the characters entered in one message exceeds the character limits. The upper limit is 912 English characters in purely English language or 396 characters in other languages.

Using SMS template

Open the main menu, and select **Messages>SMS>Template**. There are 10 templates of short messages for quick reply. You can choose one from the following:

1. Where are you?
2. Hello, how are you?
3. Call me, it is urgent.
4. I'm busy and I'll call you later.
5. Call me if it is possible.
6. I'll arrive a little bit late.
7. I received your message, I'll call you later.
8. What are you doing?
9. At what time do we meet?
10. At what time is the meeting?

Deleting messages

Open the main menu, select **Messages>SMS>Inbox, Outbox or Saved items**.

Delete all: To delete all of the messages in this folder

Delete one:

1. Select a message, press the **Dial key (Read)** or **Scroll key** to view this message.
2. Press the **Dial key (Option)** or **Scroll key** to access option menu.
3. Select **Delete**.

Setting up messages

Open the main menu, select **Messages>SMS>Settings**, to open the option menu:

1. **SMS center No.:** Enter the SMS service center code, then press the **Dial key (Save)**.
2. **Validity:** Select the length of time your message will be stored in the SMS service center and back to previous menu.
3. **Status rept.:** Set the delivery status report on/off and back to previous menu.
4. **Save priority:** Set the priority to store in SIM card or phone and back to previous menu.

5. **Status:** Display the SMS storage status in SIM card and phone.

Information messages

Note: Information message functions are network support services. Please contact your service provider for more information.

Open the main menu, select **Messages> Info. messages.**

Viewing information messages

1. In Info messages menu, use the **Scroll key** to select **Read**.
2. Use the **Scroll key** to select the information you want, then press **Dial key** to read.

Notes:

1. Please set up a topic first and then you can use the read menu.
2. If no information message in current topic, The display will show “no message”

Setting up information messages

1. In Info messages menu, use the **Scroll key** to select **Settings**.
2. Press the **Dial key (select)** or **Scroll key** to **Add** or **Delete** the language.
3. Select **Topics>Add new** to access the self-created topic list. Press the **Dial key (Select)** or **Scroll key** to **Add**, **View/Edit** or **Delete** topics.
4. Select **Topics>Current list** to access the currently selected list. Press the **Dial key (Select)** or **Scroll key** to **Add** or **Delete** topics.

Voice mail

Open the main menu, select **Messages>Voice mail>Listen** or **Voice mail number**.

Please set the voice mail number before listening to the voice mail messages.

Note: Voice mail is a network support service; please contact your local service provider for detailed information.

Personal organizer

Alarm

Tip: You can set more than one clock at a time.

Open the main menu, and select **Extras>Alarm**.

Turn Alarm on

Select an alarm, press the **Dial key (Option)** or **Scroll key** to access the option menu.

Active: Activate the current alarm.

Modify/Reset: Edit or set the current alarm.

Alarm status: View the status of the current alarm.

Deactivate all: Close all the activated alarms.

Turn Alarm off

Turn all off: Select an alarm, press the **Dial key (Option)** or **Scroll key** to access the option menu. Select **Deactivate all**.

Turn one off: Select an activated alarm, press the **Dial key (Option)** or **Scroll key** to access the option menu. Select **Alarm off**.

Memo

In the main menu, select **Extras>Memo**.

Add

1. Select **Add**, enter the content and press the **Dial key (OK)** to save.
2. Select **turn On** or **Off** the reminder press the **Dial key (OK)**.
3. If Choosing **On**, select the remind date, and then enter the time. Press the **Dial key (OK)** or **Scroll key** to save.

View

Select **View all** to view the detailed content of the memo. Press the **Dial key (Option)** or **Scroll key** to enter the option menu:

View/Edit: Enter the content you want and press the **Dial key (OK)** to save.

Delete: Delete the current memo.

World time

In the main menu, select **Extras>World time**.

1. Push the **Scroll key** to move the straight line on the screen to show the time zone and corresponding time.

2. Press the **Dial key** ([Select](#)) to select a time zone and the phone time will be set to the current time zone, and then the phone will go back to the previous menu automatically.

Calculator

You can have some basic mathematics operation such as plus, minus, multiply and divide.

In the main menu, select [Extras>Calculator](#).

1. During entering digits, press the **C key** to delete a character.
2. Press the **# key** to switch the function notation. Press the **Dial key** to get the result.
3. Press the **Power key** to back to the previous menu.

Calendar

In the main menu, select [Extras>Calendar](#).

1. Push the **Scroll key** to move the cursor left or right, push and hold the **Scroll key** to move the cursor up or down. Press the **# key** or ***** **key** to change month.
2. Press the **C key** to back to the previous menu, or press the **Power key** to return to the standby mode.

Memory status

In the main menu, select [Extras>Memory card>Status](#).

To view the current status of the memory card.

STK

Your phone supports STK.

Please contact your SIM card service provider on the usage, charge rate and data of STK.

Call and phone settings

Minute reminder

In the main menu, select **Settings>Call>Minute reminder**.

Select **On** or **Off**, press the **Dial key (Select)** or **Scroll key** to save.

Fixed dialing

Note: The SIM card installed needs to support fixed dialing.

The number which can be stored depends on the memory of SIM card.

In the main menu, select **Settings>Call>Fixed dialing**.

1. Enter PIN2 code to access the option menu.
2. Select **Fixed dial setting>On** to enable the fixed dialing; select **Fixed dial setting>Off** to disable the fixed dialing
3. Select **Fixed dial list** to access fixed dial name list. Select the contact you want, press the **Dial key (View)** or **Scroll key** to dial.
4. In the name list, press the **Scroll key** to access the option menu:
Select **Edit** to edit the number or name of the current contact;
Select **Delete** to delete the current number.
Select **Add new** to add a new contact.

Tip: You can only dial or send messages to the numbers in the fixed dial list, when the fixed dialing is activated.

Call forward

Tip:

- ◆ Call forward is invalid when the fixed dialing is activated.
- ◆ In this function, you can forward the incoming calls to the assigned number. (Call forward is network support service, please contact your local wireless service provider for detailed information.)

In the main menu, select **Services>Call forward>Forward all calls, Forward if busy, Forward if no reply, Forward if out of reach or Cancel all**.

Forward all calls: All the incoming calls are to be forwarded to the assigned number unconditionally.

Forward if busy: Forward the incoming calls to the assigned number when the line is busy.

Forward if no reply: Forward the incoming calls to the assigned number when the call is not answered.

Forward if out of reach: Diver the incoming calls to the assigned number when the phone is not available or switched off.

Cancel all: Cancel all the activated forwarding.

You can use call forward feature in different conditions. There are **On, Off** and **Status** in each option. Press the **Dial key (Select)** or **Scroll key** to select.

1. Select **On>Set number** or **Voice mail**.

Set number: Enter the number you want to assign, or press the **Dial key (Search)** in the phone book before entering the number. Press the **Dial key (OK)** or **Scroll key** to save.

Voice mail: Your phone will display the voice mail number automatically. You can also enter the voice mail number you want, press the **Dial key (Select)** or **Scroll key** to save.

2. Select **Off** to disable call forward.
3. Select **Status** to view the current status of call forward.

Call barring

Tip: In this function, you can restrict the incoming and outgoing calls. (Call barring is network support service, please contact your local wireless service provider for detailed information.)

In the main menu, Select **Services>Call barring>Outgoing, Intl. out, Local only, Incoming, Roaming in, Cancel all or New password.**

Outgoing: All out calls can not be made

Intl. out: International calls can not be made.

Local only: Only local calls in the same network as the SIM card can be made.

Incoming: All incoming calls can not be made.

Roaming in: Incoming calls can not be received while roaming.

Cancel all: Enter the password to cancel all the restrictions.

New password: You may change the network barring password provided by the wireless service provider when applying the relevant service.

You can use call barring function in different conditions. There are **On, Off** and **Status** in each option. Press the **Dial key (Select)** or **Scroll key** to save.

1. Select **On** and enter network password to restrict the numbers in the current condition.
2. Select **Off** and enter network password to cancel the restriction.
3. Select **Status** to view the current status of call barring.

Call waiting

In the main menu, select **Services>Call waiting**.

1. Select **On** to enable call waiting. Incoming call icon displays when there is an incoming call during a call.
2. Select **Off** to disable call waiting.
3. Select **Status** to view the current status of call waiting.

Phone setting

Airplane mode

In the main menu, select **Settings>Phone>Airplane mode**.

1. Select **On** to disable calling functions. You can only use the entertainment functions on the airplane. (Please comply with the relative regulations.)
2. Select **Off** to disable the airplane mode.

My number

Tip: You can set 2 my numbers only.

In the main menu, select **Settings>Phone>My number**.

1. Press the **Dial key (Add)**, and enter the number, and then press the **Dial key (OK)** to save.
2. Select a number, and then press the **Dial key (Option)** or **Scroll key** to the option menu: to **Edit No.** or **Delete No.**

Any key answer

In the main menu, select **Settings>Phone>Any key ans.**

Press the **Dial key (Select)** or **Scroll key** to turn **On** or **Off**.

On: Press any key to answer the incoming calls.

Off: Press the **Dial key** or **Scroll key** to answer the incoming calls. (Please refer to Answering or rejecting a call at **P15** for more information.)

Auto on and off

Your phone switches on or off automatically on the assigned time when **Auto on/off** is activated.

In the main menu, select **Settings>Phone>Auto power on/off**.

1. Press the **Dial key (Select)** or **Scroll key** to set **Auto power on** or **Auto power off**.
2. Press the number keys to enter the time of switch on or switch off and press the **Dial key (OK)** or **Scroll key** to save.

Other settings

Network setting

In the main menu, select **Settings>Network>Network opts.** or **New password.**

1. Select **Network opts.>Automatic, Manual, Set preferred Ntwk** or **Add network** to search network in different ways.
2. Select **New password** to change the network password.

Security setting

In the main menu, select **Settings>Security>PIN code, Change PIN2 or Phone lock.**

PIN code

1. Select **PIN code**, press the **Dial key (Select)** or **Scroll key** to open the PIN code entry screen.
2. Enter the proper PIN code, and press the **Dial key (Select)** or **Scroll key** to save the setting.

Warning:

- ◆ The SIM card is locked if wrong PIN code is entered for 3 times. (Please contact your local wireless service provider to unlock the SIM card.)
- ◆ The SIM card is to be damaged if the wrong PIN code is entered for 10 times. (Please contact your local service provider for help.)

Change PIN2 code

1. Select **Change PIN2>Change.**
2. Enter the proper PIN2 code, and press **Dial key (OK)** or **Scroll key**.
3. Enter the new PIN2 code twice and press **Dial key**.

Warning:

- ◆ The SIM card is locked if wrong PIN2 code is entered for 3 times. (Please contact your local wireless service provider for PUK2 code to unlock the SIM card.)
- ◆ The SIM card is to be damaged if the wrong PUK2 code is entered for 10 times. (Please contact your local service provider for help.)

Phone lock

Enter the phone unlock code to open the phone lock screen. Press the **Dial key (Option)** or **Scroll key** to turn **On, Off** or **Change code**.

Note:

- ◆ You need to enter the unlock code to switch on the phone and access some menus if the phone lock is activated.
- ◆ The default phone unlock code is 1234.

Master reset

In the main menu, select **Settings>Restore factory settings**. Press the **Dial key (Select)** or **Scroll key** to restore the factory settings.

Note:

- ◆ Your personalized settings will be canceled after this operation.
- ◆ Master reset does not have effect on the phone book or other data rather than setting.
- ◆ Master reset does not change the time and date in your phone.

Troubleshooting

Problems:	Solutions:
Display 'Locked' when the phone is turned on.	Wrong PIN number has been input, please contact your service provider to unlock.
No Signal strength indicator is displayed	Lost connection with the network. The phone may be in a place without network service. Please move to another location or contact your service centre for help.
The keypad doesn't work or work very slowly.	The operation speed of the screen is slow under low temperature which is normal. Please try again in a warmer place.
No display while charging	Low battery, or out of the temperature range (0-45°C). Please wait for couple minutes or move the mobile to a warmer place to recharge again.
'Not Provided' or 'Not Set' is displayed on the screen while using some functions.	Many functions can only be used after applying for the services. Please contact your service provider for details.
'SIM damaged' is display on the screen.	SIM might be damaged, please contact your service provider for help.
'Insert SIM' displayed	Please make sure that you have inserted the SIM card properly. If it is no use, SIM may be damaged and please contact your service provider.

Battery information

Type	Capacity
Li-ion	430 mAh

--The battery life depends on many factors, including the SIM card, network conditions, settings , usage and environment.

--Making calls, turning on the backlight and music player will consume more battery power.

--The standby time is shorter when the network is not available than in the standard status.

--For power saving, the backlight turns off automatically if your phone stands idle for an assigned time.

--The performance of battery varies with the charging status, temperature, local radio wave and backlight status.

Accessories

Safety of the battery

1. Please use the battery provided by the original manufacturer. Use of any other battery will lead to the warranty being invalid and the manufacturer of the phone will take no responsibility in repairing the phone damaged by the use of unapproved fittings.
2. Please keep any metal things (e.g. Keys in your pocket) away from the contact point of your battery to avoid short circuits.
3. Do not bend or open the battery by force
4. Please keep the battery away from water and fire.
5. The battery can not be charged under 0C (32F) or above 45C (113F).

Rapid travel charger

The rapid travel charger can help you to quickly charge the battery. Plug the charger to an AC wall socket and plug the other end into the charger port of the phone. Please make sure the battery is correctly inserted on the phone before charging. Please do not remove the battery while charging.

Data cable

Only use the data cable approved by the phone manufacturer. The use of any other types would invalidate any approval or warrant applying to the phone and could be dangerous.

SAR information

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types C-1 (FCC ID: TPP06C-1) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 0.281 W/kg and when properly worn on the body is 0.814 W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.5cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

-End of Document-