

WP400
GSM Wireless Phone
User Guide

Know your Phone



Key Instruction

Key	Description
MENU/SELECT key	It is used to enter main Menu, select or confirm options in Menu, or confirm the character chosen in condition of character input.
NAMES/CLR/BACK Key	It is used to erase input information, or cancel operating, exit to previous pop-up window interface.
MESSAGE key	This is the shortcut key to enter message menu.
Number key	Use the number keys to enter numbers and characters.

# key, * key	It differs in different mode, option or function menu.
--------------	--

Scrolling key	Press these keys to scroll cursor to the left, right, up or down when inputting characters or selecting items. Or default functions in standby mode are set in Settings menu.
----------------------	---

EXIT Key	It is used to power on/power off or exit from any window interface to standby mode
-----------------	--

CALL/REDIAL key	Press this key to make a call after having entered the telephone number intended for calling or entered the last called telephone number.
------------------------	---

HANDFREE key	If you use the handset to make a call and put conversation on the speakerphone, press "Hands-free" key and hand down the handset to put conversation on the speakerphone.
---------------------	---

Interface Icons

Icon Description Icon Description



Signal strength



New Message (flop when memory is full)



Mute



Call Forwarding



Bar Blacklist



Bar All



Friend Only



Power Indicator

Installation

1. Handset

Connect phone set and receiver with the handset cord.

2. External power adapter

Plug the external power adapter to the external AC socket 100V ~240V.

How to power on/off

- ◆ Switch the power toggle switch (**BATT**) to “ | ” side which located at the phone's back to power on the battery, or connect the phone to an external AC socket via the external power adapter.
- ◆ Press the **↓/EXIT key** for about 3 seconds, the phone will then automatically test whether the SIM card is inserted and valid.
- ◆ In standby state, besides making and answering calls, you can do also:
 - Press **MESSAGE key** to enter **Messages** menu.
 - Press **MENU/SELECT key** to enter main **Menu**.
 - Press **NAMES/CLR/BACK key** to enter **Contacts** list.
- ◆ In state of power-on, press and hold button **↓/EXIT key**, LCD screen closes or turn off the power toggle switch directly.

As usual, suggest make use of external power supply. When power down or unavailable power supply nearby, you can use battery for backup.

How to Make a Call

- ◆ Pick up the handset or press the **HANDFREE** key.
- ◆ Enter the telephone number by using the **Number keys** (add area code when making a long distance call) or select from Contacts.
- ◆ Press the **CALL/REDIAL** Key to make the call.

Text Input

Operation	Method
Input Letters	Multitap Input—"ABC" or "abc", press corresponding letter key till the letter appears.
Input Words	eZiText Input—"Eng", press any key once to key in any word.
Input Digits	Numbers Input—"123", press digit key once.
Input Symbol	Symbols Input —press * key and press Left/Right key and Up/Down key to select corresponding symbol. ABC/abc Input — press "1" key till the symbol (common symbols) appears.
Input Space	Press "0" key, except for being in numbers mode.
Erase Character	Press NAMES/CLR/BACK key .
Erase all the characters	Hold NAMES/CLR/BACK key till all the characters to be erased.
Move cursor left or right	Press Left/Right key .
Change input mode	Press # key to change text input mode.
Capitalization	Press # key to "ABC" and "abc" input mode to switch between capitalization and lowercase.

Menu Tree

1. Short Messages	3. Settings
1.1 New message	3.1 Phone settings
1.2 Inbox	3.2 Display settings
1.3 Outbox	3.3 Audio settings
1.4 Draftbox	3.4 Clock settings
1.5 Msg settings	3.5 Call settings
1.6 Voicemail	3.6 Network settings
2. Call Menu	3.7 Security settings
2.1 Calls	4. Tools
2.2 Diverts	4.1 Alarm clock
	4.2 Calculator
	5. STK

Menu Function

Hereinafter are brief instructions on menu functions of the phone.

Function	Description	Selection
Add contact	Save phone number	Contacts→ Options →Add new contact
Search contact	Search for a contact entry	Contacts→ Options →Search
Used space	View the number of saved entries and maximum number of entries capacity in phone and SIM	Contacts→ Options →Used space
Templates message	Some common used messages preformatted	Menu→ Short Messages → Msg settings →Templates
Voicemail	Receive and listen to Voice messages	Menu→ Short Messages → Voicemail
Recent calls	View or dial all recent calls	Menu→ Call Menu→ Calls
Call forwarding	Forward an incoming call to a designated phone number	Menu→ Call Menu→ Diverts
Shortcut key	Set the scrolling key as shortcut key of some menu	Menu→ Settings→ Phone settings→ Fastkey settings

Keypad lock	Lock the keypad automatically	Menu→ Settings→ Phone settings→ Auto lock keypad
Tone	Select phone's Ring/Key /Warn tone	Menu→ Settings→ Audio settings → Ring/Key/Warn tone
Missed alert	Set the phone to prompt or not when there is call missed.	Menu→ Settings→ Audio settings →Missed alert
Message alert	Select type of tone to prompt when there is message	Menu→ Settings→ Audio settings → Message alert
Volume	Set the volume of ringtone /speaker	Menu→ Settings→ Audio settings →Ringtone/Speaker volume
Date & Time	Set the date and the time	Menu→ Settings→ Clock settings → Date & Time
Date format	Set the date format	Menu→ Settings→ Clock settings → Date format

Function	Description	Selection
Call waiting	Put the current call on hold to answer the other incoming call	Menu→ Settings→ Call settings → Call waiting
Network Settings	Set the way of searching network	Menu→ Settings→ Network settings
SIM password	Set or change the SIM password	Menu→ Settings→ Security settings→ SIM password
Phone lock	Set or change the phone lock code	Menu→ Settings→ Security settings→ Phone lock
Network call bar	The service provider will offer you a 4-digital Network Code to activate Network Call Bar	Menu→ Settings→ Security settings→ Network call bar
Alarm clock	Set alarm alert time	Menu→ Tools → Alarm clock
Calculator	Execute basic math calculation	Menu→ Tools→ Calculator

Voice Mail

Before using **Voicemail**, consult with service provider to confirm that the voice mailbox has been activated.
The system automatically sends a message to your phone informing a new voice message. Read the message and then dial voice mail box number to listen to your 7

voice message.
To read your voice mail, hold “**1**” key to dial voice mail box number in standby mode.

Message

1. Select **Short Messages** in **Menu**.
2. Select **New message** to write and edit message text.
3. Select **Options** to send or save the message.
 - Select **Inbox** to view messages received.
 - Select **Outbox** to view the sent messages.
 - Select **Draftbox** to view draft messages.
 - Select **Msg settings** to make some necessary short message settings.

Phone Lock

Phone lock could prevent your phone from illegal use. The default phone code is 1234.
Change it to your own phone password as soon as possible.

PIN Code and PUK Code

PIN Code: PIN Code could prevent your SIM Card from illegal use. When PIN lock is on, you should enter the PIN code when opening the handset again. Change the default PIN code password to your own PIN Code password as soon as possible.

PUK Code: Consecutive inputting wrong PIN code for three times can cause locking of SIM Card. To unlock, you need PUK code.

PIN code and PUK Code may be offered together with the SIM Card. If not, contact with network operator.

Warning and Maintenance

- Keep the phone out of the reach of little children. The phone may cause injury if used as a toy.
- Use original accessories or accessories that are authorized by the manufacturer.
- Keep the phone dry and store in shady and cool place.
- Do not expose your mobile phone to direct sunlight or store it in hot areas. High temperatures can shorten the life of electronic devices.
- Prevent liquid from seeping into your phone.
- Do not drop, knock or harshly treat the phone. Rough handling can break internal circuit boards.

- Do not connect the phone with other unauthorized peripheral equipments. Do not attempt to disassemble the mobile phone and battery by yourself.
- Power off your phone before clean the phone. Use clean fabric that is anti-static to clean your phone.
- As your mobile phone can produce electromagnetic field, do not use the phone near electrical appliances.
- Do not charge the mobile phone without battery.
- Be aware of the usage limitation when using a mobile phone at places such as oil warehouses or chemical factories.
- The user is cautioned that changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.
- Use phone within a temperature range of -10°C ~ + 55°C and a humidity less than 95%.
- To comply with FCC RF exposure compliance requirements, this grant is applicable to only Mobile Configurations. The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.
- Declared that the product is installed with battery separately in the box. The FCC ID label is placed on the mobile phone clearly visible to all persons at the time of purchase.
- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference.
 - (2) This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following

measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.