

1.6 User Manual

CP_0116_BT VKBmanual.ai



Bluetooth Virtual keyboard - Quick Start Guide

For the full User Guide please refer to the CD menu

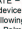
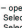
Installing the software driver on your device

- **INSTALL** – insert the CD; this should run automatically. However if it does not start by itself, please open the CD and run SETUP.EXE.

Using the Virtual Keyboard


- Place the Bluetooth Virtual Keyboard on a solid, flat surface and turn on using the button located on the upper left side of the unit.
 - NOTE: a micro-switch built into the bottom of the Bluetooth Virtual Keyboard will automatically turn it off when lifted.
 - Pairing/Bonding – Bluetooth devices must be paired/bonded before interfacing with each other first. Follow your device pairing/bonding procedure to pair/bond your device with the Bluetooth Virtual Keyboard.
 - PalmOS – Bluetooth->Preferences->Trusted Devices->Add Device
 - PocketPC (PDA) – Bluetooth Manager->Tools->Paired Devices->Add
 - PocketPC (XDA II) – Settings->Connections->Bluetooth->Bonded Devices->New
 - Smartphone – Start->Settings->Bluetooth->Bonded Devices->New
 - Windows (HID profile) – Select HID and connect
 - Windows (SPP profile) – Select SPP profile->Select COM port->Connect
- NOTE: Details please refer to your device user guide

Running the Software Driver

- **LOCATE** – after installing the software driver, locate it on your device to run it. The software () can be found in the following locations.
 - PalmOS – Under Systems
 - Pocket PC – Under Program
 - Smartphone – In the main menu
 - Windows – on the Desktop, Launch Bar or All Programs.
- **RUN** – open the VKB page by clicking on the VKB icon ().
 - Select the Connections page, and choose "Bluetooth".
 - Select the VKB page and check the Enable Keyboard.
 - You may be prompted, "First time connecting to this keyboard?". If yes, choose "YES" otherwise, choose "NO".

NOTE: Details please refer to your device user guide

Modifying the sensitivity of VKB

- You may need to adjust this setting for optimal use depending on your typing style. If you are experiencing missing keys, try increasing the sensitivity or if you are experiencing extra keys, try decreasing the sensitivity. You may do this by pressing Shift-Fn-LeftArrow to decrease or Shift-Fn-RightArrow to increase the sensitivity or you may make the adjustment via the driver. Open the VKB page by clicking on the VKB icon () and select the Properties Tab.



- For other detailed settings, please refer to the VKB user guide. Enjoy...