

Headset

Turn off your headset before placing it in your pocket or bag. If the MFB is accidentally depressed, your mobile phone may place an unintended call.

Do not expose the headset to liquid, moisture or humidity, or rain as it is not waterproof.

Do not use abrasive cleaners to clean the headset.

Do not expose the headset to extremely high or low temperatures.

Do not leave the headset in direct sunlight for an extended period of time.

Do not leave the headset near open flames such as cooking burners.

Do not dispose of the headset in a fire, as it will result in explosion.

Do not bring the headset into contact with any sharp objects, as this will cause scratches and damages.

Do not attempt to disassemble the headset as it does not contain serviceable components.
 If you do not plan to use the headset for a long period, please store it in a dry place that is free from extreme temperatures and dust.
 Avoid charging the headset in extremely high or low temperatures.
 Dispose of the battery and the headset according to local regulations. Do not dispose of them as household waste.

Do not attempt to replace the headset's battery as it is in-built and is not changeable.
 Dispose of the battery according to local regulations. Do not dispose of the battery as bousebold warts.

Charge the battery in accordance with the instructions supplied with this user guide.

Short beep at minimum Flashing blue light

Adjust Volume Down | Press the Volume Down key

Care and Maintenance

Using your headset

Care and Maintenance (Cont'd)

used.
 Do not use the charger outdoors or in damp areas

accordance with Annex II of the above directive.

We, i.Tech Dynamic Limited, declare that the following product:

v2.0 + EDR第2類

2.4GHz (秭赫)頻譜

耳機和免提

3小時內

達4.5小時

達90小時

13.1克

Declaration of Conformity

Product Name: i.Tech Clip Radio 602 Model No.: C51-B602-XX

產品規格

藍芽規格

頻率節圍.

備用時間*

重量:

29-30

30-32

狀態指示燈

額定充電時間

FM收音機頻率

Enalish

Thai

繁體中文

简体中文..

Pedoman Pengguna ..

Function	Button	Audio	Status indictor
Say the voice tag as into your mobile pl	s soon as you hear the short beep none.	and you must hav	ve recorded the voice ta
Last no. Redial*	Double click the MFB		Flashing blue light
Reject a call*	Press and hold the Volume Down key for 2 seconds	a short beep	Flashing blue light
Call Transfer (headset to mobile phone)*	While speaking, press and hold the Volume Up key for 2 seconds		Flashing blue light
Call Transfer (mobile phone to headset)*	While speaking, press MFB once		Flashing blue light
		*	Subject to mobile support
Key Lock (Activate/Deactivate)	Slide the Lock Key to activate/Slide to the opposite side to deactivate		Flashing blue light
Answering a Call while key lock is activated	Press the MFB once		Flashing blue light

Use only the charger supplied by the headset's original manufacturer to charge the headset Other chargers may look similar but using them could be dangerous and could damage the

headset.

• Do not attempt to disassemble the charger as it may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the headset is subsequently

is in conformity with the following essential requirements of Council Directive 1999/5/EC (referred to as R&TTE Directive): Article 3.1a, 3.1.b and 3.2. and the product is manufactured in

A copy of the Declaration of Conformity can be found at http://www.itechdynamic.com

87.5 MHz (兆赫) - 108.0MHz (兆赫)

27.1 (長) x 40.4 (闊) x 11.1 (高) 毫米

上述數據可能因應用戶習慣、不同的操作模式和流動電話設定而有所差异

FM Radio Function

Factory Reset

Safety Information Care and Maintenance Declaration of Conformity

Bluetooth Specification:

Nominal Charging Time: FM Radio Frequency: Talk Time*: Standby Time*:

Range of Frequency:

Product Specifications

68-83

Button	Audio	Status indictor
Press FM key once to turn ON/OFF		Flashing blue light
Hold Volume UP/DOWN for 2 seconds (start scanning until a station is found)		Flashing blue light
Press the Volume Up key once		Flashing blue light
Press the Volume Down key once		Flashing blue light
-	ns avallable	
2 seconds to store		
	Press FM key once to turn ON/OFF Hold Volume UP/DOWN for 2 seconds (start scanning until a station is found) Press the Volume Up key once Press the Volume Down key once There are maximum 8 preset station at intended to be stored	Press FM key once to turn ON/OFF Hold Volume UP/DOWN for 2 seconds (start scanning until a station is found) Press the Volume Up key once Press the Volume Down key once There are maximum 8 preset stations available at intended to be stored

Headset & Handsfree

Weight: 13.1 grams
* may vary due to the user's habit, different modes of operation, and mobile phone settings.

27.1 (L) x 40.4 (W) x 11.1 (H) mm

Function	Button	Audio	Status indictor
FM Radio ON/OFF	Press FM key once to turn ON/OFF		Flashing blue light
Scan a Station	Hold Volume UP/DOWN for 2 seconds (start scanning until a station is found)		Flashing blue light
Adjust Volume Up	Press the Volume Up key once		Flashing blue light
Adjust Volume Down	Press the Volume Down key once		Flashing blue light
Assign a Preset Station*	·	'	'
•	There are maximum 8 preset statior	rs avallable	
	at intended to be stored		
2) Hold the FM key for	2 seconds to store		

1) Press FM key 2 times to retrieve the first stored station Press FM key again to retrieve the second stored station and so on

Notes on Environmental Protection

Clip Radio 602綜觀

重設至出廠設定

確保耳機已關閉。

3. 放開調高音量按鈕

To acquire better FM performance, users are recommended to use with the i.Tech stereo

After the implementation of the European Directive 2002/96/EU in the national legal system, the

following applies: Electrical and electronic devices must not be disposed of with domestic waste.

ervice lives to the public collection points that are set up for this purpose or designated points

Consumers are obliged by law to return electrical and electronic devices at the end of their

of sale. However, such details are defined by the national law of the respective country. This symbol on the product, the instruction manual or the packaging indicates that the product is

subject to these regulations. By recycling, reusing the materials, or other forms of utilizing old devices, you are making an important contribution in protecting our environment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two

conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

You are cautioned that changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device

9切能按鈕 (MFB)電源開/關・與流動電話配接

最後來電重撥

• 收音機開/關
• 指派FM預設電臺
• 調出FM預設電臺
3.5毫米音頻插座

• 拒接/轉駁來電

掃瞄FM電臺

向下掃瞄FM電臺

語音撥號

充雷器插座

內置咪高峰

7. 調高音量

8 調低音量

pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable p

請根據以下步驟,操作Clip Radio 602藍芽耳機 (以下簡稱"耳機"):

您可以將耳機重設至出廠設定。重設期間<mark>亦會刪除耳機與流動電話的配接記錄</mark>

2. 按住調高音量按鈕,然後將充電纜綫插入充電器插座,狀態指示燈會閃動紫色2

i.Tech藍芽耳機專爲藍芽器材而設計。但因各生產裔的藍芽器材設計存在一定差异, 我們不能保證耳機與所有使用藍芽技術啓動的產品相兼容。

• 請確保耳機與流動電話妥善地連接 - 如未能連接,請參照流動電話的藍芽

自從在國家法律體系中實施歐盟指令2002/96/EU後,以下措施開始應用:電器及電

子產品不能作一般家居廢物處理。如在電器產品壽命終結時,消費者將根據法例規 定,將產品棄置于特定的公共收集點或銷售點作回收用途,但細節須由相關國家的

國家法律所定義。產品、說明書或包裝上的標志,說明這類產品是受到這些法例的

規定,循環使用或再用這些物料或使用其它形式的器材,將對環境保護有着重大貢

菜單,或按MFB一次。(請參閱「使用耳機」及「將耳機與藍芽流動電話配

我們建議你把耳機戴在與流動電話的同一邊,以達到最佳的接收效果。

1. 確保您的耳機已完全充電。 2. 將已充電的耳機配接至可啓動藍芽的流動電話。

Federal Communications Commission (FCC) Statement

Factory Reset

Getting Started

Clip Radio 602 Overview

You may reset the headset to its default settings. Resetting will also remove the pairing history

Power On / Off
 Pair with mobile pho
 Answer / End a call
 Last number redials
 Voice dialing
 Status Indicator

• FM Radio On / Off

. Built-in Microphone

Adjust volume up
 Reject / Transfer a call
 FM Radio Scan Up
 Nolume Down
 adjust volume down
 FM Radio Scan Down
 Lock Button

Assign FM preset station

Retrieve FM preset station

of your headset with the mobile phone

1. Ensure your headset is fully charged.

1. Make sure the headset is switched off
2. Hold the Volume Up key and plug the charging cable into the charger socket, the status indicator will flash purple two times.
3. Release the Volume Up key
4. The status indicator will stay red and the headset is reset.

To use your Clip Radio 602 Bluetooth headset ("headset"), please follow the steps below:

2. Pair your charged headset with a Bluetooth-enabled mobile phor

i.Tech Bluetooth headset is designed to work with Bluetooth devices. Due to large variability between different Bluetooth devices from different manufacturers, interoperability between headset and all Bluetooth-enabled products is not guaranteed.

Troubleshooting

To receive the best audio quality, it is recommended to wear your headset on the same side of the body as your mobile phone.

- Ensure the headset is turned on and is properly charged
- Ensure the headset is properly paired with the mobile phone.
 Make sure that the mobile phone is connected with the headset if it does not connect,

Federal Communications Commission (FCC) Statement

either refer to the mobile phone's Bluetooth menu or by pressing the MFB once (see "Using Your Headset" and "Pairing Your Headset with a Bluetooth Mobile Phone").

against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is Consult the dealer or an experienced radio/TV technician for help

● 衹能使用包裝盒內提供的充電器 / USB充電電機爲耳機充電。

• 長期亮起紅色

指示燈熄滅

指示燈熄滅

閃動紫色和紅色

閃動藍色 每15秒閃動紫色4次,直至重新連接耳機

門動紅色

Troubleshooting

Headset Status

Charging (OFF N

Out of battery

Fully charged (OFF MODE)

Charging (STANDBY MODE)

Fully Charged (STANDBY MODE)Out of Range

Charging Your Headset

- Ensure your headset is turned off and is properly charged
- Ensure the headset is properly paired with your mobile phone.
 Ensure your mobile phone's Bluetooth feature is activated. Please refer to your mobile phone

The same of the sa

Status Indicator Light (fig.1)

· The light turns off

Flash RedThe light turns off

Flash Purple and Red

(fig.2)

Flash Blue
 Flash Purple 4 times every 15 seconds until reconnection

- Ensure the headset is within ten metres range of your mobile phone and there are no obstructions, such as walls or other electronic devices in between.
- If the above steps do not solve your problem, please recharge the headset and remove your mobile phone's battery for a while.
- I can't turn off the headset or the headset does not respond
 You may do a "hardware reset" on your headset if you can't turn it off or it doesn't respond. To
 "hardware reset":

) Plug charging cable into the charging socket
) Plug the MFB and Volume Up key at the same time
 3) Release both keys and the status indicator will turn red again

Safety Information

Check and observe local laws regarding the use of a mobile phone and a headset while driving. If you use the headset while driving, ensure your full attention and focus. It is your responsibility to drive safely. Consider to pull off the road before making or answering a call.
 Never leave your headset above any air bag deployment area inside your car as serious injury may result when an air bag deploys.
 Never allow children to play with the headset - small parts may be of choking hazard.

All rights in this publication are reserved and no part may be reproduced without the prior written permission of the publisher. The contents of this publication are believed to be correct at the time of going to press, but any information, specifications, products or services mentioned, and product I.D. shown may be modified, supplemented or withdrawn without further notice. The Stylized i.Tech logos are trademarks owned by Hutchison Harbour Ring Enterprises Limited or its affiliates. All other trademarks or registered trademarks belong to their respective owners. Bluetooth® and the Bluetooth logos are trademarks owned by Bluetooth SIG, Inc, USA and

i.Tech declares under our sole responsibility that the headset is in conformity with the provisions of the following Council Directives: 1999/5/EC



© 2009 Hutchison Harbour Ring Enterprises Limited

http://www.itechdunamic.com inted in China 05/2009

若長時間沒有使用耳機或量池已經耗盡。指示燈將延遲數秒發亮

完全充電的電池可提供4.5小時的通話時間和長達90小時的備用時間。手機啓動後,

) 如要啓動配接模式,請按住耳機的MFB鍵,直至狀態指示燈閃動藍色和紅色

3) 答動流動電話的藍芽功能,搜尋藍芽設備,然後選擇 "Clip Radio 602",并輸入密碼 "0000"。當配接完成後,耳機的狀態指示燈會快速閃動藍燈5次。

當配接模式啓動後,若在3分鐘內未能完成配接過程,耳機的狀態指示燈會閃動5

駕駛時請先查閱當地有關使用流動電話及耳機的法例。使用本耳機時,必須

保持集中,注意路面情况。爲閣立 時分子 停泊于路旁,再接聽或撥打電話。

切勿把本耳機放在車內安全氣袋的位置上,因爲當安全氣袋彈出時,可能會

當處于充電狀態時,請勿淸潔本耳機。 應先把耳機及充電器分開,再進行

次, 然後轉爲備用狀態。重復1-3的步驟, 再次完成兩部器材的配接。

綫電裝置。當進入特定範圍內時請留意有關指示。 登機前請先把耳機關掉,在飛機內不可使用本耳機。

切勿把本耳機放置在洗手盆或其它潮濕的地方。

爲閣下聽覺着想,請勿把音量調得太大。

切勿試圖對本耳機作出任何修改。

切勿強行打開本耳機的內置電池。

切勿在雨中使用本耳機。

У•тесн

替耳機充電(續)


耳機完全充電需時3小時。

將耳機與藍芽流動電話配接

會依然保持在備用狀態。

← 充電插座

*警告,當耳機連接充電插座時,請勿使用耳機。

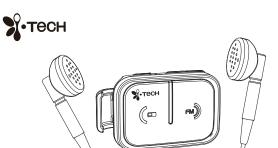

Charging indication will be delayed for a few seconds if the headset has not been used for a long time or the battery is drained.
 3 hours are required to fully charge the headset.

A fully charged battery can offer up to 4.5 hours of talk time and up to 90 hours of standby time. The headset remains in standby mode after being turned on.

To activate the pairing mode, press and hold the headset's MFB without releasing your finger until its status indicator blinks blue and red.

3) Activate your mobile phone's Bluetooth, search Bluetooth devices, select "Clip Radio 602" and

enter the passcode "0000". When the pairing is completed, the headset's status indicator will flash blue light rapidly five times.

Observe all signs and displays that require an electrical device or RF radio product to be switched off in designated areas. These could include hospitals, blasting areas, and potentially

Turn off your headset prior to boarding an aircraft. Do not use your headset inside an aircraft. To prevent damage to your hearing, please do not set the listening volume too high.

Do not use the headset in stormy weather.

Do not clean the headset while it is being charged. Always disconnect the charger from the

Do not attempt to force open the built-in battery.
 Only charge the headset's built-in battery in accordance with the instructions described in this

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with

If the pairing cannot be completed within three minutes after the pairing mode has been activated, the headset's status indicator will blink purple 5times and then turns to standby mode. Repeat steps 1 to 3 to pair the devices again.

Pairing Your Headset with a Bluetooth Mobile Phone

1) Ensure the headset is off.

Safety Information

headset before cleaning.

Do not attempt to modify the headset

Do not use the headset outdoors in the rain.

FCC RF Radiation Exposure Statement:

Do not keep the headset near a wash basin or other wet places.

Warning: Do not use the headset while it is connect to the charg

Clip Radio 602 藍芽耳機

用戶指南 Bluetooth

使用耳機

音頻 狀態指示燈 按鈕 啓動電源 按住MFB 6秒 一下短咇聲 閃動藍燈3岁 當首次啓動耳機,耳機會進入配接模式,即狀態指示燈會交替閃動藍色和紅色 您便可立即將耳機與流動電話進行配接。 關閉電源 按住 MFB 6秒 -下長咇聲 亮起藍燈2秒 然後熄滅 耳機響起鈴聲及蜂鳴聲 快速閃動紫燈 接聽來電 按下MFB一次 結束通話 按下MFB一次 閃動藍燈 | 調高音量 │ 按下調高音量按鈕一次 │ 在最大音量時會發出短必聲 │ 閃動藍燈 調低音量 按下調低音量按鈕 在最小音量時會發出短必聲 閃動藍燈 語音撥號* | 按下MFB一次 一下短咇聲 閃動藍燈

使用耳機(續)

功能

目錄

產品規格

替耳機充雷

使用耳機.

安全警語。

護理及保養

符合規條聲明

FM收音機功能

重設至出廠設定

Clip Radio 602綜觀

將耳機與藍芽流動電話配接

	最後來電重撥*	連續按下MFB 2秒		閃動藍燈
	拒接來電*	按住調低音量按鈕2秒	一下短咇聲	閃動藍燈
	來電轉駁 (耳機 至流動電話)*	通話時,按住調高音量 按鈕2秒		閃動藍燈
	來電轉駁 (流動 電話至耳機)*	通話時,按下MFB一次		閃動藍燈
	* 視乎流動電話支持而定			動電話支持而定
	鎖鍵(啓動/取消)	滑動鎖鍵啓動/將鎖鍵滑 動至相反方向以取消		閃動藍燈
l	告给你pp shirt	☆下MED—		門面前並成為

FM收音機功能

	FM收音機開/關	按下FM鍵—次以開/關		閃動藍燈
	掃瞄一個電臺	按住調高/低音量按鈕2秒 (開始掃瞄直至搜尋到電臺爲止)		閃動藍燈
	調高音量	按下調高音量按鈕一次		閃動藍燈
	調低音量	按下調低音量按鈕		閃動藍燈
指派一個預設電臺*				
	指派預設電臺 - 總共可預設最多8個電臺			
	1) 調較至一個想儲存的電臺			

2) 按住FM按鈕2秒進行儲存

調出預設電臺 - 調出的電臺次序是以儲存的先後爲根據 I) 按下FM按鈕2次調出首個儲存的電臺 再次按下FM按鈕、調出第二個被儲存的電臺、如此類推

❶ 請用包裝內的立體聲耳筒達致最佳FM收音效果

護理及保養(續

- 請使用耳機製造商提供的原裝充電器,使用其它品牌的充電器可能會損毀耳 機, 甚至構成危險。
- 由于在拆解充電器時可能會接觸到高壓電流或構成其它危險,請勿嘗試拆解 充電器。使用不正確組裝的充電器會引致觸電危險。
- 請勿在戶外或潮濕地方使用充電器。

符合規格聲明

充雷器

i.Tech Dynamic Limited 在此聲明以下產品符合無綫通訊設備指令1999/5/EC所有 重要規定(參照R&TTE 指令): 項目3.1a, 3.1b及3.2。

産品名稱: i.Tech Clip Radio 602 型號: C51-B602-XX

此産品並根據上述指令中附錄II生産。

Clip Radio 602综观

如希望獲取符合無綫通訊設備指令之聲明文件之副本,請登上網站

聯邦通訊委員會(FCC)聲明

請確保且機已啟動並完全充雷

任何未經負責遵守條例一方明示批準的修改或改裝,將會取消用戶操作本器材的權

我們在此對你作出警戒,任何未經遵守條例一方明示批準的修改或改裝,將令用戶 失去操作本器材的權利

← 充电插座

充电器插头 图2

❶ 只能使用包装盒内提供的充电器 / USB充电电线为耳机充电。

	耳机状态
	• 正在充电 (关机模式)
	 完全充电 (关机模式)
	• 电量低
	• 电池已耗尽
	、大由山 (夕田県太)

指示灯

• 完全充电 (备用状态)

闪动红色 指示灯熄灭 闪动紫色和红色 闪动蓝色

每15秒闪动紫色4次,直至重新连接耳机

疑難排解(續)

• 正在充電(關機模式)

完全充電(關機模式)

替耳機充電

提電腦之中。

雷量低

電池已耗盡

充電中(備用狀態)

完全充電(備用狀態)沒有訊號

耳機內置可再充電電池。在第一

次使用耳機前,建議先爲耳機完

將充電器插頭插入耳機的充電插

座 (見圖2). 然後將充電器連接至

交流電源插座或個人計算機 / 手

• 請確保耳機已關閉並適當充電。

- 請確保耳機與流動電話適當配接
- 請確保流動電話的藍芽裝置已被啓用。詳細操作說明請參考流動電話用戶
- ,請確保耳機位于流動電話的 1 0 米範圍之內,而當中並沒有任何障礙物, 例如牆壁或其它電子器材等。
- 如以上步驟未能解決問題,請重新充電並把電池從手機取出一會。
- 我不能關掉耳機或耳機沒有反應
- 如你不能關掉你的耳機或耳機沒有反應,可嘗試重新 "設定耳機":
- 1)將充電纜綫插入充電插座
- 2)同時按住MFB和調高音量按鈕
- 3)放開兩個鍵,狀態指示燈會再次轉爲紅色

這些限製經特別設計,可以提供合理的保護以防止在家居安裝時出現的有害幹擾 本器材能產生、使用和放射無綫電頻率能量。若未根據指示進行安裝和使用

- 出。若本器材真的對收音機或電視接收作出有害幹擾, 用戶可將器材開啓和關閉 以決定這些是否幹擾的源頭。我們建議閣下可嘗試下列一種或多種的方法以減少 幹擾的程度: - 重新轉動或擺放天綫位置
- 將本器材插進與接收器不同的其它電源插座

替耳机充电(续)

- 請咨詢零售商或具經驗的收音機/電視維修員尋求協助
- © 2009年和記港陸有限公司 © 2005年中紀JCE信仰区 AII 所有在本刊物的敦雄均具有版權,沒有印刷商的書面同意,不得作出任何翻印。在印刷前 ,所有在本刊物的內容均屬眞實正確,但任何數據、規格、產品或提及的服務,以及展視 的產品LD.可能會修改、補充或撤銷或未事先通知。時尚的LTech標記是和記港陸有限公司 或其附屬公司擁有的商標。所有其它商標或注冊商標屬于相應的擁有者。



◆ 若长时间没有使用耳机或电池已经耗尽,指示灯将延迟数秒发亮。 耳机完全充电需时3小时。 * 警告: 当耳机连接充电插座时,请勿使用耳机。

完全充电的电池可提供4.5小时的通话时间和长达90小时的备用时间。手机启动后,会依然保持在备用状态。

2) 如要启动配接模式,请按住耳机的MFB键,直至状态指示灯闪动蓝色和红色。 3) 启动流动电话的蓝牙功能,搜寻蓝牙设备,然后选择 "Clip Radio 602",并

来电

使用耳机 功能

蓝牙耳机

Clip Radio 602

语音拨号* 按下MFB一次

状态指示灯 按钮 启动电源 按住MFB 6秒 一下短咇声 闪动蓝灯3次 当首次启动耳机,耳机会进入配接模式,即状态指示灯会交替闪动蓝色和红色, 您便可立即将耳机与手机进行配接。 关闭电源 按住 MFB 6秒 然后熄灭 耳机响起铃声及蜂鸣声 快速闪动紫灯 接听来电 按下MFB一次 闪动蓝灯 结束通话 按下MFB一次 闪动蓝灯 调高音量 按下调高音量按钮一次 在最大音量时会发出短咇声 闪动蓝灯

调低音量 按下调低音量按钮 在最小音量时会发出短咇声 闪动蓝灯

当听到短咇声时,请即说出语音标签,您必需在您的手机录下语音标签。

一下短咇声

安全警語(續) 根據國家通訊傳播委員會低功率電波輻射性電機管理辦法規定: 第十二條 經型式設證合格之低功率射頻電機 非經許可,公司、商號或使用 者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。 第十四條 低功率射頻電機之使用不得影響飛航安全及幹擾合法通信; 經發現有幹擾現象時,應立即停用,並改善至無幹擾時方得繼續使用。

當聽到短必聲時,請即說出語音標簽,您必需在您的流動電話錄下語音標簽。

前項合法通信,指依電信法規定作業之無綫電通信。 低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備

FCC RF 輻射暴露聲明:

本器材符合在不受控製環境下的FCC輻射暴露限製。最終用戶必須跟從特定的操作 指引以符合RF暴露的要求。傳送器不能與任何天綫或發射器共同放置。

將耳機放進口袋或手提袋前,請先關閉耳機。如果誤按多功能按鍵,您 的手機可能會意外撥號。

因爲耳機是不防水的,切勿讓耳機接觸液體,水分,濕氣或雨水。

目录 产品规格

Clip Radio 602综观

替耳机 充由

将耳机与蓝牙手机配接 FM收音机功能 44-45

重设至出厂设定 疑难排解 安全指引 护理及保养 47-48 符合规条声明

使用耳机(续) 功能

接听来电

用户指南

Bluetooth

闪动蓝灯

最后来电重拨*	连续按下MFB 2秒		闪动蓝灯
拒接来电*	按住调低音量按钮2秒	一下短咇声	闪动蓝灯
来电转驳 (耳机 至手机)*	通话时,按住调高音量 按钮2秒		闪动蓝灯
来电转驳 (手机 至耳机)*	通话时,按下MFB一次		闪动蓝灯
* 视乎手机支持而定			
锁键(启动/取消)	滑动锁键启动/将锁键滑 动至相反方向以取消		闪动蓝灯
当锁键启动时	按下MFB一次		闪动蓝灯

状态指示灯

蓝牙规格: v2.0 + EDR第2类 蓝牙规范支持: 2.4GHz (秭赫)频谱 频率范围: 额定充电时间: 87.5 MHz (兆赫) - 108.0MHz (兆赫) FM收音机频率

产品规格

度和灰塵。

通话时间* 达4.5小时 备用时间*: 达90小时 27.1 (长) x 40.4 (宽) x 11.1 (高) 毫米 重量: 13.1克 *上述数据可能因应用户习惯、不同的操作模式和手机设定而有所差异。

切勿使用具磨蝕性的淸潔劑淸理耳機。

切勿讓耳機長時間受陽光直接照射。

切勿讓耳機靠近明火,如煮食爐。

切勿將耳機暴露在溫度過高或過低的地方。

切勿棄置耳機干火中, 因爲這將導致爆炸

避免在溫度過高或過低的地方爲耳機充電。

請按照本用戶指南附有的指示替電池充電。

切勿讓耳機接觸到任何尖銳的物體,因爲這會造成劃痕和損毀。

請根據地方法規棄置電池和耳機。不要將它當作家居廢物般棄置。


如果長時期內不打算使用耳機,請你將它儲存在幹燥的地方,避免極端的溫

切勿在耳機內戳刺任何物品,因爲這可能會損害內部零件。

切勿嘗試更換耳機的電池,因爲它是內置的,且不能更換。

請根據地方法規棄置電池。不要將它當作家居廢物般棄置。

切勿嘗試拆開耳機,因爲它並不包含任何維修組件。

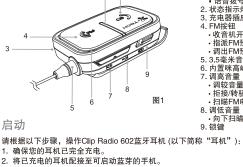

1. 多功能按钮 (MFB)

电源开/关
与手机配接
接听/结束通话
最后来电重拨

・W音机开/关 ・收音机开/关 ・指派FM预设电台 ・调出FM预设电台

. 3.5毫米音频插座 . 内置咪高峰 . 调高音量

・调较音量 ・拒接/转驳来电

扫瞄FM电台

·向下扫瞄FM电台

• 语音拨号 2. 状态指示灯 3. 充电器插座

本器材符合FCC條例第15部份的要求。操作要視乎以下兩個條件; (1) 本器材可能不 會產生有害的幹擾,以及(2) 本器材必須接受任何收到的幹擾,包括可能引起操作

根據FCC條例第15部份規定,本器材已經測試並符合B類數碼設備的限製。

替耳机充电 耳机内置可再充电电池。在第一 次使用耳机前,建议先为耳机完

将充电器插头插入耳机的充电插 座 (见图2),然后将充电器连接 至交流电源插座或个人电脑 / 手 提电脑之中。



状态指示灯 (图 长期亮起红色

将耳机与蓝牙流动电话配接 1) 确保耳机已关闭。

输入密码 "0000"。当配接完成后,耳机的状态指示灯会快速闪动蓝灯5次。 当配接模式启动后,若在3分钟内未能完成配接过程,耳机的状态指示灯会闪动5次,然后转为备用状态。重复1-3的步骤,再次完成两部器材的配接。