


1.5 User Manual

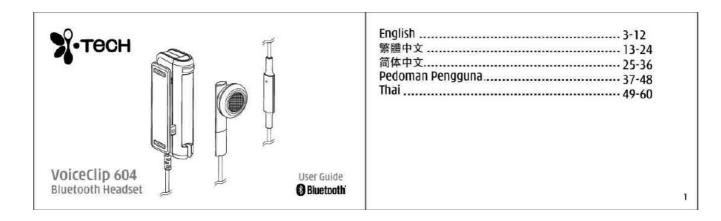

Product Specifications	3
oiceClip 604 Overview	4
ietting Started	5
harging Your Headset	5-6
ndicator Light	6
Pairing Your Headset with a Bluetooth Mobile Phone	7
Jsing Your Headset	7-1
Resetting Your Headset / Removing the Pairing History	11
Declaration of Conformity	12

Product Specifications


Bluetooth Specification: v2.1 + EDR Class 2 Bluetooth Profiles Supported: Headset, Handsfree Range of Frequency: 2.4GHz spectrum Nominal Charging Time: Within 3 hours Talk Time*: Up to 8 hours Standby Time*: Up to 160 hours 48 (L) x 19.5 (W) x 10 (H) mm / 1.89 (L) x 0.77 (W) x 0.39 (H) inches Dimensions:

14 grams / 0.88 ounces

* may vary due to the user's habit, different modes of operation, and mobile phone

settings.

2

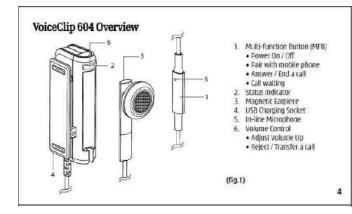

Getting Started

To use your VoiceClip 604 Bluetooth headset ("headset"), please follow the steps below:

Ensure your headset is fully charged.
 Pair your charged headset with a Bluetooth-enabled mobile phone.

Charging Your Headset

The headset comes with a built-in rechargeable battery. Prior to using the headset for the first time, it is recommended to fully charge the

Insert the charger's plug into the headset's USB charging socket and plug the mains charger to an AC wall outlet or plug to the PC/notebook.

Charging Socket USB Charger

3

(Use only the supplied charger / USB charging cable to charge the headset.



Charging Your Headset

Indicator Light

Headset Status	Status Indicator Light
Standby	Flash blue
Charging (OFF MODE)	 Solid red
Fully charged (OFF MODE)	Solid blue
Low battery	 Flash red with short beep every minute
Out of battery	The light turns off
Charging (STANDBY MODE)*	Double flash red
Fully charged (STANDBY MODE)*	Double flash blue
Out of Range	 Steady on purple for 5 sec and then same as standby

- Charging indication will be delayed for a few seconds if the headset has not been used for a long time or the battery is drained.
- 3 hours are required to fully charge the headset
- The headset remains in standby mode after being turned on.

*Warning: Do not use the headset while it is connected to the charger. 6

Pairing Your Headset with a Bluetooth Mobile Phone

- 1) Ensure the headset is off.
- 2) To activate the pairing mode, press and hold the headset's MFB for 8 seconds without releasing your
- finger until its status indicator flashes blue and red alternately.

 3) Activate your mobile phone's Bluetooth, search Bluetooth devices, select "VoiceClip 604" and enter the passcode "0000". When the pairing is completed, the headset's status indicator will flash blue rapidly 5 times and you can hear a long beep.

If the pairing cannot be completed within 3 minutes after the pairing mode has been activated, the headset's status indicator will flash blue rapidly 5 times and you can hear 3 short beeps. Then the headset turns off. Repeat steps 1 to 3 to pair both devices again.

Using your headset

Function	Button	Beep / Buzzer	Status indictor
POWER ON	Press and hold the MFB for 2 seconds	Short beep	Flash blue light 3 times

When you turn on your headset for the first time, the headset proceeds into pairing mode, i.e. the status indicator flashes blue and red alternately, so that you can immediately pair it with your mobile phone.

Using your headset

Function	Button	Beep / Buzzer	Status indictor
POWER OFF	Press and hold the MFB for 2 seconds	Long beep	Red light for 2 seconds
Incoming call		Ringtone through the earphone and buzzer ON	Blinking purple
Answer / End a call	Press the MFB once		
Reject incoming call*	Press and hold the VOL for 2 seconds	Short beep	
Adjust Volume	Press VOL once to step one level	Short beep at max.	
Voice Dialing*	In Standby Mode, press MFB once	short beep	
Say the voice tag voice tag into yo		short beep and you mus	t have recorded the
Last no. Redial*	in Standby mode, double click MFB		

Using your headset (cont'd)

Function	Button	Beep / Buzzer	Status indictor
Call Transfer (headset to mobile phone)*	Press and hold the VOL for 2 seconds		
Call Transfer (mobile phone to headset)*	Press MFB once		
Call Waiting allows you To pick second call, pres To reject second call, pr To swap call, double pre	ess VOL for 2 seconds.	ind pick up the second	I caller.

- priones.

 1. pair your headset with the 1st mobile phone as normal and then switch off

 2. repeat the pairing procedure for the 2nd mobile phone

 3. re-connect the 1st mobile phone with the headset via the phone menu

 when there Is incoming call from another phone, press MFB will end the current call and answer the

incoming call

Using your headset (cont'd)

Function Button		Beep / Buzzer	Status indictor	
It can remind you r		bile phone in the restaur	e phone is away by 10 meters. ant or public place, avoid your re ON.	
Mobile away alert Enable	Press and hold the VOL and MFB for 2 seconds	2 short beeps	Enable: Blink purple 3 times	
Mobile away alert Disable	Press and hold the VOL and MFB for 2 seconds	Short beep	Disable: Purple light for 5 seconds	
Stop Buzzer Alert	Press MFB			
	orite buzzer pattern - The fter 2 mins. You can press a		keep demonstrate the 4 exit the demonstration any time	
Enter buzzer control mode	Press and hold the VOL for 2 seconds	short beeps	Blink blue and purple	
Buzzer mode 1		Buzzer OFF		
Buzzer mode 2		Buzz twice only	Blink blue and purple	

Using your headset (cont'd)

Function	Button	Beep / Buzzer	Status indictor
Buzzer mode 3		Buzzer pattern 1	
Buzzer mode 4		Buzzer pattern 2	
Confirm buzzer mode	In buzzer control mode, press vot	Long beep	Flash purple 2 times for the pressed button

Resetting Your Headset / Removing the Pairing History

You may reset the headset to its default settings. Resetting will also remove the pairing history of your headset with the mobile phone.

- During OFF mode, plug charging cable into the charging socket, then hold the YOL key until the status. indicator blink PURPLE 3 times

indicator blink PURPLE 3 times
2. Release the Yolume key.
3. The status indicator will return charging mode and the headset is reset.
You may also reset the headset to its default settings bu hardware reset.
1. Plug charging cable into the charging socket
2. Hold VOL and PMF Bor 2 seconds
3. The headset is reset.
1. The charget is designed to work with Bluetooth devices, Due to large variability between different Bluetooth devices from different manufacturers, interoperability between the headset and all Bluetooth-enabled products is not guaranteed.

Declaration of Conformity

We, i.Tech Dynamic Limited, declare that the following product: Product Name: i.Tech VoiceClip 604

Model No.: C51-B604-XX is in conformity with the following essential requirements of Council Directive 1999/5/EC (referred to as R&TTE Directive): Article 3.1a, 3.1.b and 3.2. and the product is manufactured in accordance with Annex II of the above directive.

A copy of the Declaration of Conformity can be found at http://www.itechdynamic.com.

12



*TECH supplementa		ry note	
English		2-10	
繁體中文		11-19	
简体中文		20-28	
Pedoman Pengguna		29-38	
Thai		39-48	

	te	

Troubleshooting	3-4
Safety Information	4-5
Care and Maintenance	5-6
Federal Communications Commission (ECC) Statement	8-9

2

Troubleshooting

can hear crackling noise

To receive the best audio quality, it is recommended to wear your headset on the same side of the body as your mobile phone.

- · Ensure the headset is turned on and is properly charged
- Ensure the headset is properly paired with the mobile phone.
 Make sure that the mobile phone is connected with the headset if it does not connect, either refer to the mobile phone's Bluetooth menu or by pressing the MFB once (see "Using Your Headset" and "Pairing Your Headset with a Bluetooth Mobile Phone").

- Ensure your headset is turned off and is properly charged.
- Ensure the headset is properly paired with your mobile phone.
- Ensure your mobile phone's Bluetooth feature is activated. Please refer to your mobile phone user guide for specific instruction.
- Ensure the headset is within ten metres range of your mobile phone and there are no obstructions, such as walls or other electronic devices in between.

 If the above steps do not solve your problem, please recharge the headset and remove your

mobile phone's battery for a while.

Troubleshooting (cont'd)

I can't turn off the headset or the headset does not respond

You may do a "hardware reset" on your headset if you can't turn it off or it doesn't respond.

Safety Information

- Check and observe local laws regarding the use of a mobile phone and a headset while driving. If you use the headset while driving, ensure your full attention and focus. It is your responsibility to drive safely. Consider to pull off the road before making or answering a call. Never leave your headset above any air bag deployment area inside your car as serious
- injury may result when an air bag deploys.
- Never allow children to play with the headset small parts may be of choking hazard.
 Observe all signs and displays that require an electrical device or RF radio product to be
- switched off in designated areas. These could include hospitals, blasting areas, and potentially explosive atmospheres.
- Turn off your headset prior to boarding an aircraft. Do not use your headset inside an

4

Safety Information (cont'd)

- To prevent damage to your hearing, please do not set the listening volume too high.
- Do not attempt to modify the headset. Do not keep the headset near a wash basin or other wet places.
- Do not use the headset outdoors in the rain. Do not use the headset in stormy weather
- Do not clean the headset while it is being charged. Always disconnect the charger from the
- headset before cleaning. Do not attempt to force open the built-in battery.
- Only charge the headset's built-in battery in accordance with the instructions described in

FCC RF Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Care and Maintenance

- Turn off your headset before placing it in your pocket or bag. If the MFB is accidentally
- depressed, your mobile phone may place an unintended call.
 Do not expose the headset to liquid, moisture or humidity, or rain as it is not waterproof.
- Do not use abrasive cleaners to clean the headset.
- Do not expose the headset to extremely high or low temperatures
- Do not leave the headset in direct sunlight for an extended period of time.
- Do not leave the headset near open flames such as cooking burners. Do not dispose of the headset in a fire, as it will result in explosion.
- . Do not bring the headset into contact with any sharp objects, as this will cause scratches and damages
- Do not stick anything inside the headset, as this may damage internal components.
- Do not attempt to disassemble the headset as it does not contain serviceable compo If you do not plan to use the headset for a long period, please store it in a dry place that is
- free from extreme temperatures and dust. Avoid charging the headset in extremely high or low temperatures.
- Dispose of the battery and the headset according to local regulations. Do not dispose of them as household waste.

Care and Maintenance (cont'd)

- . Do not attempt to replace the headset's battery as it is in-built and is not changeable.
- Dispose of the battery according to local regulations. Do not dispose of the battery as
- . Charge the battery in accordance with the instructions supplied with this user guide
- Use only the charger supplied by the headset's original manufacturer to charge the headset. Other chargers may look similar but using them could be dangerous and could damage the headset.
- Do not attempt to disassemble the charger as it may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the headset is subsequently used.
- Do not use the charger outdoors or in damp areas.

Notes on Environmental Protection

After the implementation of the European Directive 2002/96/EU in the national legal system, the following applies: Electrical and electronic devices must not be disposed of with domestic waste. Consumers are obliged by law to return electrical and electronic devices at the end of their service lives to the public collection points that are set up for this purpose or designated points of sale. However, such details are defined by the national law of the respective country. This symbol on the product, the instruction manual or the packaging indicates that the product is subject to these regulations. By recycling, reusing the materials, or other forms of utilizing old devices, you are making an important contribution in protecting our environment.

Federal Communications Commission (FCC) Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

8

7



Federal Communications Commission (FCC) Statement

You are cautioned that changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment. 15.105(b)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is
- -Consult the dealer or an experienced radio/TV technician for help.

The Stylized i.Tech logo is registered trademark

Bluetooth® and the Bluetooth logos are trademarks owned by Bluetooth SIG, Inc, USA and licensed to i.Tech Dynamic Limited.

i.Tech declares under our sole responsibility that the headset is in conformity with the provisions of the following Council Directives: 1999/5/EC

http://www.itechdynamic.com Printed in China 02/2010

9

Bluetooth ♣ C€ F©

Dispose of the packaging and this product in accordance with the latest provisions.

10