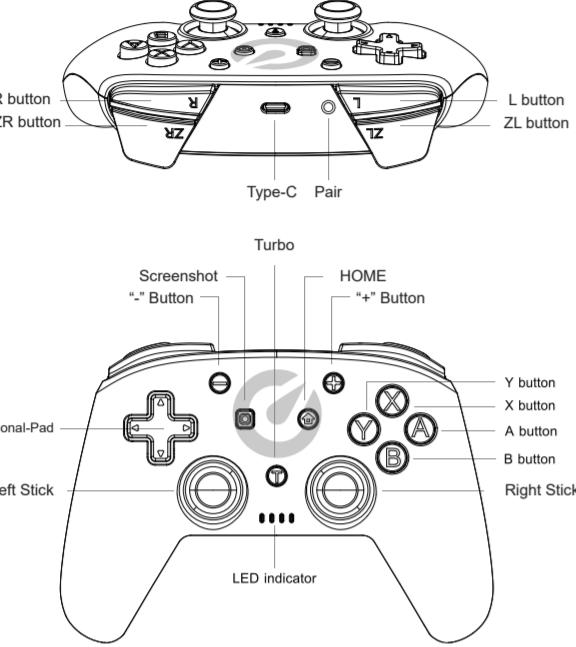
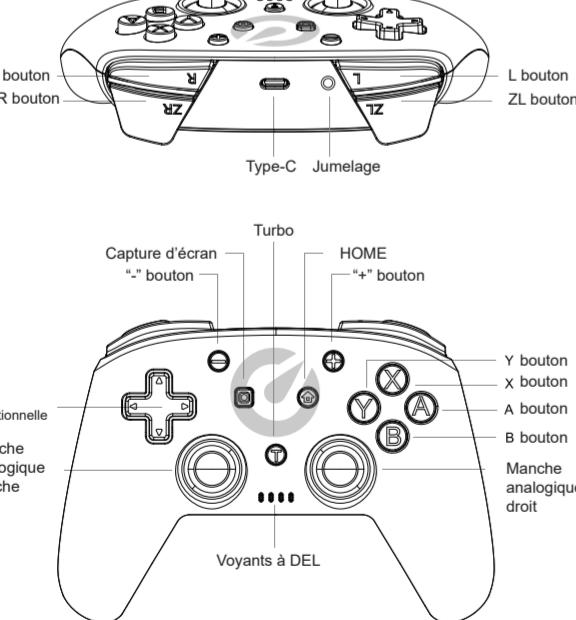


<h2>User Manual</h2> <p>Colourflow Bluetooth Pro Controller for Nintendo Switch</p>  <p>Product Model: BGK548 / BGK549 / BGK550 / BGK551</p> <p>Included in Box:</p> <ul style="list-style-type: none"> 1x Wireless Controller 1x USB Charge Cable (1m) 1x User Manual 1x Warranty Card 	<p>PRODUCT SPECIFICATIONS AND CHARACTERISTICS:</p> <ol style="list-style-type: none"> Size: 154 * 111 * 59mm. Weight: 185g ± 10g. Material: ABS Connection method: Bluetooth. Vibration: dual motor, powerful vibration mode. Built-in six-axis gyroscope and acceleration function for better in-game experience. Supports rapid fire function. <p>PRECAUTION & MAINTENANCE</p> <p>Before use, please read the following important safety information. Following these simple guidelines will ensure trouble-free operation and optimal performance of the product and compatible electronic devices. Improper use may cause the product to stop working and may even cause serious injury to the user.</p> <ul style="list-style-type: none"> This product is intended for private, non-commercial use only. Use the product for its intended purpose only. For indoor use only. Avoid exposure to external heat sources; direct, prolonged sunlight; dust; corrosive chemicals; and moisture. Do not drop the product or subject it to undue shock. This product contains small parts. Keep out of reach of children. Keep children away from the packaging material as there is a risk of suffocation. Dispose of packaging material according to applicable local regulations. Do not attempt to service or disassemble. The unit is not user-serviceable. Attempting to disassemble or service the unit could result in an electrical hazard, including injury. If you experience problems with the unit, discontinue use and contact Customer Support for assistance. Attempting to open or service the unit will void all warranties, expressed or implied. Failure to follow these directions may void the warranty. <p>CONNECTION METHOD:</p> <p>[first use]</p> <ul style="list-style-type: none"> Please ensure that the console is powered on and has been upgraded to the latest version before using this product. Press the Switch power button to start the console. After booting up, do the following: first enter the "Handle Settings - Change Grip / Order" page, then press and hold the "pair" button for at least two seconds. The 4 LED lights will continue to flash. After the connection is successful, the LED lights indicate the corresponding player. 	<p>[Repeated Use]</p> <ol style="list-style-type: none"> Press the Home button for more than 1 second to wake up the controller. The switch console enters connection mode automatically when powered on, after the connection is successful, the corresponding LED light on the controller will remain lit * The controller will enter sleep mode automatically if a connection is unsuccessful for more than 10 seconds; other keys have no wake-up function. <p>AUTOMATIC SLEEP:</p> <ol style="list-style-type: none"> The controller will automatically enter sleep mode when the console screen is off The controller will enter sleep mode if no button is pressed for 5 minutes. (sensor does not move) * When in Bluetooth mode, press the HOME button for 5 seconds, to disconnect from the console. <p>CONSOLE WAKE UP:</p> <p>If the controller is paired with the console but in sleep mode, simply press the "Home" button on the controller to wake the console.</p> <p>CHARGING INDICATION:</p> <ol style="list-style-type: none"> When the controller is turned off, LED1-LED4 flashes slowly when the power is off, the LED will turn off when fully charged. Battery low voltage alarm system: current indicator flashes (quick flash) The current channel indicator flashes (slow flash) when charging, and the current indicator is always on when fully charged. When the pairing connection indication conflicts with the charging low power indicator, the pairing connection indicates a concern. <p>LOW VOLTAGE ALARM :</p> <ol style="list-style-type: none"> If the lithium battery voltage is lower than 3.55V ± 0.1 V, the current channel light flashes quickly to indicate low voltage If the lithium battery voltage is lower than 3.45V ± 0.1 V, it will automatically sleep 	<p>TURBO FUNCTION :</p> <ol style="list-style-type: none"> Hold Turbo button and any of A/B/X/Y/L/R/ZL/ZR to set the Auto Turbo. Hold Turbo button and press any of A/B/X/Y/L/R/ZL/ZR twice to set the manual Turbo Press A/B/X/Y/L/R/ZL/ZR and Turbo button to clear Turbo function; Long press Turbo button for 5 seconds to clear all the Turbo function. Turbo function without LED indication. <p>MOTOR VIBRATION ADJUSTMENT METHOD</p> <ol style="list-style-type: none"> To increase motor dynamics To reduce motor dynamics <p>Precaution Before Use</p> <p>Note : if you haven't used the official "Switch Pro" controller before, please choose the "Switch JoyCon" and follow the connection.</p> <ol style="list-style-type: none"> System Settings Controllers and Sensors Pro Controller Wired Communication "OFF→ON" <p>Instructions of Switch Controller</p> <p>Press the "Pair" button for more than two seconds Set up Successful!</p> <p>TROUBLESHOOTING TIPS:</p> <p>If the wireless controller fails to operate or operates incorrectly, please follow the steps below before seeking assistance:</p> <ul style="list-style-type: none"> Verify the controller and console are both powered on. Verify the controller is within operating distance of the console. Verify the battery of the controller is fully charged. Verify the controller has been properly synchronized with the console. <p>If, after verifying the steps above, the wireless controller still does not work correctly, please try the following:</p> <ul style="list-style-type: none"> Turn the Nintendo Switch console power off. Wait for 30 seconds and then turn the console power on. Press the RESET button on the back of the wireless controller to reset the controller. Wait for 10 seconds and then resynchronize the controller with the console. 	<p>FCC STATEMENTS:</p> <p>This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p>This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none"> Reorient or relocate the receiving antenna. Increase the separation between the equipment and the receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. <p>MADE IN CHINA</p>
--	---	---	---	--

<h2>Guide d'utilisation</h2> <p>Manette Bluetooth Colourflow Pro pour Nintendo Switch</p>  <p>Modèle du produit : BGK548 / BGK549 / BGK550 / BGK551</p> <p>Compris dans la boîte :</p> <ul style="list-style-type: none"> 1 manette sans fil 1 câble de recharge USB (1 m) 1 mode d'emploi 1 carte de garantie 	<p>SPÉCIFICATIONS ET CARACTÉRISTIQUES DU PRODUIT :</p> <ol style="list-style-type: none"> Dimensions : 154 mm x 111 mm x 59 mm Poids : 185 g ± 10 g Matériaux : ABS Méthode de connexion : Bluetooth. Vibration : double moteur, mode de vibration puissant. Gyroscope intégré à six axes et fonction d'accélération pour une meilleure expérience de jeu. Prend en charge la fonction de tir rapide. <p>PRÉCAUTIONS ET ENTRETIEN :</p> <p>Avant d'utiliser ce produit, bien lire les renseignements suivants concernant la sécurité. Le respect de ces directives simples garantira une utilisation sans tracas et un rendement optimal du produit et des appareils électroniques compatibles. Un mauvais usage pourrait entraîner le mauvais fonctionnement du produit et même causer des blessures graves à l'utilisateur.</p> <ul style="list-style-type: none"> Ce produit est destiné à l'usage personnel non commercial. N'utiliser le produit qu'aux fins prévues. Utiliser à l'intérieur seulement. Éviter d'exposer le produit à des sources de chaleur externes, aux rayons directs du soleil pendant une longue période, à la poussière, à des produits chimiques corrosifs et à l'humidité. Ne pas laisser tomber le produit ni le soumettre à un choc excessif. Ce produit contient des pièces de petite taille. Tenir hors de la portée des enfants. Les matériaux d'emballage posent un risque de suffocation. Les tenir hors de portée des enfants. Jeter les matériaux d'emballage conformément aux lois locales applicables. Ne pas tenter de réparer ou de désassembler le produit.
--	--

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.