

SMART WATCH

- User Manual-

*Thank you for choosing this product!
Please read this User Manual before using.*

1. SKETCH AND HOME SCREEN



2. CHARGING

USB Charging. Connect SMART WATCH to laptop via USB cable for charging. If use Power Adapter for charging, the output of the power adapter should be 5V, 1A.

Charging time: 2~3 hours. Please charge the device before using.

3. POWER KEY

Long press Power key for 2 seconds to Power on or Power off. Short press Power key to go back to home screen.

4. MENU

Tap to enter menu

5. VOLUME

Tap to set volume

6. BLUETOOTH SEARCH & PAIR / RETURN

On Home page, tap to Bluetooth search & pair. Not on Home page, tap the arrow to return back.

7. SETTINGS

7.1 Time and date

7.2 Language

7.3 Wallpaper

7.4 LCD backlight

8. POWER SAVE

Tap to turn on/off Power save

9. RINGTONE

Tap to set Ringtone profiles. Choose Ring only/Vibrate only/Ring and Vibrate /Silent

10. PEDOMETER

Tap to use Pedometer

11. STOPWATCH

Tap to use Stopwatch

12. BLUETOOTH


Tap to set Bluetooth, and to find the QR code of BTNotification.apk

 
13. PHONEBOOK

Tap to check BT Phonebook when the device is BT pairing with a smartphone.

14. DIALER

Tap to dial a phone call when it is BT pairing with a smartphone.

14.1 Menu→Dialer→input phone number→tap  to dial

14.2 when at Phone Calling→tap  to end the phone call.

14.2 when at Phone Calling→tap  to turn up/down volume

***Note:** When at Phone Calling, also can use smartphone's Volume Key to turn up/down volume.

15. MESSAGES

Tap to sync SMS and read the SMS when it is BT pairing with a Android smartphone.

16. CALLS

Check call logs.

17. BT NOTICE

Tap to read all PUSH messages when it is BT pairing with a Android smartphone. PUSH messages sync from the smartphone.

18. BT MUSIC

Tap to play your smartphone's music when it is BT pairing with a smartphone.

18.1 when playing music→tap  to turn up/down volume

***Note:** When playing music, also can use smartphone's Volume Key to

turn up/down volume.

19. ALARM

Set Alarm clock

20. CALENDAR

21. CALCULATOR

22. HOW TO RESET MY SMART WATCH?

There is a Reset hole at the back of the watch, a reset key is inside the hole. When it is necessary, please use a pin to stick in the hole to activate reset.

FCC Certification Requirements

Caution: Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause

harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and

on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.