


User Manual KKT27+

Contents	
Basic Information.....	3
<i>Brief Introduction.....</i>	<i>3</i>
<i>Safety Notice.....</i>	<i>4</i>
<i>Cleaning and Maintaining.....</i>	<i>4</i>
Before Using.....	5
SIM.....	5
Phone Unlock.....	5
SIM Unlock.....	5
Function menu Introduction.....	6
1- Call logs.....	6
1.1. Call logs.....	6
1.2. Call settings.....	7
2- Phonebook.....	8
3- Music.....	9
4- Camera.....	10
5- Messaging.....	10
5.1. Write message.....	11
5.2. Inbox.....	11
5.3. Drafts.....	12
5.4. Outbox.....	12
5.5. Sent messages.....	12
5.6. SMS settings.....	12
5.7. Schedule SMS.....	12
6- Multimedia.....	12
6.1. Image Viewer.....	12
6.2. Video recorder.....	13

6.3. Video player.....	13
6.4. Sound recorder.....	13
6.5. FM radio.....	13
7- File manager.....	14
8- Fun & Games.....	14
8.1. Games.....	14
9- Organizer.....	15
9.1. Calculator.....	15
9.2. Calendar.....	15
9.3. Alarm.....	15
9.4. Torch.....	15
10- Tools.....	15
10.1. STK.....	15
10.2. Bluetooth.....	16
11- Settings.....	16
11.1. Profiles.....	16
11.2. Phone settings.....	17
11.3. Security settings.....	18
11.4. Dual SIM settings.....	20
11.5. Connectivity.....	20
11.6. Restore settings.....	20
11.7. Shortcuts.....	20
Health and Safety Precautions.....	20
Taking Care of Your Device.....	22
LAVA WARRANTY CERTIFICATE.....	26

Basic Information
Brief Introduction

Thank you for choosing KKT27+ mobile phone. You can read the manual, a comprehensive understanding of the use of mobile phones and enjoy its perfect functionality and simple method of operation. KKT27+ supports two SIM cards. In addition to basic call function it also supports phone book, personalized ring tones, alarm, camera, image viewer, video recorder, video player, audio player, FM, One Memory Card (T-Flash card), calculator, calendar etc. A variety of practical features to facilitate your work and leisure activities, in addition, KKT27+ interface with personalized mobile phone design, its perfect functionality to meet your needs. Our Company reserves without any prior notice the contents of this manual under the right to make changes.

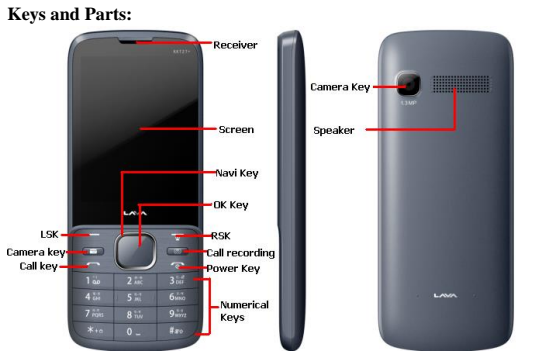

Safety Notice

If your phone lost or stolen, immediately notify to the telecommunications sector, or its outlet, to disable the SIM. This will allow you to take phone calls from other economic loss arising. To make you more secure use of mobile phones, please take precautionary measures, such as:

- Set up mobile phone SIM card PIN password, PIN password to prevent your SIM is unauthorized use by others.

Cleaning and Maintaining

Do not use the bathroom where high humidity, cell phone, battery and charger, the same should also avoid the rain. Use a soft, dry cloth to

clean the phone, battery and charger. Dirt outlet will lead to poor contact, power-down, which does not charge, regular cleaning

Before Using
SIM

Before using your phone, you must insert a valid SIM (Subscriber Identity Module) card.

Warning: Be sure to remove the SIM before phone gets off. There is absolutely prohibited in the case of an external power supply connected to insert or remove the SIM, or SIM card and mobile phone may be damaged.

Phone Unlock

In order to prevent illegal use, your phone can set the phone lock password protection. To use this function, you must enter the phone lock password so that you can unlock the phone into the normal use state. Enter the phone lock password, press the LSK to confirm. For example, if the phone lock password is set to 4321, then the following input: 4321. Default Password is 4321

SIM Unlock

In order to prevent illegal use of your SIM, there is PIN (Personal Identification Number) password encryption protection. Use this function, if you have set the PIN password protection, every time you must enter the PIN password at boot time, so that you can unlock the SIM card and phone to normal use. Enter the PIN password, press the LSK to confirm. For example, if the PIN is set to 1234, then the following input: 1234.If there consecutive incorrect PIN, your SIM will be network locked, the phone will ask for PUK password which will be provided by network service provider.

Function menu Introduction
1- Call logs
All Calls

Enter all calls menu to display all current call record, press the LSK key to enter "Options":

- **View:** To view the details.
- **Call:** To call the recorded numbers.
- **Send text message:** To send SMS to recorded number.
- **Save to Phonebook:** To save the number to phone or SIM card.
- **Add to black list:** To save the number to phonebook block list.
- **Delete:** To Delete the numbers from recorded numbers.

Missed calls

Enter the missed call menu, will display the missed call list.Please refer to all calls for details.

Dialled calls

Enter the dialled call menu to display the current record of outgoing phone list of phone numbers. Please refer to all calls for details.

Received calls

Enter the received call menu to display the current record of incoming calls that has been received by mobile phone.Please refer to all calls for details.

Delete call logs

Delete all calls from dialled calls, missed calls, received calls and all calls.

Call timers

View SIM 1 and SIM 2's call timers from last calls,dialled calls and received calls.

1.2. Call settings

Enter the call set up sub-menu,you can make the following settings:

Call waiting

Open this feature, during the call if the new call is incoming, the network will notify you. This feature support depends to use on your network provider.

- **Activate** launch the function.
- **Deactivate** Close the function.
- **Query status** Query the function's status.

This feature can be used in case you want to block any particular number or numbers. Open the blacklist feature, Add the numbers which you do not want to receive on your phone.

Auto redial:

Through on / off settings you can activate or disable this feature. If this feature is turn on, then for failed attempt your phone will continue redial a number upto10 times

Call time reminder:

This menu can prompt a certain length of time to set up the call, according to the menu function mode in order to select the following tips:

Off: Close the function.

Single: Enter any numbers between 1-3000(sec), which arrived at the selected time (seconds) of talk time when prompted.

Periodic: Enter any number between 30-60(sec), from the input time (in seconds), the intervals of 1 minute for talk time tips.

Answer mode:

User can select any key to answer or to auto answer when headset mode. When selected any key, press any key except power key and RSK to answer the call.

2- Phonebook

You can use the contacts to store records, can store the following: name and phone number. In the phonebook list, select a record, to make a call when you press the dial keys. Select a record in the phonebook, you can do the following:

- View:** To view the contact details or edit record.
- Send text message:** To Send text message to this number.

-Call: To Make a call to the number.

-Edit: It can edit and save record.

-Delete: To delete the record.

-Copy: To copy the current record to Phone/SIM.

-Add to blacklist: To Save the number to blacklist.

-Mark several: To Mark several or all records can send text message or delete.

-Phonebook settings:

-Preferred storage: It can be in the SIM1, SIM2, Phone and All to switch, and phonebook list will change accordingly, such as select SIM1, and the phonebook list will only show SIM1 records.

-Extra numbers: It can be set SIM owner numbers and fixed dialling numbers.

-Memory status: To View the usage and free Phonebook capacity information.

-Copy contacts: If select SIM to phone, the SIM card records of all the numbers will be copied to the phone.

-Move contacts: You can select the SIM records of all mobile phone numbers move to the phone, also you can switch the option to operate.

-Delete all contacts: You can delete all contacts in SIM card or phone and all records are deleted.

3- Music

In the Audio player interface, you can press left and right keys to switch the music; press * and # keys to adjust the play volume. In the Audio player interface, press the left soft key to enter "list" menu and enter the current playlist.

Select a music file to enter the settings options:

Pre.playlist: It can select the preferred list, Phone or Memory card. If you choose a memory card, then show the all music files in memory.

List auto gen.: To switch to this setting. When this feature is set on, you can perform the "Refresh Playlist" operation.

Repeat: It can be set as off (no repeat), one and all.

Shuffle: Random order of play set, respectively, can be set to on and off.

Background play: Set the background play on, you can make mobile phone in other user interface and also play music. Set as off, the music will not play when out of the Audio player.

4- Camera

The phone includes camera by which you can take pictures anytime, anywhere and can save the photos to phone or memory card. State in the preview, press the LSK to enter "Options" you can do this to conduct a more detailed set of parameters.

Switch to video recorder: Switch to the video recorder.

Photos: Photo album shows the current list of files.

Camera settings: Including Shutter sound, EV, Contrast, Anti-flicker and Delay timer, setting operation contents of the regulation. Been adjusted, press the LSK "OK" to save the current settings.

Image settings: Includes the Image size and image quality regulation.

Storage: Storage location can be set as Phone, Memory card, the captured image will be saved to the specified location.

Restore default: Set all parameters to default settings.

5- Messaging

Make sure that the information in writing before the message center number is set correctly. Access to an information menu, you can edit the SMS and Multimedia message.

5.1. Write message

Send to: After editing the information, select the operation, enter the number manually, or add records from the phonebook, you can do **send, Edit recipient, Remove recipient, Remove all recipients, Save** operations.Sent SMS to one or more persons, and storage to Drafts.

Insert symbol: Offers many kinds of symbol to choose.

Input method: Offers many kinds of input methods to choose from method.

Advanced:

Insert number: Insert number into SMS from phonebook.

Insert name: Insert the name of the record into SMS from phonebook.

Save: Save to drafts.

5.2. Inbox

In list of inbox, you can press the OK key to read the message details, in the inbox interface, press LSK "Options" to enter the menu:

View: Enter the message reading interface to view the message's details.

Reply: Send SMS to the sender.

Forward: Send the message to other people.

Delete: To Delete the message.

Delete all: To Delete all messages.

Save to Phonebook: To Save number into phonebook.

5.3. Drafts

Edit the SMS's which are not sent but stored in the draft, for detail features, please refer to "Inbox".

5.4. Outbox

Go to the Outbox list view your SMS are not sent successfully, for detail features, please refer to "Inbox".

5.5. Sent messages

Open the message set in the "Save sent message", send the information after the success of information stored in the Sent, detail features, please refer to "Inbox".

5.6. SMS settings

SIM1/SIM2: This menu can set SMS address, delivery report, reply path and voice mail server function.

Memory status: To view the SIM and Phone capacity information.

Save sent message: Open the "Save sent message", messages sent after a successful save the sent message, if you turn off this feature, you will not be saved.

Preferred storage: Can set preferred storage as SIM or phone.

5.7. Schedule SMS

Set messages sending time or time to send message.

6- Multimedia

6.1. Image Viewer

Select an album sub-menu, you can easily view stored in the camera album picture list, and press the LSK to enter to "Options" to choose the pictures to do the View, Send, Use as, Rename, Delete, change

Storage and check Image information operations. View pictures, by pressing on the left and right navigation buttons to switch pictures.

6.2. Video recorder

Switch to camera: Switch to the camera.

Camcorder settings: Recorder settings including Anti-flicker setting.

Video settings: Includes video quality adjustment.

Storage: storage location can be set Phone and Memory card, shooting the video will be saved to the specified location.

6.3. Video player

Choose video player sub-menu, you can easily view the saved video player in the video list, press the LSK to enter "Options" to select the video files to do the play, send(send the video via Bluetooth or multimedia message if you want), rename, delete operations.

6.4. Sound recorder

In the sound recorder interface press "option", it shows the items of record.

New record: To Start a new record. If you press stop, it will pop up a dialog box to prompt you save it or not. If you press pause, it will suspend recording, and then press continue, it can record again.

List: It displays the sound that you recorded and saved in the memory card.

Settings: you can set the file format and audio quality of the record.

6.5. FM radio

FM interface, press the OK key to turn on / off FM play, press the right navigation key to automatic search, press *and # keys to adjust the FM playing volume. Press the left soft key "Options" can show FM options menu, the content were:

