

BR-6208AC V2

Guide d'installation rapide

09-2016 / v1.0

Edimax Technology Co., Ltd.

No.3, Wu-Chuan 3rd Road, Wu-Gu, New Taipei City 24891, Taiwan

Email: support@edimax.com.tw

Edimax Technology Europe B.V.

Fijenhof 2, 5652 AE Eindhoven, The Netherlands

Email: support@edimax.nl

Edimax Computer Company

 
3350 Scott Blvd., Bldg.15 Santa Clara, CA 95054, USA

Live Tech Support: 1(800) 652-6776

Email: support@edimax.com

Contenu de l'emballage

Avant d'utiliser ce produit, veuillez vérifier que rien ne manque dans l'emballage et contacter votre revendeur pour lui réclamer les éléments manquants le cas échéant :

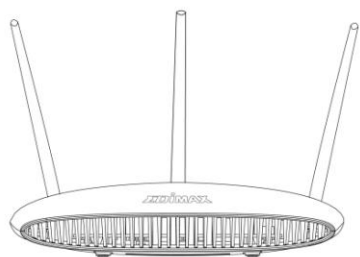

BR-6208AC V2



CD-ROM



Câble Ethernet



 
Guide d'installation rapide




Adaptateur

Installation

1. Branchez l'adaptateur secteur fourni dans la prise d'alimentation CC de l'appareil et branchez l'autre extrémité dans une prise de courant.

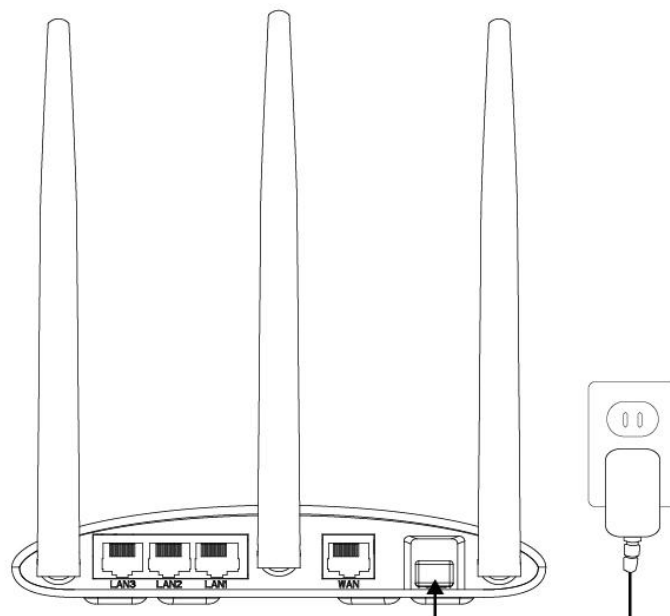

 2. Assurez-vous que l'interrupteur marche/arrêt Wi-Fi est en position marche et que les trois voyants (alimentation, Wi-Fi 2,4GHz & 5GHz) sont allumés.

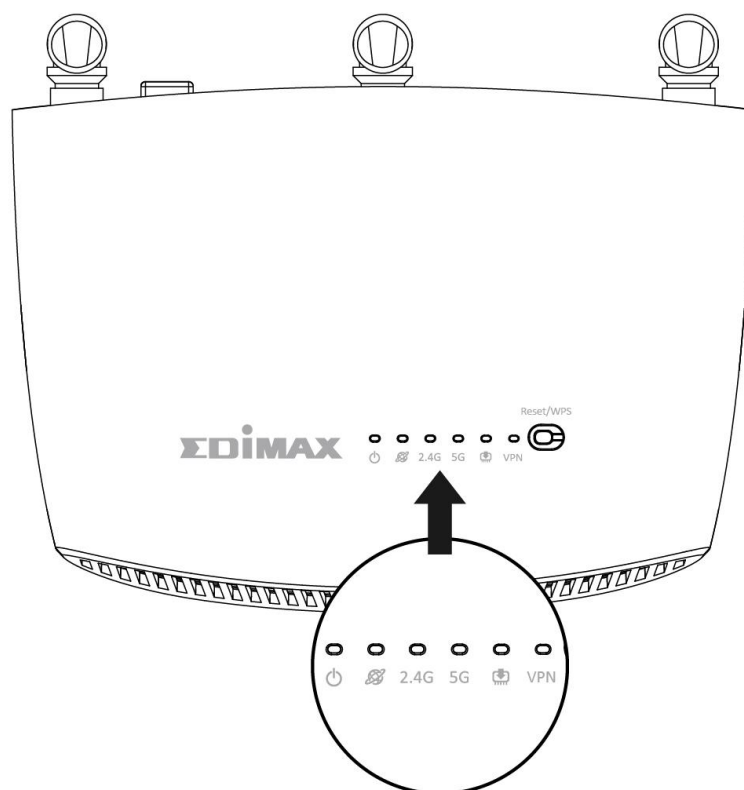

- 3.** Utilisez un périphérique Wi-Fi (ordinateur, tablette ou smartphone par exemple) pour rechercher le réseau Wi-Fi ayant le SSID "edimax.setup" puis connectez-vous à lui.



 
Les systèmes d'exploitation iOS 4 ou Android 4 et supérieurs sont nécessaires pour la configuration sur un smartphone ou une tablette.

- 4.** Ouvrez un navigateur Internet et saisissez l'adresse ***http://edimax.setup*** si vous n'arrivez pas directement sur l'écran « Pour commencer » montré ci-dessous, puis cliquez sur « **Pour commencer** » pour démarrer la configuration.



Si vous ne pouvez pas accéder à <http://edimax.setup>, merci de vous assurer que votre périphérique Wi-Fi est configuré pour utiliser une adresse IP dynamique. Il s'agit d'une procédure simple et les instructions pas à pas se trouvent dans le manuel utilisateur.

5. Choisissez si vous souhaitez utiliser votre BR-6208AC V2 en mode routeur Wi-Fi par défaut ou dans un mode différent.

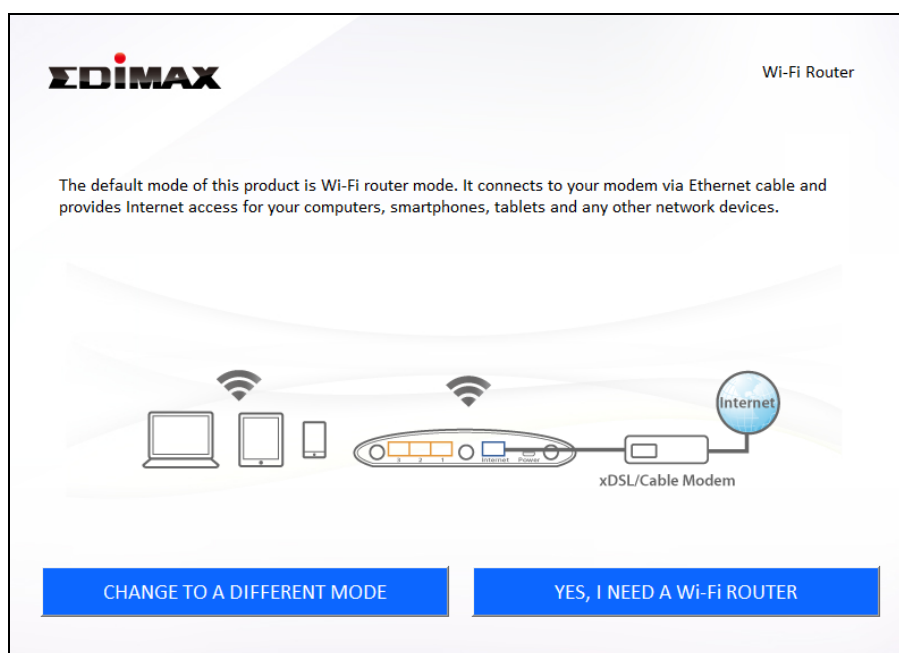


Les cinq modes disponibles du BR-6208AC V2 sont décrits ci-dessous :


Mode Routeur Wi-Fi	<i>L'appareil se connecte à votre modem et fournit un accès à Internet à 2,4GHz et/ou 5GHz (sans fil et Ethernet) à vos périphériques réseau.</i>
Mode Point d'accès	<i>L'appareil se connecte à un routeur existant grâce à un câble Ethernet et fournit un accès à Internet à 2,4GHz et/ou 5GHz (sans fil et Ethernet) pour vos périphériques réseau.</i>
Mode Amplificateur de portée	<i>L'appareil se connecte sans fil à votre réseau à 2,4GHz et/ou 5GHz existant et répète les signaux sans fil.</i>
Mode Passerelle Sans Fil	<i>L'appareil se connecte à un périphérique réseau, par exemple : un téléviseur, une console de jeux, un lecteur multimédia, grâce à un câble Ethernet et il agit comme un récepteur sans fil, permettant ainsi aux périphériques réseau de rejoindre le réseau Wi-Fi.</i>
Mode WISP (FSISF)	<i>L'appareil se connecte sans fil à votre Fournisseur de Service Internet Sans Fil et fournit un accès à Internet à 2,4GHz et/ou 5GHz (sans fil et Ethernet) à vos périphériques réseau.</i>

- 6.** Suivez les instructions sur l'écran pour terminer la configuration.
Reportez-vous au manuel utilisateur si vous avez besoin d'une aide supplémentaire.

 Routeur Wi-Fi :

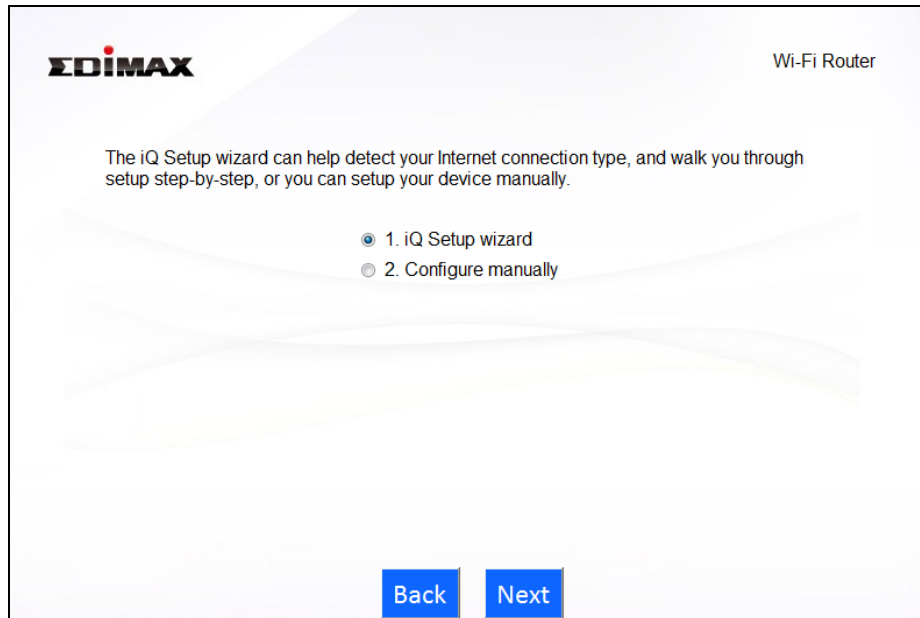

Autres modes :

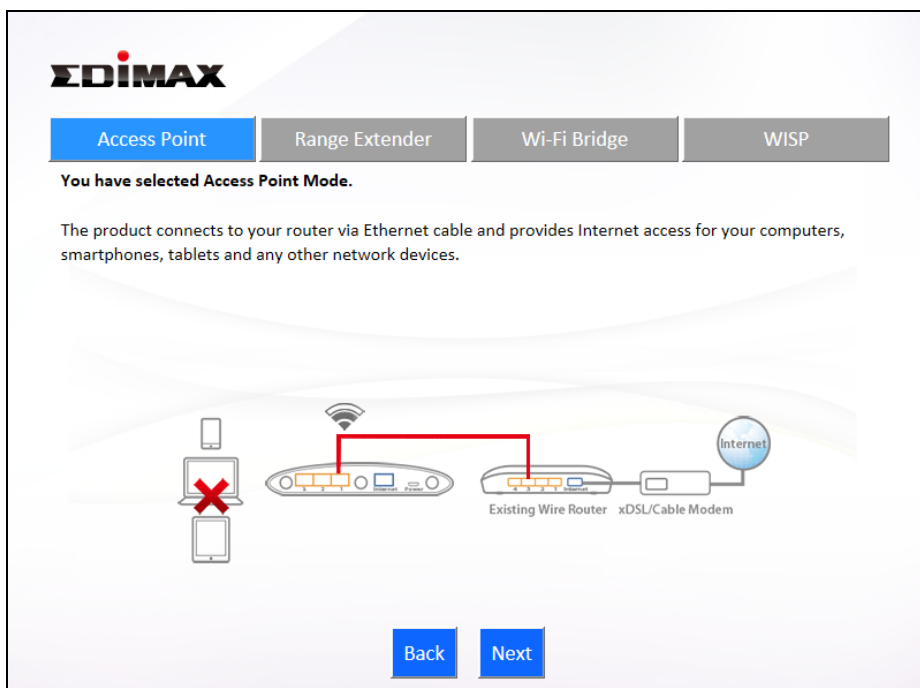 


Interface de configuration par navigateur

Après la configuration, vous pouvez accéder à l'interface de configuration grâce au navigateur afin de configurer ou de modifier les paramètres du BR-6208AC V2. Pour accéder à l'interface de configuration par le navigateur, saisissez ***http://edimax.setup*** dans la barre d'adresse d'un navigateur Internet sur un périphérique réseau connecté au BR-6208AC V2.



Si vous ne pouvez pas accéder à la page edimaxcv.setup, raccordez le BR-6208AC V2 à un ordinateur à l'aide d'un câble Ethernet et réessayez.

 Il vous est demandé de saisir un nom d'utilisateur et un mot de passe. Le nom d'utilisateur par défaut est "**admin**" et le mot de passe par défaut est "**1234**".

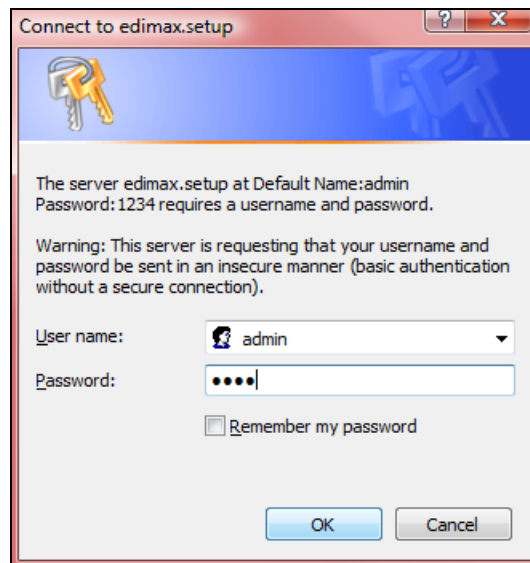

The dialog box titled "Connect to edimax.setup" contains the following text and fields:

The server edimax.setup at Default Name:admin
Password: 1234 requires a username and password.

Warning: This server is requesting that your username and password be sent in an insecure manner (basic authentication without a secure connection).

 
User name:

Password:

☐ Remember my password

Buttons: OK, Cancel

Vous accédez alors à l'écran "État" montré ci-dessous. Utilisez le menu en bas à gauche pour naviguer. Pour plus d'informations, consultez le manuel utilisateur.

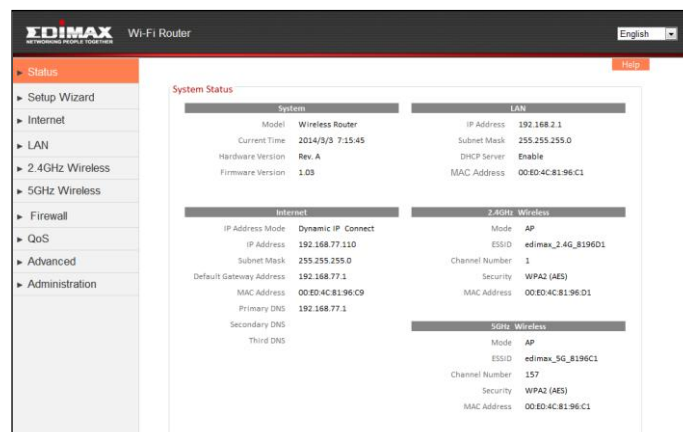

The screenshot shows the "Status" page of the Edimax Wi-Fi Router. The left sidebar contains a menu with the following items: Status, Setup Wizard, Internet, LAN, 2.4GHz Wireless, 5GHz Wireless, Firewall, QoS, Advanced, and Administration. The main content area displays the "System Status" with the following information:

System	LAN
Model: Wireless Router	IP Address: 192.168.2.1
Current Time: 2014/5/9 7:15:45	Subnet Mask: 255.255.255.0
Hardware Version: Rev. A	DHCP Server: Enable
Firmware Version: 1.03	MAC Address: 00:ED:4C:81:96:C1

Internet	2.4GHz Wireless
IP Address Mode: Dynamic IP Connect	Mode: AP
IP Address: 192.168.77.110	ESSID: edimax_2.4G_8196D1
Subnet Mask: 255.255.255.0	Channel Number: 1
Default Gateway Address: 192.168.77.1	Security: WPA2 (AES)
MAC Address: 00:ED:4C:81:96:C9	MAC Address: 00:ED:4C:81:96:D1
Primary DNS: 192.168.77.1	
Secondary DNS:	
Third DNS:	

5GHz Wireless
Mode: AP
ESSID: edimax_5G_8196C1
Channel Number: 157
Security: WPA2 (AES)
MAC Address: 00:ED:4C:81:96:C1

Dépannage

1. En mode Amplificateur de portée, mon BR-6208AC V2 est-il bi-bande ?

- a. Oui. Le BR-6208AC V2 peut amplifier les signaux Wi-Fi à 2,4GHz et 5GHz en même temps, mais vous devez connecter séparément votre BR-6208AC V2 à chacun des réseaux (2,4GHz et 5GHz) durant la configuration iQ. Durant la configuration iQ, il vous est demandé de sélectionner à la fois un réseau Wi-Fi 2,4GHz et 5GHz à amplifier et de spécifier un nouveau SSID (nom) et mot de passe pour chacun des réseaux que votre BR-6208AC V2 diffusera/amplifiera.



Vous pouvez désactiver le Wi-Fi 2,4GHz ou 5GHz durant la configuration iQ si aucun réseau source approprié n'est disponible ou si vous ne désirez pas utiliser l'un des deux. Si la bande de fréquence 2,4GHz ou 5GHz est désactivée, les clients/périphériques sans fil sur la même bande de fréquence ne peuvent plus se connecter à votre amplificateur de portée.

2. En mode Amplificateur de portée, si mon BR-6208AC V2 est configuré comme amplificateur bi-bande, que se passe-t-il lorsque je connecte un client Ethernet filaire ?

- a. Lorsque vous connectez un périphérique réseau avec un câble Ethernet à votre BR-6478AC en mode amplificateur de portée, le périphérique réseau se connectera par défaut au réseau 5GHz. Si aucun réseau 5GHz n'est disponible, le périphérique réseau se connectera au réseau 2,4GHz à la place.

3. En mode Amplificateur de portée, comment puis-je me connecter à un réseau dont le SSID est masqué ?

- a. Durant la configuration iQ, vous pouvez saisir manuellement un nom de SSID dans le champ "Nom Réseau Wi-Fi" comme montré ci-dessous, et ce, pour les bandes 2,4GHz et/ou 5GHz et vous pouvez également saisir les informations de cryptage correspondantes.


Range Extender

2.4GHz Wireless Site Survey

Please set a new Wi-Fi network name (SSID) for the range extender if you wish, and set the security key for your existing wireless network if required.

Wi-Fi network name (SSID):

Range extender SSID:


Encryption: Disable ▼

Back
Next

Nom Réseau Wi-Fi	Saisissez le SSID (nom du réseau) du réseau existant masqué.
SSID Amplificateur de portée	Saisissez un SSID pour le BR-6208AC V2 ou laissez-le champ vide pour utiliser un SSID par défaut composé du SSID de votre routeur existant (ci-dessus) suivi de "_2EX".
Encodage	Sélectionnez et saisissez les informations de cryptage de votre réseau existant masqué.

4. Qu'indiquent les voyants ?

 Le voyant peuvent être identifiés par des icônes se trouvant sous le BR-6208AC V2.

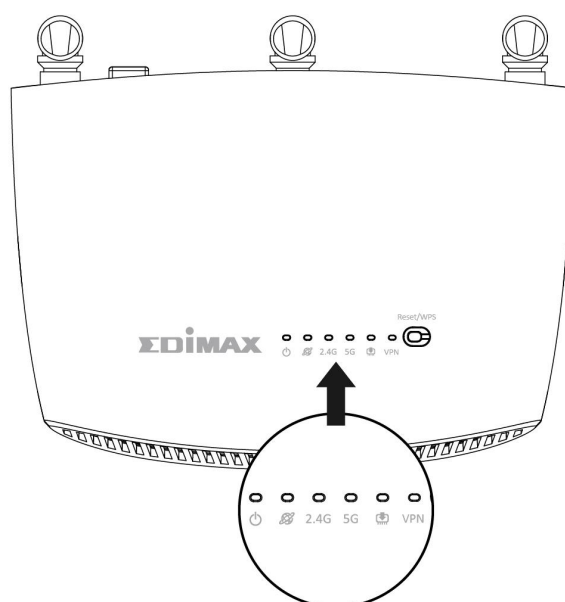

Voyant	Couleur	État du voyant	Descriptif
Alimentation 	Vert	Allumé	Le BR-6208AC V2 est allumé.
		Éteint	Le BR-6208AC V2 est éteint.
Internet 	Vert	Allumé	La connexion Internet est prête.
		Clignotant	État d'usine par défaut, ou le câble Ethernet n'est pas raccordé, ou il n'existe aucune connexion Internet.
Wi-Fi 2.4GHz 	Vert	Allumé	Activité Wi-Fi en 2.4GHz (transfert ou réception de données).
		Clignotant	Le WPS en 2.4GHz est activé.
		Éteint	Le Wi-Fi en 2.4GHz n'est pas activé.
Wi-Fi 5GHz 	Vert	Allumé	Activité Wi-Fi en 5GHz (transfert ou réception de données).
		Clignotant	Le WPS en 5GHz est activé.
		Éteint	Le Wi-Fi en 5GHz n'est pas activé.
Firmware 	Vert	Allumé	Firmware est le dernier.
		Clignotant	Firmware est mise à niveau.
VPN VPN	Vert	Allumé	VPN est allumé.
		Éteint	VPN est éteint.

5. Je ne parviens pas à accéder à Internet.

- Assurez-vous que tous les câbles sont correctement raccordés. Essayez avec un autre câble Ethernet.
- Vérifiez que vous pouvez accéder à l'interface de configuration sur Internet. Si ce n'est pas le cas, merci de vous assurer que votre périphérique Wi-Fi est paramétré pour utiliser une adresse IP dynamique. Si vous ne savez pas comment faire, tentez d'utiliser un ordinateur et de vous référer au manuel utilisateur pour être guidé.
- Connectez-vous à l'interface de configuration sur Internet et allez dans **Internet > Configuration WAN** puis vérifiez que le type de connexion est correct. Si vous

n'êtes pas sûr(e) du type de votre connexion Internet, merci de contacter votre fournisseur d'accès à Internet (FAI).

 
- d. Raccordez votre ordinateur directement à votre modem et vérifiez si vous avez accès à Internet. Dans le cas contraire, merci de contacter votre fournisseur d'accès à Internet pour obtenir de l'aide.

6. Je ne parviens pas à ouvrir l'interface de configuration sur Internet.

- a. Merci de vous assurer que votre périphérique Wi-Fi est paramétré pour utiliser une adresse IP dynamique. Si vous ne savez pas comment faire, tentez d'utiliser un ordinateur et de vous référer au manuel utilisateur pour être guidé.

7. Comment puis-je rétablir les paramètres d'usine par défaut de mon appareil ?

- a. Pour réinitialiser les paramètres d'usine par défaut de l'appareil, maintenez enfoncée la touche WPS/Reset pendant au moins 10 secondes, jusqu'à ce que le voyant d'alimentation blanc commence à clignoter. Merci alors de patienter quelques minutes pendant que l'appareil redémarre. Tous les paramètres sont réinitialisés lorsque l'appareil redémarre. Les paramètres par défaut sont affichés sur l'étiquette sous l'appareil, comme montré ci-dessous :

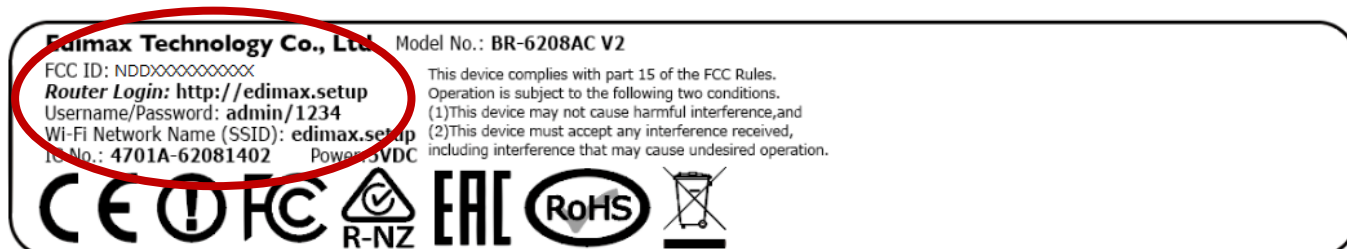

Connexion au routeur	Saisissez cette URL dans un navigateur Internet pour exécuter la configuration iQ ou configurer les paramètres avancés. Vous devez être connecté à l'appareil en Wi-Fi ou grâce à un câble Ethernet.
Nom d'utilisateur/mot de passe	Il s'agit du nom d'utilisateur et du mot de passe par défaut pour accéder à l'interface de configuration par le navigateur lorsque vous accédez à l'URL "Connexion au routeur" (ci-dessus).

Nom du réseau Wi-Fi	Il s'agit du nom de réseau Wi-Fi par défaut pour l'appareil. Recherchez ce nom (SSID) et connectez-vous afin d'accéder à l'URL "Connexion au routeur" (ci-dessus).
MAC	L'adresse MAC est unique pour chaque appareil et elle est utilisée pour l'identification au sein d'un réseau. L'adresse MAC unique de votre appareil est affichée ici.
CODE PIN	Il s'agit du code PIN de votre appareil pour la configuration Wi-Fi protégée (WPS).

8. J'ai oublié mon mot de passe.

- Réinitialisez le routeur avec ses paramètres d'usine par défaut et utilisez le nom d'utilisateur **admin** et le mot de passe **1234** par défaut. Les paramètres par défaut sont affichés sur l'étiquette sous l'appareil, comme montré ci-dessus.

9. Mon BR-6208AC V2 dispose d'un faible signal sans fil.

Les signaux faibles sont généralement provoqués par des interférences provenant d'autres appareils ou par les obstacles qui bloquent le signal sans fil du BR-6208AC V2 :

- Tenez l'appareil éloigné de tout autre appareil radio, comme les fours à micro-ondes ou les téléphones sans fil.
- Ne placez pas l'appareil dans le coin d'une pièce ni au-dessous ou à proximité de métal.
- Assurez-vous qu'il ait le moins d'obstacles possibles entre le BR-6208AC V2 et votre appareil réseau sans fil.

En mode Amplificateur de portée, le faible signal du BR-6208AC V2 peut être à son tour provoqué par le faible signal provenant de votre routeur existant. Il est important de choisir un bon emplacement pour le BR-6208AC V2 *en fonction de votre routeur sans fil existant*. Le meilleur emplacement est environ à mi-chemin entre votre routeur sans fil existant et la zone que vous voulez couvrir avec le BR-6208AC V2. S'il est trop éloigné du routeur existant, le BR-6208AC V2 aura des difficultés à recevoir le signal sans fil.

10. Les ports Internet et les ports LAN fonctionnent-ils de la même manière selon les différents modes de l'appareil ?

Non, les ports Internet et LAN possèdent des fonctions légèrement différentes selon le mode de fonctionnement de l'appareil.

- a. En mode **Routeur Wi-Fi**, le **port Internet** sert à la connexion directe avec votre modem xDSL. Les **ports LAN** servent pour les clients réseau filaires.
- b. En mode **Point d'accès**, le **port Internet** n'est pas opérationnel. Connectez votre routeur existant au **port LAN** de l'appareil et les autres clients réseau filaires aux autres **ports LAN**.
- c. En mode **Amplificateur de portée**, le **port Internet** n'est pas opérationnel et tous les **ports LAN** servent pour les clients réseau filaires. Ne connectez pas votre routeur existant aux **ports Internet** ou **LAN** de l'appareil, car cela pourrait provoquer un dysfonctionnement de l'appareil.
- d. En mode **Passerelle sans fil**, le **port Internet** n'est pas opérationnel et tous les **ports LAN** servent pour les clients réseau filaires.
- e. En mode **WISP**, le **port Internet** n'est pas opérationnel et tous les **ports LAN** servent pour les clients réseau filaires.

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio technician for help.

FCC Caution

This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the authority to operate equipment.

Federal Communications Commission (FCC) Radiation Exposure Statement

This equipment complies with FCC radiation exposure set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, human proximity to the antenna shall not be less than 2.5cm (1 inch) during normal operation.

Federal Communications Commission (FCC) RF Exposure Requirements

This EUT is compliance with SAR for general population/uncontrolled exposure limits in ANSI/IEEE C95.1-1999 and had been tested in accordance with the measurement methods and procedures specified in OET Bulletin 65 Supplement C. The equipment version marketed in US is restricted to usage of the channels 1-11 only. This equipment is restricted to *indoor* use when operated in the 5.15 to 5.25 GHz frequency range.

R&TTE Compliance Statement

This equipment complies with all the requirements of DIRECTIVE 1999/5/EC OF THE EUROPEAN PARLIAMENT AND THE COUNCIL of March 9, 1999 on radio equipment and telecommunication terminal equipment and the mutual recognition of their conformity (R&TTE). The R&TTE Directive repeals and replaces in the directive 98/13/EEC (Telecommunications Terminal Equipment and Satellite Earth Station Equipment) As of April 8, 2000.

Safety

This equipment is designed with the utmost care for the safety of those who install and use it. However, special attention must be paid to the dangers of electric shock and static electricity when working with electrical equipment. All guidelines of this and of the computer manufacture must therefore be allowed at all times to ensure the safe use of the equipment.

EU Countries Intended for Use

The ETSI version of this device is intended for home and office use in Austria, Belgium, Bulgaria, Cyprus, Czech, Denmark, Estonia, Finland, France, Germany, Greece, Hungary, Ireland, Italy, Latvia, Lithuania, Luxembourg, Malta, Netherlands, Poland, Portugal, Romania, Slovakia, Slovenia, Spain, Sweden, Turkey, and United Kingdom. The ETSI version of this device is also authorized for use in EFTA member states: Iceland, Liechtenstein, Norway, and Switzerland.

EU Countries Not Intended for Use

None

EU Declaration of Conformity

English:	This equipment is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC, 2009/125/EC.
Français:	Cet équipement est conforme aux exigences essentielles et autres dispositions de la directive 1999/5/CE, 2009/125/CE.
Čeština:	Toto zařízení je v souladu se základními požadavky a ostatními příslušnými ustanoveními směrnic 1999/5/ES, 2009/125/ES.
Polski:	Urządzenie jest zgodne z ogólnymi wymaganiami oraz szczególnymi warunkami określonymi Dyrektywą UE 1999/5/EC, 2009/125/EC.
Română:	Acest echipament este în conformitate cu cerințele esențiale și alte prevederi relevante ale Directivei 1999/5/CE, 2009/125/CE.
Русский:	Это оборудование соответствует основным требованиям и положениям Директивы 1999/5/EC, 2009/125/EC.
Magyar:	Ez a berendezés megfelel az alapvető követelményeknek és más vonatkozó irányelveknek (1999/5/EK, 2009/125/EC).
Türkçe:	Bu cihaz 1999/5/EC, 2009/125/EC direktifleri zorunlu istekler ve diğer hükümlerle ile uyumludur.
Українська:	Обладнання відповідає вимогам і умовам директиви 1999/5/EC, 2009/125/EC.
Slovenčina:	Toto zariadenie spĺňa základné požiadavky a ďalšie príslušné ustanovenia smerníc 1999/5/ES, 2009/125/ES.
Deutsch:	Dieses Gerät erfüllt die Voraussetzungen gemäß den Richtlinien 1999/5/EC, 2009/125/EC.
Español:	El presente equipo cumple los requisitos esenciales de la Directiva 1999/5/EC, 2009/125/EC.
Italiano:	Questo apparecchio è conforme ai requisiti essenziali e alle altre disposizioni applicabili della Direttiva 1999/5/CE, 2009/125/CE.
Nederlands:	Dit apparaat voldoet aan de essentiële eisen en andere van toepassing zijnde bepalingen van richtlijn 1999/5/EC, 2009/125/EC.
Português:	Este equipamento cumpre os requisitos essenciais da Directiva 1999/5/EC, 2009/125/EC.
Norsk:	Dette utstyret er i samsvar med de viktigste kravene og andre relevante regler i Direktiv 1999/5/EC, 2009/125/EC.
Svenska:	Denna utrustning är i överensstämmelse med de väsentliga kraven och övriga relevanta bestämmelser i direktiv 1999/5/EG, 2009/125/EG.
Dansk:	Dette udstyr er i overensstemmelse med de væsentligste krav og andre relevante forordninger i direktiv 1999/5/EC, 2009/125/EC.
Suomi:	Tämä laite täyttää direktiivien 1999/5/EY, 2009/125/EY oleelliset vaatimukset ja muut asiaankuuluvat määräykset.

FOR USE IN

AT	BE	CY	CZ	DK	EE	FI	FR	RU				
DE	GR	HU	IE	IT	LV	LT	LU	MT	NL	PL	PT	UA
SK	SI	ES	SE	GB	IS	LI	NO	CH	BG	RO	TR	



WEEE Directive & Product Disposal



At the end of its serviceable life, this product should not be treated as household or general waste. It should be handed over to the applicable collection point for the recycling of electrical and electronic equipment, or returned to the supplier for disposal.

Declaration of Conformity

We, Edimax Technology Co., Ltd., declare under our sole responsibility, that the equipment described below complies with the requirements of the European R&TTE directives.

Equipment: AC750 Multi-Function Dual-Band Wi-Fi Router
Model No.: BR-6208AC V2

The following European standards for essential requirements have been followed:

Directives 1999/5/EC

Spectrum : ETSI EN 300 328 V1.9.1
ETSI EN 301 893 V1.8.1
EMC : EN 301 489-1 V1.9.2
EN 301 489-17 V2.2.1

Recommendation 1999/5/EC

EMF : EN 62311:2008

Directives 2006/95/EC

Safety (LVD) : IEC 60950-1:2005 (2nd Edition)+Am 2:2013 and
EN 60950-1:2006+A11:2009+A1:2010+A12:2011+A12:2013

Edimax Technology Co., Ltd.
No. 3, Wu Chuan 3rd Road,
Wu-Ku Industrial Park,
New Taipei City, Taiwan



Date of Signature: September, 2016

Signature:

Printed Name:

Albert Chang

Title:

Director

Edimax Technology Co., Ltd.

Notice According to GNU General Public License Version 2

This product includes software that is subject to the GNU General Public License version 2. The program is free software and distributed without any warranty of the author. We offer, valid for at least three years, to give you, for a charge no more than the costs of physically performing source distribution, a complete machine-readable copy of the corresponding source code.

Das Produkt beinhaltet Software, die den Bedingungen der GNU/GPL-Version 2 unterliegt. Das Programm ist eine sog. „Free Software“, der Autor stellt das Programm ohne irgendeine Gewährleistungen zur Verfügung. Wir bieten Ihnen für einen Zeitraum von drei Jahren an, eine vollständige maschinenlesbare Kopie des Quelltextes der Programme zur Verfügung zu stellen – zu nicht höheren Kosten als denen, die durch den physikalischen Kopiervorgang anfallen.

GNU GENERAL PUBLIC LICENSE

Version 2, June 1991

Copyright (C) 1989, 1991 Free Software Foundation, Inc. 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301, USA
Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software--to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Lesser General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all.

The precise terms and conditions for copying, distribution and modification follow.

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The "Program", below, refers to any such program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term "modification".) Each licensee is addressed as "you".

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep

intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

- a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.
- b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.
- c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:

- a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.

6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.

7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

