

AZERA

QUICK REFERENCE GUIDE

INSTRUMENT PANEL



1: I.M.S. (Integrated Memory System) (If Equipped)

The Integrated Memory System controls are located on the driver's door trim.

MEMORIZING DRIVER POSITION

 
 
1. Place the shift lever into "P" while the ignition switch is ON.
2. Adjust the driver's seat, outside rearview mirrors and steering wheel column (with electric tilt and telescopic type) to the desired position.
3. Push the "SET" button on the I.M.S. until the signal beeps.
4. Within five seconds, push button "1" or "2" until the signal beeps twice. The beep confirms that the positions are memorized in the I.M.S.

 
TO ACTIVATE THE MEMORIZED POSITION

1. Place the shift lever into "P" while the ignition switch is ON.
2. When you push button "1" or "2", the driving position will be automatically adjusted to the position recorded for that button. See Owner's Manual for conditions in which I.M.S. will not operate.

2: Electronic Stability Control (ESC)

The ESC system is designed to help the driver maintain vehicle control under adverse driving conditions. The indicator light in the instrument panel will illuminate for 6 seconds after the key is turned ON. If the light remains illuminated, take your car to a Hyundai dealer. If you turn the system off by pressing the ESC switch, the ESC-OFF indicator will illuminate and stay on. In the ESC-OFF mode, the stability control will be deactivated. Adjust your driving accordingly. To turn the system back on, press the switch again. The ESC-OFF indicator will turn off.

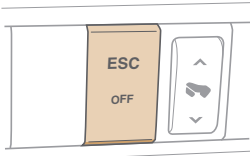

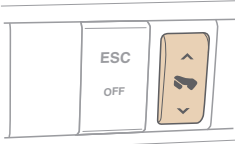


3: Adjustable Pedals

Turn the ignition key to the "ON" position with the selector lever in the "P" position and push the switch.

If you move the \wedge portion of the switch, the pedals move rearward.

 If you move the \vee portion of the switch, the pedals move forward.

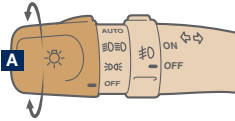

A HEADLIGHT SWITCH

To operate the headlights, turn the switch on the end of the lever:

OFF – Headlights are off

$\text{≡} \text{D} \text{≡}$ – Parking lights

 
$\text{≡} \text{D} \text{≡}$ – Headlights

AUTO – Auto Light (If Equipped)

NOTE: The ignition must be in the ON position to turn on the headlights.

High Beam Activation: Push the lever forward


Flash-To-Pass Feature: Pull the lever towards you and release

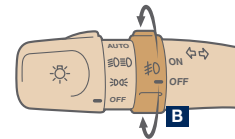

B FOG LIGHT SWITCH

Rotate the switch to the ON position.

 
NOTE: Fog lights will only function on low beam.

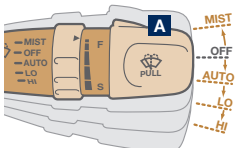

5: Windshield Wiper / Washer

A WIPER SPEED

 The windshield wiper switch has four positions: intermittent or AUTO (if equipped), low speed, high speed and mist. For mist (single wipe), move the lever up one position.

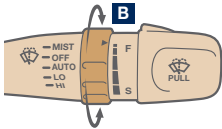


B INTERMITTENT OPERATION

With the windshield wiper switch in the "INT" position, the interval between wipes can be varied by turning the intermittent wiper switch.




C WIPE / WASH OPERATION

 To use the windshield washer, pull the wiper / washer lever toward you. When the washer is operated, the wipers automatically make two passes across the windshield. The washer continues to operate until the lever is released.

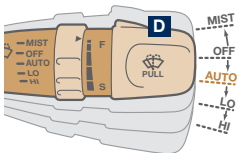

D AUTO WIPER OPERATION (If Equipped)

 When the windshield wiper switch is placed in the "AUTO" position, the rain sensor, located on the windshield behind the rearview mirror, senses the amount of rainfall and controls for the appropriate length of the intervals between wipes appropriately.

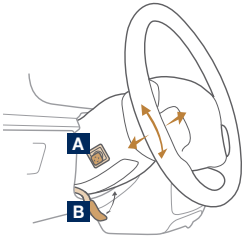

6: Adjustable Steering Wheel (If Equipped)

 
A POWER ADJUSTABLE STEERING COLUMN (If Equipped)

To adjust the steering wheel to the desired position, operate the adjusting switch on the left side of the steering wheel.

B MANUAL ADJUSTABLE TILT & TELESCOPIC STEERING COLUMN


Pull the lever downward to unlock the steering wheel. Adjust the steering wheel up or down and forward or backward to the desired position. After adjustment, securely tighten the lever by pushing it upward.

NOTE: Do not adjust while driving.

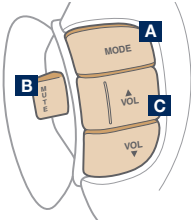


7: Steering Wheel Audio Controls

 - A MODE switch
- B MUTE switch
- C VOL (▲ / ▼) switches

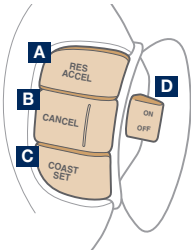

8: Cruise Control

 - A RES (resume) / ACCEL switch
- B CANCEL switch
- C COAST / SET switch
- D ON / OFF switch (Press to activate the system)



9: Clock Adjustment

There are three control buttons for the digital clock. Their functions are:

H: Push "H" to advance the hours.

M: Push "M" to advance the minutes.

R: Push "R" to reset minutes to ":00". Continue to press and hold the "R" button to toggle between military time and standard time.

10: Occupant Classification System

PASSENGER AIR BAG OFF INDICATOR

The indicator will illuminate when you turn the ignition key to ON or START. The light will not illuminate when the passenger's air bag is enabled. The occupant classification system will disable the right front passenger's air bags under certain conditions (light on). Refer to the Owners' Manual for a complete description of this system.

NOTE: The driver's air bag and the side impact air bag are not part of the occupant classification system.

 


PASS AIR BAG OFF

11: Seat Warmer (If Equipped)

The front seats can be electrically heated individually when the ignition switch is on. When the switch is on, a number ranging from 1 to 5 is displayed on the switch (5 = warmest setting). To turn off the seat warmer, set the switch to 0.

NOTE: The seat warmer may not operate if the ambient temperature is warm.

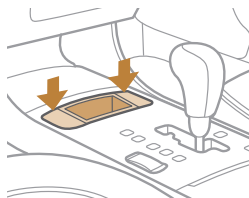

12: Transmission / Shiftronic™ (If Equipped)

Whether the vehicle is stationary or in motion, sports mode is selected by pushing the selector lever from the "D" position into the manual gate. To return to "D" range operation, push the selector lever back into the main gate. In sports mode, moving the selector lever backwards and forwards can make rapid gearshifts simple. In contrast to a manual transaxle, the sports mode allows gearshifts with the accelerator pedal depressed.

UP (+): Push the lever forward once to shift up one gear.

DOWN (-): Pull the lever backwards once to shift down one gear.

SKIP: By rapidly moving the selector forward or backward twice, it is possible to skip one gear.

NOTE: Shift lever in Neutral (N), Drive (D), or Reverse (R) position still allows for the ignition key to be turned off.



13: Power Rear Sunshade (If Equipped)

 
The rear window shade switch is located on the center console.

Press the curtain switch to raise or lower the rear window curtain.

NOTE: When the shift lever is shifted into reverse "R", the rear window curtain will automatically lower if the curtain is in the raised position.



14: Audio System (AM / FM / Cassette / 6-CD / MP3 Audio System Shown)

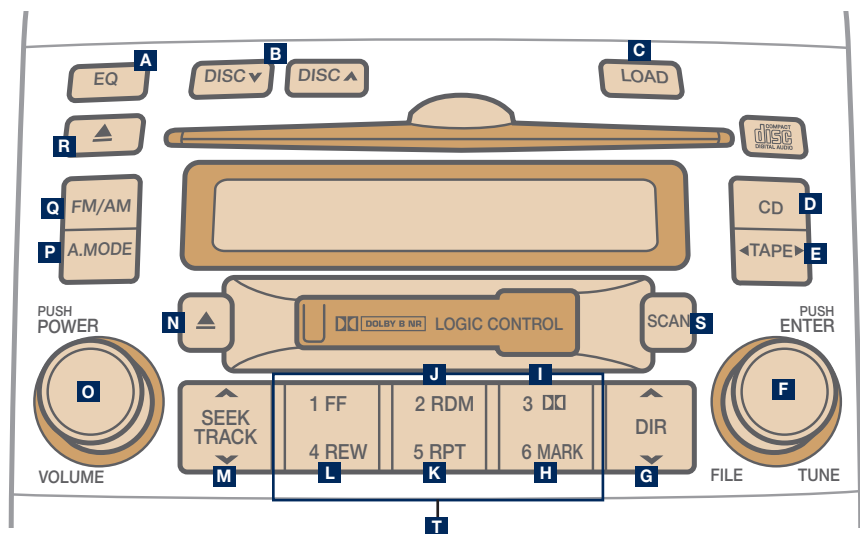

AUDIO SYSTEM CONTROLS

- Q** POWER ON/OFF, Volume Control Knob
- A** EQUALIZER (EQ) Button
- P** ADJUSTMENT Mode Select (A.MODE) Button

AM/FM RADIO CONTROLS

- F** TUNE Select Knob
- Q** BAND Selector
- S** SCAN Button
- M** SEEK/SELECT Button
- T** PRESET STATION Select Buttons

CASSETTE TAPE CONTROLS

 
- N** TAPE EJECT Button
- M** AUTO MUSIC Search Button
- L** FF/REW Button
- E** TAPE Program Button
- K** REPEAT (RPT) Button
- I** DOLBY BUTTON

CD/MP3 CONTROLS


- C** LOAD Button – To insert one disc into the player, press and release the LOAD button. To insert up to six CDs, press and hold the LOAD button for more than one second.
- R** CD Eject Button
- B** DISC UP/DOWN Buttons
- G** CHANGE DIRECTORY (DIR) Button
- H** BOOKMARK Button
- J** RANDOM (RDM) Button
- M** TRACK Up/Down
- L** FF/REW Button
- K** REPEAT (RPT) Button
- S** SCAN Button
- F** FILE SEARCH Knob
- D** CD/MP3 Select Button

NOTE: The time it takes for the audio system to recognize an MP3 CD may vary greatly depending on the folder layout on the CD.

15: Climate Control

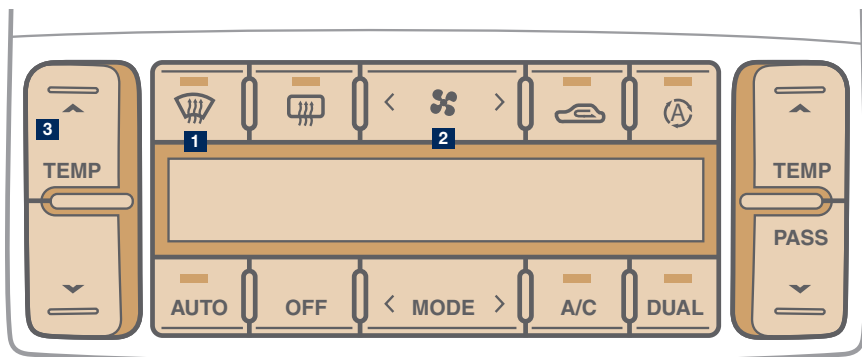

TO REMOVE FROST OR FOG ON THE WINDSHIELD:

1. Set the air flow control to the defrost  position. (The A/C will turn on automatically and the "Fresh" mode will be activated.)
2. Set the fan speed control to the maximum speed.
3. Set the temperature control to the desired setting.

NOTE: If the air conditioner filter for the evaporator blower is not replaced per the scheduled maintenance section, excessive window fogging may result. This filter is located in the evaporator housing behind the glove box. Your dealer can replace this filter for you.

DUAL TEMPERATURE CONTROL SELECTION SWITCH

 
Press the DUAL button to operate the driver and passenger side temperature individually. Press the DUAL button again to deactivate DUAL mode (The indicator light on the button goes off). The passenger side temperature will be set to the same as the driver side temperature.

AIR QUALITY SYSTEM

Press the automatic air recirculation button to turn the air quality system on. The light on the button will be illuminated when the system is activated.





16: Trip Computer/Odometer



TRIP COMPUTER

  Pushing in the MODE switch when the ignition switch is in "ON" position changes the display as follows:

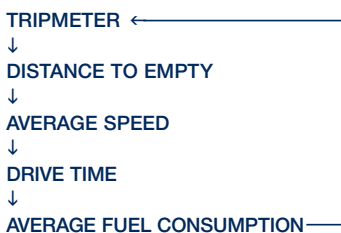

Trip Odometer

With the key ON, press the MODE to toggle through the following display modes:

 
ODO: Records the total distance traveled in miles.

TRIP A: Total distance traveled since the last tripmeter reset.*

TRIP B: Total distance traveled since the last tripmeter reset.*

*To reset the displayed distance to 0 while viewing TRIP A or TRIP B, press the reset switch for a few seconds.

ADDITIONAL FEATURES & INFORMATION

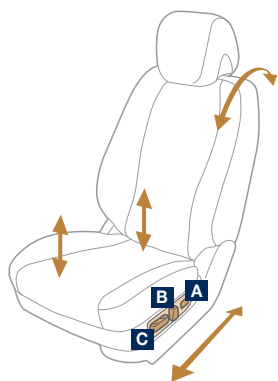

Power Front Seat Adjustment (If Equipped)

A LUMBAR CONTROL

 
To adjust the lumbar support, press the switch.

B SEATBACK ANGLE

Move the control forward or backward to recline the seatback.

C SEAT HEIGHT & FORWARD / BACKWARD

Raising / lowering the front of the control will raise / lower the front part of the cushion. Raising / lowering the back of the control will raise / lower the rear part of the cushion.

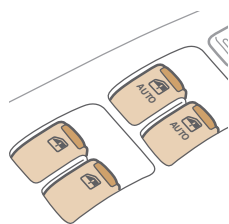

Power Windows

The windows may be opened by depressing the appropriate window switch and closed by pulling up the the switch.

AUTO UP / DOWN (FRONT WINDOWS)

To fully open the window automatically, press the switch fully down. To fully close the window automatically, pull the switch fully up.

NOTE: Ignition switch must be on.



Window Lock Switch

 
To disable the passenger front and rear power windows, press the window lock switch. To revert to normal operation, press the window lock switch a second time.

NOTE: Ignition switch must be on.



Immobilizer System

The immobilizer system is an anti-theft device, designed to deter automobile theft. Please refer to your Owner's Manual for more information.

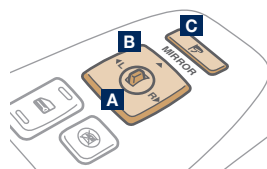

Outside Rearview Mirrors

ADJUSTING

1. Move the select switch **A** to right or left to activate the corresponding mirror.
2. Adjust the mirror angle by depressing the appropriate perimeter switch as illustrated. **B**
3. Place the select switch in the middle position to deactivate the perimeter switch.

POWER FOLDING (If Equipped)

Both left and right outside rearview mirrors can be folded for parking in narrow areas by pressing the outside rearview mirror folding switch. **C**

Sunroof Controls

 
A OPENING/CLOSING THE SUNROOF

Press the SLIDE OPEN button momentarily to activate the one-touch feature. Press the button for less than .5 second intervals to move the sunroof one step at a time. To close the sunroof, press the TILT UP button and hold it until the sunroof is closed.

B TILTING THE SUNROOF

Press to tilt up.

To close the sunroof, press the SLIDE OPEN button and hold it until the sunroof is closed.

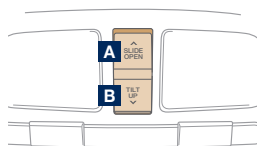

Remote Keyless Entry

A LOCK

Press to lock all doors and arm the alarm. Press again to hear confirmation chirp.

B UNLOCK

 
Press to disarm the alarm and unlock the driver's door. Press again within four seconds to unlock all doors.

C TRUNK UNLOCK

Press for longer than one second to release the trunk lid.


D PANIC


Press to activate the horn and flashing lights for 30 seconds. Press again to turn off panic mode.

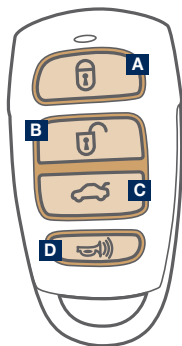

Fuel Cap

  After adding fuel, always reinstall the fuel cap fully and make sure it clicks at least 3 times. Failure to do this may result in the "Check Engine Light" illuminating.

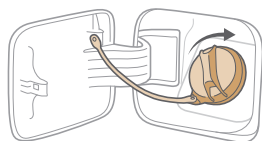

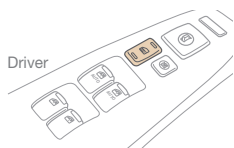

Driver

Central Door Locks

 
The central door locking switch is located on the driver's and front passenger's armrest. It is operated by depressing the door lock switch. If any door is open when the switch is depressed to the "LOCK" position, the door will remain locked when closed.



Passenger


AUTOMATIC DOOR LOCKING

Your Hyundai is equipped with a feature that will automatically lock all the doors when the Selector Lever is shifted to the D (Drive) position and the brake pedal is depressed. See your Hyundai dealer to activate this feature.

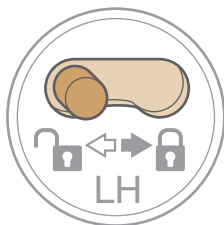

Child-Protector Rear Door Lock

 To engage the child-protector feature so that the door cannot be opened from the inside, move the child-protector lever to the "LOCK" position and close the door. Move the lever to the "UNLOCK" position when normal door operation is desired. To open the door from the outside, pull the outside door handle.

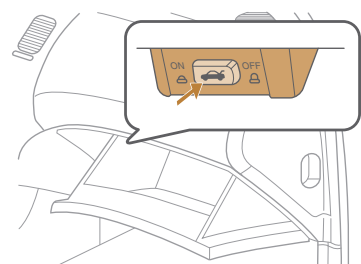

Trunk Lid Control Button

The trunk lid control button located in the vehicle glove box is used to prevent unauthorized access to the trunk.

 
LOCKING

To activate the trunk lock system so that the trunk can only be opened with the master key, perform the following:

1. Open the glove box.
2. Set the trunk lid control button to "OFF" position (not depressed). In the "OFF" position, the trunk cannot be unlocked with the trunk release lever or trunk open button of transmitter. It can only be opened using the master key.
3. Close the glove box and lock the glove box with the master key. When leaving a key with a parking lot attendant or valet, perform steps 1 to 3 above and leave the sub key with the attendant. Sub key can start the engine and operate door locks only. The trunk can never be opened with the sub key.


RELEASING

To release the trunk lock feature, open the glove box with master key and set the trunk lid control button to "ON" position (depressed). In this position the trunk will open with trunk lid release lever or transmitter.

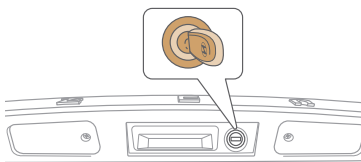

TO UNLOCK USING THE KEY

 To open the trunk lid, insert the key into the key slot located on the underside of the trunk lid and turn it clockwise to unlock. The trunk compartment light illuminates when the trunk lid is opened.

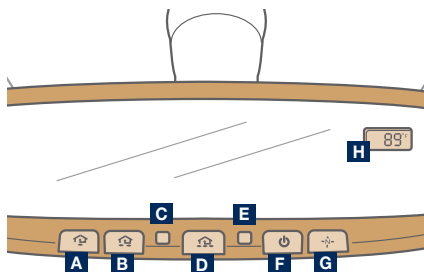



Rear View Mirror/Compass/Homelink®

- A** Homelink® Channel 1 Button
- B** Homelink® Channel 2 Button
- C** Status Indicator LED
- D** Homelink® Channel 3 Button
- E** Rear Light Sensor
- F** Dimming On/Off Button
- G** Compass Control Button
- H** Display

To set or operate your Homelink®, refer to your Owner's Manual for detailed instructions.

COMPASS FUNCTION

 
The Compass can be turned ON and OFF and will remember the last state when the ignition is cycled. To turn the display feature ON/OFF:

1. Press and release the  button to turn the display feature OFF.
2. Press and release the  button again to turn the display back ON.

Additional options can be set with press and hold sequences of the  button and are detailed in the Owner's Manual.

HOMELINK®


See your Owner's Manual for more information



Two Types Of Keys

MASTER KEY (M)

 This key is for general use. It will open all locks on your vehicle. One side of the key has the Hyundai logo and the other side has the "M" symbol.



SUB KEY (S)

 
Similar to the master key, this key will only function in the ignition and the door locks, but it will not operate the trunk and the glove box. One side of the key has the Hyundai logo and the other side has an "S" symbol. Leaving your sub key with a parking attendant will ensure that your vehicle's trunk, trunk lid release, glove box compartment and rear trunk access may not be unlocked in your absence.

Basic Safety Precaution

Whenever operating the vehicle, make sure that you and your occupants are properly wearing your seat belts. Small children should always ride in the rear seat in the appropriate child restraint system (see Owner's Manual for child safety details). Never place children under thirteen years old in the front seats to avoid injury that may result from air bag deployment. Always refer to the Owner's Manual for complete safety precaution information.

Tire Inflation

Check tire pressure at least once a month when the tires are cold. Refer to the tire pressure label for correct pressure. See Owner's Manual for the correct tire pressure label location.

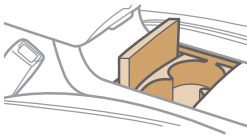


Cup Holders

Cup holders are located on the main console and in the center of the rear seat armrest. The cup holder can be opened by pushing at its top edge.



 Wiper Blade Replacement

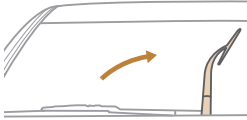

To replace the wiper blades, turn the ignition on and place the windshield wiper switch to the “LO” position. Turn the ignition switch off when the windshield wiper is in the fully up position. Remove the windshield wiper blade with the “LOCK” lever pressed. Replace with a new wiper blade.



 
Adjustable Headrests

To raise the headrest, pull it up.

To lower the headrest, push it down while pressing the lock knob.

To remove the headrest, raise it as far as it can go, then press the lock knob while pulling upward.

Tilt the headrest forward to three different positions by pulling the headrest forward. To adjust the headrest rearward, pull it fully forward to the farthest position and release it.

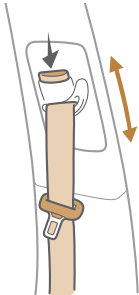

Height Adjustable Front Seat Shoulder Belt

To raise the height adjuster, pull it up. To lower, push it down while pressing the height adjuster button.

MAINTENANCE

	Normal Usage		Severe Usage	
Steering Gear Box, Linkage & Boots / Lower Arm Ball Joint	Inspect	7.5K	Inspect	More Frequently
Fuel Lines, Fuel Hoses & Connections	Inspect	7.5K		
Suspension Mounting Bolts	Inspect	7.5K		
Vapor Hose and Fuel Filler Cap	Inspect	7.5K		
Engine Oil & Filter	Replace	7.5K	Replace	3K
Air Conditioner Filter (for Evaporator & Blower Unit)	Replace	every 12 mos. OR 10K	Inspect	More Frequently
Air Conditioning Refrigerant	Inspect	15K		
Automatic Transaxle Fluid	Inspect Replace	15K 105K	Replace	30K
Brake Hoses & Lines	Inspect	15K		
Brake Pads, Calipers & Rotors	Inspect	15K	Inspect	More Frequently
Driveshafts & Boots	Inspect	15K	Inspect	7.5K
Exhaust Pipe & Muffler	Inspect	15K		
Power Steering Pump, Belt & Hoses	Inspect	15K		
Fuel Tank Air Filter	Inspect Replace	15K 30K		
Brake Fluid	Inspect	30K		
Drive Belt (Autotensioner, ALT, P/Str'g, A/con, W/pump)	Inspect	30K		
Rear Brake Pads / Linings, Parking Brake	Inspect	30K	Inspect	More Frequently
Vacuum Hose	Inspect	7.5K		
Crankcase Ventilation Hose	Inspect	30K		
Air Cleaner Filter (Engine)	Inspect Replace	15K 30K	Inspect	More Frequently
Coolant	Replace	60K		
Fuel Filter	Replace	37.5K		
Valve Clearance	Inspect	60K		
Electronic Throttle Control	Inspect	30K		
Spark Plugs (Iridium Coated)	Replace	97.5K	Replace	More Frequently

*All Units Displayed In Miles

For Additional Maintenance Schedule Information See Your Owner's Manual

Looking For More Detailed Information? This Quick Reference Guide does not replace your vehicle's Owner's Manual. If you require additional information or are unsure of a specific issue, you should always refer to the vehicle's Owner's Manual or contact your dealer.

