

FUJIFILM

DIGITAL CAMERA

XF10

Owner's Manual

Introduction

Thank you for your purchase of this product. Be sure that you have read this manual and understood its contents before using the camera. Keep the manual where it will be read by all who use the product.

For the Latest Information

The latest versions of the manuals are available from:

<http://fujifilm-dsc.com/en/manual/>



The site can be accessed not only from your computer but also from smartphones and tablets.



For information on firmware updates, visit:

http://www.fujifilm.com/support/digital_cameras/software/



Chapter Index

Menu List	iv
1 Before You Begin	1
2 First Steps	23
3 Basic Photography and Playback	39
4 Movie Recording and Playback	45
5 Taking Photographs	51
6 The Shooting Menus	101
7 Playback and the Playback Menu	127
8 The Setup Menus	145
9 Shortcuts	161
10 Peripherals and Optional Accessories	169
11 Connections	173
12 Technical Notes	185

Menu List

Camera menu options are listed below.

Shooting Menus

Adjust settings when shooting photos or movies.

















 
See page 101 for details.

SHOOTING MENU		☰	SHOOTING MENU		☰	
☑1	SCENE POSITION	102	☑4	TOUCH SCREEN MODE	118	
	ADVANCED FILTER	102		TOUCH ZOOM	118	
	AF/MF SETTING	102		MF ASSIST	118	
	RELEASE TYPE	106		PHOTOMETRY	119	
	ISO	106		INTERLOCK SPOT AE & FOCUS AREA	119	
	IMAGE SIZE	108		FLASH SET-UP	120	
	IMAGE QUALITY	109		MOVIE SET-UP	121	
	DYNAMIC RANGE	110		☑5	DIGITAL IMAGE STABILIZER	124
	FILM SIMULATION	111			WIRELESS COMMUNICATION	124
	FILM SIMULATION BKT	112			SHUTTER TYPE	125
SELF-TIMER	112	DIGITAL TELE-CONV.	125			
INTERVAL TIMER SHOOTING	113					
☑2	TIME-LAPSE MOVIE MODE	114				
	WHITE BALANCE	115				
	COLOR	115				
	SHARPNESS	115				
	HIGHLIGHT TONE	115				
☑3	SHADOW TONE	116				
	NR NOISE REDUCTION	116				
	LONG EXPOSURE NR	116				
	AE BKT SETTING	117				
	CONTROL RING SETTING	118				

Playback Menu


Adjust playback settings.

 See page 133 for details.

PLAYBACK MENU			PLAYBACK MENU		
	IMAGE TRANSFER ORDER	133		IMAGE ROTATE	139
	WIRELESS COMMUNICATION	134		RED EYE REMOVAL	140
	RAW CONVERSION	134		SLIDE SHOW	140
	ERASE	136		PHOTOBOOK ASSIST	141
	CROP	138		PC AUTO SAVE	142
	RESIZE	138		PRINT ORDER (DPOF)	143
	PROTECT	139		instax PRINTER PRINT	144
				DISP ASPECT	144

Setup Menu

Adjust basic camera settings.

 See page 145 for details.


















SET-UP			SET-UP		
	DATE/TIME	146		BUTTON SETTING	152
	TIME DIFFERENCE	146		FOCUS RING	152
	言語/LANG.	146		TOUCH SCREEN SETTING	153
	RESET	147		POWER MANAGEMENT	153
	SOUND & FLASH	147		SAVE DATA SET-UP	154
	SOUND SET-UP	148		COLOR SPACE	155
	SCREEN SET-UP	149		CONNECTION SETTING	156
				FORMAT	159



Table of Contents







Introduction.....	ii
For the Latest Information.....	ii
Menu List.....	iv
Shooting Menus.....	iv
Playback Menus.....	v
Setup Menus.....	v
Supplied Accessories.....	xiv
About This Manual.....	xv
Symbols and Conventions.....	xv
Terminology.....	xv








1 Before You Begin 1

Parts of the Camera.....	2
The Mode Dial.....	4
The Serial Number Plate.....	4
The Focus Stick (Focus Lever).....	5
The Command Dials.....	5
The DRIVE Button.....	6
The Fn (Function) Buttons.....	7
The Indicator Lamp.....	8
The Control Ring.....	9
Camera Displays.....	10
The LCD Monitor.....	10
Adjusting Display Brightness.....	12
The DISP/BACK Button.....	12
Customizing the Standard Display.....	13
Using the Menus.....	15
Touch Screen Mode.....	16
Shooting Touch Controls.....	16
Playback Touch Controls.....	21









2 First Steps 23

























Attaching the Hand Strap.....	24
-------------------------------	----

   





Removing the Lens Cap.....	25
Inserting the Battery and a Memory Card	26
Compatible Memory Cards.....	29
Charging the Battery	30
Turning the Camera On and Off.....	33
Checking the Battery Level.....	34
Basic Setup	35
Choosing a Different Language.....	37
Changing the Time and Date.....	37
3 Basic Photography and Playback	39
Taking Photographs.....	40
Viewing Pictures.....	42
Deleting Pictures.....	43
4 Movie Recording and Playback	45
Recording Movies	46
Adjusting Movie Settings.....	47
Viewing Movies.....	48
5 Taking Photographs	51
Choosing a Shooting Mode	52
SR ⁺ ADVANCED SR AUTO	52
Program AE (P).....	53
Shutter-Priority AE (S).....	54
Aperture-Priority AE (A).....	56
Manual Exposure (M).....	57
PANORAMA.....	59
SP SCENE POSITION /  /  /  / 	62
Adv. ADVANCED FILTER.....	65
Exposure Compensation	67
The Digital Teleconverter	68
Continuous Shooting (Burst Mode)	69
 CONTINUOUS.....	70
 4K.....	71

Bracketing.....	74
 AE BKT	75
 ISO BKT	75
 FILM SIMULATION BKT	75
 WHITE BALANCE BKT	75
 DYNAMIC RANGE BKT.....	76
 HDR.....	76
Autofocus.....	77
Focus Mode.....	78
Autofocus Options (AF Mode).....	80
Focus-Point Selection.....	82
Focus/Exposure Lock	86
AE/AF LOCK.....	87
Manual Focus.....	88
Checking Focus.....	89
Using the Flash.....	91
White Balance.....	92
WHITE BALANCE.....	93
Custom White Balance	94
 : Color Temperature	95
Using the Self Timer	96
2 SEC/10 SEC.....	97
FACE AUTO SHUTTER.....	97
SMILE	98
BUDDY	98
GROUP	99










6 The Shooting Menus 101










SHOOTING MENU ( /  /  /  / )	102
 SCENE POSITION	102
 ADVANCED FILTER	102
 AF/MF SETTING	102
FOCUS AREA.....	102
FOCUS MODE.....	102
AF MODE	102

SNAPSHOT	103
RELEASE/FOCUS PRIORITY	103
AF+MF	103
FACE/EYE DETECTION SETTING.....	104
PRE-AF	105
AF ILLUMINATOR.....	105
 RELEASE TYPE	106
 ISO.....	106
 IMAGE SIZE	108
 IMAGE QUALITY.....	109
 D-RING DYNAMIC RANGE	110
 FILM SIMULATION	111
 FILM SIMULATION BKT	112
 SELF-TIMER	112
 INTERVAL TIMER SHOOTING	113
 TIME-LAPSE MOVIE MODE	114
 WB WHITE BALANCE.....	115
 COLOR	115
 SHARPNESS	115
 HIGHLIGHT TONE	115
 SHADOW TONE.....	116
 NR NOISE REDUCTION	116
 LONG EXPOSURE NR	116
 AE BKT SETTING.....	117
FRAMES/STEP SETTING.....	117
1 FRAME/CONTINUOUS	117
SEQUENCE SETTING	117
 CONTROL RING SETTING	118
 TOUCH SCREEN MODE.....	118
 TOUCH ZOOM.....	118
 MF ASSIST.....	118
 PHOTOMETRY	119
 INTERLOCK SPOT AE & FOCUS AREA.....	119











 FLASH SET-UP	120
FLASH MODE	120
FLASH COMPENSATION	120
RED EYE REMOVAL.....	120
 MOVIE SET-UP.....	121
MOVIE MODE	121
HD HIGH SPEED VIDEO	121
MOVIE ISO	122
FOCUS MODE	122
AF MODE	122
HDMI OUTPUT INFO DISPLAY.....	122
4K MOVIE OUTPUT.....	123
HDMI REC CONTROL.....	123
MIC LEVEL ADJUSTMENT.....	123
MIC/REMOTE RELEASE	123
 DIGITAL IMAGE STABILIZER.....	124
 WIRELESS COMMUNICATION	124
 SHUTTER TYPE.....	125
 DIGITAL TELE-CONV.....	125









7 Playback and the Playback Menu 127

The Playback Display	128
The DISP/BACK Button	129
Viewing Pictures.....	131
Playback Zoom.....	132
Multi-Frame Playback.....	132
The Playback Menu ( /  / ).....	133
 IMAGE TRANSFER ORDER	133
 WIRELESS COMMUNICATION	134
 RAW CONVERSION.....	134
 ERASE	136
 CROP	138
 RESIZE	138

 PROTECT	139
 IMAGE ROTATE.....	139
 RED EYE REMOVAL.....	140
 SLIDE SHOW	140
 PHOTOBOOK ASSIST.....	141
 PC AUTO SAVE.....	142
 PRINT ORDER (DPOF)	143
 instax PRINTER PRINT	144
 DISP ASPECT.....	144

8 The Setup Menus 145

The Setup Menu ( /  / )	146
 DATE/TIME	146
 TIME DIFFERENCE.....	146
 言語/LANG.....	146
 RESET.....	147
 SOUND & FLASH	147
 SOUND SET-UP	148
OPERATION VOL.....	148
SHUTTER VOLUME	148
SHUTTER SOUND	148
PLAYBACK VOLUME.....	148
 SCREEN SET-UP	149
IMAGE DISP.....	149
PREVIEW EXP. IN MANUAL MODE.....	149
LCD BRIGHTNESS	149
LCD COLOR.....	149
PREVIEW PIC. EFFECT	150
FRAMING GUIDELINE	150
AUTOROTATE PB.....	151
FOCUS CHECK.....	151
FOCUS SCALE UNITS	151
DISP. CUSTOM SETTING.....	151

 BUTTON SETTING.....	152
FUNCTION (Fn) SETTING.....	152
EDIT/SAVE QUICK MENU.....	152
FOCUS LEVER SETTING.....	152
 FOCUS RING.....	152
 TOUCH SCREEN SETTING.....	153
 POWER MANAGEMENT.....	153
AUTO POWER OFF.....	153
HIGH PERFORMANCE.....	153
 SAVE DATA SET-UP.....	154
FRAME NO.....	154
SAVE ORG IMAGE.....	154
EDIT FILE NAME.....	155
DATE STAMP.....	155
 COLOR SPACE.....	155
 CONNECTION SETTING.....	156
Bluetooth SETTINGS.....	156
PC AUTO SAVE.....	157
instax PRINTER CONNECTION SETTING.....	157
GENERAL SETTINGS.....	158
INFORMATION.....	158
RESET WIRELESS SETTING.....	158
 FORMAT.....	159

9 Shortcuts 161

Shortcut Options.....	162
The Q (Quick Menu) Button.....	163
The Quick Menu Display.....	163
Viewing and Changing Settings.....	164
Editing the Quick Menu.....	165
The Fn (Function) Buttons.....	166
Assigning a Role to the Function Buttons.....	167

10 Peripherals and Optional Accessories 169

Accessories from Fujifilm.....	170
--------------------------------	-----

11	Connections	173
	HDMI Output.....	174
	Connecting to HDMI Devices	174
	Shooting.....	175
	Playback.....	175
	Wireless Connections (Bluetooth, Wireless LAN/Wi-Fi)	176
	Smart Phones and Tablets: FUJIFILM Camera Remote	176
	Computers: FUJIFILM PC AutoSave	178
	Computers: Wireless Connections	178
	Connecting to Computers via USB	179
	Windows (MyFinePix Studio).....	179
	Mac OS X/macOS.....	179
	RAW FILE CONVERTER EX.....	179
	Connecting the Camera.....	180
	instax SHARE Printers	182
	Establishing a Connection	182
	Printing Pictures.....	183
12	Technical Notes	185
	Software from Fujifilm.....	186
	FUJIFILM Camera Remote	186
	FUJIFILM PC AutoSave	186
	MyFinePix Studio.....	186
	RAW FILE CONVERTER EX.....	186
	For Your Safety	187
	Product Care	196
	Firmware Updates.....	197
	Checking the Firmware Version	197
	Troubleshooting.....	198
	Warning Messages and Displays	204
	Memory Card Capacity	207
	Specifications	208

Supplied Accessories

The following are included with the camera:

- NP-95 rechargeable battery
- AC-5VG AC power adapter
- Plug adapter (Shape of adapter varies with region of sale.)
- USB cable
- Hand strap
- Lens cap
- *Owner's Manual* (this manual)

About This Manual

This manual contains instructions for your FUJIFILM XF10 digital camera. Be sure you have read and understood its contents before proceeding.

Symbols and Conventions

The following symbols are used in this manual:



Information that should be read to prevent damage to the product.



Additional information that may be helpful when using the product.



Pages on which related information may be found.

Menus and other text in the displays are shown in **bold**. Illustrations are for explanatory purposes only; drawings may be simplified, while photographs are not necessarily taken with the model of camera described in this manual.

Terminology


The optional SD, SDHC, and SDXC memory cards the camera uses to store pictures are referred to as “memory cards”. The LCD monitor may be referred to as the “LCD”.

MEMO


Before You Begin



Parts of the Camera

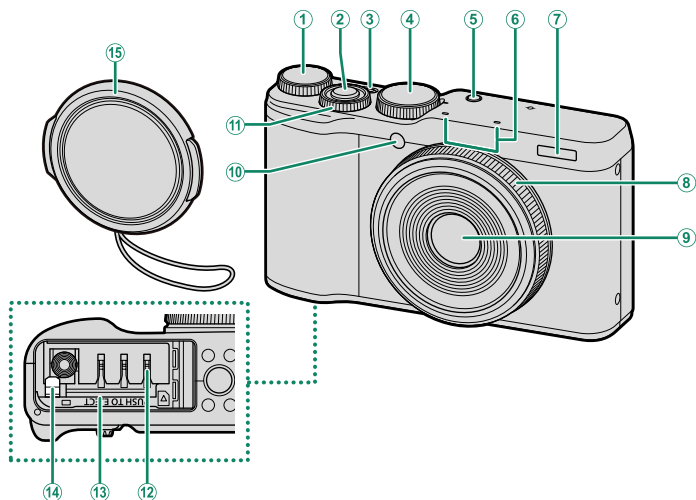

① Rear command dial.....	5	⑨ Lens.....	196
② Shutter button.....	41	⑩ AF-assist illuminator.....	40, 105
③ ON/OFF button.....	33	Self-timer lamp.....	96, 112
④ Mode dial.....	4, 40, 52	⑪ Front command dial.....	5, 131
⑤ Fn1 (function 1) button.....	7, 166	⑫ Battery chamber.....	26
⑥ Microphone.....	123, 171	⑬ Memory card slot.....	26
⑦ Flash.....	91, 120	⑭ Battery latch.....	28
⑧ Control ring.....	9, 68, 88, 118	⑮ Lens cap.....	25

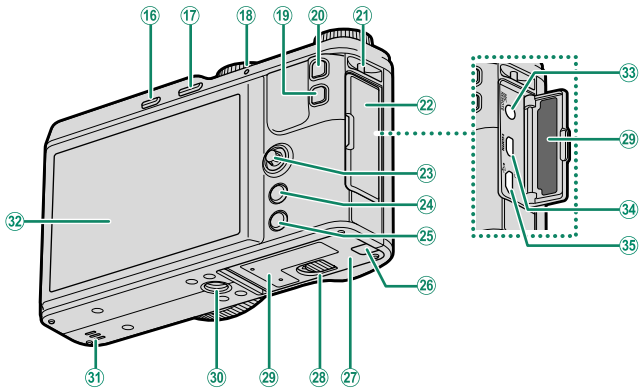

- | | | | |
|----|--|----|--|
| 16 | DRIVE button..... 6, 46, 69, 74 | 26 | Cable channel cover for DC coupler |
| | ☒ (delete) button (playback mode)..... 43 | 27 | Battery-chamber cover..... 26 |
| 17 | ▶ (playback) button..... 42 | 28 | Battery-chamber cover latch..... 26 |
| 18 | Indicator lamp..... 8 | 29 | Serial number plate..... 4 |
| 19 | Q (quick menu) button..... 163 | 30 | Tripod mount |
| | RAW conversion button | 31 | Speaker..... 48, 148 |
| | (playback mode)..... 134 | 32 | LCD monitor..... 10 |
| 20 | Fn2 (function 2) button..... 7, 166 | | Touch screen..... 16, 118, 153 |
| 21 | Eyelet for hand strap..... 24 | 33 | Microphone/remote release connector |
| 22 | Connector cover..... 171, 174, 180 | | (\varnothing 2.5 mm)..... 171 |
| 23 | Focus stick (focus lever)..... 5, 82 | 34 | HDMI Micro connector (Type D)..... 174 |
| 24 | MENU/OK button..... 15 | 35 | Micro USB (Micro-B) USB 2.0 connector |
| 25 | DISP (display)/ BACK button..... 12, 129 | | 171, 180 |

The Mode Dial

To select a shooting mode, rotate the dial until the icon for the desired mode aligns with the index.





Mode	Description	
① SR+ (ADVANCED SR AUTO)	The camera automatically optimizes settings to the scene.	52
② P (PROGRAM AE)	Aperture and shutter speed can be adjusted using program shift.	53
③ S (SHUTTER PRIORITY AE) A (APERTURE PRIORITY AE) M (MANUAL)	Select for full control over camera settings, including aperture (M and A) and/or shutter speed (M and S).	54 56 57
④ (PANORAMA)	Follow an on-screen guide to create a panorama.	59
⑤ SP (SCENE POSITION) 	Choose a scene suited to the subject or shooting conditions and let the camera do the rest.	62
⑥ Adv. (ADVANCED FILTER)	Take photos with filter effects.	65

The Serial Number Plate

Do not remove the serial number plate, which provides the FCC ID, KC mark, serial number, and other important information.

The Focus Stick (Focus Lever)

Tilt or press the focus stick to select the focus area. The focus stick can also be used to navigate the menus.

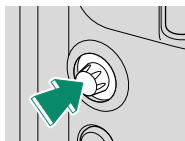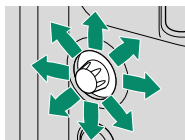

The Command Dials

The rear and front command dials are used for the operations below.

Rear Command Dial



Rotate

- Exposure compensation
- Choose a shutter speed
- Adjust settings in the quick menu
- Zoom in or out in full frame playback
- Zoom in or out in multi-frame playback

Front Command Dial












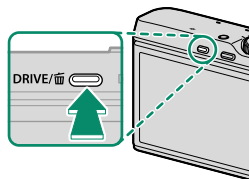


Rotate

- Program shift
- Choose a shutter speed
- Adjust aperture
- Adjust settings in the quick menu
- View other pictures during playback

The DRIVE Button


Pressing the **DRIVE** button displays drive mode options, where you can choose from the following the drive modes.



Mode		
	STILL IMAGE	40
	CONTINUOUS	70
	4K	71
	AE BKT	75
	ISO BKT	75
	FILM SIMULATION BKT	75
	WHITE BALANCE BKT	75
	DYNAMIC RANGE BKT	76
	HDR	76
	MOVIE	46

The Fn (Function) Buttons


Assign a role to the function buttons for quick access to the selected feature.

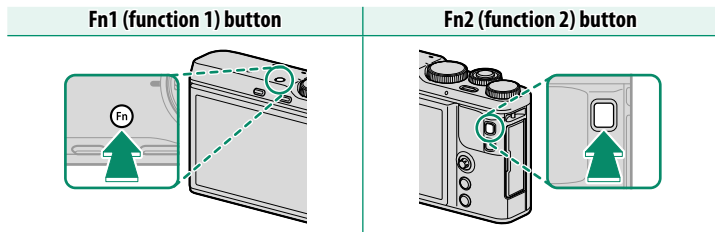


 The role performed by the function buttons can be chosen using **⌚ BUTTON SETTING > FUNCTION (Fn) SETTING** ( 152, 167).

The Indicator Lamp

The indicator lamp shows camera status as follows:

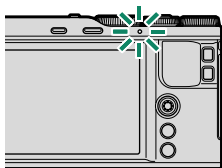


Indicator lamp	Camera status
Glows green	Focus locked.
Blinks green	Focus or slow shutter speed warning. Pictures can be taken.
Blinks green and orange	<ul style="list-style-type: none">• Camera on: Recording pictures. Additional pictures can be taken.• Camera off: Uploading pictures to a smartphone or tablet.
Glows orange	Recording pictures. No additional pictures can be taken at this time.
Blinks orange	Flash charging; flash will not fire when picture is taken.
Blinks red	Lens or memory error.

 Warnings may also appear in the display.

The Control Ring

 Use the control ring for quick access to camera functions during shooting.



The control ring is assigned the **DEFAULT** role at shipment.

DEFAULT

When **DEFAULT** is selected, the function assigned to the control ring changes with the shooting mode.

Shooting mode	Icon	Function	
		Autofocus	Manual focus
ADVANCED SR AUTO		Digital teleconverter	
ADVANCED FILTER	Adv.	Filter selection	—
SCENE POSITION	SP	PORTRAIT	Scene selection
		MULTIPLE EXPOSURE	Film simulation
		Other	Scene selection
PORTRAIT ENHANCER		Portrait enhancer level selection	—
LANDSCAPE		Digital teleconverter	MF
SPORT			
NIGHT			
PANORAMA		Film simulation	
PROGRAM AE	P	Digital teleconverter	MF
SHUTTER PRIORITY AE	S		
APERTURE PRIORITY AE	A		
MANUAL	M		

The function assigned to the control ring can be changed using the **CONTROL RING SETTING** option in the shooting menu (📖 118). The role assignment can also be changed using function buttons (📖 166).


The control ring functions differently during movie recording.

Camera Displays

This section lists the indicators that may be displayed during shooting.

! For illustrative purposes, displays are shown with all indicators lit.

The LCD Monitor

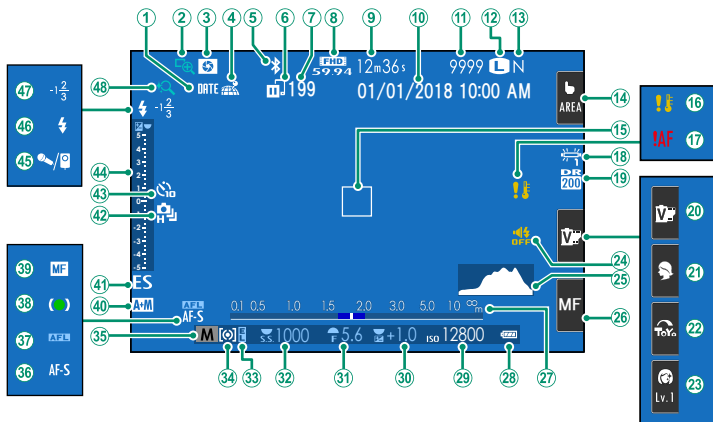

① Date stamp.....	155	②⑤ Histogram	14
② Focus check.....	89, 151	②⑥ Focus mode ²	19, 78
③ Depth-of-field preview.....	56	②⑦ Distance indicator	89
④ Location data download status.....	158	②⑧ Battery level.....	34
⑤ Bluetooth ON/OFF.....	156	②⑨ Sensitivity.....	106
⑥ Image transfer status.....	133	③⑩ Exposure compensation.....	67
⑦ Number of frames selected for upload	133	③① Aperture.....	53, 56, 57
⑧ Movie mode	46, 121	③② Shutter speed.....	53, 54, 57
⑨ Time remaining.....	46	③③ AE lock.....	86
⑩ Date and time.....	35, 146	③④ Metering.....	119
⑪ Number of available frames ¹	207	③⑤ Shooting mode.....	4, 52
⑫ Image size.....	108	③⑥ Focus mode	78
⑬ Image quality.....	109	③⑦ AF lock.....	86
⑭ Touch screen mode ²	16	③⑧ Focus indicator.....	79
⑮ Focus frame.....	82, 86	③⑨ Manual focus indicator.....	88
⑯ Temperature warning	206	④⑩ AF+MF indicator.....	103
⑰ Focus warning.....	41	④① Shutter type.....	125
⑱ White balance	92, 115	④② Continuous mode.....	69
⑲ Dynamic range	110	④③ Self-timer indicator	96, 112
⑳ Film simulation ²	19, 111	④④ Exposure indicator.....	57, 67
㉑ Scene position ²	19, 62	④⑤ Microphone/remote release.....	123, 171
㉒ Advanced filter ²	19, 65	④⑥ Flash mode.....	91
㉓ Portrait enhancement level ²	19	④⑦ Flash compensation	120
㉔ Sound and flash indicator	147	④⑧ Touch zoom.....	20

1 Shows "9999" if there is space for over 9999 frames.


2 Camera functions can also be accessed via touch controls.

Adjusting Display Brightness

Use the items in the **SCREEN SET-UP** menu to adjust the brightness and hue of the LCD monitor when changes in ambient brightness make the display difficult to read. Choose **LCD BRIGHTNESS** to adjust brightness or **LCD COLOR** to adjust hue.

The DISP/BACK Button

Press **DISP/BACK** to cycle through display modes as follows.

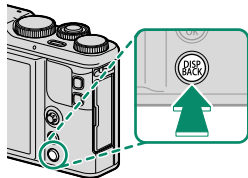

Standard



Information off



Customizing the Standard Display

To choose the items shown in the standard display:

- 1 Display standard indicators.**
Use the **DISP/BACK** button to display standard indicators.
- 2 Select DISP. CUSTOM SETTING.**
Select **SCREEN SET-UP > DISP. CUSTOM SETTING** in the setup menu.


- 3 Choose items.**
Highlight items and press **MENU/OK** to select or deselect.

Item	Default	Item	Default
FRAMING GUIDELINE	<input type="checkbox"/>	SHUTTER TYPE	<input checked="" type="checkbox"/>
ELECTRONIC LEVEL	<input type="checkbox"/>	FLASH	<input checked="" type="checkbox"/>
FOCUS FRAME	<input checked="" type="checkbox"/>	CONTINUOUS MODE	<input checked="" type="checkbox"/>
AF DISTANCE INDICATOR	<input type="checkbox"/>	WHITE BALANCE	<input checked="" type="checkbox"/>
MF DISTANCE INDICATOR	<input checked="" type="checkbox"/>	FILM SIMULATION	<input checked="" type="checkbox"/>
HISTOGRAM	<input type="checkbox"/>	DYNAMIC RANGE	<input checked="" type="checkbox"/>
SHOOTING MODE	<input checked="" type="checkbox"/>	FRAMES REMAINING	<input checked="" type="checkbox"/>
APERTURE/S-SPEED/ISO	<input checked="" type="checkbox"/>	IMAGE SIZE/QUALITY	<input checked="" type="checkbox"/>
INFORMATION BACKGROUND	<input checked="" type="checkbox"/>	MOVIE MODE & REC. TIME	<input checked="" type="checkbox"/>
Expo. Comp. (Digit)	<input checked="" type="checkbox"/>	DIGITAL TELE-CONV.	<input checked="" type="checkbox"/>
Expo. Comp. (Scale)	<input checked="" type="checkbox"/>	AUTO IMAGE TRANSFER	<input checked="" type="checkbox"/>
FOCUS MODE	<input checked="" type="checkbox"/>	BATTERY LEVEL	<input checked="" type="checkbox"/>
PHOTOMETRY	<input checked="" type="checkbox"/>		

- 4 Save changes.**
Press **DISP/BACK** to save changes.
- 5 Exit the menus.**
Press **DISP/BACK** as needed to exit the menus and return to the shooting display.


Virtual Horizon

Selecting **ELECTRONIC LEVEL** displays a virtual horizon. The camera is level when the two lines overlap. Note that the virtual horizon may not be displayed if the camera lens is pointed up or down.

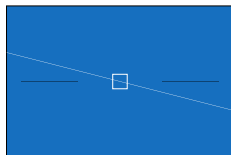


Histograms

Histograms show the distribution of tones in the image. Brightness is shown by the horizontal axis, the number of pixels by the vertical axis.

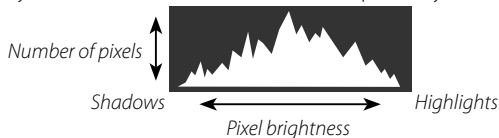

- **Optimal exposure:** Pixels are distributed in an even curve throughout the tone range.
- **Overexposed:** Pixels are clustered on the right side of the graph.
- **Underexposed:** Pixels are clustered on the left side of the graph.

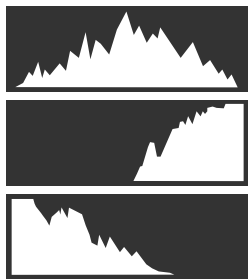


Using the Menu

To display the menu, press **MENU/OK**.




To navigate the menus:

- 1 Press **MENU/OK** to display the menus.

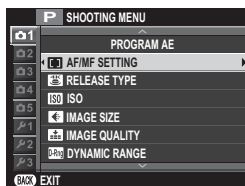


- 2 Press the focus stick (focus lever) left to highlight the tab for the current menu.

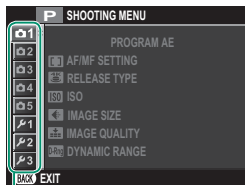

Tab

- 3 Press the focus stick up or down to highlight the menu tab (**Q1**, **Q2**, **Q3**, **Q4**, **Q5**, **Q1**, **Q2**, **Q3**, **Q1**, **Q2** or **Q3**) containing the desired item.
- 4 Press the focus stick right to place the cursor in the menu.


 The focus stick (focus lever) does not tilt diagonally.

Touch Screen Mode

The camera's LCD monitor can be used as a touch screen.

Shooting Touch Controls



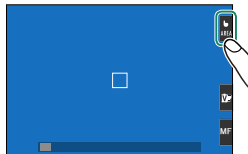

Touch controls can be used for such operations as choosing the focus area and taking photographs. The operation performed can be selected by tapping the touch screen mode indicator in the display to cycle through the following options.





Touch control settings can be adjusted using the **TOUCH SCREEN MODE** option in the shooting menu.


The touch screen mode indicator is not displayed and touch controls cannot be used when **OFF** is selected for **TOUCH SCREEN SETTING** in the setup menu.

Still Photography

Mode	Description
 TOUCH SHOOTING	Tap your subject in the display to focus and release the shutter. In burst mode, pictures will be taken while you keep your finger on the display.
 AF	Tap to select a focus point and lock focus. The shutter can be released by pressing the shutter button all the way down.
 AREA	Tap to select a point for focus or zoom. The focus frame will move to the selected point.
 OFF	Touch focus, touch focus-area selection, and touch shutter disabled.

 During burst shooting in the  **4K** >  **4K BURST** drive mode, the “touch shooting” icon changes to “touch shooting disabled” and no picture will be taken when you tap the display.




When **5m** or **2m** is selected for  **AF/MF SETTING** > **SNAPSHOT**, the “touch focus” icon changes to “touch focus disabled” and the camera will not focus when you tap the display.




Touch Controls for Focus Zoom

Different touch controls are used during focus zoom (focus check enabled).



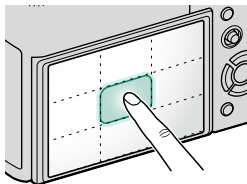

- **Central area:** Tap the center of the display to take photographs.

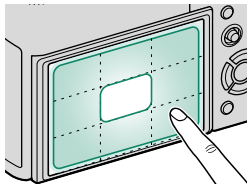




- **Other areas:** Tapping other areas simply scrolls the display; no other operations are performed.




Movie Recording





Mode	Description
 TOUCH SHOOTING	Tap your subject in the display to focus. In focus mode CONTINUOUS AF (AF-C), the camera will continually adjust focus in response to changes in the distance to the subject; to refocus in focus mode SINGLE AF (AF-S) or to focus on a new subject in focus mode CONTINUOUS AF , tap the subject in the monitor.
 AF	Tap to select a focus point. If SINGLE AF (AF-S) is selected for focus mode, the camera will focus on the subject in the selected focus point when the shutter button is pressed halfway. In focus mode CONTINUOUS AF (AF-C), the camera will continually adjust focus in response to changes in the distance to the subject in the selected focus point.
 AREA	
 OFF	Touch focus disabled.

 If **MULTI** is selected for **AF MODE** when  **TOUCH SCREEN MODE** is enabled,  **MOVIE SET-UP > AF MODE** will automatically change to **AREA**.

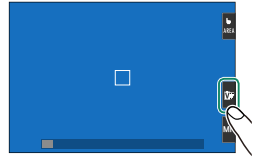Adjusting Settings


The touch screen can be used to adjust settings. The settings available vary with the shooting mode.



Mode	Description
 FILM SIMULATION	Choose a film simulation type. Available in SR⁺ , P , S , A , and M modes.
 SCENE POSITION	Choose a scene. Available in SP mode.
 ADVANCED FILTER	Choose an advanced filter. Available in Adv. mode.
 PORTRAIT ENHANCER	Choose the portrait enhancement level. Available in PORTRAIT ENHANCER (Lv.1) mode.

Choosing a Focus Mode


The touch screen can be used to choose the focus mode (📖 78).

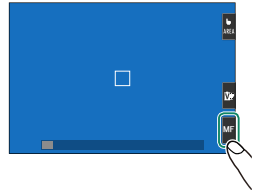

Touch Function

Functions can be assigned to the following flick gestures in much the same way as function buttons (📖 166):


- Flick up: **T-Fn1**
- Flick left: **T-Fn2**
- Flick right: **T-Fn3**
- Flick down: **T-Fn4**

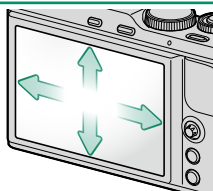

Touch Zoom

Touch controls can be used for digital zoom, regardless of the mode selected for **TOUCH SCREEN MODE** in the shooting menu.

- 1 Select **ON** for **TOUCH ZOOM** in the shooting menu.
- 2 Use pinch-out and pinch-in gestures (📖 21) to zoom in and out using digital zoom.

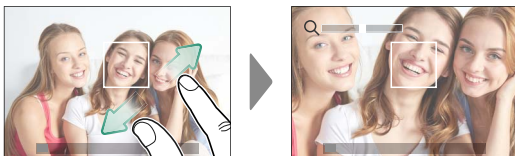

Regardless of where you place your fingers, the camera will zoom in on and out from the center of the frame.

The camera will focus on the area selected for **AF/MF SETTING > FOCUS AREA**. If **AREA** is selected for **TOUCH SCREEN MODE**, you can select the focus area by tapping the display.

- 3 Take pictures.

Playback Touch Controls

When **ON** is selected for **TOUCH SCREEN SETTING** in the set-up menu, touch controls can be used for the following playback operations:


- **Swipe:** Swipe a finger across the display to view other images.



- **Pinch-out:** Place two fingers on the display and spread them apart to zoom in.



- **Pinch-in:** Place two fingers on the display and slide them together to zoom out.


 Pictures can be zoomed out until the entire image is visible but no further.



- **Double-tap:** Tap the display twice to zoom in on the focus point.



- **Drag:** View other areas of the image during playback zoom.

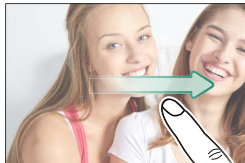


First Steps

2

Attaching the Hand Strap


Attach the hand strap to the eyelet as shown.

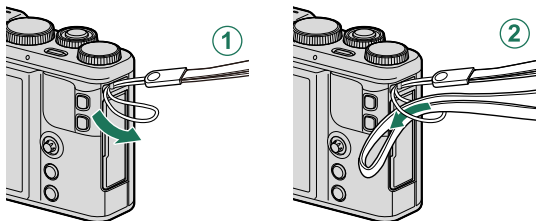

! To avoid dropping the camera, be sure the hand strap is correctly secured.


Securing the Hand Strap

When using the hand strap, adjust the slider as shown to secure the strap around your wrist.

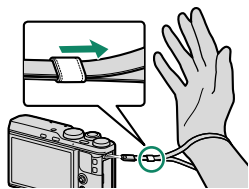


Removing the Lens Cap

Remove the lens cap as shown.

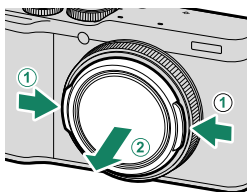

The Lens Cap

To prevent accidental loss, use the string to attach the lens cap to the hand strap.

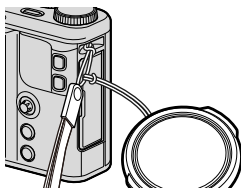

Inserting the Battery and a Memory Card



Insert the battery and memory card as described below.

1 Open the battery-chamber cover.

Slide the battery-chamber latch as shown and open the battery-chamber cover.

! Do not remove the battery when the camera is on. Failure to observe this precaution could damage image files or memory cards.

Do not use excessive force when handling the battery-chamber cover.

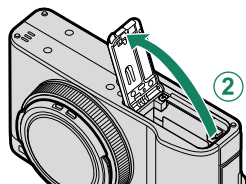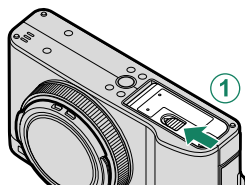


2 Insert the battery.

Insert the battery as shown.

! Insert the battery in the orientation shown. *Do not use force or attempt to insert the battery upside down or backwards.* The battery will slide in easily in the correct orientation.

Confirm that the battery is securely latched.

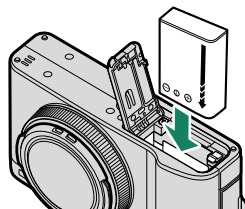


3 Insert the memory card.

Holding the card in the orientation shown, slide it in until it clicks into place at the back of the slot.

! Be sure card is in the correct orientation; do not insert at an angle or use force.



Format memory cards before first use, and be sure to reformat all memory cards after using them in a computer or other device.

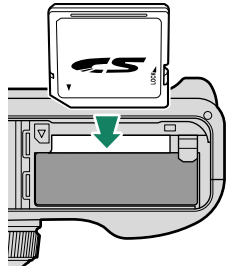

4 Close the battery-chamber cover.

Close and latch the cover.


! If the cover does not close, check that the battery is in the correct orientation. Do not attempt to force the cover shut.

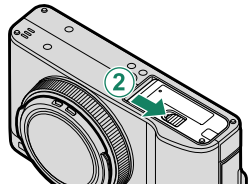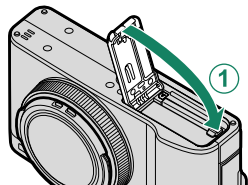

Removing the Battery and Memory Card


Before removing the battery or memory card, *turn the camera off* and open the battery-chamber cover.

To remove the battery, press the battery latch to the side, and slide the battery out of the camera as shown.

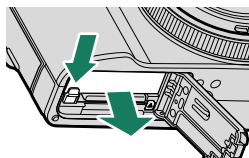

! The battery may become hot when used in high-temperature environments. Observe caution when removing the battery.

To remove the memory card, press it in and release it slowly. The card can then be removed by hand. When a memory card is removed, the card could be ejected too quickly. Use your finger to hold it and gently release the card.

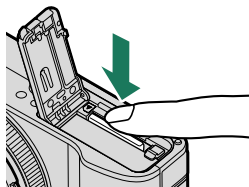

! Press the center of the card when ejecting it.

Compatible Memory Cards

Fujifilm and SanDisk SD, SDHC, and SDXC memory cards have been approved for use in the camera; UHS-I cards are supported, while cards with a UHS speed class of 3 or better are recommended for 4K burst, multi-focus, and movie modes. A complete list of approved memory cards is available at http://www.fujifilm.com/support/digital_cameras/compatibility/. Operation is not guaranteed with other cards. The camera cannot be used with xD-Picture Cards or MultiMediaCard (MMC) devices.

! *Do not turn the camera off or remove the memory card while the memory card is being formatted or data are being recorded to or deleted from the card. Failure to observe this precaution could damage the card.*

Memory cards can be locked, making it impossible to format the card or to record or delete images. Before inserting a memory card, slide the write-protect switch to the unlocked position.



Memory cards are small and can be swallowed; keep out of reach of children. If a child swallows a memory card, seek medical assistance immediately.

miniSD or microSD adapters that are larger or smaller than memory cards may not eject normally; if the card does not eject, take the camera to an authorized service representative. Do not forcibly remove the card.

Do not affix labels or other objects to memory cards. Peeling labels can cause camera malfunction.

Movie recording may be interrupted with some types of memory card.

When you first take a picture after formatting a memory card in the camera, the camera will create a folder in which the new shot and subsequent. Do not rename or delete this folder or use a computer or other device to edit, delete, or rename image files. Always use the camera to delete pictures; before editing or renaming files, copy them to a computer and edit or rename the copies, not the originals. Renaming the files on the camera can cause problems during playback.


Charging the Battery

The battery is not charged at shipment. Turn the camera off and charge the battery before use. The camera charges the battery internally.

! An NP-95 rechargeable battery is supplied with the camera. Charging takes about 250 minutes.

1 Attach the plug adapter to the AC power adapter.

Attach the plug adapter as shown, making sure that it is fully inserted and clicks into place on the AC power adapter terminals.

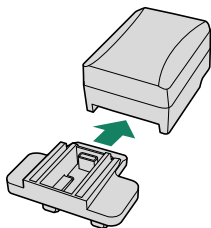


! The supplied plug adapter is for use exclusively with the AC-5VG AC power adapter. Do not use it with other devices.

The shape of the plug adapter varies with the country of sale.

2 Charge the battery.

Connect the camera to the supplied AC power adapter using the supplied USB cable. Then plug the AC power adapter into an indoor power outlet.

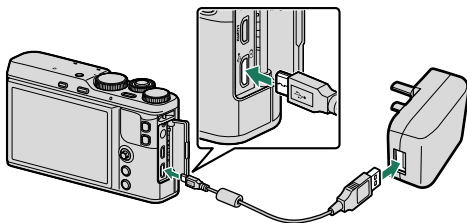


! Connect the cable to the camera's Micro USB (Micro-B) connector. Be sure the connectors are in the correct orientation and then insert them fully.

Charge Status

The indicator lamp shows battery charge status as follows:

Indicator lamp	Battery status
On	Battery charging.
Off	Charging complete.
Blinks	Battery fault.

 The battery will not charge while the camera is on.

The supplied AC power adapter is compatible with power supplies of 100 to 240 V (a plug adapter may be needed for overseas use).

Do not affix labels or other objects to the battery. Failure to observe this precaution could make it impossible to remove the battery from the camera.

Do not short the battery terminals. The battery could overheat.

Read the cautions in “The Battery and Power Supply”.

Use only battery chargers designated for use with the battery. Failure to observe this precaution could result in product malfunction.

Do not remove the labels from the battery or attempt to split or peel the outer casing.

The battery gradually loses its charge when not in use. Charge the battery one or two days before use. If the battery fails to hold a charge, it has reached the end of its charging life and must be replaced.


Unplug the AC power adapter from the power outlet when it is not in use.

Remove dirt from the battery terminals with a clean, dry cloth. Failure to observe this precaution could prevent the battery from charging.

Charging times may increase at very low or very high temperatures.

Charging via Computer

The battery can be charged by connecting the camera to a computer. Connect the supplied USB cable as shown, making sure the connectors are fully inserted.

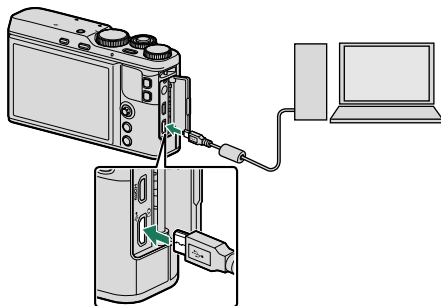



- The battery will not charge while the camera is on.
- Connect the cable to the camera's Micro USB (Micro-B) connector.
- Connect the camera directly to the computer; do not use a USB hub or keyboard.
- Charging stops if the computer enters sleep mode; to resume charging, activate the computer and disconnect and reconnect the USB cable.
- Charging may not be supported depending on the model of computer, computer settings, and the computer's current state.



Turning the Camera On and Off


Use the **ON/OFF** button to turn the camera on and off.

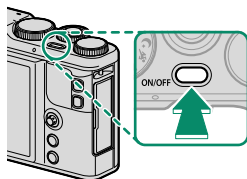
Press the **ON/OFF** button once to turn the camera on and again to turn it off.



 Fingerprints and other marks on the lens can affect pictures and the view through the lens in the camera display. Keep the lens clean.

 Press the  button to start playback. Press the shutter button halfway to return to shooting mode.


The camera will turn off automatically if no operations are performed for the length of time selected for  **POWER MANAGEMENT** > **AUTO POWER OFF**.






Selecting **HIGH PERFORMANCE** for  **POWER MANAGEMENT** reduces startup time.

Checking the Battery Level

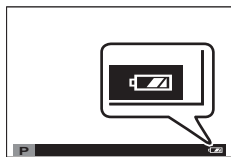After turning the camera on, check the battery level in the display.


Battery level is shown as follows:



Indicator	Description
 (white)	Battery partially discharged.
 (white)	Battery about two-thirds charged.
 (white)	Battery about one-third charged. Charge as soon as possible.
 (red)	Low battery. Charge battery.
 (blinks red)	Battery exhausted. Turn camera off and recharge battery.


Basic Setup

When you turn the camera on for the first time, you can choose a language and set the camera clock. At default settings, you can also pair the camera with a smartphone or tablet so that you can later synchronize the clocks or download pictures. Follow the steps below when turning the camera on for the first time.

 If you intend to pair the camera with a smartphone or tablet, install and launch the latest version of the FUJIFILM Camera Remote App on the smart device before proceeding. For more information, visit: http://app.fujifilm-dsc.com/en/camera_remote/


1 Turn the camera on.

A language-selection dialog will be displayed.

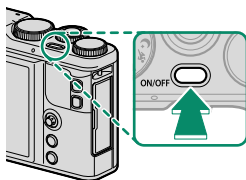


2 Choose a language.

Highlight a language using the focus stick (focus lever, ①) and press **MENU/OK** (②).

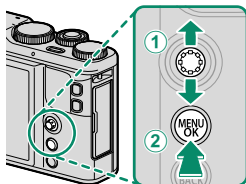

3 Pair the camera with the smartphone or tablet.


Press **MENU/OK** to pair the camera with a smartphone or tablet running the FUJIFILM Camera Remote app.

 To skip pairing, press **DISP/BACK**.





4 Check the time.


When pairing is complete, you will be prompted to set the camera clock to the time reported by the smartphone or tablet. Check that the time is correct.

 To set the clock manually, press **DISP/BACK** (📖 37).




5 Synchronize the camera settings with the settings configured on your smartphone or tablet.

 The option selected can be changed at any time using  **CONNECTION SETTING > Bluetooth SETTINGS**.

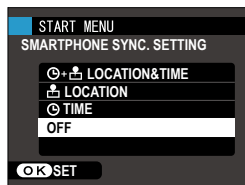

6 Set the clock.

Press **MENU/OK** to set the camera clock to the time reported by the smartphone or tablet and exit to shooting mode.


 If the battery is removed for an extended period, the camera clock will be reset and the language-selection dialog will be displayed when the camera is turned on.

Skipping the Current Step

Press **DISP/BACK** to skip the current step. A confirmation dialog will be displayed; select **NO** to avoid repeating any steps you skipped the next time the camera is turned on.


Choosing a Different Language

To change the language:

- 1 Display language options.**
Display the setup menu and select  言語/LANG..
- 2 Choose a language.**
Highlight the desired option and press **MENU/OK**.

Changing the Time and Date

To set the camera clock:

- 1 Display DATE/TIME options.**
Display the setup menu and select  DATE/TIME.
- 2 Set the clock.**
Press the focus stick (focus lever) left or right to highlight the year, month, day, hour, or minute and press up or down to change. Press **MENU/OK** to set the clock.

Basic Photography and Playback


3


Taking Photographs


This section explains basic photography.


1 Select **SR+** mode.

Rotate the mode dial to **SR+** (ADVANCED SR AUTO). The following information will be displayed in the LCD monitor.

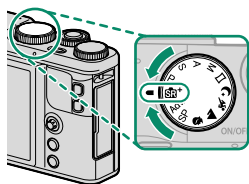


- 1 **Scene:** The camera automatically selects the appropriate scene.
- 2 **The  Icon:** Shows that the camera is focusing on the subjects' eyes.

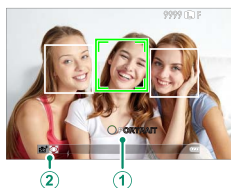


 In **SR+** mode, the camera continuously adjusts focus and searches for eyes, increasing the drain on the battery; in addition, the sound of the camera focusing may be audible.

2 Ready the camera.

Hold the camera steady with both hands and brace your elbows against your sides. Shaking or unsteady hands can blur your shots.

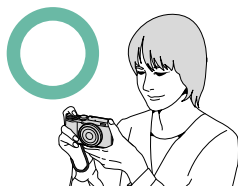


To prevent pictures that are out of focus or too dark (underexposed), keep your fingers and other objects away from the lens, flash, and AF-assist illuminator.

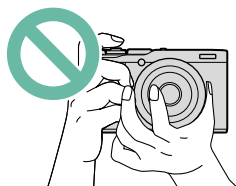


3 Frame the picture.

4 Focus.

Press the shutter button halfway to focus.

 If the subject is poorly lit, the AF-assist illuminator may light.

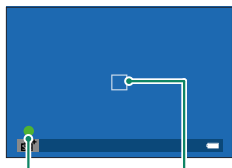

Focus
indicator

Focus frame

If the camera is able to focus, it will beep twice and focus area and focus indicator will glow green. Focus and exposure will lock while the shutter button is pressed halfway.


If the camera is unable to focus, the focus frame will turn red, **!AF** will be displayed, and the focus indicator will blink white.


5 Shoot.

Smoothly press the shutter button the rest of the way down to take the picture.



Viewing Pictures

Pictures can be viewed in the LCD monitor.

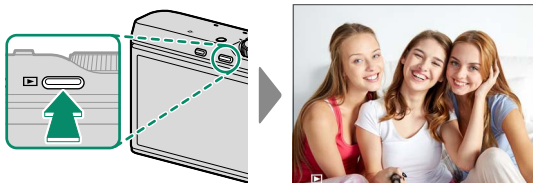To view pictures full frame, press .




Additional pictures can be viewed by pressing the focus stick (focus lever) left or right or rotating the front command dial. Press the focus stick or rotate the dial right to view pictures in the order recorded, left to view pictures in reverse order. Keep the focus stick pressed to scroll rapidly to the desired frame.

 Pictures taken using other cameras are marked with a  ("gift image") icon to warn that they may not display correctly and that playback zoom may not be available.




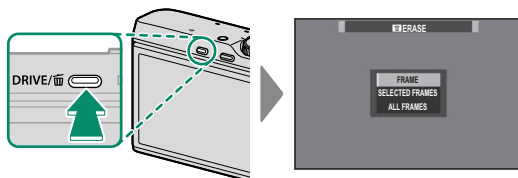
Deleting Pictures

Use the  button to delete pictures.




Deleted pictures cannot be recovered. Copy important pictures to a computer or other storage device before proceeding.

- 1 With a picture displayed full frame, press the  button and select **FRAME**.



- 2 Press the focus stick (focus lever) left or right to scroll through pictures and press **MENU/OK** to delete (a confirmation dialog is not displayed). Repeat to delete additional pictures.



Protected pictures cannot be deleted. Remove protection from any pictures you wish to delete ( 139).

Pictures can also be deleted by  **ERASE** from playback menu ( 136).

Movie Recording and Playback


4



Recording Movies

This section describes how to film movies in auto mode.

- 1 Press the **DRIVE** button and select **MOVIE** from the list of drive mode options.

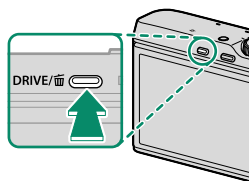

- 2 Press the shutter button to start recording. A recording indicator (●) and the time remaining are displayed while recording is in progress.



- 3 Press the button again to end recording. Recording ends automatically when the maximum length is reached or the memory card is full.



Use a memory card with a UHS speed class of 3 or better when recording movies.

Touch zoom is not available during movie recording.

The area recorded when **ON** is selected for **DIGITAL IMAGE STABILIZER** is smaller than that shown in the monitor.


Sound is recorded via the built-in microphone or an optional external microphone. Do not cover the microphone during recording. Note that the microphone may pick up lens noise and other sounds made by the camera during recording.

Vertical or horizontal streaks may appear in movies containing very bright subjects. This is normal and does not indicate a malfunction.





 The indicator lamp lights while recording is in progress.

Exposure compensation can be adjusted by up to ± 2 EV during movie recording.

Recording may be unavailable at some settings, while in other cases settings may not apply during recording.

External microphones can be used ( 171).

Adjusting Movie Settings


- Adjust movie settings in the  **MOVIE SET-UP** menu.
- The movie type, frame size, and frame rate can be selected using  **MOVIE SET-UP > MOVIE MODE**.
- The AF-area mode for movie recording is selected using  **MOVIE SET-UP > AF MODE**; choose from **MULTI** and **AREA**.
- Focus mode is selected using  **MOVIE SET-UP > FOCUS MODE**; for continuous focus adjustment, select **CONTINUOUS AF** or choose **SINGLE AF** and enable Intelligent Face Detection. Intelligent Face Detection is not available in manual focus mode.

Depth of Field

Manual aperture adjustment is available in shooting modes **A** and **M**; adjust aperture before recording begins. Choose low f-numbers to soften background details. The effect can be heightened by increasing the distance between your subject and the background.


Viewing Movies



View movies on the camera.

In full-frame playback, movies are identified by a  icon. Press the focus stick (focus lever) down to start movie playback.

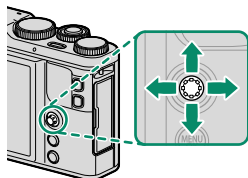



The following operations can be performed while a movie is displayed:





Focus stick (focus lever)	Full-frame playback	Playback in progress 	Playback paused 
Up	—	End playback	
Down	Start playback	Pause playback	Start/resume playback
Left/right	View other pictures	Adjust speed	Single frame rewind/advance

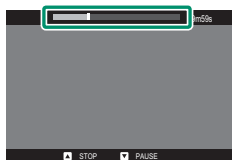Progress is shown in the display during playback.



 Do not cover the speaker during playback.

Sound is not played back if **OFF** is selected for  **SOUND & FLASH**.

 Press **MENU/OK** to pause playback and display volume controls. Press the focus stick (focus lever) up or down to adjust the volume; press **MENU/OK** again to resume playback. Volume can also be adjusted from the setup menu ( 148).

Playback Speed

Press the focus stick (focus lever) left or right to adjust playback speed during playback. Speed is shown by the number of arrows (▶ or ◀).

*Arrows*

Taking Photographs


5

Choosing a Shooting Mode

Choose a shooting mode according to the scene or type of subject.

SR⁺ ADVANCED SR AUTO


When the mode dial is rotated to SR⁺, the camera automatically optimizes settings to suit the scene.

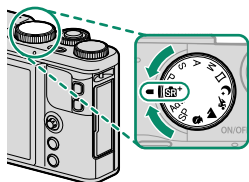


The camera automatically selects the appropriate scene.



Scene	Scene
AUTO	MACRO
PORTRAIT	NIGHT PORTRAIT
LANDSCAPE	BACKLIT PORTRAIT
NIGHT	


 The mode selected may vary with shooting conditions. If the mode and subject do not match, select mode **P** or choose **SP** and select a scene manually.

 Subjects detected by the camera are indicated by green frames; press the shutter button halfway to focus on the subject in the frame.


Program AE (P)

Let the camera choose shutter speed and aperture for optimal exposure. Other values that produce the same exposure can be selected with program shift.

Rotate the mode dial to P.

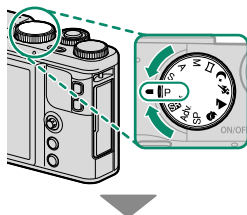


P will appear in the display.

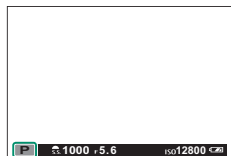

Program Shift

Rotate the front command dial to choose the desired combination of shutter speed and aperture (program shift).

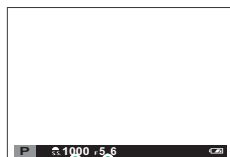

Shutter speed Aperture



Program shift is not available if:

- **AUTO** is selected for **D-Ring DYNAMIC RANGE**
- Movie recording is in progress




To cancel program shift, turn the camera off.

Shutter-Priority AE (S)

Choose a shutter speed and let the camera adjust aperture for optimal exposure.


- 1 Rotate the mode dial to S.

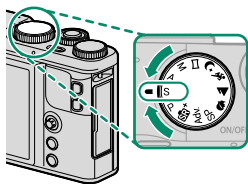

S will appear in the display.




- 2 Use the front command dial to choose a shutter speed.

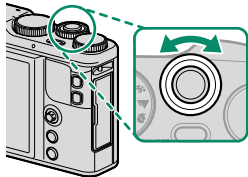



! If the correct exposure cannot be achieved at the selected shutter speed, aperture will be displayed in red.


Long Time-Exposures

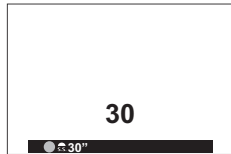A count-down timer is displayed during long time-exposures.



 Use of a tripod is recommended to prevent blur caused by the camera moving during the exposure.


To reduce “noise” (mottling) in long time-exposures, select **ON** for  **LONG EXPOSURE NR**. Note that this may increase the time needed to record images after shooting.

You may find it helpful to use a remote release for long time-exposures ( 171).

Aperture-Priority AE (A)

Choose an aperture and let the camera adjust shutter speed for optimal exposure.


- 1 Rotate the mode dial to **A**.

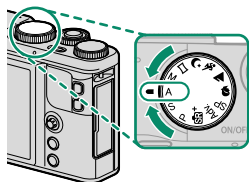

A will appear in the display.




- 2 Use the front command dial to choose an aperture.

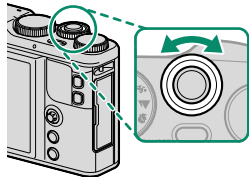

! If the correct exposure cannot be achieved at the selected aperture, shutter speed will be displayed in red.

Previewing Depth of Field


When **PREVIEW DEPTH OF FIELD** is assigned to a function button, pressing the button displays a  icon and stops aperture down to the selected setting, allowing depth of field to be previewed when the view through the lens appears in the display.




Manual Exposure (M)

Alter exposure from that selected by the camera.


- 1 Rotate the mode dial to M.

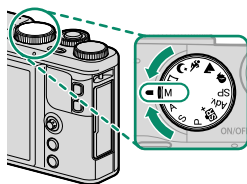


M will appear in the display.

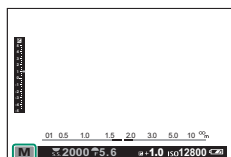


- 2 Rotate the rear command dial to choose a shutter speed and the front command dial to choose the aperture.

 The manual exposure display includes an exposure indicator that shows the amount the picture would be under- or over-exposed at current settings.

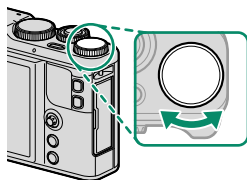

Shutter speed

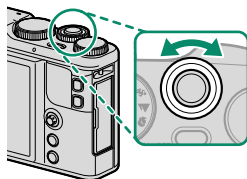

Aperture


Exposure Preview


To preview exposure in the LCD monitor, select **ON** for  **SCREEN SET-UP > PREVIEW EXP. IN MANUAL MODE**. Select **OFF** when using the flash or on other occasions on which exposure may change when the picture is taken.



Bulb (B)


For bulb photography, rotate the rear command dial to select a shutter speed of **BULB**.

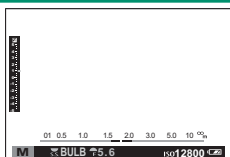


 Use of a tripod is recommended to prevent blur caused by the camera moving during the exposure.

The shutter will remain open for up to 60 minutes, or for 1 second when the electronic shutter is used.

A count-down timer will be displayed while the exposure is in progress.


To reduce “noise” (mottling) in long time-exposures, select **ON** for  **LONG EXPOSURE NR**. Note that this may increase the time needed to record images after shooting.

You may find it helpful to use a remote release for long time-exposures ( 171).


☐ PANORAMA

Follow an on-screen guide to create a panorama.

- 1 Rotate the mode dial to ☐ (PANORAMA).

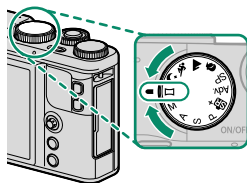

- 2 To select the size of the angle through which you will pan the camera while shooting, press the focus stick (focus lever) left. Highlight a size and press **MENU/OK**.
- 3 Press the focus stick right to view a choice of pan directions. Highlight a pan direction and press **MENU/OK**.
- 4 Press the shutter button all the way down to start recording. There is no need to keep the shutter button pressed during recording.
- 5 Pan the camera in the direction shown by the arrow. Shooting ends automatically when the camera is panned to the end of the guides and the panorama is complete.

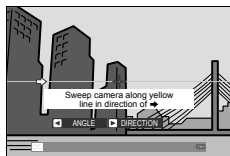

For Best Results

Prop your elbows against your sides and move the camera slowly in a small circle at a steady speed, keeping the camera parallel or at right angles to the horizon and being careful only to pan in the direction shown by the guides. Use a tripod for best results. If the desired results are not achieved, try panning at a different speed.



Shooting ends if the shutter button is pressed all the way down during shooting. No panorama may be recorded if the shutter button is pressed before the panorama is complete.


Panoramas are created from multiple frames; exposure for the entire panorama is determined by the first frame. The camera may in some cases record an greater or lesser angle than selected or be unable to stitch the frames together perfectly. The last part of the panorama may not be recorded if shooting ends before the panorama is complete.

Shooting may be interrupted if the camera is panned too quickly or too slowly. Panning the camera in a direction other than that shown cancels shooting.

The desired results may not be achieved with moving subjects, subjects close to the camera, unvarying subjects such as the sky or a field of grass, subjects that are in constant motion, such as waves and waterfalls, or subjects that undergo marked changes in brightness. Panoramas may be blurred if the subject is poorly lit.

Viewing Panoramas

In full-frame playback, you can use the rear command dial to zoom panoramas in or out. Alternatively, you can play the panorama back using the focus stick (focus lever).

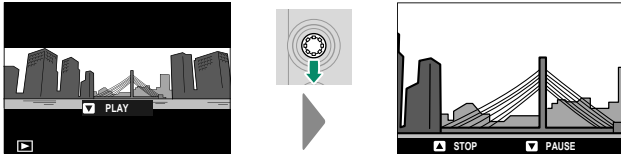


Press the focus stick down to start playback and press again to pause. Press the focus stick left or right to change the pan direction while playback is in progress or to scroll the panorama while playback is paused; vertical panoramas will scroll vertically, horizontal panoramas horizontally. To exit to full-frame playback, press the focus stick up.






SP SCENE POSITION / / / /

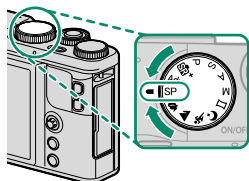
The camera offers a choice of “scenes,” each adapted to particular shooting conditions or a specific type of subject.


- 1 Rotate the mode dial to **SP (SCENE POSITION)**.




The following scenes can be selected directly using the mode dial:

Scene	Description
 PORTRAIT ENHANCER (ON/OFF)	Choose for a smooth skin effect when shooting portraits. If ON is selected for  TOUCH SCREEN SETTING , you can choose the portrait enhancement level using touch controls.
 LANDSCAPE	Choose for daylight shots of buildings and landscapes.
 SPORT	Choose when photographing moving subjects.
 NIGHT	Choose for poorly lit twilight or night scenes.

- 2 Press **MENU/OK** to display the shooting menu and select  **SCENE POSITION**.

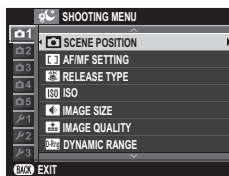


A menu of scene mode options will be displayed.

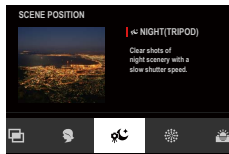





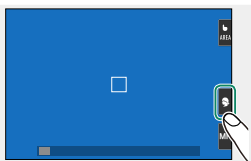








Scene mode options can also be displayed by tapping the scene position icon in the shooting display.




3 Highlight one of the following options and press **MENU/OK**.


Scene	Description
 PORTRAIT	Choose for portraits.
 NIGHT (TRIPOD)	Choose this mode for slow shutter speeds when shooting at night.
 FIREWORKS	Slow shutter speeds are used to capture the expanding burst of light from a firework.
 SUNSET	Choose this mode to record the vivid colors in sunrises and sunsets.
 SNOW	Choose for crisp, clear shots that capture the brightness of scenes dominated by shining white snow.
 BEACH	Choose for crisp, clear shots that capture the brightness of sunlit beaches.
 PARTY	Capture indoor background lighting under low-light conditions.
 FLOWER	Effective for taking more vivid shots of flowers.
 TEXT	Take clear pictures of text or drawings in print.
 MULTIPLE EXPOSURE	Create a photograph that combines two exposures ( 64).

Multiple Exposures

Create a photograph that combines two exposures.



- 1 Select  **MULTIPLE EXPOSURE** in the scene position menu.
- 2 Take the first shot.
- 3 Press **MENU/OK**. The first shot will be shown superimposed on the view through the lens and you will be prompted to take the second shot.

 To return to Step 2 and retake the first shot, press the focus stick (focus lever) left. To save the first shot and exit without creating a multiple exposure, press **DISP/BACK**.




- 4 Take the second shot, using the first frame as a guide.
- 5 Press **MENU/OK** to create the multiple exposure, or press the focus stick left to return to Step 4 and retake the second shot.




Adv. ADVANCED FILTER

Take photos with filter effects.


- 1 Rotate the mode dial to **Adv. (ADVANCED FILTER)**.

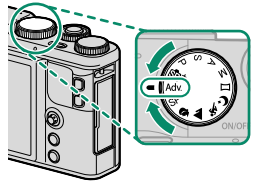


- 2 Press **MENU/OK** to display the shooting menu and select **Adv. ADVANCED FILTER**.

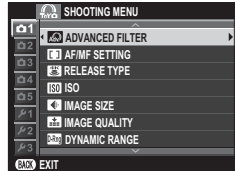



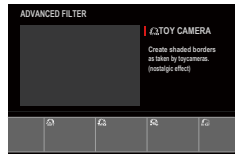



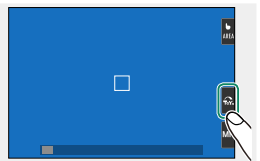












A menu of advanced filter options will be displayed.



- Advanced filter options can also be displayed by tapping the advanced filter icon in the shooting display.



3 Highlight one of the following options and press **MENU/OK**.

Filter	Description
 TOY CAMERA	Choose for a retro toy camera effect.
 POP COLOR	Create high-contrast images with saturated colors.
 HIGH-KEY	Create bright, low-contrast images.
 LOW-KEY	Create uniformly dark tones with few areas of emphasized highlights.
 FISH-EYE	Create a distorting effect of a fisheye lens.
 DYNAMIC TONE	Dynamic tone expression is used for a fantasy effect.
 HDR ART	Create artistic effect by emphasizing tone reproduction and dynamic range.
 MINIATURE	The tops and bottoms of pictures are blurred for a diorama effect.
 CROSS SCREEN	Create a star pattern where lines radiate out from bright objects. The effects of the cross screen filter can be viewed after shooting.
 RICH & FINE	Add a rich & fine effect recommend for table-top photography.
 MONOCHROME(NIR)	Monochrome photography as taken by Near-infrared camera.
 PARTIAL COLOR (RED)	Areas of the image that are the selected color are recorded in that color. All other areas of the image are recorded in black-and-white.
 PARTIAL COLOR (ORANGE)	
 PARTIAL COLOR (YELLOW)	
 PARTIAL COLOR (GREEN)	
 PARTIAL COLOR (BLUE)	
 PARTIAL COLOR (PURPLE)	
 FOG REMOVE	Create clearer image by removing fog factor.
 SOFT FOCUS	Create a look that is evenly soft throughout the whole image.




Depending on the subject and camera settings, images may in some cases be grainy or vary in brightness or hue.


Exposure Compensation

Adjust exposure.



Rotate the rear command dial to adjust exposure.

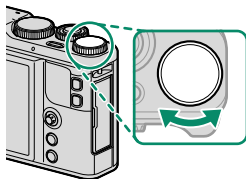

 The amount of compensation available varies with the shooting mode.

 


The Digital Teleconverter

Use the digital teleconverter to further magnify the image while processing it for sharp, high-resolution results.



- 1 Assign **DIGITAL TELE-CONV.** to the control ring.
- 2 Choose the zoom angle using the control ring.



Standard (28 mm *)



35 mm *



50 mm *



* 35 mm format equivalent

- 3 Take pictures at the selected zoom angle.



DIGITAL TELE-CONV. can also be accessed from the shooting menu (📖 125).

Image quality drops slightly at **DIGITAL TELE-CONV.** settings of 35 and 50mm.


The digital teleconverter may be unavailable in some modes.



Continuous Shooting (Burst Mode)



Capture motion in a series of pictures.

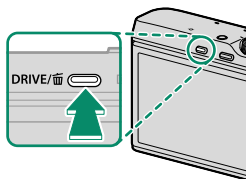- 1 Press the **DRIVE** button to display drive mode options.




- 2 Press the focus stick (focus lever) up or down to highlight **CONTINUOUS** (70) or **4K** (71).
- 3 Press the focus stick left or right to choose the frame rate (**HIGH** or **LOW**) or 4K recording mode (**4K BURST** or **MULTI FOCUS MODE**).
- 4 Press **MENU/OK** to select.
- 5 Take pictures.

CONTINUOUS

The camera takes pictures at the selected frame rate ( **HIGH** or  **LOW**) while the shutter button is pressed. Shooting ends when the shutter button is released or the memory card is full.



 If file numbering reaches 999 before shooting is complete, the remaining pictures will be recorded to a new folder.


Burst shooting may not begin if the space available on the memory card is insufficient.

Frame rate varies with the subject, shutter speed, sensitivity, and focus mode. Frame rates may slow and recording times increase as more shots are taken. The flash cannot be used.

4K

Shoot a burst of 4K pictures and choose which shots to save.

With **4K** highlighted in the drive mode menu, press the focus stick (focus lever) left or right to highlight **4K BURST** or **MULTI FOCUS MODE**.

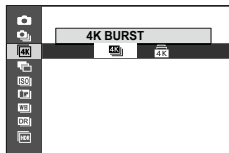

⚠ Use a memory card with a UHS speed class of 3 or better.

Selecting 4K burst or multi-focus mode reduces the picture angle.

4K BURST


Choose the frames you wish to save from a thumbnail list.




- 1 Shoot a burst of pictures with **4K** > **4K BURST** selected for drive mode.

🔧 The function performed by the shutter button can be selected using the **RELEASE TYPE** option in the shooting menu.


- 2 In full-frame playback, display a picture taken with **4K BURST**. Press the focus stick (focus lever) down to view the pictures in the burst as a thumbnail list.

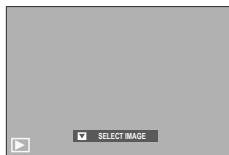


- 3 Press the focus stick left or right to highlight frames and press the **Q** button to save the highlighted frame as a separate image.

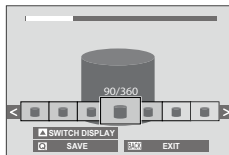

4 After saving the desired frames, press **DISP/BACK** to exit the thumbnail list.

 If the subject moves during shooting, the image may be distorted, while banding may occur in images taken under flickering or transient light sources such as fluorescent lights.

 To prevent motion blur, choose mode **S** or **M** and select a fast shutter speed.



If **CONTINUOUS** is selected for  **SCREEN SET-UP > IMAGE DISP**, the most recent picture will be displayed when shooting ends, allowing you to select the frames to be saved without exiting to playback mode.


The flash cannot be used.


MULTI FOCUS MODE

Take a series of pictures at different focus distance and create a composite image from selected shots.



1 Shoot a burst of pictures with  **4K >  MULTI FOCUS MODE** selected for drive mode.


 The camera will shoot a burst of pictures each time the shutter button is pressed. There is no need to keep the shutter button pressed during shooting.

2 In full-frame playback, display a picture taken with  **MULTI FOCUS MODE**.



- 3** Press the focus stick (focus lever) down and choose the shots that will be used to create the composite image.

Option	Description
SELECT FOCUS	The area in focus in any given frame is indicated by a square (□). Highlight a focus point using the focus stick and press the Q button to create a composite image from the frames for which the selected area is in focus.
AUTO	The camera creates a composite image from the areas that are in focus.
SELECT RANGE	Create a composite image from the frames in which a selected area is in focus.

 A tripod is recommended; if no tripod is available, hold the camera steady during shooting. If the subject moves during shooting, the image may be distorted or unnatural, while banding may occur in images taken under flickering or transient light sources such as fluorescent lights. The process of creating a composite image reduces the angle of view. The desired results may not be achieved with moving subjects, distant landscapes, or subjects that lack depth.

 If **CONTINUOUS** is selected for  **SCREEN SET-UP > IMAGE DISP.**, the most recent picture will be displayed when shooting ends, allowing you to create a composite image without exiting to playback mode.

The flash cannot be used.




Bracketing

Automatically vary settings over a series of pictures.



- 1 Press the **DRIVE** button to display drive mode options.

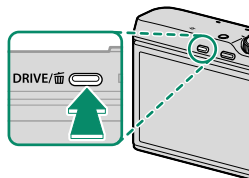

- 2 Press the focus stick (focus lever) up or down to highlight one of the following:


Option		Option	
AE BKT	75	WHITE BALANCE BKT	75
ISO BKT	75	DYNAMIC RANGE BKT	76
FILM SIMULATION BKT	75	HDR	76


- 3 Press the focus stick left or right to highlight the desired bracketing settings.

Bracketing settings for AE and film simulation bracketing are selected using the **AE BKT SETTING** and **FILM SIMULATION BKT** options in the shooting menu.

- 4 Press **MENU/OK** to select.
- 5 Take pictures.

AE BKT


Use  **AE BKT SETTING** to choose the bracketing amount and number of shots. Each time the shutter button is pressed, the camera will take the specified number of shots: one using the metered value for exposure and the others over- or under-exposed by multiples of the selected bracketing amount.

 Regardless of the bracketing amount, exposure will not exceed the limits of the exposure metering system.

ISO BKT

Select a bracketing amount (± 1 , $\pm 2/3$, or $\pm 1/3$). Each time the shutter is released, the camera will take a picture at the current sensitivity and process it to create two additional copies, one with sensitivity raised and the other with sensitivity lowered by the selected amount.

FILM SIMULATION BKT


Each time the shutter is released, the camera takes one shot and processes it to create a total of three copies with different film simulation settings, chosen using the  **FILM SIMULATION BKT** option in the shooting menu.

WHITE BALANCE BKT

Select a bracketing amount (± 1 , ± 2 , or ± 3). Each time the shutter is released, the camera takes one shot and processes it to create three copies: one at the current white balanced setting, one with fine-tuning increased by the selected amount, and another with fine-tuning decreased by the selected amount.


DR DYNAMIC RANGE BKT

Each time the shutter button is pressed, the camera takes three shots with different dynamic ranges: 100% for the first, 200% for the second, and 400% for the third.

 While dynamic range bracketing is in effect, sensitivity will be restricted to a minimum of ISO 800 (or to a minimum of ISO 200 to 800 when an auto option is selected for sensitivity); the sensitivity previously in effect is restored when bracketing ends.

HDR

Each time the shutter button is pressed, the camera takes multiple shots at different exposures and combines them into a single high-dynamic-range image, reducing loss of detail in highlights and shadows. Choose the amount the camera varies exposure from **AUTO**, **1.0 EV**, **1.5 EV**, **2.0 EV**, **2.5 EV**, and **3.0 EV**.

 Keep the camera steady. If the camera is moved or the subject changes during shooting, the shots may be recorded separately instead of being combined into a single image. The camera may fail to record an image if the subject moves during shooting.


 The camera displays the combined image after shooting. Press **MENU/OK** to save the image or **DISP/BACK** to end HDR shooting without recording the image.

Autofocus

Take pictures using autofocus.



- 1 Use **[Q] AF/MF SETTING > FOCUS MODE** to choose a focus mode (📖 78).
- 2 Use **[Q] AF/MF SETTING > AF MODE** to choose an AF mode (📖 80).
- 3 Choose the position and size of the focus frame (📖 82).

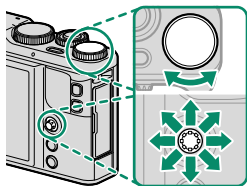



- 4 Take pictures.







For information on the autofocus system, visit:
<http://fujifilm-x.com/af/en/index.html>

Focus Mode

Use the **FOCUS MODE** option in the  **AF/MF SETTING** menu to choose how the camera focuses.


- 1 Press **MENU/OK** to display the menus.
- 2 Select  **AF/MF SETTING** > **FOCUS MODE** in the shooting menu.
- 3 Choose from the following options:

Mode	Description
 MANUAL FOCUS	Focus manually using the control ring. Choose for manual control of focus or in situations in which the camera is unable to focus using autofocus ( 88).
 CONTINUOUS AF	Focus is continually adjusted to reflect changes in the distance to the subject while the shutter button is pressed halfway. Use for subjects that are in motion. Eye-detection AF is not available.
 SINGLE AF	Focus locks while the shutter button is pressed halfway. Choose for stationary subjects.

 If **ON** is selected for  **AF/MF SETTING** > **PRE-AF**, focus will be adjusted continuously in modes  and  even when the shutter button is not pressed.

The Focus Indicator

The focus indicator turns green when the subject is in focus and blinks white when the camera is unable to focus. Brackets (" [] ") indicate that the camera is focusing and are displayed continuously in mode **MF-L**. **MF** is displayed in manual focus mode.

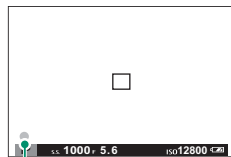

Focus indicator


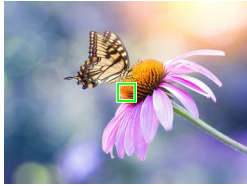

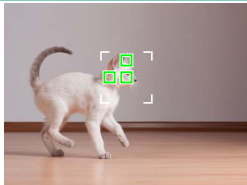



Autofocus Options (AF Mode)


Choose how the camera focuses in modes **[AF-S]** and **[AF-C]**.


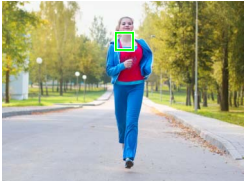



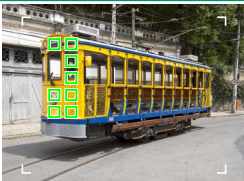





- 1 Press **MENU/OK** and go to the shooting menu.
- 2 Select **[AF] AF/MF SETTING > AF MODE**.
- 3 Choose an AF mode.

How the camera focuses depends on the focus mode.

Focus Mode **[AF-S]** (SINGLE AF)

Option	Description	Sample image
 SINGLE POINT	Camera focuses on subject in selected focus point. Use for pin-point focus on selected subject.	
 ZONE	Camera focuses on subject in selected focus zone. Focus zones include multiple focus points, making it easier to focus on subjects in motion.	
 WIDE	Camera focuses automatically on high-contrast subjects; display shows areas in focus.	
 ALL	Rotate the rear command dial in the focus-point selection display (83, 84) to cycle through AF modes in the following order: [AF-S] SINGLE POINT , [AF-C] ZONE , and [AF-C] WIDE .	

Focus Mode  (CONTINUOUS AF)


Option	Description	Sample image
 SINGLE POINT	Focus tracks subject at selected focus point. Use for subjects moving toward or away from camera.	
 ZONE	Focus tracks subject in selected focus zone. Use for subjects that are moving fairly predictably.	
 TRACKING	Focus tracks subjects moving through wide area of frame.	
 ALL	Rotate the rear command dial in the focus-point selection display ( 83, 84) to cycle through AF modes in the following order:  SINGLE POINT ,  ZONE , and  TRACKING .	

Focus-Point Selection


Choose a focus point for autofocus.


Viewing the Focus-Point Display

- 1 Press the center of the focus stick (focus lever) to view the focus-point display.

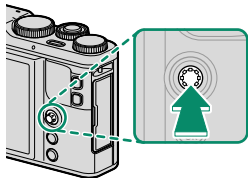


- 2 Use the focus stick to position the focus frame over the desired focus point.

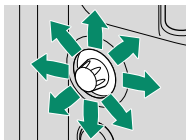

 Focus-area selection can also be accessed via the shooting menu.

Selecting a Focus Point

Use the focus stick (focus lever) to choose the focus point and the rear command dial to choose the size of the focus frame. The procedure varies with the option selected for AF mode.

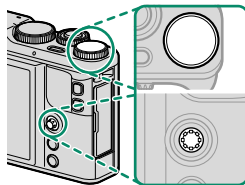


AF mode	Focus stick		Rear command dial
	Tilt	Press	Rotate
	Select focus point	Select center focus point	Choose from 5 frame sizes
			Choose from 3 frame sizes
			—




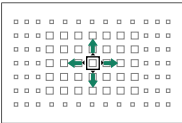
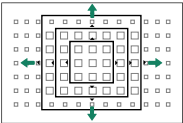
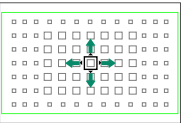
Manual focus-point selection is not available when **WIDE/TRACKING** is selected in focus mode .

If **ALL** is selected for **AF MODE**, you can rotate the rear command dial in the focus-point selection display (84) to cycle through AF modes in the following order: **SINGLE POINT** (5 frame sizes), **ZONE** (3 frame sizes), and either **WIDE** (focus mode) or **TRACKING** (focus mode)

The Focus-Point Display


The focus-point display varies with the option selected for AF mode.

 Focus frames are shown by small squares (□), focus zones by the large squares.


AF mode		
 SINGLE POINT	 ZONE	 WIDE/TRACKING
		
Choose single focus point.	Choose from zones with 7 × 7, 5 × 5, or 3 × 3 focus points.	Position focus frame over subject and press MENU/OK .


Available Focus Points

TTL contrast-detect AF offers more focus points (①) than intelligent hybrid AF (②), which combines phase-detection with TTL contrast-detect AF.

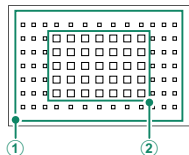


Burst Mode Focus-Frame Selection


When continuous high-speed (H) is selected for drive mode, the number of focus frames available in focus mode  drops.

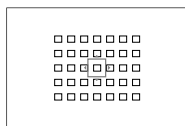

Single point

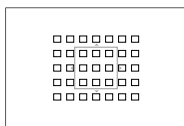

Zone

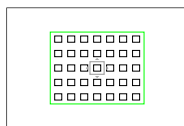

Tracking



Autofocus

Although the camera boasts a high-precision autofocus system, it may be unable to focus on the subjects listed below.

- Very shiny subjects such as mirrors or car bodies.
- Subjects photographed through a window or other reflective object.
- Dark subjects and subjects that absorb rather than reflect light, such as hair or fur.
- Insubstantial subjects, such as smoke or flame.
- Subjects that show little contrast with the background.
- Subjects positioned in front of or behind a high-contrast object that is also in the focus frame (for example, a subject photographed against a backdrop of highly contrasting elements).

Checking Focus


To zoom in for precise focus, press the control to which **FOCUS CHECK** is currently assigned. Press the control a second time to change the zoom ratio and again to cancel zoom. The zoom display is centered on the current focus area. The focus area can be selected using focus-point selection. At default settings, **FOCUS CHECK** is assigned to the **Fn2** (function 2) button.

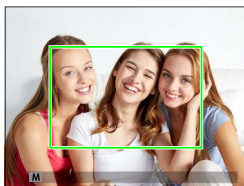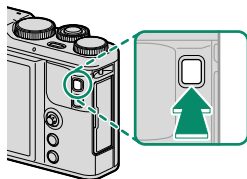

Normal display



Focus zoom

 In focus mode **MF-S**, zoom can be adjusted by rotating the rear command dial. Focus zoom is not available in focus mode **MF-L** or when **AF/MF SETTING > PRE-AF** is on or an option other than **SINGLE POINT** is selected for **AF MODE**. Use **⌚ BUTTON SETTING > FUNCTION (Fn) SETTING** to change the control to which **FOCUS CHECK** is assigned.

Focus/Exposure Lock


Compose photographs with off-center subjects.



- 1 Focus:** Position the subject in the focus frame and press the shutter button halfway to lock focus and exposure. Focus and exposure will remain locked while the shutter button is pressed halfway (AF/AE lock).





- 2 Recompose:** Keep the shutter button pressed halfway.

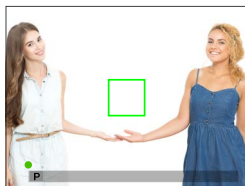

- 3 Shoot:** Press the button all the way down.

AE/AF LOCK

If **AE-LOCK**, **AF-LOCK**, or **AE/AF LOCK** is assigned to the **Fn** button, the focus and/or exposure will lock while the **Fn** button is pressed and remain locked even when the shutter button is pressed halfway.

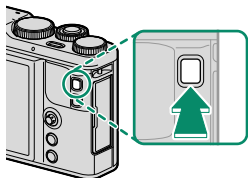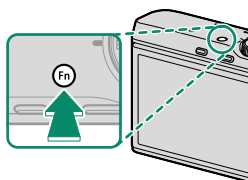


Manual Focus

Adjust focus manually.




- 1 Select **MANUAL FOCUS** for **AF/MF SETTING > FOCUS MODE**.

MF will appear in the display.

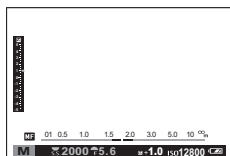

 - 2 Focus manually using the control ring. Rotate the ring left to reduce the focus distance, right to increase.



- 3 Take pictures.

Use the **FOCUS RING** option in the setup menu to reverse the direction of rotation of the control ring.


INSTANT AF can be assigned to a function button, allowing the button to be used to focus on the subject in the selected focus frame. Choose this option for quick focus. Use **BUTTON SETTING > FUNCTION (Fn) SETTING** to change the control to which **INSTANT AF** is assigned.

Checking Focus

A variety of options are available for checking focus in manual focus mode.

The Manual Focus Indicator

The manual focus indicator indicates how closely the focus distance matches the distance to the subject in the focus brackets. The white line indicates the distance to the subject in the focus area (in meters or feet according to the option selected for **SCREEN SET-UP > FOCUS SCALE UNITS** in the setup menu), the blue bar the depth of field, or in other words the distance in front of and behind the subject that appears to be in focus.

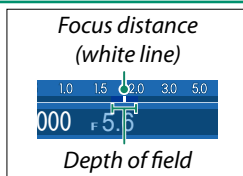


If both **AF DISTANCE INDICATOR** and **MF DISTANCE INDICATOR** are selected in the **SCREEN SET-UP > DISP. CUSTOM SETTING** list, depth of field can also be previewed using the depth-of-field indicator in the standard display. Use the **DISP/BACK** button to display standard indicators.

Focus Zoom

If **ON** is selected for **SCREEN SET-UP > FOCUS CHECK**, pressing the button to which **FOCUS CHECK** is assigned automatically zooms the display in so you can focus with greater precision. Press the control a second time to change the zoom ratio and again to cancel zoom. The zoom display is centered on the current focus area. The focus area can be selected using focus-point selection. At default settings, **FOCUS CHECK** is assigned to the **Fn2** (function 2) button.

Use **BUTTON SETTING > FUNCTION (Fn) SETTING** to change the control to which **FOCUS CHECK** is assigned.

Focus Peaking




 





Select **FOCUS PEAK HIGHLIGHT** for  **MF ASSIST** to highlight high-contrast outlines. When focusing, rotate the control ring until the subject is highlighted.

Using the Flash



Use the built-in flash for additional lighting when shooting at night or indoors under low light.



- 1 Press **MENU/OK** to display the shooting menu.
- 2 Highlight **FLASH SET-UP > FLASH MODE** in the shooting menu and press **MENU/OK** to view flash options.
- 3 Highlight one of the following options and press **MENU/OK**.

Mode	Description
AUTO (Auto flash)  RED EYE REDUCTION*	The flash fires when required. Recommended in most situations.
 FORCED FLASH  FORCED FLASH*	The flash fires whenever a picture is taken. Use for backlit subjects or for natural coloration when shooting in bright light.
 SLOW SYNCHRO  RED EYE & SLOW*	Capture both the main subject and the background under low light (note that brightly lit scenes may be overexposed).
 2ND CURTAIN SYNC.  2ND CURTAIN SYNC.*	The flash fires immediately before the shutter closes.
 COMMANDER	The built-in flash can be used to control optional remote flash units.
 SUPPRESSED FLASH	The flash does not fire even when the subject is poorly lit. A tripod is recommended.

* Red-eye removal is available in these modes when Intelligent Face Detection is active and red-eye removal is on. Red-eye removal minimizes “red-eye” caused when light from the flash is reflected from the subject’s retinas.

 If  is displayed when the shutter button is pressed halfway, the flash will fire when the photo is taken.


Except in commander mode, the flash may fire several times with each shot. Do not move the camera until shooting is complete.

WB White Balance

For natural colors, choose a white balance option that matches the light source.







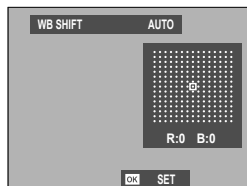





- 1 Press **MENU/OK** to display the shooting menu.
- 2 Highlight **WB WHITE BALANCE** in the shooting menu and press **MENU/OK** to view white balance options.
- 3 Highlight a white balance option.
 - Press **MENU/OK** to view a **WB SHIFT** display where white balance can be fine-tuned using the focus stick (focus lever).
 - Press **DISP/BACK** to select the highlighted option and exit without applying fine-tuning.



   
WHITE BALANCE


The following white balance options are available.


Option	Description
AUTO	White balance is adjusted automatically.
	Measure a value for white balance.
	Choose a color temperature.
	For subjects in direct sunlight.
	For subjects in the shade.
	Use under "daylight" fluorescent lights.
	Use under "warm white" fluorescent lights.
	Use under "cool white" fluorescent lights.
	Use under incandescent lighting.
	Reduces the blue cast typically associated with underwater lighting.

 Results vary with shooting conditions. Play pictures back after shooting to check colors.

White balance is adjusted for flash lighting only in **AUTO** and  modes. Turn the flash off using other white balance options.

Custom White Balance


Choose  to adjust white balance for unusual lighting conditions. White balance measurement options will be displayed; frame a white object so that it fills the display and press the shutter button all the way down to measure white balance (to select the most recent custom value and exit without measuring white balance, press **DISP/BACK**, or press **MENU/OK** to select the most recent value and display the fine-tuning dialog).

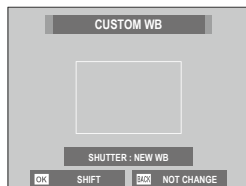

- If **"COMPLETED!"** is displayed, press **MENU/OK** to set white balance to the measured value.
- If **"UNDER"** is displayed, raise exposure compensation and try again.
- If **"OVER"** is displayed, lower exposure compensation and try again.

K: Color Temperature

Selecting **K** in the white balance menu displays a list of color temperatures; highlight a color temperature and press **MENU/OK** to select the highlighted option and display the fine-tuning dialog.

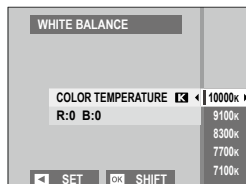

Color Temperature

Color temperature is an objective measure of the color of a light source, expressed in Kelvin (K). Light sources with a color temperature close to that of direct sunlight appear white; light sources with a lower color temperature have a yellow or red cast, while those with a higher color temperature are tinged with blue. You can match color temperature to the light source, or choose options that differ sharply from the color of the light source to make pictures “warmer” or “colder.”



Using the Self Timer

Use the timer for group- or self-portraits, to prevent blur caused by camera shake, or to release the shutter automatically when selected conditions are met.



- 1 Press **MENU/OK** to display the shooting menu.
- 2 Highlight **SELF-TIMER** in the shooting menu and press **MENU/OK**.
- 3 Highlight one of the following options and press **MENU/OK**.

Option		Option	
2 SEC	97	BUDDY	98
10 SEC	97	GROUP	99
FACE AUTO SHUTTER	97	OFF	—
SMILE	98		



Stand behind the camera when using the shutter button. Standing in front of the lens can interfere with focus and exposure.

The self-timer turns off automatically when the camera is turned off.





To stop the timer before the picture is taken, press **DISP/BACK**.

Selecting **FACE AUTO SHUTTER**, **SMILE**, **BUDDY**, or **GROUP** sets **AF/MF SETTING > FACE/EYE DETECTION SETTING** to **FACE ON/EYE OFF**. The original setting is restored when the self timer is turned off.

2 SEC/10 SEC

The shutter is released 2 or 10 seconds after the shutter button is pressed.


- 1 Highlight either of the following options in the self-timer menu and press **MENU/OK**.

Option	Description
 2 SEC	The shutter is released two seconds after the shutter button is pressed. Use to reduce blur caused by the camera moving when the shutter button is pressed. The self-timer lamp blinks as the timer counts down.
 10 SEC	The shutter is released ten seconds after the shutter button is pressed. Use for photographs in which you wish to appear yourself. The self-timer lamp blinks immediately before the picture is taken.


- 2 Press the shutter button all the way down to start the timer. A count-down timer will appear in the display; the picture will be taken when the timer expires.

FACE AUTO SHUTTER

The picture will be taken when the camera detects a portrait subject facing the lens.


- 1 Highlight  (**FACE AUTO SHUTTER**) in the self-timer menu and press **MENU/OK**.
- 2 Frame a portrait subject in the display. The camera will initiate face detection and release the shutter when the subject is facing the lens.





-  The camera may fail to detect subjects who are not facing the camera or whose eyes are hidden.

SMILE

The camera releases the shutter when the subject smiles.


- 1 Highlight  (**SMILE**) in the self-timer menu and press **MENU/OK**.
- 2 Frame portrait subjects in the display. The camera will initiate face detection and release the shutter when any of the subjects smiles.

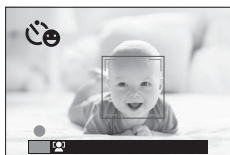



 The camera may fail to detect subjects who are not facing the camera or whose eyes are obscured by hair or other objects.

BUDDY

 The camera takes a picture when it detects two subjects close together.



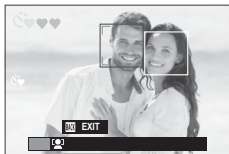- 1 Highlight  (**BUDDY**) in the self-timer menu and press **MENU/OK**.
- 2 When prompted to choose how close the subjects must be together before the timer starts, highlight the desired option and press **MENU/OK** (the required degree of closeness is shown by heart icons in the shooting display: the more hearts, the closer together the subjects must be).
 - **LV.1 (NEAR)**: The timer starts when the subjects are close enough to link hands.
 - **LV.2 (CLOSE UP)**: The timer starts when the subjects are shoulder-to-shoulder.
 - **LV.3 (SUPER CLOSE)**: The timer starts when the subjects are cheek-to-cheek.



 The timer starts only when the subjects are sufficiently close together; the shutter is released one second later.

GROUP

The camera takes a picture when it detects the selected number of portrait subjects.

- 1 Highlight  (**GROUP**) in the self-timer menu and press **MENU/OK**.
- 2 Highlight the desired number of subjects (1 to 4) and press **MENU/OK** (the number of subjects is indicated by  icons in the shooting display). The timer starts only when the selected number of subjects is in the frame; the shutter is released two seconds later.








6


The Shooting Menus

SHOOTING MENU (/ / / /)

Adjust shooting settings.

The shooting menu is displayed when you press **MENU/OK** in shooting mode. Choose from tabs , , , , or .



 The options available vary with the shooting mode selected.

SCENE POSITION

Choose a scene for **SP** mode ( 62).


ADVANCED FILTER

Choose an advanced filter for **Adv.** mode ( 65).

AF/MF SETTING

Adjust focus settings.




FOCUS AREA

Choose the focus area for autofocus, manual focus, and focus zoom ( 82).

FOCUS MODE

Choose how the camera focuses ( 78).


AF MODE

Choose the AF mode for focus modes  and  ( 80).

SNAPSHOT



Focus is fixed at the selected distance—**5m** (5 meters) or **2m** (2 meters)—allowing pictures to be taken as soon as the shutter button is pressed all the way down. Choosing this option helps ensure that you won't miss the chance to take a shot.

Options		
5m	2m	OFF

 Both auto and manual focus are disabled.

 Use touch function button **T-Fn1** (flick up) to change the focus distance during shooting.

RELEASE/FOCUS PRIORITY



Choose how the camera focuses in focus mode **AF-S** () or **AF-C** ()

Option	Description
RELEASE	Shutter response is prioritized over focus. Pictures can be taken when the camera is not in focus.
FOCUS	Focus is prioritized over shutter response. Pictures can be only taken when the camera is in focus.

AF+MF

If **ON** is selected and focus is locked by, for example, keeping the shutter button pressed halfway when **SINGLE AF** is selected for **FOCUS MODE**, focus can be adjusted manually by rotating the control ring.

Options	
ON	OFF


 Focus peaking can be used to check focus. To enable focus peaking, select **FOCUS PEAK HIGHLIGHT** for  **MF ASSIST**.

AF+MF Focus Zoom


When **ON** is selected for  **SCREEN SET-UP > FOCUS CHECK** and **SINGLE POINT** selected for **AF MODE**, focus zoom can be used to zoom in on the selected focus area.

FACE/EYE DETECTION SETTING


Intelligent Face Detection sets focus and exposure for human faces anywhere in the frame, preventing the camera from focusing on the background in group portraits. Choose for shots that emphasize portrait subjects. Faces can be detected with the camera in vertical or horizontal orientation; if a face is detected, it will be indicated by a green border. If there is more than one face in the frame, the camera will select the face closest to the center; other faces are indicated by white borders. You can also choose whether the camera detects and focuses on eyes when Intelligent Face Detection is on. Choose from the following options:

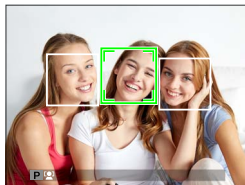

Option	Description
FACE ON/EYE OFF	Intelligent Face Detection only.
FACE ON/EYE AUTO	The camera automatically chooses which eye to focus on when a face is detected.
FACE ON/RIGHT EYE PRIORITY	The camera focuses on the right eye of subjects detected using Intelligent Face Detection.
FACE ON/LEFT EYE PRIORITY	The camera focuses on the left eye of subjects detected using Intelligent Face Detection.
FACE OFF/EYE OFF	Intelligent Face Detection and eye priority off.

 In some modes, the camera may set exposure for the frame as a whole rather than the portrait subject.

If the subject moves as the shutter button is pressed, the face may not be in the area indicated by the green border when the picture is taken.

 If the camera is unable to detect the subject's eyes because they are hidden by hair, glasses, or other objects, the camera will instead focus on faces.

PRE-AF



If **ON** is selected, the camera will continue to adjust focus even when the shutter button is not pressed halfway. Note that this increases the drain on the battery.

Options	
ON	OFF

AF ILLUMINATOR

If **ON** is selected, the AF-assist illuminator will light to assist autofocus.



Options	
ON	OFF

 The AF-assist illuminator turns off automatically when **OFF** is selected for  **SOUND & FLASH** in the setup menu.

The camera may be unable to focus using the AF-assist illuminator in some cases. If the camera is unable to focus, try increasing the distance to the subject.

Avoid shining the AF-assist illuminator directly into your subject's eyes.

RELEASE TYPE


Choose how the shutter button functions when  4K >  4K BURST is selected as the drive mode.


Option	Description
WHEN PRESSING	Pictures are taken while the shutter button is pressed.
ON/OFF SWITCH	Shooting starts when the shutter button is pressed and ends when the button is pressed a second time.
PRE RECORD	The camera starts saving frames to a memory buffer when the shutter button is pressed halfway. When the shutter button is pressed the rest of the way down, the camera transfers the frames shot in the previous second to the memory card and continues shooting until the shutter button is released.

ISO

Adjust the camera's sensitivity to light.

Option	Description
AUTO1	Sensitivity is automatically adjusted in response to shooting conditions. Choose the base sensitivity, maximum sensitivity, and minimum shutter speed for AUTO1 , AUTO2 , and AUTO3 .
AUTO2	
AUTO3	
12800–200	Adjust sensitivity manually. Selected value is shown in display.
H (25600/51200), L (100)	Choose for special situations. Note that mottling may appear in pictures taken at H , while L reduces dynamic range.

 Sensitivity is not reset when the camera is turned off.

If a **RAW** option is selected for image quality, pictures taken with **L** selected for  ISO will be recorded at ISO 200, while those taken with **H** selected will be recorded at ISO 12800.

Adjusting Sensitivity

High values can be used to reduce blur when lighting is poor, while lower values allow slower shutter speeds or wider apertures in bright light; note, however, that mottling may appear in pictures taken at high sensitivities.

AUTO

Choose the base sensitivity, maximum sensitivity, and minimum shutter speed for **AUTO1**, **AUTO2**, and **AUTO3**. Defaults are shown below.

Item	Options	Default		
		AUTO1	AUTO2	AUTO3
DEFAULT SENSITIVITY	6400–200	200		
MAX. SENSITIVITY	6400–400	800	1600	3200
MIN. SHUTTER SPEED	$\frac{1}{500}$ – $\frac{1}{4}$ SEC, AUTO	AUTO		

The camera automatically chooses a sensitivity between the default and maximum values; sensitivity is only raised above the default value if the shutter speed required for optimal exposure would be slower than the value selected for **MIN. SHUTTER SPEED**.




If the value selected for **DEFAULT SENSITIVITY** is higher than that selected for **MAX. SENSITIVITY**, **DEFAULT SENSITIVITY** will be set to the value selected for **MAX. SENSITIVITY**.

The camera may select shutter speeds slower than **MIN. SHUTTER SPEED** if pictures would still be underexposed at the value selected for **MAX. SENSITIVITY**. The minimum shutter speed is not affected by the option selected for image stabilization.

IMAGE SIZE

Choose the size and aspect ratio at which still pictures are recorded.


Option	Image size	Option	Image size	Option	Image size
L 3:2	6000 × 4000	L 16:9	6000 × 3376	L 1:1	4000 × 4000
M 3:2	4240 × 2832	M 16:9	4240 × 2384	M 1:1	2832 × 2832
S 3:2	3008 × 2000	S 16:9	3008 × 1688	S 1:1	2000 × 2000

 **IMAGE SIZE** is not reset when the camera is turned off or another shooting mode is selected.

Aspect Ratio

Pictures with an aspect ratio of 3:2 have the same proportions as a frame of 35 mm film, while an aspect ratio of 16:9 is suited to display on **High Definition** (HD) devices. Pictures with an aspect ratio of 1:1 are square.

Selecting 1:1


To switch to an aspect ratio of 1:1 before taking pictures, simply press the control to which **SQUARE MODE(1:1)** is assigned ( 167). Press the control again to restore the previously-selected aspect ratio. At default settings, square mode is assigned to touch function button **T-Fn2** (flick left).

Current image size	Image size selected using control to which SQUARE MODE(1:1) is assigned
L 3:2 or L 16:9	L 1:1
M 3:2 or M 16:9	M 1:1
S 3:2 or S 16:9	S 1:1

IMAGE QUALITY

Choose a file format and compression ratio. Select **FINE** or **NORMAL** to record JPEG images, **RAW** to record RAW images, or **FINE+RAW** or **NORMAL+RAW** to record both JPEG and RAW images. **FINE** and **FINE+RAW** use lower JPEG compression ratios for higher-quality JPEG images, while **NORMAL** and **NORMAL+RAW** use higher JPEG compression ratios to increase the number of images that can be stored.

The Function Buttons

To toggle RAW image quality on or off for a single shot, assign **RAW** to a function button ( 167). If a JPEG option is currently selected for image quality, pressing the button temporarily selects the equivalent JPEG+RAW option. If a JPEG+RAW option is currently selected, pressing the button temporarily selects the equivalent JPEG option, while if **RAW** is selected, pressing the button temporarily selects **FINE**. Taking a picture or pressing the button again restores the previous setting.

DYNAMIC RANGE

Control contrast. Choose lower values to increase contrast when shooting indoors or under overcast skies, higher values to reduce loss of detail in highlights and shadows when photographing high-contrast scenes. Higher values are recommended for scenes that include both sunlight and deep shade, for such high-contrast subjects as sunlight on water, brightly-lit autumn leaves, and portraits taken against a blue sky, and for white objects or people wearing white; note, however, that mottling may appear in pictures taken at higher values.

Options

AUTO

100 100%

200 200%

400 400%
















If **AUTO** is selected, the camera will automatically choose either **100 100%** or **200 200%** according to the subject and shooting conditions. Shutter speed and aperture will be displayed when the shutter button is pressed halfway.

200 200% is available at sensitivities of ISO 400 and above, **400 400%** at sensitivities of ISO 800 and above.

FILM SIMULATION

Simulate the effects of different kinds of film, including black-and-white (with or without color filters). Choose a palette according to your subject and creative intent.












Option	Description
 PROVIA/STANDARD	Standard color reproduction. Suited to a wide range of subjects, from portraits to landscapes.
 Velvia/VIVID	A high-contrast palette of saturated colors, suited to nature photos.
 ASTIA/SOFT	Enhances the range of hues available for skin tones in portraits while preserving the bright blues of daylight skies. Recommended for outdoor portrait photography.
 CLASSIC CHROME	Soft color and enhanced shadow contrast for a calm look.
 PRO Neg. Hi	Offers slightly more contrast than  (PRO Neg. Std). Recommended for outdoor portrait photography.
 PRO Neg. Std	A soft-toned palette. The range of hues available for skin tones is enhanced, making this a good choice for studio portrait photography.
 MONOCHROME	Take pictures in standard black and white.
 MONOCHROME + Ye FILTER	Take black-and-white pictures with slightly increased contrast. This setting also slightly tones down the brightness of the sky.
 MONOCHROME + R FILTER	Take black-and-white pictures with increased contrast. This setting also tones down the brightness of the sky.
 MONOCHROME + G FILTER	Soften skin tones in black-and-white portraits.
 SEPIA	Take pictures in sepia.

 Film simulation options can be combined with tone and sharpness settings.

For more information, visit: <http://fujifilm-x.com/en/x-stories/the-world-of-film-simulation-episode-1/>

FILM SIMULATION BKT

Choose the three film simulation types used for film simulation bracketing (📖 75, 111).


Options		
 PROVIA/STANDARD	 Velvia/VIVID	 ASTIA/SOFT
 CLASSIC CHROME	 PRO Neg. Hi	 PRO Neg. Std
 MONOCHROME	 MONOCHROME + Ye FILTER	 MONOCHROME + R FILTER
 MONOCHROME + G FILTER		 SEPIA


SELF-TIMER

Use the timer for group- or self-portraits, to prevent blur caused by camera shake, or to release the shutter automatically when selected conditions are met (📖 96).

INTERVAL TIMER SHOOTING


Configure the camera to take photos automatically at a preset interval. If desired, frames shot using interval timer shooting can be joined to form a time-lapse movie.

- 1 Highlight  **INTERVAL TIMER SHOOTING** in the shooting menu and press **MENU/OK**.
- 2 Use the focus stick (focus lever) to choose the interval and number of shots. Press **MENU/OK** to proceed.

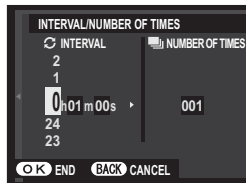


- 3 Highlight one of the following recording types and press **MENU/OK**.
 - **STILL**: Each photo is recorded separately.
 - **STILL+TIME-LAPSE MOVIE**: Each photo is recorded separately; in addition, the entire sequence is recorded as a time-lapse movie.






 The frame size and rate for the time-lapse movie can be selected using  **TIME-LAPSE MOVIE MODE** before shooting begins.

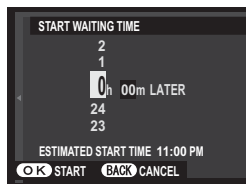
- 4 Use the focus stick to choose the starting time and then press **MENU/OK**.

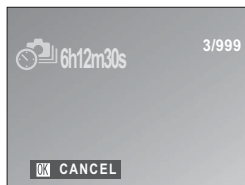

5 Shooting will start automatically.













 Interval timer photography cannot be used at a shutter speed of **B** (bulb) or HDR,  (4K), or during panorama or multiple exposure photography. In burst mode, only one picture will be taken each time the shutter is released.

 Use of a tripod is recommended.

The display sometimes turns off between shots and lights a few seconds before the next shot is taken. The display can be activated at any time by pressing the shutter button.


TIME-LAPSE MOVIE MODE

Choose the frame size and rate for time-lapse movies.

Option	Frame size	Rate
 2160/30P *	3840 × 2160 (4K)	30 fps
 2160/15P *		15 fps
 1080/59.94P	1920 × 1080 (Full HD)	59.94 fps
 1080/50P		50 fps
 1080/24P		24 fps
 1080/23.98P		23.98 fps
 720/59.94P		1280 × 720 (HD)
 720/50P	50 fps	
 720/24P	24 fps	
 720/23.98P	23.98 fps	

* Use a memory card with a UHS speed class of 3 or better when recording time-lapse movies that will be viewed on the camera.

WB WHITE BALANCE

For natural colors, choose a white balance option that matches the light source ( 92).

Color COLOR

Adjust color density. Choose from 5 options between +2 and -2.

Options				
+2	+1	0	-1	-2

Sharp SHARPNESS

Sharpen or soften outlines. Choose from 5 options between +2 and -2.

Options				
+2	+1	0	-1	-2

HL TONE HIGHLIGHT TONE

Adjust the appearance of highlights. Choose from 5 options between +2 and -2.

Options				
+2	+1	0	-1	-2

SHADOW TONE

Adjust the appearance of shadows. Choose from 5 options between +2 and -2.

Options				
+2	+1	0	-1	-2

NOISE REDUCTION

Reduce noise in pictures taken at high sensitivities. Choose from 5 options between +2 and -2.

Options				
+2	+1	0	-1	-2

LONG EXPOSURE NR

Select **ON** to reduce mottling in long time-exposures.

Options	
ON	OFF

AE BKT SETTING

Adjust exposure bracketing settings ( 75).

FRAMES/STEP SETTING

Choose the number of shots and exposure step width for exposure bracketing.

Option	Description
FRAMES	Choose the number of shots in the bracketing sequence.
STEP	Choose the amount exposure changes with each shot.

1 FRAME/CONTINUOUS

Choose the operation performed by pressing the shutter button during exposure bracketing.

Option	Description
1 FRAME	One photo is taken each time the shutter button is pressed.
CONTINUOUS	Each time the shutter button is pressed, the camera takes the number of shots chosen using FRAMES/STEP SETTING , incrementing exposure by the selected amount with each shot.

SEQUENCE SETTING

Choose the order in which the shots are taken.


Option	Description
0 → + → -	The first shot is taken at current exposure settings and exposure compensation is then modified over the succeeding shots, proceeding in order from the highest to the lowest value.
0 → - → +	The first shot is taken at current exposure settings and exposure compensation is then modified over the succeeding shots, proceeding in order from the lowest to the highest value.
- → 0 → +	Shooting proceeds in order from the lowest to the highest value.
+ → 0 → -	Shooting proceeds in order from the highest to the lowest value.

CONTROL RING SETTING


Choose the function assigned to the control ring ( 9).

Options		
DEFAULT	WHITE BALANCE	DIGITAL TELE-CONV.
ISO	FILM SIMULATION	OFF

TOUCH SCREEN MODE

Choose whether touch controls can be used to select the focus area or release the shutter ( 16).

TOUCH ZOOM

Choose whether touch controls can be used for digital zoom ( 20).


MF ASSIST




Choose how focus is displayed in manual focus mode.

Option	Description
STANDARD	Focus is displayed normally.
FOCUS PEAK HIGHLIGHT	The camera heightens high-contrast outlines. Choose a color and peaking level.

PHOTOMETRY

Choose how the camera meters exposure.

 The selected option will only take effect when **AF/MF SETTING > FACE/EYE DETECTION SETTING** is **FACE OFF/EYE OFF**.

Mode	Description
 MULTI	The camera instantly determines exposure based on an analysis of composition, color, and brightness distribution. Recommended in most situations.
 SPOT	The camera meters lighting conditions in an area at the center of the frame equivalent to 2% of the total. Recommended with backlit subjects and in other cases in which the background is much brighter or darker than the main subject.
 AVERAGE	Exposure is set to the average for the entire frame. Provides consistent exposure across multiple shots with the same lighting, and is particularly effective for landscapes and portraits of subjects dressed in black or white.

INTERLOCK SPOT AE & FOCUS AREA


Select **ON** to meter the current focus frame when **SINGLE POINT** is selected for **AF/MF SETTING > AF MODE** and **SPOT** is selected for **PHOTOMETRY**.

Options	
ON	OFF

FLASH SET-UP

Adjust flash settings.

FLASH MODE

Choose a flash mode ( 91).

FLASH COMPENSATION

Adjust flash brightness. Choose from values between +2 EV and -2 EV. Note that the desired results may not be achieved depending on shooting conditions and the distance to the subject.

Options

+2	+1 2/3	+1 1/3	+1	+2/3	+1/3	±0	-1/3	-2/3	-1	-1 1/3	-1 2/3	-2
----	--------	--------	----	------	------	----	------	------	----	--------	--------	----

RED EYE REMOVAL

Choose **ON** to remove red-eye effects caused by the flash.

Options

ON

OFF



Red-eye reduction is performed only when a face is detected.

Red-eye removal is not available with RAW images.

MOVIE SET-UP

Adjust movie-recording options.

MOVIE MODE

Choose a frame size and rate for movie recording.

Option	Frame size	Rate
4K 2160/15P*	3840 × 2160 (4K)	15 fps
HD 1080/59.94P HD 1080/24P HD 1080/50P HD 1080/23.98P	1920 × 1080 (Full HD)	59.94 fps, 50 fps, 24 fps, 23.98 fps
HD 720/59.94P HD 720/24P HD 720/50P HD 720/23.98P	1280 × 720 (HD)	

* Use a memory card with a UHS speed class of 3 or better when recording time-lapse movies that will be viewed on the camera.

HD HIGH SPEED VIDEO


Record high-frame-rate HD movies that play back in slow motion, giving you time to view fast-moving subjects or details too fleeting for the naked eye: a batter's swing, darting insects, or swiftly-flowing waters.

Option	Description
1.6× 59.94P	Record HD (1280 × 720) movies at 1.6×, 2×, 3.3×, or 4× speed and a frame rate of 100 fps. The movies play back at 1/6, 1/2, 1/3, or 1/4 speed, respectively.
2× 50P	
3.3× 29.97P	
4× 25P	
OFF	High-speed recording off.

High-speed movies are recorded at a reduced frame size with no sound. Focus, exposure, and white balance are fixed at the values in effect at the start of recording. Movies shot under low light may be underexposed due to the high recording speeds; we recommend shooting outdoors in daylight or in other brightly-lit locations. If desired, high-speed movies can also be viewed in slow-motion on a computer.

MOVIE ISO

Choose the sensitivity for movie recording from **AUTO** or from settings between ISO 400 and 6400.

 This setting has no effect on photographs.

FOCUS MODE

Choose the focus mode for movie recording.

Option	Description
MANUAL FOCUS	Focus manually.
CONTINUOUS AF	The camera focuses using AF-C.
SINGLE AF	The camera focuses using AF-S.

AF MODE

Choose how the camera selects the focus point for movie recording.

Option	Description
MULTI	Automatic focus-point selection.
AREA	The camera focuses on the subject in the selected focus area.


HDMI OUTPUT INFO DISPLAY

If **ON** is selected, HDMI devices to which the camera is connected will mirror the information in the camera display.

Options	
ON	OFF

4K MOVIE OUTPUT

Choose the destination for 4K movies shot while the camera is connected to an HDMI recorder or other device that supports 4K.

Option	Description
 SD CARD	4K movies are recorded to a camera memory card and output to the HDMI device in 4K.
HDMI	4K movies are output to the HDMI device in 4K. The camera does not record 4K movies to a memory card.

HDMI REC CONTROL

Choose whether the camera sends movie start and stop signals to the HDMI device when the shutter button is pressed to start and stop movie recording.

Options	
ON	OFF

MIC LEVEL ADJUSTMENT

Adjust the recording level for the built-in and external microphones.

Options			
4	3	2	1

MIC/REMOTE RELEASE

Specify whether the device connected to the microphone/remote release connector is a microphone or a remote release.

Options	
 MIC	 REMOTE

DIGITAL IMAGE STABILIZER


Choose whether to enable digital image stabilization during movie recording.

Options	
ON	OFF

WIRELESS COMMUNICATION

Connect to smartphones running the latest version of the FUJIFILM Camera Remote app. The smartphone can then be used to:


- Control the camera and take pictures remotely
- Receive pictures uploaded from the camera
- Browse the pictures on the camera and download selected pictures
- Upload location data to the camera
- Release the camera shutter
- Update camera firmware


 For downloads and other information, visit:
http://app.fujifilm-dsc.com/en/camera_remote/

SHUTTER TYPE


Choose the shutter type. Using the electronic shutter also lets you mute the shutter sound.

Option	Description
MS MECHANICAL SHUTTER	Take pictures with the mechanical shutter.
ES ELECTRONIC SHUTTER	Take pictures with the electronic shutter.
MS MECHANICAL+ES ELECTRONIC	The camera chooses the shutter type according to shooting conditions.


 When the electronic shutter is used, distortion may be visible in shots of moving subjects and in hand-held shots taken at high shutter speeds, while banding and fog may occur in shots taken under fluorescent lights or other flickering or erratic illumination. When taking pictures with the shutter muted, respect your subjects' image rights and right to privacy ( 148).

 When the electronic shutter is used, the flash is disabled, sensitivity is restricted to values of ISO 12800–200, and long exposure noise reduction has no effect.

DIGITAL TELE-CONV.

Take pictures at different focal lengths using the digital teleconverter ( 68).

Options		
50mm	35mm	OFF

 All focal lengths are given using 35 mm format equivalents.


Playback and the Playback Menu

7

The Playback Display

This section lists the indicators that may be displayed during playback.



! For illustrative purposes, displays are shown with all indicators lit.

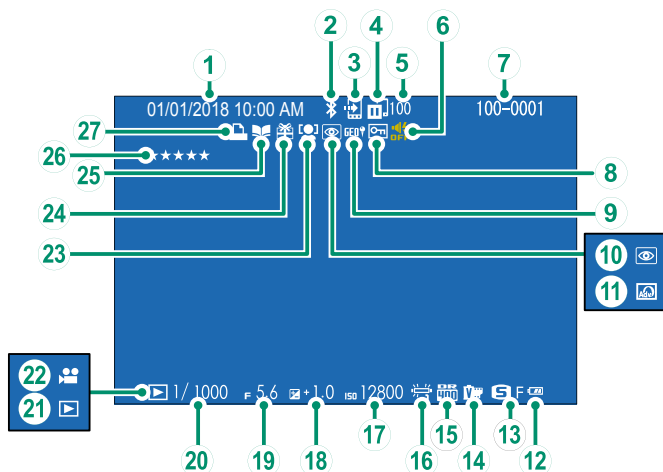

① Date and time.....	35, 146	⑭ Film simulation	111
② Bluetooth ON/OFF.....	156	⑮ Dynamic range	110
③ Image transfer order.....	133	⑯ White balance	115
④ Image transfer status.....	133	⑰ Sensitivity	106
⑤ Number of frames selected for upload	133	⑱ Exposure compensation.....	67
⑥ Sound and flash indicator	147	⑲ Aperture.....	53, 56, 57
⑦ Frame number.....	154	⑳ Shutter speed	53, 54, 57
⑧ Protected image.....	139	㉑ Playback mode indicator	42
⑨ Location data.....	156, 158	㉒ Movie icon.....	48
⑩ Red-eye removal indicator.....	140	㉓ Face detection indicator	104
⑪ Advanced filter.....	65	㉔ Gift image	42
⑫ Battery level.....	34	㉕ Photobook assist indicator	141
⑬ Image size/quality.....	108, 109	㉖ Rating.....	129
		㉗ DPOF print indicator.....	143

The DISP/BACK Button

The **DISP/BACK** button controls the display of indicators during playback.

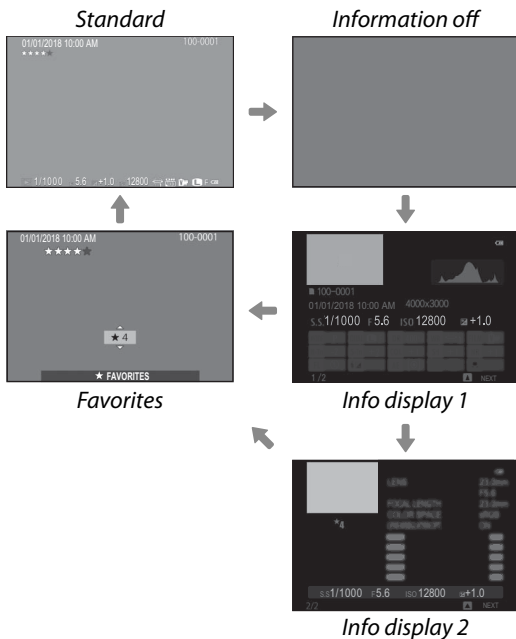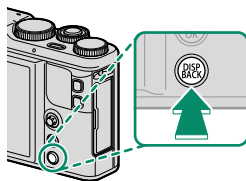


Favorites: Rating Pictures

To rate the current picture, press **DISP/BACK** and press the focus stick (focus lever) up and down to select from zero to five stars.

Zooming in on the Focus Point


Press the **Fn2** (function 2) button to zoom in on the focus point. Press the button again to return to full-frame playback.

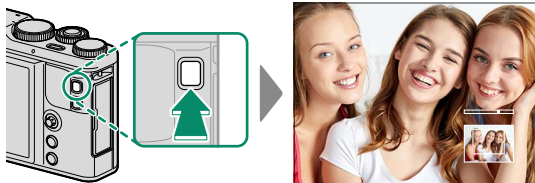

Viewing Pictures

Read this section for information on playback zoom and multi-frame playback.

Use the rear command dial to go from full-frame playback to playback zoom or multi-frame playback.

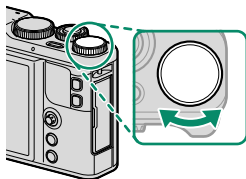

Full-frame playback




Multi-frame playback



Nine-frame view



Hundred-frame view

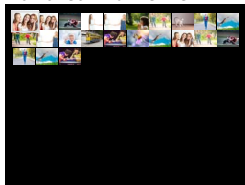

Playback zoom



Medium zoom




Maximum zoom



Playback Zoom

Rotate the rear command dial to zoom in or out on pictures in full-frame playback. To exit zoom, press **DISP/BACK**, **MENU/OK**, or the **Fn2** (function 2) button.

 The maximum zoom ratio varies with the option selected for **IMAGE SIZE**. Playback zoom is not available with cropped or re-sized copies saved at a size of **640**.

Scroll


When the picture is zoomed in, the focus stick (focus lever) can be used to view areas of the image not currently visible in the display.



Navigation window




Multi-Frame Playback

To change the number of images displayed, rotate the rear command dial clockwise when a picture is displayed full frame.

 Use the focus stick (focus lever) to highlight images and press **MENU/OK** to view the highlighted image full frame. In the nine- and hundred-frame displays, press the focus stick up or down to view more pictures.

The Playback Menu (/ /)

Adjust playback settings.

The playback menu is displayed when you press **MENU/OK** in playback mode. Choose from tabs , , or .

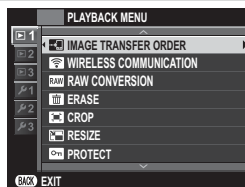






IMAGE TRANSFER ORDER

Select photos for upload to a paired smartphone or tablet.

- 1 Select  **IMAGE TRANSFER ORDER** > **SELECT FRAMES** in the playback menu.
- 2 Highlight photos and press **MENU/OK** to select or deselect. Repeat until all the desired photos have been selected.
- 3 Press **DISP/BACK** to exit to playback.

 If **ON** is selected for  **CONNECTION SETTING** > **Bluetooth SETTINGS** > **Bluetooth ON/OFF**, upload will begin shortly after you exit to playback or turn the camera off.

 Image transfer orders can contain a maximum of 999 pictures. Protected pictures, RAW images, "gift" pictures, and movies cannot be selected for upload.

When **WIRELESS COMMUNICATION** is assigned to the **Fn** button and **PAIRING/TRANSFER ORDER** is selected for  **CONNECTION SETTING** > **GENERAL SETTINGS** >  **BUTTON SETTING**, the **Fn** button can be used to select pictures for upload. To deselect all images, select **RESET ORDER** for **IMAGE TRANSFER ORDER**. To upload pictures as they are taken, select **ON** for  **CONNECTION SETTING** > **Bluetooth SETTINGS** > **AUTO IMAGE TAGGING**.

WIRELESS COMMUNICATION

Connect to smartphones running the latest version of the FUJIFILM Camera Remote app. The smartphone can then be used to:

- Control the camera and take pictures remotely
- Receive pictures uploaded from the camera
- Browse the pictures on the camera and download selected pictures
- Upload location data to the camera
- Release the camera shutter
- Update camera firmware



For downloads and other information, visit:
http://app.fujifilm-dsc.com/en/camera_remote/


RAW RAW CONVERSION

RAW pictures store information on camera settings separately from the data captured by the camera image sensor. Using **RAW RAW CONVERSION**, you can create JPEG copies of RAW pictures using different options for the settings listed on page 135. The original image data are unaffected, allowing a single RAW image to be processed in a multitude of different ways.


- 1 With a RAW picture displayed, press **MENU/OK** to display the playback menu.
- 2 Press the focus stick (focus lever) up or down to highlight **RAW RAW CONVERSION** in the playback menu and press **MENU/OK** to display settings.



These options can also be displayed by pressing the **Q** button during playback.

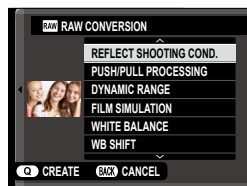

- 3 Use the focus stick (focus lever) to highlight a setting.
- 4 Press the stick right to display options for the highlighted setting.

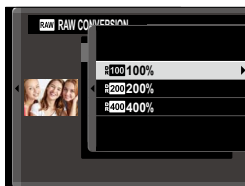


- 5 Use the stick to highlight the desired option.
- 6 Press **MENU/OK** to select the highlighted option. The settings list shown in Step 2 will be displayed. Repeat Steps 2 to 6 to adjust additional settings as desired.
- 7 Press the **Q** button to preview the JPEG copy and press **MENU/OK** to save.

The settings that can be adjusted when converting pictures from RAW to JPEG are:

Setting	Description
REFLECT SHOOTING COND.	Create a JPEG copy using the settings in effect at the time the photo was taken.
PUSH/PULL PROCESSING	Adjust exposure.
DYNAMIC RANGE	Enhance details in highlights for natural contrast.
FILM SIMULATION	Simulate the effects of different types of film.
WHITE BALANCE	Adjust white balance.
WB SHIFT	Fine-tune white balance.
COLOR	Adjust color density.
SHARPNESS	Sharpen or soften outlines.
HIGHLIGHT TONE	Adjust highlights.
SHADOW TONE	Adjust shadows.
NOISE REDUCTION	Process the copy to reduce mottling.
COLOR SPACE	Choose the color space used for color reproduction.

ERASE

Delete individual pictures, multiple selected pictures, or all pictures.

 Deleted pictures cannot be recovered. Protect important pictures or copy them to a computer or other storage device before proceeding.

Option	Description
FRAME	Delete pictures one at a time.
SELECTED FRAMES	Delete multiple selected pictures.
ALL FRAMES	Delete all unprotected pictures.

FRAME

- 1 Select **FRAME** for **ERASE** in the playback menu.
- 2 Press the focus stick (focus lever) left or right to scroll through pictures and press **MENU/OK** to delete (a confirmation dialog is not displayed). Repeat to delete additional pictures.

SELECTED FRAMES

- 1 Select **SELECTED FRAMES** for **ERASE** in the playback menu.
- 2 Highlight pictures and press **MENU/OK** to select or deselect (pictures in photobooks or printer orders are shown by **■**). Selected pictures are indicated by check marks (**☑**).
- 3 When the operation is complete, press **DISP/BACK** to display a confirmation dialog.
- 4 Highlight **OK** and press **MENU/OK** to delete the selected pictures.

ALL FRAMES

- 1 Select **ALL FRAMES** for **ERASE** in the playback menu.
- 2 A confirmation dialog will be displayed; highlight **OK** and press **MENU/OK** to delete all unprotected pictures.





 
Pressing **DISP/BACK** cancels deletion; note that any pictures deleted before the button was pressed cannot be recovered.

If a message appears stating that the selected images are part of a DPOF print order, press **MENU/OK** to delete the pictures.

CROP


Create a cropped copy of the current picture.

- 1 Display the desired picture.
- 2 Select  **CROP** in the playback menu.
- 3 Use the rear command dial and focus stick (focus lever) to choose the crop.
- 4 Press **MENU/OK** to display a confirmation dialog.
- 5 Press **MENU/OK** again to save the cropped copy to a separate file.

 Larger crops produce larger copies; all copies have an aspect ratio of 3:2. If the size of the final copy will be , **YES** will be displayed in yellow.

RESIZE

Create a small copy of the current picture.

- 1 Display the desired picture.
- 2 Select  **RESIZE** in the playback menu.
- 3 Highlight a size and press **MENU/OK** to display a confirmation dialog.
- 4 Press **MENU/OK** again to save the resized copy to a separate file.

 The sizes available vary with the size of the original image.

PROTECT


Protect pictures from accidental deletion. Highlight one of the following options and press **MENU/OK**.


- **FRAME:** Protect selected pictures. Press the focus stick (focus lever) left or right to view pictures and press **MENU/OK** to select or deselect. Press **DISP/BACK** when the operation is complete.
- **SET ALL:** Protect all pictures.
- **RESET ALL:** Remove protection from all pictures.

 Protected pictures will be deleted when the memory card is formatted.


IMAGE ROTATE

Rotate pictures.

- 1 Display the desired picture.
- 2 Select  **IMAGE ROTATE** in the playback menu.
- 3 Press the focus stick (focus lever) down to rotate the picture 90° clockwise, up to rotate it 90° counterclockwise.
- 4 Press **MENU/OK**. The picture will automatically be displayed in the selected orientation whenever it is played back on the camera.


 Protected pictures cannot be rotated. Remove protection before rotating pictures.



The camera may not be able to rotate pictures created with other devices. Pictures rotated on the camera will not be rotated when viewed on a computer or on other cameras.

Pictures taken with  **SCREEN SET-UP > AUTOROTATE PB** are automatically displayed in the correct orientation during playback.

RED EYE REMOVAL

Remove red-eye from portraits. The camera will analyze the image; if red-eye is detected, the image will be processed to create a copy with reduced red-eye.

- 1 Display the desired picture.
- 2 Select  **RED EYE REMOVAL** in the playback menu.
- 3 Press **MENU/OK**.


 Results vary depending on the scene and the camera's success in detecting faces. Red eye cannot be removed from pictures that have already been processed using red-eye removal, which are indicated by a  icon during playback.

The amount of time needed to process the image varies with the number of faces detected.

Red eye removal cannot be performed on RAW images.

SLIDE SHOW


View pictures in an automated slide show. Press **MENU/OK** to start and press the focus stick (focus lever) right or left to skip ahead or back. Press **DISP/BACK** at any time during the show to view on-screen help. The show can be ended at any time by pressing **MENU/OK**.


 The camera will not turn off automatically while a slide show is in progress.

PHOTOBOOK ASSIST

Create books from your favorite photos.


Creating a Photobook

- 1 Select **NEW BOOK** for  **PHOTOBOOK ASSIST** in the playback menu.
- 2 Scroll through the images and press the focus stick (focus lever) up to select or deselect. Press **MENU/OK** to exit when the book is complete.

 Neither photographs **640** or smaller nor movies can be selected for photobooks.

The first picture selected becomes the cover image. Press the focus stick down to select the current image for the cover instead.

- 3 Highlight **COMPLETE PHOTOBOOK** and press **MENU/OK** (to select all photos for the book, choose **SELECT ALL**). The new book will be added to the list in the photobook assist menu.

 Books can contain up to 300 pictures. Books that contain no photos are automatically deleted.

Photobooks

Photobooks can be copied to a computer using MyFinePix Studio software.

Viewing Photobooks

Highlight a book in the photobook assist menu and press **MENU/OK** to display the book, then press the focus stick (focus lever) left or right to scroll through the pictures.

Editing and Deleting Photobooks

Display the photobook and press **MENU/OK**. The following options will be displayed; select the desired option and follow the on-screen instructions.

- **EDIT:** Edit the book as described in “Creating a Photobook”.
- **ERASE:** Delete the book.

PC AUTO SAVE

Upload pictures from the camera to a computer running the latest version of FUJIFILM PC AutoSave (note that you must first install the software and configure the computer as a destination for images copied from the camera).






For downloads and other information, visit:

http://app.fujifilm-dsc.com/en/pc_autosave/

PRINT ORDER (DPOF)



Create a digital “print order” for DPOF-compatible printers.

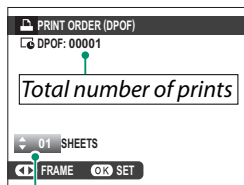- 1 Select  **PRINT ORDER (DPOF)** in the playback menu.
- 2 Select **WITH DATE**  to print the date of recording on pictures, **WITHOUT DATE** to print pictures without dates, or **RESET ALL** to remove all pictures from the print order before proceeding.
- 3 Display a picture you wish to include in or remove from the print order.
- 4 Press the focus stick (focus lever) up or down to choose the number of copies (up to 99). To remove a picture from the order, press the focus stick down until the number of copies is 0.



Number of copies


- 5 Repeat steps 3–4 to complete the print order.
- 6 The total number of prints is displayed in the monitor. Press **MENU/OK** to exit.

 The pictures in the current print order are indicated by a  icon during playback.

Print orders can contain a maximum of 999 pictures.

 
If a memory card is inserted containing a print order created by another camera, you will need to delete the order before creating as described above.



instax PRINTER PRINT

Print pictures on optional Fujifilm instax SHARE printers ( 182).

DISP ASPECT

Choose how High Definition (HD) devices display pictures with an aspect ratio of 3:2 (this option is available only when an HDMI cable is connected). Select 16:9 to display the image so that it fills the screen with its top and bottom cropped out, 3:2 to display the entire image with black bands at either side.






		Option	
		16:9	3:2
Display			


The Setup Menus

8


The Setup Menu (/ /)

Adjust basic camera settings.

To access basic camera settings, press **MENU/OK** and select tab , , or .

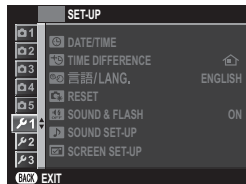






DATE/TIME

Set the camera clock ( 37).

TIME DIFFERENCE

Switch the camera clock instantly from your home time zone to the local time at your destination when traveling. To specify the difference between your local and home time zone:

- 1 Highlight  **LOCAL** and press **MENU/OK**.
- 2 Use the focus stick (focus lever) to choose the time difference between local time and your home time zone. Press **MENU/OK** when settings are complete.


To set the camera clock to local time, highlight  **LOCAL** and press **MENU/OK**. To set the clock to the time in your home time zone, select  **HOME**. If  **LOCAL** is selected,  will be displayed in yellow for about three seconds when the camera is turned on.

Options

 **LOCAL**

 **HOME**




言語/LANG.

Choose a language ( 37).

RESET

Reset shooting or setup menu options to default values.

- 1 Highlight the desired option and press **MENU/OK**.

Option	Description
SHOOTING MENU RESET	Reset all shooting menu settings other than custom white balance to default values.
SET-UP RESET	Reset all setup menu settings other than  DATE/TIME ,  TIME DIFFERENCE , and  CONNECTION SETTING to default values.

- 2 A confirmation dialog will be displayed; highlight **OK** and press **MENU/OK**.

SOUND & FLASH

Select **OFF** to disable the speaker, flash, and illuminator in situations in which camera sounds or lights may be unwelcome.


Options	
ON	OFF

  appears in the display when **OFF** is selected.

SOUND SET-UP

Adjust sound settings.

OPERATION VOL.

Adjust the volume of the sounds produced when camera controls are operated. Choose  OFF to disable control sounds.

Options


 (high)

 (medium)

 (low)

 OFF (mute)

SHUTTER VOLUME

Adjust the volume of the sounds produced by the electronic shutter. Choose  OFF to disable the shutter sound.

Options

 (high)

 (medium)

 (low)

 OFF (mute)

SHUTTER SOUND

Choose the sound made by the electronic shutter.

Options

 1 SOUND 1

 2 SOUND 2

 3 SOUND 3

PLAYBACK VOLUME

Adjust the volume for movie playback. Choose from 10 options between 10 (high) and 1 (low) or select 0 to mute audio during movie playback.

Options

10

9

8

7

6

5

4

3

2

1

0

SCREEN SET-UP

Adjust display settings.

IMAGE DISP.


Choose how long images are displayed after shooting. Colors may differ slightly from those in the final image and “noise” mottling may be visible at high sensitivities. Note that at some settings, the camera will display pictures after shooting regardless of the option selected.

Option	Description
CONTINUOUS	Pictures are displayed until the MENU/OK button is pressed or the shutter button is pressed halfway. To zoom in on the active focus point, press the Fn2 (function 2) button; press again to cancel zoom.
1.5 SEC	Pictures are displayed for the selected time or until the shutter button is pressed halfway.
0.5 SEC	
OFF	Pictures are not displayed after shooting.

PREVIEW EXP. IN MANUAL MODE

Select **ON** to enable exposure preview in manual exposure mode.

Options	
ON	OFF

 Select **OFF** when using the flash or on other occasions on which exposure may change when the picture is taken.

LCD BRIGHTNESS

Adjust monitor brightness.

Options										
+5	+4	+3	+2	+1	0	-1	-2	-3	-4	-5

LCD COLOR


Adjust monitor hue.

Options										
+5	+4	+3	+2	+1	0	-1	-2	-3	-4	-5

PREVIEW PIC. EFFECT




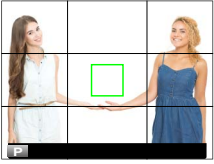
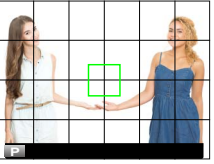
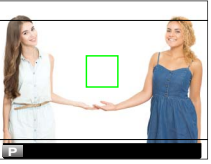
Choose **ON** to preview the effects of film simulation, white balance, and other settings in the monitor, **OFF** to make shadows in low-contrast, back-lit scenes and other hard-to-see subjects more visible.

Options	
ON	OFF

 If **OFF** is selected, the effects of camera settings will not be visible in the monitor and colors and tone will differ from those in the final picture. The display will however be adjusted to show the effects of advanced filters and of monochrome and sepia settings.

FRAMING GUIDELINE


Choose a framing grid for shooting mode.

Option		
 GRID 9	 GRID 24	 HD FRAMING
 <i>For "rule of thirds" composition.</i>	 <i>A six-by-four grid.</i>	 <i>Frame HD pictures in the crop shown by the lines at the top and bottom of the display.</i>

 Framing guides are not shown at default settings but can be displayed using  **SCREEN SET-UP > DISP. CUSTOM SETTING** ( 13).

AUTOROTATE PB

 Choose **ON** to automatically rotate “tall” (portrait-orientation) pictures during playback.

**FOCUS CHECK**

 
If **ON** is selected, the display will automatically zoom in on the selected focus area when the control ring is rotated in manual focus mode.



 Pressing the **Fn2** (function 2) button cancels focus zoom.

FOCUS SCALE UNITS

Choose the units used for the focus distance indicator.

**DISP. CUSTOM SETTING**

Choose items for the standard display ( 13).

BUTTON SETTING


Choose the roles played by camera controls.


FUNCTION (Fn) SETTING

Choose the roles played by the function buttons ( 167).

 Role selection can also be accessed by pressing and holding the function or **DISP/BACK** button.


EDIT/SAVE QUICK MENU

Choose the items displayed in the quick menu ( 165).

 The quick menu can also be accessed in shooting mode by holding the **Q** button.

FOCUS LEVER SETTING

Choose the functions performed by the focus stick (focus lever).

Option	Description
LOCK (OFF)	The focus stick cannot be used during shooting.
PUSH  TO UNLOCK	Press the stick to view the focus-point display and tilt the stick to select a focus point.
ON	Tilt the stick to view the focus-point display and select a focus point.

FOCUS RING

Choose the direction in which the control ring is rotated to increase the focus distance in manual focus mode.

Options	
 CW (clockwise)	 CCW (counterclockwise)

TOUCH SCREEN SETTING

Enable or disable touch-screen controls.

Options	
ON	OFF

POWER MANAGEMENT

Adjust power management settings.

AUTO POWER OFF

Choose the length of time before the camera turns off automatically when no operations are performed. Shorter times increase battery life; if **OFF** is selected, the camera must be turned off manually.

Options		
5 MIN	2 MIN	OFF

HIGH PERFORMANCE

Select **ON** for faster focus and to reduce the time needed to restart the camera after it has been turned off.


Options	
ON	OFF

SAVE DATA SET-UP


Adjust file management settings.


FRAME NO.

New pictures are stored in image files named using a four-digit file number assigned by adding one to the last file number used. The file number is displayed during playback as shown. **FRAME NO.** controls whether file numbering is reset to 0001 when a new memory card is inserted or the current memory card is formatted.

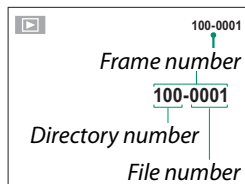

Option	Description
CONTINUOUS	Numbering continues from the last file number used or the first available file number, whichever is higher. Choose this option to reduce the number of pictures with duplicate file names.
RENEW	Numbering is reset to 0001 after formatting or when a new memory card is inserted.


 If the frame number reaches 999-9999, the shutter release will be disabled. Format the memory card after transferring to a computer any pictures you wish to keep.

Selecting  **RESET** sets **FRAME NO.** to **CONTINUOUS** but does not reset the file number.

Frame numbers for pictures taken with other cameras may differ.

SAVE ORG IMAGE

Choose **ON** to save unprocessed copies of pictures taken using

 **FLASH SET-UP > RED EYE REMOVAL.**

Options	
ON	OFF

 
 
 
EDIT FILE NAME


Change the file name prefix. sRGB images use a four-letter prefix (default “DSCF”), Adobe RGB images a three-letter prefix (“DSF”) preceded by an underscore.


Option	Default prefix	Sample file name
sRGB	DSCF	ABCD0001
AdobeRGB	_DSF	_ABC0001


DATE STAMP

Stamp the time and/or date of recording on photographs as they are taken.

Option	Description
 + 	Stamp new photographs with the date and time of recording.
	Stamp new photographs with the date of recording.
OFF	Do not stamp the time and date on new photographs.

 Time and date stamps cannot be deleted. Turn **DATE STAMP** off to prevent time and date stamps appearing on new photographs.

If the camera clock is not set, you will be prompted to set the clock to the current date and time ( 35, 37).

We recommend that you turn the DPOF “print date” option off when printing images with a time and date stamp ( 143).

Time and date stamps do not appear on movies or RAW images or on shots taken using 4K burst or multi-focus.

 COLOR SPACE

Choose the gamut of colors available for color reproduction.

Option	Description
sRGB	Recommended in most situations.
Adobe RGB	For commercial printing.

CONNECTION SETTING

Adjust settings for connection to wireless devices, including smartphones, computers, and Fujifilm instax SHARE printers.




For more information on wireless connections, visit:

<http://fujifilm-dsc.com/wifi/>

Bluetooth SETTINGS

Adjust Bluetooth settings.

Option	Description
PAIRING REGISTRATION	To pair the camera with a smartphone or tablet, select this option, then launch FUJIFILM Camera Remote on the smart device and tap PAIRING REGISTRATION .
SELECT PAIRING DESTINATION	Choose a connection from a list of devices with which the camera has been paired using PAIRING REGISTRATION . Select NO CONNECTION to exit without connecting.
DELETE PAIRING REG.	Delete pairing information for selected devices. Choose the device in the device list. The selected device will also be removed from the devices listed in SELECT PAIRING DESTINATION .
Bluetooth ON/OFF	<ul style="list-style-type: none">• ON: The camera automatically establishes a Bluetooth connection with paired devices when turned on.• OFF: The camera does not connect via Bluetooth.
AUTO IMAGE TAGGING	<ul style="list-style-type: none">• ON: Mark JPEG images for upload as they are taken.• OFF: Photos are not marked for upload as they are taken.
SEAMLESS TRANSFER	<ul style="list-style-type: none">• ON: Pictures are uploaded to paired devices after shooting.• OFF: Pictures are uploaded to paired devices only when the camera is off or starting shortly after you exit to play-back.
SMARTPHONE SYNC. SETTING	Choose whether to synchronize the camera to the time and/or location provided by a paired smartphone. <ul style="list-style-type: none">• LOCATION&TIME: Synchronize the time and location.• LOCATION: Synchronize the location.• TIME: Synchronize the time.• OFF: Synchronization off.

 Install the latest version of the FUJIFILM Camera Remote app on your smartphone or tablet before pairing the device with your camera or uploading images.

When **ON** is selected for both **Bluetooth ON/OFF** and **AUTO IMAGE TAGGING** and **OFF** is chosen for **SEAMLESS TRANSFER**, upload to paired devices will begin when the camera is turned off or shortly after you exit to playback.

If **AUTO IMAGE TAGGING** is off, pictures can be marked for transfer using the  **IMAGE TRANSFER ORDER** option in the playback menu.

PC AUTO SAVE

Adjust settings for connection to computers via wireless LAN.


Option	Description
PC AUTO SAVE SETTING	Choose the method used for connection to computers via a wireless LAN. <ul style="list-style-type: none"> • SIMPLE SETUP: Connect using WPS. • MANUAL SETUP: Choose the network from a list (SELECT FROM NETWORK LIST) or enter the name manually (ENTER SSID).
DELETE REGISTERED DESTINATION PC	Remove selected destinations.
DETAILS OF PREVIOUS CONNECTION	View computers to which the camera has recently connected.

instax PRINTER CONNECTION SETTING

Adjust settings for connection to optional Fujifilm instax SHARE printers.



The Printer Name (SSID) and Password

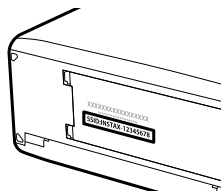The printer name (SSID) can be found on the bottom of the printer; the default password is "1111". If you have already chosen a different password to print from a smartphone, enter that password instead.



GENERAL SETTINGS

Adjust settings for connection to wireless networks.

Option	Description
NAME	Choose a name (NAME) to identify the camera on the wireless network (the camera is assigned a unique name by default).
RESIZE IMAGE FOR SMARTPHONE 	Choose ON (the default setting, recommended in most circumstances) to resize larger images to 3M for upload to smartphones, OFF to upload images at their original size. Resizing applies only to the copy uploaded to the smartphone; the original is not affected.
GEOTAGGING	Choose whether location data downloaded from a smartphone are embedded in pictures as they are taken.
LOCATION INFO	Display the location data last downloaded from a smartphone.
 BUTTON SETTING	Choose the role played by the Fn button when it is assigned the WIRELESS COMMUNICATION function. <ul style="list-style-type: none"> • PAIRING/TRANSFER ORDER: The Fn button can be used for pairing and selecting images for transfer. • WIRELESS COMMUNICATION: The Fn button can be used for wireless connections.

INFORMATION


View the camera's MAC and Bluetooth address.


RESET WIRELESS SETTING


Restore wireless settings to their default values.

FORMAT

To format a memory card:

- 1 Highlight  **FORMAT** in the setup menu and press **MENU/OK**.
- 2 A confirmation dialog will be displayed. To format the memory card, highlight **OK** and press **MENU/OK**. To exit without formatting the memory card, select **CANCEL** or press **DISP/BACK**.

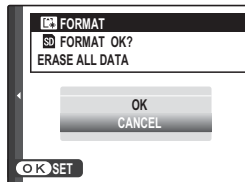

-  All data—including protected pictures—will be deleted from the memory card. Be sure important files have been copied to a computer or other storage device.

Do not open the battery-chamber cover during formatting.

Shortcuts

9

Shortcut Options

Customize camera controls to suit your style or situation.

Frequently-used options can be added to the **Q** menu or assigned to the **Fn** (function) button for direct access:


- **The Q menu** (📖 163): The **Q** menu is displayed by pressing the **Q** button. Use the **Q** menu to view or change the options selected for frequently-used menu items.
- **The function buttons** (📖 166): Use the function buttons for direct access to selected features.

The Q (Quick Menu) Button

Press **Q** for quick access to selected options.

The Quick Menu Display

At default settings, the quick menu contains the following items:

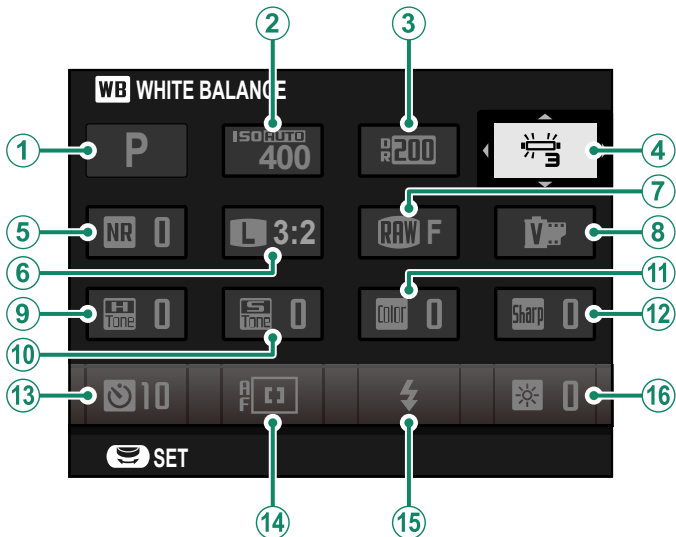


- ① SHOOTING MODE
- ② ISO
- ③ DYNAMIC RANGE
- ④ WHITE BALANCE
- ⑤ NOISE REDUCTION
- ⑥ IMAGE SIZE
- ⑦ IMAGE QUALITY
- ⑧ FILM SIMULATION

- ⑨ HIGHLIGHT TONE
- ⑩ SHADOW TONE
- ⑪ COLOR
- ⑫ SHARPNESS
- ⑬ SELF-TIMER
- ⑭ AF MODE
- ⑮ FLASH MODE
- ⑯ LCD BRIGHTNESS

Viewing and Changing Settings



- 1 Press **Q** to display the quick menu during shooting.

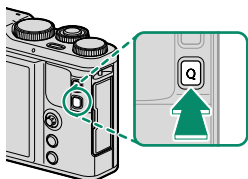


- 2 Use the focus stick (focus lever) to highlight items.



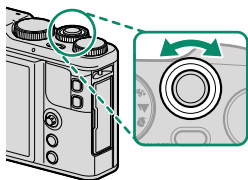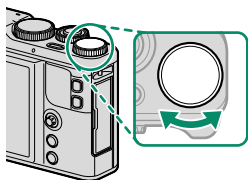

- 3 Rotate the rear or front command dial to choose an option for the highlighted item.



- 4 Press **Q** to exit when settings are complete.


 The shooting mode is the current shooting mode and cannot be changed from the quick menu.

 **CUSTOM** and  **COLOR TEMPERATURE** white balance options cannot be accessed using the **Q** button. Use a function button or the shooting menu.

Editing the Quick Menu


To choose the items displayed in the quick menu:


- 1 Press and hold the **Q** button during shooting.

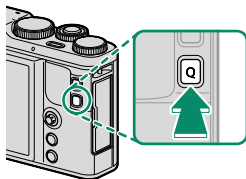

- 2 The current quick menu will be displayed; use the focus stick (focus lever) to highlight the item you wish to change and press **MENU/OK**.
- 3 Highlight any of the following options and press **MENU/OK** to assign it to the selected position.


- ISO
- DYNAMIC RANGE
- WHITE BALANCE
- NOISE REDUCTION
- IMAGE SIZE
- IMAGE QUALITY
- FILM SIMULATION
- HIGHLIGHT TONE
- SHADOW TONE
- COLOR
- SHARPNESS
- SELF-TIMER
- FACE/EYE DETECTION SETTING
- PHOTOMETRY
- AF MODE
- FOCUS MODE
- FLASH MODE
- FLASH COMPENSATION
- MF ASSIST
- MOVIE MODE
- MOVIE ISO
- MIC LEVEL ADJUSTMENT
- SOUND & FLASH
- LCD BRIGHTNESS
- LCD COLOR
- SHUTTERTYPE
- NONE

 Select **NONE** to assign no option to the selected position.

 The quick menu can also be edited using the **⚙️ BUTTON SETTING > EDIT/SAVE QUICK MENU** option in the setup menu.


The Fn (Function) Buttons

Assign a role to the function buttons for quick access to the selected feature.

 The functions assigned to **T-Fn1** through **T-Fn4** can be accessed by flicking the monitor.


The default assignments are:

Fn1 (function 1) button

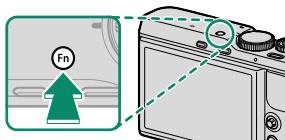


Auto image tagging

Fn2 (function 2) button

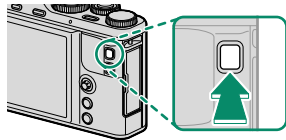


Focus check

T-Fn1 (flick up)

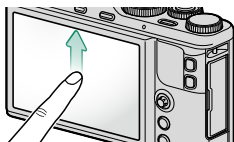


Snapshot

T-Fn2 (flick left)

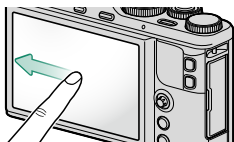


Square mode(1:1)

T-Fn3 (flick right)

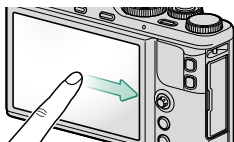

Face/eye detection setting

T-Fn4 (flick down)

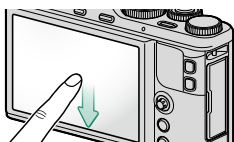

Control ring setting

Assigning a Role to the Function Buttons

The roles assigned to the **Fn** (Function) button and touch function gestures can be selected using **📷 BUTTON SETTING > FUNCTION (Fn) SETTING**.

- PREVIEW DEPTH OF FIELD
- ISO
- SELF-TIMER
- IMAGE SIZE
- SQUARE MODE(1:1)
- IMAGE QUALITY
- DYNAMIC RANGE
- FILM SIMULATION
- WHITE BALANCE
- PHOTOMETRY
- TOUCHZOOM
- AE BKT SETTING
- AE-LOCK
- AF-LOCK
- AE/AF LOCK
- INSTANT AF
- AF MODE
- FOCUS MODE
- SNAPSHOT
- FOCUS AREA
- FOCUS CHECK
- RELEASE TYPE
- FLASH MODE
- FLASH COMPENSATION
- MOVIE MODE
- FACE/EYE DETECTION SETTING
- RAW
- WIRELESS COMMUNICATION
- AUTO IMAGE TAGGING
- SELECT PAIRING DESTINATION
- Bluetooth ON/OFF
- SHUTTER TYPE
- PREVIEW EXP. IN MANUAL MODE
- PREVIEW PIC. EFFECT
- CONTROL RING SETTING
- NONE



To disable the **Fn** button, choose **NONE**.

AE-LOCK, **AF-LOCK**, **AE/AF LOCK**, and **INSTANT AF** cannot be assigned touch function gestures (**T-Fn1** through **T-Fn4**).

Role selection can also be accessed by pressing and holding the function or **DISP/BACK** button.

10 Peripherals and Optional Accessories

Accessories from Fujifilm

The following optional accessories are available from Fujifilm. For the latest information on the accessories available in your region, check with your local Fujifilm representative or visit http://www.fujifilm.com/products/digital_cameras/index.html.

Rechargeable Li-ion batteries

NP-95: Additional large-capacity NP-95 rechargeable batteries can be purchased as required.



Battery chargers

BC-65N: At +20 °C/+68 °F, the BC-65N charges an NP-95 in about 250 minutes.



Remote releases

RR-90: Use to reduce camera shake or keep the shutter open during a time exposure.




instax SHARE printers


SP-1/SP-2/SP-3: Connect via wireless LAN to print pictures on instax film.


Using a Remote Release


An optional RR-90 remote release can be used for long time-exposures. The RR-90 connects via the Micro USB (Micro-B) USB 2.0 connector.

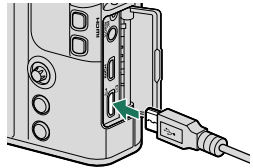

Alternatively, electronic releases from third-party suppliers can be connected via the remote release connector (ø2.5 mm 3-pole mini jack).

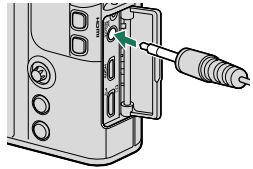


 A confirmation dialog will be displayed when a third-party release is connected; press **MENU/OK** and select **REMOTE** for **MOVIE SET-UP > MIC/REMOTE RELEASE**.

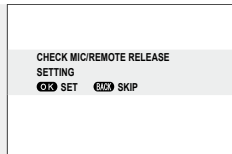

Using an External Microphone

Sound can be recorded with external microphones that connect using jacks 2.5 mm in diameter; microphones that require plug-in power cannot be used. See the microphone manual for details.

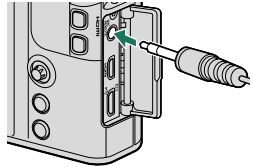

MEMO

11 Connections


HDMI Output

Camera shooting and playback displays can be output to HDMI devices.

Connecting to HDMI Devices

Connect the camera to TVs or other HDMI devices using a third-party HDMI cable.

- 1 Turn the camera off.
- 2 Connect the cable as shown below, making sure the connectors are fully inserted.

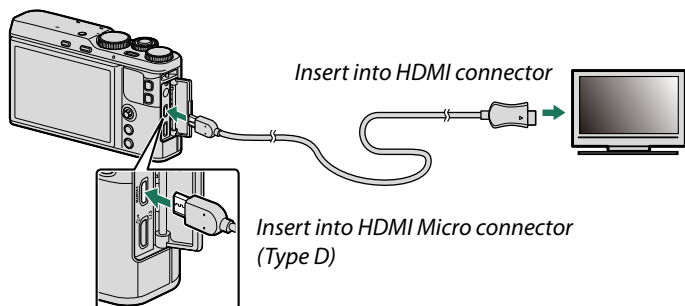


! Use an HDMI cable no more than 1.5 m (4.9 ft.) long.

- 3 Configure the device for HDMI input as described in the documentation supplied with the device.
- 4 Turn the camera on. The contents of the camera display will be shown on the HDMI device.


! The USB cable cannot be used while an HDMI cable is connected.


Shooting

Shoot photos and record movies while viewing the scene through the camera lens or saving footage to the HDMI device.

 This feature can be used to save 4K and Full HD movies to an HDMI recorder.

Playback

To start playback, press the camera  button. The camera monitor turns off and pictures and movies are output to the HDMI device. Note that the camera volume controls have no effect on sounds played on the TV; use the television volume controls to adjust the volume.

 Some televisions may briefly display a black screen when movie playback begins.


Wireless Connections (Bluetooth, Wireless LAN/Wi-Fi)

Access wireless networks and connect to computers, smartphones, or tablets. For more information, visit:

<http://fujifilm-dsc.com/wifi/>

Smart Phones and Tablets: FUJIFILM Camera Remote

Connect to the camera via Bluetooth or wireless LAN.

 To establish a wireless connection to the camera, you will need to install the latest version of the FUJIFILM Camera Remote app on your smartphone or tablet.

FUJIFILM Camera Remote

Once a connection has been established, you can use FUJIFILM Camera Remote to:


- Control the camera and take pictures remotely
- Receive pictures uploaded from the camera
- Browse the pictures on the camera and download selected pictures
- Upload location data to the camera
- Release the camera shutter
- Update camera firmware

For downloads and other information, visit:

http://app.fujifilm-dsc.com/en/camera_remote/

Smart Phones and Tablets: Bluetooth® Pairing

Use **CONNECTION SETTING > Bluetooth SETTINGS > PAIRING REGISTRATION** to pair the camera with smartphones or tablets. Pairing offers a simple method for downloading photos from the camera.

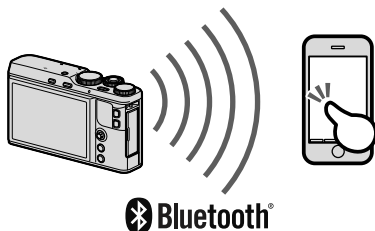


Photos are downloaded via a wireless connection.

Once pairing is complete, you will be able to synchronize the camera clock and location data with the smartphone or tablet (📖 156).

Smartphones and Tablets: Wi-Fi

Use the **WIRELESS COMMUNICATION** options in the shooting menu or the playback menu to connect to a smartphone or tablet via Wi-Fi.

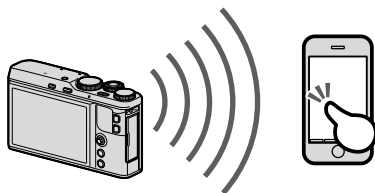


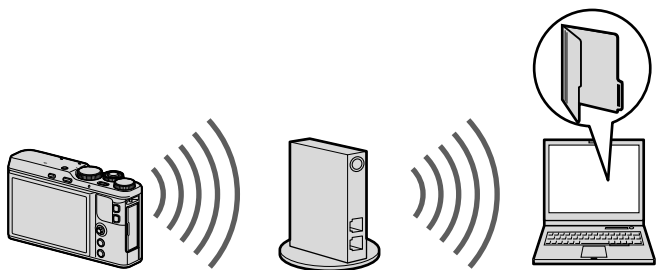
Computers: FUJIFILM PC AutoSave


Install the latest version of FUJIFILM PC AutoSave to your computer to upload pictures from the camera over wireless networks. For downloads and other information, visit:

http://app.fujifilm-dsc.com/en/pc_autosave/

Computers: Wireless Connections

You can upload pictures from the camera using the  **PC AUTO SAVE** option in the playback menu.



 You can also upload pictures by pressing and holding the **Fn1** (function 1) button in playback mode.

Connecting to Computers via USB

Connect the camera to a computer to download pictures.

Windows (MyFinePix Studio)

Use MyFinePix Studio to copy pictures to your computer, where they can be stored, viewed, organized, and printed. MyFinePix Studio is available for download from the following website:

<http://fujifilm-dsc.com/mfs/>

Once download is complete, double-click the downloaded file ("MFPS_Setup.EXE") and follow the on-screen instructions to complete installation.

Mac OS X/macOS

Pictures can be copied to your computer using Image Capture (supplied with your computer) or other software.

RAW FILE CONVERTER EX

To view RAW files on your computer, use RAW FILE CONVERTER EX, available for download from:

<http://fujifilm-dsc.com/rfc/>


Connecting the Camera

Connect the camera and computer using the supplied USB cable.

- 1 Find a memory card containing pictures you want to copy to the computer and insert the card into the camera.


! Loss of power during transfer could result in loss of data or damage to the memory card. Insert a fresh or fully-charged battery before connecting the camera.

- 2 Turn the camera off and connect the supplied USB cable as shown, making sure the connectors are fully inserted.

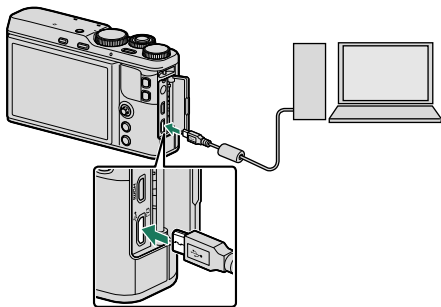

! The camera is equipped with a Micro USB (Micro-B) USB 2.0 connector.

- 3 Turn the camera on.
- 4 Copy pictures to the computer using MyFinePix Studio or applications provided with your operating system.
- 5 When transfer is complete, turn the camera off and disconnect the USB cable.

 If a memory card containing a large number of images is inserted, there may be a delay before the software starts and you may be unable to import or save images. Use a memory card reader to transfer pictures.

Connect the camera directly to the computer; do not use a USB hub or keyboard.

Do not disconnect the USB cable while data are being exchanged between the camera and computer or insert or remove memory cards while transfer is in progress. Failure to observe this precaution could result in loss of data or damage to the memory card.


In some cases, it may not be possible to access pictures saved to a network server using the software in the same way as on a standalone computer.

The user bears all applicable fees charged by the phone company or Internet service provider when using services that require an Internet connection.

instax SHARE Printers


Print pictures from your digital camera to instax SHARE printers.

Establishing a Connection


Select  **CONNECTION SETTING** > **instax PRINTER CONNECTION SETTING** in the camera setup menu and enter the instax SHARE printer name (SSID) and password.

The Printer Name (SSID) and Password

The printer name (SSID) can be found on the bottom of the printer; the default password is "1111". If you have already chosen a different password to print from a smartphone, enter that password instead.

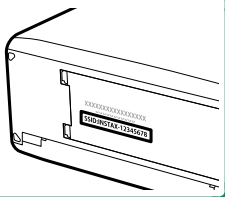

Printing Pictures

- 1 Turn the printer on.
- 2 Select  **instax PRINTER PRINT** in the camera playback menu. The camera will connect to the printer.



- 3 Use the focus stick (focus lever) to display the picture you want to print, then press **MENU/OK**.



Pictures taken with other cameras cannot be printed.

The area printed is smaller than the area visible in the LCD monitor.

The displays may vary depending on the type of printer connected.

- 4 The picture will be sent to the printer and printing will start.

MEMO

12

Technical Notes

Software from Fujifilm

The camera can be used with the following Fujifilm software.

FUJIFILM Camera Remote

Establish a wireless connection between your camera and a smartphone or tablet (📖 176).

http://app.fujifilm-dsc.com/en/camera_remote/

FUJIFILM PC AutoSave

Download pictures from your camera over wireless networks (📖 178).

http://app.fujifilm-dsc.com/en/pc_autosave/

MyFinePix Studio

Manage, view, print, and edit the many images downloaded from your digital camera (📖 179).

<http://fujifilm-dsc.com/mfs/>

RAW FILE CONVERTER EX

View RAW pictures on your computer and convert them into other formats (📖 179).

<http://fujifilm-dsc.com/rfc/>

For Your Safety

IMPORTANT SAFETY INSTRUCTIONS

- **Read Instructions:** All the safety and operating instructions should be read before the appliance is operated.
- **Retain Instructions:** The safety and operating instructions should be retained for future reference.
- **Heed Warnings:** All warnings on the appliance and in the operating instructions should be adhered to.
- **Follow Instructions:** All operating and use instructions should be followed.

Installation

Power Sources: This video product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For video products intended to operate from battery power, or other sources, refer to the operating instructions.

Grounding or Polarization: This video product is equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

Alternate Warnings: This video product is equipped with a three-wire grounding-type plug, a plug having a third (grounding) pin. This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding type plug.

Overloading: Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

Ventilation: Slots and openings in the cabinet are provided for ventilation, to ensure reliable operation of the video product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the video product on a bed, sofa, rug, or other similar surface.

This video product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to. This video product should never be placed near or over a radiator or heat register.

Attachments: Do not use attachments not recommended by the video product manufacturer as they may cause hazards.

Water and Moisture: Do not use this video product near water—for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, and the like.

Power-Cord Protection: Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.

Accessories: Do not place this video product on an unstable cart, stand, tripod, bracket, or table. The video product may fall, causing serious injury to a child or adult, and serious damage to the appliance. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the video product. Any mounting of the appliance should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.


An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.



Antennas

Outdoor Antenna Grounding: If an outside antenna or cable system is connected to the video product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code, ANSI/NFPA No. 70, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

EXAMPLE OF ANTENNA GROUNDING AS PER NATIONAL ELECTRICAL CODE

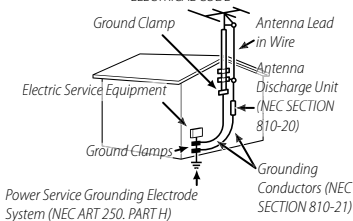

Power Lines: An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

Use

Cleaning: Unplug this video product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

Object and Liquid Entry: Never push objects of any kind into this video product through openings as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the video product.

Lightning: For added protection for this video product receiver during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the video product due to lightning and power-line surges.

Service

Servicing: Do not attempt to service this video product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

Damage Requiring Service: Unplug this video product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- When the power-supply cord or plug is damaged
- If liquid has been spilled, or objects have fallen into the video product.
- If the video product has been exposed to rain or water.
- If the video product has been dropped or the cabinet has been damaged.

If the video product does not operate normally follow the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the video product to its normal operation.

When the video product exhibits a distinct change in performance — this indicates a need for service.

Replacement Parts: When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

Safety Check: Upon completion of any service or repairs to this video product, ask the service technician to perform safety checks to determine that the video product is in proper operating condition.



Be sure to read these notes before use

Safety Notes




- Make sure that you use your camera correctly. Read these safety notes and your *Owner's Manual* carefully before use.
- After reading these safety notes, store them in a safe place.

About the Icons




The icons shown below are used in this document to indicate the severity of the injury or damage that can result if the information indicated by the icon is ignored and the product is used incorrectly as a result.

	WARNING	This icon indicates that death or serious injury can result if the information is ignored.
	CAUTION	This icon indicates that personal injury or material damage can result if the information is ignored.

The icons shown below are used to indicate the nature of the instructions which are to be observed.

	Triangular icons tell you that this information requires attention ("Important").
	Circular icons with a diagonal bar tell you that the action indicated is prohibited ("Prohibited").
	Filled circles with an exclamation mark indicate an action that must be performed ("Required").

The symbols on the product (including the accessories) represent the following:

	AC
	DC
	Class II equipment (The construction of the product is double-insulated.)

WARNING

If a problem arises, turn the camera off, remove the battery, and disconnect and unplug the AC power adapter.



Continued use of the camera when it is emitting smoke, is emitting any unusual odor, or is in any other abnormal state can cause a fire or electric shock. Contact your Fujifilm dealer.




 







 
Do not allow water or foreign objects to enter the camera.







 














If water or foreign objects get inside the camera, turn the camera off, remove the battery, and disconnect and unplug the AC power adapter. Continued use of the camera can cause a fire or electric shock. Contact your Fujifilm dealer.







Do not use the camera in the bathroom or shower. This can cause a fire or electric shock.

 WARNING	
	Never attempt to change or take apart the camera (never open the case). Failure to observe this precaution can cause fire or electric shock.
	Should the case break open as the result of a fall or other accident, do not touch the exposed parts. Failure to observe this precaution could result in electric shock or injury from touching the damaged parts. Remove the battery immediately, taking care to avoid injury or electric shock, and take the product to the point of purchase for consultation.
	Do not change, heat or unduly twist or pull the connection cord and do not place heavy objects on the connection cord. These actions could damage the cord and cause a fire or electric shock. If the cord is damaged, contact your Fujifilm dealer.
	Do not place the camera on an unstable surface. This can cause the camera to fall or tip over and cause injury.
	Never attempt to take pictures while in motion. Do not use the camera while walking or driving. This can result in you falling down or being involved in a traffic accident.
	Do not touch any metal parts of the camera during a thunderstorm. This can cause an electric shock due to induced current from the lightning discharge.
	Do not use the battery except as specified. Load the battery as shown by the indicator.
	Do not disassemble, modify, or heat batteries. Do not drop, strike, or throw batteries or otherwise subject them to strong impacts. Do not use batteries that show signs of leaking, deformation, discoloration, or other abnormalities. Use only designated chargers to recharge rechargeable batteries and do not attempt to recharge non-rechargeable Li-ion or alkaline batteries. Do not short batteries or store them with metallic objects. Failure to observe these precautions could result in the batteries overheating, igniting, rupturing, or leaking, causing fire, burns, or other injury.
	Use only batteries or AC power adapters specified for use with this camera. Do not use voltages other than the power supply voltage shown. The use of other power sources can cause a fire.
	If the battery leaks and fluid gets in contact with your eyes, skin or clothing, flush the affected area with clean water and seek medical attention or call an emergency number right away.
	Do not use the charger to charge batteries other than those specified here. The supplied charger is for use only with batteries of the type supplied with the camera. Using the charger to charge conventional batteries or other types of rechargeable batteries can cause the battery to leak, overheat or burst.


 WARNING	
	Using a flash too close to a person's eyes may cause visual impairment. Take particular care when photographing infants and young children.
	Do not remain in prolonged contact with hot surfaces. Failure to observe this precaution could result in low-temperature burns, particularly at high ambient temperatures or with users who suffer from poor circulation or reduced sensation, in which case use of a tripod or similar precautions are recommended.
	Do not leave one part of the body in contact with the product for prolonged periods while the product is on. Failure to observe this precaution could result in low-temperature burns, particularly during prolonged use, at high ambient temperatures, or with users who suffer from poor circulation or reduced sensation, in which case use of a tripod or similar precautions are recommended.
	Do not use in the presence of flammable objects, explosive gases, or dust.
	When carrying the battery, install it in a digital camera or keep it in the hard case. When storing the battery, keep it in the hard case. When discarding, cover the battery terminals with insulation tape. Contact with other metallic objects or batteries could cause the battery to ignite or burst.
	Keep memory cards, hot shoes, and other small parts out of the reach of small children. Children may swallow small parts; keep out of reach of children. Should a child swallow a small part, seek medical attention or call emergency.
	Keep out of reach of small children. Among the elements that could cause injury are the strap, which could become entangled about a child's neck, causing strangulation, and the flash, which could cause visual impairment.
	Follow the directions of airline and hospital personnel. This product generates radio-frequency emissions that could interfere with navigational or medical equipment.
 CAUTION	
	Do not use this camera in locations affected by oil fumes, steam, humidity or dust. This can cause a fire or electric shock.
	Do not leave this camera in places subject to extremely high temperatures. Do not leave the camera in locations such as a sealed vehicle or in direct sunlight. This can cause a fire.
	Do not place heavy objects on the camera. This can cause the heavy object to tip over or fall and cause injury.
	Do not move the camera while the AC power adapter is still connected. Do not pull on the connection cord to disconnect the AC power adapter. This can damage the power cord or cables and cause a fire or electric shock.

 CAUTION
 Do not cover or wrap the camera or the AC power adapter in a cloth or blanket. This can cause heat to build up and distort the casing or cause a fire.
 Do not use the plug if it is damaged or if it does not fit securely into the outlet. Failure to observe this precaution could result in fire or electric shock.
 When you are cleaning the camera or you do not plan to use the camera for an extended period, remove the battery and disconnect and unplug the AC power adapter. Failure to do so can cause a fire or electric shock.
 When charging ends, unplug the charger from the power socket. Leaving the charger plugged into the power socket can cause a fire.

 CAUTION
 When a memory card is removed, the card could come out of the slot too quickly. Use your finger to hold it and gently release the card. Injury could result to those struck by the ejected card.
 Request regular internal testing and cleaning for your camera. Build-up of dust in your camera can cause a fire or electric shock. Contact your Fujifilm dealer to request internal cleaning every two years. Please note that this service is not free of charge.
 Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

The Battery and Power Supply

Note: Check the type of battery used in your camera and read the appropriate sections.

 **WARNING:** Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

The following describes the proper use of batteries and how to prolong their life. Incorrect use can shorten battery life or cause leakage, overheating, fire, or explosion.

Li-ion Batteries

Read this section if your camera uses a rechargeable Li-ion battery.

The battery is not charged at shipment. Charge the battery before use. Keep the battery in its case when not in use.

■ Notes on the Battery

The battery gradually loses its charge when not in use. Charge the battery one or two days before use.

Battery life can be extended by turning the camera off when not in use.

Battery capacity decreases at low temperatures; a depleted battery may not function when cold. Keep a fully charged spare battery in a warm place and exchange as necessary, or keep the battery in your pocket or other warm place and insert it in the camera only when shooting. Do not place the battery in direct contact with hand warmers or other heating devices.

■ Charging the Battery

Charge the battery in the supplied battery charger. Charging times will increase at ambient temperatures below +10°C (+50°F) or above +35°C (+95°F). Do not attempt to charge the battery at temperatures above +40°C (+104°F); at temperatures below 0°C (+32°F), the battery will not charge.

Do not attempt to recharge a fully charged battery. The battery does not however need to be fully discharged before charging.

The battery may be warm to the touch immediately after charging or use. This is normal.

■ Battery Life

At normal temperatures, the battery can be recharged about 300 times. A noticeable decrease in the length of time the battery will hold a charge indicates that it has reached the end of its service life and should be replaced.

■ Storage

Performance may be impaired if the battery is left unused for extended periods when fully charged. Run the battery flat before storing it.

If the camera will not be used for an extended period, remove the battery and store it in a dry place with an ambient temperature of from +15°C to +25°C (+59°F to +77°F). Do not store in locations exposed to extremes of temperature.

■ Cautions: Handling the Battery

- Do not transport or store with metal objects such as necklaces or hairpins.
- Do not expose to flame or heat.
- Do not disassemble or modify.
- Use with designated chargers only.
- Dispose of used batteries promptly.
- Do not drop or subject to strong physical shocks.
- Do not expose to water.
- Keep the terminals clean.
- The battery and camera body may become warm to the touch after extended use. This is normal.

■ Caution: Disposal

Dispose of used batteries in accord with local regulations. Attention should be drawn to the environmental aspects of battery disposal. Use the apparatus under moderate climate.

AC Power Adapters

Use only Fujifilm AC power adapters designated for use with this camera. Other adapters could damage the camera.

- The AC power adapter is for indoor use only.
- Be sure the DC plug is securely connected to the camera.
- Turn the camera off before disconnecting the adapter. Disconnect the adapter by the plug, not the cable.
- Do not use with other devices.

- Do not disassemble.
- Do not expose to high heat and humidity.
- Do not subject to strong physical shocks.
- The adapter may hum or become hot to the touch during use. This is normal.
- If the adapter causes radio interference, reorient or relocate the receiving antenna.

Using the Camera

- Do not aim the camera at extremely bright light sources, such as the sun in a cloudless sky. Failure to observe this precaution could damage the camera image sensor.
- Strong sunlight focused through the viewfinder may damage the panel of electronic viewfinder (EVF). Do not aim the electronic viewfinder at the sun.

Trademark Information

Digital Split Image is a trademark or registered trademark of FUJIFILM Corporation. xD-Picture Card and  are trademarks of FUJIFILM Corporation. The typefaces included herein are solely developed by DynaComware Taiwan Inc. Mac, OS X, and macOS are trademarks of Apple Inc. in the U.S.A. and other countries. Windows is a registered trademark of Microsoft Corporation in the U.S.A. and other countries. Wi-Fi® and Wi-Fi Protected Setup® are registered trademarks of the Wi-Fi Alliance. The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc., and any use of such marks by Fujifilm is under license. The SDHC and SDXC logos are trademarks of SD-3C, LLC. The HDMI logo is a trademark or registered trademark of HDMI Licensing LLC. All other trade names mentioned in this manual are the trademarks or registered trademarks of their respective owners.

Take Test Shots

Before taking photographs on important occasions (such as at weddings or before taking the camera on a trip), take a test shot and view the results to ensure that the camera is functioning normally. FUJIFILM Corporation cannot accept liability for damages or lost profits incurred as a result of product malfunction.

Notes on Copyright

Unless intended solely for personal use, images recorded using your digital camera system cannot be used in ways that infringe copyright laws without the consent of the owner. Note that some restrictions apply to the photographing of stage performances, entertainments, and exhibits, even when intended purely for personal use. Users are also asked to note that the transfer of memory cards containing images or data protected under copyright laws is only permissible within the restrictions imposed by those copyright laws.

Electrical Interference

This camera may interfere with hospital or aviation equipment. Consult with hospital or airline staff before using the camera in a hospital or on an aircraft.

Handling

To ensure that images are recorded correctly, do not subject the camera to impact or physical shocks while images are being recorded.

Color Television Systems

NTSC (National Television System Committee) is a color television telecasting specification adopted mainly in the U.S.A., Canada, and Japan. PAL (Phase Alternation by Line) is a color television system adopted mainly in European countries and China.

Liquid Crystal

In the event that the display is damaged, care should be taken to avoid contact with liquid crystal. Take the urgent action indicated should any of the following situations arise:

- **If liquid crystal comes in contact with your skin**, clean the area with a cloth and then wash thoroughly with soap and running water.
- **If liquid crystal enters your eyes**, flush the affected eye with clean water for at least 15 minutes and then seek medical assistance.
- **If liquid crystal is swallowed**, rinse your mouth thoroughly with water. Drink large quantities of water and induce vomiting, then seek medical assistance.

Although the display is manufactured using extremely high-precision technology, it may contain pixels that are always lit or that do not light. This is not a malfunction, and images recorded with the product are unaffected.

Exif Print (Exif Version 2.3)

Exif Print is a newly revised digital camera file format in which information stored with photographs is used for optimal color reproduction during printing.

IMPORTANT NOTICE: Read Before Using the Software

Direct or indirect export, in whole or in part, of licensed software without the permission of the applicable governing bodies is prohibited.

NOTICES

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

Please read the "Safety Notes" and make sure you understand them before using the camera.

Perchlorate Material—special handling may apply. See:
<http://www.dtscc.ca.gov/hazardouswaste/perchlorate>

For Customers in the U.S.A.

Tested To Comply With FCC Standards FOR HOME OR OFFICE USE



Contains IC : 7736B-02100005

Contains FCC ID : W2Z-02100005

FCC Statement: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Radiation Exposure Statement: This device meets the government's requirements for exposure to radio waves. This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard for wireless device employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. Tests for SAR are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands.

Notes on the Grant: To comply with Part 15 of the FCC Rules, this product must be used with a Fujifilm-specified ferrite-core A/V cable, USB cable, and DC supply cord.



A lithium ion battery that is recyclable powers the product you have purchased. Please call 1-800-8-BATTERY for information on how to recycle this battery.

For Customers in Canada**CAN ICES-3 (B)/NMB-3(B)**

CAUTION: This Class B digital apparatus complies with Canadian ICES-003.

Industry Canada statement: This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions: (1) This device may not cause interference; and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter, except tested built-in radios. The County Code Selection feature is disabled for products marketed in the US/ Canada.

Radiation Exposure Statement: The available scientific evidence does not show that any health problems are associated with using low power wireless devices. There is no proof, however, that these low power wireless devices are absolutely safe. Low power Wireless devices emit low levels of radio frequency energy (RF) in the microwave range while being used. Whereas high levels of RF can produce health effects (by heating tissue), exposure of low-level RF that does not produce heating effects causes no known adverse health effects. Many studies of low-level RF exposures have not found any biological effects. Some studies have suggested that some biological effects might occur, but such findings have not been confirmed by additional research. XF10 has been tested and found to comply with IC radiation exposure limits set forth for an uncontrolled environment and meets RSS-102 of the IC radio frequency (RF) Exposure rules.

Disposal of Electrical and Electronic Equipment in Private Households**In the European Union, Norway, Iceland and Liechtenstein:**

This symbol on the product, or in the manual and in the warranty, and/or on its packaging indicates that this product shall not be treated as household waste. Instead it should be taken to an applicable collection point for the recycling of electrical and electronic equipment.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences to the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

This symbol on the batteries or accumulators indicates that those batteries shall not be treated as household waste.

If your equipment contains easy removable batteries or accumulators please dispose these separately according to your local requirements.

The recycling of materials will help to conserve natural resources. For more detailed information about recycling this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

In Countries Outside the European Union, Norway, Iceland and Liechtenstein:

If you wish to discard this product, including the batteries or accumulators, please contact your local authorities and ask for the correct way of disposal.

In Japan: This symbol on the batteries indicates that they are to be disposed of separately.



Wireless Network and Bluetooth Devices: Cautions

This product complies with the following EU Directives:

- RoHS Directive 2011/65/EU
- RE Directive 2014/53/EU

Hereby, FUJIFILM Corporation declares that the radio equipment type FF180002 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: http://www.fujifilm.com/products/digital_cameras/x/fujifilm_xf10/pdf/index/fujifilm_xf10_cod.pdf

This compliance is indicated by the following conformity marking placed on the product:



This marking is valid for non-Telecom products and EU harmonized Telecom products (e.g. Bluetooth®).

IMPORTANT: Read the following notices before using the camera's built-in wireless transmitter.

Ⓢ This product, which contains encryption function developed in the United States, is controlled by the United States Export Administration Regulations and may not be exported or re-exported to any country to which the United States embargoes goods.

- **Use only a wireless network or Bluetooth device.** Fujifilm does not accept liability for damages resulting from unauthorized use. Do not use in applications requiring a high degree of reliability, for example in medical devices or other systems that may directly or indirectly impact human life. When using the device in computer and other systems that demand a greater degree of reliability than offered by wireless network or Bluetooth devices, be sure to take all necessary precautions to ensure safety and prevent malfunction.
- **Use only in the country in which the device was purchased.** This device conforms to regulations governing wireless network and Bluetooth devices in the country in which it was purchased. Observe all location regulations when using the device. Fujifilm does not accept liability for problems arising from use in other jurisdictions.
- **Do not use the device in locations subject to magnetic fields, static electricity, or radio interference.** Do not use the transmitter in the vicinity of microwave ovens or in other locations subject to magnetic fields, static electricity, or radio interference that may prevent reception of wireless signals. Mutual interference may occur when the transmitter is used in the vicinity of other wireless devices operating in the 2.4 GHz band.

- **The wireless transmitter operates in the 2.4 GHz band using DSSS, OFDM and GFSK modulation.**

• **Security:** Wireless network and Bluetooth devices transmit data via radio and consequently their use requires greater attention to security than applies in the case of wired networks.

- Do not connect to unknown networks or networks to which you do not have access rights, even if they are displayed on your device, as such access may be considered unauthorized. Connect only to networks to which you have access rights.
- Be aware that wireless transmissions may be vulnerable to interception by third parties.

- **The following may be punishable by law:**


- Disassembly or modification of this device
- Removal of device certification labels

- **This device operates on the same frequency as commercial, educational, and medical devices and wireless transmitters.**

It also operates on the same frequency as licensed transmitters and special unlicensed low-voltage transmitters used in RFID tracking systems for assembly lines and in other similar applications.

- **To prevent interference with the above devices, observe the following precautions.**

Confirm that the RFID transmitter is not in operation before using this device. Should you observe that the device causes interference in licensed transmitters used for RFID tracking, immediately stop using the affected frequency or move the device to another location. If you notice that this device causes interference in low-voltage RFID tracing systems, contact a Fujifilm representative.

- **Do not use this device on board an aircraft.** Note that Bluetooth can remain on even when the camera is off. Bluetooth can be disabled by selecting **OFF** for  **CONNECTION SETTING > Bluetooth SETTINGS > Bluetooth ON/OFF.**

Be sure to read these notes before using the lens

Safety Notes

- Make sure that you use the lens correctly. Read these safety notes and the camera *Owner's Manual* carefully before use.
- After reading these safety notes, store them in a safe place.

About the Icons

The icons shown below are used in this document to indicate the severity of the injury or damage that can result if the information indicated by the icon is ignored and the product is used incorrectly as a result.

	WARNING This icon indicates that death or serious injury can result if the information is ignored.
	CAUTION This icon indicates that personal injury or material damage can result if the information is ignored.

The icons shown below are used to indicate the nature of the instructions which are to be observed.

	Triangular icons tell you that this information requires attention ("Important").
	Circular icons with a diagonal bar tell you that the action indicated is prohibited ("Prohibited").
	Filled circles with an exclamation mark indicate an action that must be performed ("Required").

⚠ WARNING

	<i>Do not immerse in or expose to water.</i> Failure to observe this precaution can cause a fire or electric shock.
	<i>Do not disassemble (do not open the case).</i> Failure to observe this precaution can cause fire, electric shock, or injury due to product malfunction.
	<i>Should the case break open as the result of a fall or other accident, do not touch the exposed parts.</i> Failure to observe this precaution could result in electric shock or in injury from touching the damaged parts. Remove the battery immediately, taking care to avoid injury or electric shock, and take the product to the point of purchase for consultation.
	<i>Do not place on unstable surfaces.</i> The product may fall, causing injury.
	<i>Do not view the sun through the lens or camera viewfinders.</i> Failure to observe this precaution can cause permanent visual impairment.

⚠ CAUTION

	<i>Do not use or store in locations that are exposed to steam, or smoke or are very humid or extremely dusty.</i> Failure to observe this precaution can cause fire or electric shock.
	<i>Do not leave in direct sunlight or in locations subject to very high temperatures, such as in a closed vehicle on a sunny day.</i> Failure to observe this precaution can cause fire.
	<i>Keep out of the reach of small children.</i> This product could cause injury in the hands of a child.
	<i>Do not handle with wet hands.</i> Failure to observe this precaution can cause electric shock.
	<i>Keep the sun out of the frame when shooting backlit subjects.</i> Sunlight focused into the camera when the sun is in or close to the frame can cause fire or burns.
	<i>When the product is not in use, replace the lens caps and store out of direct sunlight.</i> Sunlight focused by the lens can cause fire or burns.
	<i>Do not carry the camera or lens while they are attached to a tripod.</i> The product can fall or strike other objects, causing injury.

Product Care


To ensure continued enjoyment of the product, observe the following precautions.

Camera body: Use a soft, dry cloth to clean the camera body after each use. Do not use alcohol, thinner, or other volatile chemicals, which could discolor or deform the leather on the camera body. Any liquid on the camera should be removed immediately with a soft, dry cloth. Use a blower to remove dust from the monitor, taking care to avoid scratches, and then gently wipe with a soft, dry cloth. Any remaining stains can be removed by wiping gently with a piece of Fujifilm lens-cleaning paper to which a small amount of lens-cleaning fluid has been applied. Replace the lens cap before putting the camera away.

Firmware Updates

Updates to product firmware may result in changes not described in the manual. For more information, visit:
http://www.fujifilm.com/support/digital_cameras/software

Checking the Firmware Version

 The camera will only display the firmware version if a memory card is inserted.

- 1 Turn the camera off and check that a memory card is inserted.
- 2 Turn the camera on while holding the **DISP/BACK** button. The current firmware version will be displayed; check the firmware version.
- 3 Turn the camera off.

Troubleshooting

Consult the table below should you encounter problems using your camera. If you don't find the solution here, contact your local Fujifilm distributor.

Power and Battery

Problem	Solution
The camera does not turn on.	<ul style="list-style-type: none">• The battery is exhausted: Charge the battery or insert a fully-charged spare battery (📖 30).• The battery is inserted incorrectly: Reinsert in the correct orientation (📖 26).• The battery-chamber cover is not latched: Latch the battery-chamber cover (📖 26).
The battery runs down quickly.	<ul style="list-style-type: none">• The battery is cold: Warm the battery by placing it in a pocket or other warm place and reinsert it in the camera immediately before taking a picture.• There is dirt on the battery terminals: Clean the terminals with a soft, dry cloth.• ON is selected for PRE-AF: Turn PRE-AF off (📖 105).• S/A+ is selected for shooting mode: Select a different mode (📖 52).• The battery has been charged many times: The battery has reached the end of its charging life. Purchase a new battery.
The camera turns off suddenly.	The battery is exhausted: Charge the battery or insert a fully-charged spare battery (📖 30).
Charging does not start.	Reinsert the battery in the correct orientation and make sure that the AC Power Adapter is plugged in (📖 26, 30).
Charging is slow.	Charge the battery at room temperature.

Problem	Solution
The charging lamp blinks, but the battery does not charge.	<ul style="list-style-type: none"> • There is dirt on the battery terminals: Clean the terminals with a soft, dry cloth (📖 26). • The battery has been charged many times: The battery has reached the end of its charging life. Purchase a new battery. If the battery still fails to charge, contact your Fujifilm dealer (📖 170).

Menus and Displays

Problem	Solution
Display is not in English.	Select ENGLISH for 言語/LANG. (📖 37, 146).

Shooting

Problem	Solution
No picture is taken when the shutter button is pressed.	<ul style="list-style-type: none"> • The memory card is full: Insert a new memory card or delete pictures (📖 26, 136). • The memory card is not formatted: Format the memory card (📖 159). • There is dirt on the memory card contacts: Clean the contacts with a soft, dry cloth. • The memory card is damaged: Insert a new memory card (📖 26). • The battery is exhausted: Charge the battery or insert a fully-charged spare battery (📖 30). • The camera has turned off automatically: Turn the camera on (📖 33). • The indicator lamp was orange when you attempted to record a panorama: Wait until the indicator lamps turns off (📖 59).
Mottling (“noise”) appears in the monitor when the shutter button is pressed halfway.	Gain is increased to aid composition when the subject is poorly lit and aperture is stopped down, which may result in noticeable mottling when images are previewed in the displays. Images taken with the camera are unaffected.
The camera does not focus.	The subject is not suited to autofocus: Use focus lock or manual focus (📖 86).

Problem	Solution
No face is detected.	<ul style="list-style-type: none"> • The subject's face is obscured by sunglasses, a hat, long hair, or other objects: Remove the obstructions (📖 104). • The subject's face occupies only a small area of the frame: Change the composition so that the subject's face occupies a larger area of the frame (📖 104). • The subject's head is tilted or horizontal: Ask the subject to hold their head straight (📖 104). • The camera is tilted: Keep the camera level. • The subject's face is poorly lit: Shoot in bright light.
Wrong subject is selected.	The selected subject is closer to the center of the frame than the main subject. Recompose the picture or turn face detection off and frame the picture using focus lock (📖 86).
Movie recording, 4K burst, and 4K multi-focus are unavailable.	The memory card write speed is too slow: Use a memory card with a UHS speed class of 3 or better (📖 29, 46, 71).
The flash does not fire.	<ul style="list-style-type: none"> • The battery is exhausted: Charge the battery or insert a fully-charged spare battery (📖 30). • The camera is in bracketing or continuous mode: Select single frame mode (📖 69, 74). • OFF is selected for SOUND & FLASH: Select ON (📖 147).
Some flash modes are not available.	OFF is selected for SOUND & FLASH: Select ON (📖 147).
The flash does not fully light the subject.	<ul style="list-style-type: none"> • The subject is not in range of the flash: Position the subject in range of the flash. • The flash window is obstructed: Hold the camera correctly. • Shutter speed is faster than the sync speed: Choose a slower shutter speed (📖 54, 57, 209).
Pictures are blurred.	<ul style="list-style-type: none"> • The lens is dirty: Clean the lens. • The lens is blocked: Keep objects away from the lens (📖 40). • !AF is displayed during shooting and the focus frame is displayed in red: Check focus before shooting (📖 41).

Problem	Solution
Pictures are mottled.	<ul style="list-style-type: none"> • Shutter speed is slow and the ambient temperature is high: This is normal and does not indicate a malfunction. • The camera has been used continuously at high temperatures or a temperature warning is displayed: Turn the camera off and wait for it to cool down (📖 33, 206).

Playback

Problem	Solution
Pictures are grainy.	The pictures were taken with a different make or model of camera.
Playback zoom is unavailable.	The pictures were created using RESIZE or with a different make or model of camera.
No sound in movie playback.	<ul style="list-style-type: none"> • Playback volume is too low: Adjust playback volume (📖 148). • The microphone was obstructed: Hold the camera correctly during recording. • The speaker is obstructed: Hold the camera correctly during playback. • OFF is selected for SOUND & FLASH: Select ON (📖 147).
Selected pictures are not deleted.	Some of the pictures selected for deletion are protected. Remove protection using the device with which it was originally applied (📖 139).
File numbering is unexpectedly reset.	The battery-chamber cover was opened while the camera was on. Turn the camera off before opening the battery-chamber cover (📖 154).

Connections

Problem	Solution
The monitor is blank.	The camera is connected to a TV: Pictures will be displayed on the TV instead of in the camera monitor (📖 174).

Problem	Solution
No picture or sound on TV.	<ul style="list-style-type: none"> • The camera is not properly connected: Connect the camera properly (📖 174). • Input on the television is set to “TV”: Set input to “HDMI” (📖 174). • The volume on the TV is too low: Use the controls on the television to adjust the volume (📖 174).
The computer does not recognize the camera.	Be sure the camera and computer are correctly connected (📖 179).
Cannot transfer RAW or JPEG files to computer.	Use MyFinePix Studio to transfer pictures (Windows only; 📖 179).

Wireless Transfer

For additional information on troubleshooting wireless connections, visit: <http://digital-cameras.support.fujifilm.com/app?pid=x>

Problem	Solution
Problem connecting or uploading pictures to smartphone.	<ul style="list-style-type: none"> • The smartphone is too far away: Move the devices closer (📖 176). • Nearby devices are causing radio interference: Move the camera and smartphone away from microwave ovens or cordless phones (📖 176).
Cannot upload images.	<ul style="list-style-type: none"> • The smartphone is connected to another device: The smartphone and camera can connect to only one device at a time. End the connection and try again. • There are several smartphones in the vicinity: Try connecting again. The presence of multiple smartphones can make connection difficult. • The image was created on another device: The camera may not be able to upload images created on other devices. • The image is a movie: Uploading movies takes some time. Movies intended for display on a smartphone or tablet should be recorded at a frame size of 1280×720 (HD) or smaller. For information on viewing the pictures on the camera, visit: http://app.fujifilm-dsc.com/en/camera_remote/




Problem	Solution
Smartphone will not display pictures.	Select ON for RESIZE IMAGE FOR SMARTPHONE (31). Selecting OFF increases upload times for larger images; in addition, some phones may not display images over a certain size (158).

Miscellaneous






Problem	Solution
The camera is unresponsive.	<ul style="list-style-type: none"> • Temporary camera malfunction: Remove and reinsert the battery (26). • The battery is exhausted: Charge the battery or insert a fully-charged spare battery (30). • The camera is connected to a wireless LAN: End the connection.
The camera does not function as expected.	Remove and reinsert the battery (26). If the problem persists, contact your Fujifilm dealer.
No sound.	<ul style="list-style-type: none"> • Adjust the volume (148). • Select ON for SOUND & FLASH (147).
Time and date stamps.	<ul style="list-style-type: none"> • Time and date stamps are not correct: Set the camera clock (37, 146). • Time and date stamps appear on photographs: Time and date stamps cannot be deleted. To prevent stamps appearing on new photographs, select OFF for SAVE DATA SET-UP > DATE STAMP (155).

Warning Messages and Displays

The following warnings appear in the display.





Warning	Description
 (red)	Low battery. Charge the battery or insert a fully-charged spare battery.
 (blinks red)	Battery exhausted. Charge the battery or insert a fully-charged spare battery.
!AF (displayed in red with red focus frame)	The camera cannot focus. Use focus lock to focus on another subject at the same distance, then recompose the picture.
Aperture or shutter speed displayed in red	The subject is too bright or too dark and the picture will be over- or under-exposed. Use the flash for additional lighting when taking photographs of poorly-lit subject.
FOCUS ERROR	Camera malfunction. Turn the camera off and then on again. If the message persists, contact a Fujifilm dealer.
LENS CONTROL ERROR	
TURN OFF THE CAMERA AND TURN ON AGAIN	
NO CARD	The shutter can only be released when a memory card is inserted. Insert a memory card.
CARD NOT INITIALIZED	<ul style="list-style-type: none">• The memory card is not formatted or the memory card has been formatted in a computer or other device: Format the memory card using  FORMAT.• The memory card contacts require cleaning: Clean the contacts with a soft, dry cloth. If the message is repeated, format the card. If the message persists, replace the card.• Camera malfunction: Contact a Fujifilm dealer.

Warning	Description
CARD ERROR	<ul style="list-style-type: none"> • The memory card is not formatted for use in the camera: Format the card. • The memory card contacts require cleaning or the memory card is damaged: Clean the contacts with a soft, dry cloth. If the message is repeated, format the card. If the message persists, replace the card. • Incompatible memory card: Use a compatible card. • Camera malfunction: Contact a Fujifilm dealer.
PROTECTED CARD	The memory card is locked. Unlock the card.
BUSY	The memory card is incorrectly formatted. Use the camera to format the card.
SD MEMORY FULL	The memory card is full and pictures cannot be recorded. Delete pictures or insert a memory card with more free space.
WRITE ERROR	<ul style="list-style-type: none"> • Memory card error or connection error: Reinsert the card or turn the camera off and then on again. If the message persists, contact a Fujifilm dealer. • Not enough memory remaining to record additional pictures: Delete pictures or insert a memory card with more free space. • The memory card is not formatted: Format the memory card.
FRAME NO. FULL	The camera has run out of frame numbers (current frame number is 999-9999). Format the memory card and select RENEW for FRAME NO. . Take a picture to reset frame numbering to 100-0001, then select CONTINUOUS for FRAME NO.

Warning	Description
READ ERROR	<ul style="list-style-type: none"> • The file is corrupt or was not created with the camera: The file cannot be viewed. • The memory card contacts require cleaning: Clean the contacts with a soft, dry cloth. If the message is repeated, format the card. If the message persists, replace the card. • Camera malfunction: Contact a Fujifilm dealer.
PROTECTED FRAME	An attempt was made to delete or rotate to a protected picture. Remove protection and try again.
CAN NOT CROP	The picture is damaged or was not created with the camera.
DPOF FILE ERROR	Print orders can contain no more than 999 pictures. Copy any additional pictures you wish to print to another memory card and create a second print order.
CAN NOT ROTATE	The selected picture cannot be rotated.
 CAN NOT ROTATE	Movies cannot be rotated.
CAN NOT SET DPOF	The picture cannot be printed using DPOF.
 CAN NOT SET DPOF	Movies cannot be printed using DPOF.
 CANNOT EXECUTE	Red-eye removal cannot be applied to movies.
 CANNOT EXECUTE	Red-eye removal cannot be applied to pictures created with other devices.
	Turn the camera off and wait for it to cool. Mottling may increase in pictures taken when this warning is displayed.


Memory Card Capacity

The following table shows the recording time or number of pictures available at different image sizes. All figures are approximate; file size varies with the scene recorded, producing wide variations in the number of files that can be stored. The number of exposures or length remaining may not diminish at an even rate.

		Capacity		8 GB		16 GB	
		FINE	NORMAL	FINE	NORMAL		
Photos	 3:2	668	1064	1337	2130		
	RAW (UNCOMPRESSED)	186		372			
Movies ^{1,2}	 2160/15P	9 minutes		20 minutes			
	 1080/59.94P, 50P, 24P, 23.98P	26 minutes		54 minutes			
	 720/59.94P, 50P, 24P, 23.98P	51 minutes		105 minutes			

1 Use a UHS speed class 3 card or better.

2 Individual movies cannot exceed 30 minutes in length.

 Although movie recording will continue without interruption when the file size reaches 4GB, subsequent footage will be recorded to a separate file which must be viewed separately.

Specifications



System										
Model	FUJIFILM XF10									
Product Number	FF180002									
Effective pixels	Approx. 24.2 million									
Image sensor	23.5 mm × 15.7 mm (APS-C format), CMOS (complementary metal-oxide semiconductor) image sensor with square pixels and primary color filter									
Storage media	Fujifilm-recommended SD/SDHC/SDXC memory cards									
Memory card slots	SD memory card slot (UHS-1)									
File system	Compliant with Design Rule for Camera File System (DCF), Exif 2.3, and Digital Print Order Format (DPOF)									
File format	<ul style="list-style-type: none">• Still pictures: Exif 2.3 JPEG (compressed); RAW (original RAF format, special purpose software required); RAW+JPEG available• Movies: H.264 standard with stereo sound (MOV)									
Image size	<table><tbody><tr><td>L 3:2 (6000 × 4000)</td><td>L 16:9 (6000 × 3376)</td><td>L 1:1 (4000 × 4000)</td></tr><tr><td>M 3:2 (4240 × 2832)</td><td>M 16:9 (4240 × 2384)</td><td>M 1:1 (2832 × 2832)</td></tr><tr><td>S 3:2 (3008 × 2000)</td><td>S 16:9 (3008 × 1688)</td><td>S 1:1 (2000 × 2000)</td></tr></tbody></table> <p>RAW (6000 × 4000)</p> <p>L panorama: vertical (2160 × 9600)/horizontal (9600 × 1440) M panorama: vertical (2160 × 6400)/horizontal (6400 × 1440)</p>	L 3:2 (6000 × 4000)	L 16:9 (6000 × 3376)	L 1:1 (4000 × 4000)	M 3:2 (4240 × 2832)	M 16:9 (4240 × 2384)	M 1:1 (2832 × 2832)	S 3:2 (3008 × 2000)	S 16:9 (3008 × 1688)	S 1:1 (2000 × 2000)
L 3:2 (6000 × 4000)	L 16:9 (6000 × 3376)	L 1:1 (4000 × 4000)								
M 3:2 (4240 × 2832)	M 16:9 (4240 × 2384)	M 1:1 (2832 × 2832)								
S 3:2 (3008 × 2000)	S 16:9 (3008 × 1688)	S 1:1 (2000 × 2000)								
Lens	<ul style="list-style-type: none">• Type: FUJINON fixed focal length lens• Focal length: f=18.5 mm (35 mm format equivalent: 28 mm)• Maximum aperture: F2.8									
Sensitivity	<ul style="list-style-type: none">• Still pictures: Standard output sensitivity equivalent to ISO 200–12800 in increments of 1/3 EV; AUTO; extended output sensitivity equivalent to ISO 100, 25600, or 51200• Movies: Standard output sensitivity equivalent to ISO 400–6400 in increments of 1/3 EV; AUTO									
Metering	256-segment through-the-lens (TTL) metering; MULTI, SPOT, AVERAGE									
Exposure control	Programmed AE (with program shift); shutter-priority AE; aperture-priority AE; manual exposure									
Exposure compensation	<ul style="list-style-type: none">• Still pictures: –5 EV–+5 EV in increments of 1/3 EV• Movies: –2 EV–+2 EV in increments of 1/3 EV									


System

Shutter speed

- **Mechanical shutter**
 - **Mode P:** 4 s to $\frac{1}{4000}$ s
 - **Other modes:** 30 s to $\frac{1}{4000}$ s
 - **Bulb:** Max. 60 min.
 - **Time:** 30 s to $\frac{1}{4000}$ s
- **Electronic shutter**
 - **Mode P:** 4 s to $\frac{1}{16000}$ s
 - **Other modes:** 30 s to $\frac{1}{16000}$ s
 - **Bulb:** Fixed at 1 s
 - **Time:** 30 s to $\frac{1}{16000}$ s
- **Mechanical+electronic**
 - **Mode P:** 4 s to $\frac{1}{16000}$ s
 - **Other modes:** 30 s to $\frac{1}{16000}$ s
 - **Bulb:** Max. 60 min.
 - **Time:** 30 s to $\frac{1}{16000}$ s

Continuous

Mode	Frame rate (fps)	Frames per burst
	6.0	Up to approximately 10
	3.0	Up to approximately 10

 The frame rate varies with shooting conditions and the number of images recorded. In addition, the frame rate and number of frames per burst may vary depending on the type of memory card used.

Focus

- **Mode:** Single or continuous AF; manual focus with control ring; AF+MF; snapshot
- **Focus-area selection:** SINGLE POINT, ZONE, WIDE/TRACKING, ALL
- **Autofocus system:** Intelligent hybrid AF (TTL contrast-detect/phase-detection AF) with AF-assist illuminator

White balance

Custom, color temperature selection, auto, direct sunlight, shade, daylight fluorescent, warm white fluorescent, cool white fluorescent, incandescent, underwater

Self-timer

Off, 2 sec., 10 sec., Face auto shutter, Smile, Buddy, Group

Flash

- **Type:** Auto flash
- **Effective range (ISO 1600):** Approx. 0.3 m – 7.5 m/1.0 ft. – 24.6 ft.

System

Flash mode Auto, fill flash, off, slow sync, rear-curtain sync, commander (red-eye removal off); auto with red-eye removal, fill flash with red-eye removal, off, slow sync with red-eye removal, rear-curtain sync with red-eye removal, commander (red-eye removal on)

Hot shoe –

Sync contact –


Sync terminal –


Viewfinder –


LCD monitor Fixed 3.0-in/7.6 cm, 1040k-dot color touch screen LCD monitor

Movies


- **Movies with stereo sound**

 2160/15P


 1080/59.94P


 720/59.94P


 1080/50P

 720/50P



 1080/24P

 720/24P



 1080/23.98P



 720/23.98P

- **Silent HD high-speed movies**

1.6×  59.94P  100P

2×  50P  100P

3.3×  29.97P  100P

4×  25P  100P

Input/output terminals

Digital input/output USB 2.0 High-Speed
Micro USB connector (Micro-B)

HDMI output HDMI Micro connector (Type D)

Microphone/remote release connector ø2.5 mm 3-pole mini jack

Power supply/other

Power supply	NP-95 rechargeable battery (supplied with camera)
Camera size (W × H × D)	112.5 mm × 64.4 mm × 41.0 mm (25.9 mm excluding projections, measured at thinnest part)/4.43 in. × 2.54 in. × 1.62 in. (1.02 in.)
Camera weight	Approx. 241.2 g/8.5 oz., excluding battery, accessories, and memory card
Shooting weight	Approx. 278.9 g/9.8 oz., including battery and memory card
Operating conditions	<ul style="list-style-type: none"> • Temperature: 0 °C to +40 °C/+32 °F to +104 °F • Humidity: 10% to 80% (no condensation)
Battery life	<ul style="list-style-type: none"> • Battery type: NP-95 • Shooting mode: mode P

Approximate number of frames

330

Mode	Actual Battery life of movie capture	Continuance Battery life of movie capture
4K	Approx. 55 minutes	Approx. 75 minutes
FULL HD	Approx. 70 minutes	Approx. 120 minutes

CIPA standard, measured using battery supplied with camera and SD memory card.

Note: Number of shots that can be taken with battery varies with battery charge level and will decline at low temperatures.

Wireless transmitter**Wireless LAN**

Standards	IEEE 802.11b/g/n (standard wireless protocol)
Operating frequency (center frequency)	<ul style="list-style-type: none"> • Japan, China: 2,412 MHz–2,472 MHz (13 channels) • Other countries: 2,412 MHz–2,462 MHz (11 channels)
Maximum radio-frequency power (EIRP)	3.29 dBm
Access protocols	Infrastructure

Bluetooth®

Standards	Bluetooth version 4.1 (Bluetooth Low Energy)
Operating frequency (center frequency)	2,402 MHz–2,480 MHz
Maximum radio-frequency power (EIRP)	1.88 dBm


NP-95 rechargeable battery

Nominal voltage	3.6 V DC
Nominal capacity	1,800 mAh
Operating temperature	0 °C to +40 °C/+32 °F to +104 °F
Dimensions (W × H × D)	35.2 mm × 49.5 mm × 10.8 mm/1.4 in. × 1.9 in. × 0.4 in.
Weight	Approx. 36 g/1.3 oz.

AC-5VG AC power adapter

Rated input	100 V – 240 V AC, 50/60 Hz
Input capacity	10.5 VA (100 V), 11.9 VA (240 V)
Rated output	5.0 V DC, 1000 mA
Operating temperature	0 °C to +40 °C/+32 °F to +104 °F
Weight	Approx. 26 g ± 15%/0.9 oz. ± 15% (AC power adapter only)

Weight and dimensions vary with the country or region of sale. Labels, menus, and other displays may differ from those on the actual camera.

 Specifications and performance are subject to change without notice. Fujifilm will not be held liable for any errors this manual may contain. The appearance of the product may differ from that described in this manual.

FUJIFILM

FUJIFILM Corporation

7-3, AKASAKA 9-CHOME, MINATO-KU, TOKYO 107-0052, JAPAN

http://www.fujifilm.com/products/digital_cameras/index.html

