

# DVD player

## User guide



CE FC RoHS 

MODEL:KC-708

## Product specification

DVD play format	DVD VCD CD CD-G HD-CD MP3 WMA AVI JPEG
Frequency response	100Hz-20KHz;±3dB
SNR	>70dB
Nominal voltage	DC5V =2A
Power	10W
Material	ABS plastic
Host/housing size	151*151*28.5mm
Color box size	170*170*65mm
Net weight/gross weight	300g/660g
Color	White/black

## Trouble shooting

The DVD player does not work

Check whether the power supply and power cord are connected successfully

If you does not use the original USB adapter, please make sure the power specification is standard 5V-2.0A.

If the player works in an environment with large temperature difference, the laser head may be covered by the mist leading to no operation. Please lay up the DVD player for one hour until it dries, then turn on the power to attempt to play again.

The functions of DVD does not function: Check whether your disk format is proper or check whether your disk is too old or damaged, and make sure the disk is placed correctly.

The remote controller does not function

Make sure you have installed the 7 / AAA battery

Make sure the remote controller is directed at a proper place: near on the player

Make sure the distance between the remote controller and DVD player is within 6m. Check whether the cell in the remote controller is already damaged.

Note: The remote controller cannot start up/shut down the player, And need to turn the machine side power switch

## Packing list



Host



HDMI line

 


AV line



Remote controller

# Introduction of keys and functions

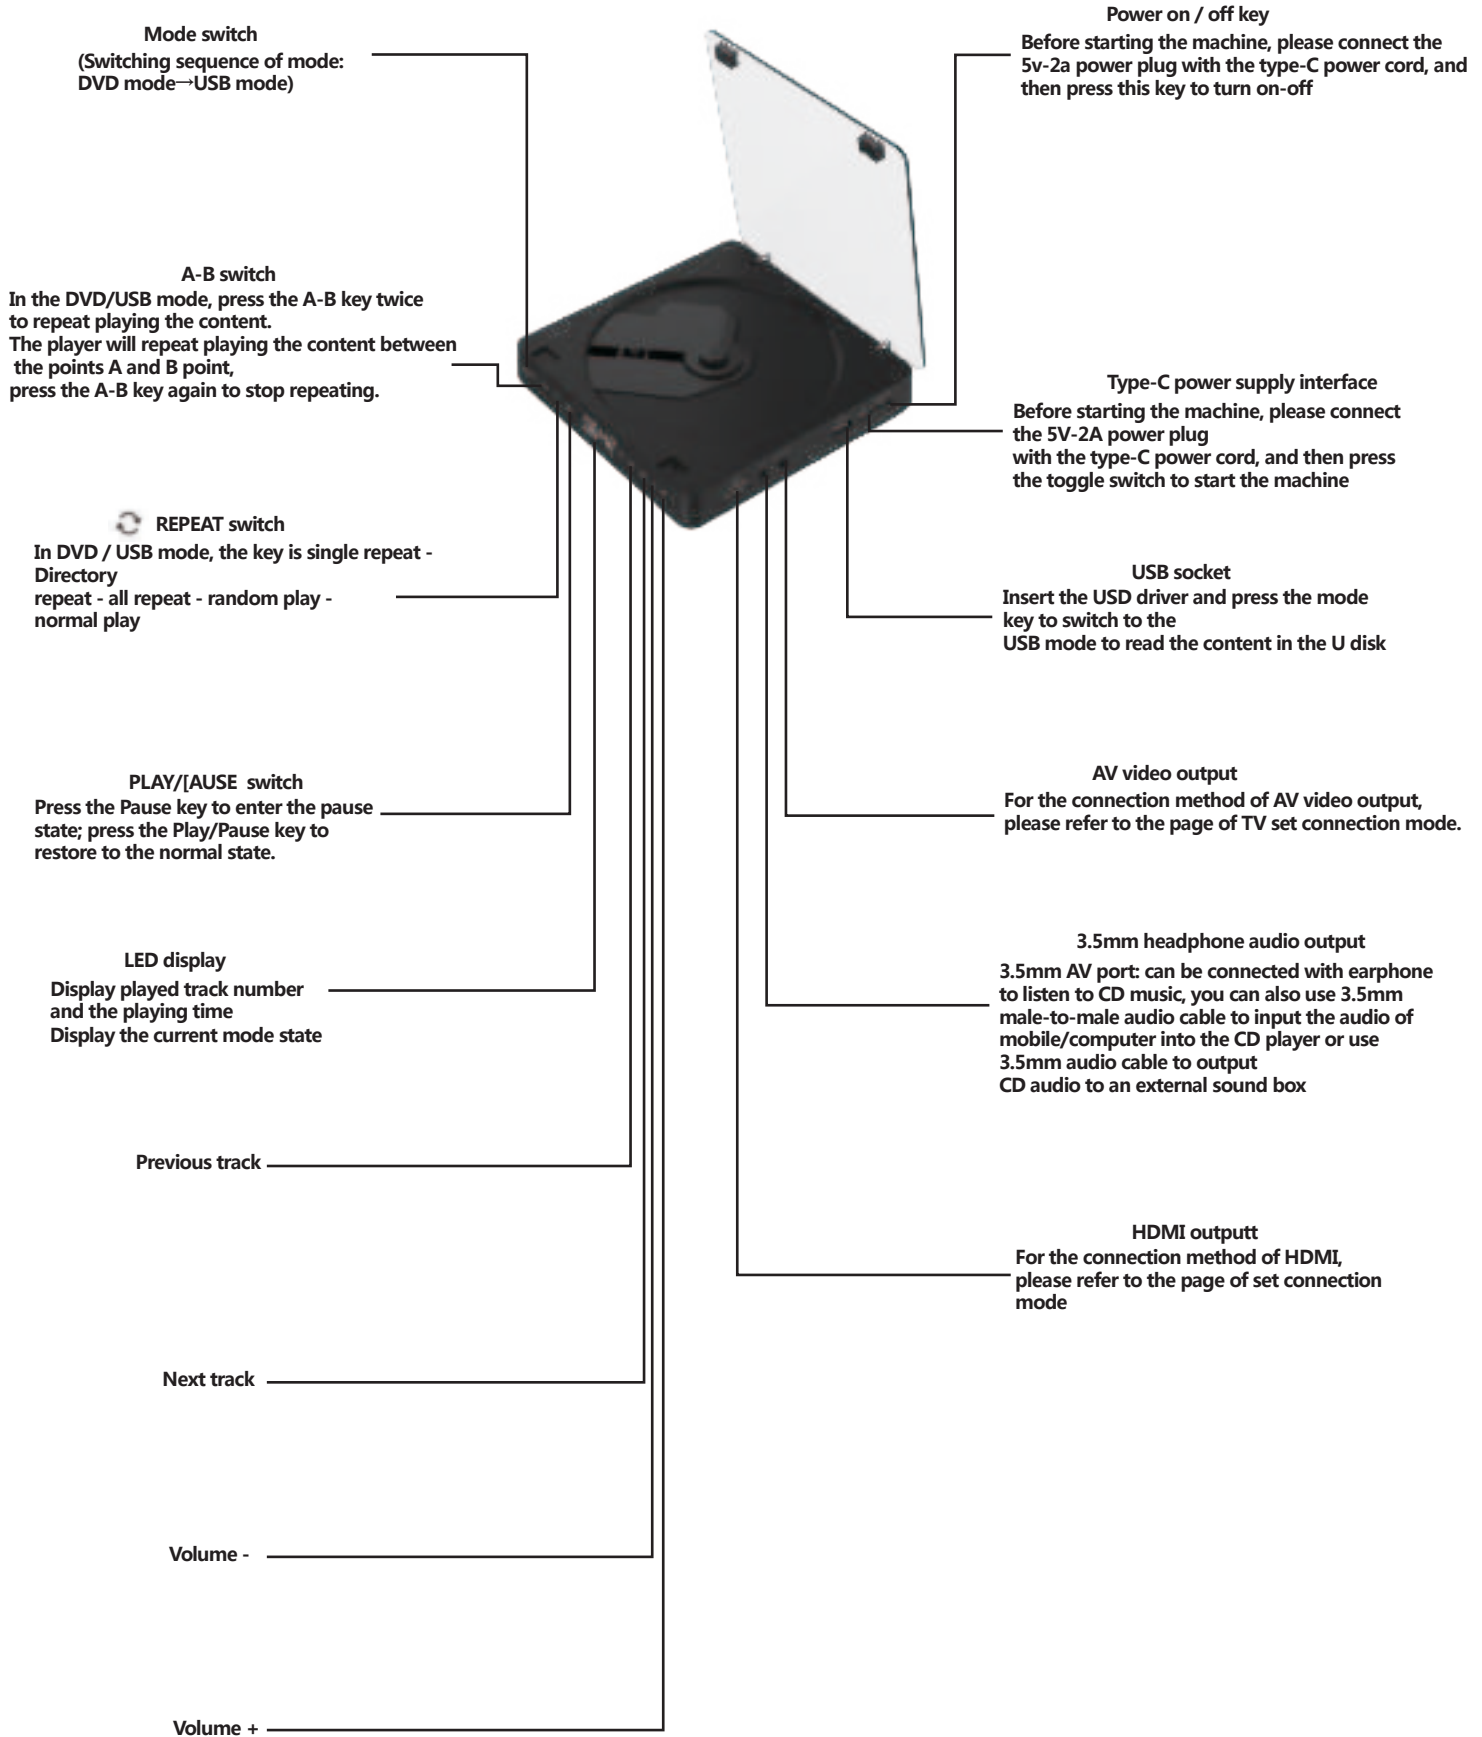

# Introduction of keys on the remote controller

English

## Standby key

This key is not the startup/shutdown key (OFF is displayed after the device enters the standby mode) Startup/shutdown must be via the Toggle switch

## Previous/Next track

Press the Back key to play the previous title/chapter/track  
Long press next the key of Fast Forward to play the image forward rapidly in a scanning and mute way  
Press the Forward key to play the next title/chapter/track  
Long press Previous the key of Fast Backward to play the image backward rapidly in a scanning and mute way.  
Note: In the case of the super VCD or VCD that is switched to the \*PBC OFF\* state, pressing the Forward key will make the device in dead state if the current track is already the last one, and pressing the Backward key will make the device in dead state if the current track is already the first one; if the device is in stop state currently, pressing is invalid. In the case of DVD disk, there will be different actions according to the structure of the disk itself.

## Volume +/-

You can press the VOLUME key on the TV set or power amplifier to adjust the volume.  
Press the "Volume+" key on the remote controller of device to increase the volume, and press the "Volume-" key to decrease the volume.  
When the DVD disk is played in a source-code output way, this item need not be adjusted

## Menu key

Applicable to DVD disk  
Press menu key: The TV set will display the picture of DVD disk content (master menu), now press the direction key to move the cursor and select the needed content for playing.  
Press the Confirm key to play and press the Pause key to play from the position where the cursor is at.

## Cursor movement direction key

Press the direction key to select the content of disk to be played. In magnifying part of the image or reading the Picture-CD, press the direction key can rotate the image.

## Return key

 
Return to the previous operation

## Number keys

Number key for track selection

## Time selection key

In the started state of the device, press the time setting button and the first 0 of 00:00 begins to flash.  
For example: to set 13:45, set according to the following mode: 1-Confirm-3-Confirm-4-Confirm-5-Confirm.

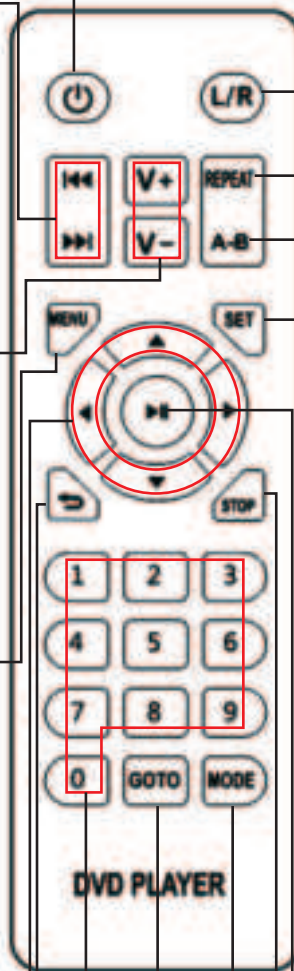

## Language/Sound track Switch key

Selecting L/R (sound track) I is applicable to DVD, super VCD, VCD, CD, CD-G, HD-CD, WMA, AVI, MP3/JPEG disks.

Note:  
Pressing key can switch the sound track mode  
For the bilingual VCD disk, press the sound track key to select the needed language.  
Switching sequence of sound track: L channel R channel Hybrid channel Stereo (stereo by default)

## Cycle mode

Single: Press the cycle function key for the first time to cyclically play the current content.  
Repeat the directory: Press the cycle function key for the second time to cyclically play the content of the current document  
Repeat the disk: Press the cycle function key for the third time to cyclically play the whole disk's content.  
Random play: Press the cycle function key for the fourth time to randomly play the whole disk's content.  
Normal play: Press the cycle function key for the fifth time to close the cycle

## AB repeater

In the DVD/USB mode, press the A-B key twice to repeat playing the content.  
The player will repeat playing the content between the points A and B point, press the A-B key again to stop repeating.

## Set key (system setting)

Routine setting (Press the Set key to enter the system setting)  
Press UP, DOWN, LEFT and RIGHT keys to select, press the Confirm key to confirm. Press the Set key again to exit system setting.  
TV set format: Normal/Panorama  
When the device is connected with the common TV set, the widescreen image is displayed on the whole screen, yet part is automatically cut off (Recommend selecting Auto).  
Video input: Video component/TV-RGB/P-SCAN YPBPR/S-VIDEO  
HD output: You can select HDMI HD data output.  
Frame scale: Select the aspect ratio according to the size of TV set screen  
The function of break-point memory: This function is opened by default. When the player is in normal working state, in case of power breakdown, it will be restored to the play position of power breakdown in next normal starting to resume playing. This function can also be closed.

## Play/Pause key

Press the Pause key to enter the pause state; press the Play/Pause key to restore to the normal state.

## Stop key

Press the Stop key and the DVD pause reading the disk, the play interface will return to the initial picture of the system. To read the disk and play the needed content anew, just press the Play/Pause key on the remote controller.

## Mode switching

Switching sequence of mode: DVD mode → USB mode mode) In the started state of DVD, the default mode is DVD mode (read disk).

## **DVD/USB/ mode:**

The device is compatible with the disks containing MP3/WMA documents such as CD-R, CD-RW,, DVD-R, DVD-RW, DVD+R and DVD+RW

Supporting the disk containing multi-directory menu.

In playing the MP3 disk, the operation for volume+/-, pause, previous/next, etc. is the same with that of other disks.

## **Playing function of AVI, XVID disk:**

Place a disk containing AVI or XVID document, and the device will search automatically and enter the selection interface.

Press the UP, DOWN, LEFT and RIGHT key to select the needed directory name or document name, press the Confirm key or Play/Pause key to enter the selected directory to play the selected document.

In the normal playing state, press the Stop/Return key to stop playing and return to the directory selection interface.

## **Warm tips:**

When the device reads the materials of multiple files (such as certain MP3, AVI disk, U disk)

When playing the materials containing multiple files, the device reads the content by default before displaying the file. After entering the file, the format not supported by the device cannot be displayed.

You can select played audio document or video document. In playing audio document, to return to the previous file, just press the direction keys of remote controller to move the cursor to the play list file.

In playing the video document, press the "Return" or "Stop" key on the remote controller to return to the menu interface, then select other programs according to your preference (Refer to the second item above for the concrete operation).

Description of page-turning function in reading MP3 document

The device cannot automatically turn page when folder is in layers, but can only realize the page-turning function by pressing the Edit key to cancel the layering of folder.

When the folder is in layers, to turn page, press the Stop key before pressing Previous/Next key to turn page.

## **Maintenance and service:**

Please place the device in a drafty environment instead of directly under the sun or other high-temperature or moist places.

In maintenance, please use soft cloth dipped in diluted detergent to wipe the body instead of using strong solvents such as alcohol, benzene or thinner.

In cleaning the disk, shall use soft and clean cloth to wipe from the center to the outside.

The disk shall not be heated. Don't bend it or paste gummed paper on it. Each time after using the disk, please place it back into the case to avoid scratching. If the laser lens of the device stains after using for a long time, leading to pausing of voice, please use the camera lens brush to lightly scrape off the dust, and then blow it with cold blast of the blower, or use a clean cotton swab dipped in a small amount of absolute alcohol to wipe the laser lens before cleaning the lens with a clean cotton swab.

## **Use notices for remote controller**

 
The sensitivity of the remote controller is influenced by the light and environment.

If the remote controller will be idled for long, please take down the cell in the remote controller lest the cell leakage should erode the remote controller.

The service time of the remote controller cell is about one year, which depends on your use frequency. If the remote controller does not function at short range, please change a new cell.



# Mode of connecting the TV set

English

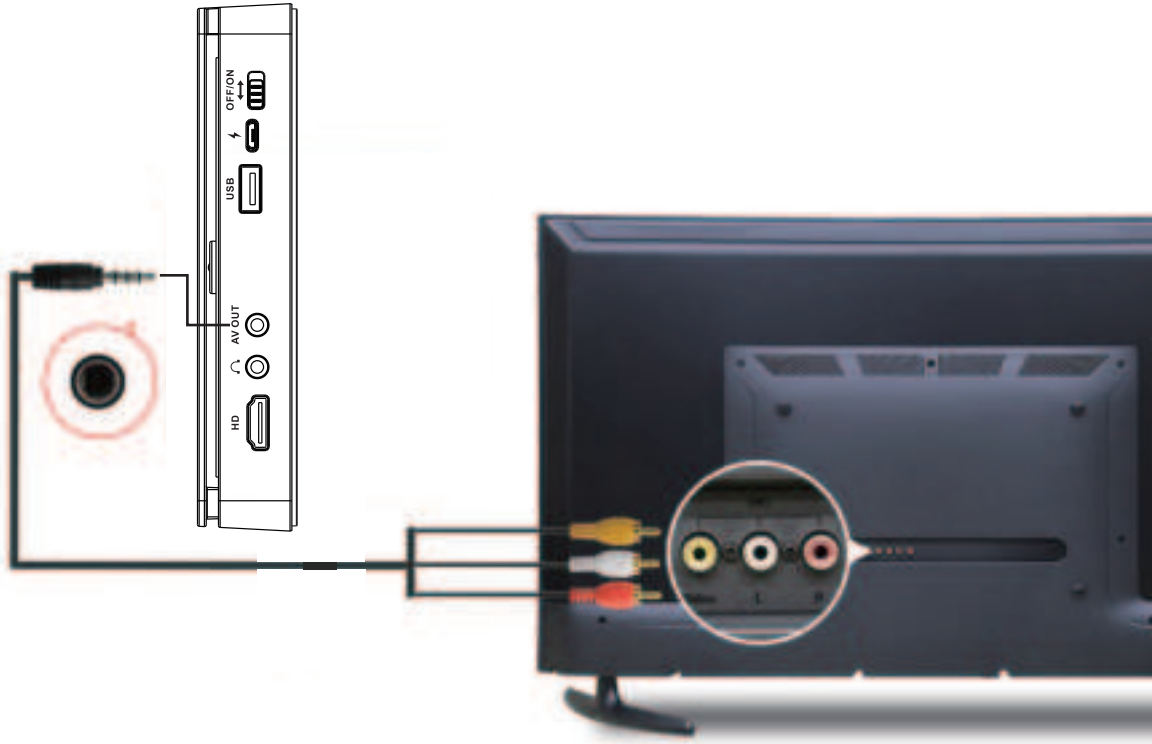

## AV port connection:

  If your TV set is provided with AV port, please use the attached audio/video line to connect the device with the TV set. After confirming the connection is correct, just switch the TV set to the AV mode.

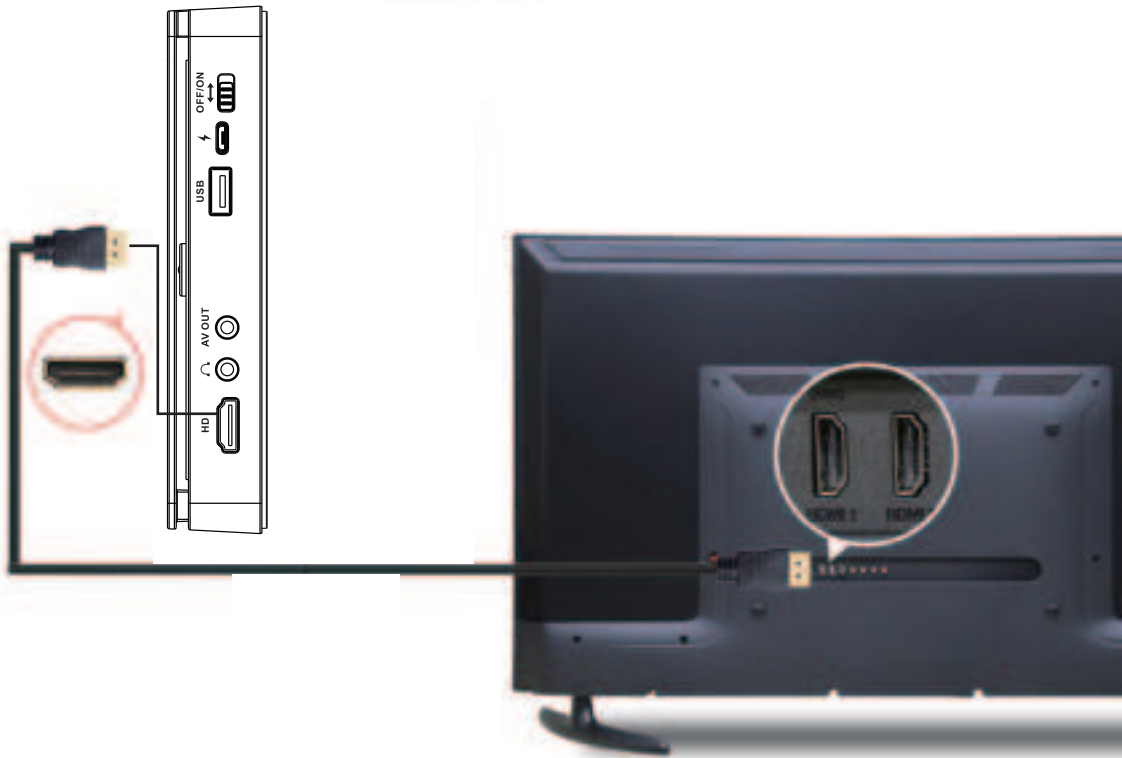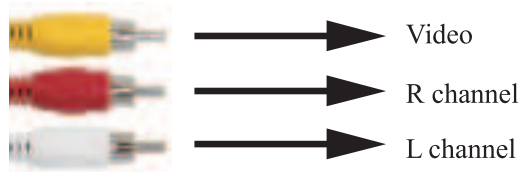

## HDMI port connection:

If your TV set is provided with HDMI port, please use the attached HDMI line to connect the device with the TV set. After confirming the connection is correct, just switch the TV set to the HDMI mode.