



motorola



User's Guide

Digital Video Pet Monitor

Models: SCOUT2300, SCOUT2300/2, SCOUT2300/3, SCOUT2300/4

The features described in this User's Guide are subject to modifications without prior notice.

Welcome...

to your new Motorola Digital Video Pet Monitor!

Thank you for purchasing your new Digital Video Pet Monitor. If you have always wondered what your pet is up to when you are away, wonder no more. You can now monitor your pet's activities from another room.

Please retain your original dated sales receipt for your records. For warranty service of your Motorola product, you will need to provide a copy of your dated sales receipt to confirm warranty status. Registration is not required for warranty coverage.

For product related questions, please call:

US and Canada 1-888-331-3383
Email: motorola@encompass.com

This User's Guide provides you with all the information you need to get the most from your product.

 
Before you can use the pet monitor, we recommend you insert and fully charge the battery in the owner unit, so that it continues to work if you disconnect it from the power supply to carry it to another location. Please read the Safety Instructions on page 6 before you install the units.

Got everything?

- 1 x Owner unit
- 1 x Pet unit(s)
- 1 x Rechargeable Ni-MH battery pack
- 1 x Power adapter for the Owner unit
- 1 x Power adapter(s) for the Pet unit

In multi-camera packs, you will find one or more additional camera units with power adapter units.

Overview of the Owner Unit

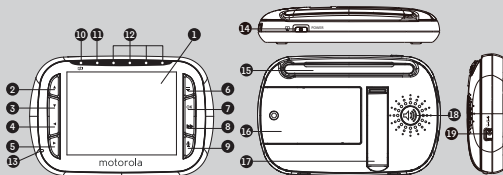








1. Display (LCD screen)
2. Up Key ▲
Normal Mode: Tilt Up
Menu Mode: Scroll Up
3. Down Key ▼
Normal Mode: Tilt Down
Menu Mode: Scroll Down
4. Left Key ◀
Normal Mode: Pan Left
Menu Mode: Left
5. Right Key ▶
Normal Mode: Pan Right
Menu Mode: Right
6. Menu Key ≡
Press to open the Menu options
7. OK Key **OK**
8. Quick Scan key ►►
Press to double the video pan and tilt speed.
Press again to return to normal speed.
9. Talk Key
Press and hold to speak to your pet
10. Power Indicator LED turns BLUE when the unit is on and the power adapter is plugged in. RED when battery low.
11. Unit ON/OFF LED (Green)
12. Audio Level LED (Green, Orange, Red, Red)
13. Microphone
14. Power / Video ON-OFF key
Press and Hold to turn the unit ON/OFF
Press once to turn ON and OFF the LCD display
15. Antenna
Lift the antenna for optimal reception
16. Battery cover
17. Stand
18. Speaker
19. Power Adapter Socket


Owner unit menu icons

	Signal Level (5 Levels)
	No RF Signal
	Night Vision Mode (Screen changes to Black/White)
	Talk Mode
	Battery Level Control (4 Levels)
	Pan Left
	Pan Right
	Tilt Up
	Tilt Down
	Pan/Tilt at normal speed
	Pan/Tilt at double speed

Owner unit menu icons (cont'd)

	Volume Level Control (8 Levels)
	Brightness Level Control (8 Levels)
	Soothing Pet Music Control (5 Song Selections)
	Zoom Level Control (1X, 2X)
	Alarm Setting (6h, 4h, 2h, Off)
	Cam Control (Scan, View, Add, Delete)
	Temperature Reading (HH °C / °F or LL °C / °F) Icon & reading turn RED > 29°C / 84°F, and reading displays > HH °C / °F (if > 36°C / 97°F) Icon & reading turn RED < 14°C / 57°F, and reading displays < LL °C / °F (if < 1°C / 34°F)

 Overview of Your Pet Unit

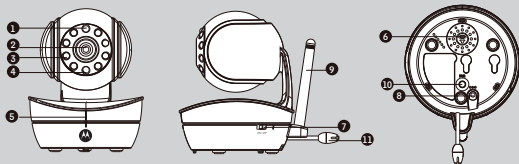

1. Photo Sensor (Night Vision Mode)
2. Camera Lens
3. Infrared LEDs
4. Power LED
5. Microphone
6. Speaker
7. ON/OFF Switch
8. Power Adapter Socket
9. Antenna
10. Pair Key
11. Temperature Sensor

Important guidelines for installing your Pet Monitor

- To use your Video Monitor Pet and Owner Unit together, you must be able to establish a radio link between them, and the range will be affected by environmental conditions.
- Any large metal object, like a refrigerator, a mirror, a filing cabinet, metallic doors or reinforced concrete between the Pet and Owner Unit may block the radio signal.
- The signal strength may also be reduced by other solid structures, like walls, or by radio or electrical equipment, such as TVs, computers, cordless or mobile phones, fluorescent lights or dimmer switches.
- Use of other 2.4 GHz products, such as wireless networks (Wi-Fi® routers), Bluetooth® systems, or microwave ovens, may cause interference with this product, so keep the pet monitor away at least 5ft (1.5m) from these types of products, or turn them off if they appear to be causing interference.
- If the signal is weak, try moving the Owner and/or the Pet Unit to different positions in the rooms.



Table of contents

1. Safety Instructions	6
2. Getting Started	8
2.1 Pet Unit Power Supply.....	8
2.2 Owner Unit Battery Installation	8
2.3 Owner Unit Power Supply.....	9
2.4 Registration (Pairing).....	10
3. Using the Pet Monitor	11
3.1 Setting up.....	11
3.2 Pan and Tilt	11
3.3 Night Vision Mode.....	11
3.4 Talk Mode	11
3.5 Video ON/OFF.....	11
3.6 Temperature (HH °C / °F or LL °C / °F).....	12
4. Owner Unit Menu Options	13
4.1 Volume.....	13
4.2 Brightness	13
4.3 Soothing Pet Music	13
4.4 Zoom.....	13
4.5 Alarm.....	14
4.6 Camera Control	14
4.6.1 Add (pair) a camera	14
4.6.2 View a camera	14
4.6.3 Delete a camera	15
4.6.4 Scan the cameras	15
4.7 Temperature.....	15
5. Disposal of The Device (environment)	16
6. Cleaning	17
7. Help	18
8. General Information	20

1. Safety Instructions



WARNING:

STRANGULATION HAZARD -In case this unit is being used to monitor infants or children, keep the unit and adapter cord more than 3 feet from the crib and out of their reach. Never place camera or cords within a crib or near a bed. Secure the cord away from children's reach. Never use extension cords with AC Adapters. Only use the AC Adapters provided.

As with any electrical device, supervision of your pet's usage should be exercised until your pet is acclimated to the product. If your pet is prone to chewing, we strongly recommend you keep this and all other electrical devices out of its reach.

CAMERA SET UP & USE:

- Determine a location for the CAMERA that will provide the best view of your pet in its area of activity.
- Place the CAMERA on a flat surface, such as a dresser, desk or shelf.

WARNING

This digital video pet monitor is compliant with all relevant standards regarding electromagnetic fields and is, when handled as described in the User's Guide, safe to use. Therefore, always read the instructions in this User's Guide carefully before using the device.

- Adult assembly is required. Keep small parts away from children and pet(s) when assembling.
- This product is not a toy. Do not allow children or pet(s) to play with it.
- This digital video pet monitor is not a substitute for responsible supervision and interaction.
- Keep this User's Guide for future reference.
- Do not place the Indoor Pet Unit or cables in the crib or within reach of the pet (the unit should be at least 3 feet away).
- Keep the cords out of reach of children and pet(s).

- Do not cover the digital video pet monitor with a towel or blanket.
- Never use extension cords with power adapters. Only use the power adapters provided.
- Test this monitor and all its functions so that you are familiar with it prior to actual use.
- Do not use the digital video pet monitor near water.
- Do not install the digital video pet monitor near a heat source.
- Only use the chargers and power adapters provided. Do not use other chargers or power adapters as this may damage the device and battery pack.
- Only insert a battery pack of the same type.
- Do not touch the plug contacts with sharp or metal objects.

 
CAUTION

Risk of explosion if battery is replaced by an incorrect type.

Dispose of used batteries according to the instructions.

2. Getting Started

2.1 Pet Unit Power Supply

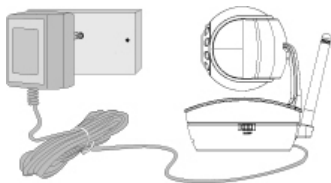


1. Connect the small plug of the power adapter to the pet unit and the other end to the electrical outlet.

NOTE


Only use the enclosed power adapter (5.9V DC / 1000mA).

2. Slide the ON/OFF switch to the ON position. The power LED will light up in green.
3. Slide the ON/OFF switch to the OFF position to turn the Pet Unit off.

 2.2 Owner Unit Battery Installation

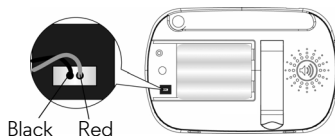


 1. Insert the wire tab of the rechargeable battery pack into the contact slot as shown above and fit the battery pack into the compartment.

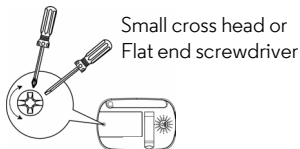



 2. Replace the battery cover over the compartment and gently tighten the screw in a clockwise direction using a Small cross head or Flat end screwdriver.

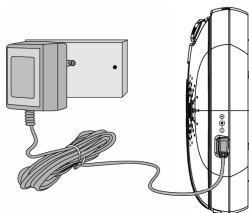2.3 Owner Unit Power Supply




IMPORTANT

Installing the rechargeable battery pack and charging it fully before use is recommended. This will allow the unit to operate on battery in the event of a power failure.

1. Connect the small plug of the power adapter to the owner unit and the other end to the electrical outlet. Only use the enclosed power adapter (6V DC/500mA).
2. Press and hold the  POWER ON/OFF button for 1 second to turn ON the owner unit.
3. Once the pet and owner units are switched on, the display on the owner unit will show the video captured by the pet unit.
4. If there is no connection or you are out of range, the video display will go off and the words **No Signal** will be shown on the LCD display, and the unit will beep every 5 seconds. Move the owner unit closer to the pet unit until the link is re-established.
5. Press and hold the  POWER ON/OFF button, until the progress bar finishes scrolling, to turn OFF the owner unit.

NOTE

The battery icon  turns RED to indicate that the battery is low, and it gives a beep every 16 seconds. The battery needs to be recharged. The battery pack takes about 16 hours to charge fully.

When charging

1. If the owner unit is turned OFF, when the adapter is plugged in, a power plug logo will display briefly, followed by a large battery icon with internal segments cycling for 45 seconds. The Blue LED in the top left corner lights up to indicate the adapter is plugged in.



2. If the owner unit is turned ON, when the adapter is plugged in, the battery icon in the screen's top right corner will show that the battery is charging by cycling the internal segments, The Blue LED in the top left corner lights up to indicate the adapter is plugged in.

2.4 Registration (Pairing)

The Pet monitor is pre-registered to your Owner Unit. You do not need to register it again unless the Pet Unit loses its link with the Owner Unit. To re-register your Pet Unit, or register a new Pet Unit, follow the procedure below:

1. Press the Menu button of the owner unit and the menu bar will pop up.
2. Press the LEFT button or RIGHT button until is highlighted, and the / / / menu will pop up.
3. Press the UP button or DOWN button to select , and press the OK button to confirm.
4. 1 / 2 / 3 / 4 will pop up, press the UP button or DOWN button to select the desired CAM and press the OK button to start searching for a camera unit. The green audio level LED will flash rapidly while searching.
5. Press and hold the PAIR button underneath the pet unit until the owner unit finds the camera, beeps and the video from the camera appears.

NOTE

If a particular Pet Unit was registered previously, registering this current Pet Unit again will overwrite the old registration.

3. Using the Pet Monitor

3.1 Setting up

- Place the pet unit in a convenient location (e.g. on a table) and point the camera lens towards the area you want to monitor.
- Adjust the pet unit's head angle by using the owner unit to pan and tilt the camera up, down, left and right until you are satisfied with the image in the owner unit.

NOTE

Do not place the pet unit within the reach of a child or pet(s)! If there is interference with the picture or sound, try moving the units to different locations, and ensure they are not close to other electrical equipment.

3.2 Pan and Tilt

The camera can be remotely controlled from the owner unit when in normal video mode.

1. Press the ▲ UP button or ▼ DOWN button to tilt upward or downward.
2. Press the ◀ LEFT button or ▶ RIGHT button to pan left or right.

NOTE

You can press the ➤ Quick Scan button to double the pan and tilt speed for quick search. Toggle the button again for returning to normal speed.

3.3 Night Vision Mode

The pet unit has 8 high-intensity infrared LEDs for picking up clear images in the dark. When the built-in photo sensor detects a low level of ambient light, the LEDs will automatically activate and the screen on the owner unit will display in black and white. The 🌙 icon will be displayed on the screen.

3.4 Talk Mode

Press and hold the 🗣️ TALK button on the owner unit to talk to your pet through the pet unit's loudspeaker. The 🗣️ icon will be displayed at the top of the LCD screen.

3.5 Video ON/OFF

Press the 📺 VIDEO ON/OFF key to turn the LCD display on or off, but still leave the audio monitor on.

 
 
 





3.6 Temperature (HH °C / °F or LL °C / °F)







The temperature reading from the temperature sensor at the back of the Pet Unit will be displayed at the top of the LCD screen. The readings will turn RED if the temperature goes above 29°C / 84°F or below 14°C / 57°F. The reading will change to HH °C / °F if the temperature goes above 36°C / 97°F. The reading will change to LL °C / °F if the temperature goes below 1°C / 34°F.

 4. Owner Unit Menu Options

 





 
4.1 Volume

1. Press the  Menu button and the menu bar will pop up.
2. If necessary, press the  LEFT button or  RIGHT button until  is highlighted.
3. Press the  UP button or  DOWN button to select the desired volume level from level 1~8. (The default volume level setting is level 4.)


4.2 Brightness

1. Press the  Menu button and the menu bar will pop up.
2. Press the  LEFT button or  RIGHT button until  is highlighted.
3. Press the  UP button or  DOWN button to select the desired brightness level from level 1~8. (The default brightness level setting is level 4.)

 





4.3 Soothing Pet Music

1. Press the  Menu button and the menu bar will pop up.
2. Press the  LEFT button or  RIGHT button until  is highlighted.
3. Press the  UP button or  DOWN button to select the desired song from the 5 pet songs available, or press the cycle option to play all 5 songs in turn. If an individual song is selected it will play repeatedly. (The default setting is music OFF)
4. Press  Menu to return to the normal camera view with the song playing or off, as selected.

Note

If the  TALK button is pressed, any song will stop playing automatically.

4.4 Zoom

1. Press the  button and the menu option bar pop up.
2. Press the  LEFT button or  RIGHT button until  is highlighted.
3. Press the  UP button or  DOWN button to select the 1X or 2X zoom. (The default setting is 1X.)



4.5 Alarm

1. Press the Menu button and the menu bar will pop up.
2. Press the LEFT button or RIGHT button until is highlighted.
3. Press the UP button or DOWN button to select the alarm time (6h, 4h, 2h). (The default setting is Alarm OFF.)
If an alarm is set, the owner unit will beep for about 45 seconds after every 6, 4 or 2 hour period, and the alarm icon will flash red.

4.6 Camera Control

4.6.1 Add (pair) a camera

1. Press the Menu button and the menu bar will pop up.
2. Press the LEFT button or RIGHT button until is highlighted, and the menu will pop up.
3. Press the UP button or DOWN button to select , and press the **OK** button to confirm.
4. 1 / 2 / 3 / 4 will pop up, press the UP button or DOWN button to select the desired CAM, and press the **OK** button to start searching for a camera unit. The green audio level LED will flash rapidly while searching.
5. Press and hold the PAIR button under the pet unit until the owner unit finds the camera, beeps and the camera picture appears.

NOTE

A camera can only be registered to one owner unit at a time.

4.6.2 View a camera

1. Press the Menu button and the menu bar will pop up.
2. Press the LEFT button or RIGHT button until is highlighted and the menu pops up.
3. Press the UP button or DOWN button to select , and press the **OK** button to confirm.
4. 1 / 2 / 3 / 4 will pop up, press the UP button or DOWN button to select desired CAM, and press the **OK** button to view the picture from that camera.

TIP

*Press **OK** repeatedly for a quick way to View cameras without the menu.*



4.6.3 Delete a camera

1. Press the Menu button and the menu bar will pop up.
2. Press the LEFT button or RIGHT button until is highlighted, and the / / / menu will pop up.
3. Press the UP button or DOWN button to select , and press the **OK** button to confirm.
4. 1 / 2 / 3 / 4 will pop up, press the UP button or DOWN button to select the desired CAM, and press the **OK** button to select.
5. Press the UP or DOWN button to select the desired CAM, and press the **OK** button to delete that registration.

4.6.4 Scan the cameras

1. Press the Menu button and the menu bar will pop up.
2. Press the LEFT button or RIGHT button until is highlighted, and the / / / menu will pop up.
3. Press the UP button or DOWN button to select , and press the **OK** button to confirm.
4. The screen will then display images from each registered camera in a loop, changing about every 12 seconds.

TIP

Press **OK** repeatedly for a quick way to go to Scan mode without using the menu.

NOTE

If the owner unit is in scan mode and one of the registered cameras is turned off or out of range, the scan will stop at the missing camera, display "no signal - check or del cam 1" (if camera 1 is missing), and emit a warning beep every 5 seconds.

WARNING

Check the camera and correct the fault immediately if you are using that camera to monitor your pet.

If you want to continue in camera scan mode without that camera, delete the camera (see 4.6.3 Delete a camera) and start the scan again.

4.7 Temperature

1. Press the Menu button and the menu bar will pop up.
2. Press the LEFT button or RIGHT button until is highlighted.
3. Press the UP button or DOWN button to select $^{\circ}\text{C}$ or $^{\circ}\text{F}$.

5. Disposal of The Device (environment)

At the end of the product lifecycle, you should not dispose of this product with normal household waste. Take this product to a collection point for the recycling of electrical and electronic equipment. The symbol on the product, user's guide and/or box indicates this.



Some of the product materials can be reused if you take them to a recycling point. By reusing some parts or raw materials from used products you make an important contribution to the protection of the environment.

Please contact your local authorities in case you need more information on the collection points in your area.

Dispose of the battery pack in an environmentally-friendly manner according to your local regulations.

6. Cleaning

Clean your Digital Video Pet Monitor with a slightly damp cloth or with an anti-static cloth. Never use cleaning agents or abrasive solvents.



Cleaning and care

- Do not clean any part of the product with thinners or other solvents and chemicals – this may cause permanent damage to the product which is not covered by the warranty.
- Keep your Digital Video Pet Monitor away from hot, humid areas or strong sunlight, and don't let it get wet.
- Every effort has been made to ensure high standards of reliability for your Digital Video Pet Monitor. However, if something does go wrong, please do not try to repair it yourself – contact Customer Service for assistance.

7. Help

Display

No display

- Try recharging or replacing the battery pack.
- Reset the units. Disconnect the battery pack of the owner unit and unplug both the units electrical power, then plug them back in.
- Is the unit turned on?
Press and hold the ON/OFF key  on the owner unit to turn it ON.
- Is the correct camera selected?
Change the camera number, if necessary.
- Is the video display turned on?
Press the VIDEO ON/OFF key  to turn it on.
- When operating using batteries only, the Display will go blank after 2 minutes to save power. The unit is still active and will give you audio alerts. You can reactivate the screen by pressing any key.

Registration

If the Pet Unit has lost its link with the Owner Unit

- Try recharging or replacing the battery pack.
- If the Pet Unit is too far away it may be going out of range, so move the Pet Unit closer to the Owner Unit.
- Reset the units by disconnecting them from the battery and electrical power. Wait about 15 seconds before reconnecting. Allow up to one minute for the Pet Unit and the Owner Unit to synchronize.
- See 2.4 Registration (Pairing), if there is a need to re-register the units.

Interference

Noise interference on your owner unit

- Your pet and owner units may be too close. Move them farther apart.
- Make sure there is at least 3 to 6 feet (1 to 2 metres) between the 2 units to avoid audio feedback.
- If the pet unit is too far away it may be out of range, so move the pet unit closer to the owner unit.
- Make sure the pet and owner units are not near other electrical equipment, such as a television, computer or cordless/mobile telephone.
- Use of other 2.4 GHz products, such as wireless networks (Wi-Fi® routers), Bluetooth® systems, or microwave ovens, may cause interference with this product, so keep the pet monitor away at least 5ft (1.5m) from these types of products, or turn them off if they appear to be causing interference.
- If the signal is weak, try moving the Owner and/or Pet Unit to different positions in the rooms.

8. General Information

If your product is not working properly....

1. Read this User's Guide or the Quick Start Guide.
2. Contact Customer Service:
US and Canada 1-888-331-3383
Email: motorola@encompass.com

To order a replacement battery pack, contact customer service or visit our website.

Consumer Products and Accessories Limited Warranty ("Warranty")

Thank you for purchasing this Motorola branded product manufactured under license by Binatone Electronics International LTD ("BINATONE").

What Does this Warranty Cover?

Subject to the exclusions contained below, BINATONE warrants that this Motorola branded product ("Product") or certified accessory ("Accessory") sold for use with this product that it manufactured to be free from defects in materials and workmanship under normal consumer usage for the period outlined below. This Warranty is your exclusive warranty and is not transferable.

Who is covered?

This Warranty extends only to the first consumer purchaser, and is not transferable.

What will BINATONE do?

BINATONE or its authorized distributor at its option and within a commercially reasonable time, will at no charge repair or replace any Products or Accessories that does not conform to this Warranty. We may use functionally equivalent reconditioned/ refurbished/ pre-owned or new Products, Accessories or parts.

What Other Limitations Are There?

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR OR REPLACEMENT PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO EVENT SHALL MOTOROLA OR BINATONE BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT OR ACCESSORY, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS OR ACCESSORIES TO THE FULL EXTENT. THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights that vary from one jurisdiction to another.

Products Covered	Length of Coverage
Consumer Products	One (1) year from the date of the products original purchase by the first consumer purchaser of the product.
Consumer Accessories	Ninety (90) days from the date of the accessories original purchase by the first consumer purchaser of the product.
Consumer Products and Accessories that are Repaired or Replaced	The balance of the original warranty or for Ninety (90) days from the date returned to the consumer, whichever is longer.

Exclusions

Normal Wear and Tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

Batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this Warranty.

Abuse & Misuse. Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of MOTOROLA or BINATONE, are excluded from coverage.

Use of Non-Motorola branded Products and Accessories. Defects or damage that result from the use of Non-Motorola branded or certified Products or Accessories or other peripheral equipment are excluded from coverage.

Unauthorized Service or Modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than MOTOROLA, BINATONE or its authorized service center, are excluded from coverage.

Altered Products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola branded housings, or parts, are excluded from coverage.

Communication Services. Defects, damages, or the failure of Products or Accessories due to any communication service or signal you may subscribe to or use with the Products or Accessories is excluded from coverage.

How to Obtain Warranty Service or Other Information?

To obtain service or information, please call:

US and Canada 1-888-331-3383

Email: motorola@encompass.com

You will receive instructions on how to ship the Products or Accessories at your expense and risk, to a BINATONE Authorized Repair Center.

To obtain service, you must include: (a) the Product or Accessory; (b) the original proof of purchase (receipt) which includes the date, place and seller of the Product; (c) if a warranty card was included in your box, a completed warranty card showing the serial number of the Product; (d) a written description of the problem; and, most importantly; (e) your address and telephone number.

These terms and conditions constitute the complete warranty agreement between you and BINATONE regarding the Products or Accessories purchased by you, and supersede any prior agreement or representations, including representations made in any literature publications or promotional materials issued by BINATONE or representations made by any agent, employee or staff of BINATONE, that may have been made in connection with the said purchase.

FCC and IC regulations

FCC Part 15

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the Federal Communications Commission (FCC) rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Privacy of communications may not be ensured when using this device.

To ensure safety of users, the FCC has established criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystander according to the intended usage of the product. This product has been tested and found to comply with the FCC criteria. The Pet unit shall be installed and used such that parts of the user's body other than the hands are maintained at a distance of approximately 20 cm (8 inches) or more.

This Class B digital apparatus complies with Canadian ICES-003.

CAN ICES-3 (B)/NMB-3(B)

WARNING

Changes or modifications, to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Industry Canada

This device complies with Industry Canada licence-exempt RSS standard(s): Operation is subject to the following Two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

The term "IC: " before the certification/registration number only signifies that the Industry Canada technical specifications were met. This product meets the applicable Industry Canada technical specifications.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Technical Specifications

Pet unit (Model: SCOUT2300PU)

Frequency	2.4 GHz to 2.48 GHz
Image sensor	color CMOS 0.3M Pixels
Lens	f 2.5mm, F 2.8
IR LED	8 pcs
Power	Adapter: BLJ5W059100P; Input: 100-240V, 50/60Hz 150mA; Output: 5.9V, 1000mA

WARNING
Use only with provided power supply.

Owner unit (Model: SCOUT2300MU)

Frequency	2.4 GHz to 2.48 GHz
Display	3.5" diagonal TFT LCD
Display colors	16.7M color LCD
Brightness control	8 steps
Volume control	8 steps

Power Adapter: BLJ5W060050P; Input: 100-240V, 50/60Hz 150mA; Output: 6.0V, 500mA

WARNING

Use only with provided power supply.

OR

Battery: Model - JUSTHIGH , Ni-MH AAA 3 x 1.2V 900mAh rechargeable battery pack

WARNING

Do not use non-rechargeable batteries for the Owner Unit. Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.



Manufactured, distributed or sold by Binatone Electronics International LTD., official licensee for this product. MOTOROLA and the Stylized M Logo, are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. and are used under license. All other trademarks are the property of their respective owners.

© 2013 Motorola Mobility LLC. All rights reserved.



Version 12.0

Printed in China