

### Meet the Nest Secure alarm system.

You'll use Nest Guard to arm and disarm your home, so put it near the door where you come and go the most. Nest Guard's friendly voice and colored light ring help you turn the alarm on and off. And its intuitive keypad only lights up when you need it.

Nest Guard is also an alarm and motion sensor for the room.

### Press a button to choose a security level. Disarm The alarm system is off. Home and guarding For when you're home and want security, the alarm sounds if a door or window opens. Away and guarding For when no one is home, the alarm sounds if a door or window opens, or if there's motion in a room. Info Press to hear important messages about your system, like you left a window open or Nest Detect's battery is low.



After you arm, counts down the time you have to leave home before the alarm sounds.



The light ring tells you what's happening.

When you come home, counts down the time you have to disarm before the alarm sounds.



The alarm is going off.

# Nest Tag. The easiest way to arm and disarm.

Just tap Nest Tag on Nest Guard and hold until you hear a chime.





Keep one Nest Tag on your keychain. Give the other Nest Tag to family, guests or someone you trust.



If you lose one, you can disable it fast. Go to Settings in the Nest app.



Create a schedule in the Nest app.
Let someone arm and disarm the alarm at certain times, like your dog walker or house cleaner.

# Nest Detect. The sensor that does even more.

Stick Nest Detect on a wall, and it senses motion in the room. Stick it on a window, and it senses open/close. Stick it on a door, and it senses both motion and open/close.





### Press to open quietly.

Say the house is armed and you need to leave early, let the dog out or get fresh air. Just press the button on Nest Detect when you open the door or window. With Quiet Open, the alarm is disarmed temporarily for that door or window only. When you close it, the alarm arms again automatically.



### Make it dog friendly.

Dog Pass keeps your small dog from setting off motion sensors and the alarm. Adjust the sensitivity in Settings.



### Find your way with Pathlight.

Nest Detect lights up in the dark when you walk by. Just enable Pathlight in the Nest app settings.

### Arm and disarm in three ways.





### Tag in with Nest Tag.

Tap on Nest Guard and hold until you hear a chime.



### Enter your passcode.

To disarm, enter your passcode then press the checkmark.

\*Mobile notifications and remote control require working internet and Wi-Fi. Or get cellular backup (sold separately).



### Use the Nest app.

Choose Away and guarding when everyone leaves the house. Choose Home and guarding when you're home. Or turn Nest Secure off. If you forget to arm, you'll get a Remind Me alert on your phone.\*

### There's no rush.

Don't worry about the alarm. With No Rush, you can choose the time you need to come and go in the Nest app.

"You have one minute to exit."

## Control everything with one simple app.

Choose your alarm countdown, arm and disarm the alarm, and see what happened at home.




### Helpful reminders.

Nest Guard will tell you helpful information, like you left a window or door open.

"The kitchen window is open."

#### Remind Me alerts.

If you forgot to arm your home on your way out and Nest notices nobody's home, you'll get a Remind Me alert so you can arm right from your phone. Nest can even remind you to disarm on your way home.

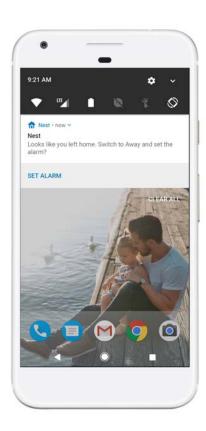

### Security alarm.

The alarm will go off when a door or window opens. Or when Nest Detect or Nest Guard senses motion in a room.

"Security alert. There's motion in the entryway."


### Security alerts.

Whenever the alarm goes off, you'll get a notification on your phone.\* Check the Nest app to see which motion sensors set off the alarm. If you have a Nest Cam, you can see what's happening at home. You can call the police or your emergency contact.

 ${\rm *Mobile\ notifications\ and\ remote\ control\ require\ working\ internet\ and\ Wi-Fi.\ Or\ get\ cellular\ backup\ (sold\ separately).}$ 



### Customize your settings.

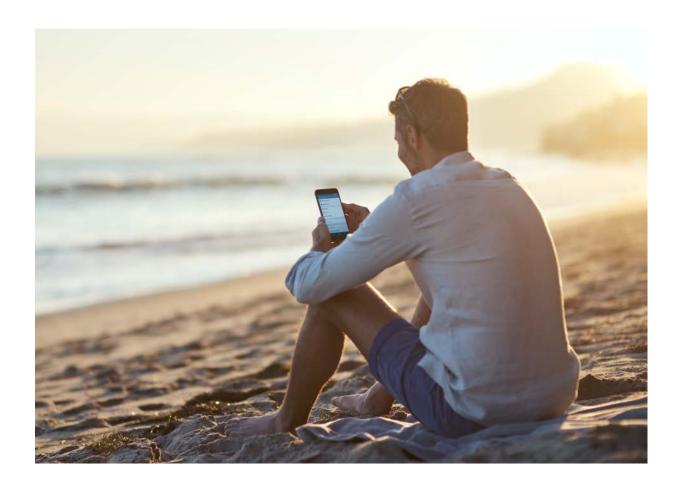

### Choose your alarm countdown.

In Settings, you can choose from 30 seconds to five minutes to exit and enter your home before the alarm goes off.

### Childproof Nest Guard.

You can require a passcode to arm the alarm to prevent accidental arming.

### Set up your emergency contacts.

Set up names and phone numbers of emergency contacts and the police, so you can call them right from a security alert.

### Set up Remind Me alerts.

Enable Home/Away Assist in Settings so Nest Secure knows when you've left the house and when you're coming home.

#### **Customize Nest Detect.**

When Nest Detect is on a door, you can disable motion sensing in Settings. This is helpful if you have curtains on the door, for example. You won't get motion alerts when the curtains move.

### Add more security to Nest Secure.



#### Add even more sensors.

Keep track of more doors, rooms and windows with additional Nest Detect sensors.

### Add more Nest Tags.

Buy additional Nest Tags for more people you trust so they can easily arm and disarm the alarm.

### Add Nest Cams, inside and out.

Outdoor security cameras can deter intruders. And if they do get in, indoor security cameras can spot them red-handed.

### Add cellular backup.

Nest Secure sends you notifications over Wi-Fi. Sign up for cellular backup and you'll still get security alerts on your phone if Wi-Fi goes down. (sold separately)

## Sign up for 24/7 professional monitoring.

They'll look out for your home when you're away.