


# SATURN

17LS3-BK-SV  
20LS3-BK-SV  
17DS3-BK-SV  
20DS3-BK-SV

## LOW SPEED AND DUAL SPEED FLOOR MACHINE

OWNER'S/OPERATOR'S MANUAL

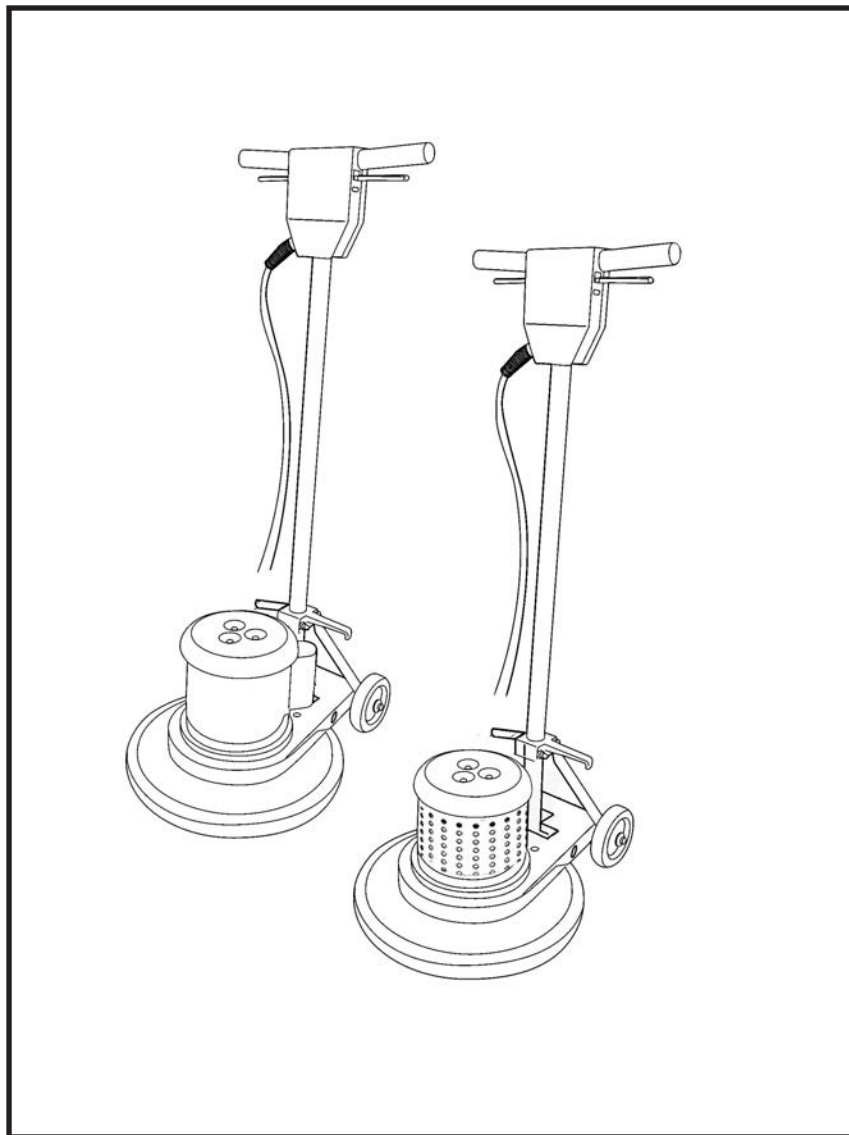

# EDIC

WWW.EDIC-USA.COM

REVISED 4/8/16



## UNPACKING YOUR NEW SATURN:

When your package is delivered, check each of the 3 cartons carefully for signs of rough handling. If the SATURN is damaged, notify the carrier immediately and request an inspection. Be sure to keep the cartons, packing inserts, packing lists and carrier's receipt until the inspector has verified your claim.

EDIC's liability ceases when the carrier picks up the shipment. However, our customer service staff will be happy to furnish any information needed in connection with the claim and will attempt to expedite a resolution.



## PLEASE READ BEFORE OPERATING YOUR NEW SATURN:

Read the manual carefully and completely before attempting to operate the unit. This manual has important information for the use and safe operation of the machine. Keep this manual handy at all times.

This equipment has been engineered and manufactured to provide excellent performance and service. To ensure that your equipment will continue to perform as intended:

- Maintain and inspect equipment regularly
- Use only original EDIC parts when servicing.
- Operate equipment with care.

If additional information is needed, please contact EDIC at: 800-338-3342 or email [info@edic-usa.com](mailto:info@edic-usa.com)

All information and specifications printed in the manual are current at the time of printing; however, because of EDIC's policy of continual product improvement, we reserve the right to make changes at any time without notice.

## FAILURE TO COMPLY WITH THE FOLLOWING WARNINGS AND INSTRUCTIONS WILL VOID THE WARRANTY.

## WARNING!

- Do not operate the machine unless trained and authorized.
- Do not leave the machine unattended when plugged in. Unplug from the outlet when not in use, before servicing, and when changing the brushes or pads.
- Use indoors only.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Do not bypass or defeat the safety "lock-out lever."
- The machine was designed for use as per instructions and recommendations written in this manual. Any deviation from its proper use or purpose and the consequential damage that may occur is the sole responsibility of the end user.
- Do not use with damaged cord or plug. If the machine is not working as it should, or it has been dropped, damaged, left outdoors or dropped into water, take it to an authorized service center.
- Do not pull or carry by cord, use cord as handle, close a door on the cord or pull cord around sharp edges or corners. Do not run machine over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Make sure the machine is plugged into an electrical outlet with the same voltage and frequency rating as shown on the nameplate of the machine. Do not attempt to plug a 115- volt machine into a 230- volt outlet.
- Do not immerse or use this machine in standing water. Such use can cause electric shock.
- Keep the electrical supply cord from contacting the rotating brush or drive block.
- Do not expose machine to freezing temperatures.
- To avoid electric shock, do not expose the unit to rain. Store indoors only.
- Connect to a properly grounded outlet only. See "Grounding Instructions."
- Turn off all controls before unplugging.
- When using an extension cord, use a 3 conductor-grounding cord, 12 gauge wire or heavier. Do not use more than 25' of extension cord.
- Do not put any object into openings.
- Do not use with any opening blocked. Keep free of dust, lint, hair and anything that may reduce air flow.
- Do not operate machine in flammable or explosive areas.
- All servicing of EDIC equipment should be per-

formed by an EDIC authorized service center.

- Keep hair, loose clothing, fingers and all parts of body away from openings and moving parts.
- Use extra care when cleaning near stairs.
- When servicing machine, use manufacturer's supplied or approved replacement parts.
- Do not wrap the cord too tightly when storing.
- Work only in well lit areas.
- This equipment is heavy. Use proper lifting techniques when lifting heavy equipment.

## PROPER LIFTING TECHNIQUES:



1.



2.



3.



4.



5.

1. Stand close to the load with your feet spread shoulder width apart. One foot should be slightly in front of the other for balance
2. Squat down, bending at the knees (not your waist). Tuck your chin while keeping your back as vertical as possible
3. Get a firm grasp of the object before beginning the lift.
4. Slowly begin straightening your legs, lifting slowly. Never twist your body during this step.

5. Once the lift is complete, keep the object as close to the body as possible. If the load's center of gravity moves away from your body, there is a dramatic increase in stress to the lumbar region of the back.

## GROUNDING INSTRUCTIONS:

This piece of equipment must be grounded. Should an electrical malfunction occur, grounding provides a path of least resistance for electrical current- reducing the risk of electric shock. This piece of equipment is furnished with a cord that has a grounding conductor and grounding plug. The grounded plug must only be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

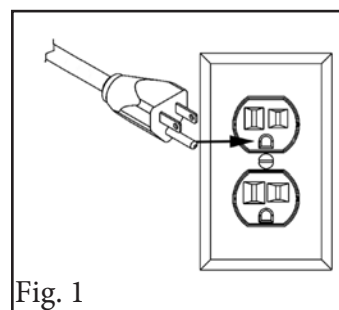


Fig. 1

## WARNING:

Connecting the equipment to an improperly grounded outlet can result in an increased risk of electric shock. A qualified electrician should be consulted if you are unsure that the outlet is properly grounded. Do not modify the plug provided with the equipment. If it will not fit the outlet, have a proper outlet installed by a qualified electrician.

This appliance is designed for use on a 120-volt circuit. The grounding plug provided looks like the plug illustrated in Figure 1. Replace the plug if the grounding pin is damaged or broken.

The Green (or Green/Yellow) wire in the cord is the grounding wire. When replacing a plug, this wire must be attached to the grounding pin only.

DO NOT use extension cords.

## Servicing:

In the event that your SATURN requires service, please contact EDIC at:

800-338-3342

or email [info@edic-usa.com](mailto:info@edic-usa.com)

Do not attempt repairs yourself. EDIC will assist you in locating an independent service contractor.

**FINAL ASSEMBLY INSTRUCTIONS:**  
PLEASE READ MANUAL COMPLETELY BEFORE  
PROCEEDING TO FINAL ASSEMBLY INSTRUCTIONS ON PAGE 5

## PREPARING THE MACHINE FOR OPERATION

Your floor machine will operate in a wide variety of hard floors and carpet cleaning applications. Consult with your local dealer or EDIC Customer Service to select the correct accessories for the job you are going to perform.

## BRUSH, PAD DRIVER INSTALLATION

Lock the handle in the upright position and tip the machine back so it rests on the handle and wheels. Fit the three slots of the clutch plate in the back of the brush or pad driver over the three lugs of the drive plate (Fig. 1). Push it firmly into position and turn it counterclockwise until it locks in place (Fig. 2).



Fig. 1

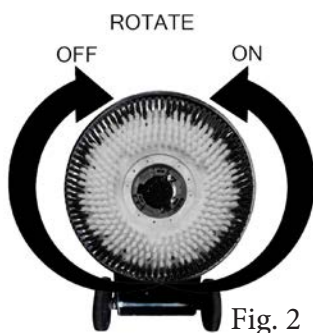


Fig. 2

**TO REMOVE PAD DRIVER:** Tip the machine back so it rests on the handle and wheels. Turn the brush or pad driver clockwise until it disengages and lifts off. Do not store the machine with the brush or pad drivers installed.

## PAD INSTALLATION

**TO INSTALL PAD:** Tilt the machine back on wheels until machine is resting on handle. Center the pad on the pad holder and place the pad onto the pad holder.

**TO REMOVE PAD:** Simply remove the pad from the pad holder by pulling it away from the pad holder with steady force.

## MACHINE OPERATION

1. Install the pad driver and pad, brush or attachment.
2. Plug in machine.
3. Lower the handle to the desired operating position.
4. Place both hands on the handle grips with your fingers around the ON/OFF lever which extends from one side to the other underneath the handle grips.
5. The safety LOCK-OUT lever is located underneath the right side handle grip and ON/OFF lever. To unlock the LOCK-OUT lever, use your right hand forefinger to press the lever down toward the back of the switch box.
6. While pressing the LOCK-OUT lever, pull the ON/OFF lever on either side of the handle to start the machine.
7. The LOCK-OUT lever will automatically lock when you release the ON/OFF lever preventing the machine from being turned on until it is unlocked again.

## TO MANEUVER YOUR FLOOR MACHINE

1. Raise the handle slightly and the machine will go to the right. The higher you raise it, the faster it will go.
2. Lower the handle and the machine will go left. The more you lower it, the faster it will go.
3. Practice on a smooth surface to gain experience in operating the unit before moving on to other surfaces.

## DUAL SPEED FUNCTION FOR 17DS3-BK-P & 20DS3-BK-P:

Use the black switch located directly behind the motor to switch between low speed (180RPM) and high speed (320RPM). Do not change speeds while machine is running. Always wait until motor has stopped completely before changing speeds.

## Storage:

Wipe with a clean damp cloth after every use. Store in a clean dry place.

## CORD STORAGE:

- Unplug the cord- Clean and inspect for damage.
- Wrap the cord around the left side handle grip.
- Do not wrap too tightly.

## FINAL ASSEMBLY INSTRUCTIONS:

PLEASE CHECK THAT YOU HAVE RECEIVED 3 CARTONS. EACH CARTON IS MARKED, AS FOLLOWS:

1. BASE ASSEMBLY
2. HANDLE ASSEMBLY
3. BRUSH COVER ASSEMBLY

Open all three cartons and pull out the assemblies. The base assembly in carton 1 is encased in a clam shell foam assembly. pull off the top foam piece exposing the base assembly inside. Reach and grab the base assembly and pull it out using proper lifting techniques. The assembly is very heavy (75lbs), ask for assistance if you cannot do it by yourself. Check for damage- report damage to freight carrier immediately. If no damage is present, proceed to the following final assembly procedure.

Tools required:

- 5/16" Allen wrench
- Pair of adjustable wrenches or three open wrenches (9/16", 7/8", and 13/16")

### ASSEMBLY OF THE BRUSH COVER TO MOTOR ASSEMBLY:


1. Place motor base assembly upside down on the floor or on a work bench.




2. Pull out the brush cover from carton 3 and align the four holes on the brush cover to the four holes on the motor.



3. Use the four screws in the bag and mount the brush cover. Hand-tighten the screws first and then use a wrench to tighten them firmly. Use a CROSS pattern to tighten the bolts as shown below.

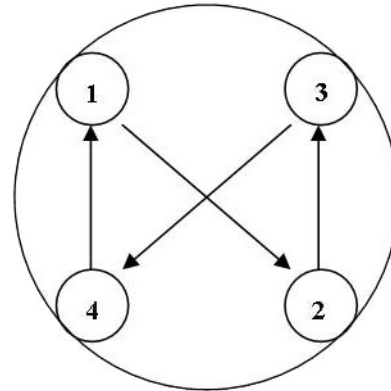


4. Flip the motor base and place it on the floor right side up after making sure the brush cover is firmly attached.

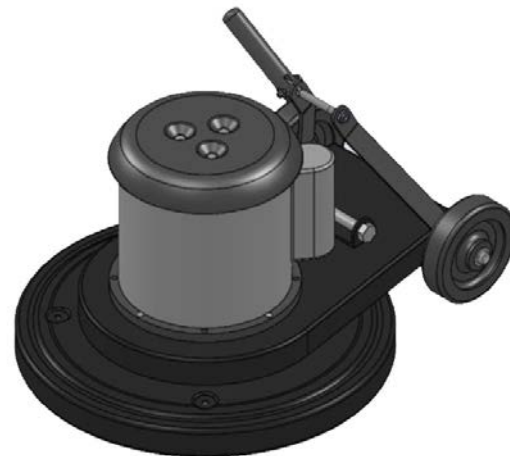


5. Open the handle carton and set the handle nearby the motor base.




6. Unscrew the nut (C13100) from the pivot axle screw (C22558). Slide out the pivot axle screw from the handle bracket on the motor base frame.

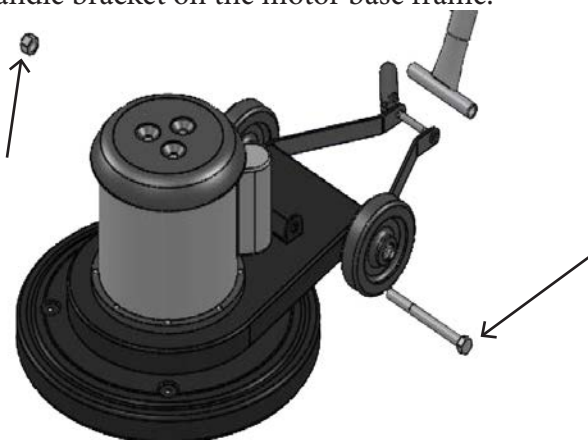

7. Insert the pivot tube at the lower end of the handle between the handle bracket on the base frame and align the holes to one another.

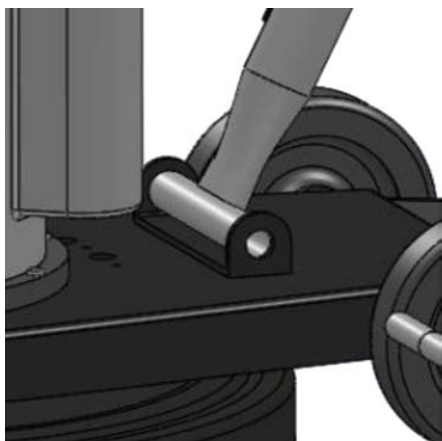


8. Insert the pivot axle screw (C22558) through the handle bracket and the handle pivot tube. Hand tighten the nut (C13100) to the pivot axle screw and finish by tightening with a wrench.

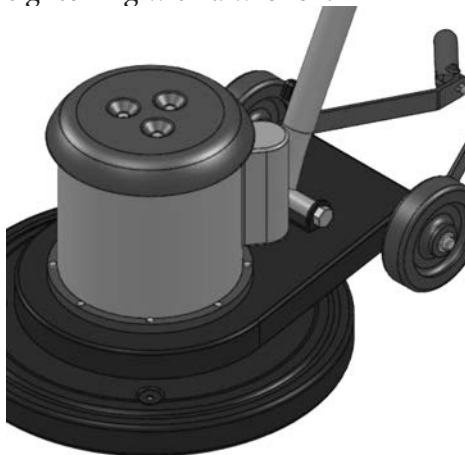


#### ASSEMBLY OF THE HANDLE TO THE MOTOR BASE:


1. Locate the nut (C11558) on the end of the locking clamp handle assembly (C11536) and unfasten it.

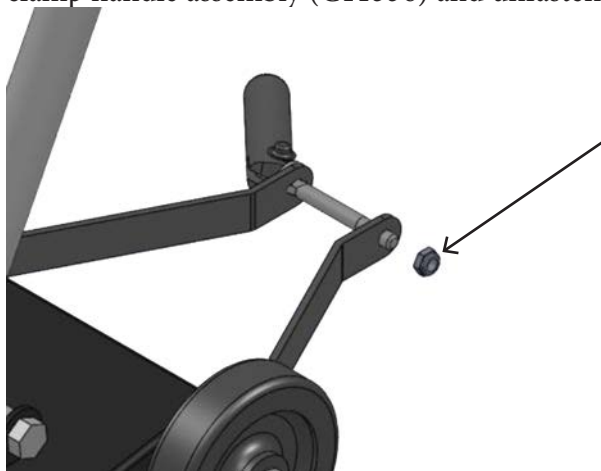

2. Slide out the locking clamp handle (D11497) assembly with spade bolt (C11536) and set it aside.

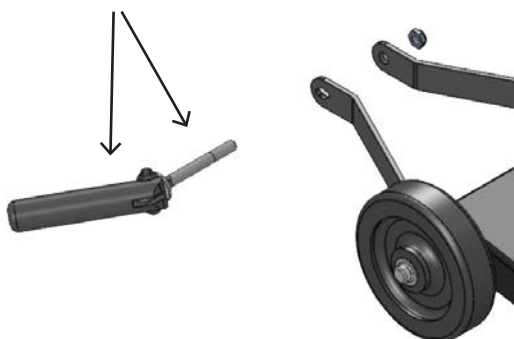


3. Insert the locking clamp handle/spade bolt assembly through the Cord Hook Clamp assembly (located on the handle) and the left and right handle braces ( D11481, D11482).

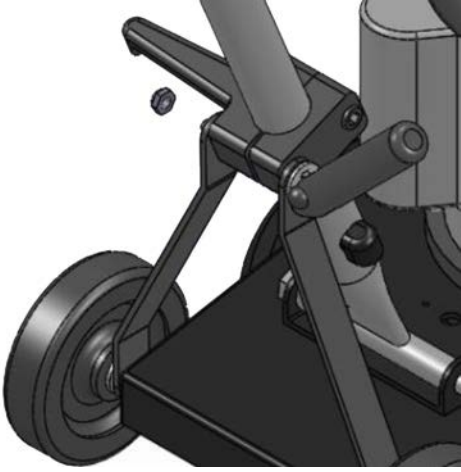

4. Put the locking clamp handle in the unlocked position (pointing up) and start tightening the nut C11558 on the threaded portion of the spade bolt (C11536).



5. Check the cord hook clamp is sliding up and down freely on the handle stem with locking clamp handle in the unlocked position.

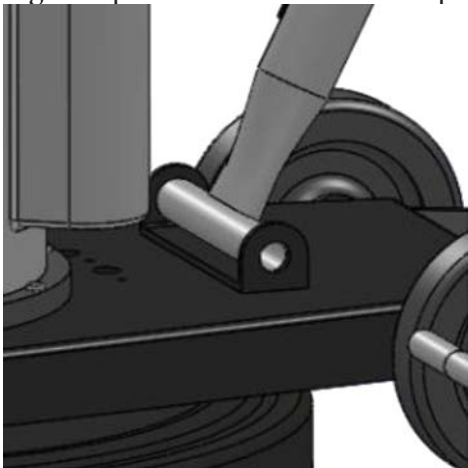

6. Place the handle in the down position to check the locking function. If too tight, unlock the handle and loosen the nut (C11558) slightly. If too loose, unlock the handle and tighten the nut (C11558), as needed. You have assembled the cord hook clamp assembly properly when the locking handle locks firmly in the DOWN position and unlocks and slides easily in the UP position.



(UNLOCKED)




(LOCKED)

7. Plug the male motor cord plug to the female handle cord plug. Your Assembly is done. Refer to Brush/Pad driver installation and operation sections before operating the unit.




# 17LS3-BK-SV & 20LS3-BK-SV

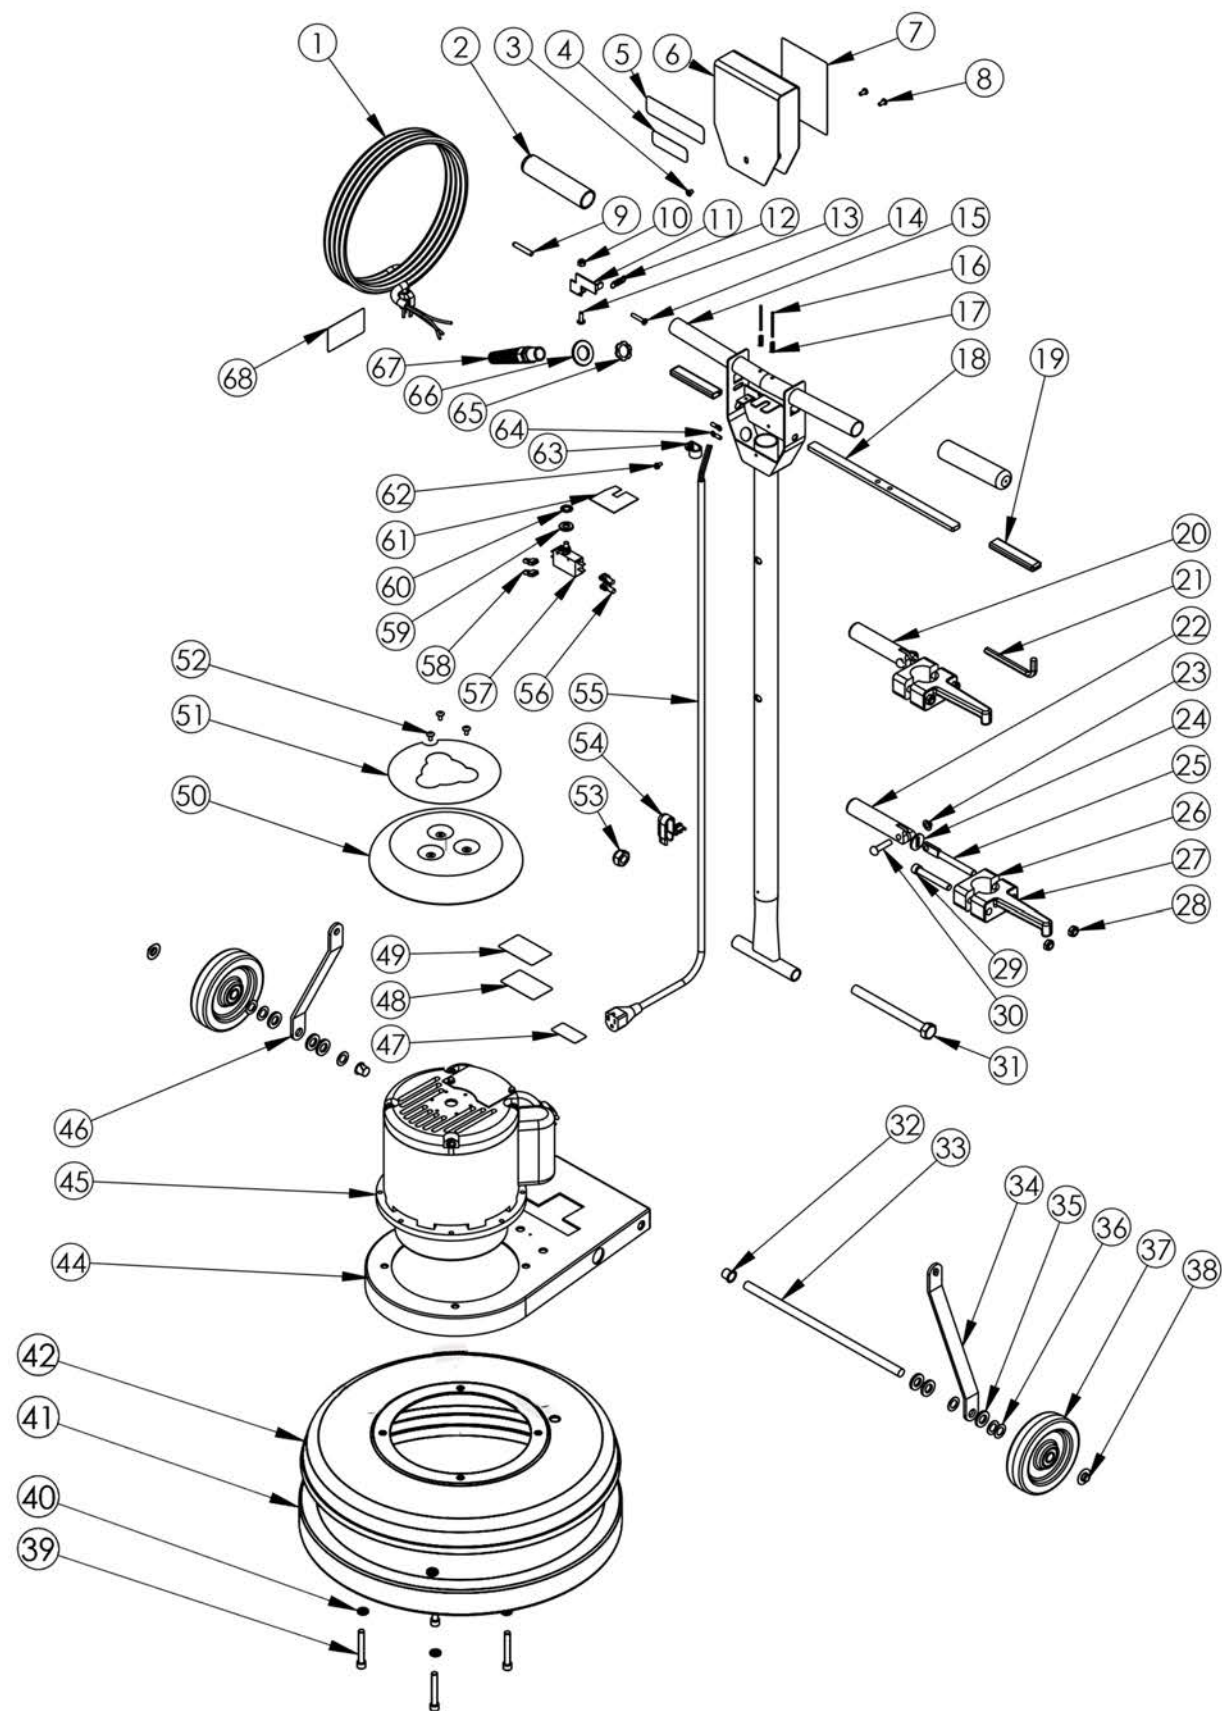

# 17LS3-BK-SV & 20LS3-BK-SV

| ITEM NO. | PART NUMBER                                         | 20 Inch Models                     | QTY. |
|----------|-----------------------------------------------------|------------------------------------|------|
| 1        | B11487 Power Cord, 14-3, 50 FT, SJTW                |                                    | 1    |
| 2        | K11498 Grip                                         |                                    | 2    |
| 3        | C11528 Screw, 10-32 X .25 in                        |                                    | 1    |
| 4        | H12066 Label, 1.5 HP, Saturn                        |                                    | 1    |
| 5        | H11831 Label, EDIC, Black-Silver                    |                                    | 1    |
| 6        | D11496B Switch Box Cover, Black                     |                                    | 1    |
| 7        | H11493 Label, Safety, Floor Machine                 |                                    | 1    |
| 8        | C11529 Screw, 10-32 X .375 in                       |                                    | 2    |
| 9        | K11519 Lever Grip, Lockout, Black                   |                                    | 1    |
| 10       | C00278 Locknut, 10-32, Nylon, SS                    |                                    | 1    |
| 11       | D11494 Lockout Bracket                              |                                    | 1    |
| 12       | D11524 Spring, Lockout                              |                                    | 1    |
| 13       | C90007 Screw, 10-32 X .625 Phillips, Truss Head, SS |                                    | 1    |
| 14       | C11491 Screw, 10-32 X 1 in, SS                      |                                    | 1    |
| 15       | D11479 Handle, Chrome, Floormachine                 |                                    | 1    |
| 16       | C00306 Roll Pin, .125 X 1.75                        |                                    | 2    |
| 17       | D11523 Spring, Trigger                              |                                    | 2    |
| 18       | D11495 Trigger, Zinc Plated                         |                                    | 1    |
| 19       | K11520 Lever Grip, Trigger, Black                   |                                    | 2    |
| 20       | T1507A Assembled Locking Handle, Cord Hook          |                                    | 1    |
| 21       | C11619 Allen Wrench, .31 in                         |                                    | 1    |
| 22       | D11497 Handle, Locking Clamp                        |                                    | 1    |
| 23       | C11538 Cap Nut, .31 in, Push-On                     |                                    | 1    |
| 24       | C00259 Washer, Slotted, Zinc                        |                                    | 1    |
| 25       | C11536 Spade Bolt, .375-16 X 4 in                   |                                    | 1    |
| 26       | D11507 Cord Hook Clamp                              |                                    | 1    |
| 27       | D11507-2 Cord Hook Body                             |                                    | 1    |
| 28       | C11558 Locknut, Black Oxide, Thin                   |                                    | 2    |
| 29       | C11502 Socket Cap Screw, .375-16 X 2.5 in           |                                    | 1    |
| 30       | C11537 Dowel Pin, .31 X 1.5 in                      |                                    | 1    |
| 31       | C22558 Pivot Axle Screw                             |                                    | 1    |
| 32       | K00674 Bushing, .50 in, Nylon                       |                                    | 2    |
| 33       | D11510 Axle, Floor Machine                          |                                    | 1    |
| 34       | D11482 Handle Brace, Right, Black                   |                                    | 1    |
| 35       | C00240 Washer, Shoulder, Nylon                      |                                    | 6    |
| 36       | C11559 Washer, .515 X .875 X .032                   |                                    | 6    |
| 37       | G11943 Wheel, 5 in Saturn                           |                                    | 2    |
| 38       | C02305 Cap Nut, .5in Push-on                        |                                    | 2    |
| 39       | C11501 Socket Cap Screw, .31 - 18                   |                                    | 4    |
| 40       | C00251 Lockwasher, .31, Split                       |                                    | 4    |
| 41       | E11477 Bumper, 17 in Floor Machine                  | E11478 Bumper, 20 in Floor Machine | 1    |
| 42       | D11485B Brush Cover, 17 in, Black                   | D11486B Brush Cover, 20 in, Black  | 1    |
|          |                                                     |                                    | 4    |
| 44       | D11483 Frame, Motor, Black                          |                                    | 1    |
| 45       | G11468 Motor W-Gearbox, 1.5 HP                      |                                    | 1    |
| 46       | D11481 Handle Brace, Left, Black                    |                                    | 1    |
| 47       | H10976-1 Label, UL STD 561-507                      |                                    | 1    |
| 48       | H00565-5 Label, Serial #, Standard                  |                                    | 1    |
| 49       | H03545 Cover, Serial #, Label                       |                                    | 1    |
| 50       | D11490B Drip Cover, Black                           |                                    | 1    |
| 51       | H12913 Label, Drip Cover, White                     |                                    | 1    |
| 52       | C11916 Screw, 10-32 X .375 Phillips                 |                                    | 3    |
| 53       | C13100 Nut, M14-2.0 Nylon Insert                    |                                    | 1    |
| 54       | B10734 Strain Relief, Handle                        |                                    | 1    |
| 55       | B11513 Cord, Handle, 14-3 SJTW                      |                                    | 1    |
| 56       | B11762 Terminal Lug, Nylon, Female                  |                                    | 2    |
| 57       | B11465 Switch, DPST, Pushbutton                     |                                    | 1    |
| 58       | B00177 Terminal Lug, Female, QD, .25 X .032         |                                    | 2    |
| 59       | C00252 Washer, .375 in, Flat                        |                                    | 1    |
| 60       | C11541 Washer, .375 in, Star                        |                                    | 1    |
| 61       | B11518 Switch Insulation                            |                                    | 1    |
| 62       | C00284 Screw, 10-32 X .375 Ground                   |                                    | 1    |
| 63       | B00187 Cable Clamp, Nylon, .43 in.                  |                                    | 1    |
| 64       | B00180-10-3 Ring Terminal, #10 Center               |                                    | 2    |
| 65       | B11505 Strain Relief Nut, Metal                     |                                    | 1    |
| 66       | C11560 Washer, .93 ID X 1.5 OD                      |                                    | 1    |
| 67       | B11504 Strain Relief, Metal                         |                                    | 1    |
| 68       | H02548-2 Label, Important, Cord                     |                                    | 1    |

# 17DS3-BK-SV & 20DS3-BK-SV

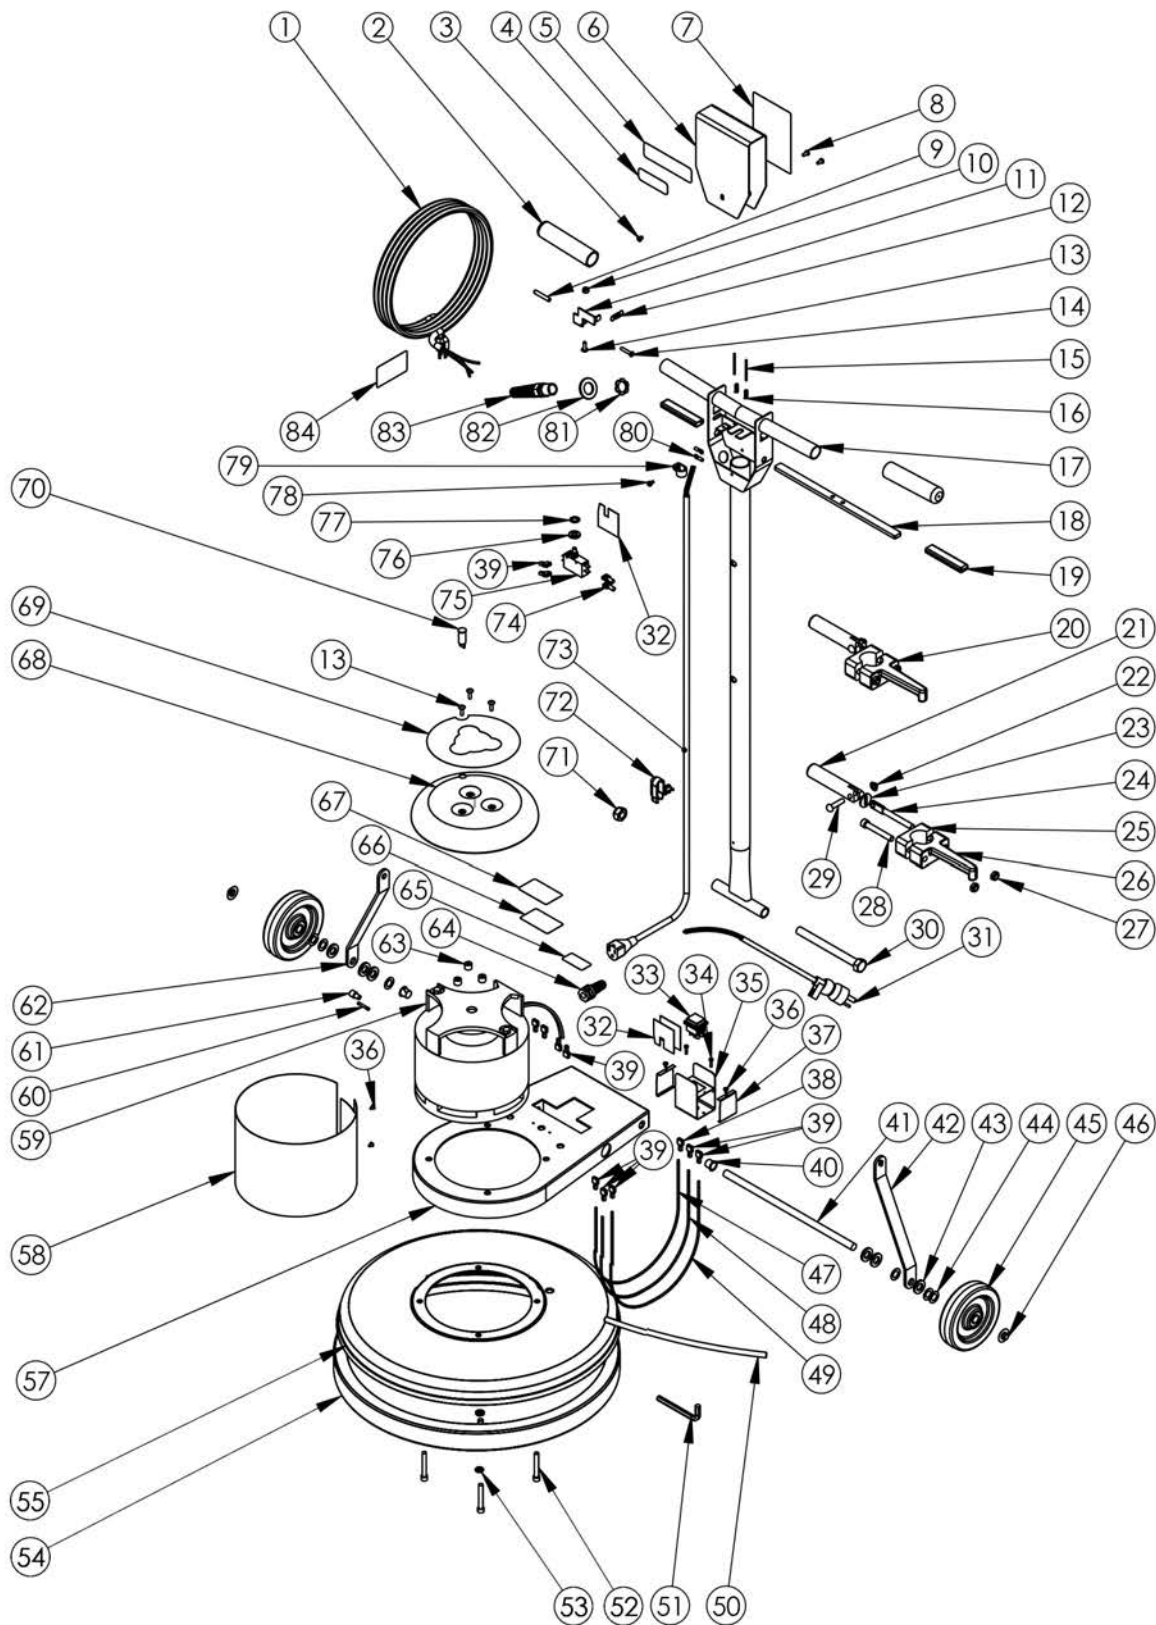

# 17DS3-BK-SV & 20DS3-BK-SV

| ITEM NO. | PART NUMBER                                         | DESCRIPTION                        | QTY. |
|----------|-----------------------------------------------------|------------------------------------|------|
| 1        | B11487 Power Cord, 14-3, 50 FT, SJTW                |                                    | 1    |
| 2        | K11498 Grip                                         |                                    | 2    |
| 3        | C11528 Screw, 10-32 X .25 in                        |                                    | 1    |
| 4        | H12066 Label, 0.5 HP, Saturn                        |                                    | 1    |
| 5        | H11831 Label, FDIC, Black-Silver                    |                                    | 1    |
| 6        | D11496B Switch Box Cover, Black                     |                                    | 1    |
| 7        | H11493 Label, Safety, Floor Machine                 |                                    | 1    |
| 8        | C11529 Screw, 10-32 X .375 in                       |                                    | 2    |
| 9        | K11519 Lever Grip, Lockout, Black                   |                                    | 1    |
| 10       | C00278 Locknut, 10-32, Nylon, SS                    |                                    | 1    |
| 11       | D11494 Lockout Bracket                              |                                    | 1    |
| 12       | D11524 Spring, Lockout                              |                                    | 1    |
| 13       | C90007 Screw, 10-32 X .625 Phillips, Truss Head, SS |                                    | 4    |
| 14       | C11491 Screw, 10-32 X 1 in, SS                      |                                    | 1    |
| 15       | C00306 Roll Pin, .125 X 1.75                        |                                    | 2    |
| 16       | D11523 Spring, Trigger                              |                                    | 2    |
| 17       | D11479 Handle, Chrome, Floormachine                 |                                    | 1    |
| 18       | D11495 Trigger, Zinc Plated                         |                                    | 1    |
| 19       | K11520 Lever Grip, Trigger, Black                   |                                    | 2    |
| 20       | T1507A Assembled Locking Handle, Cord Hook          |                                    | 1    |
| 21       | D11497 Handle, Locking Clamp                        |                                    | 1    |
| 22       | C11538 Cap Nut, .31 in, Push-On                     |                                    | 1    |
| 23       | C00259 Washer, Slotted, Zinc                        |                                    | 1    |
| 24       | C11536 Spade Bolt, .375-16 X 4 in                   |                                    | 1    |
| 25       | D11507 Cord Hook Clamp                              |                                    | 1    |
| 26       | D11507-2 Cord Hook Body                             |                                    | 1    |
| 27       | C11558 Locknut, .375-16, Nylon                      |                                    | 2    |
| 28       | C11502 Socket Cap Screw, .375-16 X 2.5 in           |                                    | 1    |
| 29       | C11537 Dowel Pin, .31 X 1.5 in                      |                                    | 1    |
| 30       | <b>C22558 Pivot Axle Screw</b>                      |                                    | 1    |
| 31       | B10719 Power Cord, 25, 16-3                         |                                    | 1    |
| 32       | B11518 Switch Insulation                            |                                    | 3    |
| 33       | B11751 Switch, Rocker, DPDT, Black                  |                                    | 1    |
| 34       | C00293 #8 X .5in Pan, Black SMS, Phillips           |                                    | 2    |
| 35       | D11582 Bracket, Switch Mount                        |                                    | 1    |
| 36       | C00297 Screw, #8 X .25 in, Pan Head                 |                                    | 4    |
| 37       | D11646 Switch Bracket Cover                         |                                    | 2    |
| 38       | B00177-1 Terminal Lug, Female, QD, .25 X .032       |                                    | 1    |
| 39       | B00177 Terminal Lug, Female, QD, .25 X .032         |                                    | 11   |
| 40       | K00674 Bushing, .50 in, Nylon                       |                                    | 2    |
| 41       | D11510 Axle, Floor Machine                          |                                    | 1    |
| 42       | D11482 Handle Brace, Right, Black                   |                                    | 1    |
| 43       | C00240 Washer, Shoulder, Nylon                      |                                    | 6    |
| 44       | C11559 Washer, .515 X .875 X .032                   |                                    | 6    |
| 45       | G11943 Wheel, 5 in, Saturn                          |                                    | 2    |
| 46       | C02305 Cap Nut, .5in Push-on                        |                                    | 2    |
| 47       | B00185-30 Wire, 14 Ga X 2 ft, White, UL195          |                                    | 1    |
| 48       | B00185-40 Wire, 14 Ga X 2 ft, Black, UL1015         |                                    | 1    |
| 49       | B00185-86 Wire, 14 Ga X 2 ft, Red, UL1015           |                                    | 1    |
| 50       | B00228-2 1 Foot Shrinktube, .375 in, Poly           |                                    | 1    |
| 51       | C11619 Allen Wrench, .31 in                         |                                    | 1    |
| 52       | C11501 Socket Cap Screw, .31 - 18                   |                                    | 4    |
| 53       | C00251 Lockwasher, .31, Split                       |                                    | 4    |
| 54       | E11477 Bumper, 17 in Floor Machine                  |                                    | 1    |
| 55       | <b>D11485B 17 Inch Brush Cover</b>                  | <b>D11486B 20 inch Brush Cover</b> | 1    |
| 56       | K11521 Spacer, Base, Floor Machine                  |                                    | 4    |
| 57       | D11483 Frame, Motor, Black                          |                                    | 1    |
| 58       | D11545 Motor Screen                                 |                                    | 1    |
| 59       | G11573 Motor                                        |                                    | 1    |
| 60       | B00181 Butt Connector, Blue, 1 Wire                 |                                    | 1    |
| 61       | B00179-1 Closed End Cntr, 16-3                      |                                    | 1    |
| 62       | D11481 Handle Brace, Left, Black                    |                                    | 1    |
| 63       | K11517 Spacer, .19 ID X .375 High X .50 OD, Nylon   |                                    | 3    |
| 64       | B11199 Strain Relief, Pigtail w-Locknut             |                                    | 1    |
| 65       | H10976-1 Label, UL STD 561-507                      |                                    | 1    |
| 66       | H00565-5 Label, Serial #, Standard                  |                                    | 1    |
| 67       | H03545 Cover, Serial #, Label                       |                                    | 1    |
| 68       | H11490C-H Drip Cover w - Light, Chrome              |                                    | 1    |
| 69       | H11830 Label, Saturn, Drip Cover                    |                                    | 1    |
| 70       | B02196-1 Light, Motor Carbon Brush Wear             |                                    | 1    |
| 71       | C13100 Nut, M14-2.0 Nylon Insert                    |                                    | 1    |
| 72       | B10734 Strain Relief, Handle                        |                                    | 1    |
| 73       | B11513 Cord, Handle, 14-3 SJTW                      |                                    | 1    |
| 74       | B11762 Terminal Lug, Nylon, Female                  |                                    | 2    |
| 75       | B11465 Switch, DPST, Pushbutton                     |                                    | 1    |
| 76       | C00252 Washer, .375 in, Flat                        |                                    | 1    |
| 77       | C11541 Washer, .375 in, Star                        |                                    | 1    |
| 78       | C00284 Screw, 10-32 X .375 Ground                   |                                    | 1    |
| 79       | B00187 Cable Clamp, Nylon, .43 in.                  |                                    | 1    |
| 80       | B00180-10-3 Ring Terminal, #10 Center               |                                    | 2    |
| 81       | B11505 Strain Relief Nut, Metal                     |                                    | 1    |
| 82       | C11560 Washer, .93 ID X 1.5 OD                      |                                    | 1    |
| 83       | B11504 Strain Relief, Metal                         |                                    | 1    |
| 84       | H02548-2 Label, Important, Cord                     |                                    | 1    |

---

## EDIC STANDARD LIMITED WARRANTY PLAN FOR MACHINES PURCHASED AFTER 11/01/14

The following Limited Warranty is given by EDIC with respect to the following specific EDIC products:

|                   |                   |                     |
|-------------------|-------------------|---------------------|
| Polaris           | Fivestar          | Supernova           |
| Galaxy 5          | Galaxy            | Galaxy Pro          |
| Endeavor          | Bravo             | Rover               |
| Heat N Run        | Saturn Low Speed  | Saturn HD Low Speed |
| Saturn High Speed | Saturn Dual Speed | Aqua Dri            |
| Aviator           | Atlas             | Dynamo              |
| Pilot             |                   |                     |

**LIFETIME** on rotationally molded polyethylene tanks, stainless steel heater tank and Saturn stainless steel brush covers.

**5 YEARS** on service labor, and all other parts not covered by the Lifetime terms.

EDIC Automotive Extractors have the following limited warranty on replacement parts and service labor:

**LIFETIME** on rotationally molded polyethylene tanks and stainless steel heater tank.

**2 YEARS** on service labor, and all other parts not covered by the Lifetime terms.

### EDIC REPLACEMENT PARTS LIMITED WARRANTY PLAN

All parts sold as replacement parts for out-of-warranty EDIC products have the following Limited Warranty, with no warranty on labor:

**30 DAYS**

Your product is warranted to be free of defects in material and workmanship for the period set forth above, after the date of delivery to the retail purchaser, when operated in normal service and used in accordance with the operating and maintenance instructions in the Owner's Manual. This warranty is limited to and provides at no cost to the retail purchaser repair or replacement of parts determined to be defective, at EDIC's option, and labor, if provided for above, to replace or repair the parts ("service labor") according to EDIC's Standard Rates, during the warranty period set forth above. This warranty excludes transportation charges unless authorized in writing by EDIC. No warranty returns for refund or credit will be permitted. In the event of a defect, these are your exclusive remedies. Warranty claims must be made in writing to EDIC prior to returning the product and no products will be accepted for repair or replacement without prior authorization by EDIC. Use of parts not approved by EDIC in EDIC products will void this warranty. Warranty repair or replacement shall not extend the original warranty period of the product, and replacement parts used for in-warranty repairs will only be warranted for the remainder of the original warranty and not from their installation date. Any parts or product replaced under this Limited Warranty will become the property of EDIC.

---

**EXCEPTIONS AND EXCLUSIONS FROM THE WARRANTY.** This Limited Warranty only covers product issues caused by defects in material or workmanship during normal service. It does not cover product issues from any other cause, including but not limited to (a) transportation damages; (b) alteration by unauthorized persons; (c) unauthorized use, unreasonable use, misuse, or abuse (including the use of incompatible or corrosive chemicals or overloading of capacity); (d) failure caused by lack of proper maintenance and cleaning; (e) normal wear on items such as cords, belts, hoses, switches, bumpers, gaskets, seals, carbon brushes, squeegees, harnesses, valves, cams, extraction brushes, bearings, handle grips, filters and finishes; (f) acts of God; or (g) modification of or any part of the product. This Limited Warranty does not cover EDIC products sold AS IS and WITH ALL FAULTS. This Limited Warranty is valid only in the United States and Canada.

We suggest that you complete and return the enclosed product registration card promptly to facilitate verification of the date of the original purchase. However, return of the product registration card does not eliminate the need for the retail purchaser to maintain the original proof of the purchase in order to obtain the warranty benefits. In the event that you do not have proof of purchase date, the purchase date for purposes of this warranty will be the date of manufacture.

For specific information on how to obtain warranty services for your product, please write to:

EDIC/Warranty Department  
1753 Blake Ave.  
Los Angeles, CA 90031

**THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE OF THIS STATEMENT. THERE IS NO IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY USE ON THESE GOODS.**

**NO IMPLIED WARRANTY, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, APPLIES TO THE PRODUCT AFTER THE APPLICABLE PERIOD OF THE EXPRESS LIMITED WARRANTY STATED ABOVE, AND NO OTHER EXPRESS WARRANTY, EXCEPT AS MENTIONED ABOVE, GIVEN BY ANY PERSON OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BIND EDIC. EDIC SHALL NOT BE LIABLE FOR ANY FORM OF ACTION FOR ANY DAMAGES, WHETHER DIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, OR INDIRECT, TO PROPERTY OR PERSON, INCLUDING BUT NOT LIMITED TO, DAMAGE OR LOSS OF INCOME, LOSS OF PRODUCTION, OR LOSS OF PROFITS DUE TO MALFUNCTIONING OF ANY PRODUCT, REGARDLESS OF THE LEGAL THEORY ON WHICH THE CLAIM IS BASED. IN NO EVENT SHALL RECOVERY OF ANY KIND AGAINST EDIC BE GREATER IN AMOUNT THAN THE PURCHASE PRICE OF THE PRODUCT SOLD BY EDIC, AND CAUSING THE ALLEGED DAMAGE. WITHOUT LIMITING THE FOREGOING, YOU ASSUME ALL THE RISK AND LIABILITY FOR LOSS, DAMAGE OR INJURY TO YOU AND YOUR PROPERTY AND TO OTHERS AND THEIR PROPERTY ARISING OUT OF USE OR MISUSE OF, OR INABILITY TO USE, THE PRODUCT NOT CAUSED DIRECTLY BY NEGLIGENCE OF EDIC. THIS LIMITED WARRANTY STATES YOUR EXCLUSIVE REMEDY.**

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This Limited Warranty gives you specific legal rights and you may have other rights which vary from state to state (or province).

0900.002/9989