



# ***Service and Repair Manual***

## **Serial Number Range**

### **GS-2646AV** **GS-2646AV 35**

from GS4612A-110000  
from GS4616P-138362 to  
GS4616P-141799

from GS46P-141800

**This manual includes:**  
**Repair procedures**  
**Fault Codes**  
**Electrical and**  
**Hydraulic Schematics**

For detailed maintenance  
procedures, refer to the  
appropriate Maintenance  
Manual for your machine.

**Part No. 1272218**  
**Rev A2**  
**September 2016**

## Introduction

### Important

Read, understand and obey the safety rules and operating instructions in the appropriate Operator's Manual on your machine before attempting any procedure.

This manual provides troubleshooting and repair procedures for qualified service professionals.

Basic mechanical, hydraulic and electrical skills are required to perform most procedures. However, several procedures require specialized skills, tools, lifting equipment and a suitable workshop. In these instances, we strongly recommend that maintenance and repair be performed at an authorized Genie dealer service center.

## Compliance

### Machine Classification

Group A/Type 3 as defined by ISO 16368

### Machine Design Life

Unrestricted with proper operation, inspection and scheduled maintenance.

### Technical Publications

Genie has endeavored to deliver the highest degree of accuracy possible. However, continuous improvement of our products is a Genie policy. Therefore, product specifications are subject to change without notice.

Readers are encouraged to notify Genie of errors and send in suggestions for improvement. All communications will be carefully considered for future printings of this and all other manuals.

### Contact Us:

Internet: [www.genielift.com](http://www.genielift.com)  
E-mail: [awp.techpub@terex.com](mailto:awp.techpub@terex.com)

### Find a Manual for this Model

Go to <http://www.genielift.com>

Use the links to locate Service Manuals, Maintenance Manuals, Service and Repair Manuals, Parts Manuals and Operator's Manuals.

---

Copyright © 2016 by Terex Corporation

1272218 Rev A, March 2016

First Edition, First Printing

Genie is a registered trademark of Terex South Dakota, Inc. in the U.S.A. and many other countries. "GS" is a trademark of Terex South Dakota, Inc..



## Introduction

### Revision History

Revision	Date	Section	Procedure / Page / Description
A	3/2016		Initial Release
A1	5/2016	Repair	Procedures 2-3, 2-4, 2-5, 2-6
		Diagnostics	H067 fault
A2	9/2016	Introduction	Serial Number Legend

**Reference Examples:**


Section – Repair Procedure, 4-2	<b>Electronic Version</b>
Section – Fault Codes, All charts	Click on any content or procedure in the Table of Contents to view the update.
Section – Schematics, Legends and schematics	




## Introduction

### Serial Number Legend

To August 31, 2016

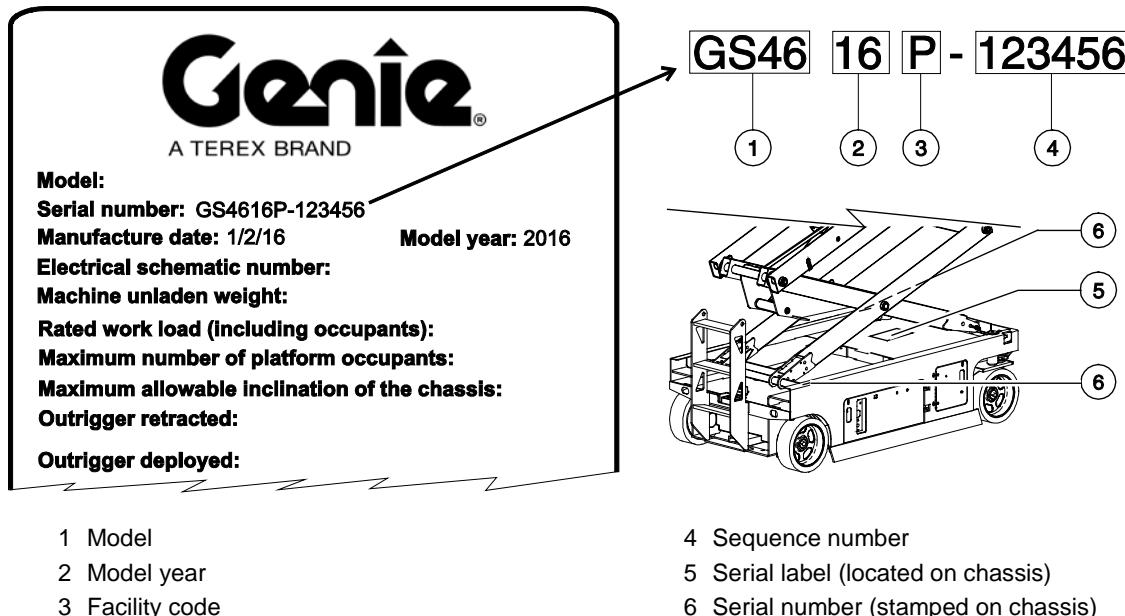

From September 1, 2016

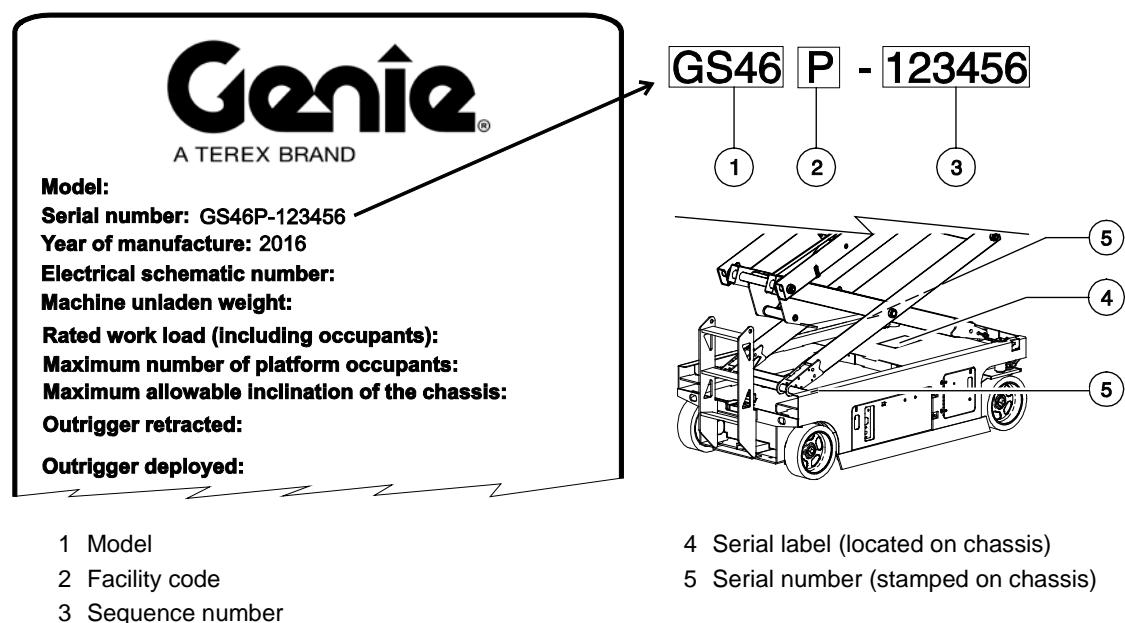

## Safety Rules



### Danger

Failure to obey the instructions and safety rules in this manual and the appropriate Operator's Manual on your machine will result in death or serious injury.

Many of the hazards identified in the operator's manual are also safety hazards when maintenance and repair procedures are performed.

### Do Not Perform Maintenance Unless:

- You are trained and qualified to perform maintenance on this machine.
- You read, understand and obey:
  - manufacturer's instructions and safety rules
  - employer's safety rules and worksite regulations
  - applicable governmental regulations
- You have the appropriate tools, lifting equipment and a suitable workshop.

# Safety Rules

## Personal Safety

Any person working on or around a machine must be aware of all known safety hazards. Personal safety and the continued safe operation of the machine should be your top priority.



Read each procedure thoroughly. This manual and the decals on the machine, use signal words to identify the following:



Safety alert symbol—used to alert personnel to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.



Indicates a imminently hazardous situation which, if not avoided, will result in death or serious injury.



Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



Indicates a potentially hazardous situation which, if not avoided, may cause minor or moderate injury.



Indicates a potentially hazardous situation which, if not avoided, may result in property damage.



Be sure to wear protective eye wear and other protective clothing if the situation warrants it.



Be aware of potential crushing hazards such as moving parts, free swinging or unsecured components when lifting or placing loads. Always wear approved steel-toed shoes.

## Workplace Safety

Any person working on or around a machine must be aware of all known safety hazards. Personal safety and the continued safe operation of the machine should be your top priority.



Be sure to keep sparks, flames and lighted tobacco away from flammable and combustible materials like battery gases and engine fuels. Always have an approved fire extinguisher within easy reach.



Be sure that all tools and working areas are properly maintained and ready for use. Keep work surfaces clean and free of debris that could get into machine components and cause damage.



Be sure any forklift, overhead crane or other lifting or supporting device is fully capable of supporting and stabilizing the weight to be lifted. Use only chains or straps that are in good condition and of ample capacity.



Be sure that fasteners intended for one time use (i.e., cotter pins and self-locking nuts) are not reused. These components may fail if they are used a second time.



Be sure to properly dispose of old oil or other fluids. Use an approved container. Please be environmentally safe.



Be sure that your workshop or work area is properly ventilated and well lit.

## Table of Contents

<b>Introduction</b>	<b>Introduction</b> .....	ii
	Important Information .....	ii
	Find a Manual for this Model .....	ii
	Revision History.....	iii
	Serial Number Legend .....	iv
<b>Section 1</b>	<b>Safety Rules</b> .....	v
	General Safety Rules .....	v
<b>Section 2</b>	<b>Specifications</b> .....	1
	Machine Specifications.....	1
	Performance Specifications.....	2
	Hydraulic Specification .....	3
	Hydraulic Component and Manifold Specifications .....	6
	Hydraulic Hose and Fitting Torque Specifications .....	6
	Torque Procedure .....	7
<b>Section 3</b>	<b>Repair Procedures</b> .....	9
	Introduction .....	9
	<b>Platform Controls</b> .....	11
	1-1 Circuit Board.....	12
	1-2 Joystick.....	13
	1-3 Platfrom Controls Alarm .....	13
	1-4 Platform Emergency Stop Button.....	14
	<b>Ground Controls</b> .....	15
	2-1 Software Revision Level.....	16
	2-2 Machine Setup .....	17
	2-3 Loading or Updating Machine Software.....	18
	2-4 Using a Wi-Fi Router to Connect to the SmartLink Web Service Tool .....	23
	2-5 Service Override Mode .....	25
	2-6 Level Sensors .....	27
	2-7 Manual Platform Lowering Cable .....	41

## Table of Contents

<b>Hydraulic Tank .....</b>	<b>43</b>
3-1 Hydraulic Tank .....	43
<b>Hydraulic Pump.....</b>	<b>44</b>
4-1 Hydraulic Pump .....	44
How to Remove the Hydraulic Pump.....	45
<b>Manifolds .....</b>	<b>46</b>
5-1 Function Manifold Components .....	46
5-2 Powered Extension Deck Function Manifold Components .....	48
5-3 Valve Adjustments – Function Manifold .....	49
5-4 Valve Coils .....	52
<b>Steer Axle Components .....</b>	<b>55</b>
6-1 Yoke and Drive Motor .....	55
6-2 Steer Cylinder .....	56
6-3 Steer Bellcrank .....	57
<b>Non-Steer Axle Components .....</b>	<b>58</b>
7-1 Drive Brake .....	58
<b>Brake Release Hand Pump Components .....</b>	<b>59</b>
8-1 Brake Release Hand Pump Components.....	59
<b>Scissor Components .....</b>	<b>60</b>
9-1 Scissor Assembly .....	61
How to Replace the Scissor Arm Wear Pads .....	66
9-2 Lift Cylinder .....	67
<b>Platform Components .....</b>	<b>69</b>
10-1 Platform.....	69
10-2 Platform Extension.....	71
How to Remove the Manual Extension Deck .....	71
How to Remove the Powered Extension Deck (if equipped).....	72
10-3 Extension Deck Cylinder.....	73

## Table of Contents

<b>Section 4</b>	<b>Diagnostics .....</b>	<b>77</b>
	Introduction .....	77
	GCON I/O Map (with manual extension deck) .....	79
	GCON I/O Map (with powered extension deck) .....	80
	Operation Indicator Codes (OIC).....	82
	Diagnostic Trouble Codes (DTC) .....	82
	Troubleshooting "HXXX" and "PXXX" Faults .....	83
	Fault Inspection Procedure .....	84
	Type "HXXX" Faults .....	86
	Type "PXXX" Faults.....	88
	Type "UXXX" Faults .....	89
	Type "FXXX" Faults.....	91
	Type "CXXX" Faults .....	92
<b>Section 5</b>	<b>Schematics.....</b>	<b>93</b>
	Introduction .....	93
	Electrical Component and Wire Color Legends .....	94
	Wiring Diagram Ground Controls .....	96
	Wiring Diagram Platform Controls.....	97
	Limit Switch Legend .....	98
	Electrical Symbol Legend.....	100
	Hydraulic Symbols Legend.....	101
	Hydraulic Component Reference .....	102
	<b>Electrical Schematics – ANSI and CSA Models .....</b>	<b>103</b>
	Electrical Schematic • GS-2646 AV and GS-2646 AV35 (with manual extension deck) (from GS4612A-110000) .....	104
	Electrical Schematic • GS-2646 AV and GS-2646 AV35 (with powered extension deck) (from serial number GS4612A-110000) .....	108
	Electrical Schematic • GS-2646 AV and GS-2646 AV35 (foot switch option) (from serial number GS4612A-110000).....	112
<b>Section 6</b>	<b>Hydraulic Schematics .....</b>	<b>113</b>
	Hydraulic Schematic.....	113
	Hydraulic Schematic, Powered Extension Deck Manifold.....	114



# Specifications

## Machine Specifications

### Batteries, Standard

Voltage	6V DC
Group	GC2
Type	T-105
Quantity	4
Battery capacity, maximum	C20 = 225AH
Reserve capacity @ 25A rate	447 minutes
Weight, each	62 lbs 28 kg

### Batteries, Maintenance-free (option)

Voltage	6V DC
Group	GC2
Type	6V-AGM
Quantity	4
Battery capacity, maximum	C20 = 200AH
Reserve capacity @ 25A rate	380 minutes
Weight, each	62 lbs 28 kg

### Fluid capacities

Hydraulic tank	3.75 gallons 14.2 liters
Hydraulic system (including tank)	5 gallons 19 liters

### Tires and Wheels

Tire size (solid rubber)	15 x 5 in 38.1 x 12.7 cm
Tire contact area	15 sq in 96.7 cm <sup>2</sup>
Castle nut torque, dry	300 ft-lbs 406.7 Nm
Castle nut torque, lubricated	225 ft-lbs 305 Nm

# Specifications

## Performance Specifications

### Drive speed, maximum

Platform stowed, fast	2.2 mph 40 ft / 12.4 sec 3.5 km/h 12.2 m / 12.4 sec
-----------------------	--

Platform stowed, slow	1.1 mph 40 ft / 24.8 sec 1.8 km/h 12.2 m / 24.8 sec
-----------------------	--

Platform raised	0.5 mph 40 ft / 55 sec 0.8 km/h 12.2 m / 55 sec
-----------------	--

### Braking distance, maximum

High range on paved surface	24 in ± 12 in 61 cm ± 30 cm
-----------------------------	--------------------------------

### Gradeability

GS-2646 AV	25%
GS-2646 AV35	20%

### Airborne noise emissions

Sound pressure level at ground workstation	< 70 dBA
Sound pressure level at platform workstation	< 70 dBA

### Function speed, maximum from platform controls (with 1 person in platform)

Platform up (fast mode)	28 to 32 seconds
Platform up (slow mode)	58 to 62 seconds
Platform down	32 to 36 seconds

### Function speed, powered extension deck from platform controls or ground controls (if equipped)

Extend	28 to 32 seconds
Retract	31 to 35 seconds

### Rated work load at full height, maximum

Platform Capacity	900 lbs 408 kg
-------------------	-------------------

For operational specifications, refer to the Operator's Manual.

# Specifications

## Hydraulic Oil Specifications

### Hydraulic Fluid Specifications

Genie specifications require hydraulic oils which are designed to give maximum protection to hydraulic systems, have the ability to perform over a wide temperature range, and the viscosity index should exceed 140. They should provide excellent antiwear, oxidation prevention, corrosion inhibition, seal conditioning, and foam and aeration suppression properties.

Cleanliness level, minimum	ISO 15/13
Water content, maximum	250 ppm

### Recommended Hydraulic Fluid

Hydraulic oil type	Chevron Rando HD Premium
Viscosity grade	32
Viscosity index	200

### Optional Hydraulic Fluids

Mineral based	Shell Tellus S2 V 32 Shell Tellus S2 V 46 Shell Tellus S4 VX 32 Shell Donax TG (Dexron III) Chevron 5606A
Biodegradable	Petro Canada Environ MV 46
Fire resistant	UCON Hydrolube HP-5046

Note: Genie specifications require additional equipment and special installation instructions for the approved optional fluids. Consult Genie Product Support before use.

### NOTICE

Optional fluids may not have the same hydraulic lifespan and may result in component damage.


Note: Extended machine operation can cause the hydraulic fluid temperature to increase beyond its maximum allowable range. If the hydraulic fluid temperature consistently exceeds 200°F / 90°C an optional oil cooler may be required.

### NOTICE

Do not top off with incompatible hydraulic fluids. Hydraulic fluids may be incompatible due to the differences in base additive chemistry. When incompatible fluids are mixed, insoluble materials may form and deposit in the hydraulic system, plugging hydraulic lines, filters, control valves and may result in component damage.

Note: Do not operate the machine when the ambient air temperature is consistently above 120°F / 49°C.

## Hydraulic Fluid Temperature Range

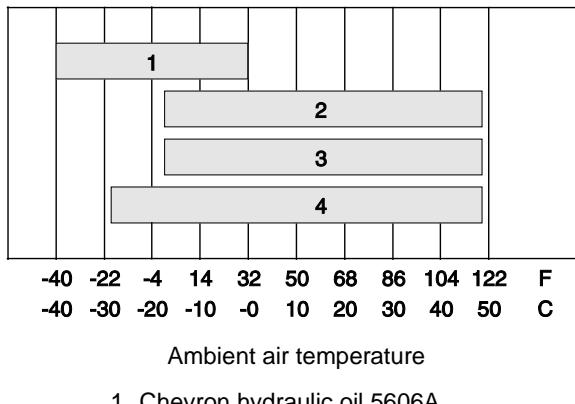

Ambient air temperature

- 1 Chevron hydraulic oil 5606A
- 2 Petro-Canada Environ MV 46
- 3 UCON Hydrolube HP-5046D
- 4 Chevron Rando HD premium oil MV

## Specifications

### Chevron Rando HD Premium Oil MV Fluid Properties

ISO Grade	32
Viscosity index	200
Kinematic Viscosity	
cSt @ 200°F / 100°C	7.5
cSt @ 104°F / 40°C	33.5
Brookfield Viscosity	
cP @ -4°F / -20°C	1040
cP @ -22°F / -30°C	3310
Flash point	375°F / 190°C
Pour point	-58°F / -50°C
Maximum continuous operating temperature	171°F / 77°C

Note: A hydraulic oil heating system is recommended when the ambient temperature is consistently below 0°F / -18°C.

Note: Do not operate the machine when the ambient temperature is below -20°F / -29°C with Rando HD Premium MV.

### Chevron 5606A Hydraulic Oil Fluid Properties

ISO Grade	15
Viscosity index	300
Kinematic Viscosity	
cSt @ 200°F / 100°C	5.5
cSt @ 104°F / 40°C	15.0
cSt @ -40°F / -40°C	510
Flash point	180°F / 82°C
Pour point	-81°F / -63°C
Maximum continuous operating temperature	124°F / 51°C

Note: Use of Chevron 5606A hydraulic fluid, or equivalent, is required when ambient temperatures are consistently below 0°F / -17°C unless an oil heating system is used.

#### NOTICE

Continued use of Chevron 5606A hydraulic fluid, or equivalent, when ambient temperatures are consistently above 32°F / 0°C may result in component damage

## Specifications

### Petro-Canada Environ MV 46 Fluid Properties

ISO Grade	46
Viscosity index	154
Kinematic Viscosity	
cSt @ 200°F / 100°C	8.0
cSt @ 104°F / 40°C	44.4
Flash point	482°F / 250°C
Pour point	-49°F / -45°C
Maximum continuous operating temperature	180°F / 82°C

### UCON Hydrolube HP-5046 Fluid Properties

ISO Grade	46
Viscosity index	192
Kinematic Viscosity	
cSt @ 149°F / 65°C	22
cSt @ 104°F / 40°C	46
cSt @ 0°F / -18°C	1300
Flash point	None
Pour point	-81°F / -63°C
Maximum continuous operating temperature	189°F / 87°C

### Shell Tellus S4 VX Fluid Properties

ISO Grade	32
Viscosity index	300
Kinematic Viscosity	
cSt @ 200°F / 100°C	9
cSt @ 104°F / 40°C	33.8
Brookfield Viscosity	
cSt @ -4°F / -20°C	481
cSt @ -13°F / -25°C	702.4
cSt @ -40°F / -40°C	2624
Flash point	>100
Pour point	-76°F / -60°C
Maximum continuous operating temperature	103°F / 75°C

## Specifications

### Hydraulic Component Specifications

#### Function pump

Type	Gear
Displacement per revolution	0.244 cu in 4 cc
Flow rate @ 2500 psi / 172 bar	3 gpm 11.3 L/min

#### Hydraulic tank return filter

10 micron with  
25 psi / 1.7 bar  
bypass

#### Function manifold

System relief valve pressure, maximum	3700 psi 255 bar
Lift relief valve pressure	1800 to 3700 psi 142 to 241 bar
Steer relief valve pressure	1500 psi 103 bar

#### Powered extension deck manifold

Relief valve pressure, maximum	750 psi 52 bar
--------------------------------	-------------------

### Manifold Component Specifications

#### Plug torque

SAE No. 2	50 in-lbs / 6 Nm
SAE No. 4	13 ft-lbs / 18 Nm
SAE No. 6	18 ft-lbs / 24 Nm
SAE No. 8	50 ft-lbs / 68 Nm
SAE No. 10	55 ft-lbs / 75 Nm
SAE No. 12	75 ft-lbs / 102 Nm

### Hydraulic Hose and Fitting Torque Specifications

Your machine is equipped with Parker Seal-Lok™ ORFS or 37° JIC fittings and hose ends. Genie specifications require that fittings and hose ends be torqued to specification when they are removed and installed or when new hoses or fittings are installed.

#### Seal-Lok™ Fittings

(hose end - ORFS)

SAE Dash Size	Torque
-4	10 ft-lbs / 13.6 Nm
-6	30 ft-lbs / 40.7 Nm
-8	40 ft-lbs / 54.2 Nm
-10	60 ft-lbs / 81.3 Nm
-12	85 ft-lbs / 115 Nm
-16	110 ft-lbs / 150 Nm
-20	140 ft-lbs / 190 Nm
-24	180 ft-lbs / 245 Nm

#### JIC 37° Fittings

(swivel nut or hose connection)

SAE Dash Size	Thread Size	Flats
-4	7/16-20	2
-6	9/16-18	1 1/4
-8	3/4-16	1
-10	7/8-14	1
-12	1 1/16-12	1
-16	1 5/16-12	1
-20	1 5/8-12	1
-24	1 7/8-12	1




# Specifications

## SAE O-ring Boss Port

(tube fitting - installed into Aluminum)  
(all types)

SAE Dash Size	Torque
-4	14 ft-lbs / 19 Nm
-6	23 ft-lbs / 31.2 Nm
-8	36 ft-lbs / 54.2 Nm
-10	62 ft-lbs / 84 Nm
-12	84 ft-lbs / 114 Nm
-16	125 ft-lbs / 169.5 Nm
-20	151 ft-lbs / 204.7 Nm
-24	184 ft-lbs / 249.5 Nm

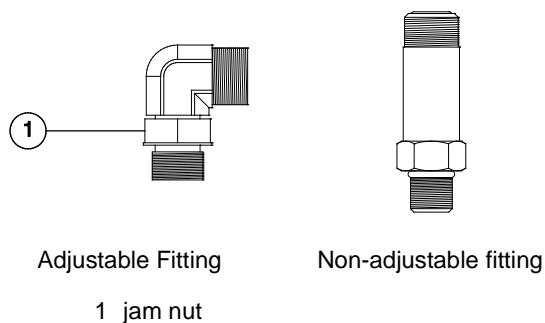

## SAE O-ring Boss Port

(tube fitting - installed into Steel)

SAE Dash Size	Torque
-4 ORFS / 37° (Adj)	15 ft-lbs / 20.3 Nm
ORFS (Non-adj)	26 ft-lbs / 35.3 Nm
37° (Non-adj)	22 ft-lbs / 30 Nm
-6 ORFS (Adj / Non-adj)	35 ft-lbs / 47.5 Nm
37° (Adj / Non-adj)	29 ft-lbs / 39.3 Nm
-8 ORFS (Adj / Non-adj)	60 ft-lbs / 81.3 Nm
37° (Adj / Non-adj)	52 ft-lbs / 70.5 Nm
-10 ORFS (Adj / Non-adj)	100 ft-lbs / 135.6 Nm
37° (Adj / Non-adj)	85 ft-lbs / 115.3 Nm
-12 (All types)	135 ft-lbs / 183 Nm
-16 (All types)	200 ft-lbs / 271.2 Nm
-20 (All types)	250 ft-lbs / 339 Nm
-24 (All types)	305 ft-lbs / 413.5 Nm

## Torque Procedure

### Seal-Lok™ fittings

- 1 Replace the O-ring. The O-ring must be replaced anytime the seal has been broken. The O-ring cannot be re-used if the fitting or hose end has been tightened beyond finger tight.


Note: The O-ring in Parker Seal Lok™ fittings and hose end are custom-size O-rings. They are not standard size O-rings. They are available in the O-ring field service kit (Genie part number 49612).

- 2 Lubricate the O-ring before installation.
- 3 Be sure the O-ring face seal is seated and retained properly.
- 4 Position the tube and nut squarely on the face seal end of the fitting, and tighten the nut finger tight.
- 5 Tighten the nut or fitting to the appropriate torque. Refer to the appropriate torque chart in this section.
- 6 Operate all machine functions and inspect the hose, fittings and related components to confirm there are no leaks.

# Specifications

## JIC 37° fittings

- 1 Align the tube flare (hex nut) against the nose of the fitting body (body hex fitting) and tighten the hex nut to the body hex fitting to hand tight, approximately 30 in-lbs / 3.4 Nm.
- 2 Using a permanent ink marker, make a reference mark on one of the flats of the hex nut and continue the mark onto the body of the hex fitting. Refer to Illustration 1.

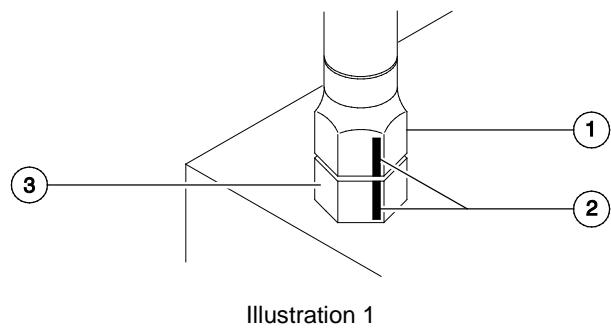


- 1 hex nut
- 2 reference mark
- 3 body hex fitting

- 3 Working clockwise on the body hex fitting, make a second mark with a permanent ink marker to indicate the proper tightening position. Refer to Illustration 2.

Note: Use the JIC 37° Fitting table in this section to determine the correct number of flats, for the proper tightening position.

Note: The marks indicate the correct tightening positions have been determined. Use the second mark on the body hex fitting to properly tighten the joint after it has been loosened.

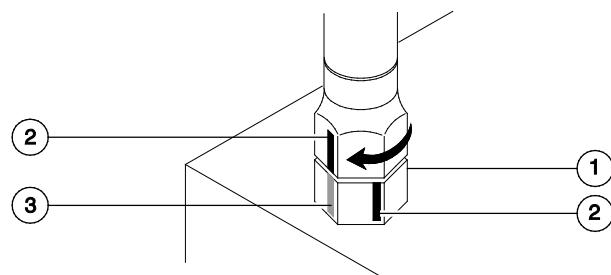

- 1 body hex fitting
- 2 reference mark
- 3 second mark

- 4 Tighten the hex nut until the mark on the hex nut is aligned with the second mark on the body hex fitting.
- 5 Operate all machine functions and inspect the hose, fittings and related components to confirm there are no leaks.

## Repair Procedures



### Observe and Obey:

- Repair procedures shall be completed by a person trained and qualified on the repair of this machine.
- Immediately tag and remove from service a damaged or malfunctioning machine.
- Repair any machine damage or malfunction before operating the machine.

### Before Repairs Start:

- Read, understand and obey the safety rules and operating instructions in the appropriate operator's manual on your machine.
- Be sure that all necessary tools and parts are available and ready for use.
- Use only Genie approved replacement parts.
- Read each procedure completely and adhere to the instructions. Attempting shortcuts may produce hazardous conditions.

### Machine Configuration:

- Unless otherwise specified, perform each repair procedure with the machine in the following configuration:
  - Machine parked on a firm, level surface
  - Key switch in the off position with the key removed
  - The red Emergency Stop button in the off position at both the ground and platform controls
  - Wheels chocked
  - All external AC power supply disconnected from the machine
  - Platform in the stowed position

# Repair Procedures

## About This Section

Most of the procedures in this section should only be performed by trained service professional in a suitably equipped workshop. Select the appropriate repair procedure after troubleshooting the problem.

Perform disassembly procedures to the point where repairs can be completed. Then to re-assemble, perform the disassembly steps in reverse order.

## Symbols Legend



Safety alert symbol—used to alert personnel to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.



Indicates a imminently hazardous situation which, if not avoided, will result in death or serious injury.



Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



Indicates a potentially hazardous situation which, if not avoided, may cause minor or moderate injury.



Indicates a potentially hazardous situation which, if not avoided, may result in property damage.

- Indicates that a specific result is expected after performing a series of steps.
- ✖ Indicates that an incorrect result has occurred after performing a series of steps.


## Platform Controls

The platform controls are used to operate the machine from the platform.

Activating a function button sends a signal to the Electronic Control Module (ECM). When the ECM is in the function mode, the platform controls are used to operate the various machine functions.

The platform controls consist of an Emergency Stop button, electronic circuit board, proportional control handle, drive/steer enable switch, alarm, function buttons and LED display.

For further information or assistance, contact Genie Product Support.

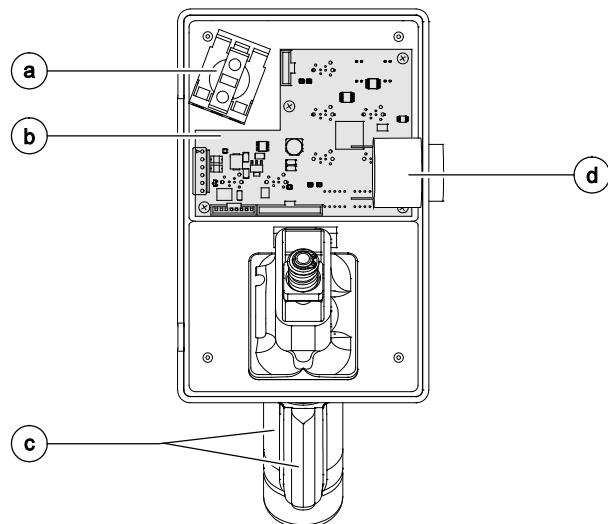


- a red Emergency Stop button P2
- b platform controls circuit board U3
- c proportional control handle and drive/steer enable switch JC9
- d alarm H1

### Operational Indicator Codes

These codes are generated by the electrical system to indicate machine operating status. During normal operation, a code will appear in the platform controls LED readout if a condition such as off-level, overload cutout, chassis mode operation or pothole guard stuck occurs.

If the platform controls LED readout displays an operational indicator code such as LL, the fault condition must be repaired or removed before resuming machine operation. Push in and pull out the red Emergency Stop button to reset the system.

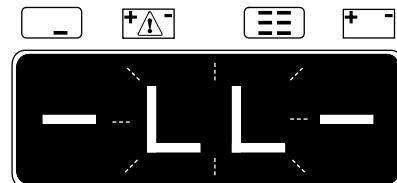

Platform Controls LED Readout

Code	Condition
LL	Off-level
OL	Platform Overload (CE and Australia)
CH	Chassis Mode Operation
PHS	Pothole Guard Stuck
nd	No Drive (option)
dE	Deck Extended (PED only) (lift and drive disabled)
Fd	Function Disabled (all functions)

Note: A code and a description of a code can also be viewed at the ground controls LCD display.

# Platform Controls

## 1-1 Circuit Board

### How to Remove the Platform Controls Circuit Board

- 1 Push in the red Emergency Stop button to the off position at both the ground and platform controls.
- 2 Disconnect the platform controls from the control cable at the platform.
- 3 Remove the fasteners securing the platform control box to the platform control bracket.
- 4 Remove the fasteners securing the bottom cover to the platform control box. Open the control box.
- 5 Remove the ties securing the wire harness.
- 6 Disconnect the red and black wires from the alarm.
- 7 Carefully remove the alarm from the platform control box.

- 8 Carefully disconnect all wire harness connectors from the platform controls circuit board.

#### WARNING

Electrocution/burn hazard. Contact with electrically charged circuits could result in death or serious injury. Remove all rings, watches and other jewelry.

#### NOTICE

Component damage hazard. Electrostatic discharge (ESD) can damage printed circuit board components. Maintain firm contact with a metal part of the machine that is grounded at all times when handling printed circuit boards OR use a grounded wrist strap.

- 9 Carefully remove the platform controls circuit board fasteners.
- 10 Carefully remove the platform controls circuit board from the platform control box.
- 11 Remove the transparent caps from the platform controls circuit board and save.

#### Circuit board fastener torque specifications

Hand tighten until screws seat	< 5 in-lbs < 0.6 Nm
--------------------------------	------------------------

Note: Before installing a circuit board, place the transparent caps removed in step 11, over the circuit board buttons.

Note: After installing the circuit board, check for proper button operation. Excessive torque of the circuit board fasteners will cause the buttons to bind. Moderate torque of the circuit board fasteners will not allow the buttons to engage.

## Platform Controls

### 1-2 Joystick

#### How to Remove the Joystick

- 1 Push in the red Emergency Stop button to the off position at both the ground and platform controls.
- 2 Disconnect the platform controls from the control cable at the platform.
- 3 Remove the fasteners securing the platform control box to the platform control bracket.
- 4 Remove the fasteners securing the bottom cover to the platform control box. Open the control box.
- 5 Remove the ties securing the joystick wire harness.
- 6 Carefully disconnect the joystick wire harness from the platform controls circuit board.

#### WARNING

Electrocution/burn hazard. Contact with electrically charged circuits could result in death or serious injury. Remove all rings, watches and other jewelry.

#### NOTICE

Component damage hazard. Electrostatic discharge (ESD) can damage printed circuit board components. Maintain firm contact with a metal part of the machine that is grounded at all times when handling printed circuit boards OR use a grounded wrist strap.

- 7 Carefully remove the joystick fasteners.
- 8 Carefully remove the joystick from the platform control box.

#### Torque specifications

Joystick fasteners	9 in-lbs 1 Nm
--------------------	------------------

### 1-3 Platform Controls Alarm

#### How to Remove the Platform Controls Alarm

- 1 Push in the red Emergency Stop button to the off position at both the ground and platform controls.
- 2 Disconnect the platform controls from the control cable at the platform.
- 3 Remove the fasteners securing the platform control box to the platform control bracket.
- 4 Remove the fasteners securing the bottom cover to the platform control box. Open the control box.
- 5 Disconnect the red and black wires from the alarm.

#### WARNING

Electrocution/burn hazard. Contact with electrically charged circuits could result in death or serious injury. Remove all rings, watches and other jewelry.

#### NOTICE

Component damage hazard. Electrostatic discharge (ESD) can damage printed circuit board components. Maintain firm contact with a metal part of the machine that is grounded at all times when handling printed circuit boards OR use a grounded wrist strap.

- 6 Carefully remove the alarm from the platform control box.

## Platform Controls

### 1-4

#### Platform Emergency Stop Button

#### How to Remove the Platform Controls Emergency Stop Button

- 1 Push in the red Emergency Stop button to the off position at both the ground and platform controls.
- 2 Disconnect the platform controls from the control cable at the platform.
- 3 Remove the fasteners securing the platform control box to the platform control bracket.
- 4 Remove the fasteners securing the bottom cover to the platform control box. Open the control box.

- 5 Disconnect the white wires from the Emergency Stop base.

**WARNING**

Electrocution/burn hazard. Contact with electrically charged circuits could result in death or serious injury. Remove all rings, watches and other jewelry.

**NOTICE**

Component damage hazard. Electrostatic discharge (ESD) can damage printed circuit board components. Maintain firm contact with a metal part of the machine that is grounded at all times when handling printed circuit boards OR use a grounded wrist strap.

- 6 Carefully remove the Emergency Stop base from the Emergency Stop button.
- 7 Carefully remove the retaining ring from the Emergency Stop button.
- 8 Carefully remove the Emergency Stop button from the platform control box.

## Ground Controls

The ground controls, used to operate the machine from the ground, can also be used to tune the performance of the machine.


The ground controls consist of an Electronic Control Module (ECM), emergency stop button, selector/key switch and circuit breaker.

Activating the function enable button and the up or down at the same time, sends a signal to the (ECM). This allows the platform to be raised or lowered at the ground controls.

Note: Steer and drive functions are not available at the ground controls.

When the ECM is in the set up mode, the ground controls are used to adjust the function speed parameters, machine models, or machine options.


For further information or assistance, contact Genie Product Support.

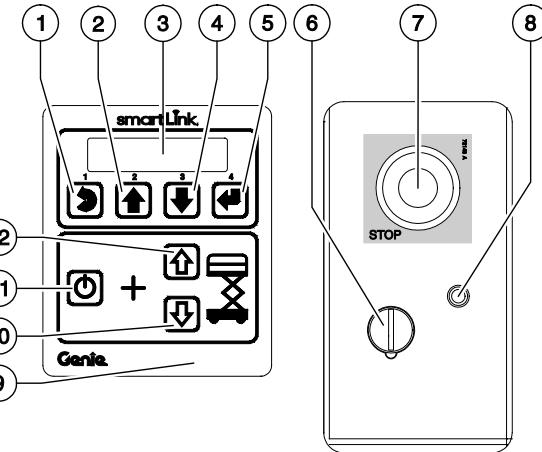

Ground Controls with Manual Extension Deck

- 1 machine setup, escape button
- 2 machine setup, scroll up button
- 3 LCD readout
- 4 machine setup, scroll down button
- 5 machine setup, enter button
- 6 selector switch KS1
- 7 red Emergency Stop P1
- 8 circuit breaker CB2
- 9 ECM U5
- 10 platform down button
- 11 lift function enable button
- 12 platform up button

## Ground Controls

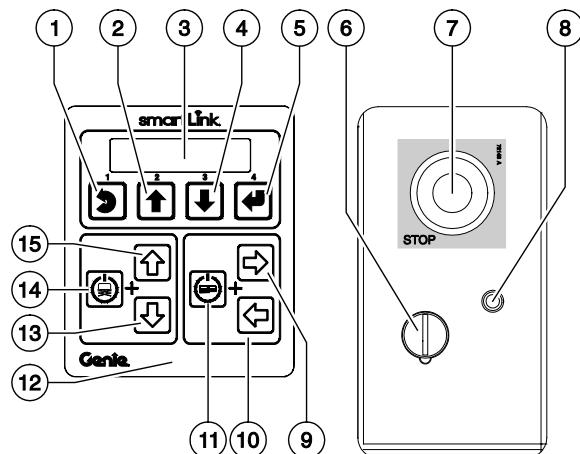

Ground Controls with Powered Extension Deck

- 13 machine setup, escape button
- 14 machine setup, scroll up button
- 15 LCD readout
- 16 machine setup, scroll down button
- 17 machine setup, enter button
- 18 selector switch KS1
- 19 red Emergency Stop P1
- 20 circuit breaker CB2
- 21 powered extension deck extend button
- 22 powered extension deck retract button
- 23 powered extension deck enable button
- 24 ECM U5
- 25 platform down button
- 26 lift function enable button
- 27 platform up button

### 2-1 Software Revision Level


#### How to Determine the Software Revision Level

The machine software revision level is displayed at the ground controls LCD display.

- 1 Turn the selector/key switch to the ground controls or platform controls position. Pull out the red Emergency Stop button to the on position at both ground and platform controls.
- ④ Result: The display at the platform controls will show "CH". See example below.




- ④ Result: The display at the ground controls will show the machine model and hour meter information. After 3 seconds, the machine model will not show on the display. See example below.

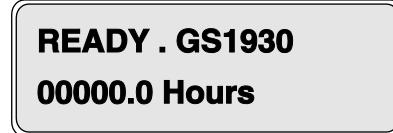

## Ground Controls

- 2 Press the ground control scroll down button.
- ④ Result: The ground control LCD display will indicate the software revision and hour meter information. After 5 seconds, the ground controls LCD display will display machine model and hour meter information again. See example below.
- 3 Push in the red Emergency Stop button to the off position at both the ground and platform controls and turn the selector/key switch to the off position.

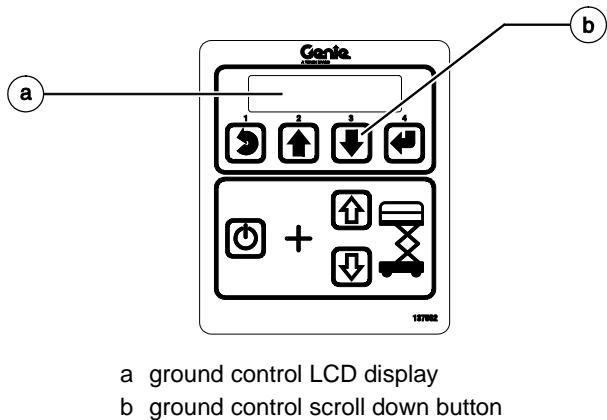

### 2-2

#### Machine Setup

#### How to Setup the Machine from Ground Controls

The ground controls can be used to setup the machine parameters from the ground. Features that can be adjusted from the ground controls include machine Model, Options and Speed setup. This menu can only be entered from ground controls with the selector/key switch in the ground controls position.

##### **DANGER**

Tip-over hazard. Do not adjust function speeds higher than specified in this procedure. Setting the function speeds greater than specifications could cause the machine to tip over resulting in death or serious injury.

##### **DANGER**


Tip-over hazard. Do not adjust function speeds higher than specified in this procedure. Setting the function speeds greater than specifications could cause the machine to tip over resulting in death or serious injury.

Note: Select a test area that is firm, level and free of obstructions.

- 1 Turn the selector/key switch to the ground controls position and pull out the red Emergency Stop button to the on position at the platform controls.

## Ground Controls

2 Press and hold the ground control scroll up and scroll down buttons.

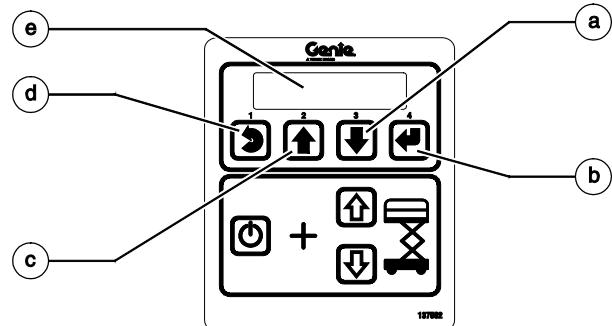


Ground Control Menu Buttons

- a scroll down button
- b enter button
- c scroll up button
- d escape button
- e LCD display

3 Pull out the red Emergency Stop button to the on position at the ground controls.

Ⓐ Result: The ground controls LCD display will show the following:

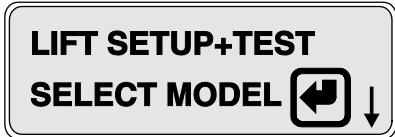

4 Use the ground control menu buttons to select machine Model, Options and Speed Setup parameters. Follow the menu structure indicated on the ground control LCD display.

### 2-3

## Loading or Updating Machine Software

Note: Before updating the machine software, open a web browser and navigate to the following location for the Genie Machine Software Download portal, <http://firmware.genielift.com>. Perform a search by applying the appropriate filters and download the machine software.

Note: There are two procedures available to update the machine software. These are **Bootloader Mode** and **Machine Application Mode**.

**Bootloader Mode:** The Bootloader mode is only available with the key switch in the GCON position. It allows the user to update or reinstall the machine software by directing the system into the Bootloader.

Choose this mode if the GCON ECM is not operating correctly.

**Machine Application Mode:** The machine Application mode is available with the key switch in the GCON or PCON position. This mode of machine software update requires the user to enter the Machine Service Tool.

Choose this mode if the machine is operating correctly and you are updating the machine software.


## Ground Controls

### Bootloader Mode

- 1 Open the GCON compartment.

Note: Some models will require opening the ground control box to access the GCON.

- 2 Turn the key switch to the ground controls position and pull out the red Emergency Stop button to the on position at the platform controls.
- 3 At the ground controls, press and hold the Enter and Escape buttons.

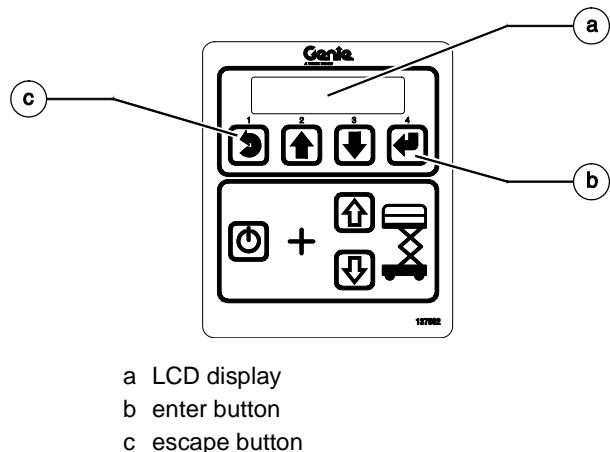


- 4 Pull out the red Emergency Stop button to the on position at the ground controls.

Ⓐ Result: The ground controls LCD display will show the following:

**SOFTWARE UPDATE**  
**CONNECT ETHERNET**

- 5 Locate the diagnostic port on the side of the GCON. Remove one of the fasteners securing the cover and set aside. Loosen the other fastener. Do not remove it.

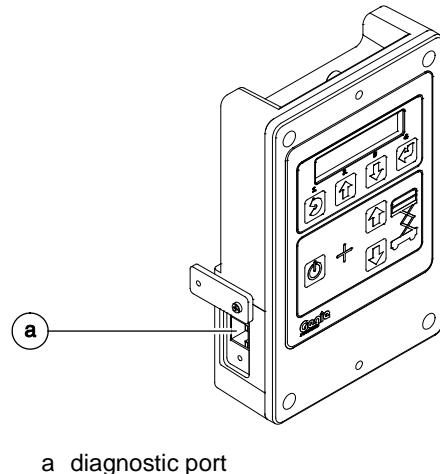

- 6 Connect one end of a CAT5 Ethernet cable into the diagnostic port. Connect the other end into a PC or laptop.

Ⓐ Result: The ground controls LCD display will show the following:

**OPEN WEB BROWSER**  
**<IP ADDRESS>**

- 7 Read and record the IP address.

## Ground Controls

8 Launch a web browser such as Internet Explorer®, Chrome® or Firefox® on your PC or laptop. Type the IP address from step 7 into the web browser address bar and press enter.

⑤ Result: The following screen will be displayed.




9 Select the **Choose File** button and navigate to the downloaded Genie Flash file (.gff).

Note: Verify it is the correct flash file.

10 Select the **Load Flash File** button to verify the file is a .gff file.


⑤ Result: The following screen will be displayed.

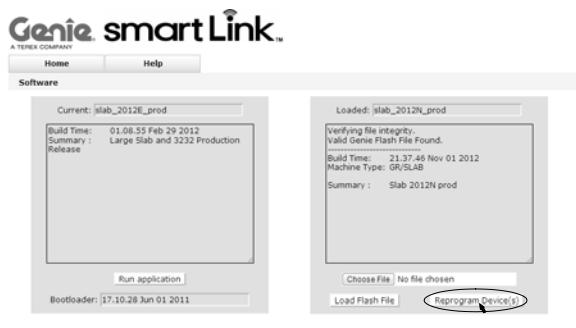

11 Select the **Reprogram Device(s)** button to start the ECM software update.

⑥ Result: The following screen will be displayed after the software update is complete.

Note: Do not turn off power while the ECM is being reprogrammed.

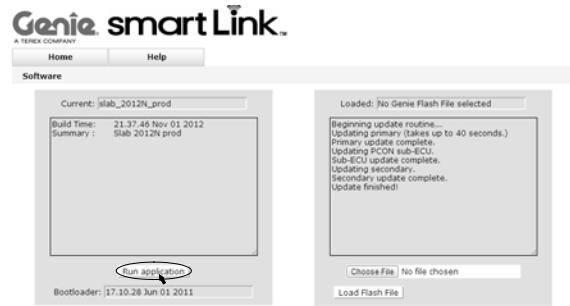

12 Select the **Run Application** button to exit the software update mode.

13 Push in the red Emergency Stop button and disconnect the CAT5 cable from the GCON.

14 Secure the diagnostic port cover using the retaining fasteners removed in step 5. Do not over tighten.

Note: Machines equipped with AGM batteries will need to select the AGM battery type using the GCON set parameters screen. Refer to the *Machine Setup* procedure in the Service and Repair manual that is appropriate for your machine.

### WARNING

Tip over hazard. Updating the SmartLink software may have impacted the machines default drive speeds. Tipping over the machine will result in death or serious injury.

Perform drive speed test. Refer to the *Maintenance Manual* that is appropriate for your machine.

15 Perform a function test. Refer to the Operator's Manual on your machine.

16 Return the machine to service.


## Ground Controls

### Machine Application Mode

- 1 Open the GCON compartment.

Note: Some models will require opening the ground control box to access the GCON.

- 2 Turn the key switch to ground controls or platform controls and pull out the red Emergency Stop button to the on position at both ground and platform controls.
- 3 Locate the diagnostic port on the side of the GCON. Remove one of the fasteners securing the cover and set aside. Loosen the other fastener. Do not remove it.

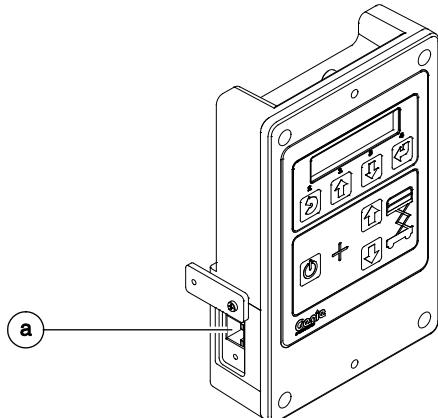

a diagnostic port


- 4 Connect one end of a CAT5 Ethernet cable into the diagnostic port. Connect the other end into a PC or laptop.

Ⓐ Result: The ground controls LCD display will show the following:

**OPEN WEB BROWSER**  
**<IP ADDRESS>**


- 5 Read and record the IP address.

Note: The display will only show the IP address for 3 seconds. Press the scroll up button to display the IP address for another 3 seconds.

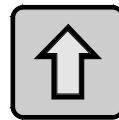

- 6 Launch a web browser such as Internet Explorer ®, Chrome ® or Firefox ® on your PC or laptop. Type the IP address from step 5 into the web browser address bar and press enter.

Ⓐ Result: The following screen will be displayed.

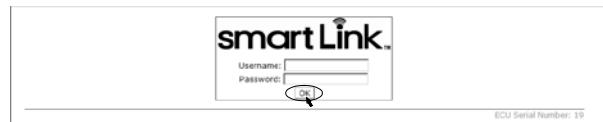


- 7 Enter the following username and password then select **OK**.

**Username: smart.link**

**Password: SL1000**

Note: The username and password are case sensitive.

Ⓐ Result: The following screen will be displayed.

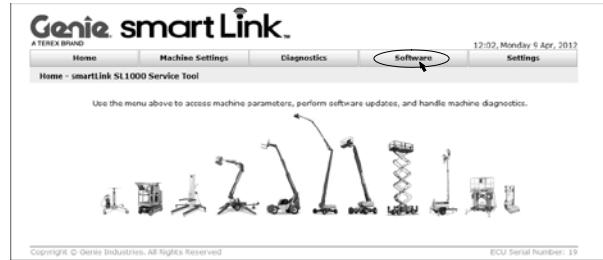

## Ground Controls

8 Select the **Software** tab at the header bar.  
 ◎ Result: The following screen will be displayed.




9 Select the **Update Machine Software** button.  
 ◎ Result: The following screen will be displayed.



10 Select the **Choose File** button and navigate to the downloaded Genie Flash file (.gff).


Note: Verify it is the correct flash file.

11 Select the **Load Flash File** button to verify the file is a .gff file.  
 ◎ Result: The following screen will be displayed.

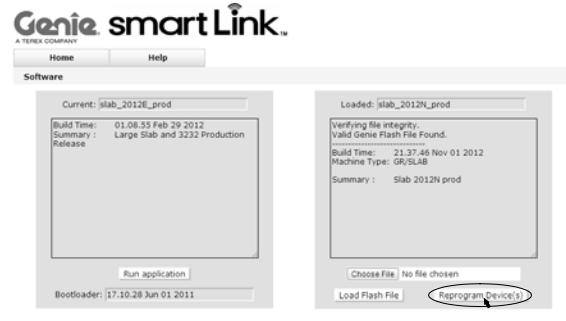

12 Select the **Reprogram Device(s)** button to start the ECM software update.  
 ◎ Result: The following screen will be displayed after the software update is complete.

Note: Do not turn off power while the ECM is being reprogrammed.

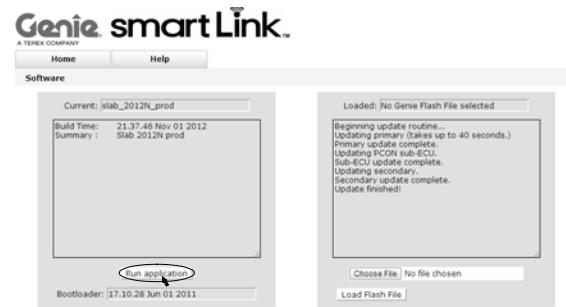

13 Select the **Run Application** button to exit the software update mode.  
 14 Push in the red Emergency Stop button and disconnect the CAT5 cable from the GCON.

## Ground Controls

15 Secure the diagnostic port cover using the retaining fasteners removed in step 5. Do not over tighten.

Note: Machines equipped with AGM batteries will need to select the AGM battery type using the GCON set parameters screen. Refer to the *Machine Setup* procedure in the Service and Repair manual that is appropriate for your machine.

### ⚠ WARNING

Tip over hazard. Updating the SmartLink software may have impacted the machines default drive speeds. Tipping over the machine will result in death or serious injury.

Perform drive speed test. Refer to the *Maintenance Manual* that is appropriate for your machine.

16 Perform a function test. Refer to the Operator's Manual on your machine.  
17 Return the machine to service.

### 2-4

#### Using a Wi-Fi Router to Connect to the SmartLink Web Service Tool


Note: Before using a portable wireless router to connect to the Smart Link Service Tool web site, the router must be configured to the type of connection desired. Refer to the portable wireless router users manual for set-up and configuration instructions.

1 Open the GCON compartment.

Note: Some models will require opening the ground control box to access the GCON.


2 Turn the key switch to ground controls or platform controls and pull out the red Emergency Stop button to the on position at both ground and platform controls.

⑤ Result: The display at the platform controls will show "CH". See example below.

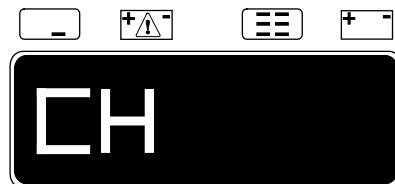

## Ground Controls

3 Locate the diagnostic port on the side of the GCON. Remove one of the fasteners securing the cover and set aside. Loosen the other fastener. Do not remove it.

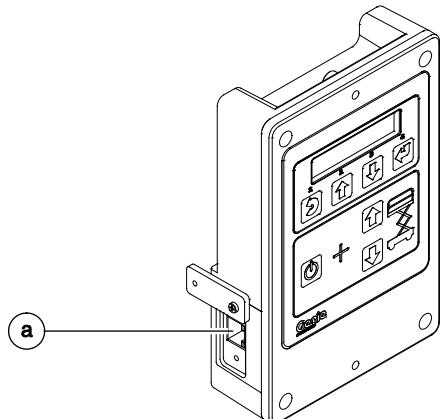

a diagnostic port


4 Connect one end of a CAT5 Ethernet cable into the diagnostic port. Connect the other end into the ethernet port of the portable wireless router.

⑤ Result: The ground controls LCD display will show the following:

**OPEN WEB BROWSER**  
**<IP ADDRESS>**

5 Read and record the IP address.

Note: The display will only show the IP address for 3 seconds. Press the scroll up button to display the IP address for another 3 seconds.

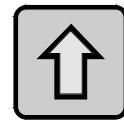

6 On a PC, laptop or mobile device, set up a wireless network for the portable router.


Note: Refer to the Operating System's procedure for connecting to a wireless network.

7 After establishing a new wireless network, select the appropriate network your portable wireless router.

Note: Refer to the Operating System's procedure for connecting to a wireless network.

8 Launch a web browser such as Internet Explorer ®, Chrome ® or Firefox ® on your PC, laptop or mobile device. Type the IP address from step 5 into the web browser address bar and press enter.

⑥ Result: The following screen will be displayed.

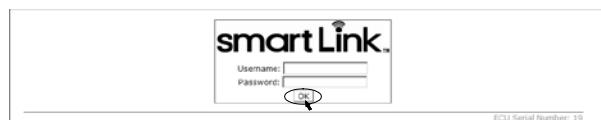

## Ground Controls

9 Enter the following username and password then select **OK**.

**Username:** smart.link

**Password:** SL1000

Note: The username and password are case sensitive.

④ Result: The following screen will be displayed.



10 After using the Smart Link Service Tool web site, push in the red Emergency Stop button and disconnect the CAT5 cable from the GCON.

11 Secure the diagnostic port cover using the retaining fasteners removed in step 3. Do not over tighten.

Note: Machines equipped with AGM batteries will need to select the AGM battery type using the GCON set parameters screen. Refer to the *Machine Setup* procedure in the Service and Repair manual that is appropriate for your machine.

### WARNING

Tip over hazard. Updating the SmartLink software may have impacted the machines default drive speeds. Tipping over the machine will result in death or serious injury.

Perform drive speed test. Refer to the *Maintenance Manual* that is appropriate for your machine.

12 Perform a function test. Refer to the Operator's Manual on your machine.

### 2-5

#### Service Override Mode

The Electronic Control Module (ECM) is programmed with a Service Override mode. Service Override mode is only intended for certain circumstances and is not part of the normal machine operation. Service Override mode should only be accessed by trained personal to repair faults and/ or a malfunctioning machine.

Note: Service Override mode can only be entered at the ground controls and is intended to allow the platform to be raised or lowered. Once the platform has reached the maximum allowable height, the system will exit Service Override mode. Repeat this procedure to lower the platform.

Note: When in Service Override mode, an audible alarm will sound.

Note: Before entering Service Override mode, fault codes or the malfunction affecting the operation of the machine should be fully understood to ensure Service Override mode is required.

Note: Perform this operation on a firm, level surface and if equipped, with the outriggers auto leveled or fully retracted.


### DANGER

Tip-over hazard. Operating the machine on a surface that is not level while in Service Override mode will result in death or serious injury. Follow proper operating procedures and safety precautions. Do not use Service Override mode if you are not trained and familiar with the operation of the machine.

1 Turn the selector/key switch to the ground controls position and pull out the red Emergency Stop button to the on position at the platform controls.

## Ground Controls

2 Press and hold the ground control scroll up and scroll down buttons.

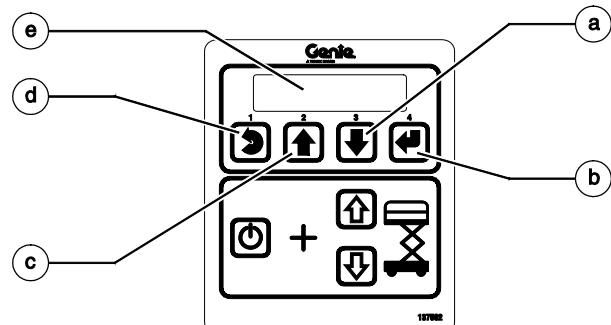

Ground Control Menu Buttons

- a scroll down button
- b enter button
- c scroll up button
- d escape button
- e LCD display

3 Pull out the red Emergency Stop button to the on position at the ground controls.

Ⓐ Result: The ground controls LCD display will show the following:



4 Release the Scroll Up and Scroll Down buttons after the ground controller powers up.


5 At the ground controls, use the Scroll Down button to scroll to **SVC Override**.

Ⓐ Result: The ground controls LCD display will show the following:




6 Press the Enter button.

Ⓐ Result: The ground controls LCD display will show an alternating message every 1.5 seconds.

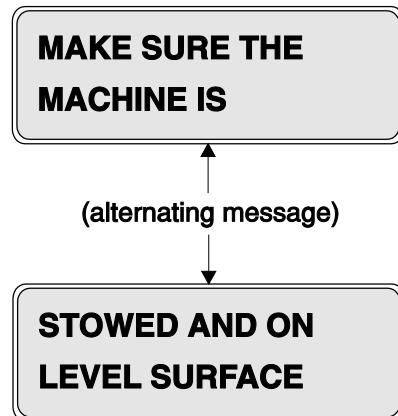


7 Press the Enter button.

Ⓐ Result: The ground controls LCD display will show the following:

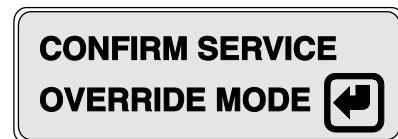

8 Press the Enter button.

Ⓐ Result: The ground controls LCD display will show the following:

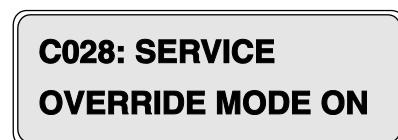


## Ground Controls

### 2-6 Level Sensors


The Electronic Control Module (ECM) is programmed to deactivate the lift and drive functions and activate an alarm when a signal is received from the level sensor.

The tilt alarm sounds when the incline of the chassis exceeds 1.5° to the side and 3° to the front or rear.


Use the illustrations to verify which type of level sensor is installed and perform the procedure that is appropriate for your machine.

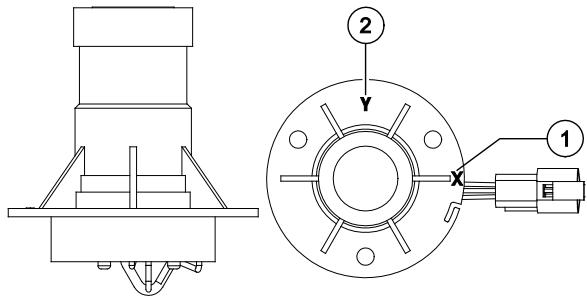

Procedure 1

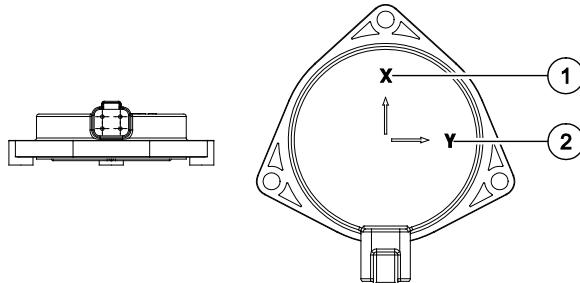

Procedure 2

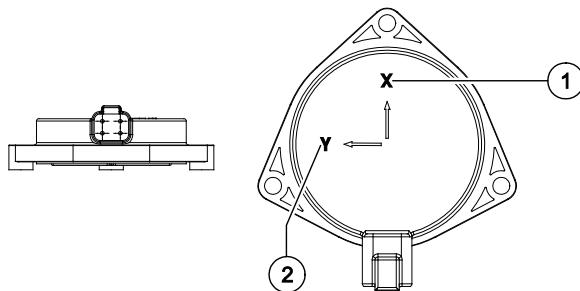

Procedure 3

1 X axis

2 Y axis

## Ground Controls

### How to Install and Calibrate the Level Sensor - Procedure 1

#### **DANGER**

Tip-over hazard. Failure to install or calibrate the level sensor as instructed will compromise machine stability and cause the machine to tip over, resulting in death or serious injury. Do not install or calibrate the level sensor other than specified in this procedure.

- 1 Move the machine to an area that has a firm, level surface and is free of obstructions.

Note: The surface must be  $0^\circ \pm 0.5^\circ$ .

- 2 Remove the platform controls from the platform.
- 3 Turn the key switch to platform controls and pull out the red Emergency Stop button to the on position at both ground and platform controls.
- 4 Raise the platform 7 to 8 feet / 2.1 to 2.4 m.
- 5 Lift the safety arm, move it to the center of the scissor arm and rotate down to a vertical position.
- 6 Lower the platform onto the safety arm.

#### **WARNING**

Crushing hazard. Keep hands clear of the safety arm when lowering the platform.

If you are not installing a new level sensor, proceed to step 15.

- 7 Turn the key switch to the off position and push in the red Emergency Stop button to the off position at the ground controls.

- 8 Tag and disconnect the level sensor wire harness from the chassis wire harness.

Note: The wire harness connection is located next to the level sensor, on top of the chassis at the steer end of the machine.

- 9 Remove the level sensor retaining fasteners and remove the level sensor from the machine.

- 10 Tag and disconnect the level sensor wires from the level sensor connector plug.

- 11 Securely install the wires of the new level sensor into the level sensor connector plug.


## Ground Controls

12 Place the new level sensor onto the level sensor mount bracket with the "X" on the level sensor base closest to the long side of the level sensor mount, and the "Y" on the level sensor base closest to the short side of the level sensor mount.

### **DANGER**

Tip-over hazard. Failure to install the level sensor as instructed, could result in the machine tipping over, causing death or serious injury.

**Steer End**

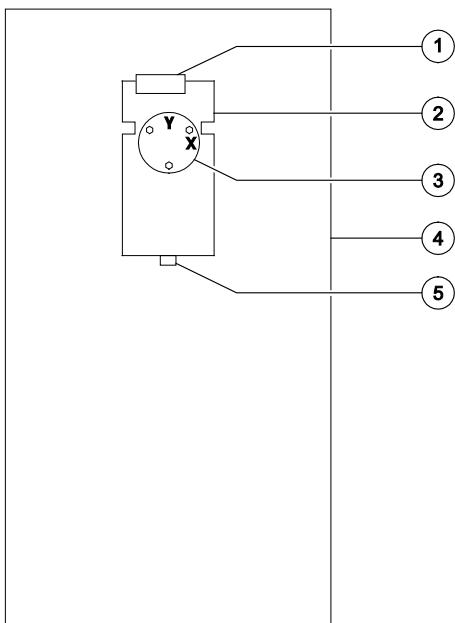

**Non-steer End**

- 1 limit switch
- 2 level sensor mount bracket
- 3 level sensor S7
- 4 scissor chassis
- 5 alarm H5

13 Install the level sensor retaining fasteners through the level sensor and springs, and into the mount bracket. Tighten the fasteners and measure the distance between the level sensor and the level sensor mount bracket.

Ⓐ Result: The measurement should be approximately 0.375 inch / 10 mm.

14 Connect the chassis wire harness to the level sensor wire harness.

15 Turn the key switch to the ground control and pull out the red Emergency Stop button to the on position at the ground controls.

16 Adjust the level sensor retaining fasteners until the bubble at the top of the level sensor is centered in the circles.

Ⓐ Result: The tilt sensor alarm should not sound.

17 Raise the platform slightly.

18 Return the safety arm to the stowed position.

19 Lower the platform to the stowed position.

20 Center a lifting jack under the drive chassis at the ground controls side of the machine.

21 Raise the machine approximately 2 inches / 5 cm. Place blocks under the chassis for support.

## Ground Controls

22 **GS-1530 and GS-1930:** Place a 0.64 x 6 x 6 inch / 16.2 mm x 15 cm x 15 cm thick steel block under both wheels at the ground controls side of the machine.

**GS-1532 and GS-1932:** Place a 0.68 x 6 x 6 inch / 17.2 mm x 15 cm x 15 cm thick steel block under both wheels at the ground controls side of the machine.

**GS-2032, GS-2632 and GS-3232:** Place a 0.66 x 6 x 6 inch / 16.8 mm x 15 cm x 15 cm thick steel block under both wheels at the ground controls side of the machine.

**GS-2046, GS-2646, GS-3246 and GS-4047:** Place a 1 x 6 x 6 inch / 25.4 mm x 15 cm x 15 cm thick steel block under both wheels at the ground controls side of the machine.

23 Lower the machine onto the blocks.

24 Raise the platform 7 to 8 feet / 2.1 to 2.4 m.

- Ⓐ Result: The level sensor alarm should not sound.
- ⓧ Result: The level sensor alarm does sound and fault code LL appears in the diagnostic display. Adjust the level sensor retaining fasteners just until the level sensor alarm does not sound.

25 Lower the platform to the stowed position.

26 Raise the machine approximately 2 inches / 5 cm. Place blocks under the chassis for support.

27 Remove the blocks from under both wheels.

28 Lower the machine and remove the blocks.

29 Center a lifting jack under the drive chassis at the battery pack side of the machine.

30 Raise the machine approximately 2 inches / 5 cm. Place blocks under the chassis for support.

31 **GS-1530 and GS-1930:** Place a 0.77 x 6 x 6 inch / 19.6 mm x 15 cm x 15 cm thick steel block under both wheels at the battery pack side of the machine.

**GS-1532 and GS-1932:** Place a 0.83 x 6 x 6 inch / 21.1 mm x 15 cm x 15 cm thick steel block under both wheels at the battery pack side of the machine.

**GS-2032, GS-2632 and GS-3232:** Place a 0.8 x 6 x 6 inch / 20.3 mm x 15 cm x 15 cm thick steel block under both wheels at the battery pack side of the machine.

**GS-2046, GS-2646, GS-3246 and GS-4047:** Place a 1.22 x 6 x 6 inch / 31 mm x 15 cm x 15 cm thick steel block under both wheels at the battery pack side of the machine.

32 Lower the machine onto the blocks.

33 Raise the platform 7 to 8 feet / 2.1 to 2.4 m.

- Ⓐ Result: The platform should stop, an alarm should sound and fault code LL appears in the diagnostic display.
- ⓧ Result: The platform does not stop or the level sensor alarm does not sound. Adjust the level sensor until the alarm just begins to sound OR the down limit switch may need to be adjusted.

34 Lower the platform to the stowed position.

35 Raise the machine approximately 2 inches / 5 cm.

36 Remove the blocks from under both wheels.

37 Lower the machine and remove the jack.

## Ground Controls

### How to Install and Calibrate the Level Sensor - Procedure 2

#### **⚠ DANGER**

Tip-over hazard. Failure to install the level sensor as instructed will compromise machine stability and cause the machine to tip over, resulting in death or serious injury. Do not install the level sensor other than specified in this procedure.

Note: If you are **not** installing a new level sensor, proceed to step 14.

- 1 Move the machine to an area that has a firm, level surface and is free of obstructions.

Note: Use a digital level to verify the surface is level.

- 2 Remove the platform controls from the platform.
- 3 Turn the key switch to ground control and pull out the red Emergency Stop button to the on position at both ground and platform controls.

- 4 Raise the platform 7 to 8 feet / 2.1 to 2.4 m.
- 5 Lift the safety arm, move it to the center of the scissor arm and rotate down to a vertical position.
- 6 Lower the platform onto the safety arm.

#### **⚠ WARNING**

Crushing hazard. Keep hands clear of the safety arm when lowering the platform.

- 7 Turn the key switch to the off position and push in the red Emergency Stop button to the off position at the ground controls.
- 8 Tag and disconnect the level sensor wire harness from the chassis wire harness.

Note: The wire harness connection is located on the level sensor, on top of the chassis at the steer end of the machine.

- 9 Remove the level sensor retaining fasteners and remove the level sensor from the machine.
- 10 Securely install the wires of the new level sensor into the level sensor connector plug.


## Ground Controls

11 Place the new level sensor on to the level sensor bracket with the "Y" on the level sensor closest to the ground controls of the machine and the "X" on the level sensor closest to the steer end of the machine.

### DANGER

Tip-over hazard. Failure to install the level sensor as instructed, could result in the machine tipping over, causing death or serious injury.

Steer End

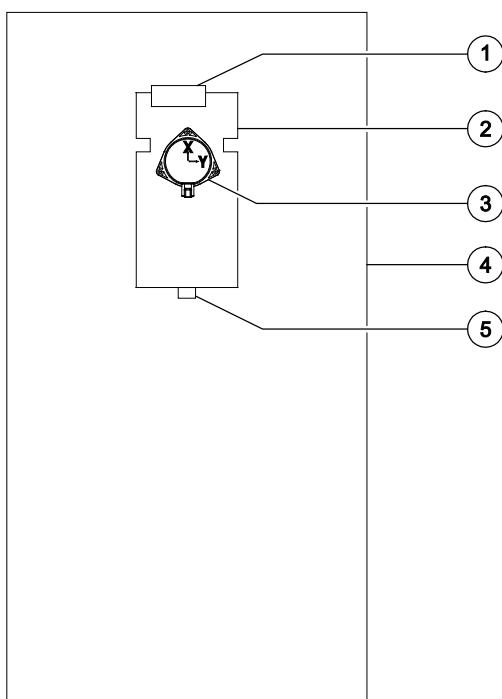

Non-steer End

- 1 limit switch
- 2 level sensor mount bracket
- 3 level sensor S7
- 4 scissor chassis
- 5 alarm H5

12 Install the level sensor retaining fasteners through the level sensor and into the mount bracket.


13 Connect the chassis wire harness to the level sensor.

14 Turn the key switch to ground control and pull out the red Emergency Stop button to the on position at both ground and platform controls.

④ Result: GCON will display a 'C051: SYSTEMFAULT, TILT:NoCal fault.'

15 Push in the red Emergency Stop button to the off position at the ground controls.

16 Press and hold the ground control scroll up and scroll down buttons.

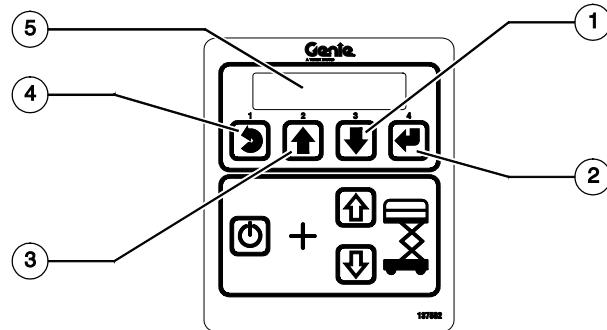


Ground Control Menu Buttons

- 1 scroll down button
- 2 enter button
- 3 scroll up button
- 4 escape button
- 5 LCD display

## Ground Controls

17 Pull out the red Emergency Stop button to the on position at the ground controls.

④ Result: The ground controls LCD display will show the following:

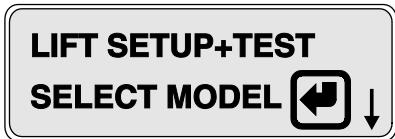


18 Release the Scroll Up and Scroll Down buttons after the ground controller powers up.

19 Use the Scroll Up or Scroll Down buttons to scroll to **Select Option**.



20 Press the Enter button.

21 Use the Scroll Up or Scroll Down buttons to scroll to Tilt Sensor.

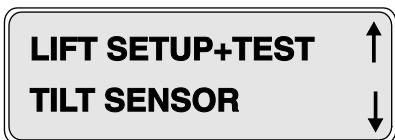

22 Press the Enter button.

23 Press and hold the Enter button to start calibration.

④ Result: An audible alarm will sound when calibration is complete.

Note: The machine will not calibrate if it is on a slope of one degree or greater.

Note: If the level sensor has been replaced, continue with step 24. If the level sensor was not replaced skip to step 27.




24 Raise the platform 7 to 8 feet / 2.1 to 2.4 m.

25 Return the safety arm to the stowed position.

26 Lower the platform to the stowed position.

27 Place a digital level on the ground control side of the drive chassis. Zero out the digital level.

28 Drive the steer end of the machine up a ramp until it is just under 3°.

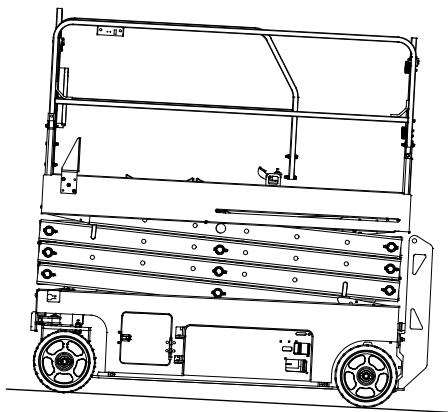

## Ground Controls

29 Raise the platform 7 to 8 feet / 2.1 to 2.4 m.

- Ⓐ Result: No audible alarm is heard.
- ⓧ Result: The platform stops, an audible alarm is heard and Fault LL is displayed. Repeat this procedure starting at step 15 on a firm level surface.

30 Lower the platform to the stowed position.

31 Continue driving the machine up the ramp until it is just over 3°.

32 Raise the platform 7 to 8 feet / 2.1 to 2.4 m.

- Ⓐ Result: The platform should stop, an alarm should sound and fault code LL appears in the diagnostic display.
- ⓧ Result: The platform does not stop or the level sensor alarm does not sound. Repeat this procedure starting at step 15 on a firm level surface.

33 Lower the platform to the stowed position.

34 Drive the non-steer end of the machine up a ramp until it is just under 3°.

35 Raise the platform 7 to 8 feet / 2.1 to 2.4 m.

- Ⓐ Result: No audible alarm is heard.
- ⓧ Result: The platform stops, an audible alarm is heard and Fault LL is displayed. Repeat this procedure starting at step 15 on a firm level surface.

36 Lower the platform to the stowed position.

37 Continue driving the machine up the ramp until it is just over 3°.



38 Raise the platform 7 to 8 feet / 2.1 to 2.4 m.

- Ⓐ Result: The platform should stop, an alarm should sound and fault code LL appears in the diagnostic display.
- ⓧ Result: The platform does not stop or the level sensor alarm does not sound. Repeat this procedure starting at step 15 on a firm level surface.

39 Lower the platform to the stowed position.

40 Place a digital level on the steer end of the drive chassis. Zero out the digital level.

41 Drive the ground control side of the machine onto a ramp until it is just under 1.5°.

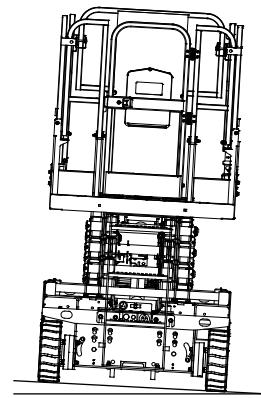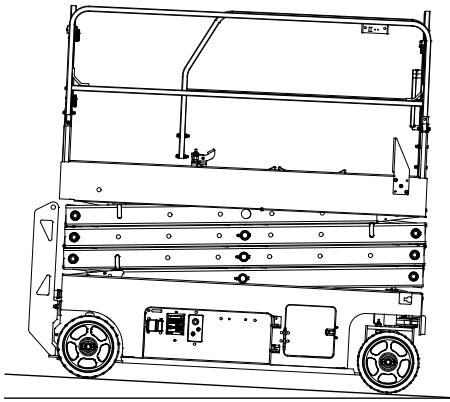

## Ground Controls

42 Raise the platform 7 to 8 feet / 2.1 to 2.4 m.

- Ⓐ Result: No audible alarm is heard.
- ⓧ Result: The platform stops, an audible alarm is heard and Fault LL is displayed. Repeat this procedure starting at step 15 on a firm level surface.

43 Lower the platform to the stowed position.

44 Continue driving the machine onto the ramp until it is just over 1.5°.

45 Raise the platform 7 to 8 feet / 2.1 to 2.4 m.

- Ⓐ Result: The platform should stop, an alarm should sound and fault code LL appears in the diagnostic display.
- ⓧ Result: The platform does not stop or the level sensor alarm does not sound. Repeat this procedure starting at step 15 on a firm level surface.

46 Lower the platform to the stowed position.

47 Drive the battery compartment side of the machine onto a ramp until it is just under 1.5°.

48 Raise the platform 7 to 8 feet / 2.1 to 2.4 m.

- Ⓐ Result: No audible alarm is heard.
- ⓧ Result: The platform stops, an audible alarm is heard and Fault LL is displayed. Repeat this procedure starting at step 15 on a firm level surface.


49 Lower the platform to the stowed position.

50 Continue driving the machine onto the ramp until it is just over 1.5°.

51 Raise the platform 7 to 8 feet / 2.1 to 2.4 m.

- Ⓐ Result: The platform should stop, an alarm should sound and fault code LL appears in the diagnostic display.
- ⓧ Result: The platform does not stop or the level sensor alarm does not sound. Repeat this procedure starting at step 15 on a firm level surface.

52 Lower the platform to the stowed position.

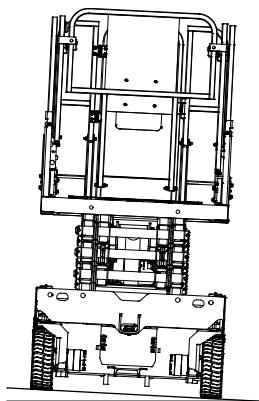

## Ground Controls

### How to Install and Calibrate the Level Sensor - Procedure 3

#### **DANGER**

Tip-over hazard. Failure to install the level sensor as instructed will compromise machine stability and cause the machine to tip over, resulting in death or serious injury. Do not install the level sensor other than specified in this procedure.

Note: If you are **not** installing a new level sensor, proceed to step 14.

- 1 Move the machine to an area that has a firm, level surface and is free of obstructions.

Note: Use a digital level to verify the surface is level.

- 2 Remove the platform controls from the platform.
- 3 Turn the key switch to ground control and pull out the red Emergency Stop button to the on position at both ground and platform controls.
- 4 Raise the platform 7 to 8 feet / 2.1 to 2.4 m.
- 5 Lift the safety arm, move it to the center of the scissor arm and rotate down to a vertical position.

- 6 Lower the platform onto the safety arm.

#### **WARNING**

Crushing hazard. Keep hands clear of the safety arm when lowering the platform.

- 7 Turn the key switch to the off position and push in the red Emergency Stop button to the off position at the ground controls.
- 8 Tag and disconnect the level sensor wire harness from the chassis wire harness.

Note: The wire harness connection is located on the level sensor, on top of the chassis at the steer end of the machine.

- 9 Remove the level sensor retaining fasteners and remove the level sensor from the machine.
- 10 Securely install the wires of the new level sensor into the level sensor connector plug.


## Ground Controls

11 Place the new level sensor on to the level sensor bracket with the "Y" on the level sensor away from the ground controls of the machine and the "X" on the level sensor closest to the steer end of the machine.

### DANGER

Tip-over hazard. Failure to install the level sensor as instructed, could result in the machine tipping over, causing death or serious injury.

Steer End

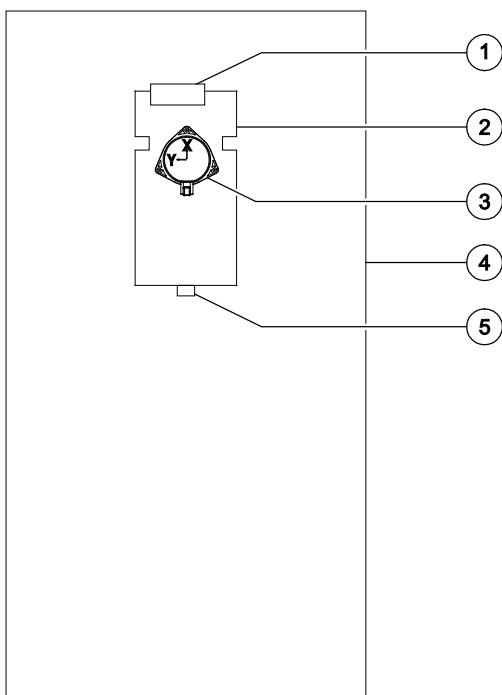

Non-steer End

- 1 limit switch
- 2 level sensor mount bracket
- 3 level sensor S7
- 4 scissor chassis
- 5 alarm H5

12 Install the level sensor retaining fasteners through the level sensor and into the mount bracket.


13 Connect the chassis wire harness to the level sensor.

14 Turn the key switch to ground control and pull out the red Emergency Stop button to the on position at both ground and platform controls.

⑤ Result: GCON will display a 'C051: SYSTEMFAULT, TILT:NoCal fault.'

15 Push in the red Emergency Stop button to the off position at the ground controls.

16 Press and hold the ground control scroll up and scroll down buttons.

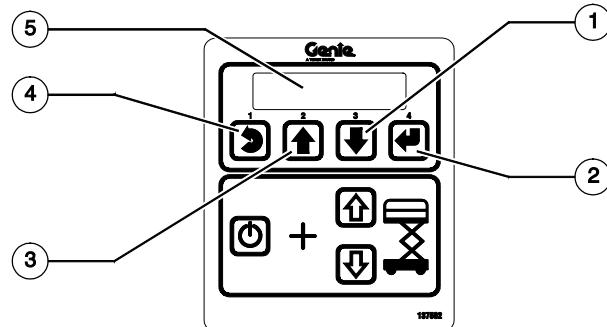


Ground Control Menu Buttons

- 1 scroll down button
- 2 enter button
- 3 scroll up button
- 4 escape button
- 5 LCD display

## Ground Controls

17 Pull out the red Emergency Stop button to the on position at the ground controls.

④ Result: The ground controls LCD display will show the following:

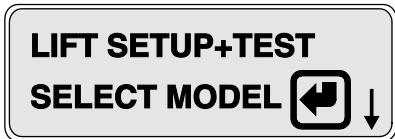


18 Release the Scroll Up and Scroll Down buttons after the ground controller powers up.

19 Use the Scroll Up or Scroll Down buttons to scroll to **Select Option**.



20 Press the Enter button.

21 Use the Scroll Up or Scroll Down buttons to scroll to Tilt Sensor.

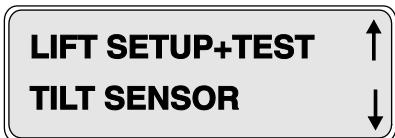

22 Press the Enter button.

23 Press and hold the Enter button to start calibration.

④ Result: An audible alarm will sound when calibration is complete.

Note: The machine will not calibrate if it is on a slope of one degree or greater.

Note: If the level sensor has been replaced, continue with step 24. If the level sensor was not replaced skip to step 27.




24 Raise the platform 7 to 8 feet / 2.1 to 2.4 m.

25 Return the safety arm to the stowed position.

26 Lower the platform to the stowed position.

27 Place a digital level on the ground control side of the drive chassis. Zero out the digital level.

28 Drive the steer end of the machine up a ramp until it is just under 3°.

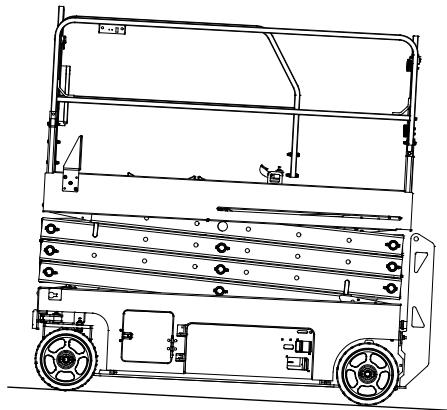

## Ground Controls

29 Raise the platform 7 to 8 feet / 2.1 to 2.4 m.

- Ⓐ Result: No audible alarm is heard.
- ⓧ Result: The platform stops, an audible alarm is heard and Fault LL is displayed. Repeat this procedure starting at step 15 on a firm level surface.

30 Lower the platform to the stowed position.

31 Continue driving the machine up the ramp until it is just over 3°.

32 Raise the platform 7 to 8 feet / 2.1 to 2.4 m.

- Ⓐ Result: The platform should stop, an alarm should sound and fault code LL appears in the diagnostic display.
- ⓧ Result: The platform does not stop or the level sensor alarm does not sound. Repeat this procedure starting at step 15 on a firm level surface.

33 Lower the platform to the stowed position.

34 Drive the non-steer end of the machine up a ramp until it is just under 3°.

35 Raise the platform 7 to 8 feet / 2.1 to 2.4 m.

- Ⓐ Result: No audible alarm is heard.
- ⓧ Result: The platform stops, an audible alarm is heard and Fault LL is displayed. Repeat this procedure starting at step 15 on a firm level surface.

36 Lower the platform to the stowed position.

37 Continue driving the machine up the ramp until it is just over 3°.



38 Raise the platform 7 to 8 feet / 2.1 to 2.4 m.

- Ⓐ Result: The platform should stop, an alarm should sound and fault code LL appears in the diagnostic display.
- ⓧ Result: The platform does not stop or the level sensor alarm does not sound. Repeat this procedure starting at step 15 on a firm level surface.

39 Lower the platform to the stowed position.


40 Place a digital level on the steer end of the drive chassis. Zero out the digital level.

41 Drive the ground control side of the machine onto a ramp until it is just under 1.5°.

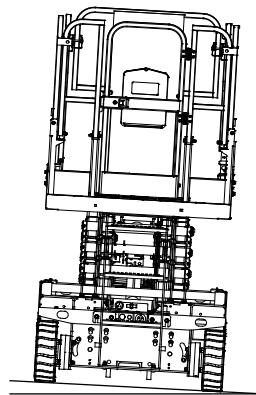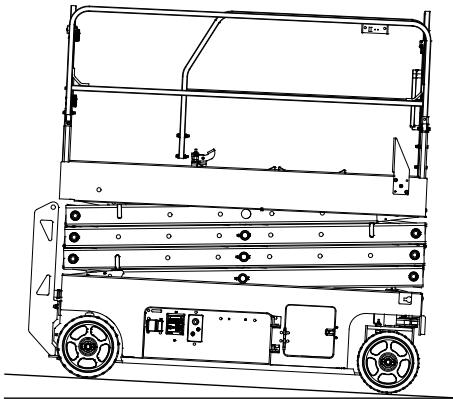

## Ground Controls

- 42 Raise the platform 7 to 8 feet / 2.1 to 2.4 m.
  - Ⓐ Result: No audible alarm is heard.
  - ⓧ Result: The platform stops, an audible alarm is heard and Fault LL is displayed. Repeat this procedure starting at step 15 on a firm level surface.
- 43 Lower the platform to the stowed position.
- 44 Continue driving the machine onto the ramp until it is just over 1.5°.
- 45 Raise the platform 7 to 8 feet / 2.1 to 2.4 m.
  - Ⓐ Result: The platform should stop, an alarm should sound and fault code LL appears in the diagnostic display.
  - ⓧ Result: The platform does not stop or the level sensor alarm does not sound. Repeat this procedure starting at step 15 on a firm level surface.
- 46 Lower the platform to the stowed position.
- 47 Drive the battery compartment side of the machine onto a ramp until it is just under 1.5°.
- 48 Raise the platform 7 to 8 feet / 2.1 to 2.4 m.
  - Ⓐ Result: No audible alarm is heard.
  - ⓧ Result: The platform stops, an audible alarm is heard and Fault LL is displayed. Repeat this procedure starting at step 15 on a firm level surface.
- 49 Lower the platform to the stowed position.
- 50 Continue driving the machine onto the ramp until it is just over 1.5°.
- 51 Raise the platform 7 to 8 feet / 2.1 to 2.4 m.
  - Ⓐ Result: The platform should stop, an alarm should sound and fault code LL appears in the diagnostic display.
  - ⓧ Result: The platform does not stop or the level sensor alarm does not sound. Repeat this procedure starting at step 15 on a firm level surface.
- 52 Lower the platform to the stowed position.

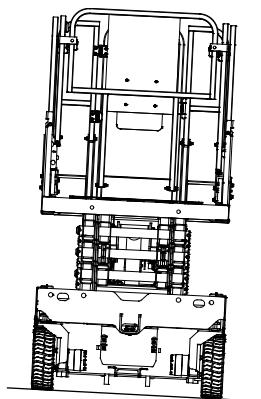

## Ground Controls

### 2-7

#### Manual Platform Lowering Cable

The manual platform lowering cable lowers the platform in the event of a main power failure. The manual platform lowering cable is attached to the barrel end of the lift cylinder and is activated next to the ground controls.

#### How to Adjust the Manual Platform Lowering Cable

- 1 Raise the platform 7 to 8 feet / 2.1 to 2.4 m.
- 2 Lift the safety arm, move it to the center of the scissor arm and rotate down to a vertical position.
- 3 Lower the platform onto the safety arm.
- 4 Pull the handle of the manual platform lowering cable out until considerable resistance is felt. Release the handle.


**WARNING**

Crushing hazard. Keep hands clear of the safety arm when lowering the platform.

5 Measure the distance between the base of the handle and cable mounting nut.

◎ Result: The measurement should be no greater than 0.125 inch / 3 mm.

Note: Proceed to step 8 if measurement is correct.

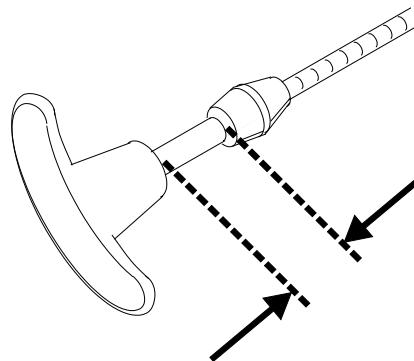**Platform manual lowering cable specification**


Gap, lowering handle to mounting nut	0 to 0.125 inch 0 to 3 mm
--------------------------------------	------------------------------

## Ground Controls

### Skip to step 8 if the measurement is correct.

6 To adjust, loosen the upper lock nut on the cable mounting bracket at the cylinder. Turn the lower lock nut clockwise to decrease the distance or counterclockwise to increase the distance. Tighten the upper lock nut.

- 7 Repeat this procedure beginning with step 4.
- 8 Raise the platform and rotate the safety arm to the stowed position.
- 9 Pull the manual lowering handle at the ground controls 2 to 3 times to ensure it is functioning correctly.

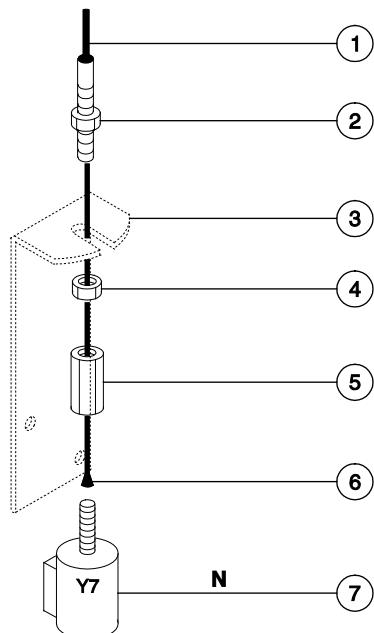

- a manual lowering cable sheath
- b upper lock nut
- c cable mounting bracket
- d lower lock nut
- e cable mounting nut
- f end of lowering cable
- g manual lowering valve (hydraulic schematic item N)

## Hydraulic Tank

### 3-1 Hydraulic Tank

The primary functions of the hydraulic tank are to cool and deaerate the hydraulic fluid during operation. It utilizes internal suction strainers for the pump supply lines and has an external return line filter.

### How to Remove the Hydraulic Tank

#### NOTICE

Component damage hazard. The work area and surfaces where this procedure will be performed must be clean and free of debris that could get into the hydraulic system.

Note: When removing a hose assembly or fitting, the O-ring (if equipped) on the fitting and/or hose end must be replaced. All connections must be torqued to specification during installation. Refer to Specifications, *Hydraulic Hose and Fitting Torque Specifications*.

Perform this procedure with the platform in the stowed position.

- 1 Disconnect the battery pack from the machine.

#### WARNING

Electrocution/burn hazard. Contact with electrically charged circuits could result in death or serious injury. Remove all rings, watches and other jewelry.

- 2 Tag and disconnect the hydraulic tank return hard line from the filter. Remove the hard line from the machine. Cap the fitting on the filter head.

- 3 Tag and disconnect the hydraulic tank hard line from the pump. Remove the hard line from the machine. Cap the fitting on the pump.
- 4 Remove the hydraulic tank retaining fasteners and remove the hydraulic tank from the machine.

#### WARNING

Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

- 5 Remove the hydraulic tank cap and drain the tank into a suitable container.

#### Torque specifications

Hydraulic retaining fasteners, dry	35 in-lbs 4 Nm
Hydraulic tank retaining fasteners, lubricated	26 in-lbs 2.9 Nm

# Hydraulic Pump

## 4-1 Function Pump

The hydraulic pump is attached to the motor which makes up the hydraulic power unit.

### How to Test the Hydraulic Pump

Note: When removing a hose assembly or fitting, the O-ring (if equipped) on the fitting and/or hose end must be replaced. All connections must be torqued to specification during installation. Refer to Specifications, *Hydraulic Hose and Fitting Torque Specifications*.

#### NOTICE

Component damage hazard. The work area and surfaces where this procedure will be performed must be clean and free of debris that could get into the hydraulic system.

- 1 Tag, disconnect and plug the high pressure hydraulic hose from the hydraulic pump.

#### WARNING

Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

- 2 Connect a 0 to 5000 psi / 0 to 350 bar pressure gauge to the high pressure port on the pump.
- 3 Turn the selector/key switch to ground control and pull out the red Emergency Stop button to the on position at both ground and platform controls.

- 4 Activate the platform up function from the ground controls.
  - Ⓐ Result: If the pressure gauge reads 3200 psi / 221 bar, immediately stop. The pump is good.
  - ⓧ Result: If the pressure gauge fails to reach 3200 psi / 221 bar, the pump is bad and will need to be serviced or replaced.

#### NOTICE

Component damage hazard. There is no relief valve in the hydraulic pump and the pump can be damaged if the pressure is allowed to exceed 3200 psi / 221 bar. When testing the pump, activate the pump in one second intervals until 3200 psi / 221 bar is confirmed. Do not over-pressurize the pump.

- 5 Remove the pressure gauge and reconnect the hydraulic hose. Torque to specifications.

#### WARNING

Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

## Hydraulic Pump

### How to Remove the Hydraulic Pump

Note: When removing a hose assembly or fitting, the O-ring (if equipped) on the fitting and/or hose end must be replaced. All connections must be torqued to specification during installation. Refer to Specifications, *Hydraulic Hose and Fitting Torque Specifications*.

- 1 Disconnect the battery pack from the machine.

#### ⚠ WARNING

Electrocution/burn hazard. Contact with electrically charged circuits could result in death or serious injury. Remove all rings, watches and other jewelry.

- 2 Tag and disconnect the hydraulic power unit cables at the motor controller.
- 3 Disconnect the filter head from the filter head mounting bracket. Rotate the filter out and away from the hydraulic power unit.
- 4 Remove the hydraulic power unit retaining fasteners.
- 5 Tag, disconnect and plug the hydraulic tank hard line from the pump. Cap the fitting on the pump.

- 6 Tag, disconnect and plug the high pressure hose from the pump. Cap the fitting on the pump.

#### ⚠ WARNING

Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

- 7 Remove the hydraulic power unit from the machine.
- 8 Remove the pump mounting bolts. Carefully remove the pump.

#### ⚠ DANGER

Tip-over hazard. After replacing the hydraulic pump, it is critical to return the function speed settings to original factory specifications. Failure to restore the machine to original factory specifications could cause the machine to tip over resulting in death or serious injury.

## Manifolds

### 5-1

#### Function Manifold Components

The function manifold is mounted behind an inspection door, at the ground control side of the machine.


Index No.	Description	Schematic Item	Function	Torque
—	Coil Nut (item AC)	—	—	4-5 ft-lbs / 5-7 Nm
—	Coil Nut (items AE, AG and AI)	—	—	5-7 ft-lbs / 7-9 Nm
1	Diagnostic nipple	AA	Testing	—
2	Relief Valve, 3700 psi / 255 bar maximum	AB	System relief	20 ft-lbs / 27 Nm
3	Solenoid valve, 3 position 4 way	AC	Steer left/right	25 ft-lbs / 34 Nm
4	Check disc	AD	Steer circuit	18 ft-lbs / 24 Nm
5	Solenoid valve, 2 position 4 way	AE	Drive speed select circuit	25 ft-lbs / 34 Nm
6	Relief valve	AF	Brake release	20 ft-lbs / 27 Nm
7	Solenoid valve, 3 position 5 way	AG	Drive forward/reverse	25 ft-lbs / 34 Nm
8	Flow regulator and relief valve, 0.75 gpm / 2.8 L/min, 1500 psi / 103 bar	AH	Steer circuit	26 ft-lbs / 35 Nm
9	Solenoid valve, 2 position 4 way	AI	Platform up	25 ft-lbs / 34 Nm
10	Relief valve	AJ	Lift relief	20 ft-lbs / 27 Nm

#### How to Install a Valve Cartridge

- 1 Dip the cartridge in clean oil to lube the O-rings.
- 2 Screw the cartridge in by hand until the top O-ring is met, then torque to specifications.
- 3 If required, install the valve coil(s) onto the valve stem. Install the coil nut onto the valve stem and torque to specifications.



## Manifolds

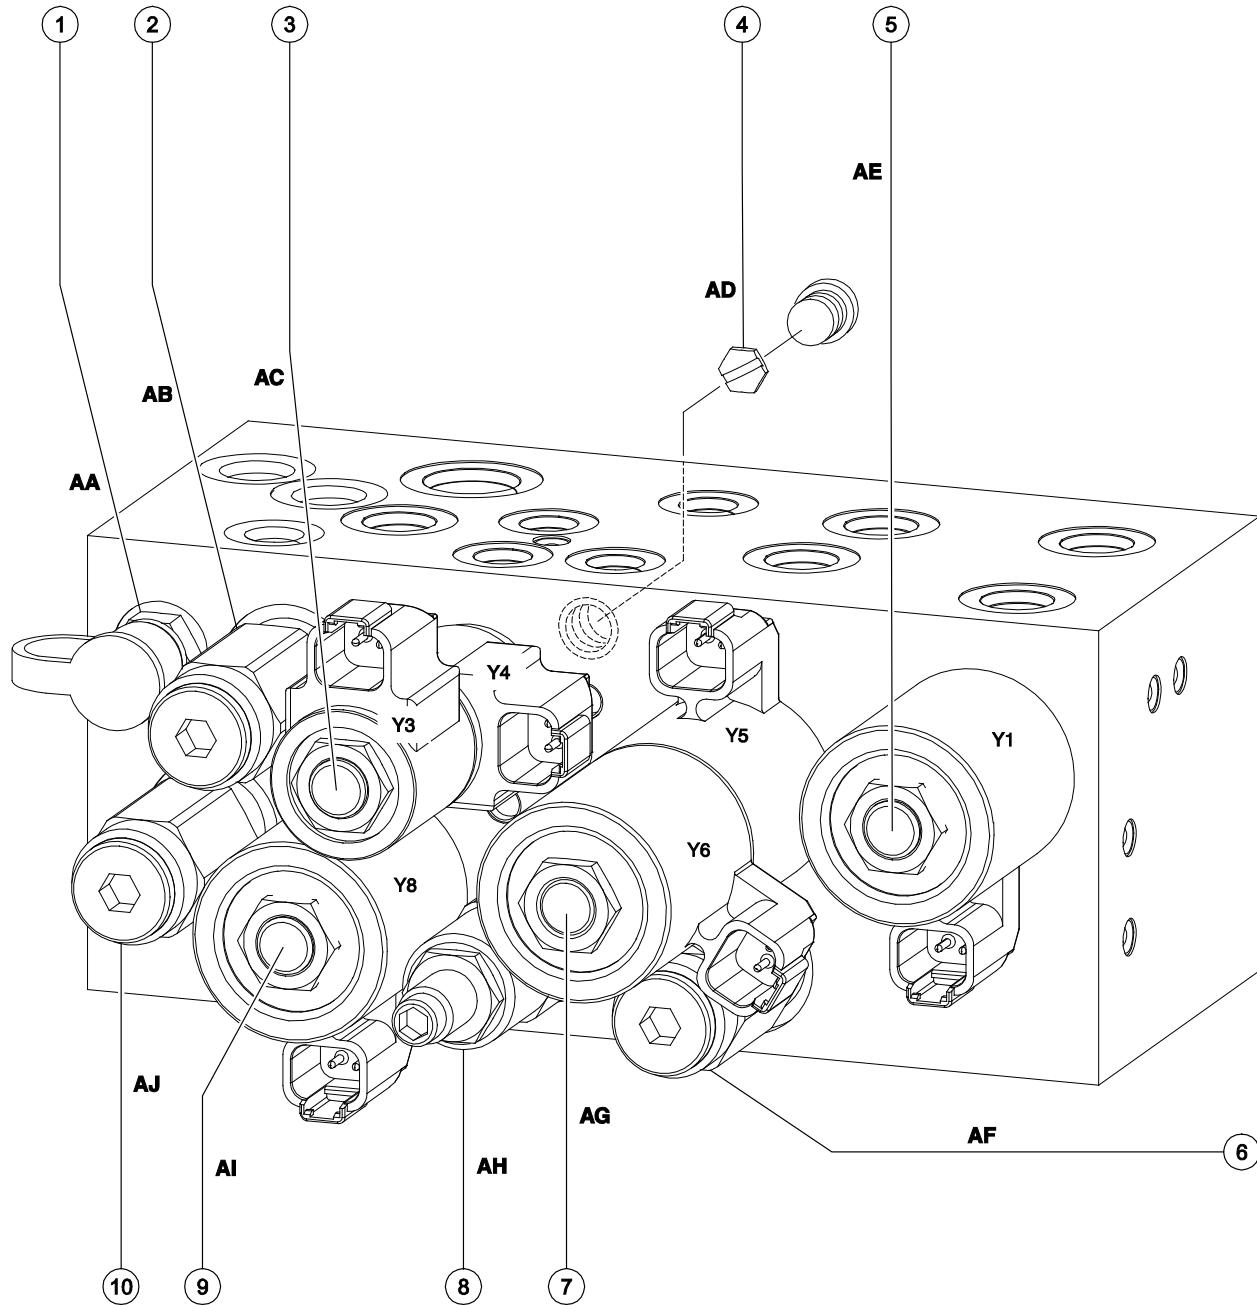

Note: 'alpha' callouts refer to corresponding notes on the hydraulic schematic.

Note: 'alpha-numeric' callouts refer to corresponding notes on the electrical schematic.


## Manifolds

### 5-2

#### Powered Extension Deck Function Manifold Components

The powered extension deck function manifold is mounted behind an inspection door, at the battery side of the machine.

Index No.	Description	Schematic Item	Function	Torque
—	Coil nut (item EA and EC)			4-5 ft-lbs / 5-7 Nm
1	Solenoid valve, 3 position 4 way	EA	PED extend/retract	25 ft-lbs / 34 Nm
2	Relief valve, 750 psi / 52 bar maximum	EB	PED relief	20 ft-lbs / 27 Nm
3	Solenoid valve, 2 position 2 way	EC	PED speed select	13 ft-lbs / 18 Nm

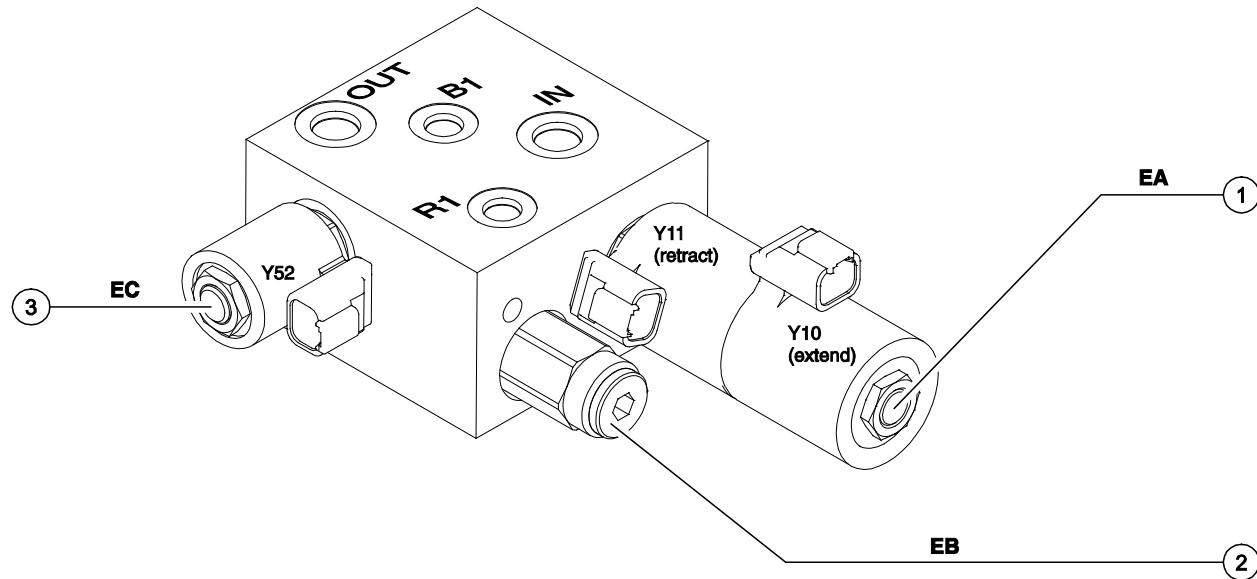

Note: 'alpha' callouts refer to corresponding notes on the hydraulic schematic.

Note: 'alpha-numeric' callouts refer to corresponding notes on the electrical schematic.

#### How to Install a Valve Cartridge

- 1 Dip the cartridge in clean oil to lube the O-rings.
- 2 Screw the cartridge in by hand until the top O-ring is met, then torque to specifications.
- 3 If required, install the valve coil(s) onto the valve stem. Install the coil nut onto the valve stem and torque to specifications.

## Manifolds

### 5-3 Valve Adjustments – Function Manifold

Note: Perform this test from the ground with the platform controls. Do not stand in the platform.

Note: Verify the hydraulic oil level is at the FULL mark on the hydraulic tank.

#### How to Adjust the System Relief Valve


- 1 Locate the system relief valve on the function manifold (schematic item I).
- 2 Connect a 0 to 5000 psi / 0 to 350 bar pressure gauge to the test port on the function manifold (schematic item AA).
- 3 Chock both sides of the wheels at the steer end of the machine.
- 4 Remove the platform controls from the platform.
- 5 Turn the selector/key switch to platform controls and pull out the red Emergency Stop button to the on position at both ground and platform controls.
- 6 Move and hold the joystick fully in either direction while observing the pressure reading on the pressure gauge. Note the pressure. Refer to Specifications, *Hydraulic Component Specifications*.
- 7 Turn the machine off. Hold the system relief valve with a wrench and remove the cap (schematic item AB).

- 8 Adjust the internal hex socket. Turn it clockwise to increase the pressure or counterclockwise to decrease the pressure.

#### **DANGER**

Tip-over hazard. Failure to adjust the relief valves to specification could result in the machine tipping over, causing death or serious injury. Do not adjust the relief valve pressures higher than specifications.

- 9 Install the relief valve cap.
- 10 Repeat steps 5 and 6 to confirm the relief valve pressure.

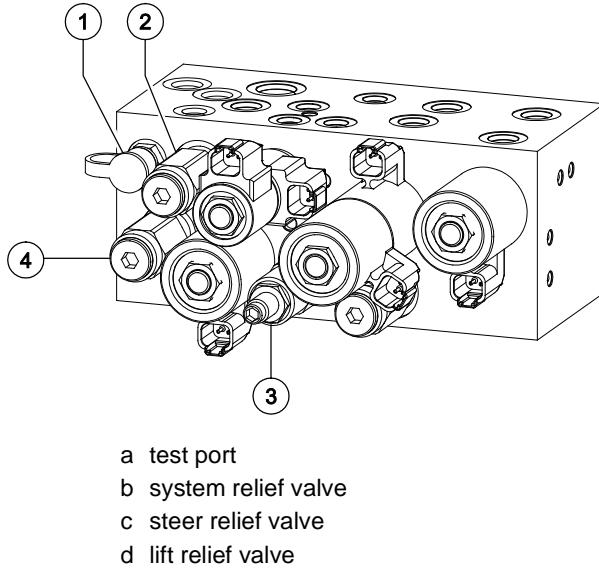

## Manifolds

### How to Adjust the Platform Lift Relief Valve

Note: Perform this test from the ground with the platform controls. Do not stand in the platform.

Note: Verify the hydraulic oil level is at the FULL mark on the hydraulic tank.


- 1 Locate the system relief valve on the function manifold (schematic item I).
- 2 Connect a 0 to 5000 psi / 0 to 350 bar pressure gauge to the test port on the function manifold (schematic item AA).
- 3 Chock both sides of the wheels at the steer end of the machine.
- 4 Remove the platform controls from the platform.
- 5 Turn the selector/key switch to platform controls and pull out the red Emergency Stop button to the on position at both ground and platform controls.
- 6 Move and hold the joystick fully in either direction while observing the pressure reading on the pressure gauge. Note the pressure. Refer to Specifications, *Hydraulic Component Specifications*.
- 7 Turn the machine off. Hold the system relief valve with a wrench and remove the cap (schematic item AB).

- 8 Adjust the internal hex socket. Turn it clockwise to increase the pressure or counterclockwise to decrease the pressure.

#### **DANGER**

Tip-over hazard. Failure to adjust the relief valves to specification could result in the machine tipping over, causing death or serious injury. Do not adjust the relief valve pressures higher than specifications.

- 9 Install the relief valve cap.
- 10 Repeat steps 5 and 6 to confirm the relief valve pressure.
- 11 Place maximum rated load into the platform. Secure the load to the platform. Refer to Specifications, *Machine Specifications*.

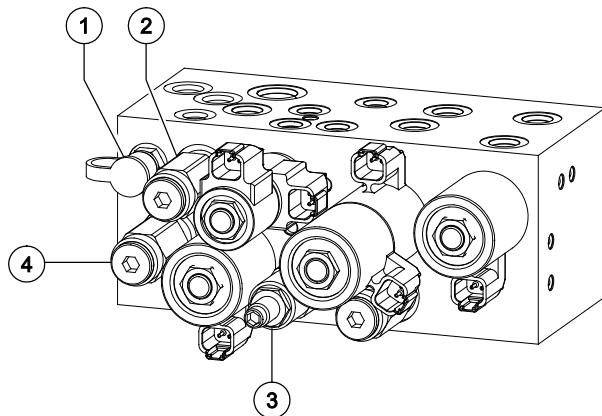

- a test port
- b system relief valve
- c steer relief valve
- d lift relief valve

## Manifolds

- 12 Turn the selector/key switch to ground control and pull out the red Emergency Stop button to the on position at both ground and platform controls.
- 13 Hold the lift relief valve with a wrench and remove the cap (schematic item AJ).
- 14 While activating the platform up function, adjust the internal hex socket clockwise, just until the platform fully rises.
- 15 Fully lower the platform to the stowed position.
- 16 Add an additional 50 pounds / 22.7 kg to the platform. Secure the additional weight.
- 17 Attempt to raise the platform.
  - Ⓐ Result: The power unit should **not** be able to lift platform.
  - ⓧ Result: If the power unit lifts the platform, adjust the internal hex nut socket counterclockwise until the platform will not rise.
- 18 Install the relief valve cap.
- 19 Remove the weight from the platform.
- 20 Bleed the hydraulic system by raising the platform to full height. If the pump cavitates or the platform fails to reach full height, add hydraulic oil until the pump is functioning correctly. Do not overfill the hydraulic tank.

### How to Adjust the Steer Relief Valve

Note: Perform this test from the ground with the platform controls. Do not stand in the platform.

Note: Verify the hydraulic oil level is at the FULL mark on the hydraulic tank.


- 1 Locate the steer relief valve on the function manifold (schematic item G).
- 2 Connect a 0 to 5000 psi / 0 to 350 bar pressure gauge to the test port on the function manifold (schematic item AA).
- 3 Remove the platform controls from the platform.
- 4 Turn the selector/key switch to platform controls and pull out the red Emergency Stop button to the on position at both ground and platform controls.
- 5 Activate the function enable switch and press and hold the steer thumb rocker switch to the right. Allow the wheels to completely turn to the right. Continue holding the switch while observing the pressure reading on the pressure gauge. Note the pressure. Refer to Specifications, *Hydraulic Component Specifications*.
- 6 Press and hold the steer thumb rocker switch to the left. Allow the wheels to completely turn to the left. Continue holding the switch while observing the pressure reading on the pressure gauge.

## Manifolds

- 7 Turn the machine off. Hold the steer relief valve with a wrench and remove the cap (schematic item AH).
- 8 Adjust the internal hex socket. Turn it clockwise to increase the pressure or counterclockwise to decrease the pressure.

**NOTICE** Component damage hazard. Do not adjust the relief valve pressures higher than specifications.

- 9 Install the relief valve cap.
- 10 Repeat steps 5 and 6 to confirm the relief valve pressure.

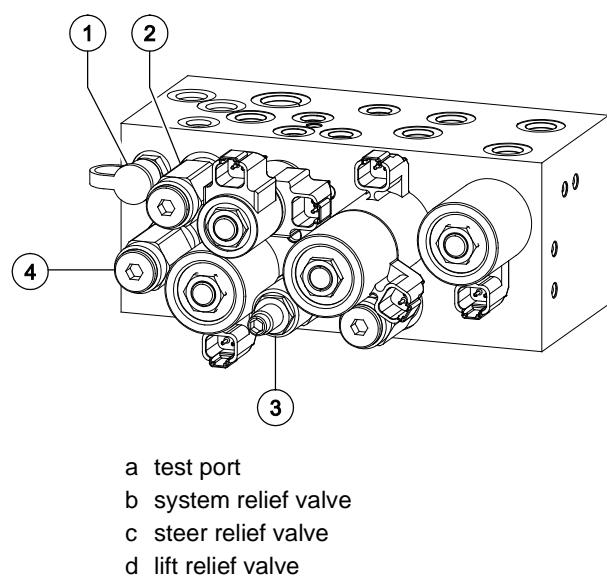

### 5-4 Valve Coils

#### How to Test a Coil

A properly functioning coil provides an electromagnetic force which operates the solenoid valve. Critical to normal operation is continuity within the coil. Zero resistance or infinite resistance indicates the coil has failed.

Since coil resistance is sensitive to temperature, resistance values outside specification can produce erratic operation. When coil resistance decreases below specification, amperage increases. As resistance rises above specification, voltage increases.

While valves may operate when coil resistance is outside specification, maintaining coils within specification will help ensure proper valve function over a wide range of operating temperatures.

**WARNING** Electrocution/burn hazard. Contact with electrically charged circuits could result in death or serious injury. Remove all rings, watches and other jewelry.

Note: If the machine has been in operation, allow the coil to cool at least 3 hours before performing this test.

- 1 Tag and disconnect the wiring from the coil to be tested.
- 2 Test the coil resistance using a multimeter set to resistance (W). Refer to the Valve Coil Resistance Specification table.
- 3 Result: If the resistance is not within the adjusted specification, plus or minus 10%, replace the coil.

## Manifolds

### Valve Coil Resistance Specifications

Note: The following coil resistance specifications are at an ambient temperature of 68°F / 20°C. As valve coil resistance is sensitive to changes in air temperature, the coil resistance will typically increase or decrease by 4% for each 18°F / -7.7°C that your air temperature increases or decreases from 68°F / 20°C.

Description	Specification
Solenoid valve, 3 position 4 way 20V DC with diode (schematic items AC)	27.2Ω
Solenoid valve, 2 position 4 way 20V DC with diode (schematic item AI)	19Ω
Solenoid valve, 2 position 2 way N.C. 20V DC with diode (schematic item N)	25Ω
Solenoid valve, 2 position 4 way 20V DC with diode (schematic items AE)	19Ω
Solenoid valve, 3 position 5 way 20V DC with diode (schematic item AG)	19Ω
Solenoid valve, 3 position 4 way 20V DC with diode (schematic item EA)	23.9Ω
Solenoid valve, 2 position 2 way 20V DC with diode (schematic item EC)	23.9Ω

### How to Test a Coil Diode

Genie incorporates spike suppressing diodes in all of its coils. Properly functioning coil diodes protect the electrical circuit by suppressing voltage spikes. Voltage spikes naturally occur within a function circuit following the interruption of electrical current to a coil. Faulty diodes can fail to protect the electrical system, resulting in a tripped circuit breaker or component damage.

#### WARNING

Electrocution/burn hazard. Contact with electrically charged circuits could result in death or serious injury. Remove all rings, watches and other jewelry.

- 1 Test the coil resistance. Refer to Repair Procedure, *How to Test a Coil*.
- 2 Connect a 10Ω resistor to the negative terminal of a known good 9V DC battery. Connect the other end of the resistor to a terminal on the coil.

Note: The battery should read 9V DC or more when measured across the terminals.

#### Resistor, 10Ω


Genie part number 27287

3 Set a multimeter to read DC amperage. Note: The multimeter, when set to read DC amperage, should be capable of reading up to 800 mA.

- 4 Connect the negative lead to the other terminal on the coil.

## Manifolds

Note: If testing a single terminal coil, connect the negative lead to the internal metallic ring at either end of the coil.

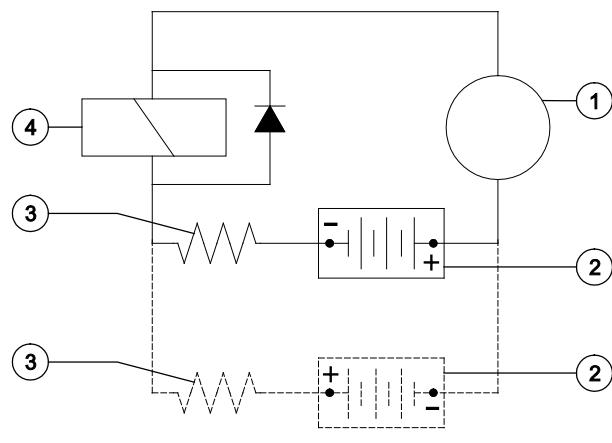

1 multimeter

2 9V DC battery

3 10Ω resistor

4 coil

Note: Dotted lines in illustration indicate a reversed connection as specified in step 6.

- 5 Momentarily connect the positive lead from the multimeter to the positive terminal on the 9V battery. Note and record the reading.
- 6 At the battery or coil terminals, reverse the connections. Note and record the current reading.

Ⓐ Result: Both current readings are greater than 0 mA and are different by a minimum of 20%. The coil is good.

✗ Result: if one or both current readings are greater than 0 mA, or if the two current readings do not differ by a minimum of 20%, the coil and/or its internal diode are faulty and the coil should be replaced.

## Steer Axle Components

### 6-1 Yoke and Drive Motor

#### How to Remove the Yoke and Drive Motor Assembly

Note: When removing a hose assembly or fitting, the O-ring (if equipped) on the fitting and/or hose end must be replaced. All connections must be torqued to specification during installation. Refer to Specifications, *Hydraulic Hose and Fitting Torque Specifications*.

- 1 Block the non-steer tires.
- 2 Remove the cotter pin from the wheel castle nut.
- 3 Loosen the wheel castle nut. Do not remove it.
- 4 Center a lifting jack under the drive chassis at the steer end of the machine.
- 5 Raise the machine approximately 6 inches / 15 cm. Place blocks under the chassis for support.

#### WARNING

Crushing hazard. The chassis will fall if not properly supported.

- 6 Remove the wheel castle nut. Remove the wheel.

- 7 Tag, disconnect and plug the hydraulic hoses on the drive motor. Cap the fittings on the drive motor.

#### WARNING

Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

#### NOTICE

Component damage hazard. Hoses can be damaged if they are kinked or pinched.

- 8 Support and secure the yoke assembly to an appropriate lifting device.
- 9 Remove the retaining fastener from the steer link at the yoke assembly.

Note: While removing the retaining fasteners, take note of the quantity and location of the spacers when disconnecting the steer link from the yoke assembly.

- 10 Remove the retaining fastener from the top of the yoke pivot shaft.

Note: The pivot shaft retaining fastener is located above the main deck.

- 11 Lower the yoke assembly out of the chassis.

#### CAUTION

Bodily injury hazard. The yoke/motor assembly may fall if not properly supported when it is removed from the chassis.

## Steer Axle Components

### How to Remove a Drive Motor

- 1 Block the non-steer tires.
- 2 Remove the cotter pin from the wheel castle nut of the motor to be removed.
- 3 Note: Always replace the cotter pin with a new one when removing the castle nut.
- 4 Loosen the wheel castle nut. Do not remove it.
- 5 Raise the machine approximately 2 inches / 5 cm. Place blocks under the chassis for support.

**WARNING**

Crushing hazard. The chassis will fall if not properly supported.

- 6 Remove the wheel castle nut. Remove the wheel.
- 7 Tag, disconnect and plug the hydraulic hoses on the drive motor. Cap the fittings on the drive motor.

**WARNING**

Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

**NOTICE**

Component damage hazard. Hoses can be damaged if they are kinked or pinched.

- 8 Remove the drive motor mounting fasteners. Remove the motor.

#### Torque specifications

Drive motor mounting fasteners, dry	75 ft-lbs 101.7 Nm
Drive motor mounting fasteners, lubricated	56 ft-lbs 76.3 Nm

### 6-2

### Steer Cylinder

### How to Remove the Steer Cylinder

Note: When removing a hose assembly or fitting, the O-ring (if equipped) on the fitting and/or hose end must be replaced. All connections must be torqued to specification during installation. Refer to Specifications, *Hydraulic Hose and Fitting Torque Specifications*.

- 1 Block the non-steer tires.
- 2 Remove the pin retaining fasteners from the rod-end pivot pin. Remove the pivot pin.

Note: While removing the pin retaining fasteners, take note of the quantity and location of the spacers when removing the pivot pin.

- 3 Remove the pin retaining fasteners from the barrel-end pivot pin. Remove the pin.

Note: While removing the pin retaining fasteners, take note of the quantity and location of the spacers when removing the pivot pin.

- 4 Remove the steer cylinder from the machine.
- 5 Tag, disconnect and plug the hydraulic hoses from the steer cylinder. Cap the fittings on the cylinder.

**WARNING**

Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

**NOTICE**

Component damage hazard. Hoses can be damaged if they are kinked or pinched.

## Steer Axle Components

### 6-3

#### Steer Bellcrank

#### How to Remove the Steer Bellcrank

- 1 Remove the steer cylinder. Refer to Repair Procedure, *How to Remove the Steer Cylinder*.
- 2 Remove the retaining fasteners from the steer links at each end of the bellcrank.

Note: While removing the retaining fasteners, take note of the quantity and location of the spacers between the bellcrank and the steer links.


- 3 Center a lifting jack under the drive chassis at the steer end of the machine.
- 4 Raise the machine approximately 14 inches / 36 cm. Place blocks under the chassis for support.

#### WARNING

Crushing hazard. The chassis will fall if not properly supported.

- 5 Turn the yokes to the side so the bellcrank can be removed.

- 6 Remove the bellcrank from the machine.

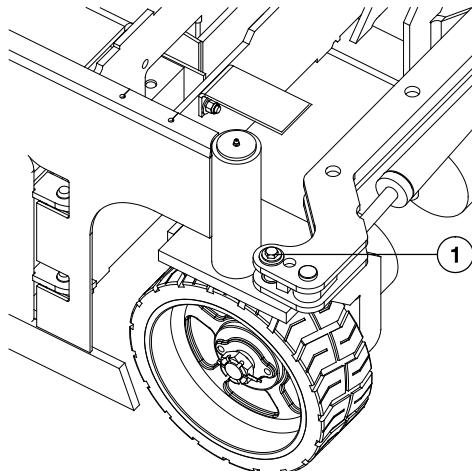

1 apply removable thread lock to fastener threads

Note: While removing the bellcrank from the machine, take note of the quantity and location of the spacers between the bellcrank and the steer links.

Note: Before re-installing the steer bellcrank onto the machine, apply a small amount of removable thread lock onto the threads of the fasteners. Torque the fasteners to 31 ft-lbs / 42 Nm.

## Non-Steer Axle Components

### 7-1 Drive Brake

#### How to Remove the Drive Brake

Note: When removing a hose assembly or fitting, the O-ring (if equipped) on the fitting and/or hose end must be replaced. All connections must be torqued to specification during installation. Refer to Specifications, *Hydraulic Hose and Fitting Torque Specifications*.

- 1 Support and secure the entry ladder to an appropriate lifting device.
- 2 Remove the entry ladder mounting fasteners. Remove the entry ladder from the machine.

**CAUTION**

Crushing hazard. The entry ladder will fall if not properly supported and secured to the lifting device.

- 3 Block the steer wheels.
- 4 Remove the cotter pin from the wheel castle nut.

Note: Always replace the cotter pin with a new one when removing the castle nut.

- 5 Loosen the wheel castle nut. Do not remove it.
- 6 Center a lifting jack under the drive chassis at the non-steer end of the machine.

- 7 Raise the machine approximately 2 inches / 5 cm. Place blocks under the chassis for support.

**WARNING**

Crushing hazard. The chassis will fall if not properly supported.

- 8 Remove the wheel castle nut. Remove the wheel.
- 9 Tag, disconnect and plug the hydraulic hose from the brake. Cap the fitting on the brake.

**WARNING**

Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

- 10 Place a lifting jack under the brake for support.
- 11 Remove the fasteners that attach the brake to the drive chassis. Remove the brake.

**CAUTION**

Crushing hazard. The brake will fall if not properly supported when the mounting fasteners are removed.

**Torque specifications**

Brake mounting fasteners, dry	75 ft-lbs 102 Nm
Brake mounting fasteners, lubricated	56 ft-lbs 76 Nm


## Brake Release Hand Pump Components

### 8-1

#### Brake Release Hand Pump Components


The brake release hand pump manifold is mounted behind the entry ladder.

Index No.	Description	Schematic Item	Function	Torque
1	Hand pump	L	Manual brake release	30 ft-lbs / 41 Nm
2	Needle valve	M	Manual brake release enable	45-50 in-lbs / 5 Nm

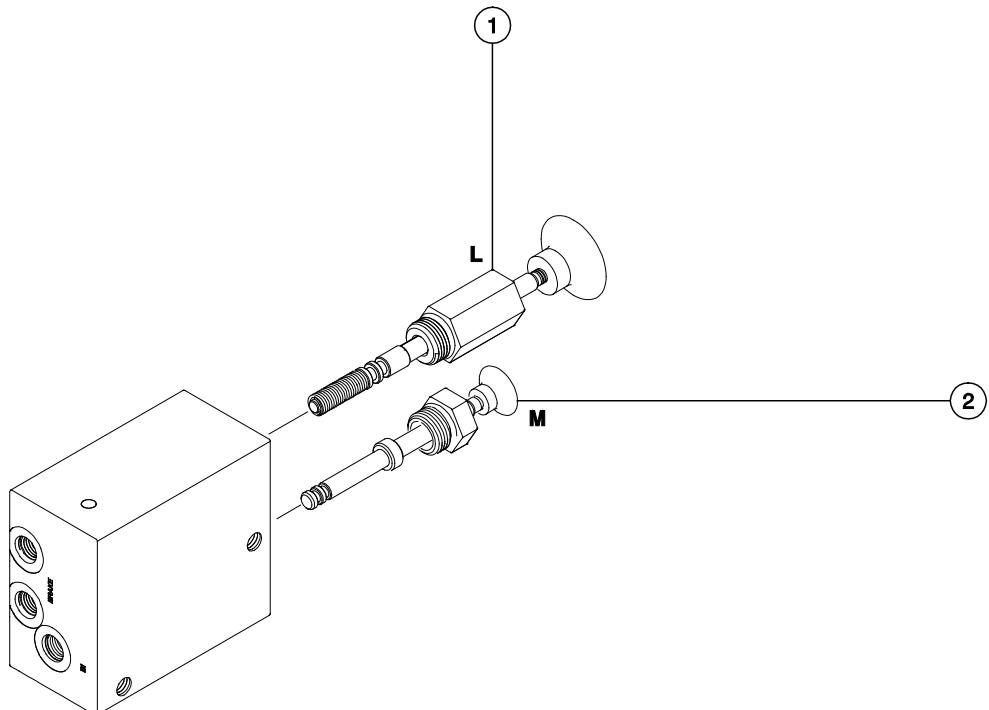

Note: 'alpha' callouts refer to corresponding notes on the hydraulic schematic.

## Scissor Components

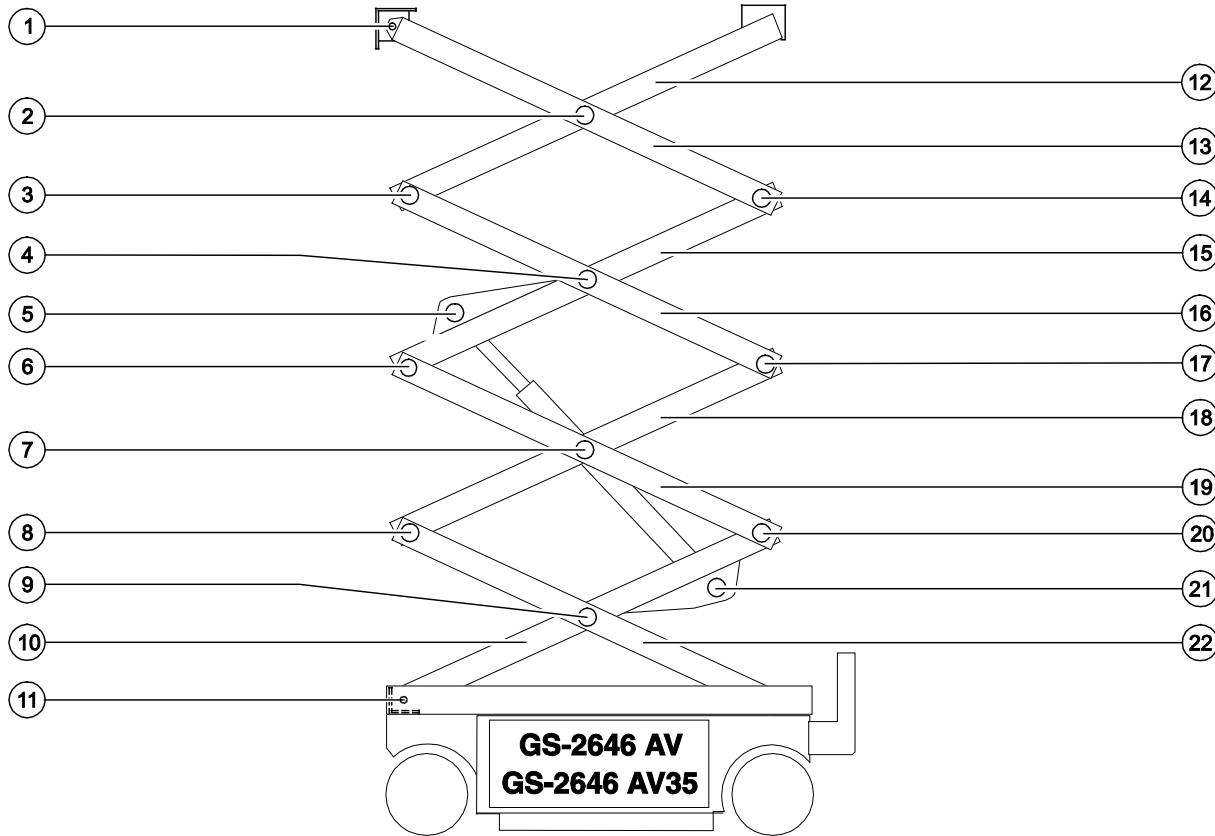

### Steer End

- 1 - Number 5 pivot pin
- 2 - Number 4 center pivot pin (2 pins)
- 3 - Number 4 pivot pin (steer end)
- 4 - Number 3 center pivot pin (2 pins)
- 5 - Lift cylinder rod-end pivot pin
- 6 - Number 3 pivot pin (steer end)
- 7 - Number 2 center pivot pin (2 pins)
- 8 - Number 2 pivot pin (steer end)
- 9 - Number 1 center pivot pin (2 pins)
- 10 - Number 1 inner arm
- 11 - Number 1 pivot pin

### Non-steer End

- 12 - Number 4 inner arm
- 13 - Number 4 outer arm
- 14 - Number 4 pivot pin (non-steer end)
- 15 - Number 3 inner arm
- 16 - Number 3 outer arm
- 17 - Number 3 pivot pin (non-steer end)
- 18 - Number 2 inner arm
- 19 - Number 2 outer arm
- 20 - Number 2 pivot pin (non-steer end)
- 21 - Lift cylinder barrel-end pivot pin
- 22 - Number 1 outer arm

## Scissor Components

### 9-1 Scissor Assembly

#### How to Disassemble the Scissor Assembly

##### WARNING


Bodily injury hazard. The procedures in this section require specific repair skills, lifting equipment and a suitable workshop. Attempting this procedure without these skills and tools could result in death or serious injury and significant component damage. Dealer service is required.

Note: When removing a hose assembly or fitting, the O-ring (if equipped) on the fitting and/or hose end must be replaced. All connections must be torqued to specification during installation. Refer to Specifications, *Hydraulic Hose and Fitting Torque Specifications*.

- 1 Remove the platform. Refer to Repair Procedure, *How to Remove the Platform*.
- 2 Support and secure the entry ladder to an appropriate lifting device.
- 3 Remove the fasteners from the entry ladder and remove the entry ladder from the machine.

##### CAUTION

Crushing hazard. The entry ladder will fall if not properly supported and secured to the lifting device.

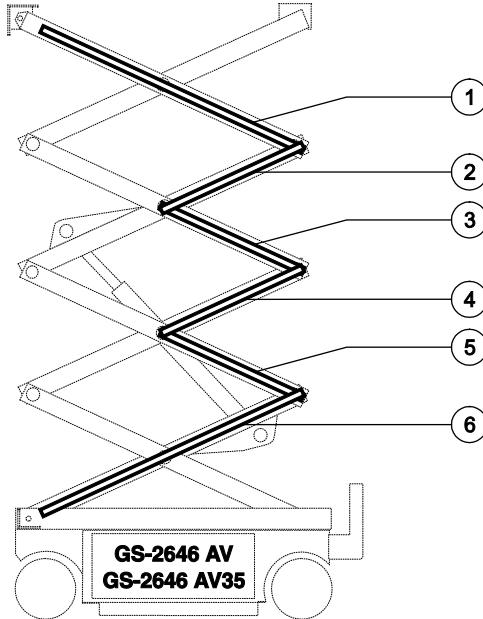

Cable bridge legend

- 1 cable bridge 4
- 2 cable bridge 3A
- 3 cable bridge 3B
- 4 cable bridge 2A
- 5 cable bridge 2B
- 6 cable bridge 1

- 4 Remove the cables from the number 4 cable bridge and lay them off to the side.

##### NOTICE

Component damage hazard. Cables can be damaged if they are kinked or pinched.

- 5 Disconnect the number 4 cable bridge from the number 4 outer arm (index #13) and remove the cable bridge from the machine.
- 6 Remove the retaining fasteners from the number 5 pivot pin (index #1).

## Scissor Components

- 7 Use a soft metal drift to remove the number 5 pivot pin (index #1). Remove the platform mount bracket from the machine.
- 8 Attach a lifting strap from an overhead crane to the number 4 outer arm at the ground control side (index #13).
- 9 Remove the retaining fasteners from the number 4 center pivot pin (index #2) at the ground control side.
- 10 Place a rod through the number 4 center pivot pin at the ground control side (index #2) and twist to remove the pin.
- 11 Remove the retaining fasteners from the number 4 pivot pin (index #15) at the non-steer end.
- 12 Use a soft metal drift to remove the number 4 pivot pin (index #14) from the non-steer end of the machine. Remove the number 4 outer arm at the ground control side (index #13) from the machine.

**CAUTION**

Crushing hazard. The number 4 outer arm (index #13) may become unbalanced and fall if not properly supported when removed from the machine.

- 13 Attach a lifting strap from an overhead crane to the number 4 outer arm at the battery side (index #13).
- 14 Remove the retaining fasteners from the number 4 center pivot pin (index #2) at the battery side.
- 15 Place a rod through the number 4 center pivot pin at the battery side (index #2) and twist to remove the pin.

- 16 Remove the number 4 outer arm (index #13) from the machine.

**CAUTION**

Crushing hazard. The number 4 outer arm (index #13) may become unbalanced and fall if not properly supported when removed from the machine.

- 17 Attach a lifting strap from an overhead crane to the number 4 inner arm (index #12). Raise the arm to a vertical position.
- 18 Remove the retaining fasteners from the number 4 pivot pin at the steer end of the machine (index #3).
- 19 Use a soft metal drift to remove the number 4 pivot pin (index #3) from the steer end of the machine. Remove the number 4 inner arm (index #12) from the machine.

**CAUTION**

Crushing hazard. The number 4 inner arm (index #12) may become unbalanced and fall if not properly supported when removed from the machine.

- 20 Remove the cables from the number 3A and 3B cable bridge and lay them off to the side.

**NOTICE**

Component damage hazard. Cables can be damaged if they are kinked or pinched.

- 21 Disconnect the number 3A and 3B cable bridges from the scissor linkset and remove both cable bridges from the machine.
- 22 Attach a lifting strap from an overhead crane to the number 3 outer arm at the ground control side (index #16).
- 23 Remove the retaining fasteners from the number 3 center pivot pin (index #4) at the ground control side.

## Scissor Components

- 24 Place a rod through the number 3 center pivot pin at the ground control side (index #4) and twist to remove the pin.
- 25 Remove the retaining fasteners from the number 3 pivot pin (index #17) at the non-steer end.
- 26 Use a soft metal drift to remove the number 3 pivot pin (index #17) from the non-steer end of the machine. Remove the number 3 outer arm at the ground control side (index #16) from the machine.

**▲ CAUTION**

Crushing hazard. The number 3 outer arm at the ground control side (index #16) may become unbalanced and fall if not properly supported when removed from the machine.

- 27 Attach a lifting strap from an overhead crane to the number 3 outer arm at the battery side (index #16).
- 28 Remove the retaining fasteners from the number 3 center pivot pin (index #4) at the battery side.
- 29 Place a rod through the number 3 center pivot pin at the battery side (index #4) and twist to remove the pin.
- 30 Remove the number 3 outer arm (index #16) from the machine.

**▲ CAUTION**

Crushing hazard. The number 3 outer arm (index #16) may become unbalanced and fall if not properly supported when removed from the machine.

- 31 Attach a lifting strap from an overhead crane to the lug of the rod end of the lift cylinder.

- 32 Remove the retaining fasteners from the lift cylinder rod end pivot pin (index #5).
- 33 Use a soft metal drift to remove the lift cylinder rod end pivot pin (index #5) from the machine.

**▲ CAUTION**

Crushing hazard. The lift cylinder will fall if not properly supported when the pivot pin is removed.

- 34 Place a 4 x 4 x 10 inch / 10 x 10 x 25 cm block onto the number 1 inner arm cylinder plate (index #10).
- 35 Lower the cylinder onto the block.

**▲ CAUTION**

Bodily injury hazard. Keep hands clear of moving parts when lowering the cylinder.

- 36 Attach a lifting strap from an overhead crane to the number 3 inner arm (index #15). Raise the arm to a vertical position.
- 37 Remove the retaining fasteners from the number 3 pivot pin at the steer end of the machine (index #6).
- 38 Use a soft metal drift to remove the number 3 pivot pin (index #6) from the steer end of the machine. Remove the number 3 inner arm (index #15) from the machine.

**▲ CAUTION**

Crushing hazard. The number 3 inner arm (index #15) may become unbalanced and fall if not properly supported when the pivot pin is removed.

- 39 Remove the cables from the number 2A and 2B cable bridge and lay them off to the side.

**NOTICE**

Component damage hazard. Cables can be damaged if they are kinked or pinched.

## Scissor Components

- 40 Disconnect the number 2A and 2B cable bridges from the scissor linkset and remove both cable bridges from the machine.
- 41 Attach a lifting strap from an overhead crane to the number 2 outer arm at the ground control side (index #19).
- 42 Remove the retaining fasteners from the number 2 center pivot pin (index #7) at the ground control side.
- 43 Place a rod through the number 2 center pivot pin at the ground control side (index #7) and twist to remove the pin.
- 44 Remove the retaining fasteners from the number 2 pivot pin (index #20) at the non-steer end.
- 45 Use a soft metal drift to remove the number 2 pivot pin (index #20) from the non-steer end of the machine. Remove the number 2 outer arm at the ground control side (index #19) from the machine.
- ⚠ CAUTION** The number 2 outer arm at the ground control side (index #19) may become unbalanced and fall if not properly supported when the pivot pin is removed.
- 46 Attach a lifting strap from an overhead crane to the number 2 outer arm at the battery side (index #19).
- 47 Remove the retaining fasteners from the number 2 center pivot pin (index #7) at the battery side.
- 48 Place a rod through the number 2 center pivot pin at the battery side (index #7) and twist to remove the pin.
- ⚠ CAUTION** The number 2 outer arm at the ground control side (index #19) may become unbalanced and fall if not properly supported when the pivot pin is removed.
- 49 Remove the number 2 outer arm (index #19) from the machine.
- ⚠ CAUTION** Crushing hazard. The number 2 outer arm (index #19) may become unbalanced and fall if not properly supported when removed from the machine.
- 50 Attach a lifting strap from an overhead crane to the number 2 inner arm (index #18). Raise the arm to a vertical position.
- 51 Remove the retaining fasteners from the number 2 pivot pin at the steer end of the machine (index #8).
- 52 Use a soft metal drift to remove the number 2 pivot pin (index #8) from the steer end of the machine. Remove the number 2 inner arm (index #18) from the machine.
- ⚠ CAUTION** Crushing hazard. The number 2 inner arm (index #18) may become unbalanced and fall if not properly supported when the pivot pin is removed.
- 53 Attach a lifting strap from an overhead crane to the number 1 inner arm (index #10).
- 54 Raise the number 1 inner arm (index #10) approximately 2 feet / 60 cm.
- 55 Place a 4 x 4 x 48 inch / 10 cm x 10 cm x 1.2 m long block across both sides of the chassis under the number 1 center pivot pin (index #9).

## Scissor Components

56 Lower the scissor arms onto the block that was placed across the chassis.

### ⚠ CAUTION

Bodily injury hazard. Keep hands clear of moving parts when lowering the scissor arms.

57 Attach a lifting strap from an overhead crane to the lug of the rod end of the lower lift cylinder.

58 Tag, disconnect and plug the hydraulic hose on the lower lift cylinder. Cap the fittings on the cylinder.

### ⚠ WARNING

Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

59 Tag and disconnect the wire harness from the solenoid valve on the cylinder.

60 Tag and disconnect the wires and manual lowering cable from the solenoid valve on the cylinder.

61 Raise the lift cylinder to a vertical position.

62 Remove the pin retaining fasteners from the lift cylinder barrel-end pivot pin (index #21). Use a soft metal drift to remove the pin. Remove the lift cylinder from the machine.

### ⚠ CAUTION

Crushing hazard. The lift cylinder will fall if not properly supported when the pivot pin is removed.

### NOTICE

Component damage hazard. Be careful not to damage the valve or fittings on the cylinder while removing it from the machine.

63 Remove the cables from the number 1 cable bridge and lay them off to the side.

### NOTICE

Component damage hazard. Cables can be damaged if they are kinked or pinched.

64 Disconnect the number 1 cable bridge from the number 1 outer arm (index #22) and remove the cable bridge from the machine.

65 Attach a lifting strap from an overhead crane to the number 1 inner arm (index #10).

66 Raise the arm slightly and remove the block.

67 Lower the arm to the stowed position.

### ⚠ CAUTION

Bodily injury hazard. Keep hands clear of moving parts when lowering the scissor arms.

68 Secure the ends of the scissor arms together at the steer end of the machine with a strap or other suitable device.

69 Secure the ends of the scissor arms together at the non-steer end of the machine with a strap or other suitable device.

70 Remove the retaining fasteners securing the chassis mount bracket to the chassis.

71 Remove the linkset from the machine

### ⚠ CAUTION

Bodily injury hazard. The number 1 outer arm may become unbalanced and fall if not properly supported when removed from the machine.

### NOTICE

Component damage hazard. Be sure not to damage the limit switch or level sensor components when the number 1 inner and outer arms (index #10 and #22) are removed from the machine.

## Scissor Components

### How to Replace the Scissor Arm Wear Pads

- 1 Remove the platform. Refer to Repair Procedure, *How to Remove the Platform*.
- 2 Support and secure the entry ladder to an appropriate lifting device.
- 3 Remove the fasteners from the entry ladder and remove the entry ladder from the machine.

**CAUTION**

Crushing hazard. The entry ladder will fall if not properly supported and secured to the lifting device.

- 4 Secure the ends of the scissor arms together at the steer end of the machine with a strap or other suitable device.
- 5 Secure the ends of the scissor arms together at the non-steer end of the machine with a strap or other suitable device.
- 6 Remove the retaining fasteners securing the chassis mount bracket to the chassis at the steer end of the machine.
- 7 Attach a lifting strap from an overhead crane to the scissor arm assembly.

- 8 Raise the scissor arm assembly at the steer end with the overhead crane until the chassis mount bracket will clear the level sensor.
- 9 Remove the scissor assembly from the machine just enough to access both wear pads.

**DANGER**

Crushing hazard. The scissor assembly will fall if not properly supported when removed from the drive chassis.

**NOTICE**

Component damage hazard. Be careful not to damage the level sensor or limit switch while moving the scissor assembly.

- 10 Remove both old wear pads.
- 11 Install two new wear pads.
- 12 Slide the scissor assembly back into the drive chassis.
- 13 Lower the scissor assembly into position and install the chassis mount bracket onto the chassis. Securely install and tighten the fasteners. Do not over tighten.

**NOTICE**

Component damage hazard. Be careful not to damage the level sensor or limit switch while moving the scissor assembly.

## Scissor Components

### 9-2 Lift Cylinder

#### How to Remove the Lift Cylinder

##### WARNING

Bodily injury hazard. The procedures in this section require specific repair skills, lifting equipment and a suitable workshop. Attempting this procedure without these skills and tools could result in death or serious injury and significant component damage. Dealer service is required.

Note: When removing a hose assembly or fitting, the O-ring (if equipped) on the fitting and/or hose end must be replaced. All connections must be torqued to specification during installation. Refer to Specifications, *Hydraulic Hose and Fitting Torque Specifications*.


- 1 Turn the selector/key switch to ground controls and pull out the red Emergency Stop button to the on position at both ground and platform controls.
- 2 Raise the platform 7 to 8 feet / 2.1 to 2.4 m.
- 3 Lift the safety arm, move it to the center of the scissor arm and rotate down to a vertical position.
- 4 Lower the platform onto the safety arm.

##### WARNING

Crushing hazard. Keep hands clear of the safety arm when lowering the platform.

- 5 Using a suitable lifting device, support the link stack at the steer end of the machine.

- 6 At the ground controls, turn the selector/key switch to the off position and push in the red Emergency Stop button to the off position.

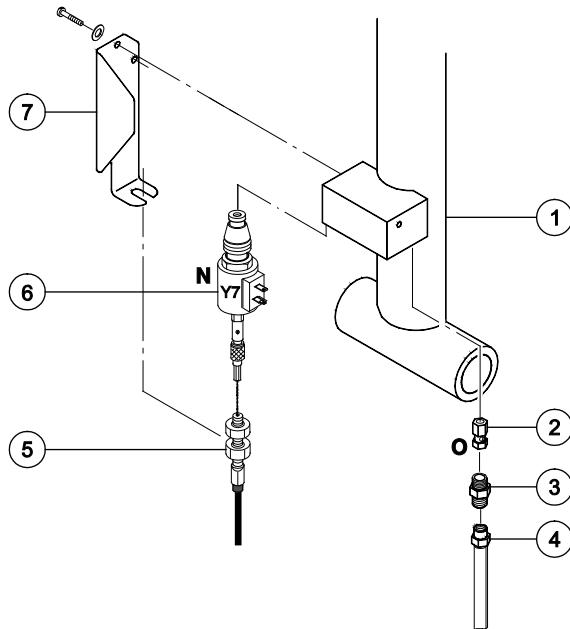

- 1 lift cylinder
- 2 orifice (schematic item O)
- 3 connector fitting
- 4 hydraulic hose
- 5 manual lowering cable
- 6 solenoid valve (schematic item N)
- 7 cable mount bracket

- 7 Disconnect the battery pack from the machine.

##### WARNING

Electrocution/burn hazard. Contact with electrically charged circuits could result in death or serious injury. Remove all rings, watches and other jewelry.

## Scissor Components

- 8 Tag and disconnect the wiring from the solenoid valve coil at the barrel end of the lift cylinder.
- 9 Loosen the adjustment nuts on the solenoid valve and disconnect the manual lowering cable from the valve.

Note: During assembly, the manual platform lowering cable needs to be properly adjusted. Refer to Repair Procedure, *How to Adjust the Manual Platform Lowering Cable*.

- 10 Remove the fasteners securing the manual lowering cable mount bracket to the cylinder. Remove the bracket from the cylinder.
- 11 Tag, disconnect and plug the hydraulic hoses on the lift cylinder. Cap the fittings on the cylinder.

### ⚠ WARNING

Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

- 12 Attach a lifting strap from an overhead crane to the rod end of the lift cylinder for support.
- 13 Remove the fasteners from the lift cylinder rod-end pivot pin. Use a soft metal drift to remove the pin.

### ⚠ CAUTION

Crushing hazard. The lift cylinder will fall if not properly supported when the pivot pin is removed.

- 14 Lower the cylinder onto the number 1 inner arm cylinder plate.

- 15 Attach a lifting strap from an overhead crane or similar lifting device to the barrel end of the lift cylinder for support.
- 16 Remove the fasteners from the lift cylinder barrel-end pivot pin. Use a soft metal drift to remove the pin.
- 17 Support and secure the lift cylinder to an appropriate lifting device.
- 18 Remove the lift cylinder through the scissor arms at the steer end of the machine.

### ⚠ CAUTION

Crushing hazard. The lift cylinder will become unbalanced and fall if not properly supported and secured to the lifting device.

### NOTICE

Component damage hazard. Be careful not to damage the valve or fittings on the cylinder while removing it from the machine.

- 19 Install new cylinder, fittings, hoses and pressure transducer (if equipped).

### Torque specifications

Solenoid valve, 2 position 2 way N.C. (schematic item N)	20 ft-lbs 27 Nm
Coil Nut	5 ft-lbs 7 Nm
Pressure transducer (if equipped) (schematic item R)	27 ft-lbs 37 Nm

- 20 Remove the lifting device supporting the link stack at the steer end of the machine.
- 21 Connect the battery pack to the machine.
- 22 Turn the selector/key switch to ground control.
- 23 Raise the platform and rotate the safety arm to the stowed position.
- 24 Fully lower the platform to the stowed position.

## Platform Components

### 10-1 Platform

#### How to Remove the Platform

##### **WARNING**

Bodily injury hazard. The procedures in this section require specific repair skills, lifting equipment and a suitable workshop. Attempting this procedure without these skills and tools could result in death or serious injury and significant component damage. Dealer service is required.

Note: This procedure will require an overhead lifting device capable of supporting 1000 lbs / 454 kg.

- 1 Turn the selector/key switch to ground control and pull out the red Emergency Stop button to the on position at both the ground and platform controls.
- 2 Raise the platform 7 to 8 feet / 2.1 to 2.4 m.
- 3 Lift the safety arm, move it to the center of the scissor arm and rotate down to a vertical position.
- 4 Lower the platform onto the safety arm.

##### **WARNING**

Crushing hazard. Keep hands clear of the safety arm when lowering the platform.

- 5 At the ground control, turn the selector/key switch to the off position and push in the red Emergency Stop button to the off position.

- 6 Disconnect the battery pack from the machine.

##### **WARNING**

Electrocution/burn hazard. Contact with electrically charged circuits could result in death or serious injury. Remove all rings, watches and other jewelry.

- 7 Place a ladder at the steer end of the raised platform a locate the limit switch cable.
- 8 Tag and disconnect the limit switch cable from the limit switch harness.
- 9 Disconnect the platform controls cable from the connector located under the platform.
- 10 **Machines equipped with powered extension deck option:** Remove the fasteners securing the powered extension deck hose clamps to the platform. Set the fasteners and the hose clamps to the side.
- 11 Tag, disconnect, plug and cap the powered extension deck hydraulic hoses.

##### **WARNING**

Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

- 12 Connect the battery pack to the machine.
- 13 At the ground control, turn the selector/key switch to the on position and pull out the red Emergency Stop button to the on position.
- 14 Raise the platform and return the safety arm to the stowed position.
- 15 Fully lower the platform to the stowed position.

## Platform Components

16 Remove the zip tie that secures the power to platform wiring to the bottom of the platform.

**NOTICE** Component damage hazard. Be sure not to cut the power to the platform wiring.

17 Remove the zip ties that secure the platform controls cable to the platform.

18 Remove the platform control box from the platform and lay it off to the side.

**NOTICE** Component damage hazard. The platform controls wiring can be damaged if it is kinked or pinched.

19 Remove the cover to the AC power to platform outlet. Tag and disconnect the wiring from the outlet.

**WARNING** Electrocution/burn hazard. Contact with electrically charged circuits could result in death or serious injury. Remove all rings, watches and other jewelry.

Note: If your machine is equipped with an air line to platform option, the air line must be disconnected from the platform before removal.

20 Attach a sling chain from the overhead lifting device to the four lifting points on the platform.

21 Remove the two carriage bolts that secure the platform to the platform pivot at the steer end of the machine.

22 Carefully lift the platform enough to clear the platform pivot.

23 Slide the platform towards the non-steer end of the machine until the slider blocks are visible underneath the slider block channel.

24 Carefully lift the platform off of the machine and place it on a structure capable of supporting it.

**WARNING** Crushing hazard. The platform will become unbalanced and fall when removed from the machine if not properly supported.


Note: Note the position of the slider blocks before the platform is removed so that when the platform is installed they will be in the correct position.

## Platform Components

### 10-2 Platform Extension

#### How to Remove the Manual Extension Deck

- 1 Remove the platform controls from the platform and set the platform controls to the side.
- 2 Extend the extension deck approximately 4 ft / 12 m.
- 3 Working with the extension deck lock handle, remove the retaining fasteners from the lock handle assembly. Set the fasteners to the side.
- 4 Remove the retaining fasteners from the extension deck locking assembly. Set the fasteners and the locking assembly to the side.
- 5 Remove the retaining fasteners from the extension deck catch and remove the catch. Set the extension deck catch and fasteners to the side.
- 6 Remove the fasteners from the extension deck stop and remove the stop. Set the extension deck stop and the fasteners to the side.
- 7 Repeat steps 3 and 4 at the opposite side of the extension deck.

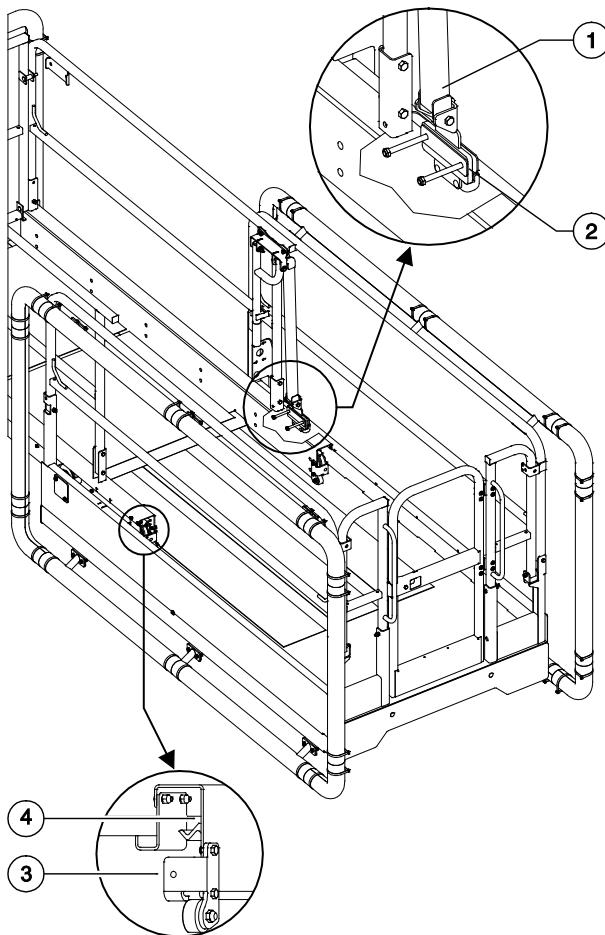

- 1 lock handle assembly
- 2 extension deck locking assembly
- 3 extension deck stop
- 4 extension deck catch

## Platform Components


- 8 At the steer end of the extension deck, locate, tag and disconnect the front gate proximity switch from the limit switch harness.
- 9 Position a forklift at the steer end of the machine with the forks even with the bottom of the platform extension deck.
- 10 Carefully slide the platform extension out until the platform extension deck makes contact with the carriage on the forklift.
- 11 Secure the platform extension deck railings to the carriage of the forklift to support the platform extension deck.
- 12 Carefully slide the platform extension out and away from the platform and place it on a structure capable of supporting it.

### WARNING

Crushing hazard. The platform extension will become unbalanced and fall when removed from the machine if not properly supported and secured to the forklift.

### How to Remove the Powered Extension Deck (if equipped)

- 1 Remove the platform controls from the platform and set the platform controls to the side.
- 2 Working at the steer end of the platform, remove the fasteners securing the banjo bolt to the rod end of the extension deck cylinder. Set the banjo bolt and fasteners to the side.

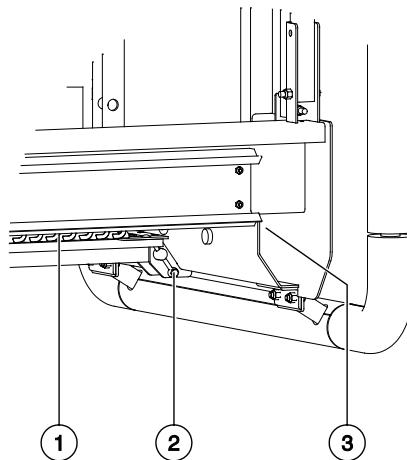

- 1 cable track
- 2 banjo bolt
- 3 proximity switch harness (located behind toeboard)

- 3 Manually extend the extension deck approximately 4 ft / 12 m.
- 4 At the steer end of the extension deck, locate, tag and disconnect the front gate proximity switch from the limit switch harness.

## Platform Components

- 5 Locate the cable track at the steer end of the extension deck and remove the fasteners. Set the fasteners to the side.
- 6 Carefully slide the cable track and the cable track mounting bracket into the main deck.
- 7 Remove the fasteners from the extension deck stop and remove the stop. Set the extension deck stop and the fasteners to the side.
- 8 Repeat steps 3 and 4 at the opposite side of the extension deck.
- 9 Position a forklift at the steer end of the machine with the forks even with the bottom of the platform extension.
- 10 Carefully slide the platform extension out until the platform extension makes contact with the carriage on the forklift.
- 11 Secure the platform extension deck railings to the carriage of the forklift to support the platform extension deck.
- 12 Carefully slide the platform extension out and away from the platform and place it on a structure capable of supporting it.

**WARNING**

Crushing hazard. The platform extension will become unbalanced and fall when removed from the machine if not properly supported and secured to the forklift.

### 10-3

#### Extension Deck Cylinder

#### How to Remove the Extension Deck Cylinder (if equipped)

- 1 Turn the selector/key switch to ground control and pull out the red Emergency Stop button to the on position at both the ground and platform controls.
- 2 Raise the platform 7 to 8 feet / 2.1 to 2.4 m.
- 3 Lift the safety arm, move it to the center of the scissor arm and rotate down to a vertical position.
- 4 Lower the platform onto the safety arm.

**WARNING**

Crushing hazard. Keep hands clear of the safety arm when lowering the platform.


- 5 At the ground control, turn the selector/key switch to the off position and push in the red Emergency Stop button to the off position.
- 6 Place a ladder at the steer end of the raised platform a locate the extension deck cylinder hydraulic hose connection.
- 7 Remove the fasteners from the hydraulic hose clamps. Set the hose clamps and fasteners to the side.
- 8 Tag, disconnect, plug and cap the extension cylinder hydraulic hose lines.

**WARNING**

Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

## Platform Components

9 Working with the PED limit switch, loosen the nut from the carriage bolt. Do not remove.

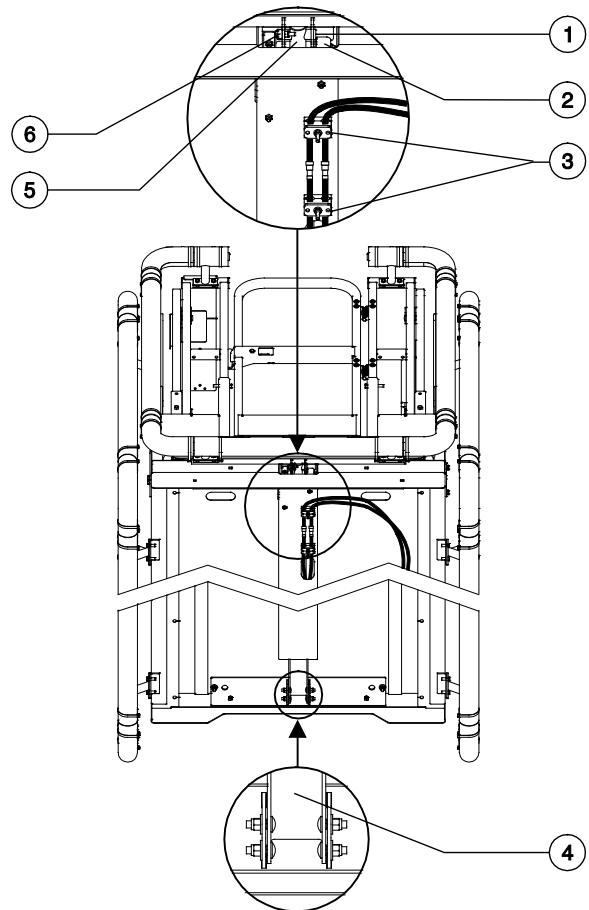

- 1 cylinder pin
- 2 PED limit switch
- 3 hydraulic hose clamps
- 4 PED cylinder mount bracket
- 5 extension deck cylinder (rod end)
- 6 banjo bolt

10 Remove the fasteners securing the banjo bolt to the extension deck cylinder pin. Set the banjo bolt and fasteners to the side.

11 Remove the extension deck cylinder pin and set to the side.

12 Move the extension deck away from the main deck to allow access to the PED limit switch.

13 Remove the fasteners from the PED limit switch assembly. Set the fasteners to the side.

14 Carefully move the PED limit switch assembly away from the main deck, allowing the assembly to rest outside of the main deck.

### NOTICE

Component damage hazard. Cables can be damaged if they are kinked or pinched.

15 Working at the non-steer end of the machine, remove the fasteners from the PED cylinder mount bracket. Set the fasteners to the side.

16 At the ground control, turn the selector/key switch to the on position and pull out the red Emergency Stop button to the on position.

## Platform Components

- 17 Raise the platform and return the safety arm to the stowed position.
- 18 Fully lower the platform to the stowed position.
- 19 Fully extend the extension deck.
- 20 Carefully remove the extension deck cylinder from the main deck.


**NOTICE**

Component damage hazard. Be careful not to damage the fittings on the cylinder while removing it from the machine.

**NOTICE**

Component damage hazard. Cables can be damaged if they are kinked or pinched.

- 21 Set the extension deck cylinder on a workbench and remove the fasteners from the cylinder mount bracket. Set the bracket and fasteners to the side.

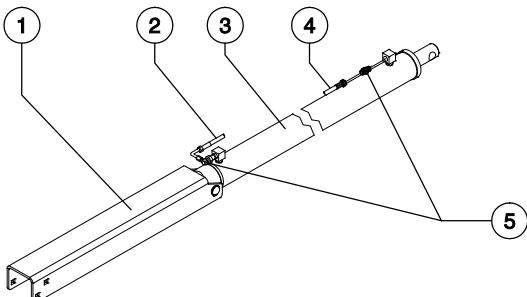

- 1 PED cylinder mount bracket
- 2 hydraulic hose
- 3 extension deck cylinder
- 4 connector fittings

This page intentionally left blank.

## Diagnostics



### Observe and Obey:

- Troubleshooting and repair procedures shall be completed by a person trained and qualified on the repair of this machine
- Immediately tag and remove from service a damaged or malfunctioning machine.
- Repair any machine damage or malfunction before operating the machine.
- Unless otherwise specified, perform each repair procedure with the machine in the following configuration:
  - Machine parked on a firm, level surface
  - Platform in the stowed position
  - Select switch in the off position with the key removed
  - The red Emergency Stop button in the off position at both ground and platform controls
  - Wheels chocked
  - All external AC power supply disconnected from the machine

### Before Troubleshooting:

- Read, understand and obey the safety rules and operating instructions in the appropriate operator's manual on your machine.
- Be sure that all necessary tools and test equipment are available and ready for use.
- Read each appropriate fault code thoroughly. Attempting short cuts may produce hazardous conditions.
- Be aware of the following hazards and follow generally accepted safe workshop practices.

#### **DANGER**

Crushing hazard. When testing or replacing any hydraulic component, always support the structure and secure it from movement

#### **WARNING**

Electrocution/burn hazard. Contact with electrically charged circuits could result in death or serious injury. Remove all rings, watches and other jewelry.

#### **WARNING**

Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

### About This Section

When a malfunction is discovered, the fault code charts in this section will help a service professional pinpoint the cause of the problem. To use this section, basic hand tools and certain pieces of test equipment are required — voltmeter, ohmmeter, pressure gauges.

## Diagnostics

### Definitions

GSDS – Genie SmartLink™ Diagnostic System

ECM – Electronic Control Module

GCON – Ground Controls

PCON – Platform Controls

OIC – Operational Indicator Codes

DTC – Diagnostic Trouble Codes

### GCON LCD Diagnostic Readout

**H001: COILFAULT  
PLAT UP1:Bat-**

The diagnostic readout displays alpha numeric codes that provide information about the machine operating status and about malfunctions.

The codes listed in the Diagnostic Trouble Code Charts describe malfunctions and can aid in troubleshooting the machine by pinpointing the area or component affected.


Models are listed below each code to assist in the troubleshooting codes for a specific model.

### Genie SmartLink Diagnostic System

This machine is equipped with the Genie SmartLink™ Diagnostic System (GSDS). The GSDS indicates a machine malfunction has happened by displaying Operational Indicator Codes (OIC) and Diagnostic Trouble Codes (DTC). These codes are displayed at the Platform Controls and the Ground Controls. The Ground Controls will display a brief description of the code at the LCD display as well. Refer to the GCON I/O Maps, Operational Indicator Codes (OIC) and Diagnostic Trouble Codes (DTC) in this section, to assist in troubleshooting faults.



## GCON I/O Map (with manual extension deck)

GCON Pin Number	Circuit Function	I/O Type	Wire Gauge and Color
<b>J1 Connector – Gray</b>			
J1-01	ECM Power	Power Input	14 RD
J1-02	PCON, E-Stop Power	Power Output	18 RD
J1-03	PCON, E-Stop Return	Power Input	18 WH
J1-04	Link to PCON — CANH	Data Bus	18 GR
J1-05	Link to PCON — CANL	Data Bus	18 OR
J1-06	PCON — Ground	Ground Output	18 BR
J1-07	GCON — Ground	Ground Input	14 BR
J1-08	Selector Switch — PCON Mode	Digital Input	18 BK
J1-09	Selector Switch — GCON Mode	Digital Input	18 WH
J1-10	GCON — Emergency Mode	Digital Input	18 WH/BK
J1-11	No Circuit	N/A	N/A
J1-12	Driver Power	Power Input	14 RD
<b>J-2 Connector – Black</b>			
J2-01	Platform Up Coil	Digital Output	18 OR
J2-02	Platform Down Coil	Digital Output	18 OR/BK
J2-03	Steer Left Coil	Digital Output	18 BL/BK
J2-04	Steer Right Coil	Digital Output	18 BL
J2-05	Parallel Coil	Digital Output	18 RD/WH
J2-06	Drive Forward Coil	Digital Output	18 WH
J2-07	No Circuit	N/A	N/A
J2-08	Motor Controller Enable	Digital Output	18 GR/WH
J2-09	No Circuit	N/A	N/A
J2-10	Drive Reverse Coil	Digital Output	18 WH/BK
J2-11	Motor Controller Throttle	Analog Output	18 GR
J2-12	No Circuit	N/A	N/A
<b>J-3 Connector – Green</b>			
J3-01	No Circuit	N/A	N/A
J3-02	GCON — Alarm	Digital Output	18 BL
J3-03	Switch/Sensor Power	Digital Output	14 RD
J3-04	Automotive Horn	Digital Output	18 WH
J3-05	Pothole Limit Switch	Digital Input	18 OR/RD
J3-06	Ground	Ground Input	18 BR
J3-07	Down Limit Switch	Digital Input	18 OR
J3-08	Level Sensor	Digital Input	18 RD/BK
J3-09	Ground	Ground Input	18 BK
J3-10	Ground	Ground Input	18 BK
J3-11	Gate Proximity Sensor	Digital Input	18 RD/WH
J3-12	Load Sense — Ground	Ground Input	18 BK

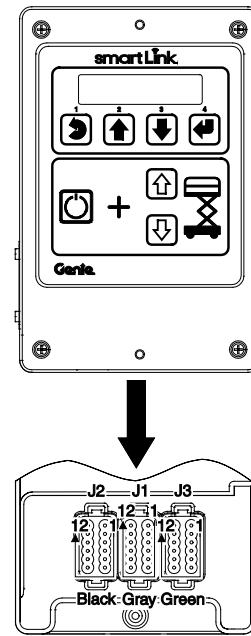


## GCON I/O Map (with powered extension deck)

GCON Pin Number	Circuit Function	I/O Type	Wire Gauge and Color
<b>J1 Connector – Gray</b>			
J1-01	ECM Power	Power Input	14 RD
J1-02	PCON, E-Stop Power	Power Output	18 RD
J1-03	PCON, E-Stop Return	Power Input	18 WH
J1-04	Link to PCON — CANH	Data Bus	18 GR
J1-05	Link to PCON — CANL	Data Bus	18 OR
J1-06	PCON — Ground	Ground Output	18 BR
J1-07	GCON — Ground	Ground Input	14 BR
J1-08	Selector Switch — PCON Mode	Digital Input	18 BK
J1-09	Selector Switch — GCON Mode	Digital Input	18 WH
J1-10	GCON — Emergency Mode	Digital Input	18 WH/BK
J1-11	No Circuit	N/A	N/A
J1-12	Driver Power	Power Input	14 RD
<b>J-2 Connector – Black</b>			
J2-01	Platform Up Coil	Digital Output	18 OR
J2-02	Platform Down Coil	Digital Output	18 OR/BK
J2-03	Steer Left Coil	Digital Output	18 BL/BK
J2-04	Steer Right Coil	Digital Output	18 BL
J2-05	Parallel Coil	Digital Output	18 RD/WH
J2-06	Drive Forward Coil	Digital Output	18 WH
J2-07	No Circuit	N/A	N/A
J2-08	Motor Controller Enable	Digital Output	18 GR/WH
J2-09	No Circuit	N/A	N/A
J2-10	Drive Reverse Coil	Digital Output	18 WH/BK
J2-11	Motor Controller Throttle	Analog Output	18 GR
J2-12	No Circuit	N/A	N/A

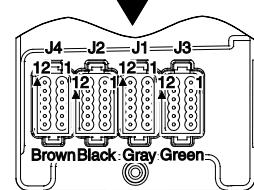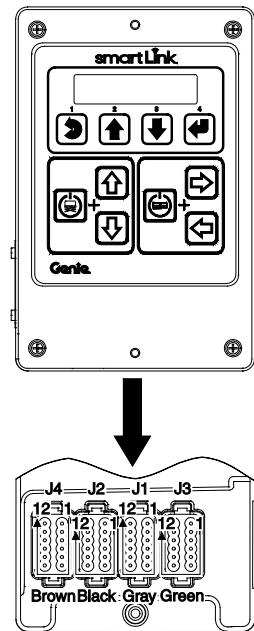

## GCON I/O Map (with powered extension deck)

GCON Pin Number	Circuit Function	I/O Type	Wire Gauge and Color
<b>J-3 Connector – Green</b>			
J3-01	No Circuit	N/A	N/A
J3-02	GCON — Alarm	Digital Output	18 BL
J3-03	Switch/Sensor Power	Digital Output	14 RD
J3-04	Automotive Horn	Digital Output	18 WH
J3-05	Pothole Limit Switch	Digital Input	18 OR/RD
J3-06	Ground	Ground Input	18 BR
J3-07	Down Limit Switch	Digital Input	18 OR
J3-08	Level Sensor	Digital Input	18 RD/BK
J3-09	Ground	Ground Input	18 BK
J3-10	Ground	Ground Input	18 BK
J3-11	Gate Proximity Sensor	Digital Input	18 RD/WH
J3-12	Load Sense — Ground	Ground Input	18 BK
<b>J-4 Connector – Brown</b>			
J4-01	Powered Extension Deck Limit Switch	Digital Output	18 BL/BK
J4-02	No Circuit	N/A	N/A
J4-03	No Circuit	N/A	N/A
J4-04	No Circuit	N/A	N/A
J4-05	No Circuit	N/A	N/A
J4-06	No Circuit	N/A	N/A
J4-07	No Circuit	N/A	N/A
J4-08	No Circuit	N/A	N/A
J4-09	No Circuit	N/A	N/A
J4-10	Powered Extension Deck Enable Deck Coil	Digital Output	18 GR/WH
J4-11	Powered Extension Deck Extend Coil	Digital Output	18 GR
J4-12	Powered Extension Deck Retract Coil	Digital Output	18 GR/BK

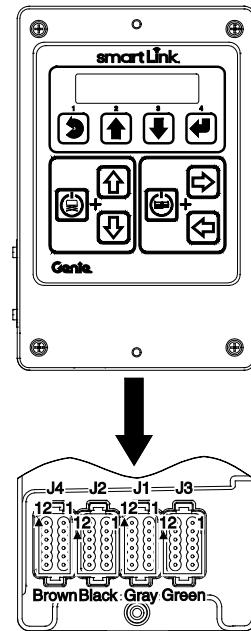

## Operation Indicator Codes (OIC)

### Operation Indicator Codes (OIC)

These codes are generated by the electrical system to indicate machine operating status such as Off-level, Overload Cutout, Chassis Mode Operation and Pothole Guard Stuck, during normal operation. These codes are not indicators of a device malfunction in the electrical system.

Code	Condition
LL	Off-Level
OL	Platform Overloaded (CE and Australia)
CH	Chassis Mode Operation
PHS	Pothole Guard Stuck
nd	No Drive (option)
dE	Deck Extended (PED only) (lift and drive disabled)
Fd	Function Disabled (all functions)

### Diagnostic Trouble Codes (DTC)

These codes are generated by the system to indicate that a device or circuit malfunction has been detected in the electrical system.

The types of Diagnostic Trouble Codes that may occur are explained below.

Type "HXXX" – Indicate a malfunction associated with devices that control hydraulic functions in the electrical system. The "HXXX" faults are divided into short circuit battery negative, short circuit to battery positive, open circuit and generic shorts. Examples of these devices are solenoid controlled hydraulic valves and motor controller.

Type "PXXX" – Indicate a malfunction associated with power type devices in the electrical system. The "PXXX" faults are divided into short circuit to battery negative, short circuit to battery positive, open circuit and generic shorts. Examples of these devices are horns, sensor power and alarms.

Type "UXXX" – Indicate a malfunction associated with user interface devices in the electrical system. The "UXXX" faults are divided into short circuit to battery negative, short circuit to battery positive, open circuit and generic shorts. Examples of these devices are GCON up and down switches and PCON drive joystick.

Type "FXXX" – Indicate a malfunction associated with machine feedback devices in the electrical system. The "FXXX" faults are divided into short circuit to battery negative, short circuit to battery positive, open circuit and generic shorts. Examples of these devices are limit switches, height sensors and pressure transducers.


Type "CXXX" – Indicate a malfunction associated with controls devices in the electrical system. Examples of these devices are platform controls and ground controls ECM.

## Troubleshooting "HXXX" and "PXXX" Faults

### Troubleshooting "HXXX" and "PXXX" Faults


The procedure below illustrates typical steps for diagnosing and fixing faults of type "HXXX" and "PXXX".

#### Diagnostic Chart

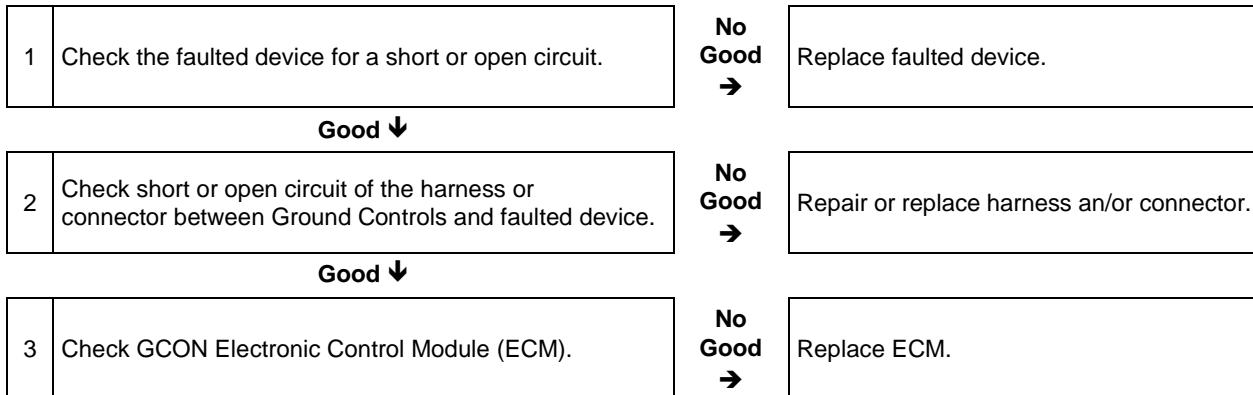

#### Wiring Diagram



The wiring diagram shown below illustrates how fault type "HXXX" and "PXXX" devices are typically wired. The signal of these types of devices originates at the Ground Controls and terminates at system ground.

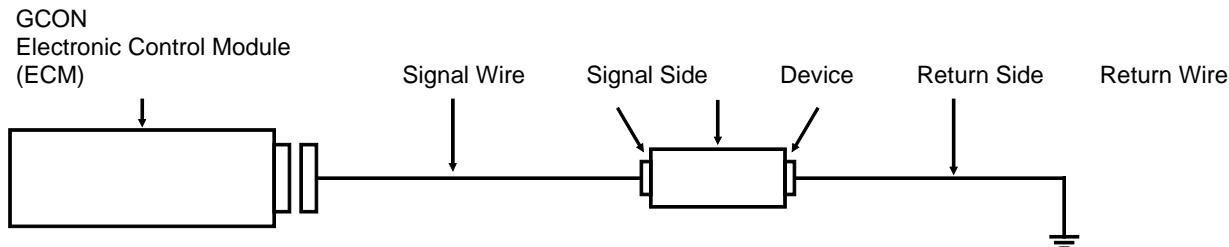


In order to successfully troubleshoot "HXXX" or "PXXX" type faults, the entire faulted out circuit must be investigated.

## Fault Inspection Procedure

### Fault Inspection Procedure

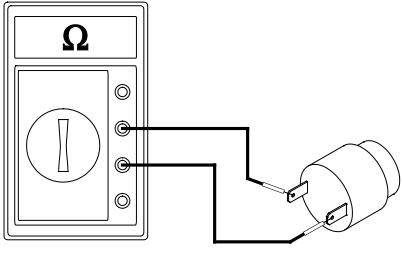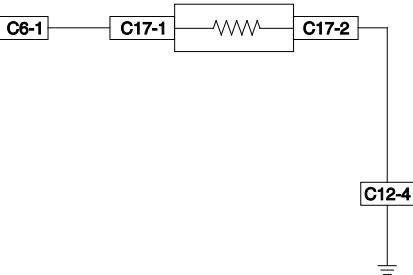1	Check the device associated with the faulted circuit																						
		<ol style="list-style-type: none"> <li>1 Disconnect the faulted device connector.</li> <li>2 Using a multi-meter, measure resistance between the two terminals of the faulted device.</li> <li>3 Resistance should be as follows.</li> </ol> <table> <thead> <tr> <th>Device</th> <th>Typical Resistance</th> </tr> </thead> <tbody> <tr> <td>Solenoid Valve, Drive</td> <td>27.2 Ω</td> </tr> <tr> <td>Solenoid Valve, Steer</td> <td>19 Ω</td> </tr> <tr> <td>Solenoid Valve, Platform Up</td> <td>25 Ω</td> </tr> <tr> <td>Solenoid Valve, Platform Down</td> <td>6.25 Ω</td> </tr> <tr> <td>GCON and PCON Alarm</td> <td>&gt;1M Ω</td> </tr> <tr> <td>Automotive Horn</td> <td>1.0 Ω</td> </tr> <tr> <td>Motor Controller – Enable</td> <td>5.7k Ω</td> </tr> <tr> <td>Motor Controller – Throttle</td> <td>5.7k Ω</td> </tr> <tr> <td>Contactor Coil</td> <td>47 Ω</td> </tr> </tbody> </table>		Device	Typical Resistance	Solenoid Valve, Drive	27.2 Ω	Solenoid Valve, Steer	19 Ω	Solenoid Valve, Platform Up	25 Ω	Solenoid Valve, Platform Down	6.25 Ω	GCON and PCON Alarm	>1M Ω	Automotive Horn	1.0 Ω	Motor Controller – Enable	5.7k Ω	Motor Controller – Throttle	5.7k Ω	Contactor Coil	47 Ω
Device	Typical Resistance																						
Solenoid Valve, Drive	27.2 Ω																						
Solenoid Valve, Steer	19 Ω																						
Solenoid Valve, Platform Up	25 Ω																						
Solenoid Valve, Platform Down	6.25 Ω																						
GCON and PCON Alarm	>1M Ω																						
Automotive Horn	1.0 Ω																						
Motor Controller – Enable	5.7k Ω																						
Motor Controller – Throttle	5.7k Ω																						
Contactor Coil	47 Ω																						
OK	Go to step 2	No Good	Replace faulted device																				
2	Check the harness between the ground controls and the faulted device																						
		<ol style="list-style-type: none"> <li>1 Disconnect the GCON ECM connectors, J1, J2 and J3.</li> <li>2 Disconnect the faulted device connector.</li> <li>3 Check the continuity between the GCON ECM connector and the signal side of the faulted device. <ul style="list-style-type: none"> <li>Ⓐ Result: Resistance should be close to 0 Ω</li> </ul> </li> <li>4 Check the continuity between the return side of faulted device and system ground. <ul style="list-style-type: none"> <li>Ⓐ Result: Resistance should be close to 0 Ω</li> </ul> </li> <li>5 Check resistance between return side and signal side of the harness plug of faulted device. <ul style="list-style-type: none"> <li>Ⓐ Result: Resistance should be 1M Ω or higher.</li> </ul> </li> </ol>																					
OK	Go to step 3	No Good	Replace or repair harness																				

## Fault Inspection Procedure

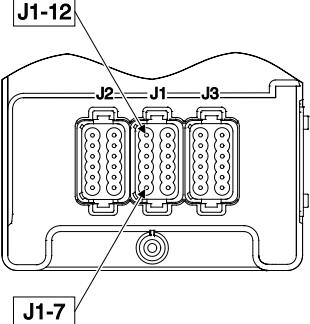3	<b>Check the GCON ECM</b>	
		<ol style="list-style-type: none"> <li>1 Disconnect the GCON ECM connectors, J1, J2 and J3.</li> <li>2 For short to B- type faults, measure resistance between pins J1-7 (ground) and the GCON pin associated with the fault code. Refer to the GCON I/O Map in this section to identify the faulted out circuit pin.</li> <li>3 Short to ground resistance should be greater than <math>5k\ \Omega</math>.</li> <li>4 For short to B+ type faults, measure resistance between pins J1-12 (driver power) and the GCON pin associated with the fault code. Refer to the GCON I/O Map in this section to identify the faulted out circuit pin.</li> <li>5 Short to power resistance should be greater than <math>50k\ \Omega</math>.</li> </ol>
<input type="button" value="No Good"/>		<input type="button" value="Replace GCON ECM"/>

## Type "HXXX" Faults

DTC Number	Message on GCON LCD	Problem Description	Possible Causes	Failure Mode
H001	H001:COILFAULT PLAT UP1:BAT-	Short circuit of the platform up #1 circuit to battery negative.	<ul style="list-style-type: none"> <li>• Short circuit in platform up #1 harness</li> <li>• Platform up #1 coil short circuit</li> <li>• GCON ECM</li> </ul>	Platform up function inhibited.
H002	H002:COILFAULT PLAT UP1:OPEN	Open circuit in the platform up #1 circuit.	<ul style="list-style-type: none"> <li>• Short circuit in platform up #1 harness</li> <li>• Platform up #1 coil open circuit</li> <li>• GCON ECM</li> </ul>	Platform up function inhibited.
H003	H003:COILFAULT PLAT UP1:BAT+	Short circuit of the platform up #1 circuit to battery positive.	<ul style="list-style-type: none"> <li>• Short circuit in platform up #1 harness</li> <li>• Platform up #1 coil short circuit</li> <li>• GCON ECM</li> </ul>	All functions inhibited except platform down.
H009	H009:COILFAULT PLAT DOWN1:BAT+	Short circuit of the platform down #1 circuit to battery positive.	<ul style="list-style-type: none"> <li>• Short circuit in platform up #1 harness</li> <li>• Platform up #1 coil short circuit</li> <li>• GCON ECM</li> </ul>	All functions inhibited.
H013	H013:COILFAULT DRIVE FWD1:BAT-	Short circuit of the drive forward #1 circuit to battery negative.	<ul style="list-style-type: none"> <li>• Short circuit in drive forward #1 harness</li> <li>• Drive forward #1 coil short circuit</li> <li>• GCON ECM</li> </ul>	Drive forward function inhibited.
H014	H014:COILFAULT DRIVE FWD1:OPEN	Open circuit in the drive forward #1 circuit.	<ul style="list-style-type: none"> <li>• Open circuit in drive forward #1 harness</li> <li>• Drive forward #1 coil open circuit</li> <li>• GCON ECM</li> </ul>	Drive forward function inhibited.
H015	H015:COILFAULT DRIVE FWD1:BAT+	Short circuit of the drive forward #1 circuit to battery positive.	<ul style="list-style-type: none"> <li>• Short circuit in drive forward #1 harness</li> <li>• Drive forward #1 coil short circuit</li> <li>• GCON ECM</li> </ul>	All functions inhibited except platform down.
H019	H019:COILFAULT DRIVE REV1:BAT-	Short circuit of the drive forward #1 circuit to battery negative.	<ul style="list-style-type: none"> <li>• Short circuit in drive reverse #1 harness</li> <li>• Drive reverse #1 coil short circuit</li> <li>• GCON ECM</li> </ul>	Drive reverse function inhibited.
H020	H020:COILFAULT DRIVE REV1:OPEN	Open circuit in the drive reverse #1 circuit.	<ul style="list-style-type: none"> <li>• Short circuit in drive reverse #1 harness</li> <li>• Drive reverse #1 coil open circuit</li> <li>• GCON ECM</li> </ul>	Drive reverse function inhibited.
H021	H021:COILFAULT DRIVE REV1:BAT+	Short circuit of the drive reverse #1 circuit to battery positive.	<ul style="list-style-type: none"> <li>• Short circuit in drive reverse #1 harness</li> <li>• Drive reverse #1 coil short circuit</li> <li>• GCON ECM</li> </ul>	All functions inhibited except platform down.
H027	H027:COILFAULT DRIVE STEER RIGHT:BAT+	Short circuit of the steer right circuit to battery positive.	<ul style="list-style-type: none"> <li>• Short circuit in steer right harness</li> <li>• Steer right coil short circuit</li> <li>• GCON ECM</li> </ul>	All functions inhibited except platform down.
H030	H030:COILFAULT DRIVE STEER LEFT:BAT+	Short circuit of the steer left circuit to battery positive.	<ul style="list-style-type: none"> <li>• Short circuit in steer left harness</li> <li>• Steer left coil short circuit</li> <li>• GCON ECM</li> </ul>	All functions inhibited except platform down.
H033	H033:COILFAULT HI/LO SPEED:BAT+	Short circuit of the hi/lo speed coil to battery positive.	<ul style="list-style-type: none"> <li>• Short circuit in Hi/Lo speed coil harness</li> <li>• Hi/Lo speed coil short circuit</li> <li>• GCON ECM</li> </ul>	Hi/Lo speed coil disabled. Machine will operate in low speed mode.

## Type "HXXX" Faults

DTC Number	Message on GCON LCD	Problem Description	Possible Causes	Failure Mode
<b>H067</b>	H067:FAULT MC ENABLE:BAT-	Short circuit of the motor controller circuit to battery negative.	<ul style="list-style-type: none"> <li>• Short circuit in motor controller enable wire</li> <li>• Motor Controller</li> <li>• Contactor coil shorted to battery negative</li> <li>• GCON ECM</li> </ul>	All functions inhibited except platform down.
<b>H069</b>	H069:FAULT MC ENABLE:BAT+	Short circuit of the motor controller circuit to battery positive.	<ul style="list-style-type: none"> <li>• Short circuit in motor controller enable wire</li> <li>• Motor Controller</li> <li>• GCON ECM</li> <li>• Contactor Coil</li> </ul>	All functions inhibited except platform down.
<b>H070</b>	H070:FAULT MC THROTTLE:BAT-	Short circuit of the motor controller throttle circuit to battery negative.	<ul style="list-style-type: none"> <li>• Short circuit in motor controller throttle wire</li> <li>• Motor Controller</li> <li>• GCON ECM</li> </ul>	All functions inhibited except platform down.
<b>H072</b>	H072:FAULT MC THROTTLE:BAT+	Short circuit of the motor controller throttle circuit to battery positive.	<ul style="list-style-type: none"> <li>• Short circuit in motor controller throttle wire</li> <li>• Motor Controller</li> <li>• GCON ECM</li> </ul>	All functions inhibited except platform down.
<b>H078</b>	H078:COILFAULT PLAT DOWN1	Short circuit of the platform down #1 circuit to battery positive/negative or open circuit.	<ul style="list-style-type: none"> <li>• Short or open circuit in platform down #1 harness</li> <li>• Platform down #1 coil short or open circuit</li> <li>• GCON ECM</li> </ul>	Platform down function inhibited.
<b>H079</b>	H079:COILFAULT HI/LO SPEED	Short circuit of the HI/LO speed circuit to battery positive/negative or open circuit.	<ul style="list-style-type: none"> <li>• Short circuit in HI/LO speed harness</li> <li>• HI/LO speed coil short or open circuit</li> <li>• GCON ECM</li> </ul>	Hi/Lo speed coil disabled. Machine will operate in high speed mode if open circuit or short with battery negative. Machine will operate in low speed mode if short with battery positive.
<b>H080</b>	H080:COILFAULT STEER LEFT	Short circuit of the steer left circuit to battery negative or open circuit.	<ul style="list-style-type: none"> <li>• Short or open circuit in steer left harness</li> <li>• Steer left coil short or open circuit</li> <li>• GCON ECM</li> </ul>	Steer left function inhibited.
<b>H081</b>	H081:COILFAULT STEER RIGHT	Short circuit of the steer right circuit to battery negative or open circuit.	<ul style="list-style-type: none"> <li>• Short or open circuit in steer right harness</li> <li>• Steer right coil short or open circuit</li> <li>• GCON ECM</li> </ul>	Steer right function inhibited.
<b>H106</b>	H106:COILFAULT DECK EXTEND:BAT-	Short circuit of the platform extend circuit to battery negative.	<ul style="list-style-type: none"> <li>• Short circuit in PED harness</li> <li>• PED extend valve coil short circuit</li> <li>• GCON ECM</li> </ul>	All functions inhibited.
<b>H107</b>	H107:COILFAULT DECK EXTEND:OPEN	Open circuit in the platform extend circuit.	<ul style="list-style-type: none"> <li>• Open circuit in PED harness</li> <li>• PED extend valve coil open circuit</li> <li>• GCON ECM</li> </ul>	All functions inhibited.
<b>H108</b>	H108:COILFAULT DECK EXTEND:BAT+	Short circuit of the platform extend circuit to battery positive.	<ul style="list-style-type: none"> <li>• Short circuit in PED harness</li> <li>• PED extend valve coil short circuit</li> <li>• GCON ECM</li> </ul>	All functions inhibited.
<b>H109</b>	H109:COILFAULT DECK RETRACT:BAT-	Short circuit of the platform retract circuit to battery negative.	<ul style="list-style-type: none"> <li>• Short circuit in PED harness</li> <li>• PED retract valve coil short circuit</li> <li>• GCON ECM</li> </ul>	All functions inhibited.
<b>H110</b>	H110:COILFAULT DECK RETRACT:OPEN	Open circuit in the platform retract circuit.	<ul style="list-style-type: none"> <li>• Open circuit in PED harness</li> <li>• PED retract valve coil open circuit</li> <li>• GCON ECM</li> </ul>	All functions inhibited.
<b>H111</b>	H111:COILFAULT DECK RETRACT:BAT+	Short circuit of the platform retract circuit to battery positive.	<ul style="list-style-type: none"> <li>• Short circuit in PED harness</li> <li>• PED retract valve coil short circuit</li> <li>• GCON ECM</li> </ul>	All functions inhibited.
<b>H114</b>	H114:COILFAULT DECK ENABLE:BAT+	Short circuit of the platform enable circuit to battery positive.	<ul style="list-style-type: none"> <li>• Short circuit in PED harness</li> <li>• PED enable valve coil short circuit</li> <li>• GCON ECM</li> </ul>	All functions inhibited.
<b>H115</b>	H115:COILFAULT DECK ENABLE	Short circuit of the platform enable circuit.	<ul style="list-style-type: none"> <li>• Short circuit in PED harness</li> <li>• GCON ECM</li> </ul>	All functions inhibited.

## Type "PXXX" Faults

DTC Number	Message on GCON LCD	Problem Description	Possible Causes	Failure Mode
<b>P001</b>	P001:PWR FAULT SW PWR1:BAT-	Short circuit of the switched power #1 circuit to battery negative.	<ul style="list-style-type: none"> <li>• Short circuit in switched power #1, down limit switch, pothole limit switch, digital tilt switch harness</li> <li>• GCON ECM</li> </ul>	All functions inhibited.
<b>P003</b>	P003:PWR FAULT SW PWR1:BAT+	Short circuit of the switched power #1 circuit to battery positive.	<ul style="list-style-type: none"> <li>• Short circuit in switched power #1, down limit switch, pothole limit switch, digital tilt switch harness</li> <li>• GCON ECM</li> </ul>	All functions inhibited.
<b>P004</b>	P004:DEVICEFAULT HORN:BAT-	Short circuit of the automotive horn circuit to battery negative.	<ul style="list-style-type: none"> <li>• Short circuit in automotive horn harness</li> <li>• Automotive horn short circuit</li> <li>• GCON ECM</li> </ul>	Automotive horn inhibited.
<b>P005</b>	P005:DEVICEFAULT HORN:OPEN	Open circuit of the automotive horn circuit.	<ul style="list-style-type: none"> <li>• Open circuit in automotive horn harness</li> <li>• Automotive horn open circuit</li> <li>• GCON ECM</li> </ul>	Automotive horn inhibited.
<b>P006</b>	P006:DEVICEFAULT HORN:BAT+	Short circuit of the automotive horn circuit to battery positive.	<ul style="list-style-type: none"> <li>• Short circuit in automotive horn harness</li> <li>• Automotive horn short circuit</li> <li>• GCON ECM</li> </ul>	Automotive horn inhibited.
<b>P007</b>	P007:DEVICEFAULT GCON ALARM:BAT-	Short circuit of the GCON alarm circuit to battery negative.	<ul style="list-style-type: none"> <li>• Short circuit in GCON alarm harness</li> <li>• GCON alarm short circuit</li> <li>• GCON ECM</li> </ul>	GCON alarm inhibited.
<b>P009</b>	P009:DEVICEFAULT GCON ALARM:BAT+	Short circuit of the GCON alarm circuit to battery positive.	<ul style="list-style-type: none"> <li>• Short circuit in GCON alarm harness</li> <li>• GCON alarm short circuit</li> <li>• GCON ECM</li> </ul>	GCON alarm inhibited.
<b>P013</b>	P013:PWR FAULT PCON PWRET:BAT-	Short circuit of the PCON power return circuit to battery negative.	<ul style="list-style-type: none"> <li>• Short circuit in PCON power return harness</li> <li>• GCON ECM</li> </ul>	All functions inhibited.
<b>P015</b>	P015:PWR FAULT PCON PWRET:BAT+	Short circuit of the PCON power return circuit to battery positive.	<ul style="list-style-type: none"> <li>• Short circuit in PCON power return harness</li> <li>• GCON ECM</li> </ul>	All functions inhibited.
<b>P018</b>	018:PWR FAULT PCON POWER:BAT-	Short circuit of the PCON power circuit to battery negative.	<ul style="list-style-type: none"> <li>• Short circuit in PCON power harness</li> <li>• GCON ECM</li> </ul>	All functions inhibited.
<b>P019</b>	018:PWR FAULT PCON POWER:BAT+	Short circuit of the PCON power circuit to battery positive.	<ul style="list-style-type: none"> <li>• Short circuit in PCON power harness</li> <li>• GCON ECM</li> </ul>	All functions inhibited.

## Type "UXXX" Faults

DTC Number	Message on GCON LCD	Problem Description	Possible Causes	Failure Mode
<b>U001</b>	U001:SWITCHFAULT GCON MAIN FTN EN	Short circuit of the GCON main function enable switch at system startup.	• Short circuit of the GCON main function enable switch • GCON ECM	All GCON functions inhibited.
<b>U002</b>	U002:SWITCHFAULT GCON PLAT UP	Short circuit of the GCON up directional switch at system startup.	• Short circuit of the GCON up directional switch • GCON ECM	All GCON functions inhibited except platform down.
<b>U003</b>	U003:SWITCHFAULT GCON PLAT DOWN	Short circuit of the GCON down directional switch at system startup.	• Short circuit of the GCON down directional switch • GCON ECM	All GCON functions inhibited except platform up.
<b>U004</b>	U004:SWITCHFAULT GCON LCD UP	Short circuit of the GCON LCD scroll up switch at system startup.	• Short circuit of the GCON LCD scroll up switch • GCON ECM	All GCON LCD menu functions inhibited.
<b>U005</b>	U005:SWITCHFAULT GCON LCD DOWN	Short circuit of the GCON LCD scroll down switch at system startup.	• Short circuit of the GCON LCD scroll down switch • GCON ECM	All GCON LCD menu functions inhibited.
<b>U006</b>	U006:SWITCHFAULT GCON LCD ENTER	Short circuit of the GCON LCD enter switch at system startup.	• Short circuit of the GCON LCD enter switch • GCON ECM	All GCON LCD menu functions inhibited.
<b>U007</b>	U007:SWITCHFAULT GCON LCD ESCAPE	Short circuit of the GCON LCD escape switch at system startup.	• Short circuit of the GCON LCD escape switch • GCON ECM	All GCON LCD menu functions inhibited.
<b>U014</b>	U014:SWITCHFAULT PCON DRIVE EN	Short circuit of the PCON drive enable switch at system startup.	• Short circuit of the PCON drive enable switch • GCON ECM	All PCON drive and steer functions inhibited.
<b>U015</b>	U015:SWITCHFAULT PCON STEER LEFT	Short circuit of the PCON steer left switch at system startup.	• Short circuit of the PCON steer left switch • GCON ECM	All PCON drive and steer functions inhibited.
<b>U016</b>	U016:SWITCHFAULT PCON STEER RIGHT	Short circuit of the PCON steer right switch at system startup.	• Short circuit of the PCON steer right switch • GCON ECM	All PCON drive and steer functions inhibited.
<b>U017</b>	U017:SWITCHFAULT PCON HORN	Short circuit of the PCON horn switch at system startup.	• Short circuit of the PCON horn switch • GCON ECM	PCON horn switch function inhibited.
<b>U018</b>	U018:SWITCHFAULT PCON LO DRIV SPD	Short circuit of the PCON low drive speed switch at system startup.	• Short circuit of the PCON low drive speed switch • GCON ECM	The machine is limited to low drive speed.
<b>U019</b>	U019:SWITCHFAULT PCON LO LIFT SPD	Short circuit of the PCON low lift speed switch at system startup.	• Short circuit of the PCON low lift speed switch • GCON ECM	PCON platform up & down functions inhibited.

## Type "UXXX" Faults

DTC Number	Message on GCON LCD	Problem Description	Possible Causes	Failure Mode
<b>U020</b>	U020:SWITCHFAULT PCON HI LIFT SPD	Short circuit of the PCON high lift speed switch at system startup.	<ul style="list-style-type: none"> <li>• Short circuit of the PCON hi lift speed switch</li> <li>• GCON ECM</li> </ul>	PCON platform up & down functions inhibited.
<b>U021</b>	U021:SWITCHFAULT PCON UP	Short circuit of the PCON up directional switch at system startup.	<ul style="list-style-type: none"> <li>• Short circuit of the PCON up directional switch</li> <li>• GCON ECM</li> </ul>	PCON platform up function inhibited.
<b>U022</b>	U022:SWITCHFAULT PCON DOWN	Short circuit of the PCON down directional switch at system startup.	<ul style="list-style-type: none"> <li>• Short circuit of the PCON down directional switch</li> <li>• GCON ECM</li> </ul>	PCON platform down functions inhibited.
<b>U033</b>	U033:JSTICKFAULT OUT OF CAL RANGE	PCON drive joystick signal is outside acceptable calibration range at system startup.	<ul style="list-style-type: none"> <li>• PCON drive joystick is not in neutral position at startup</li> <li>• PCON joystick</li> <li>• GCON ECM</li> </ul>	All PCON drive and steer functions inhibited.
<b>U034</b>	U034:JSTICKFAULT OUT OF RANGE:HI	Short circuit of the PCON drive joystick signal to battery positive at system startup.	<ul style="list-style-type: none"> <li>• Short circuit of PCON drive joystick signal circuit</li> <li>• PCON joystick</li> <li>• GCON ECM</li> </ul>	All PCON drive and steer functions inhibited.
<b>U035</b>	U035:JSTICKFAULT OUT OF RANGE:LO	Short circuit of the PCON drive joystick signal to battery negative at system startup.	<ul style="list-style-type: none"> <li>• Short circuit of PCON drive joystick signal circuit</li> <li>• PCON joystick</li> <li>• GCON ECM</li> </ul>	All PCON drive and steer functions inhibited.
<b>U036</b>	U036:SWITCHFAULT GCON + PCON:ON	Mis-wiring or short circuit of GCON key switch.	<ul style="list-style-type: none"> <li>• Short circuit of the PCON drive enable switch</li> <li>• GCON ECM</li> </ul>	All functions inhibited.
<b>U037</b>	U037:SWITCHFAULT FOOTSW PRESSED	Foot switch pressed at machine startup.	<ul style="list-style-type: none"> <li>• Short circuit in the foot switch harness</li> <li>• Foot switch</li> <li>• GCON ECM</li> </ul>	All functions inhibited.
<b>U038</b>	U038:SWITCHFAULT FOOTSWITCH:BAT+	Mis-wiring or short circuit of foot switch to battery positive.	<ul style="list-style-type: none"> <li>• Short circuit in the foot switch harness</li> <li>• Foot switch</li> <li>• GCON ECM</li> </ul>	All functions inhibited.
<b>U039</b>	U039:SWITCHFAULT FOOTSW:OPEN/BAT-	Mis-wiring, open or short circuit of foot switch to battery negative.	<ul style="list-style-type: none"> <li>• Short circuit in the foot switch harness</li> <li>• Foot switch</li> <li>• GCON ECM</li> </ul>	All functions inhibited.
<b>U040</b>	U040:SWITCHFAULT FOOTSW:TIMEOUT	PCON deck switch pressed at machine startup.	<ul style="list-style-type: none"> <li>• Short circuit in the foot switch harness</li> <li>• Foot switch</li> <li>• GCON ECM</li> </ul>	All functions inhibited.

## Type "FXXX" Faults

DTC Number	Message on GCON LCD	Problem Description	Possible Causes	Failure Mode
<b>F003</b>	F003:SWITCHFAULT DOWN LIMIT1:BAT+	Short circuit of the down limit #1 switch at system startup.	<ul style="list-style-type: none"> <li>• Short circuit of the down limit switch circuit.</li> <li>• Down limit #1 switch short circuit</li> <li>• GCON ECM</li> </ul>	All functions inhibited except platform down.
<b>F005</b>	F005:SWITCHFAULT POTHOLE:BAT+	Short circuit of the pothole limit #1 switch at system startup.	<ul style="list-style-type: none"> <li>• Short circuit of the pothole switch circuit.</li> <li>• Pothole limit #1 switch short circuit</li> <li>• GCON ECM</li> </ul>	All functions inhibited except platform down as long as machine is in the elevated position. If machine is in stowed position, all functionality is resumed.
<b>F007</b>	F007:SWITCHFAULT CHASSISTILT:BAT+	Short circuit of the chassis digital tilt switch at system startup.	<ul style="list-style-type: none"> <li>• Short circuit of the chassis digital tilt switch circuit.</li> <li>• Chassis digital tilt switch short circuit</li> <li>• GCON ECM</li> </ul>	All functions inhibited except platform down as long as machine is in the elevated position. If machine is in stowed position, all functionality is resumed.
<b>F008</b>	F008:SENSORFAULT OVLD XDUCER:BAT+	Short circuit of the Platform Overload Transducer circuit to battery positive.	<ul style="list-style-type: none"> <li>• Short circuit in the transducer circuit.</li> <li>• Faulty pressure transducer</li> <li>• GCON ECM</li> </ul>	All functions inhibited.
<b>F009</b>	F009:SENSORFAULT OVLD XDUCER:BAT-	Short circuit of the Platform Overload Transducer circuit to battery negative.	<ul style="list-style-type: none"> <li>• Short circuit in the transducer circuit.</li> <li>• Faulty pressure transducer</li> <li>• GCON ECM</li> </ul>	All functions inhibited.
<b>F010</b>	F010:SENSORFAULT PLAT HEIGHT:BAT+	Short circuit of the Platform Height Sensor circuit to battery positive.	<ul style="list-style-type: none"> <li>• Short circuit in the platform height circuit.</li> <li>• Faulty platform height sensor</li> <li>• GCON ECM</li> </ul>	All functions inhibited except platform down as long as machine is in the elevated position. If machine is in stowed position, all functionality is resumed.
<b>F011</b>	F011:SENSORFAULT PLAT HEIGHT:BAT-	Short circuit of the Platform Height Sensor circuit to battery negative.	<ul style="list-style-type: none"> <li>• Short circuit in the platform height circuit.</li> <li>• Faulty platform height sensor</li> <li>• GCON ECM</li> </ul>	All functions inhibited except platform down as long as machine is in the elevated position. If machine is in stowed position, all functionality is resumed.
<b>F031</b>	F031:SWITCHFAULT OAC SWITCH:BAT+	Short circuit of the obstruction above chassis switch to battery positive.	<ul style="list-style-type: none"> <li>• Short circuit of the obstruction above chassis switch to battery positive.</li> <li>• GCON</li> </ul>	All functions inhibited.
<b>F034</b>	F034:SENSORFAULT OVLD:PLAT HEIGHT	Height Sensor settings are not calibrated correctly.	<ul style="list-style-type: none"> <li>• Short circuit in the level roll sensor circuit.</li> <li>• Faulty level sensor</li> <li>• GCON ECM</li> </ul>	All functions inhibited.
<b>F035</b>	F035:SENSORFAULT OVLD RANGE:LOW	Height Sensor setting is lower than calibrated stowed height.	<ul style="list-style-type: none"> <li>• Short circuit in the level roll sensor circuit.</li> <li>• Faulty level sensor</li> <li>• GCON ECM</li> </ul>	All functions inhibited.
<b>F036</b>	F036:SENSORFAULT OVLD RANGE:HI	Height Sensor setting is higher than calibrated maximum height.	<ul style="list-style-type: none"> <li>• Short circuit in the left front outrigger sensor circuit.</li> <li>• Faulty pressure transducer</li> <li>• GCON ECM</li> </ul>	All functions inhibited.
<b>F072</b>	F072:SENSORFAULT FUNCTION CUT B+	Function Cutout sensor B+ fault.	<ul style="list-style-type: none"> <li>• Short circuit in the left front outrigger sensor circuit.</li> <li>• Faulty pressure transducer</li> <li>• GCON ECM</li> </ul>	All functions inhibited.
<b>F073</b>	F073:SENSORFAULT DECK SENSOR B+	Power Deck sensor B+ fault.	<ul style="list-style-type: none"> <li>• Short circuit in the right front outrigger sensor circuit.</li> <li>• Faulty pressure transducer</li> <li>• GCON ECM</li> </ul>	All functions inhibited.

## Type "CXXX" Faults

DTC Number	Message on GCON LCD	Problem Description	Possible Causes	Failure Mode
<b>C001</b>	C001:GCON ECM FAULT TYPE 1	GCON ECM CRC check error.	<ul style="list-style-type: none"> <li>• Incorrect software file</li> <li>• GCON ECM internal failure</li> </ul>	All functions inhibited.
<b>C004</b>	C004:GCON ECM FAULT TYPE 4	GCON ECM master switch error.	<ul style="list-style-type: none"> <li>• Short circuit in the master switch circuit</li> <li>• GCON ECM</li> </ul>	All functions inhibited.
<b>C005</b>	C005:GCOM ECM FAULT TYPE 5	GCON ECM safety switch error.	<ul style="list-style-type: none"> <li>• Short circuit in the safety switch circuit</li> <li>• GCON ECM</li> </ul>	All functions inhibited.
<b>C006</b>	C006:GCON ECM FAULT TYPE 6	GCON input redundancy error.	<ul style="list-style-type: none"> <li>• Input conditioning circuit failure</li> <li>• GCON ECM</li> </ul>	All functions inhibited.
<b>C007</b>	C007:GCON ECM FAULT TYPE 7	GCON ECM inter-processor communication error.	<ul style="list-style-type: none"> <li>• Incorrectly programmed device</li> <li>• Error in loading software device</li> <li>• GCON ECM</li> </ul>	All functions inhibited.
<b>C011</b>	C011:PCON ECM FAULT FAULT TYPE 11	PCON ECM check failure.	<ul style="list-style-type: none"> <li>• PCON ECM</li> </ul>	All functions inhibited.
<b>C021</b>	C021:PCON NOT DETECTED	PCON not detected error.	<ul style="list-style-type: none"> <li>• PCON is missing</li> <li>• Communication bus failure</li> <li>• GCON or PCON ECM</li> </ul>	All functions inhibited.
<b>C023</b>	C023:MACHINE MODEL FAULT	Discrepancy between model detected and model programmed.	<ul style="list-style-type: none"> <li>• Incorrect machine model programmed</li> <li>• GCON or PCON ECM</li> </ul>	All functions inhibited.
<b>C025</b>	C025:SYSTEMFAULT PLAT OVLD:NOCAL	Platform overload system not calibrated.	<ul style="list-style-type: none"> <li>• Platform overload system not calibrated</li> <li>• GCON or PCON ECM</li> </ul>	All functions inhibited.
<b>C028</b>	C028: SERVICE OVERRIDE MODE ON	Machine is in service override mode.	<ul style="list-style-type: none"> <li>• Machine programmed for use in service override mode.</li> </ul>	All functions inhibited except for down function and up function. PI can be elevated once, with the maximum elevate time of X seconds. Elevate time X, depends on machine model.

## Schematics



### Observe and Obey:

- Troubleshooting and repair procedures shall be completed by a person trained and qualified on the repair of this machine
- Immediately tag and remove from service a damaged or malfunctioning machine.
- Repair any machine damage or malfunction before operating the machine.

### Before Troubleshooting:

- Read, understand and obey the safety rules and operating instructions in the appropriate operator's manual on your machine.
- Be sure that all necessary tools and test equipment are available and ready for use.

### About This Section

There are two groups of schematics in this section.

#### Electrical Schematics

##### **⚠ WARNING**

Electrocution/burn hazard. Contact with electrically charged circuits could result in death or serious injury. Remove all rings, watches and other jewelry.

#### Hydraulic Schematics

##### **⚠ WARNING**

Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

## Electrical Component and Wire Color Legends

ELECTRICAL COMPONENT LEGEND	
Item	Description
B5	Batteries
	B5 = Battery Pack 24V DC, 4 each @ 6V DC
C	Connector
	C1 = Anderson Connector C2 = PCON Cable Connector C3 = PCON Coil Cord Connector C4 = Power Control (J1) C5 = Sensors & Switches (J3) C6 = Function Manifold (J2) C7 = Sensor Power Bus C8 = Sensor Ground Bus C9 = Pot Hole Limit Switch C10 = Down Limit Switch C11 = Level Sensor C12 = Function Manifold Ground Bus C13 = Drive Reverse Coil C14 = Drive Forward Coil C15 = Steer Right Coil C16 = Steer Left Coil C17 = Platform Up Coil C18 = Platform Down Coil C21 = Load Sense Ground Bus C22 = Parallel Coil C25 = Powered Extension Deck (J4) (option) C41 = Platform Control Bus C43 = Key Switch, Platform Mode C44 = Key Switch, Emergency Stop C45 = Automotive Style Horn + C46 = Emergency Stop C47 = GCON Alarm + C48 = Circuit Breaker, MTR V+ C49 = Emergency Stop, ECM Driver V+ C50 = Circuit Breaker, ECM Driver V+ C51 = Key Switch, Ground Mode C52 = GCON Alarm – C53 = Automotive Style Horn –, (option) C77 = Selector Switch, Emergency Stop (option) C86 = Extension Deck Sensors, V+ C87 = Powered Extension Deck Limit Switch (option) C88 = Powered Extension Deck Manifold Ground Bus (option) C89 = Powered Extension Deck Enable Coil (option) C90 = Powered Extension Deck Extend Coil (option) C91 = Powered Extension Deck Retract Coil (option) C92 = Extension Deck Cable Connector C93 = Front Entry Gate Proximity Switch C95 = Rear Entry Gate Proximity Switch C77 = Foot Switch Cable (option) C102 = Foot Switch (option)


ELECTRICAL COMPONENT LEGEND cont.	
Item	Description
CB2	Circuit Breaker, 7A
D	Diode
	D1 = Motor Controller Enable -, 3A D2 = Motor Controller Enable +, 3A
E	Enclosure
	EN1 = Platform Control Box EN4 = AC Outlet Box
F6	Fuse, 275A
FB	Flashing Beacon (option)
FS1	Foot Switch (option)
GND	Ground Stud
H	Horn or Alarm
	H1 = Horn or Alarm H2 = Automotive Style Horn (option) H5 = Multifunction Alarm
J	Connector Plug
	J1 = Power Control (U5) J2 = Function Manifold (U5) J3 = Sensors & Switches (U5) J4 = Outriggers (U5) GS-3232 J5 = PCON Coil Cord to Platform Controls PC Board J6 = PCON Emergency Stop & Alarm to Platform Controls PC Board J7 = Joystick to Platform Controls PC Board

## Electrical Component and Wire Color Legends


ELECTRICAL COMPONENT LEGEND cont.	
Item	Description
JC9	Joystick Controller
K1	Contactor, Motor Controller Power, N.O.H.C.
KS1	KS1 = Key Switch KS2 = Keyless Selector Switch
LS	Limit Switch
	LS6 = Platform Down
	LS7 = Pothole
	LS8 = Pothole
	LS29 = Extension Deck
	LS30 = Quick disconnect (no charger option)
M5	Hydraulic Power Unit
N.C.	Normally Closed
N.C.H.O	Normally Closed Held Open
N.O.H.C.	Normally Open Held Closed
P	Power Switch
	P1 = Emergency Stop Button at Ground Controls P2 = Emergency Stop Button at Platform Controls
PX	Proximity Switch
	PX3 = Front Gate PX4 = Rear Gate
Q21	Quick disconnect (no charger option)
R30	Resistor, 20 Ohm, 10W
S7	Sensor
U	Electronic Component
	U3 = PCON Printed Circuit Board U5 = Electronic Control Module U6 = Motor Controller U9 = Battery Charger U13 = Voltage Inverter (option)
Y	Valve Coil
	Y1 = Parallel
	Y3 = Steer Right
	Y4 = Steer Left
	Y5 = Drive Reverse
	Y6 = Drive Forward
	Y7 = Platform Down
	Y8 = Platform Up
	Y10 = Extend, Powered Extension Deck (option)
	Y11 = Retract, Powered Extension Deck (option)
	Y52 = Enable, Powered Extension Deck (option)

WIRE COLOR LEGEND	
Color	Description
BK	Black
BK/RD	Black/Red
BL	Blue
BL/BK	Blue/Black
BL/OR	Blue/Orange
BL/WH	Blue/White
BR	Brown
GR	Green
GR/BK	Green/Black
GR/WH	Green/White
GR/YL	Green/Yellow
LB	Light Blue
OR	Orange
OR/BK	Orange/Black
OR/RD	Orange/Red
OR/WH	Orange/White
RD	Red
RD/BK	Red/Black
RD/WH	Red/White
WH	White
WH/BK	White/Black
YL	Yellow


## Wiring Diagram Ground Controls

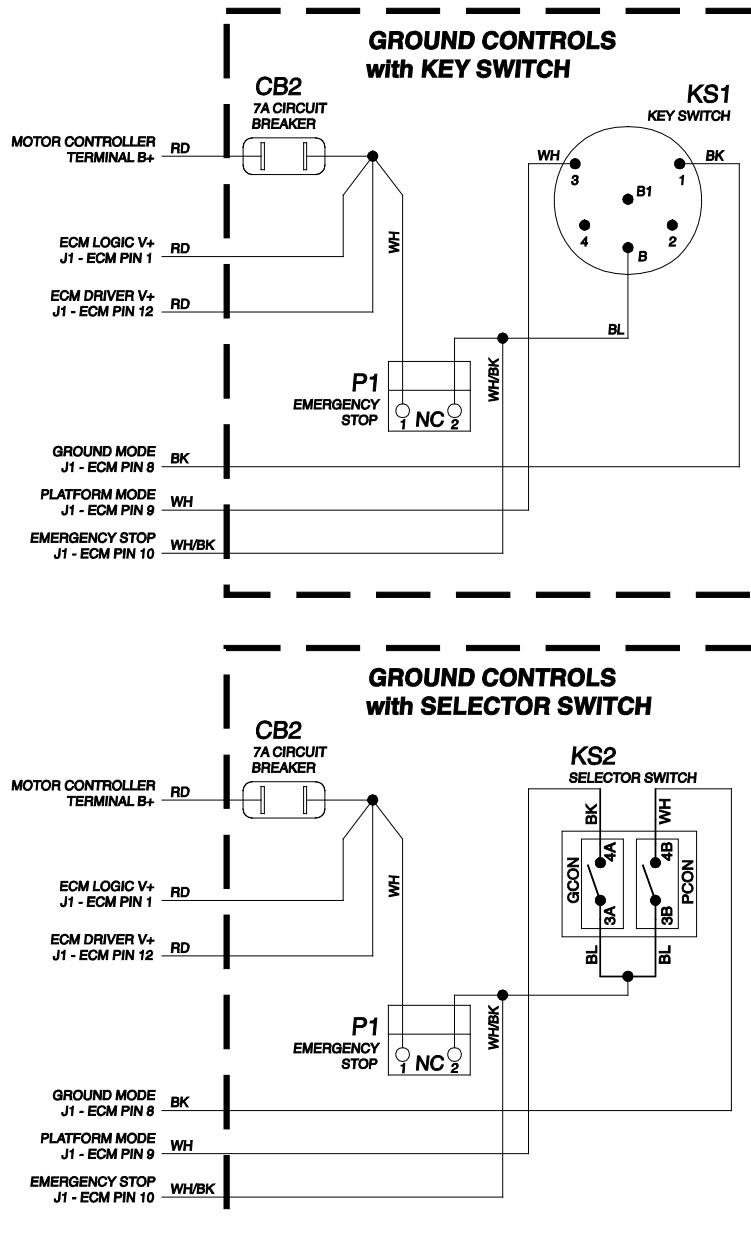

## Wiring Diagram Platform Controls

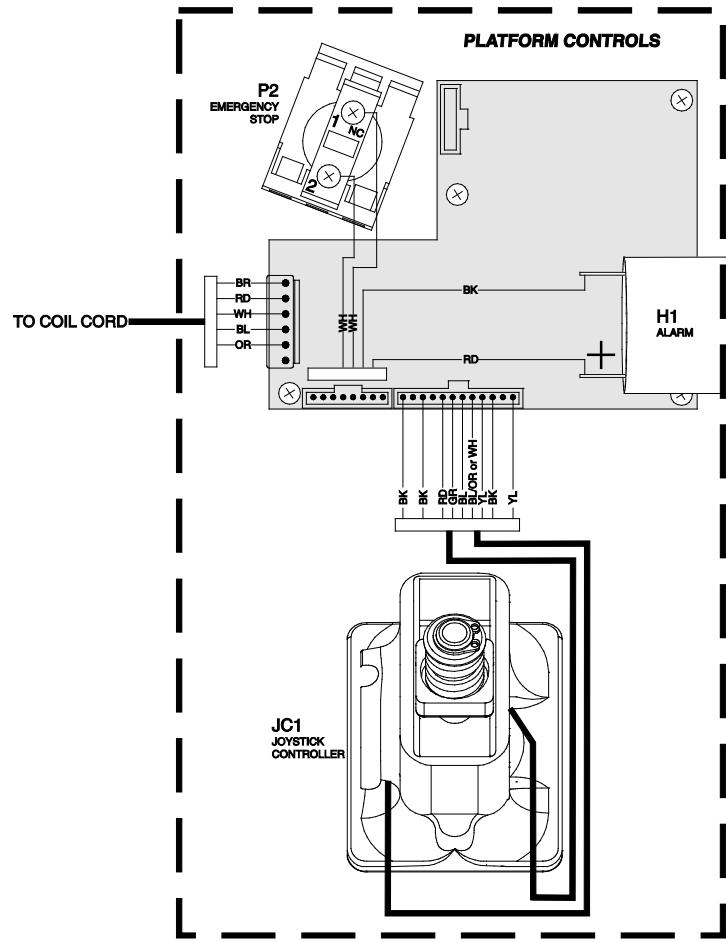


## Limit Switch Legend

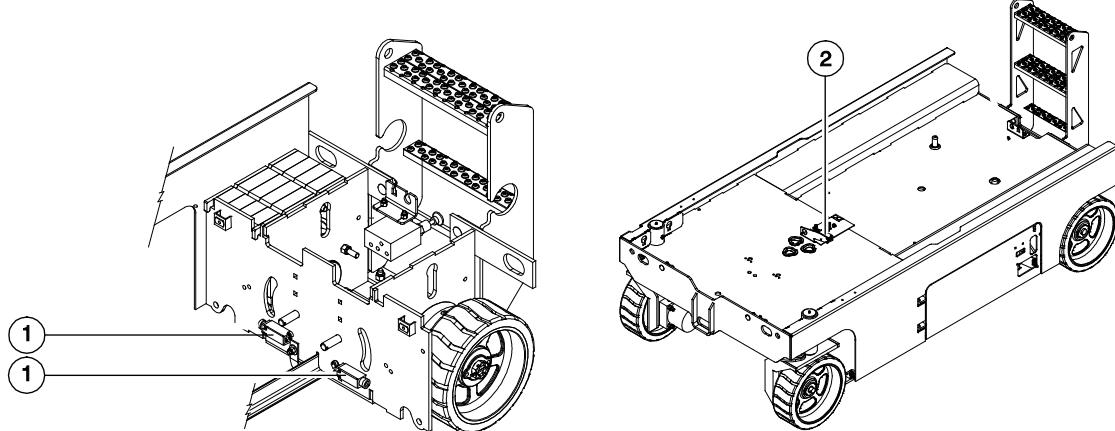


Limit Switch Legend












- 1 pothole switches LS7, LS8
- 2 down limit switch LS6
- 3 quick disconnect limit switch LS30  
(no charger option)
- 4 powered extension deck LS29 (option)
- 5 front gate PX3 (steer end)
- 6 rear gate PX4 (non-steer end)

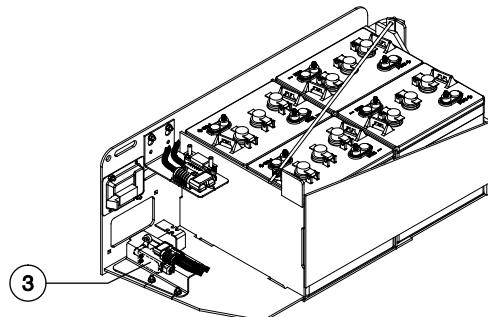

## Limit Switch Legend

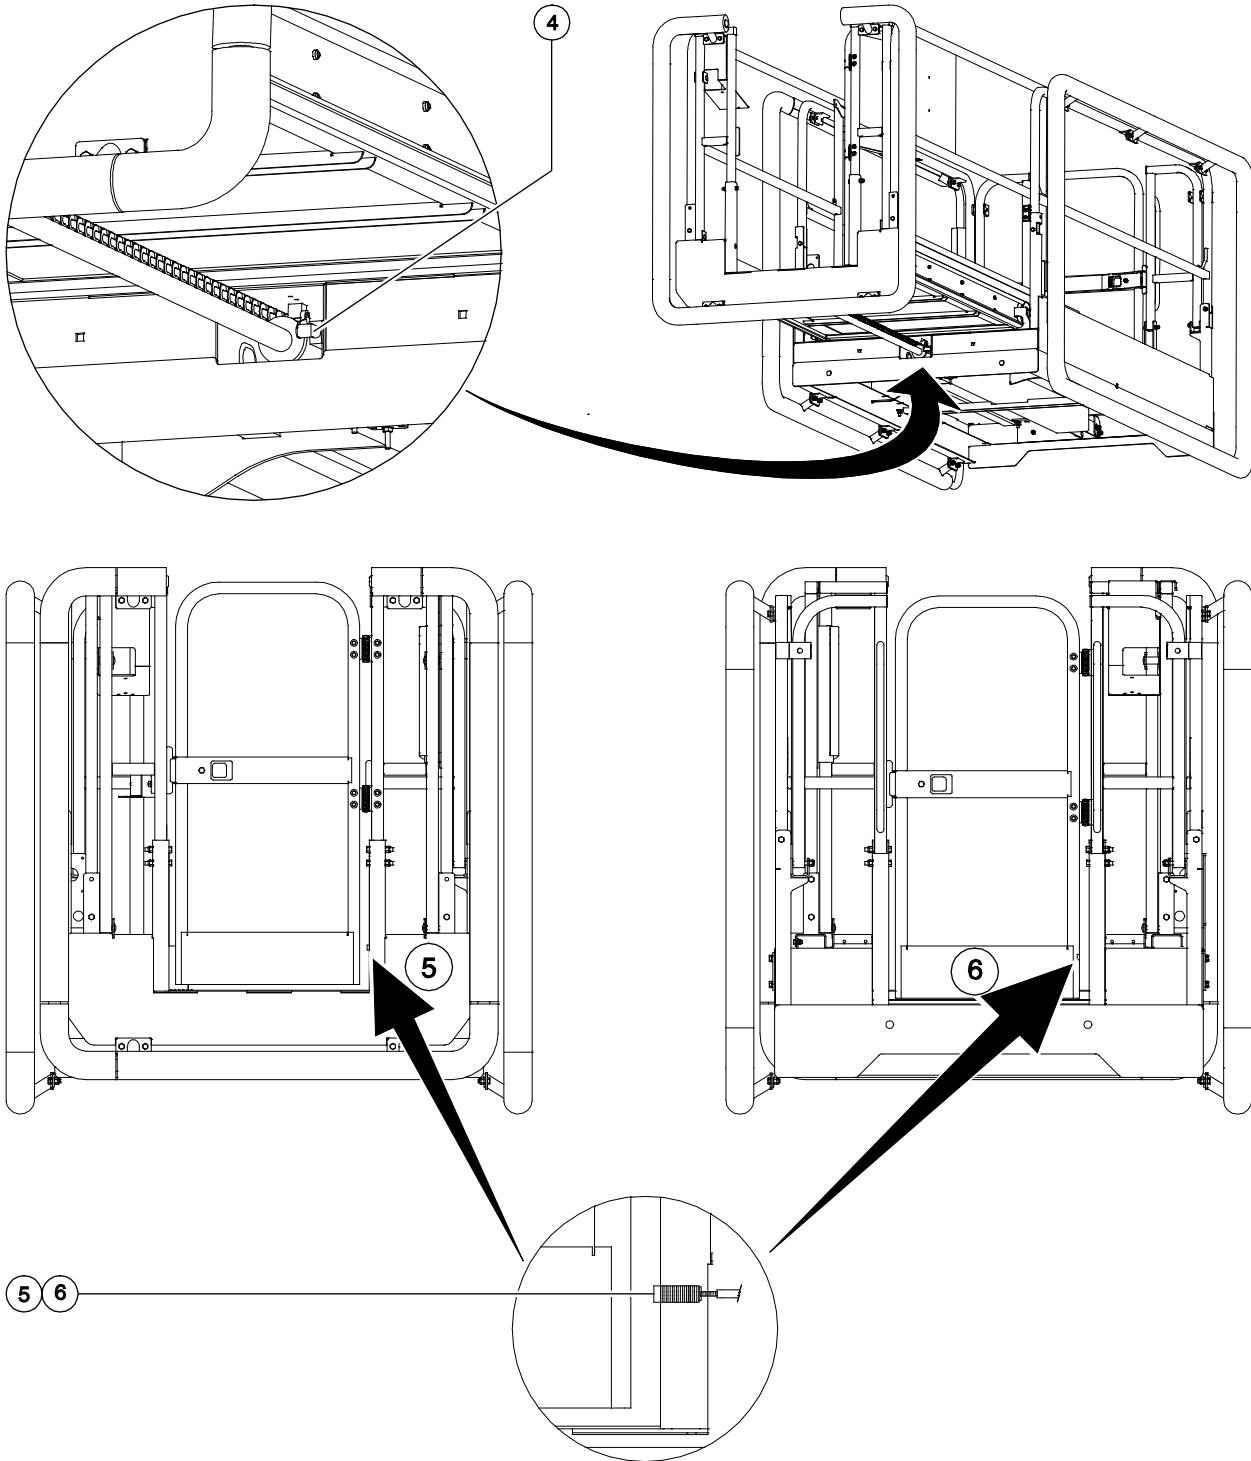


## Electrical Symbol Legend

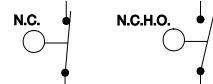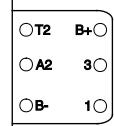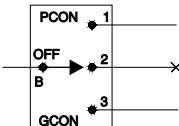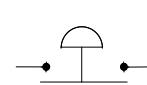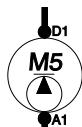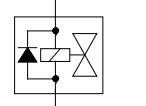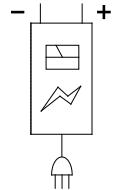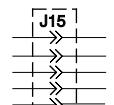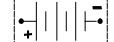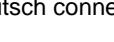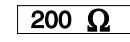 Wire with description or color	 Limit Switch	 Motor controller	 Key switch
 Circuits crossing no connection	 Emergency Stop button	 Motor	 Solenoid valve with diode
 Diode	 Circuit breaker	 Battery charger	 Level sensor
 Circuit connection	 Fuse	 6V or 12V DC battery	 Deutsch connector
 Resistor	 Contactor	 Horn or alarm	 Flashing beacon
 Platform height sensor	 Pressure transducer		


## Hydraulic Symbols Legend

Hydraulic cylinder	Variable speed motor	Pressure transducer	Solenoid operated 2 position 4 way directional valve
Relief valve	Bi-directional motor	Solenoid operated 2 position 2 way blocking valve normally open	Solenoid operated 2 position 4 way directional valve
Priority flow regulator	Brake	Solenoid operated 2 position 2 way valve normally closed	Proportional solenoid operated 2 position 2 way directional valve normally closed
Accumulator	Check valve	Solenoid operated 2 position 2 way directional valve normally closed	Solenoid operated 3 position 5 way directional valve
Fixed displacement pump	Shuttle valve	Solenoid operated 3 position 4 way directional valve	Solenoid operated 3 position 4 way directional valve
Filter	Orifice with size		


## Hydraulic Component Reference

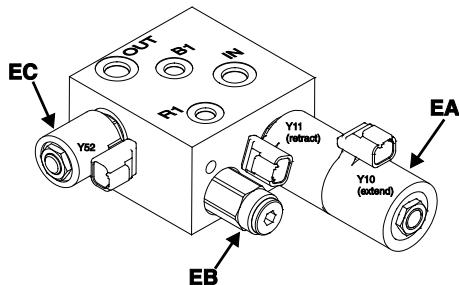

Powered extension deck manifold

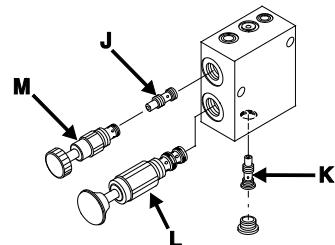


Brake release manifold

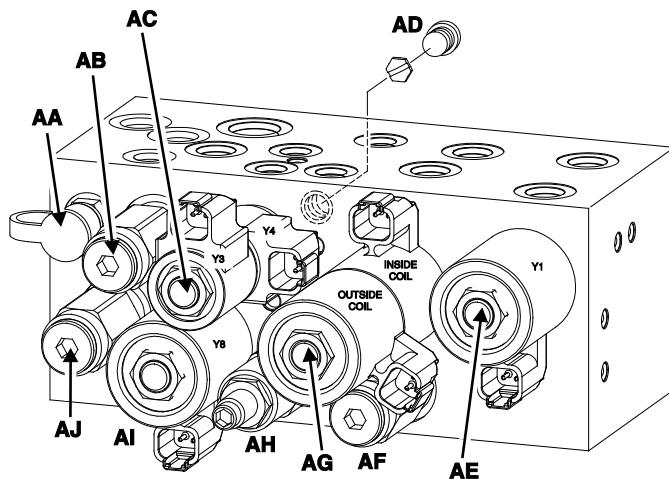


Function manifold

**Electrical Schematic • GS-2646 AV and GS-2646 AV35**  
**(with manual extension deck) (from GS4612A-110000)**

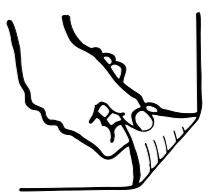


## Electrical Schematic • GS-2646 AV and GS-2646 AV35


(with manual extension deck) (from GS4612A-110000)

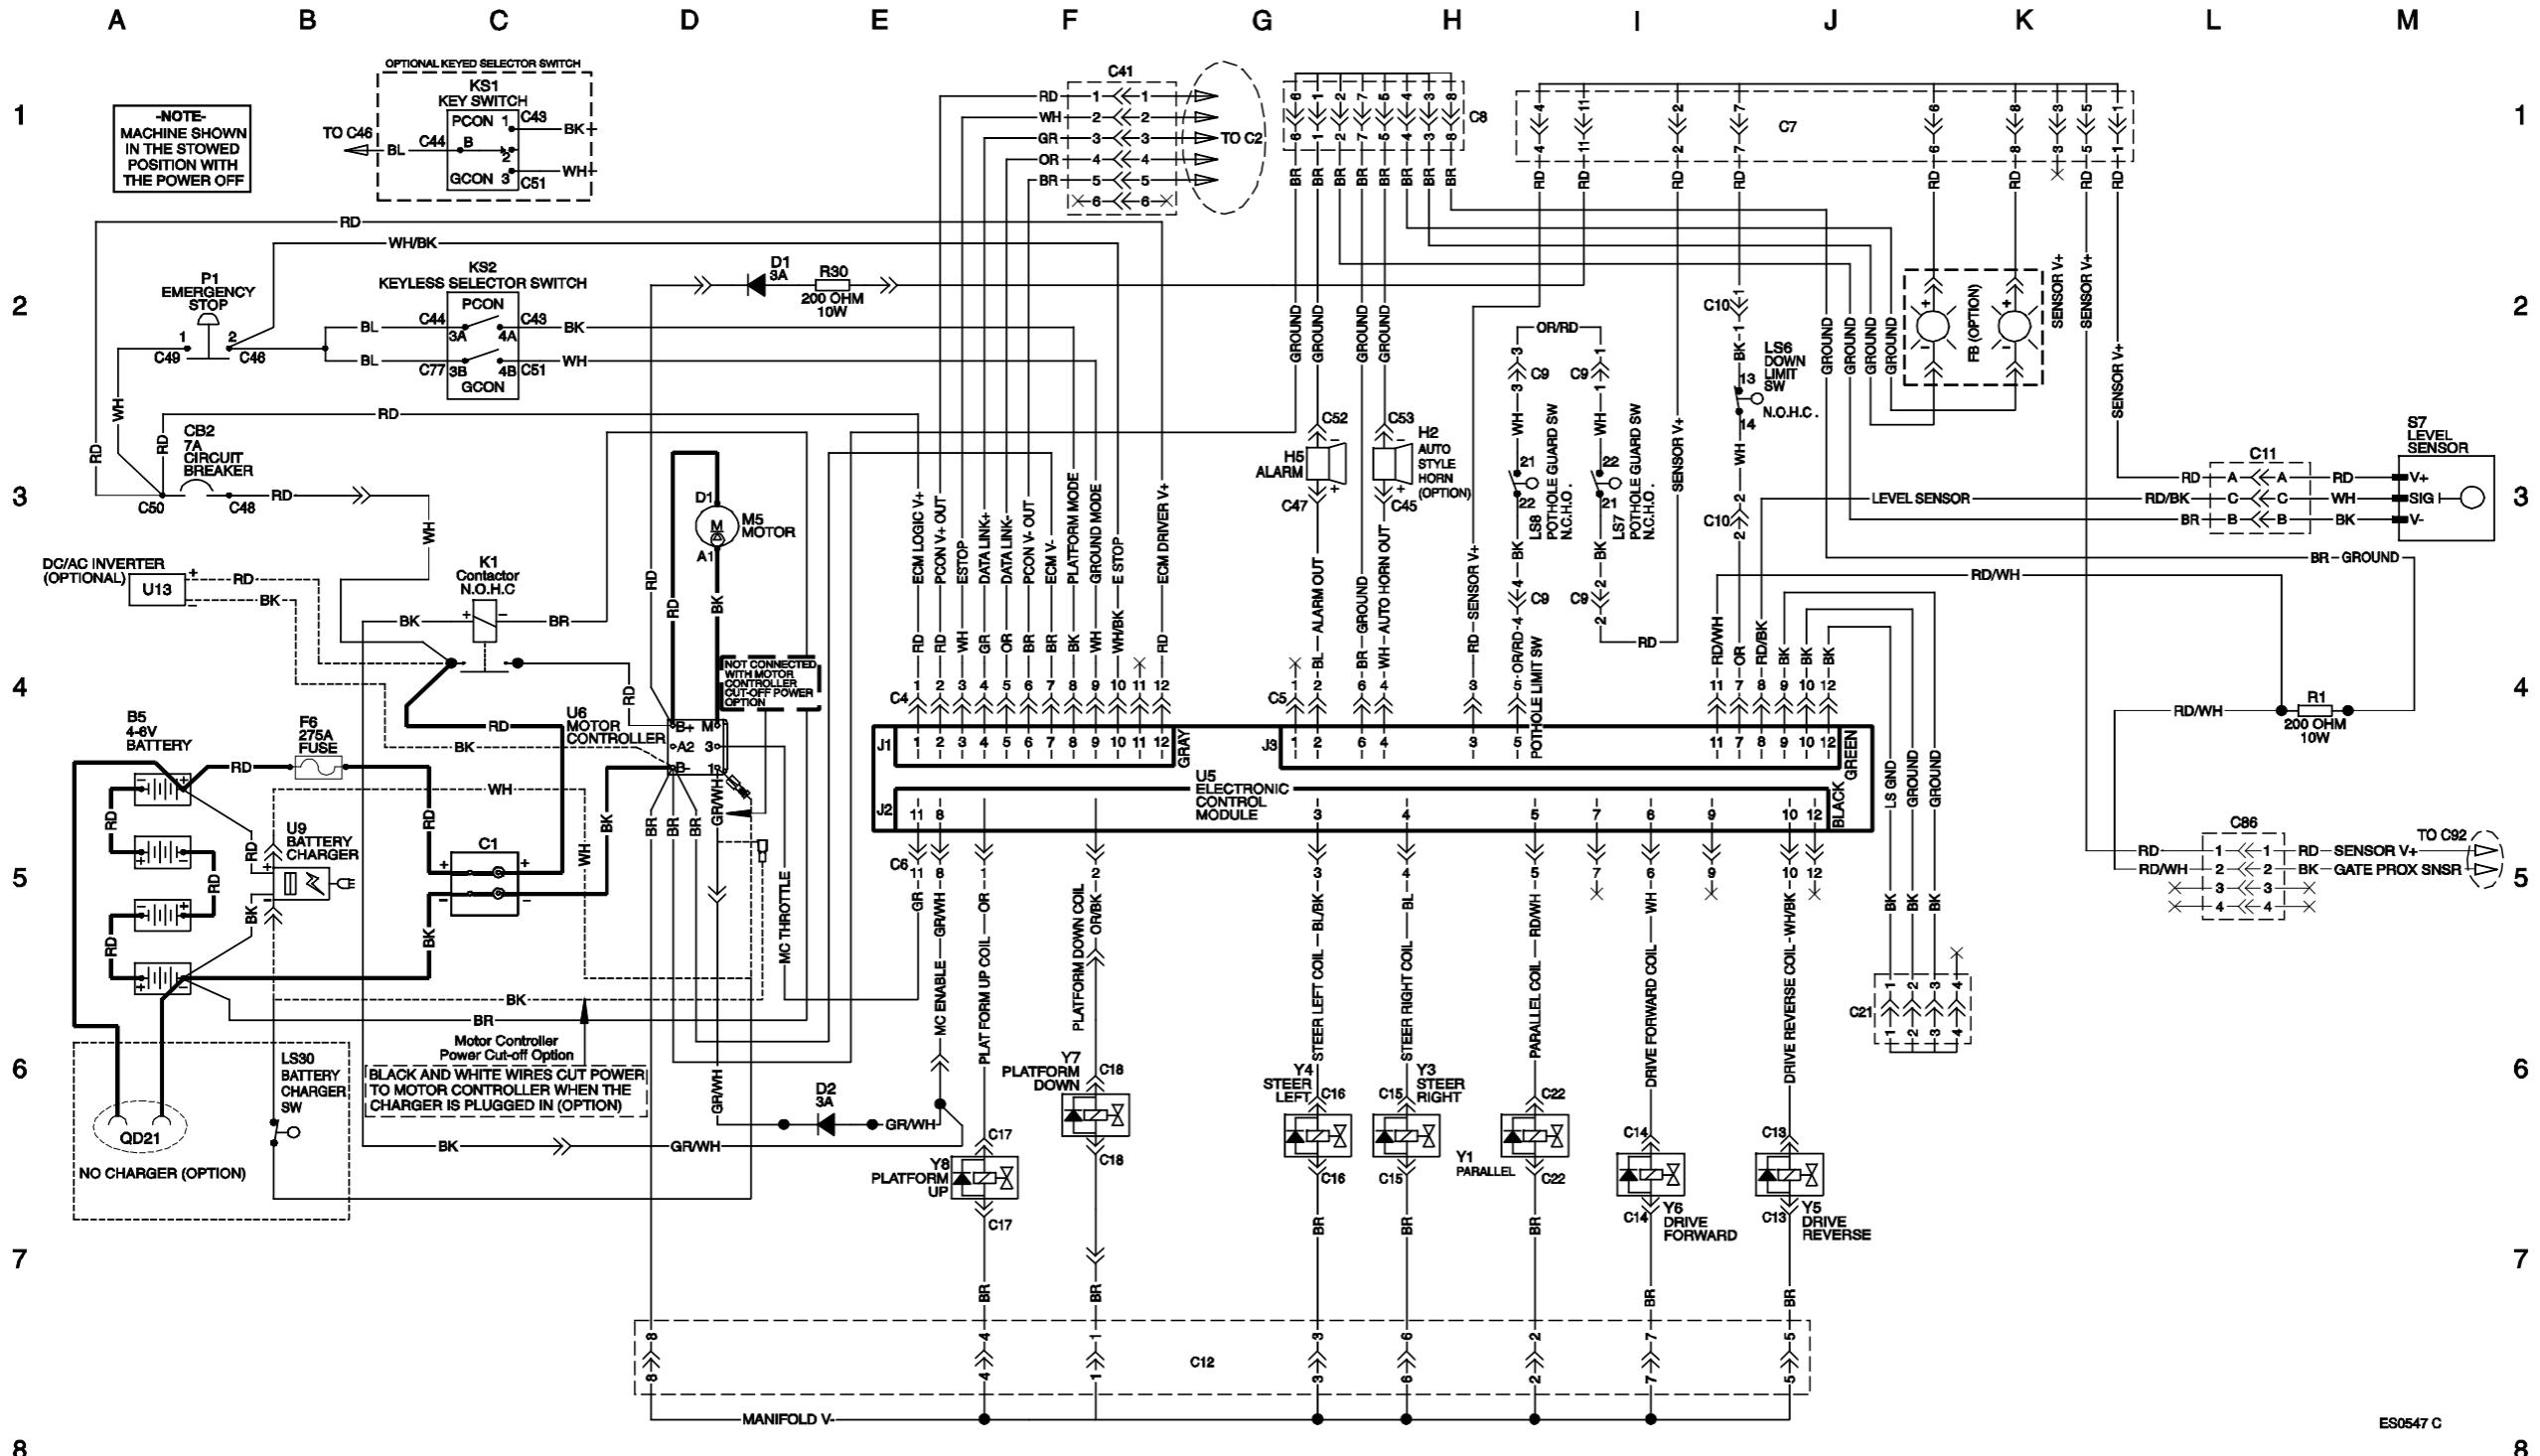


**Electrical Schematic • GS-2646 AV and GS-2646 AV35**  
 (with manual extension deck) (from GS4612A-110000)

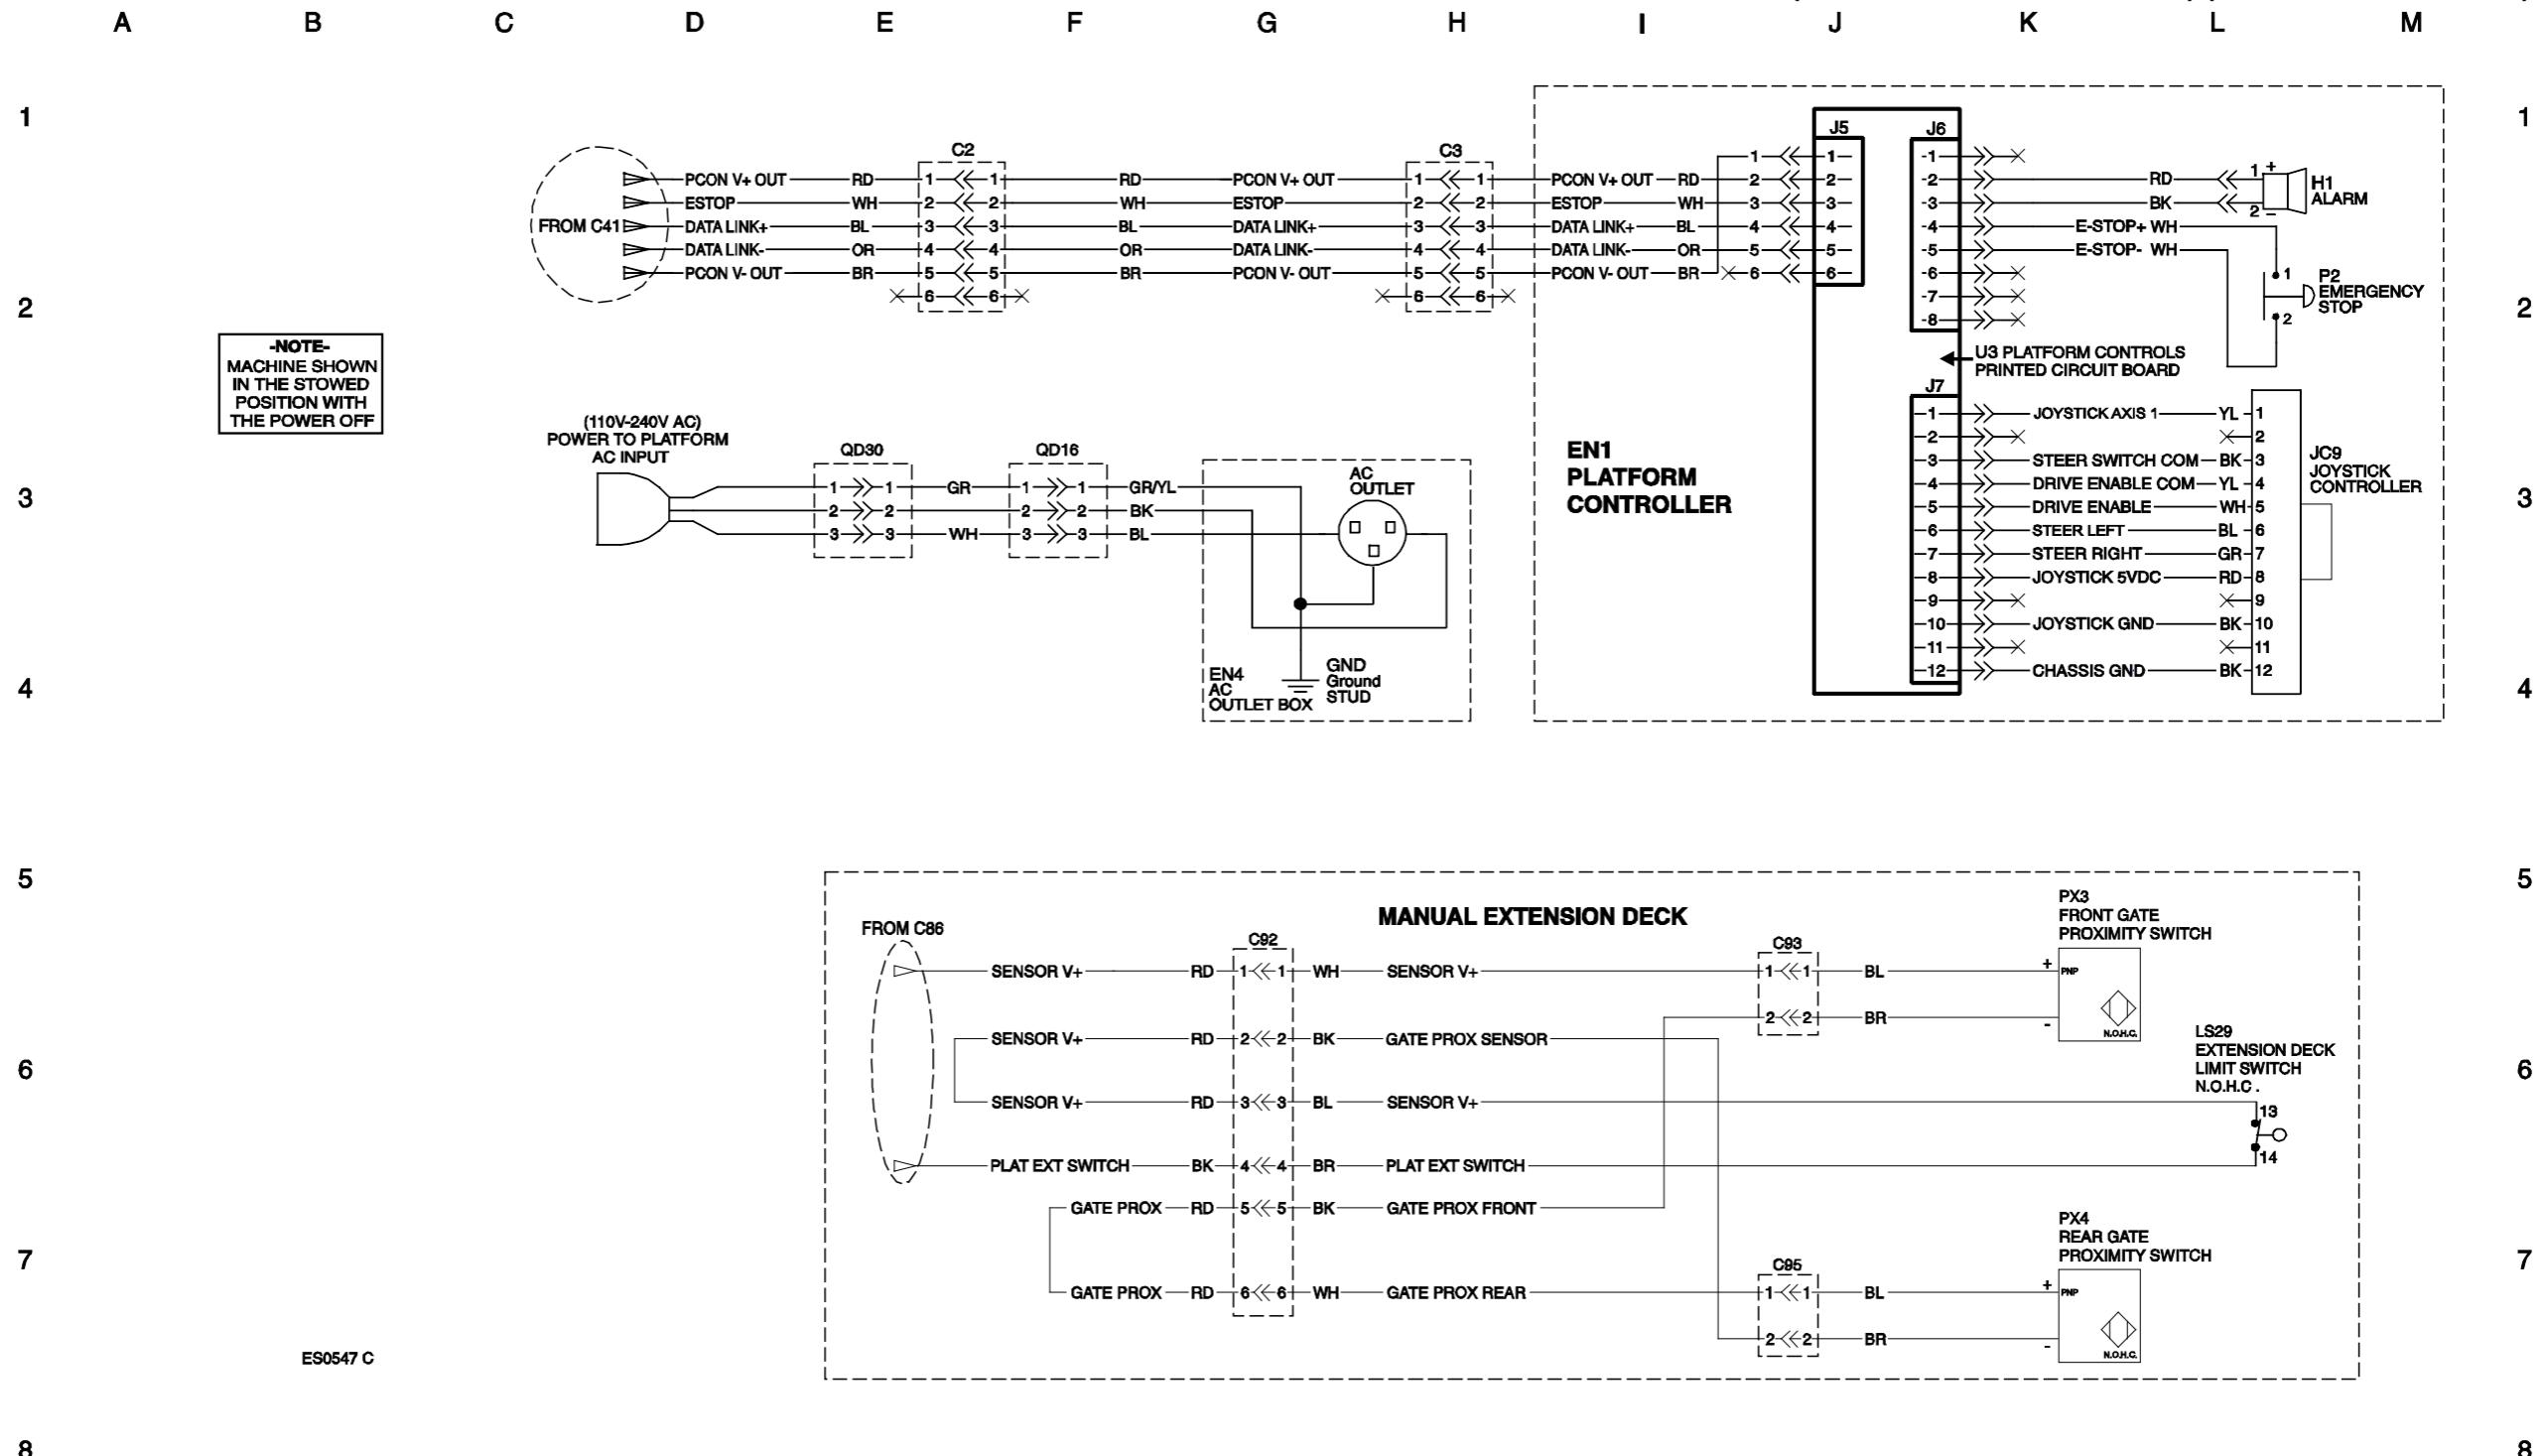


**Electrical Schematic • GS-2646 AV and GS-2646 AV35**  
(with manual extension deck) (from GS4612A-110000)

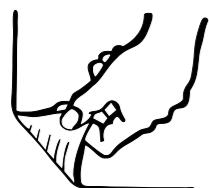


**Electrical Schematic • GS-2646 AV and GS-2646 AV35**  
**(with powered extension deck) (from serial number GS4612A-110000)**

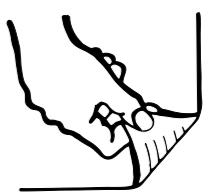


# **Electrical Schematic • GS-2646 AV and GS-2646 AV35 (with powered extension deck) (from serial number GS4612A-110000)**

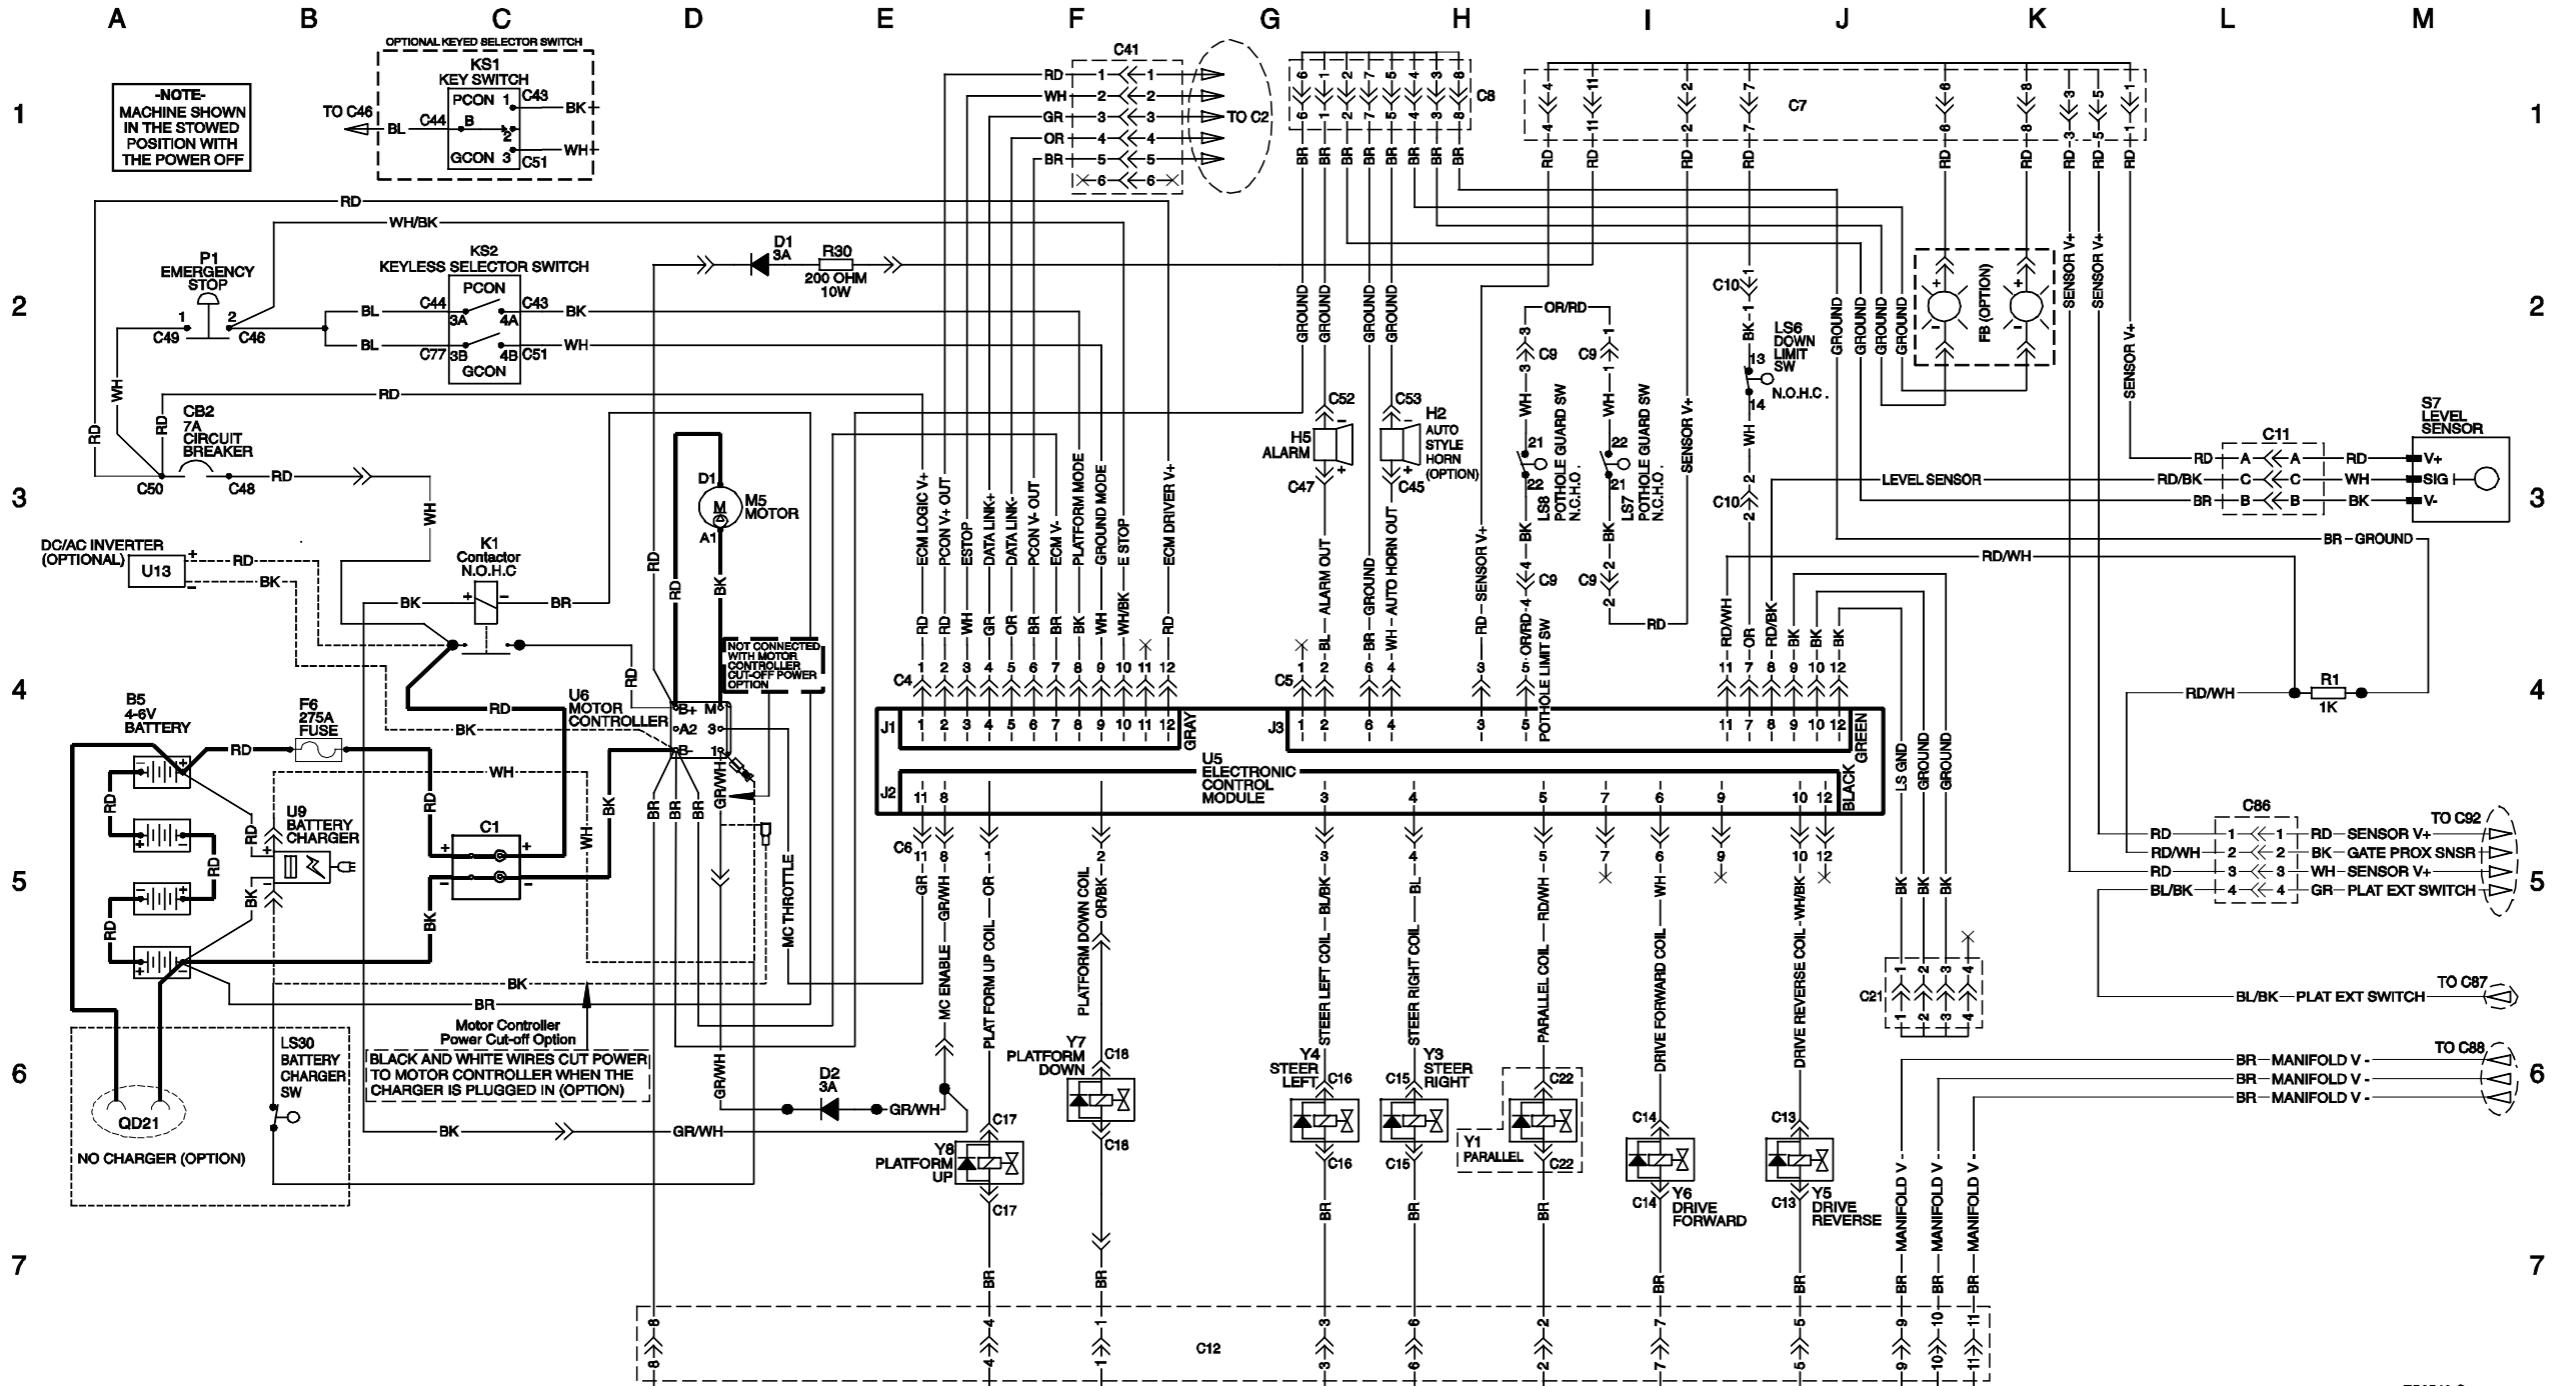


**Electrical Schematic • GS-2646 AV and GS-2646 AV35  
(with powered extension deck) (from serial number GS4612A-110000)**

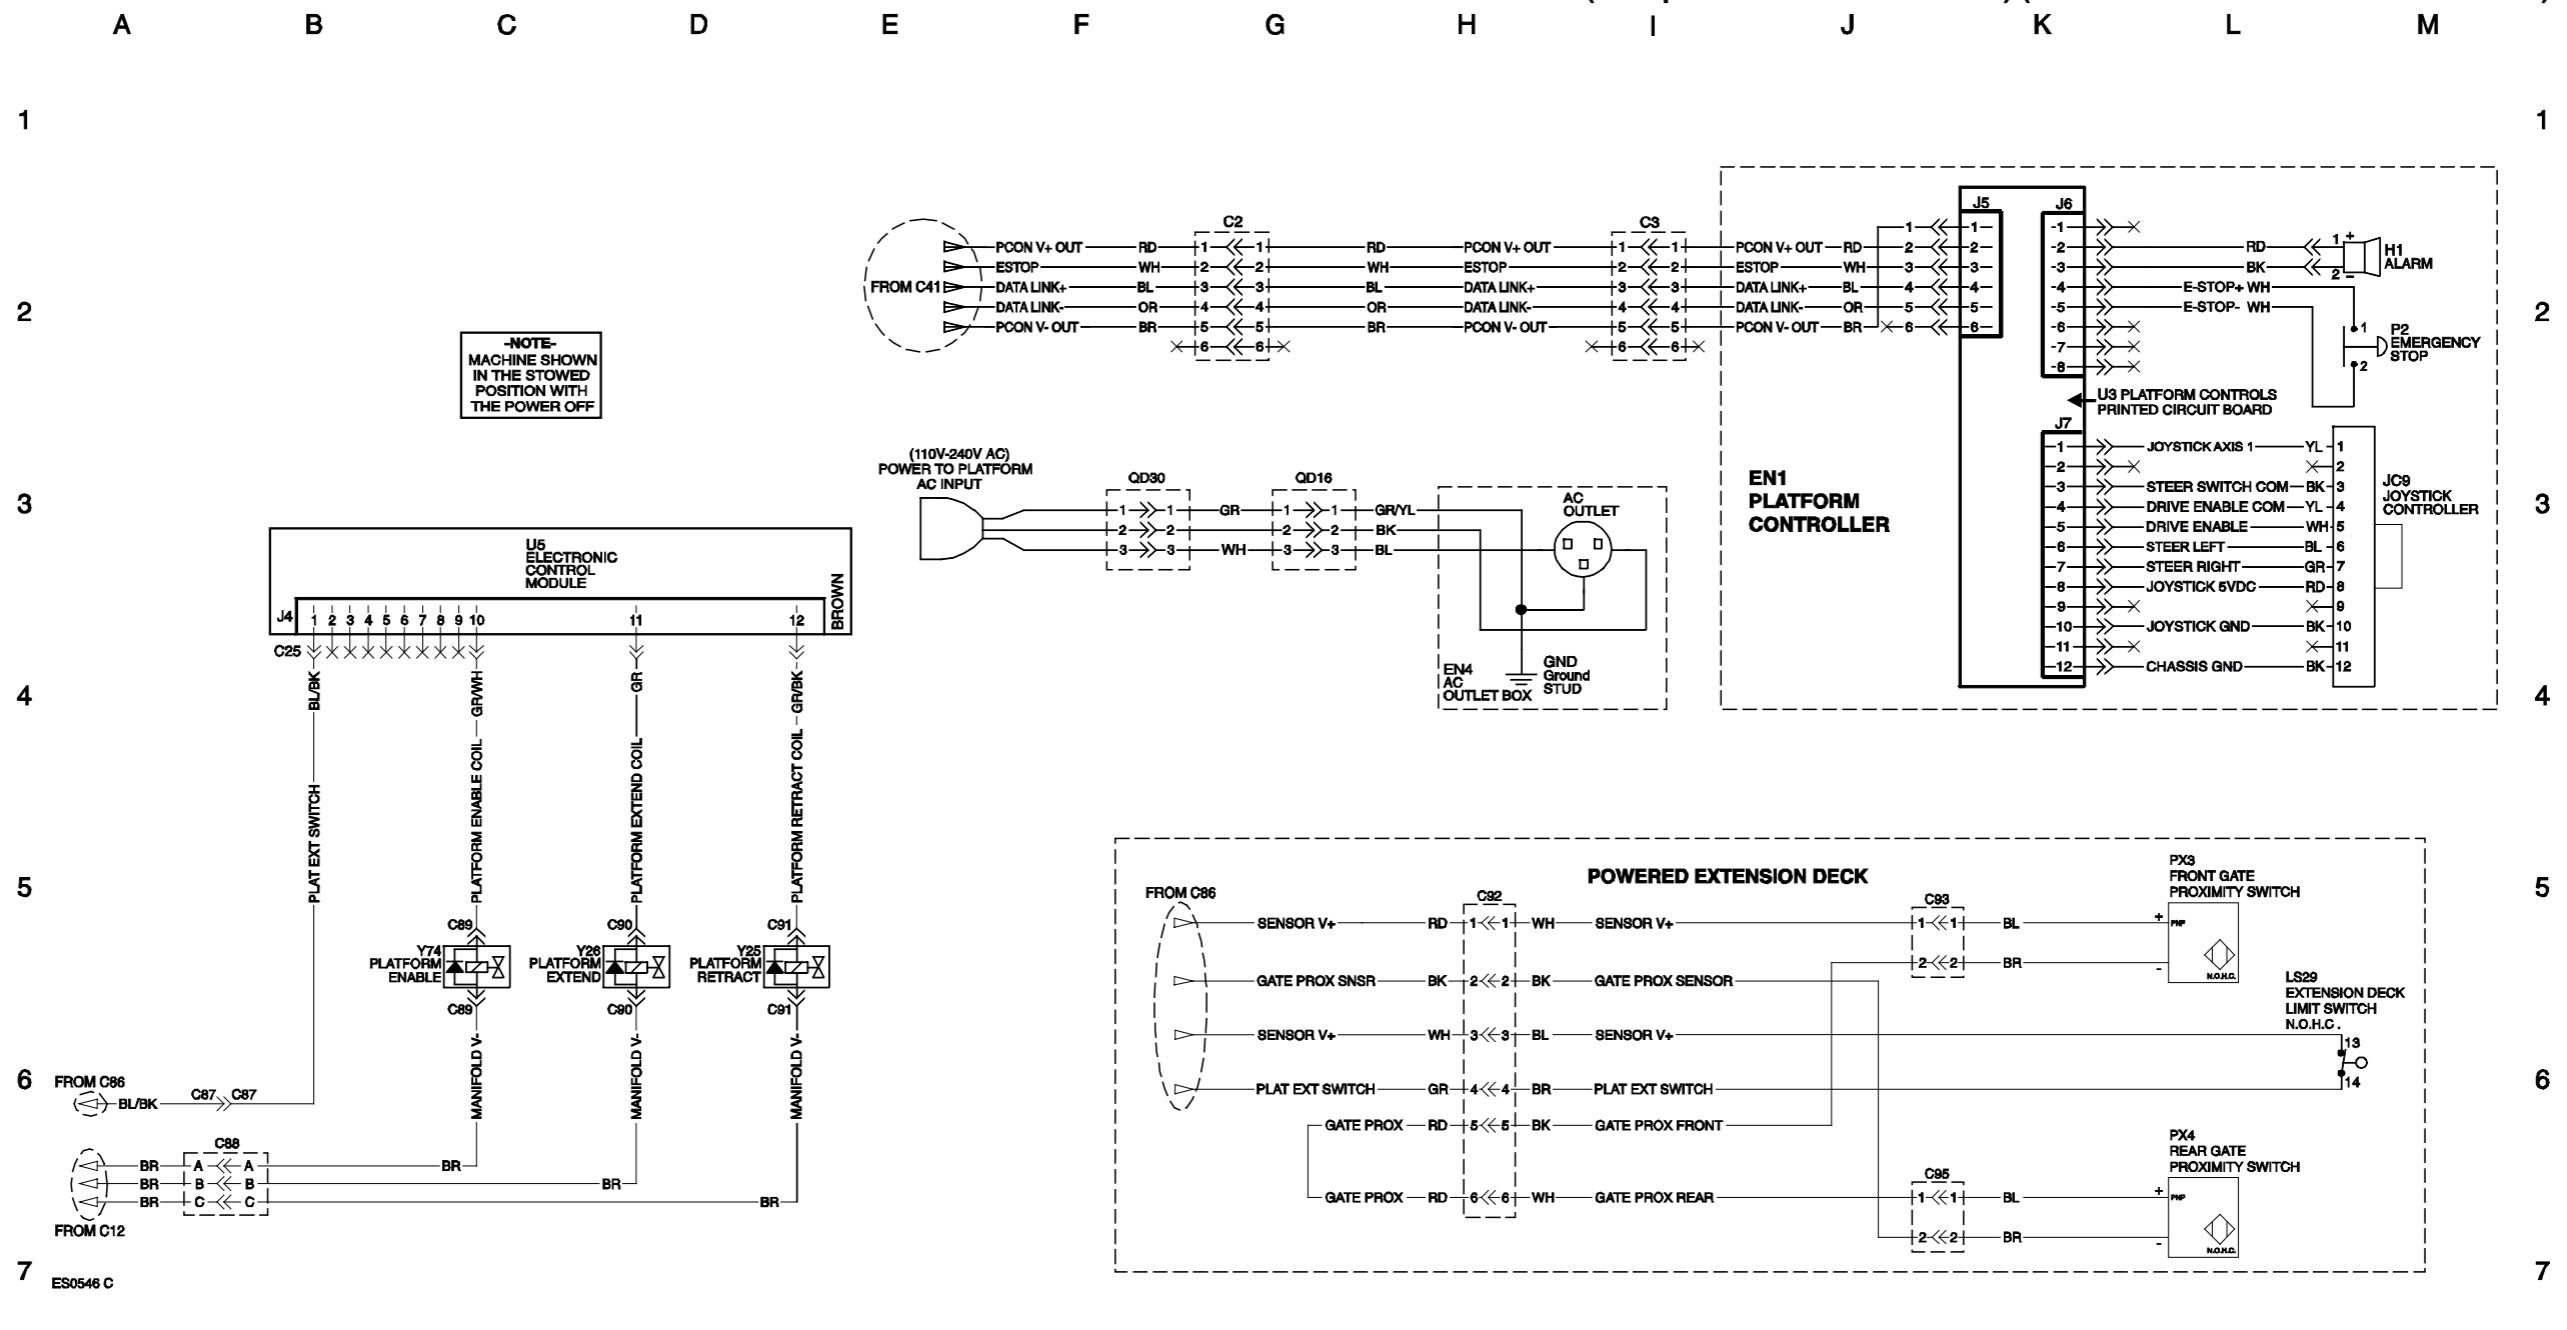

**Electrical Schematic • GS-2646 AV and GS-2646 AV35**  
(with powered extension deck) (from serial number GS4612A-110000)

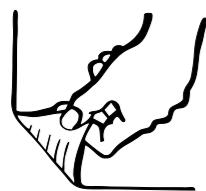


**Electrical Schematic • GS-2646 AV and GS-2646 AV35**  
**(foot switch option) (from serial number GS4612A-110000)**

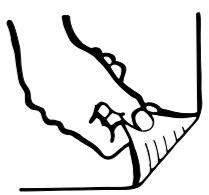

## Electrical Schematic • GS-2646 AV and GS-2646 AV35


(foot switch option) (from serial number GS4612A-110000)

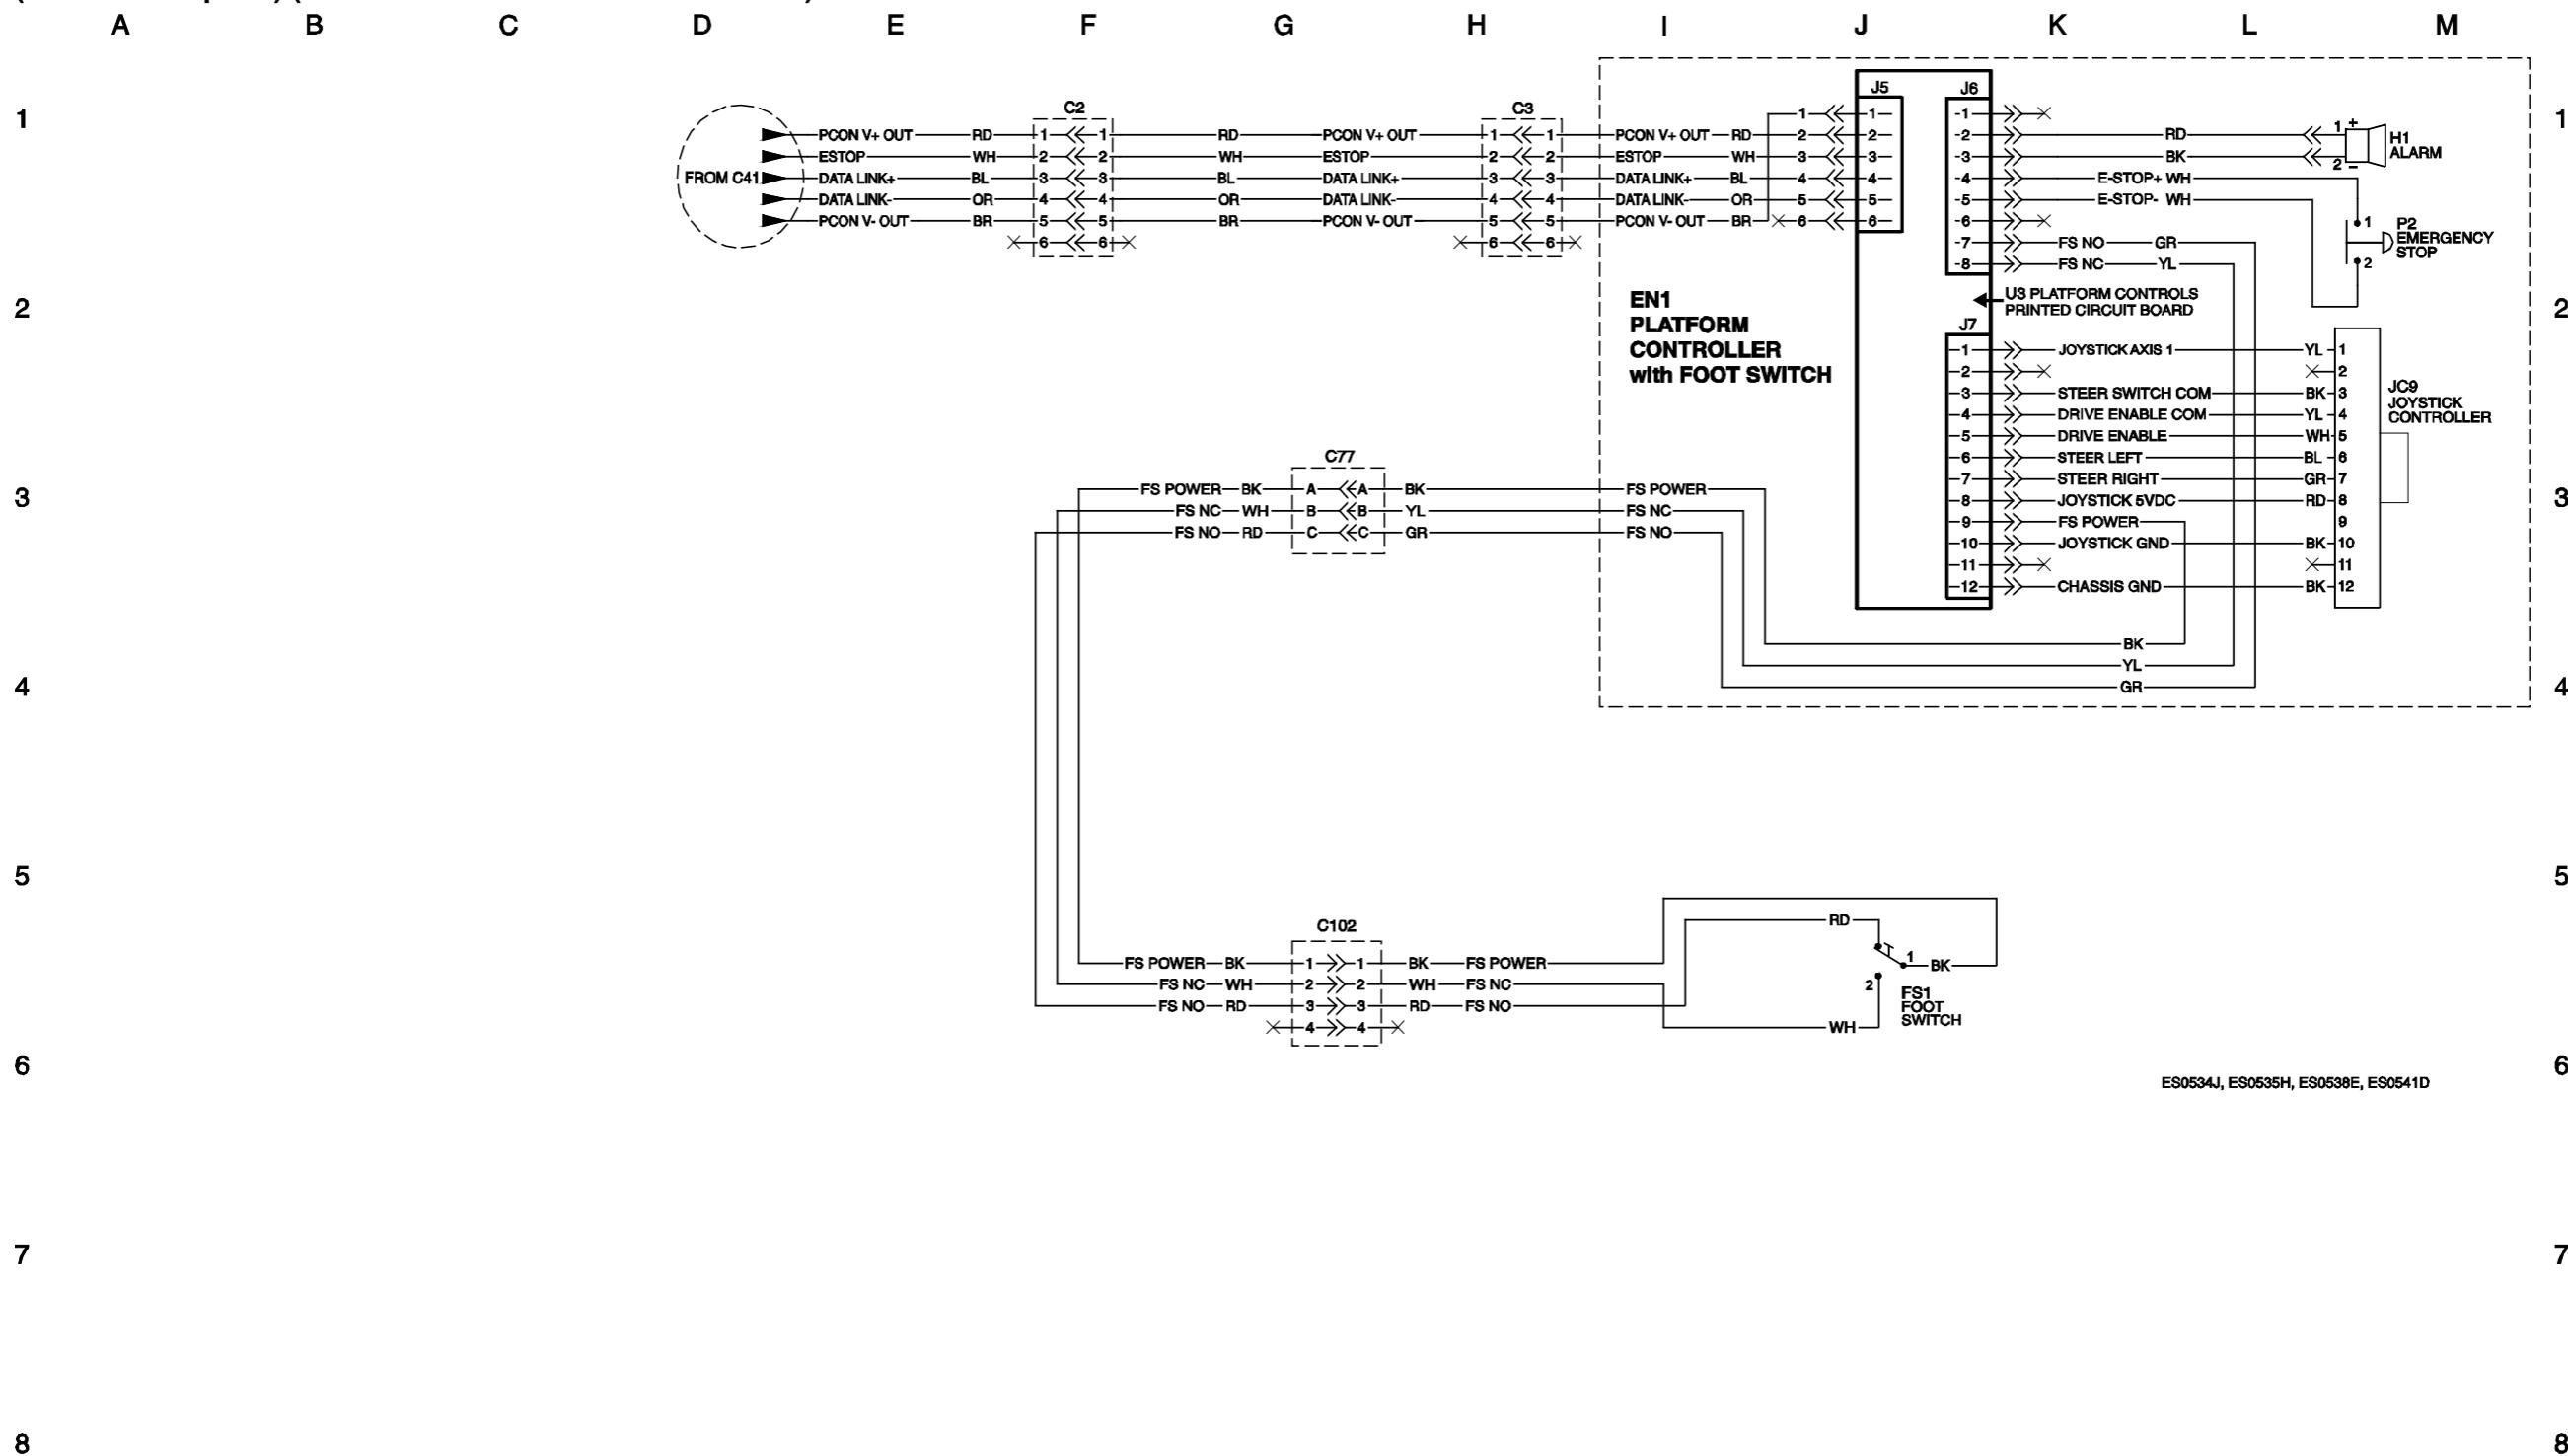

ES0534J, ES0535H, ES0538E, ES0541D

# Hydraulic Schematics


# Hydraulic Schematic

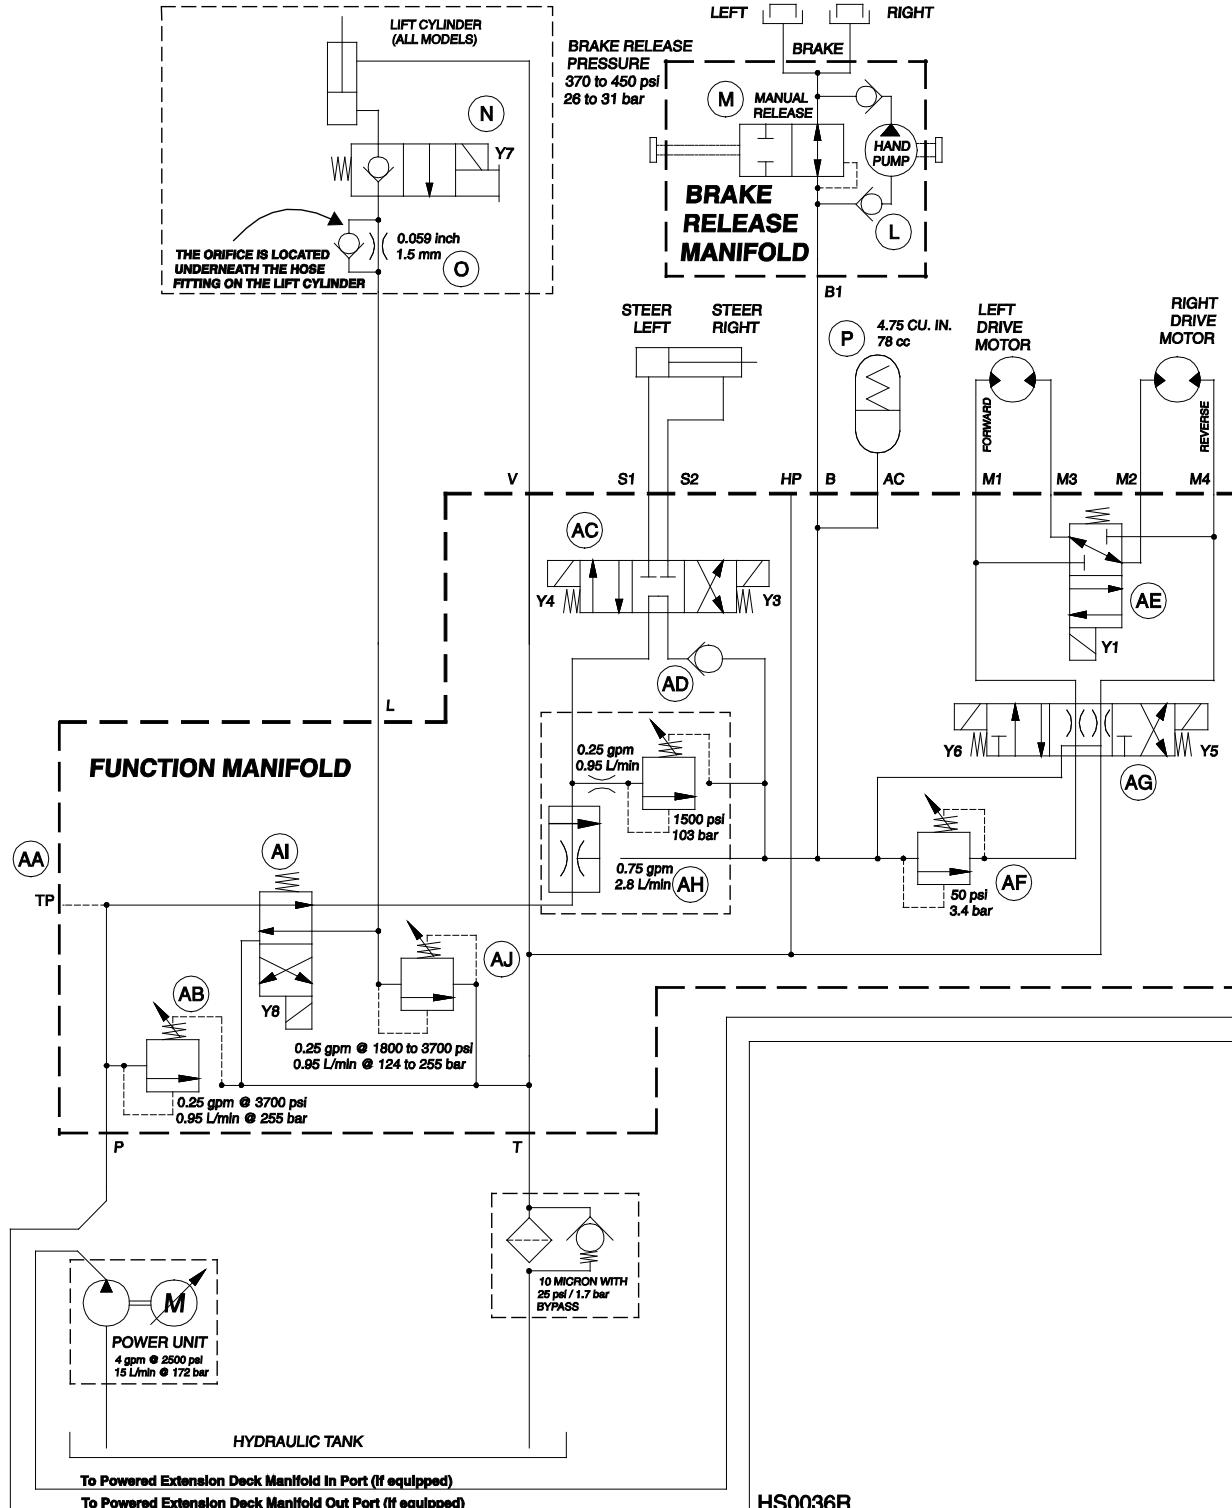

HS0036R

## Hydraulic Schematics

### Hydraulic Schematic, Powered Extension Deck Manifold

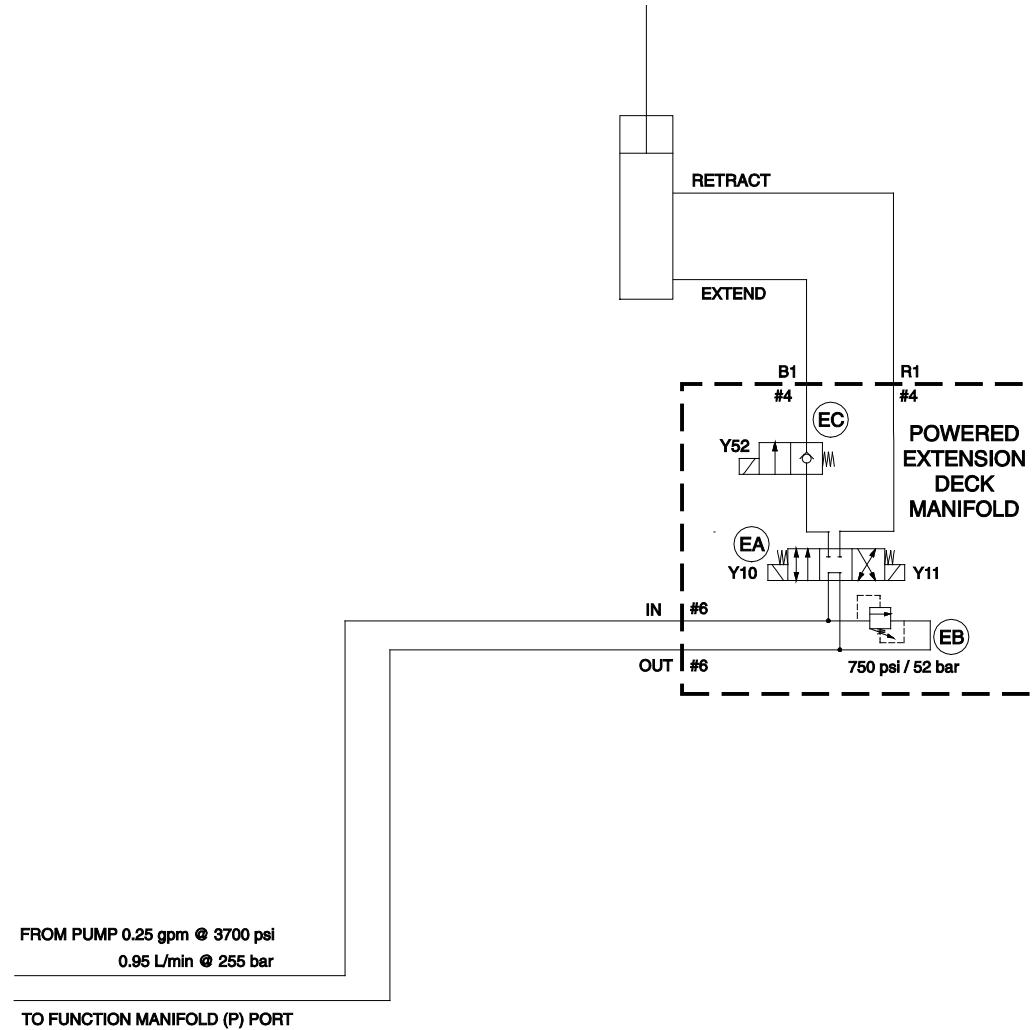

California Proposition 65

 **WARNING**

Operating, servicing and maintaining this equipment can expose you to chemicals including engine exhaust, carbon monoxide, phthalates, and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. These chemicals can be emitted from or contained in other various parts and systems, fluids and some component wear by-products. To minimize exposure, avoid breathing exhaust, do not idle the engine except as necessary, service your equipment and vehicle in a well-ventilated area and wear gloves or wash your hands frequently when servicing your equipment or vehicle and after operation. For more information go to [www.P65Warnings.ca.gov/passenger-vehicle](http://www.P65Warnings.ca.gov/passenger-vehicle).

Distributed By: