

LENOXX

3-SPEED TURNTABLE AND CASSETTE PLAYER WITH PC RECORDING




MODEL: TT500

OPERATING INSTRUCTIONS

PLEASE READ THIS OPERATING MANUAL COMPLETELY BEFORE OPERATING THIS UNIT AND RETAIN THIS BOOKLET FOR FUTURE REFERENCE.

SAFETY INSTRUCTIONS

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

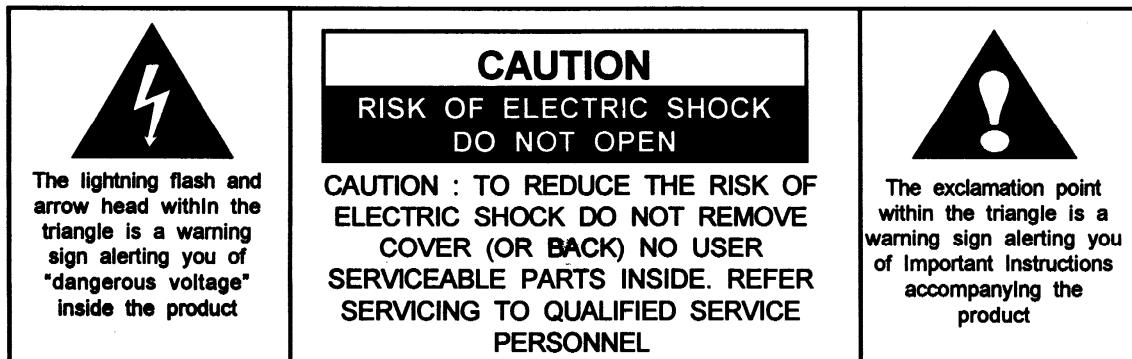


IMPORTANT SAFETY INSTRUCTIONS

1. Read instructions - All the safety and operating instructions should be read before the appliance is operated.
2. Retain instructions - The safety and operating instructions should be retained for future reference.
3. Heed Warnings - All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow instructions - All operation and use instructions should be followed.
5. Water and Moisture - The appliance should not be used near water; for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, and the like.
6. Carts and Stands - The appliance should be used only with a cart or stand that is recommended by the manufacturer. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
7. Wall and Ceiling Mounting - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
8. Ventilation - The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
9. Heat - The appliance should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
10. Power Sources - The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
11. Grounding or Polarization - Precautions should be taken so that the grounding or polarization means of an appliance is not defeated.
12. Power-Cord Protection - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles and the point where they exit from the appliance.
13. Protective Attachment Plug - The appliance is equipped with an attachment plug having overload protection. This is a safety feature. See Instruction Manual for replacement or resetting of protective device. If replacement of the plug is required, be sure the service technician has used a replacement plug specified by the manufacturer that has the same overload protection as the original plug.
14. Cleaning - The appliance should be cleaned only as recommended by the manufacturer.



15. Power Lines - An outdoor antenna should be located away from power lines.
16. Outdoor Antenna Grounding - If an outside antenna is connected to the receiver, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges. Section 810 of the National Electrical Code, ANSI/ NFPA No.70-1984, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See figure 1.

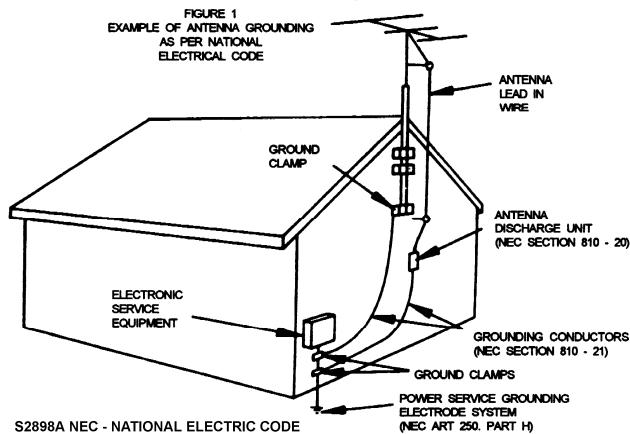

17. Nonuse Periods - The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
18. Object and Liquid Entry - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
19. Damage Requiring Service - The appliance should be serviced by qualified service personnel when:
 - A. The power supply cord or the plug has been damaged; or
 - B. Objects have fallen, or liquid has been spilled into the appliance; or
 - C. The appliance has been exposed to rain; or
 - D. The appliance does not appear to operate normally or exhibits a marked change in performance; or
 - E. The appliance has been dropped, or the enclosure damaged.
20. Servicing - The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.


CAUTION:

**TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT.
FULLY INSERT.**



FUNCTIONS AND CONTROLS

Turntable/Phono

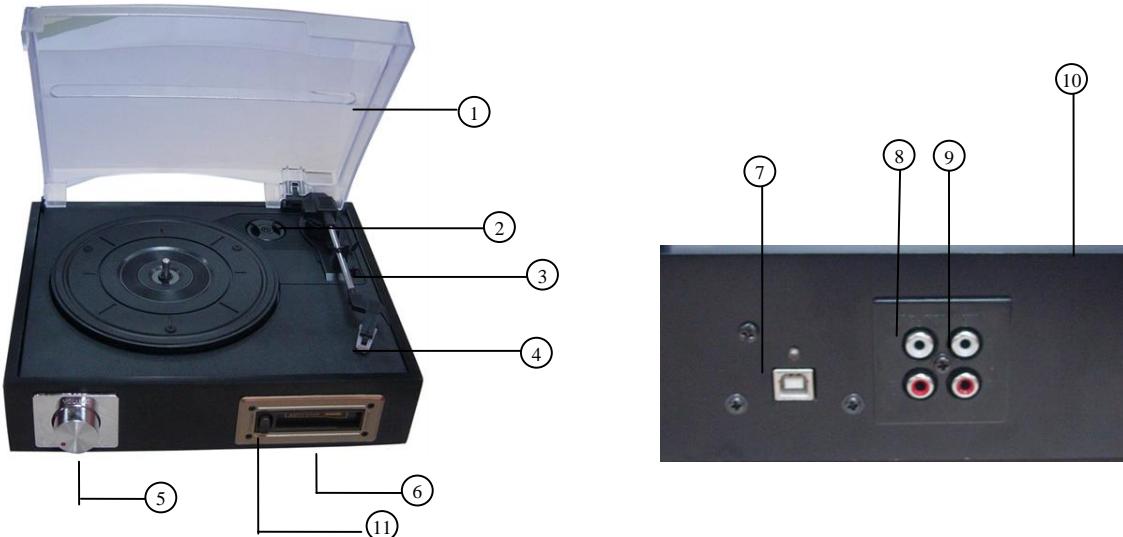

- 1. TURNTABLE COVER
- 2. BUILT-IN 45 RPM ADAPTOR
- 3. TONEARM
- 4. STYLUS GUARD
- 5. ROTARY VOLUME/SOUND CONTROL WITH UP AND DOWN
- 6. CASSETTE PLAYER
- 7. USB CONNECTION(USE USB CABLE TO DIGITAL CASSETTE/LP TO PC RECORDING)
- 8. SPEAKER
- 9. AUX IN
- 10. REAR PANEL
- 11. F.FWD/EJECT BUTTON OF CASSETTE

AC OPERATION

This TURNTABLE PLAYER operates from AC 230V/50Hz power, with the adaptor 12V DC output. Insert the plug of the AC power cord into a wall outlet with AC power supply

PHONO OPERATION

1. Lift the TURNTABLE COVER fully;
2. Remove the Stylus guard;
3. Press the power knob to on;
4. Set the SPEED SELECTOR to $33\frac{1}{3}$, 45 or 78 RPM according to the size of the record you are playing.
5. Place the record with label side up (the side you want to play onto the TURNTABLE)
Note: For playing single record, first insert the 45 RPM Adaptor in the center of the TURNTABLE
Then place the record.
6. Place the stylus on the record carefully.
7. To stop operation, carefully lift up the TONEARM and return it to TONEARM-REST.
8. Close the TURNTABLE COVER gently.

CASSETTE PLAYER OPERATION

1. Insert the cassette fully into the cassette slot (No.6). Play starts automatically.
2. To F.FWD the cassette, press F.FWD/EJECT button (No.11) half way in until it locks, press button second time to release and resume normal play.
3. Press F.FWD/EJECT button (No.11) full in to eject the cassette.

PC RECORDING FUNCTION

Please check the CD drive attached in the package, instruction for recording from LP discs to PC has been burned onto the CD drive, there are also software for recording burned onto it.

AUTOMATIC STOP

To protect your records and prevent unnecessary wear to the stylus, this unit is equipped with an Automatic Stop System. When the record ends during play, the power supply to the TURNTABLE will automatically cut to stop the TURNTABLE from running.

MAINTENANCE

Cleaning the unit:

-Do not use volatile chemicals in this unit (insecticides, etc.). Clean by lightly wiping with a soft cloth.

Cleaning the tape heads:

-To assure continuous high performance from your cassette player/recorder, clean the head, pinch roller, and capstan after 40 hours of operation. A cassette head cleaner cartridge or head cleaning fluid may be used. Follow the instructions that come with the cassette or liquid head cleaner.

Lenoxx Electronics (Aust) Pty Ltd
6 Oban Court Laverton North 3026
Tel: + 61 3 9267 2100 - Fax: + 61 3 9267 2199
For service call 1300 666 848
Email Address: lenoxx@lenoxx.com.au
Web site: www.lenoxxelectronics.com