



# 1 Verify kit contents

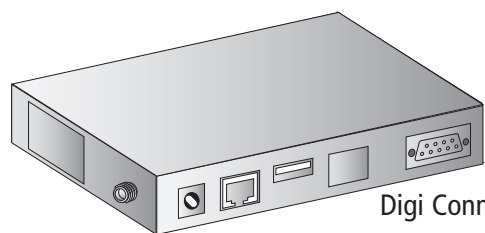


Digi Connect WAN 3G




Software CD

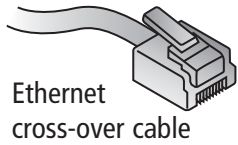

Ethernet cross-over cable

 

Power supply  
(not included with Connect™ WAN 3G IA kit)

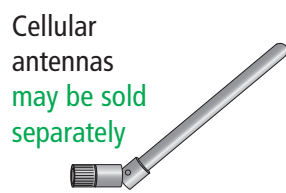

Cellular antennas  
may be sold  
separately

**Not included:** A SIM card must be supplied and activated by a Cellular Service Provider for device operation



## Quick Start Guide


Digi Connect™ WAN 3G  
Digi Connect™ WAN 3G IA




PN (1P): 90000911-88 B

# 2 Install PC card or module


**a** Remove cover

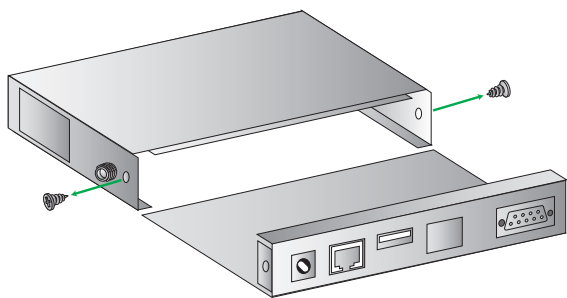


**b** Add module:  
1. Snap module into place  
2. Attach antenna cables (MAIN to Primary external antenna and AUX to Secondary external antenna)

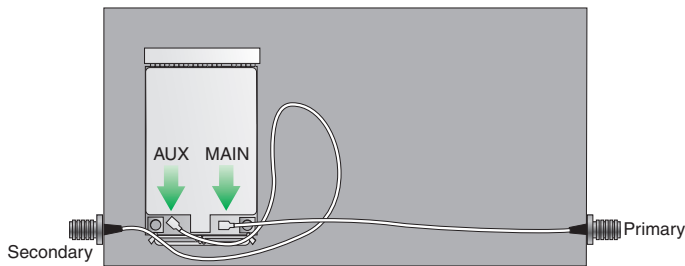

**c** 1. Replace cover  
2. Replace screws

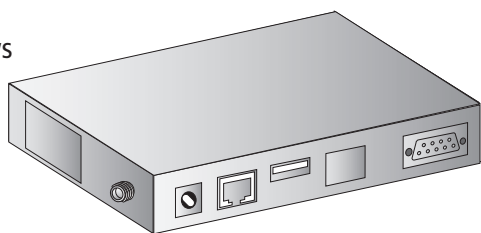


**d** 1. Hold tab on top product label  
2. Pull complete tab and paper backing strip off the product label  
3. Adhere the edge of product label to top front edge of box

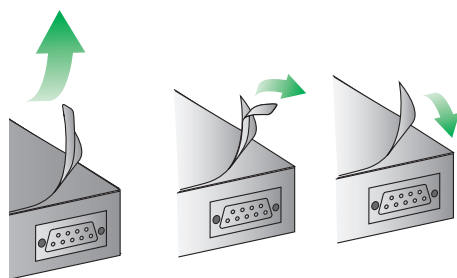


# 3 Insert SIM card (Only with GSM module)

**a** Insert SIM into the primary SIM slot (upper slot if you have a dual SIM)

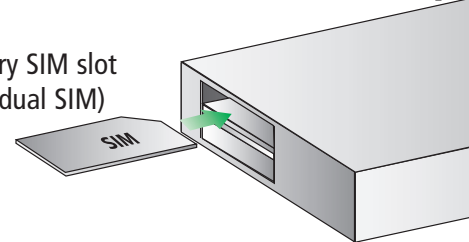


**b** Insert secondary SIM card (if applicable)

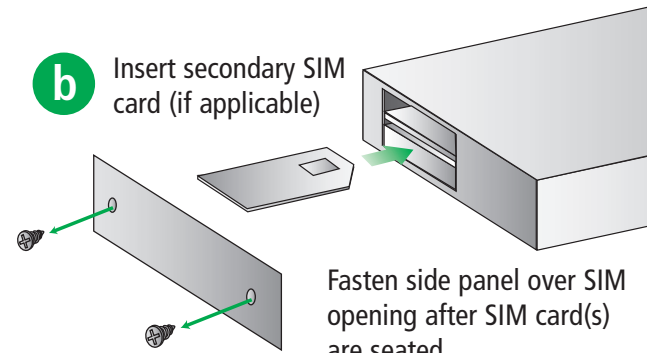

Fasten side panel over SIM opening after SIM card(s) are seated

# 4 Connect hardware

**a** Connect cellular antennas

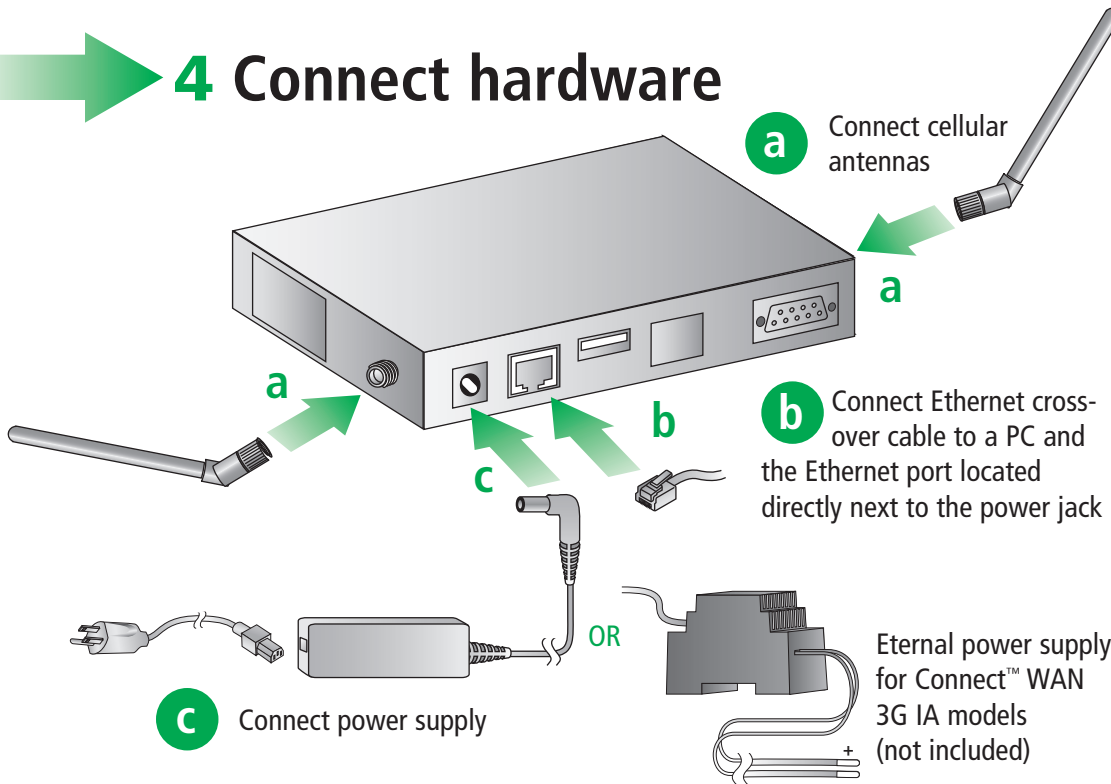

**b** Connect Ethernet cross-over cable to a PC and the Ethernet port located directly next to the power jack

**c** Connect power supply

External power supply for Connect™ WAN 3G IA models (not included)

# 5 Configure your cellular settings

**a** Open your web browser and enter the IP address 192.168.1.1 in the URL address bar

**b** Under Configuration, click "Mobile." Enter your service provider name and connection parameters and click "Apply"

Your device is now configured. If you would like to verify your connections go to step 6

**NOTE:** If you have difficulty discovering your device, make sure your host computer is set up to obtain IP addresses automatically (DHCP server is enabled by default on the device). Also ensure all firewall software is temporarily disabled

# 6 Validate Internet connection

**a** Disconnect the Ethernet cross-over cable and reconnect it. This will re-establish the Ethernet connection by assigning a new IP address through the DHCP server

**b** To verify your Internet connection, enter a website of your choice (e.g. www.digi.com) in the URL address bar of your browser and click "enter." Connecting to a website indicates the connection is working

For additional information about your cellular connection, click System Information > Mobile or reference the User's Guide provided on the enclosed CD