

Engineering Data

Design Manual

RXSQ-TAVJUA

Heat Pump, 1 phase, 208 / 230 V, 60 Hz

R-410A



VRV



Table of Contents


1. Features and Benefits	3
2. Nomenclature	4
3. Model Names	6
3.1 Outdoor Units	6
3.2 Indoor Units	7
4. External Appearance	8
4.1 Outdoor Units	8
4.2 Daikin Communicating Gas Furnaces	8
4.3 Indoor Units	9
5. Capacity Range	10
5.1 Connection Ratio	10
6. Specifications	11
7. Dimensions	14
8. Service Space	17
9. Center of Gravity	21
10. Piping Diagrams	23
11. Wiring Diagrams	26
12. Field Wiring	29
13. Electrical Characteristics	31
14. Operation Limits	32
15. Sound Levels (Reference Data)	33
16. Accessories	41
16.1 Optional Accessories	41
17. Selection Procedure	42
17.1 Selection Procedure	42
18. Caution Label	49
18.1 RXSQ24 - 36TAVJUA	49
18.2 RXSQ48TAVJUA	53
18.3 RXSQ60TAVJUA	57
19. Caution for Refrigerant Leaks	61
19.1 Introduction	61
19.2 Procedure for Checking Maximum Concentration	62
20. Safety Devices Setting	64
20.1 FXFQ-T	64
20.2 FXZQ-TA	64
20.3 FXUQ-P	64
20.4 FXEQ-P	64

20.5 FXDQ-M.....	65
20.6 FXSQ-TA	65
20.7 FXMQ-PB.....	65
20.8 FXHQ-M.....	65
20.9 FXAQ-P.....	66
20.10 FXLQ-M, FXNQ-M.....	66
20.11 FXTQ-TA.....	66
20.12 CXTQ-TA.....	66
Appendix.....	67
1. Introduction.....	68
1.1 ED Book List	68
1.2 Publication List of Engineering Data for VRV Products	69

1. Features and Benefits

Re-inventing residential air-conditioning by breaking technological barriers, the new Residential **VRV** brings inverter driven **VRV** to solve some of the age-old single-family HVAC challenges.

- Available in 2, 3, 4 and 5 ton models
- Superior zoning capabilities with 1 to 1 and 1 to multi connections
- Broader diversity with ability to provide cooling and heating in up to 9 zones
- Flexibility to choose heat pump or gas furnace or Duel-fuel** heating capability
- Auto and programmable modes for heat pump to gas heat switch over temperatures
- Compatible with all the 12 types and 65 models of Daikin **VRV** indoor fan coil units and 80 - 97% AFUE Daikin communicating gas furnaces
- Dependable heat pump operation in extreme ambient conditions down to -4°F in heating and up to 122°F in cooling
- Year round comfort and energy savings delivered by combining **VRV** and VRT technologies
- Quiet operation with sound levels of under 58 dBA make for easy install close to Lot lines
- Space saving compact design allows up to 75% reduction in install space
- Reduced installation cost with re-use of existing refrigerant lines and uninsulated liquid line**
- Engineered with Daikin's Swing compressor technology
- Backed by best in class 10 year parts limited warranty and 10 years replacement compressor limited warranty *

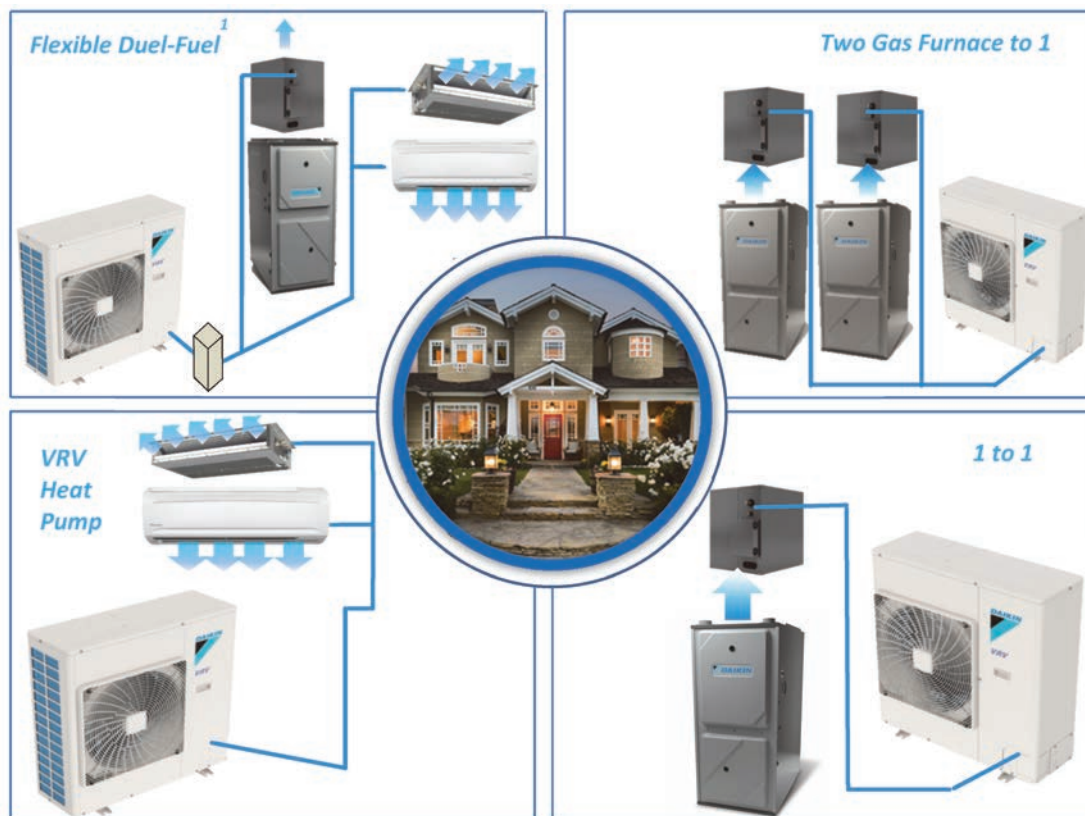


* - Complete warranty details available from local distributor or manufacturer's rep


** - Model specific, refer to details for application rules

2. Nomenclature

Outdoor Unit

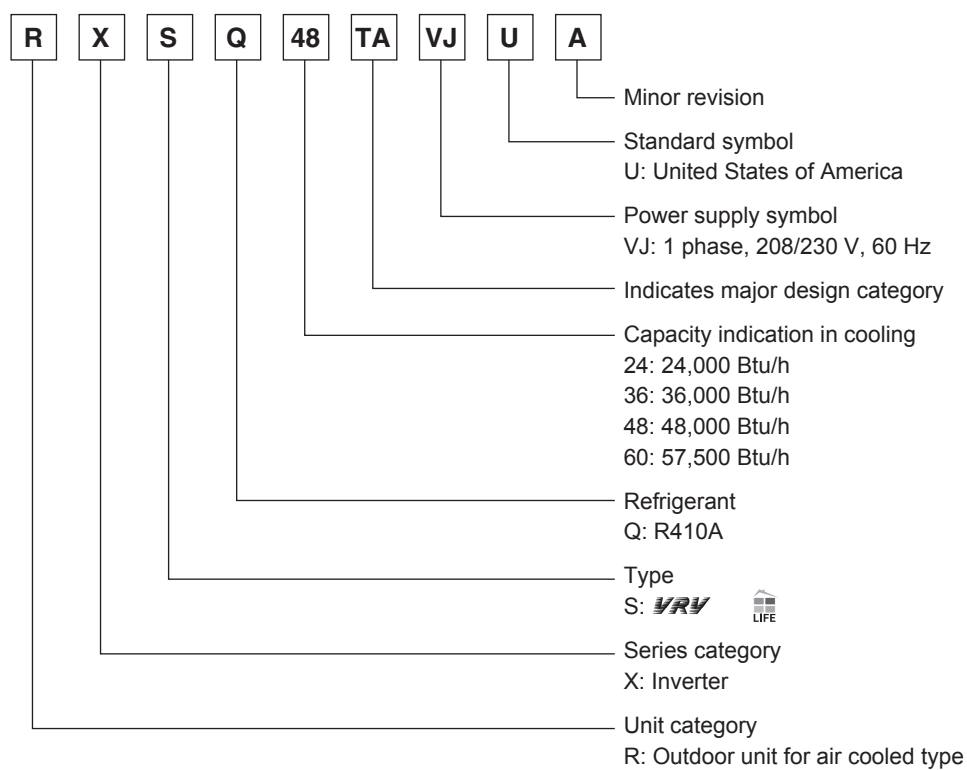

Indoor Unit

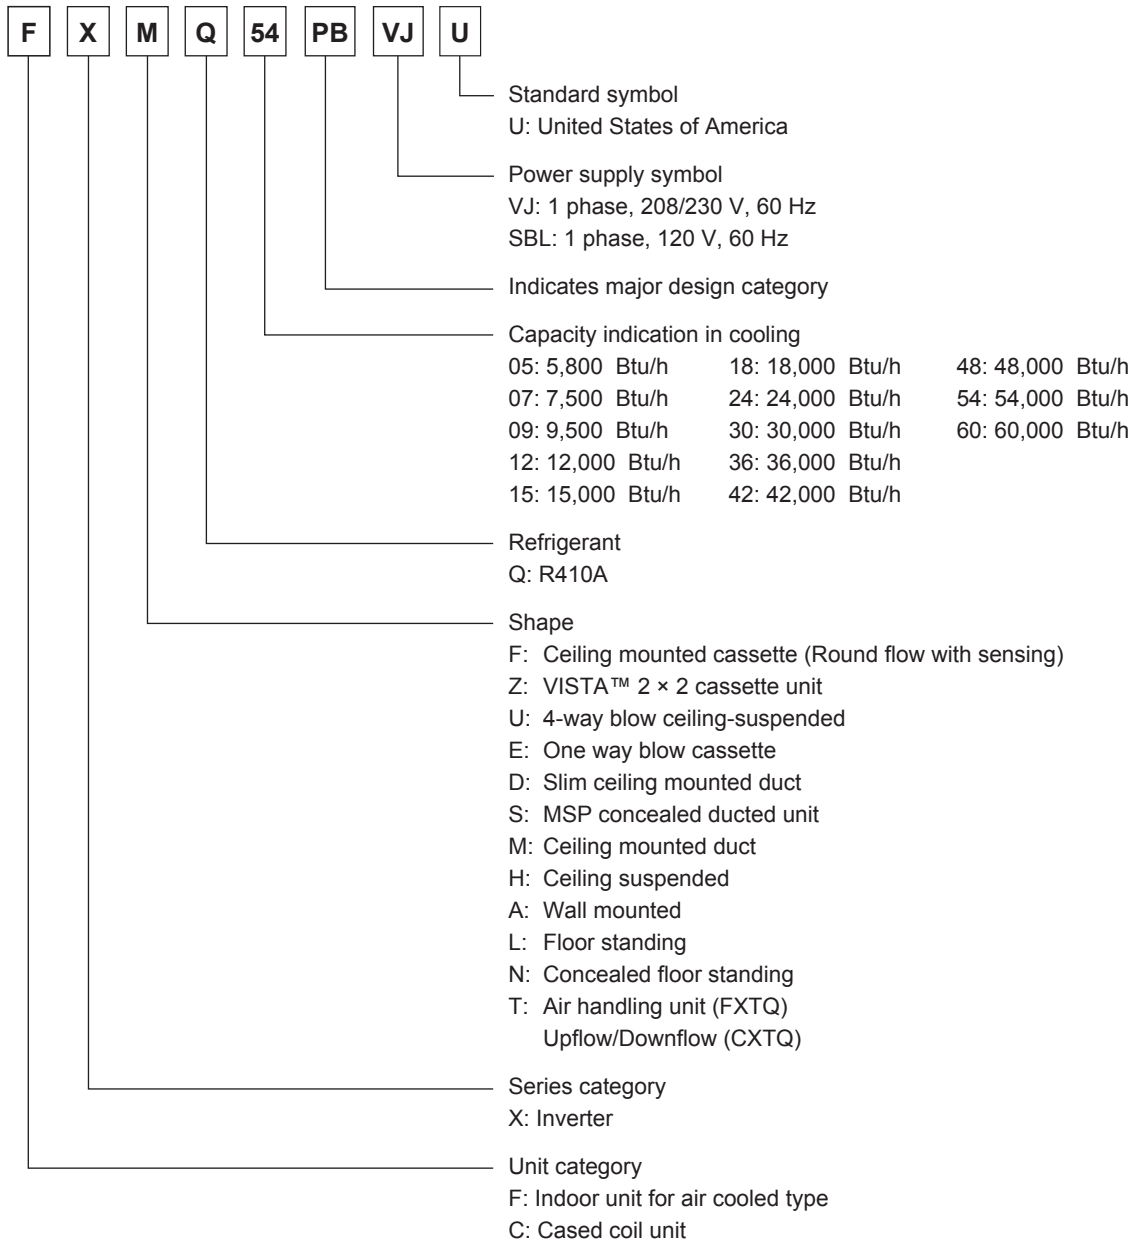

3. Model Names

3.1 Outdoor Units

Capacity range			2 ton	3 ton	4 ton	5 ton	Power supply, Standard
Capacity index			24	36	48	57	
Heat pump	208/230 V	RXSQ	24TA	36TA	48TA	60TA	VJUA

Note:

VJ: 1 phase, 208/230 V, 60 Hz

U(VJU): Standard symbol

A: Minor revision

3.2 Indoor Units

Capacity range		0.5 ton	0.6 ton	0.8 ton	1 ton	1.25 ton	1.5 ton		2 ton	2.5 ton	3 ton	3.5 ton	4 ton	4.5 ton	5 ton	Power supply, Standard
Capacity index		5.8	7.5	9.5	12	15	18	20	24	30	36	42	48	54	60	
Ceiling mounted cassette (Round flow with sensing) type	FXFQ	—	07T	09T	12T	15T	18T	—	24T	30T	36T	—	48T	—	—	VJU
VISTA™ 2 × 2 cassette unit	FXZQ	05TA	07TA	09TA	12TA	15TA	18TA	—	—	—	—	—	—	—	—	
4-way blow ceiling- suspended type	FXUQ	—	—	—	—	—	—	18P	24P	30P	36P	—	—	—	—	
One way blow cassette type	FXEQ	—	07P	09P	12P	15P	18P	—	24P	—	—	—	—	—	—	
Slim ceiling mounted duct type	FXDQ	—	07M	09M	12M	—	18M	—	24M	—	—	—	—	—	—	
MSP concealed ducted unit	FXSQ	05TA	07TA	09TA	12TA	15TA	18TA	—	24TA	30TA	36TA	—	48TA	54TA	—	
Ceiling mounted duct type (Middle and high static pressure)	FXMQ	—	07PB	09PB	12PB	15PB	18PB	—	24PB	30PB	36PB	—	48PB	54PB	—	
Ceiling suspended type	FXHQ	—	—	—	12M	—	—	—	24M	—	36M	—	—	—	—	
Wall mounted type	FXAQ	—	07P	09P	12P	—	18P	—	24P	—	—	—	—	—	—	
Floor standing type	FXLQ	—	07M	09M	12M	—	18M	—	24M	—	—	—	—	—	—	
Concealed floor standing type	FXNQ	—	07M	09M	12M	—	18M	—	24M	—	—	—	—	—	—	
Air handling unit	FXTQ	—	—	09TA	12TA	—	18TA	—	24TA	30TA	36TA	42TA	48TA	54TA	60TA	VJUA
		—	—	09TA	12TA	—	18TA	—	24TA	30TA	36TA	42TA	48TA	54TA	60TA	VJUD
Cased coil unit	CXTQ	—	—	—	—	—	—	—	24TA	—	36TA	—	48TA	—	60TA	SBLU

4. External Appearance


4.1 Outdoor Units

RXSQ24TAVJUA RXSQ36TAVJUA RXSQ48TAVJUA	RXSQ60TAVJUA
 2, 3, 4 ton	 5 ton

4.2 Daikin Communicating Gas Furnaces

 80% AFUE 40k - 120k Btu	 96% AFUE 40k - 120k Btu	 97% AFUE 40k - 120k Btu
--	--	--

4.3 Indoor Units

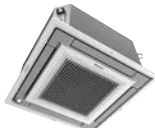Ceiling mounted cassette (Round flow with sensing) type FXFQ-T  Shown with BYCQ125B-W1	Ceiling suspended type FXHQ-M 
VISTA™ 2 × 2 cassette unit FXZQ-TA  Shown with BYFQ60C3W1W  Shown with BYFQ60C3W1S	Wall mounted type FXAQ-P 
4-way blow ceiling-suspended type FXUQ-P 	Floor standing type FXLQ-M 
One way blow cassette type FXEQ-P 	Concealed floor standing type FXNQ-M 
Slim ceiling mounted duct type FXDQ-M 	Air handling unit FXTQ-TA 
MSP concealed ducted unit FXSQ-TA 	Cased coil unit CXTQ-TA 
Ceiling mounted duct type (Middle and high static pressure) FXMQ-PB 	

5. Capacity Range

5.1 Connection Ratio

Both indoor and outdoor units have a capacity index number and the connection ratio is defined as the ratio of these two numbers.

$$\text{Connection ratio} = \frac{\text{Total sum of indoor unit capacity index}}{\text{Outdoor unit capacity index number}}$$

Example:

- 2 × CXTQ36 connected to 1 × RXSQ60T = $72 / 57 = 1.26$
- Therefore the connection ratio = **126%**

Indoor unit capacity index

Indoor unit size	05	07	09	12	15	18	24	30	36	42	48	54	60
Indoor unit capacity index	5.8	7.5	9.5	12	15	18	24	30	36	42	48	54	60

Outdoor unit capacity index

Outdoor unit size	Nominal capacity index	Required minimum 50%	Allowed maximum 130%
2.0 Ton	24	12	31.2
3.0 Ton	36	18	46.8
4.0 Ton	48	24	62.4
5.0 Ton	57	28.5	74.1

Furnace compatibility

Gas furnace			CXTQ			
Type	Series	Model	CXTQ24TASBLU	CXTQ36TASBLU	CXTQ48TASBLU	CXTQ60TASBLU
Upflow furnace	DM80VC (two stage - 80% AFUE)	DM80VC0603BXA	✓	✓		
		DM80VC0604B*A	✓	✓	✓	
		DM80VC0803BXA	✓	✓		
		DM80VC0805CNA			✓	✓
		DM80VC0805CX A	✓	✓	✓	✓
		DM80VC1005CNA			✓	✓
		DM80VC1005CX A	✓	✓	✓	✓
	DM96VC (two stage - 96% AFUE)	DM96VC0403BNA	✓	✓		
		DM96VC0603BNA	✓	✓		
		DM96VC0803BNA	✓	✓		
		DM96VC0804CNA			✓	
		DM96VC1005CNA			✓	✓
		DM96VC1205DNA				✓
	DM97MC (modulating - 97% AFUE)	DM97MC0603BNA	✓	✓		
		DM97MC0803BNA	✓	✓		
		DM97MC0804CNA			✓	
		DM97MC1005CNA			✓	✓
		DM97MC1205DNA				✓
Downflow furnace	DC80VC (two stage - 80% AFUE)	DC80VC0603BXA	✓	✓		
		DC80VC0803BXA	✓	✓		
		DC80VC0805CX A	✓	✓	✓	✓
		DC80VC1005CX A	✓	✓	✓	✓
	DC96VC (two stage - 96% AFUE)	DC96VC0403BNA	✓	✓		
		DC96VC0603BNA	✓	✓		
		DC96VC0804CNA			✓	
		DC96VC1005CNA			✓	✓
		DC96VC1205DNA				✓
	DC97MC (modulating - 97% AFUE)	DC97MC0603BNA	✓	✓		
		DC97MC0803BNA	✓	✓		
		DC97MC0804CNA			✓	
		DC97MC1005CNA			✓	✓

6. Specifications

Model			RXSQ24TAVJUA	RXSQ36TAVJUA
Power supply			1 phase, 208/230 V, 60 Hz	1 phase, 208/230 V, 60 Hz
★1 Cooling capacity	Nominal	Btu/h (kW)	24,000 (7.0)	36,000 (10.6)
	Rated		23,000 (6.7)	34,200 (10.0)
★2 Heating capacity	Nominal	Btu/h (kW)	27,000 (7.9)	40,000 (11.7)
	Rated		Non-Ducted: 25,800 (7.6)	37,000 (10.8)
			Ducted: 25,000 (7.3)	
Casing color			Ivory white	Ivory white
Dimensions: (H × W × D)		in. (mm)	39 × 37 × 12-5/8 (990 × 940 × 320)	39 × 37 × 12-5/8 (990 × 940 × 320)
Heat exchanger			Cross fin coil	Cross fin coil
Compressor	Type		Hermetically sealed swing type	Hermetically sealed swing type
	Motor output	kW	1.9	1.9
	Starting method		Soft start	Soft start
Fan	Type		Propeller fan	Propeller fan
	Motor output	kW	0.200	0.200
	Airflow rate	cfm (m³/min)	2,682 (76)	2,682 (76)
	Drive		Direct drive	Direct drive
Sound pressure level (reference data)	Cooling	dBA	58	58
	Heating	dBA	61	61
Sound power level (reference data)	Cooling	dB	75	75
	Heating	dB	79	79
Connecting pipes	Liquid pipe	in. (mm)	ϕ3/8 (9.5) C1220T (flare connection)	ϕ3/8 (9.5) C1220T (flare connection)
	Gas pipe	in. (mm)	ϕ5/8 (15.9) C1220T (flare connection)	ϕ5/8 (15.9) C1220T (flare connection)
Weight		lbs (kg)	172 (78)	172 (78)
Safety devices			High pressure switch, Fan driver overload protector, Inverter overload protector, Fusible plug, Fuse	High pressure switch, Fan driver overload protector, Inverter overload protector, Fusible plug, Fuse
Defrost method			Reverse cycle defrosting	Reverse cycle defrosting
Capacity control		%	14-100	14-100
Refrigerant	Refrigerant name		R410A	R410A
	Charge	lbs (kg)	6.4 (2.9)	6.4 (2.9)
	Control		Electronic expansion valve	Electronic expansion valve
Standard accessories			Installation manual, Operation manual, Drain socket, Clamps	Installation manual, Operation manual, Drain socket, Clamps

Note:

- ★1. Indoor temp.: 80°FDB (26.7°CDB), 67°FWB (19.4°CWB) / outdoor temp.: 95°FDB (35.0°CDB) / Equivalent piping length: 25 ft (7.6 m), level difference: 0 ft. (0 m).
- ★2. Indoor temp.: 70°FDB (21.1°CDB) / outdoor temp.: 47°FDB (8.3°CDB), 43°FWB (6.1°CWB) / Equivalent piping length: 25 ft (7.6 m), level difference: 0 ft. (0 m).

C: 4D126372

Model			RXSQ48TAVJUA
Power supply			1 phase, 208/230 V, 60 Hz
★1 Cooling capacity	Nominal	Btu/h (kW)	48,000 (14.1)
	Rated		45,500 (13.3)
★2 Heating capacity	Nominal	Btu/h (kW)	52,000 (15.2)
	Rated		49,500 (14.5)
Casing color			Ivory white
Dimensions: (H × W × D)		in. (mm)	39 × 37 × 12-5/8 (990 × 940 × 320)
Heat exchanger			Cross fin coil
Compressor	Type		Hermetically sealed swing type
	Motor output	kW	3.0
	Starting method		Soft start
Fan	Type		Propeller fan
	Motor output	kW	0.200
	Airflow rate	cfm (m³/min)	2,682 (76)
	Drive		Direct drive
Sound pressure level (reference data)	Cooling	dBA	58
	Heating	dBA	61
Sound power level (reference data)	Cooling	dB	76
	Heating	dB	78
Connecting pipes	Liquid pipe	in. (mm)	ϕ3/8 (9.5) C1220T (flare connection)
	Gas pipe	in. (mm)	ϕ5/8 (15.9) C1220T (flare connection)
Weight		lbs (kg)	176 (80)
Safety devices			High pressure switch, Fan driver overload protector, Inverter overload protector, Fusible plug, Fuse
Defrost method			Reverse cycle defrosting
Capacity control		%	14-100
Refrigerant	Refrigerant name		R410A
	Charge	lbs (kg)	7.5 (3.4)
	Control		Electronic expansion valve
Standard accessories			Installation manual, Operation manual, Drain socket, Clamps

Note:

- ★1. Indoor temp.: 80°FDB (26.7°CDB), 67°FWB (19.4°CWB) / outdoor temp.: 95°FDB (35.0°CDB) / Equivalent piping length: 25 ft (7.6 m), level difference: 0 ft. (0 m).
- ★2. Indoor temp.: 70°FDB (21.1°CDB) / outdoor temp.: 47°FDB (8.3°CDB), 43°FWB (6.1°CWB) / Equivalent piping length: 25 ft (7.6 m), level difference: 0 ft. (0 m).

C: 4D126374

Model			RXSQ60TAVJUA
Power supply			1 phase, 208/230 V, 60 Hz
★1 Cooling capacity	Nominal	Btu/h	57,500 (16.9)
	Rated	(kW)	57,500 (16.9)
★2 Heating capacity	Nominal	Btu/h	57,000 (16.7)
	Rated	(kW)	57,000 (16.7)
Casing color			Ivory white
Dimensions: (H × W × D)		in. (mm)	52-15/16 × 35-7/16 × 12-5/8 (1,345 × 900 × 320)
Heat exchanger			Cross fin coil
Compressor	Type		Hermetically sealed swing type
	Motor output	kW	3.5
	Starting method		Soft start
Fan	Type		Propeller fan
	Motor output	kW	0.070 × 2
	Airflow rate	cfm (m³/min)	3,741 (106)
	Drive		Direct drive
Sound pressure level (reference data)	Cooling	dBA	57
	Heating	dBA	59
Sound power level (reference data)	Cooling	dB	74
	Heating	dB	77
Connecting pipes	Liquid pipe	in. (mm)	ϕ3/8 (9.5) C1220T (flare connection)
	Gas pipe	in. (mm)	ϕ3/4 (19.1) C1220T (flare connection)
Weight		lbs (kg)	225 (102)
Safety devices			High pressure switch, Fan driver overload protector, Inverter overload protector, Fusible plug, Fuse
Defrost method			Reverse cycle defrosting
Capacity control		%	14-100
Refrigerant	Refrigerant name		R410A
	Charge	lbs (kg)	7.9 (3.6)
	Control		Electronic expansion valve
Standard accessories			Installation manual, Operation manual, Drain socket, Clamps, Auxiliary piping


Note:

- ★1. Indoor temp.: 80°FDB (26.7°CDB), 67°FWB (19.4°CWB) / outdoor temp.: 95°FDB (35.0°CDB) / Equivalent piping length: 25 ft (7.6 m), level difference: 0 ft. (0 m).
- ★2. Indoor temp.: 70°FDB (21.1°CDB) / outdoor temp.: 47°FDB (8.3°CDB), 43°FWB (6.1°CWB) / Equivalent piping length: 25 ft (7.6 m), level difference: 0 ft. (0 m).

C: 4D126376

7. Dimensions


RXSQ24 - 36TAVJUA

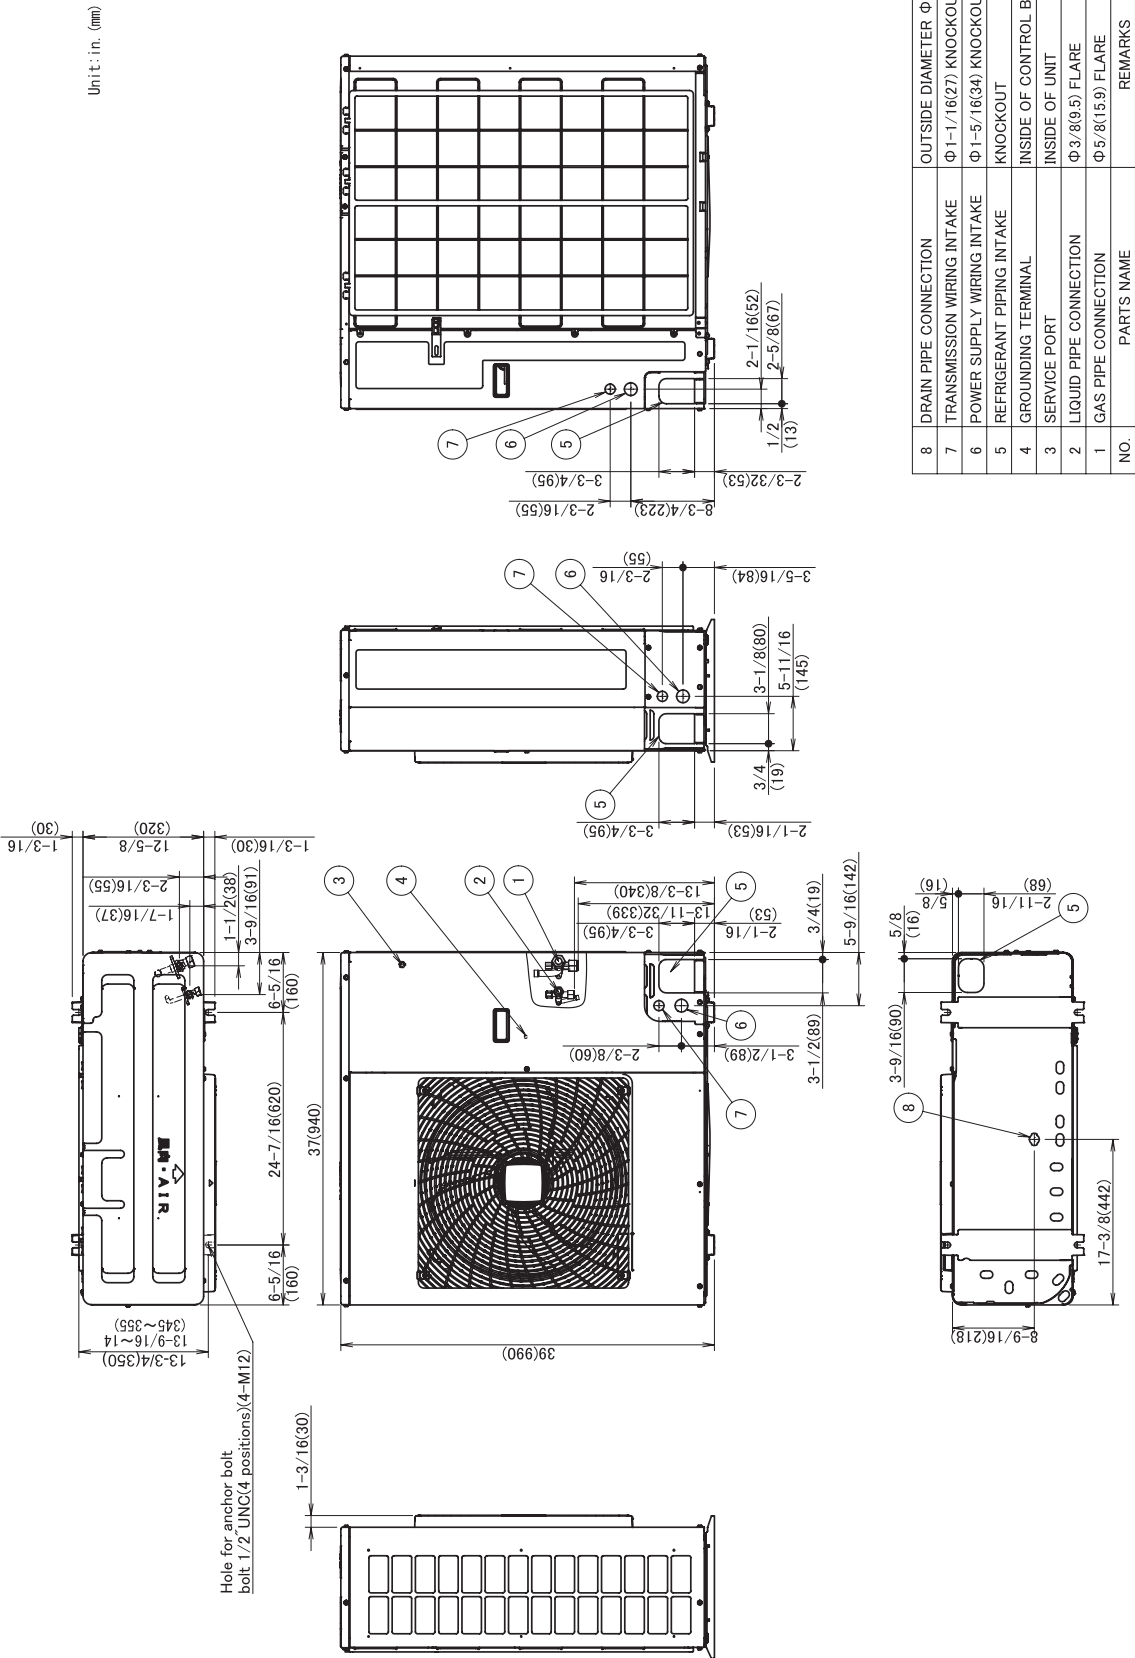

NO.	PARTS NAME	REMARKS
8	DRAIN PIPE CONNECTION	OUTSIDE DIAMETER Φ 1(26)
7	TRANSMISSION WIRING INTAKE	Φ 1-1/16(27) KNOCKOUT
6	POWER SUPPLY WIRING INTAKE	Φ 1-5/16(34) KNOCKOUT
5	REFRIGERANT PIPING INTAKE	KNOCKOUT
4	GROUNDING TERMINAL	INSIDE OF CONTROL BOX(M5)
3	SERVICE PORT	INSIDE OF UNIT
2	LIQUID PIPE CONNECTION	Φ 3/8(9.5) FLARE
1	GAS PIPE CONNECTION	Φ 5/8(15.9) FLARE


3D126496

RXSQ48TAVJUA

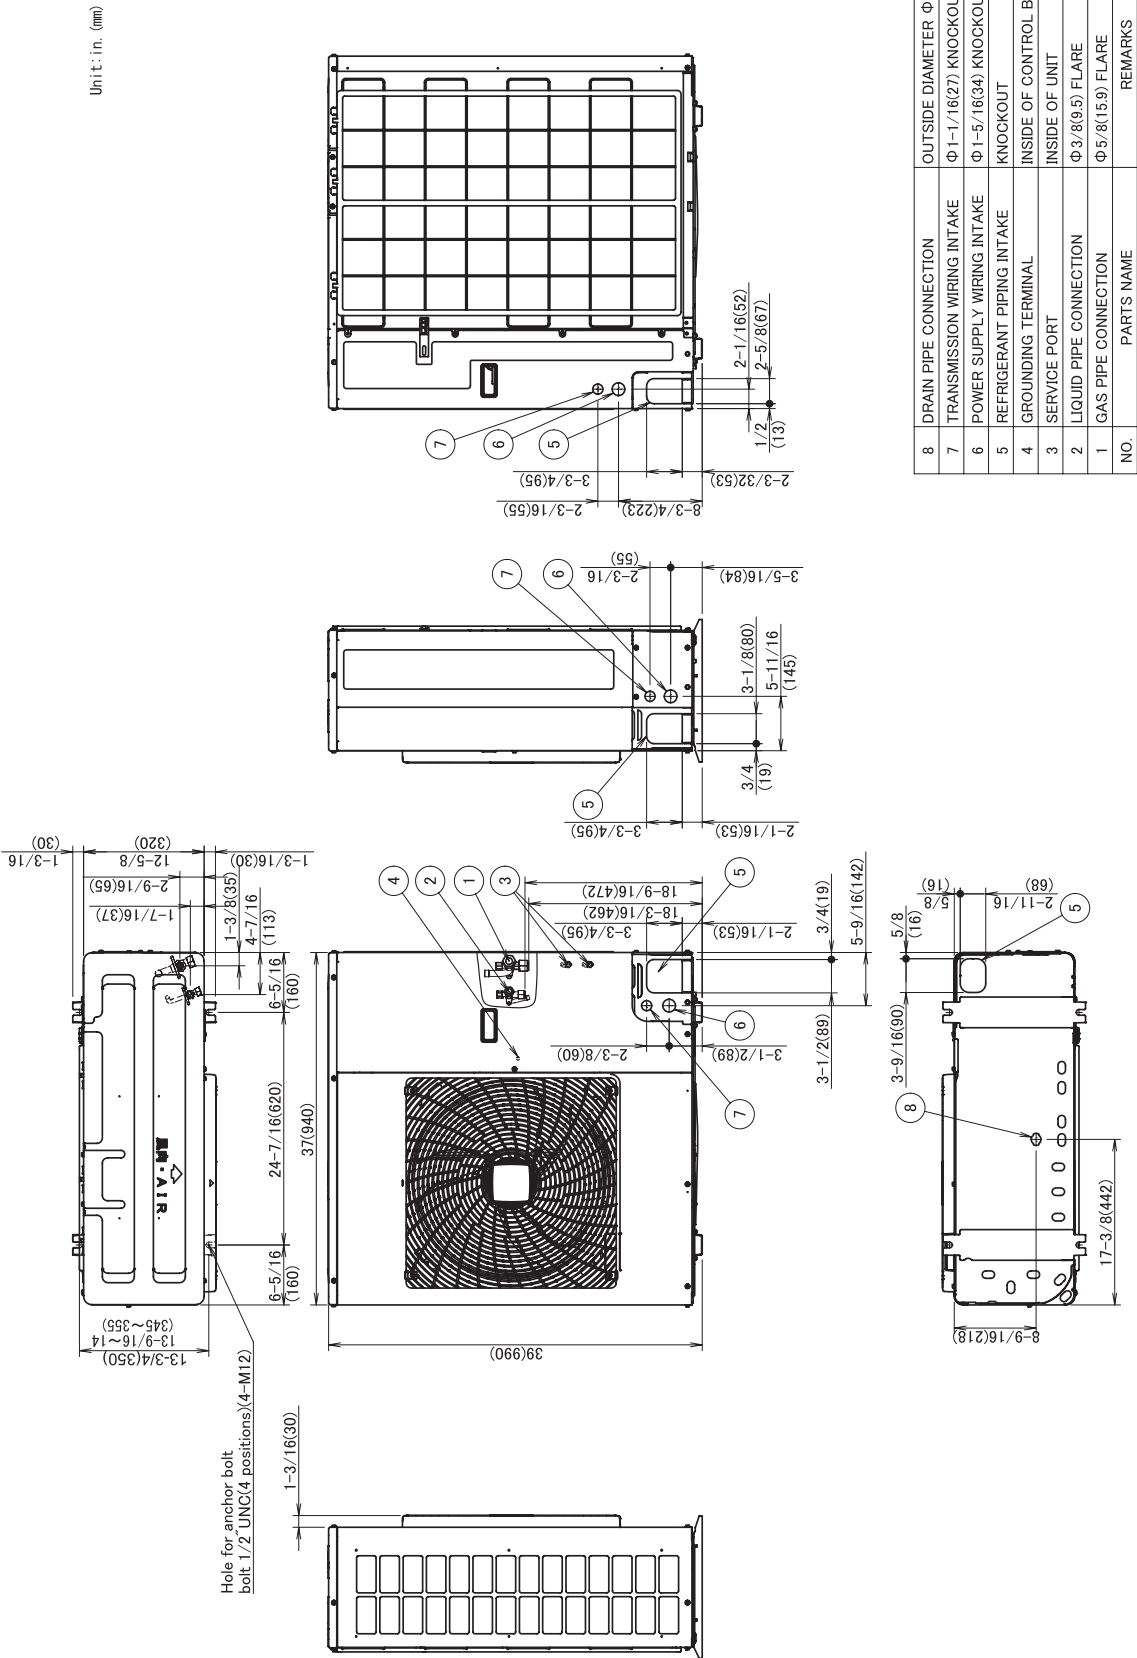

3D126497

RXSQ60TAVJUA

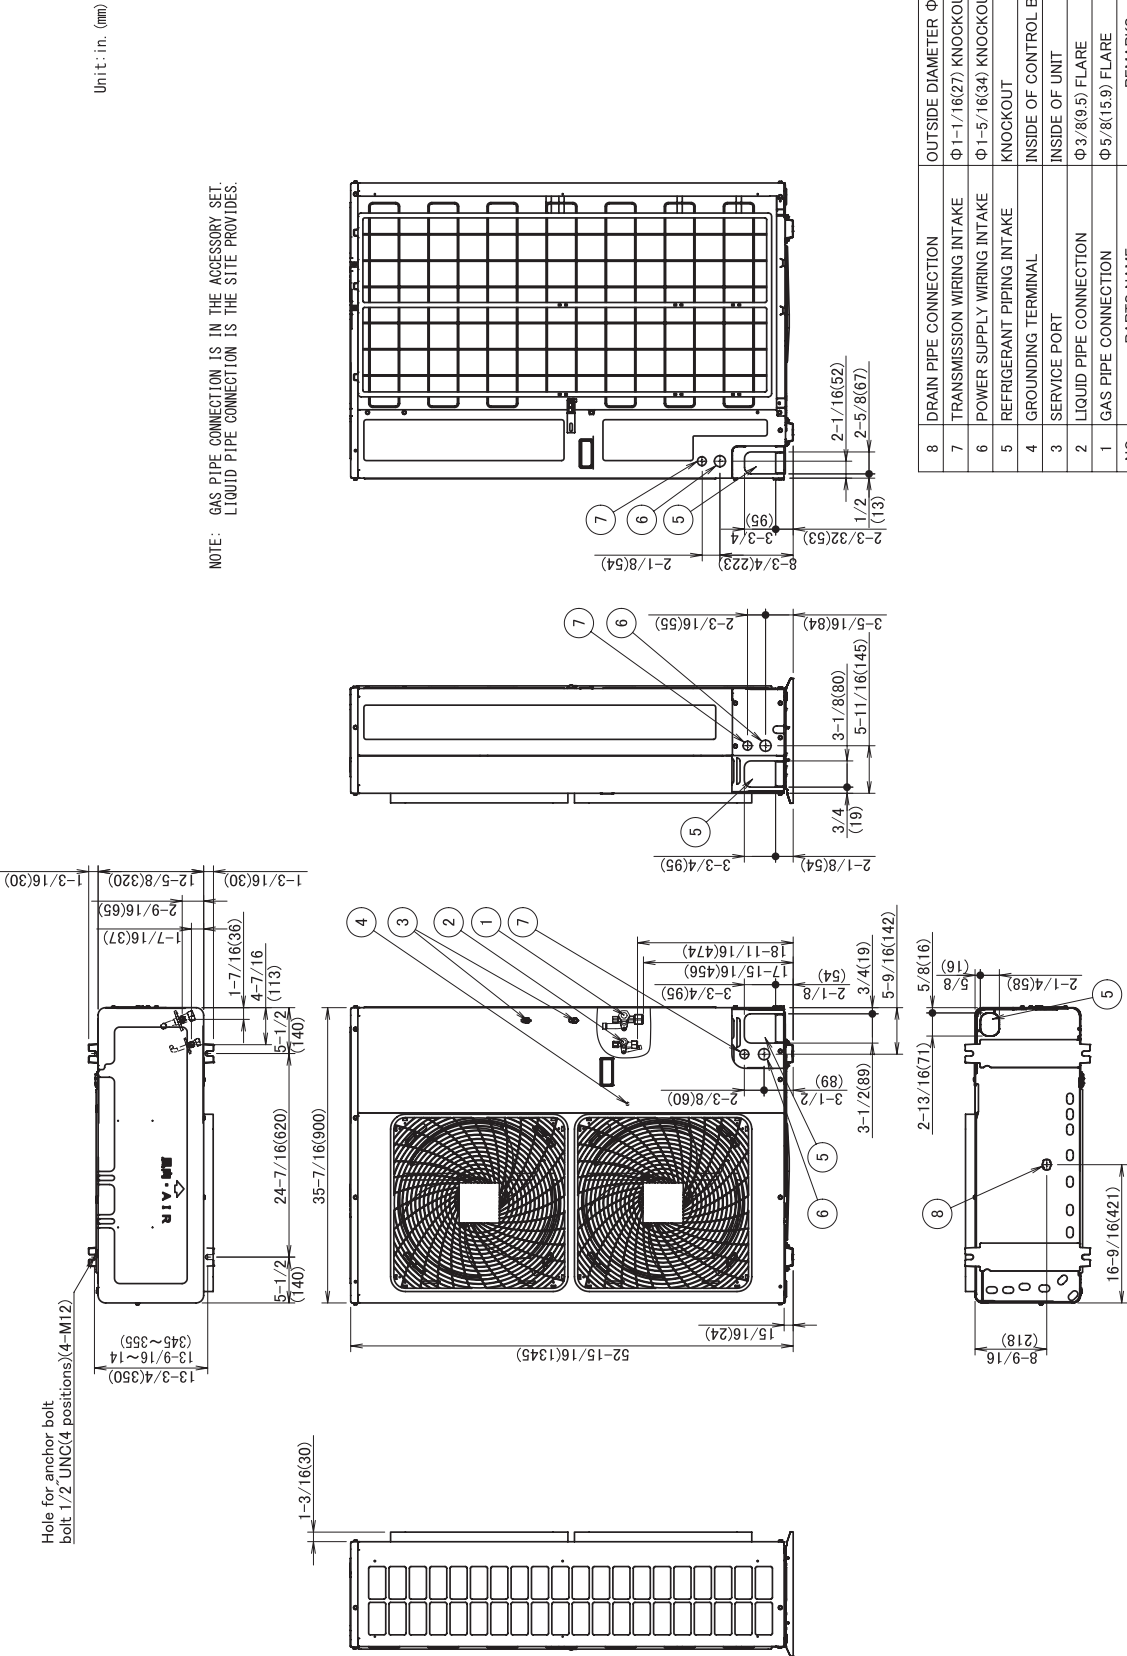

3D126498

8. Service Space

RXSQ24 - 48TAVJUA


REQUIRED INSTALLATION SPACE

The unit of the values is inch(mm).


1. Where there is an obstacle on the suction side:

(a) No obstacle above

- (1) Stand-alone installation
- Obstacle on the suction side only

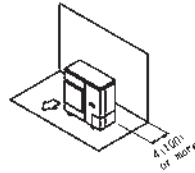


Obstacle on both sides

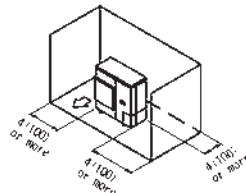


(2) Series installation

- (2 or more)
- Obstacle on both sides

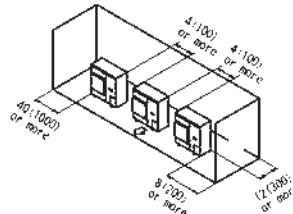


(b) Obstacle above, too

- (1) Stand-alone installation
- Obstacle on the suction side, too

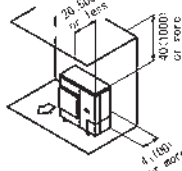


Obstacle on the suction side and both sides

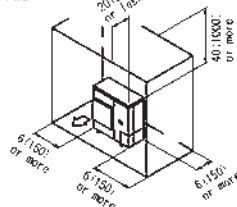

(2) Series installation


- (2 or more)
- Obstacle on the suction side and both sides

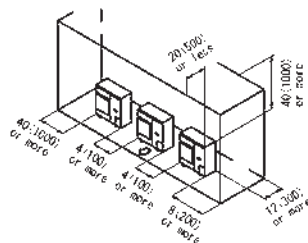


2. Where there is an obstacle on the discharge side:

(a) No obstacle above

- (1) Stand-alone installation

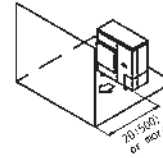


- (2) Series installation
- (2 or more)

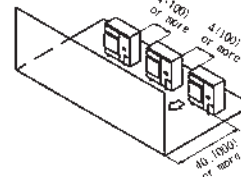


(b) Obstacle above, too

- (1) Stand-alone installation

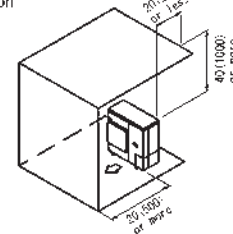

- (2) Series installation
- (2 or more)

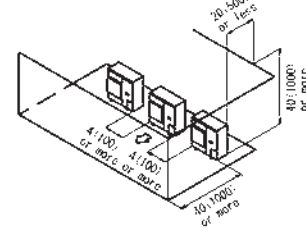

3. Where there are obstacles on both suction side and discharge sides:


Pattern 1

Where the obstacles on the discharge side is higher than the unit:


(There is no height limit for obstructions on the intake side.)

(a) No obstacle above

- (1) Stand-alone installation

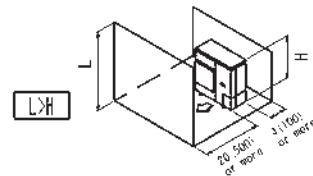

- (2) Series installation
- (2 or more)

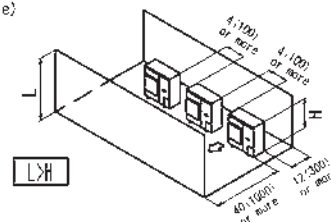

RXSQ24 - 48TAVJUA


(b) Obstacle above, too

(1) Stand-alone installation

The relations between H, A and L are as follows:

	L	A
$L \leq H$	$0 < L \leq 1/2H$	30 (750)
	$1/2H < L \leq H$	40 (1000)
$H < L$	Set the stand as: $L \leq H$	


Close the bottom of the installation frame to prevent the discharged air from being bypassed.

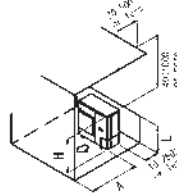(2) Series installation
(2 or more)

The relations between H, A and L are as follows:

	L	A
$L \leq H$	$0 < L \leq 1/2H$	40 (1000)
	$1/2H < L \leq H$	50 (1250)
$H < L$	Set the stand as: $L \leq H$	

Close the bottom of the installation frame to prevent the discharged air from being bypassed.

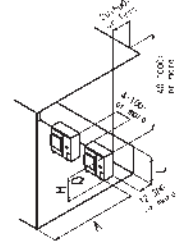


Only two units can be installed for this series.

Pattern 2

Where the obstacles on the discharge side is lower than the unit.
(There is no height limit for obstructions on the intake side.)


(a) No obstacle above

(1) Stand-alone installation

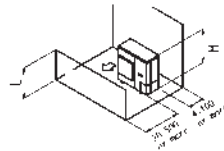(2) Series installation
(2 or more)

The relations between H, A and L are as follows:

	L	A
$L \leq H$	$0 < L \leq 1/2H$	10 (250)
	$1/2H < L \leq H$	12 (300)

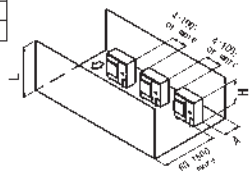


(b) Obstacle above, too

(1) Stand-alone installation

The relations between H, A and L are as follows:

	L	A
$L \leq H$	$0 < L \leq 1/2H$	4 (100)
	$1/2H < L \leq H$	8 (200)
$H < L$	Set the stand as: $L \leq H$	

Close the bottom of the installation frame to prevent the discharged air from being bypassed.

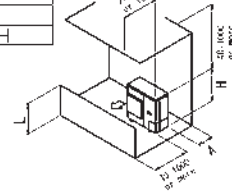


(2) Series installation

The relations between H, A and L are as follows:

	L	A
$L \leq H$	$0 < L \leq 1/2H$	10 (250)
	$1/2H < L \leq H$	12 (300)
$H < L$	Set the stand as: $L \leq H$	

Close the bottom of the installation frame to prevent the discharged air from being bypassed.


Only two units can be installed for this series.

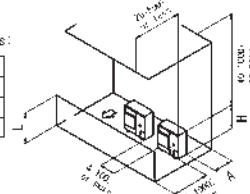

4. Double-decker installation

(a) Obstacle on the discharge side
Close the gap Z (the gap between the upper and lower outdoor units) to prevent the discharged air from being bypassed.


Do not stack more than two units.

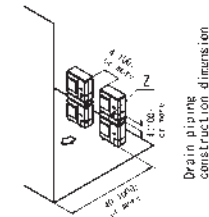

Drain piping construction dimension

(b) Obstacle on the suction side
Close the gap Z (the gap between the upper and lower outdoor units) to prevent the discharged air from being bypassed.


Do not stack more than two units.

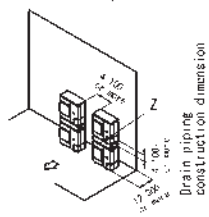

Drain piping construction dimension

5. Multiple rows of series installation
(on the rooftop, etc.)


(a) One row of stand alone installation

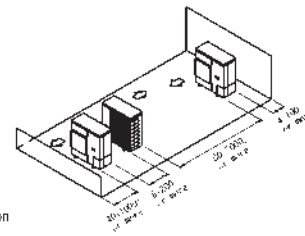

(b) Rows of series installation
(2 or more)

The relations between H, A and L are as follows:

	L	A
$L \leq H$	$0 < L \leq 1/2H$	10 (250)
	$1/2H < L \leq H$	12 (300)
$H < L$	Cannot be installed	

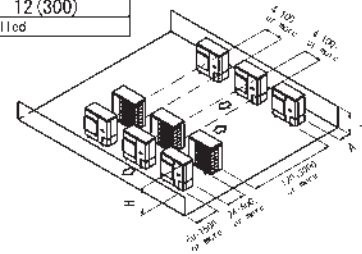



RXSQ60TAVJUA

REQUIRED INSTALLATION SPACE


The unit of the values is inch(mm).

1. Where there is an obstacle on the suction side:**(a) No obstacle above**



- (1) Stand-alone installation
 - Obstacle on the suction side only

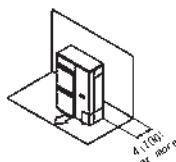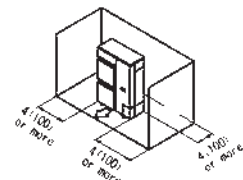**- Obstacle on both sides****(2) Series installation (2 or more)**


- Obstacle on both sides

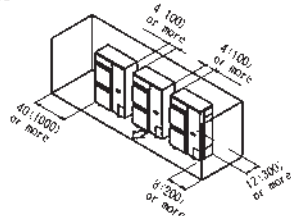**(b) Obstacle above, too**



- (1) Stand-alone installation
 - Obstacle on the suction side, too

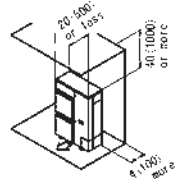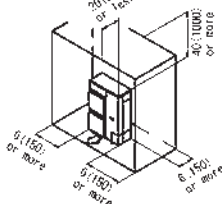**- Obstacle on the suction side and both sides****(2) Series installation (2 or more) (NOTE)**



- Obstacle on the suction side and both sides

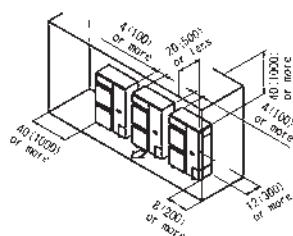**2. Where there is an obstacle on the discharge side:****(a) No obstacle above**

- (1) Stand-alone installation

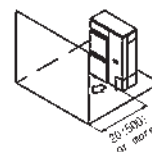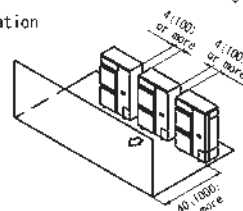**(2) Series installation (2 or more)****(b) Obstacle above, too**



- (1) Stand-alone installation

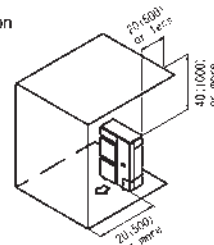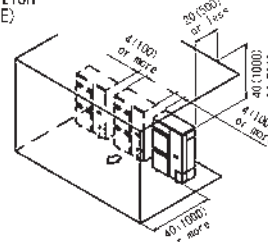**(2) Series installation (2 or more) (NOTE)****3. Where there are obstacles on both suction side and discharge sides:****Pattern 1**

Where the obstacles on the discharge side is higher than the unit:
 (There is no height limit for obstructions on the intake side.)

(a) No obstacle above

- (1) Stand-alone installation

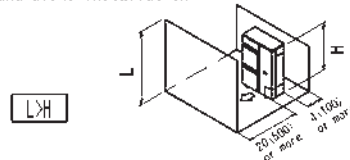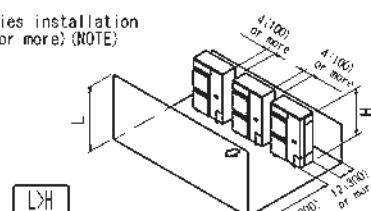**(2) Series installation (2 or more) (NOTE)**

RXSQ60TAVJUA


(b) Obstacle above, too

(1) Stand-alone installation

The relations between H, A and L are as follows:

	L	A
$L \leq H$	$0 < L \leq 1/2H$	30 (750)
	$1/2H < L \leq H$	40 (1000)
$H < L$	Set the stand as: $L \leq H$	

Close the bottom of the installation frame to prevent the discharged air from being bypassed.

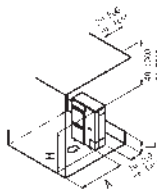


The relations between H, A and L are as follows:

	L	A
$L \leq H$	$0 < L \leq 1/2H$	40 (1000)
	$1/2H < L \leq H$	50 (1250)
$H < L$	Set the stand as: $L \leq H$	

Close the bottom of the installation frame to prevent the discharged air from being bypassed.

Only two units can be installed for this series.

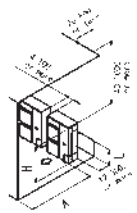

Pattern 2

Where the obstacles on the discharge side is lower than the unit.

There is no height limit for obstructions on the intake side.

(a) No obstacle above

(1) Stand-alone installation


 $L \leq H$

(2) Series installation

(2 or more, NOTE)

The relations between H, A and L are as follows:

	L	A
$L \leq H$	$0 < L \leq 1/2H$	10 (250)
	$1/2H < L \leq H$	12 (300)

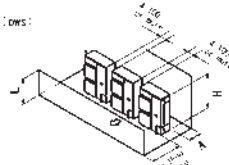


(b) Obstacle above, too

(1) Stand-alone installation

The relations between H, A and L are as follows:

	L	A
$L \leq H$	$0 < L \leq 1/2H$	4 (100)
	$1/2H < L \leq H$	8 (200)
$H < L$	Set the stand as: $L \leq H$	

Close the bottom of the installation frame to prevent the discharged air from being bypassed.

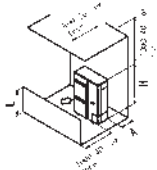

NOTE: When install the units in a line, have to leave the distance over 4(100) between the two units.


(2) Series installation (NOTE)

The relations between H, A and L are as follows:

	L	A
$L \leq H$	$0 < L \leq 1/2H$	10 (250)
	$1/2H < L \leq H$	12 (300)
$H < L$	Set the stand as: $L \leq H$	

Close the bottom of the installation frame to prevent the discharged air from being bypassed.

Only two units can be installed for this series.

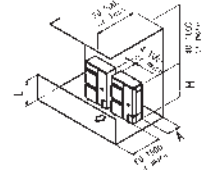

4. Double-decker installation


(a) Obstacle on the discharge side (NOTE)

Close the gap Z (the gap between the upper and lower outdoor units) to prevent the discharged air from being bypassed.

Do not stack more than two unit.

Set the board if need supply, as the detail A between two units to prevent the drainage from freezing.

Leave the enough space between the layer one and the board.

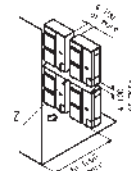


(b) Obstacle on the suction side (NOTE)

Close the gap Z (the gap between the upper and lower outdoor units) to prevent the discharged air from being bypassed.

Do not stack more than two unit.


Set the board if need supply, as the detail A between two units to prevent the drainage from freezing.

Leave the enough space between the layer one and the board.

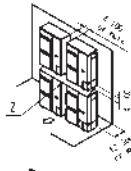

5. Multiple rows of series installation (on the rooftop, etc.)


(a) One row of stand-alone installation

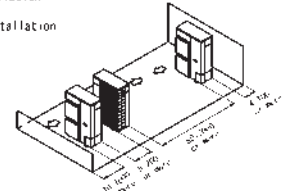

(b) Rows of series installation (2 or more)

The relations between H, A and L are as follows:


	L	A
$L \leq H$	$0 < L \leq 1/2H$	10 (250)
	$1/2H < L \leq H$	12 (300)
$H < L$	Set the stand as: $L \leq H$	

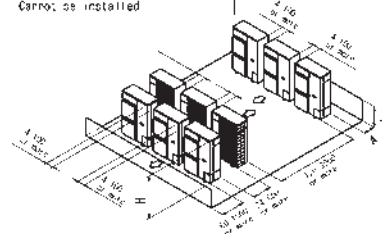

9. Center of Gravity

RXSQ24 - 36TAVJUA


Unit : in. (mm)

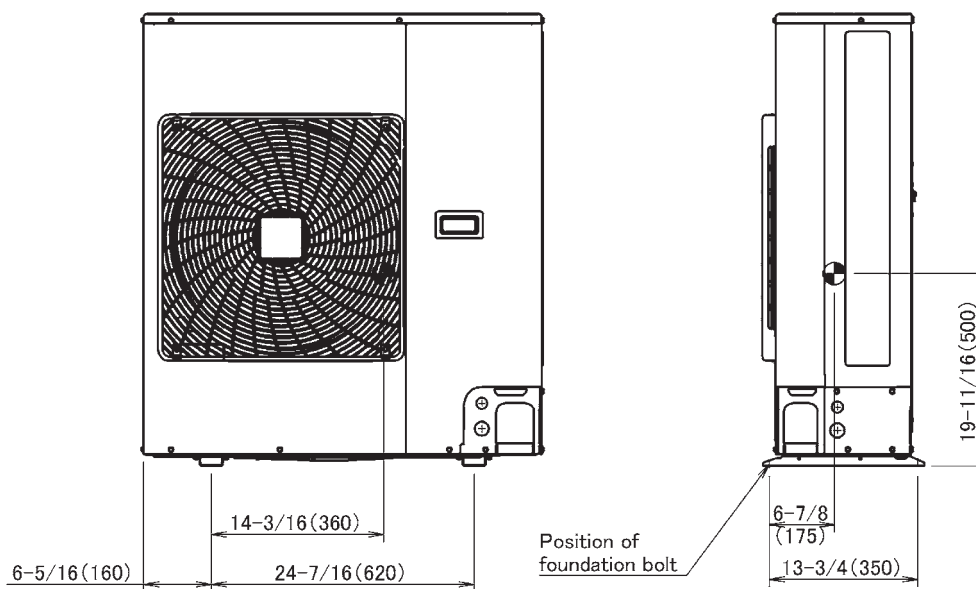

4D101439A

RXSQ48TAVJUA


Unit : in. (mm)

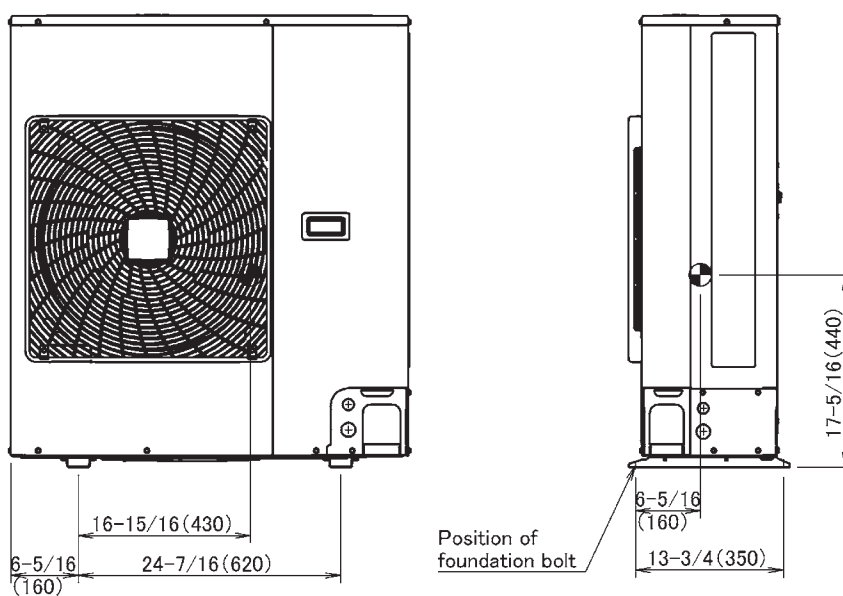

4D101440A

RXSQ60TAVJUA


Unit : in. (mm)

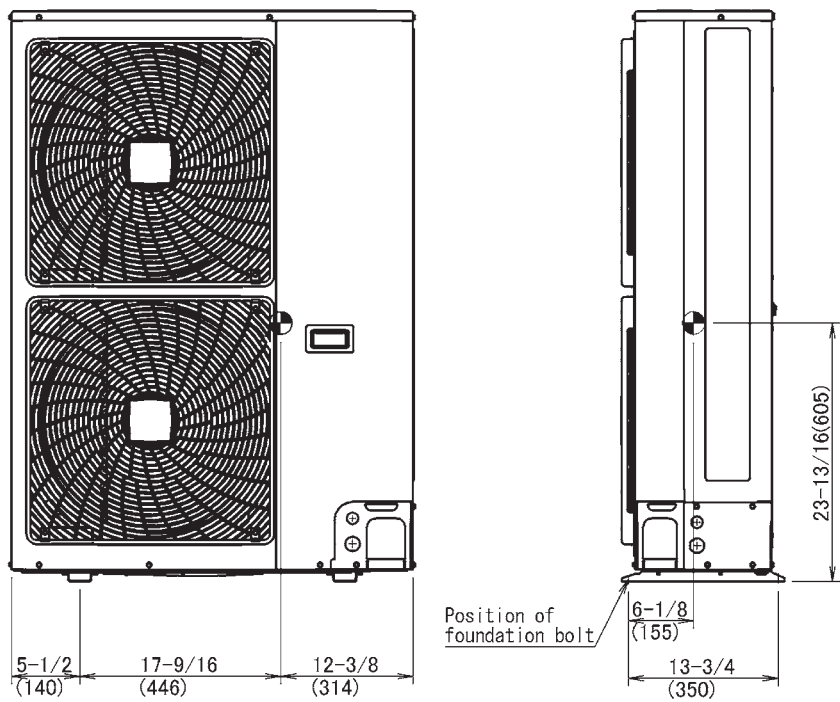

4D101441A


10.Piping Diagrams

RXSQ24 - 36TAVJUA

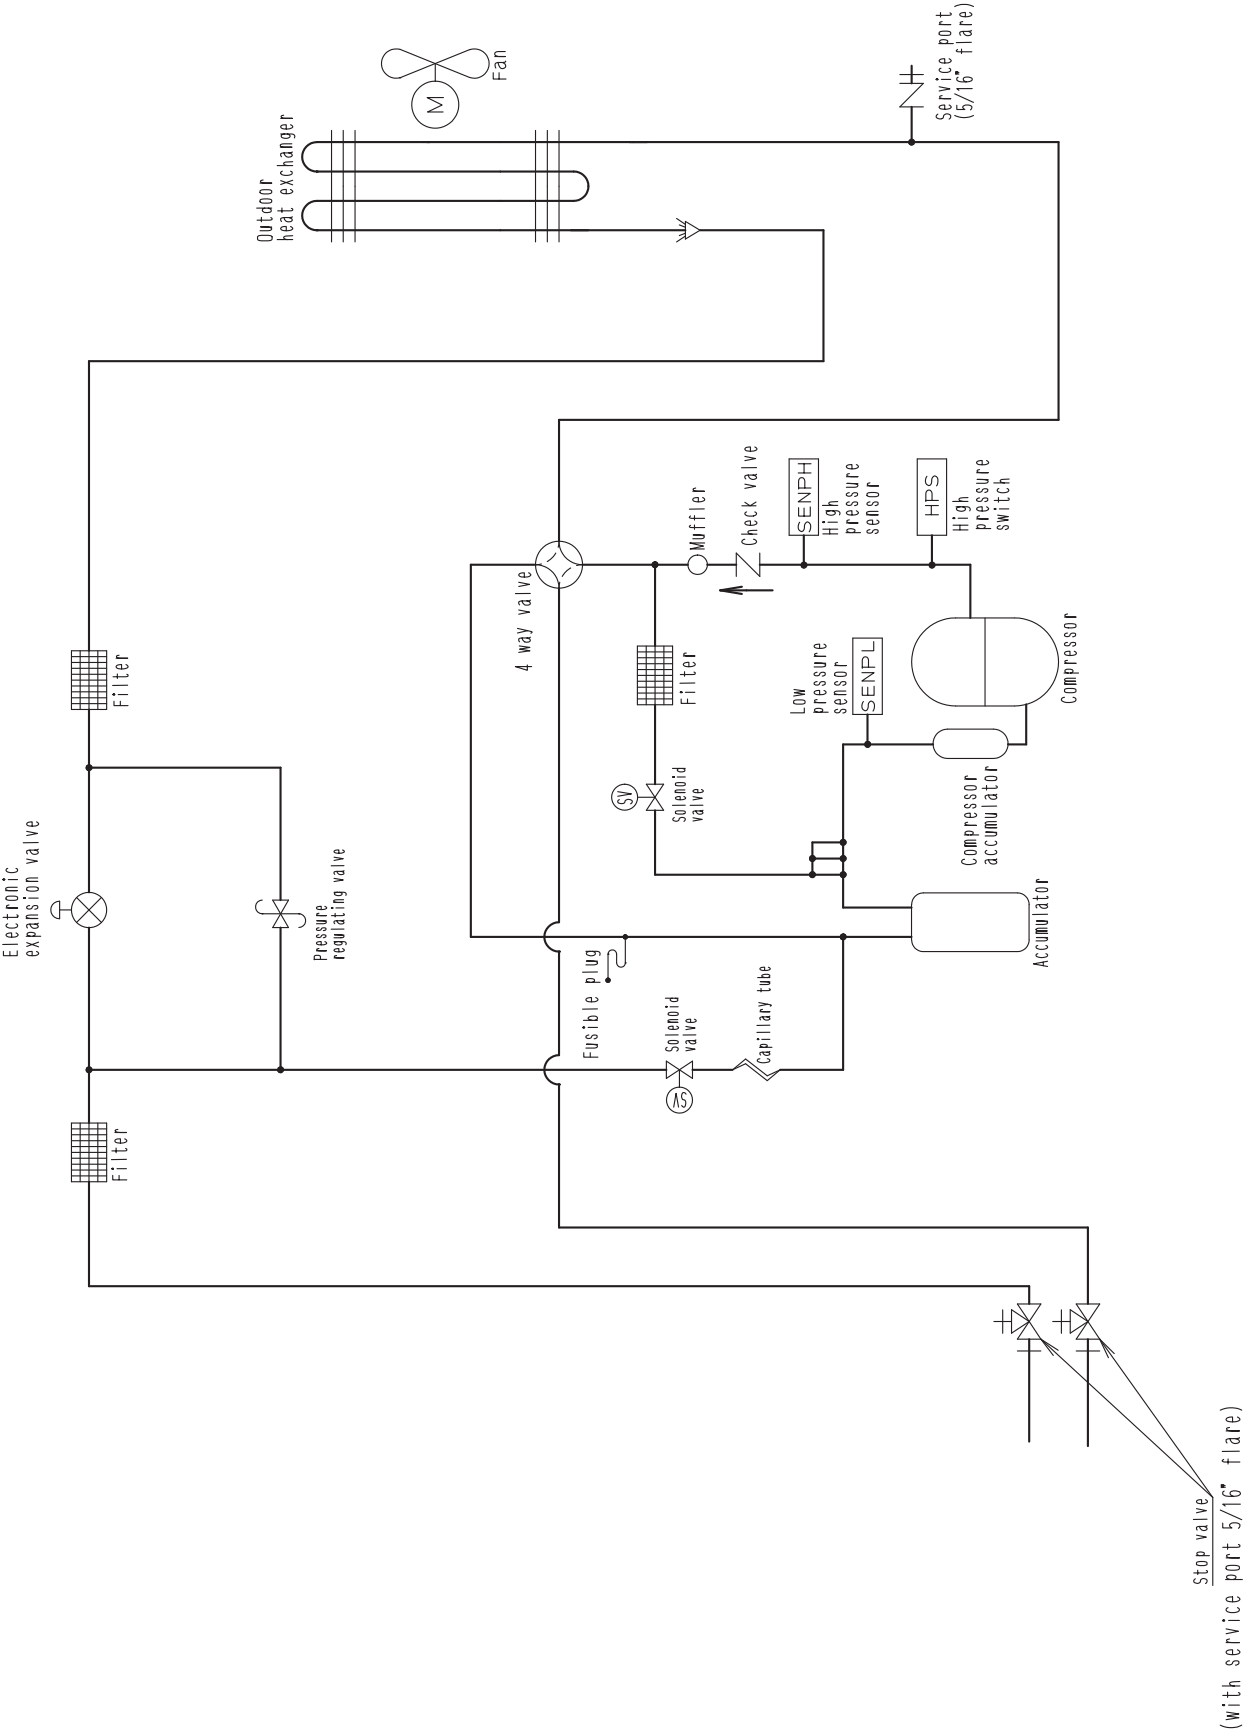

3D082498F


RXSQ48TAVJUA

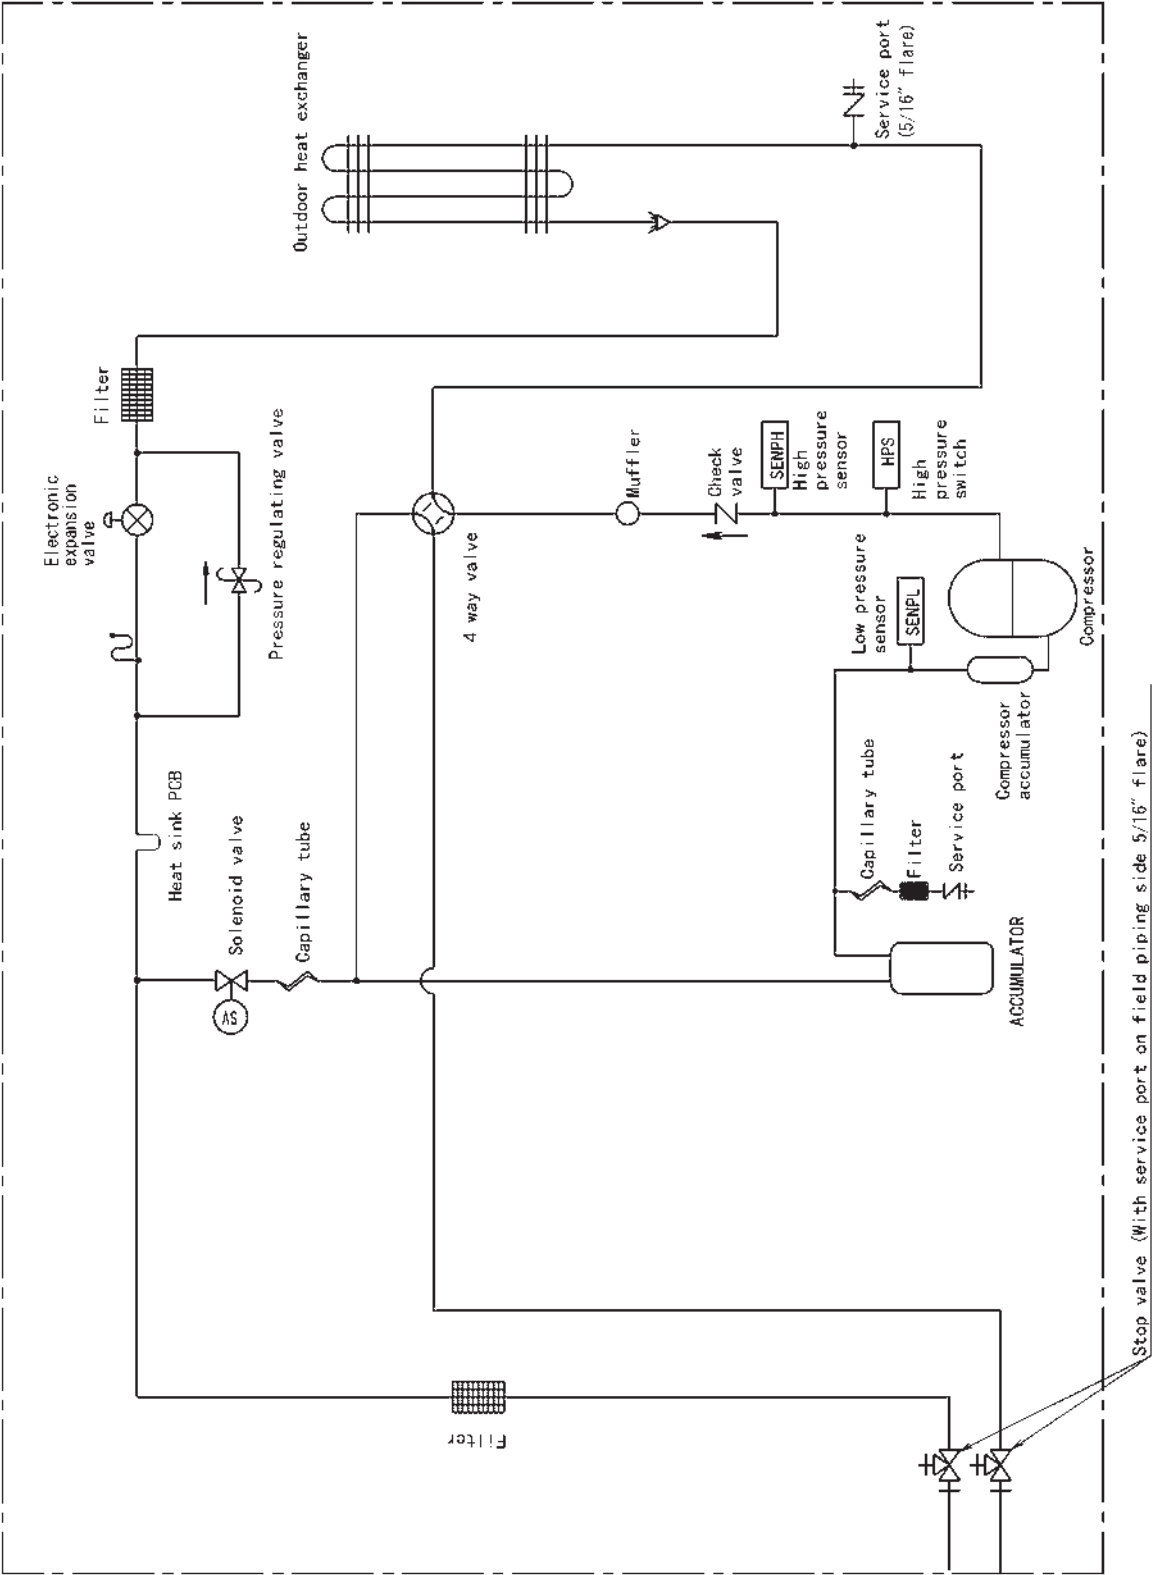

Stop valve (With service port on field piping side 5/16" flare)

3D088594A


RXSQ60TAVJUA

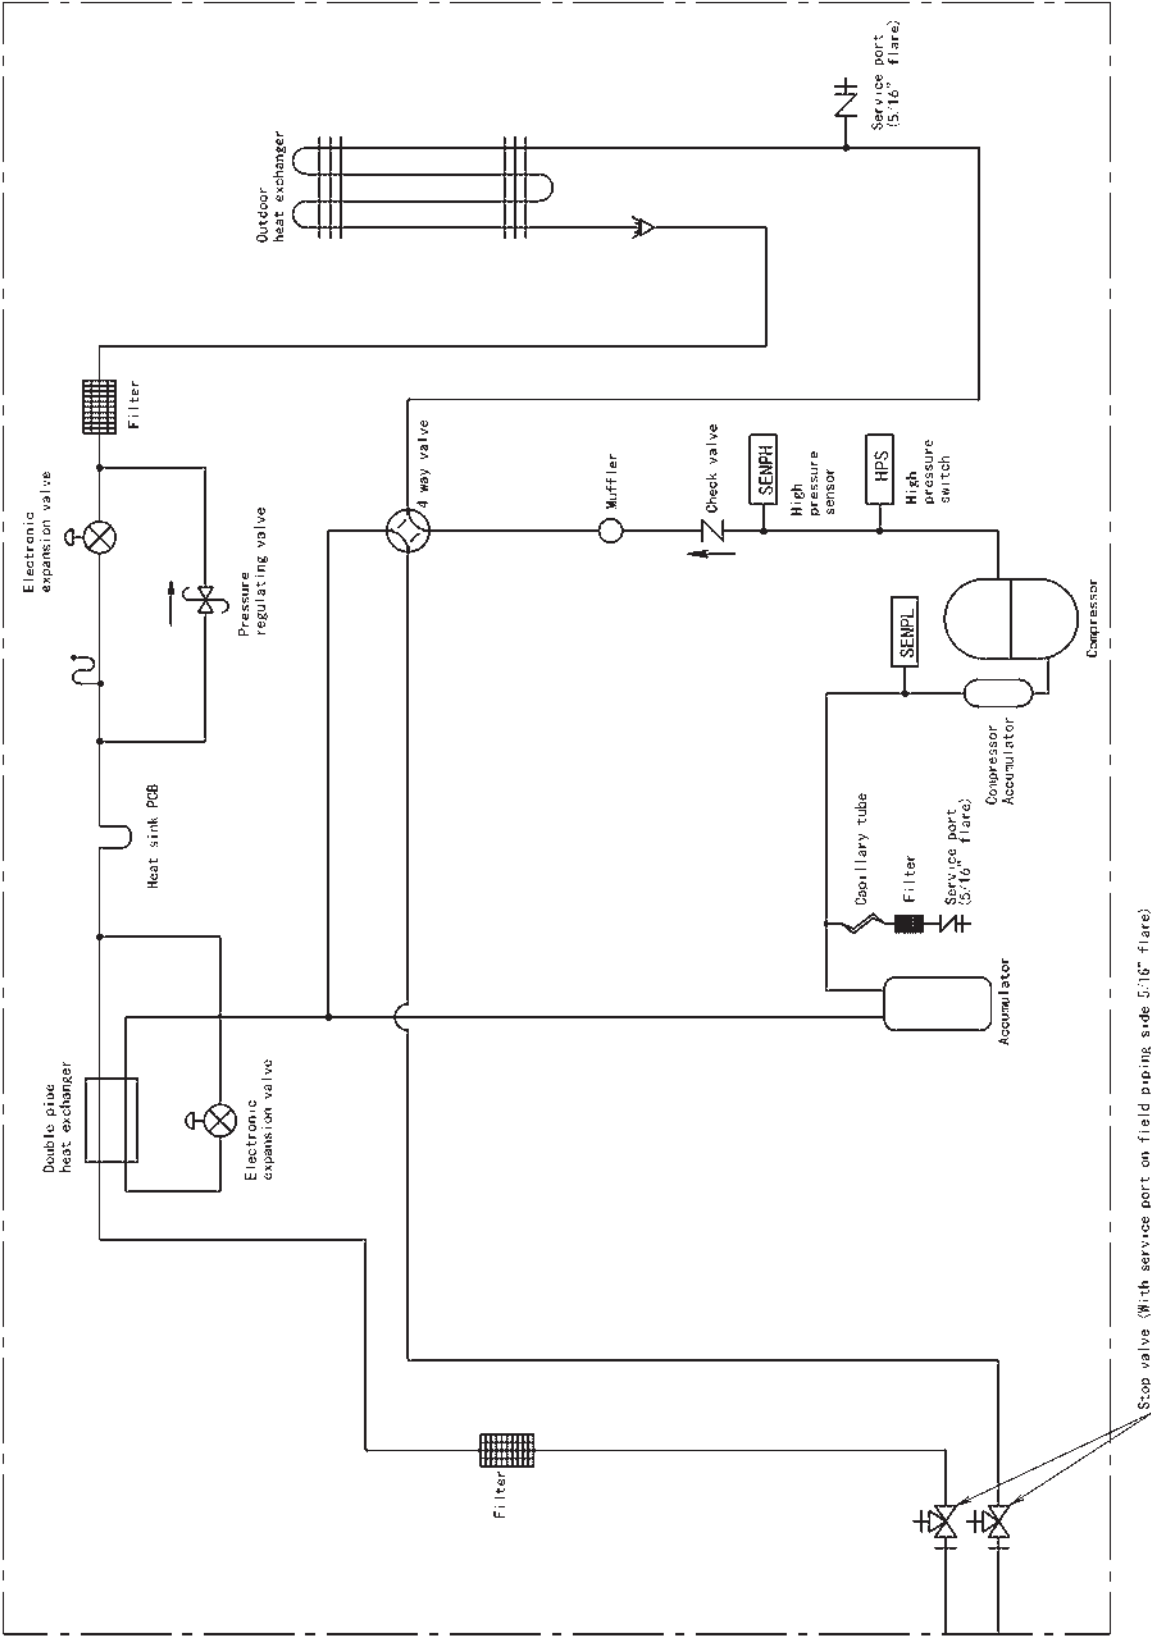

3D088595A

11. Wiring Diagrams

RXSQ24 - 36TAVJUA

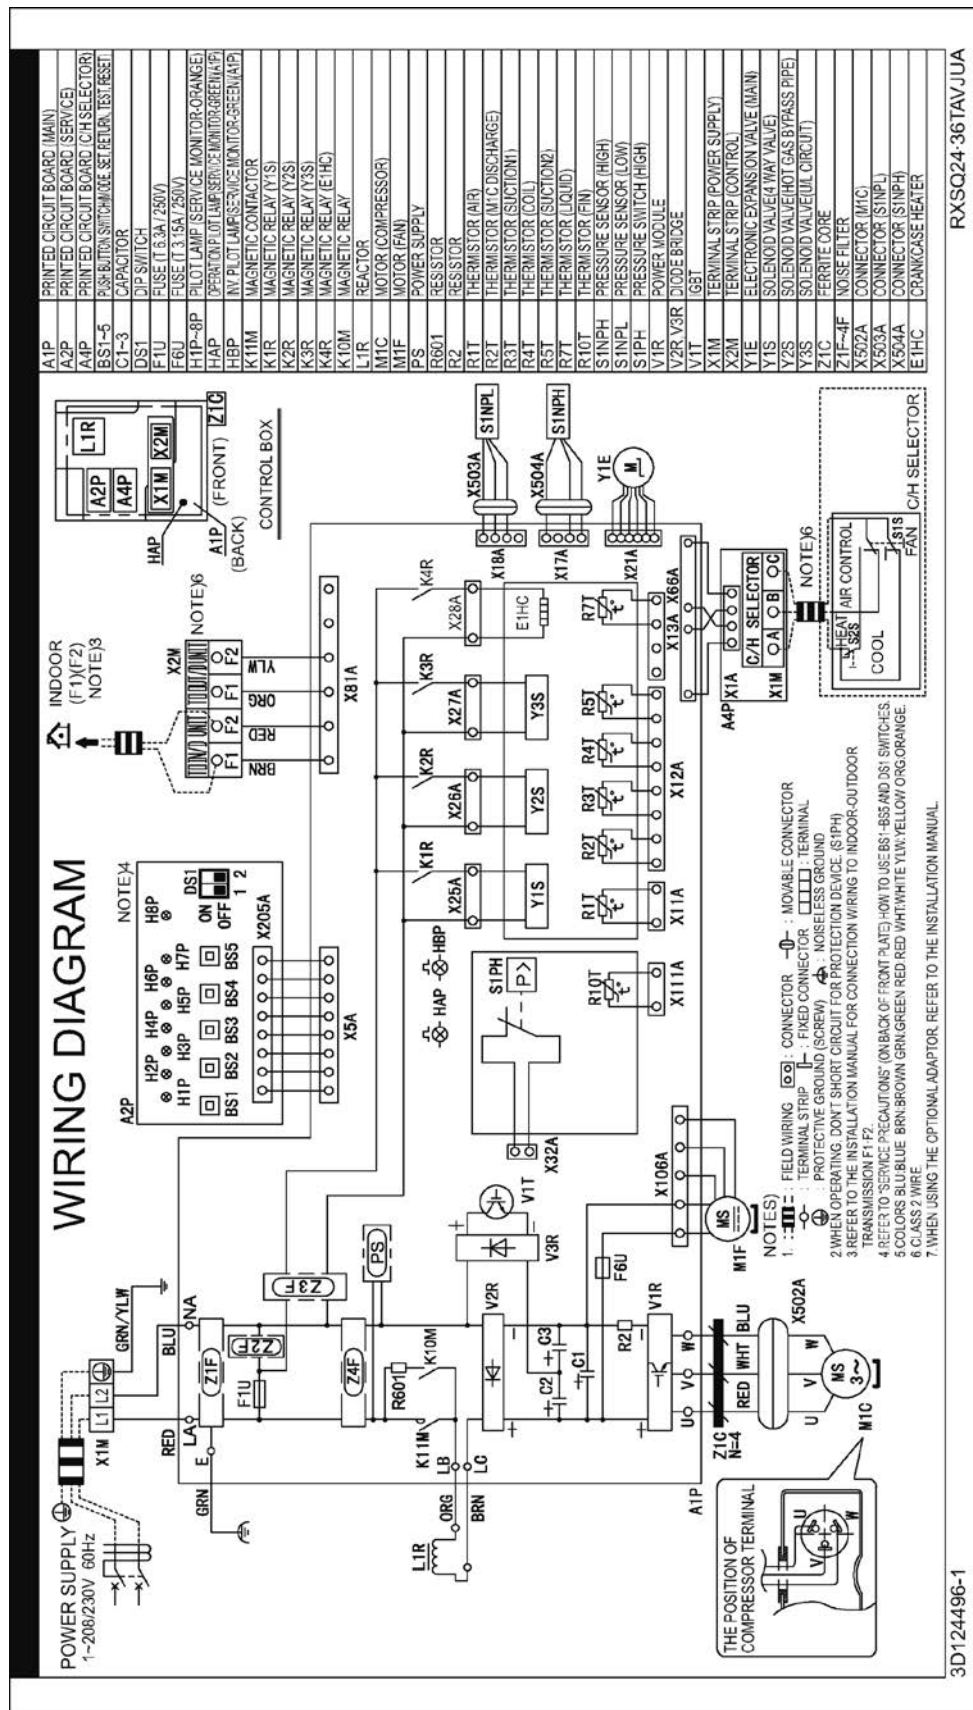


3D124496-1

3D124496

RXSQ48TAVJUA


WIRING DIAGRAM

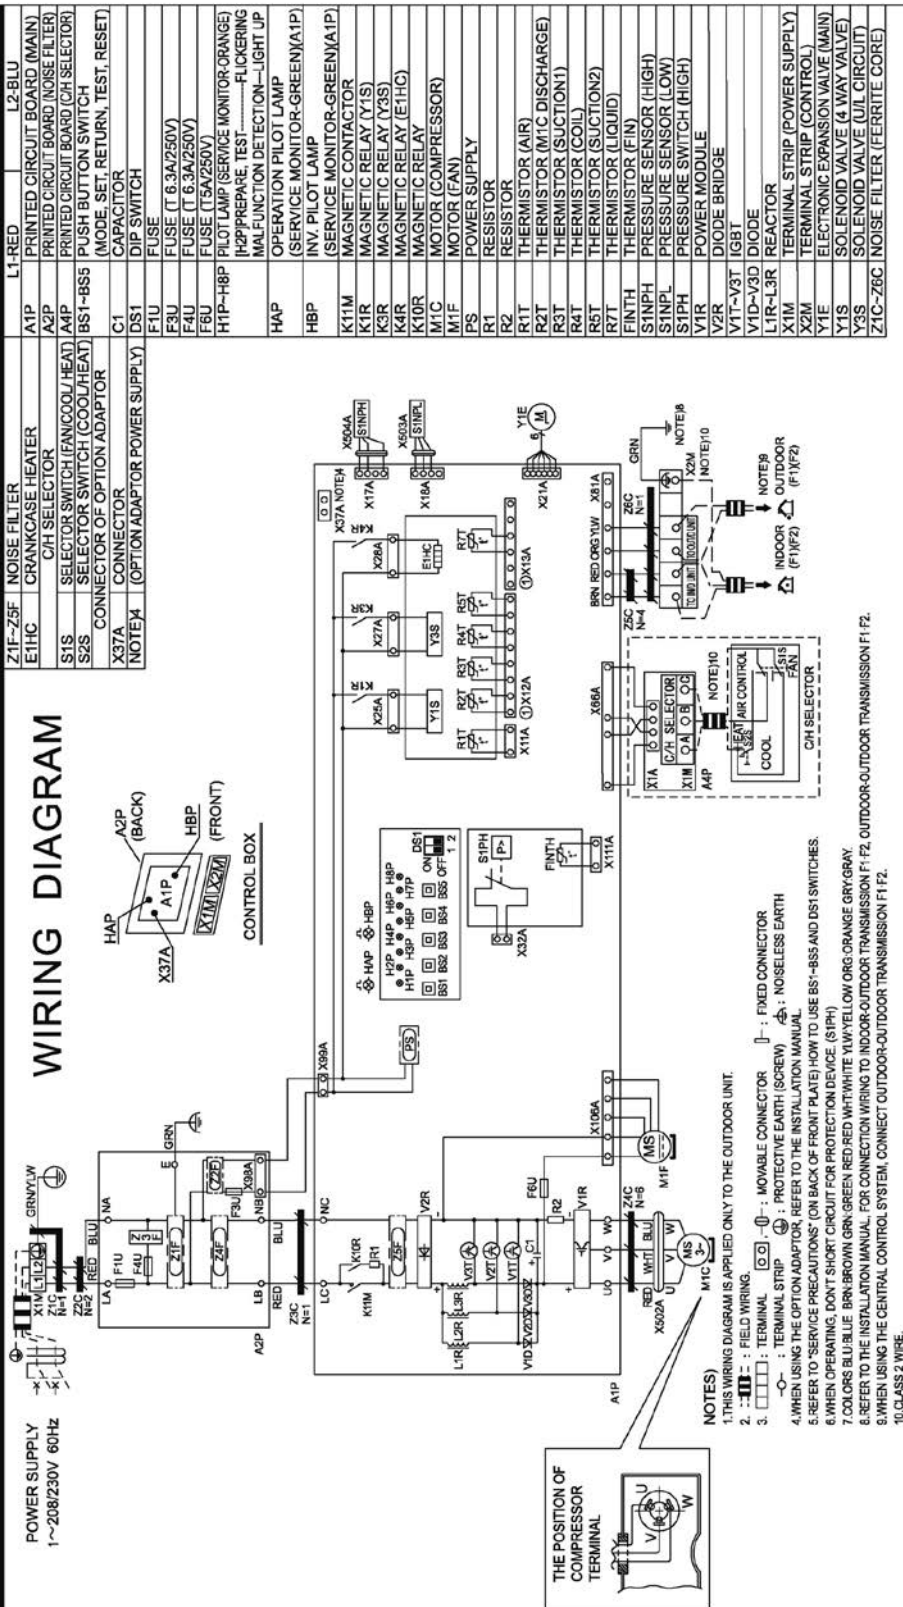

3D124498-1

3D12498

RXSQ60TAVJUA

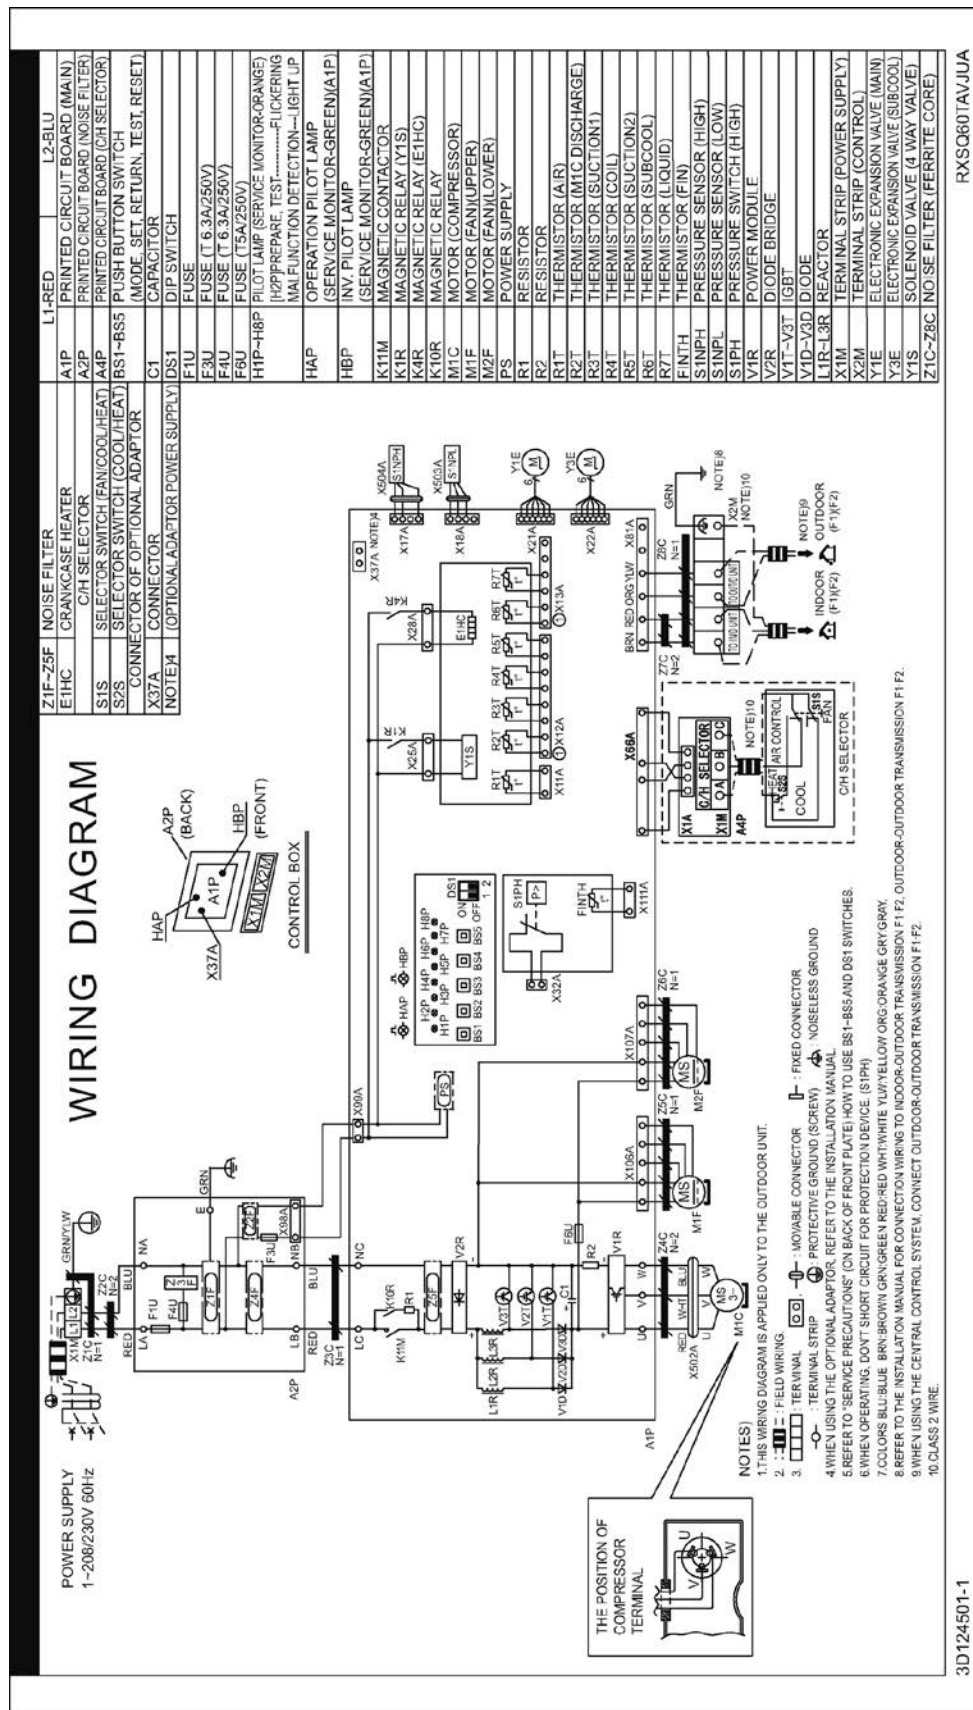


3D124501-1

3D124501


12.Field Wiring

RXSQ24 - 48TAVJUA

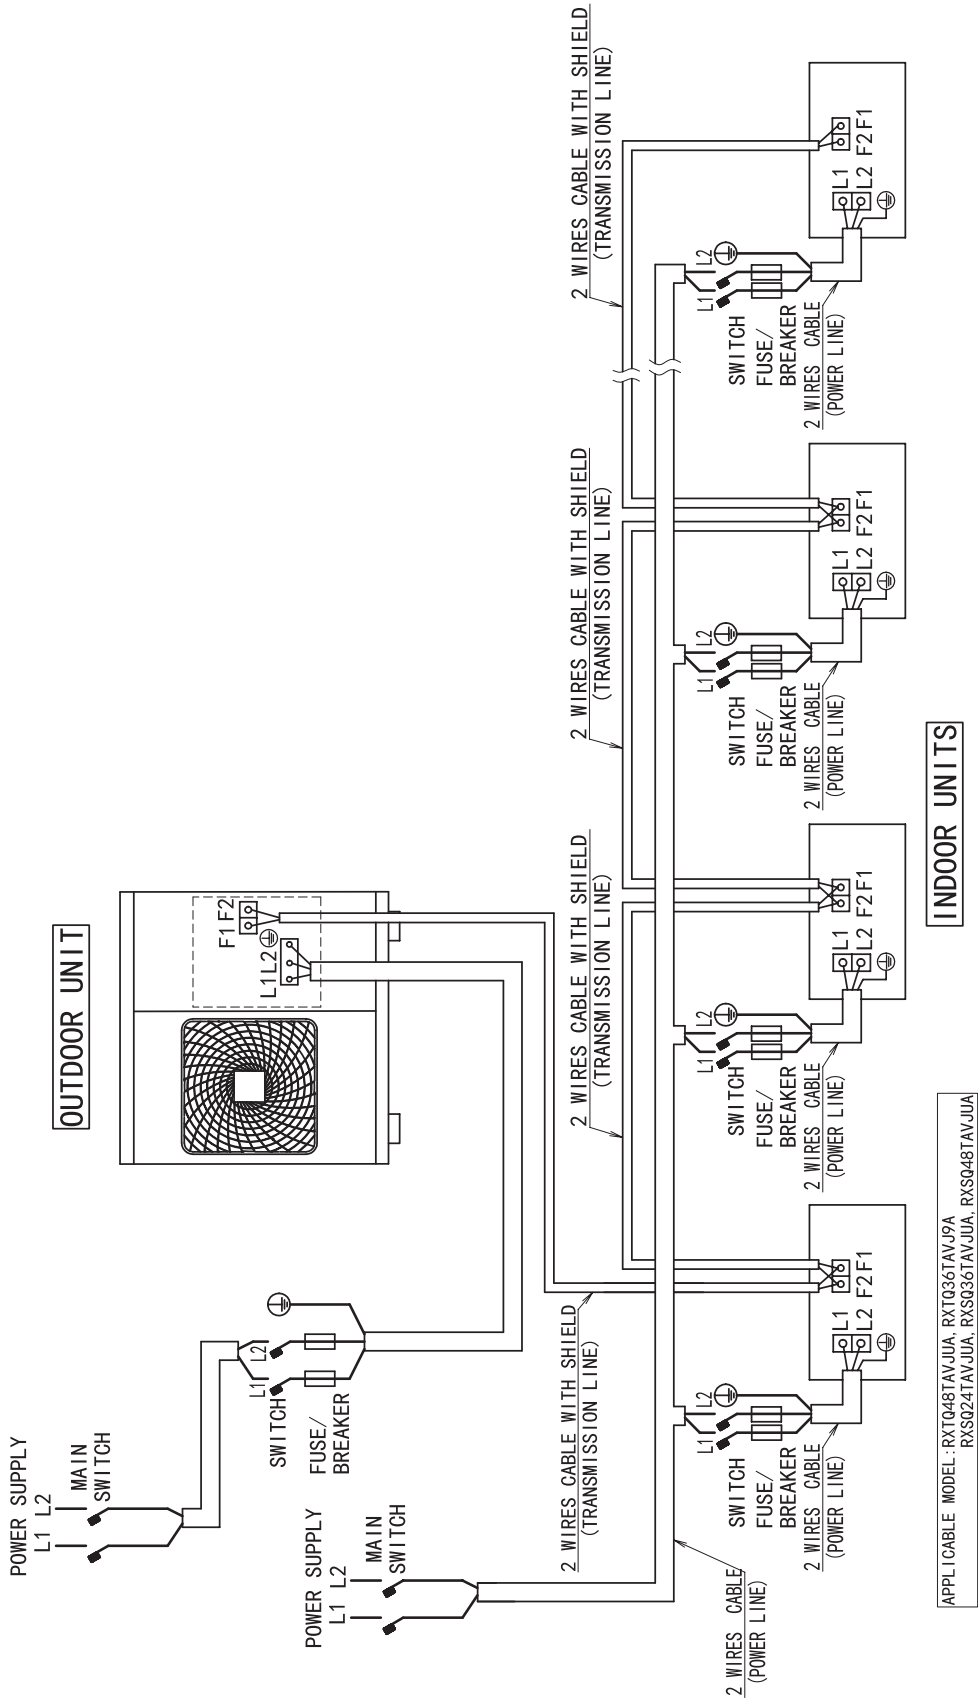

- NOTES: 1) ALL WIRING, COMPONENTS AND MATERIALS TO BE PROCURED ON THE SITE MUST COMPLY WITH THE APPLICABLE LOCAL AND NATIONAL CODES.
2) USE COPPER CONDUCTORS ONLY.
3) AS FOR DETAILS, SEE WIRING DIAGRAM.
4) INSTALL CIRCUIT BREAKER FOR SAFETY.
5) ALL FIELD WIRING AND COMPONENTS MUST BE PROVIDED BY LICENSED ELECTRICIAN.
6) UNIT SHALL BE GROUNDED IN COMPLIANCE WITH THE APPLICABLE LOCAL AND NATIONAL CODES.
7) WIRING SHOWN IS GENERAL POINTS-OF-CONNECTION GUIDES ONLY AND IS NOT INTENDED FOR OR TO INCLUDE ALL DETAILS FOR A SPECIFIC INSTALLATION.
8) BE SURE TO INSTALL A SWITCH AND A FUSE TO THE POWER LINE OF EACH EQUIPMENT.
9) INSTALL A MAIN SWITCH THAT CAN INTERRUPT ALL THE POWER SOURCES IN AN INTEGRATED MANNER BECAUSE THIS SYSTEM CONSISTS OF EQUIPMENT UTILIZING THE MULTIPLE POWER SOURCES.

RXSQ60TAVJUA

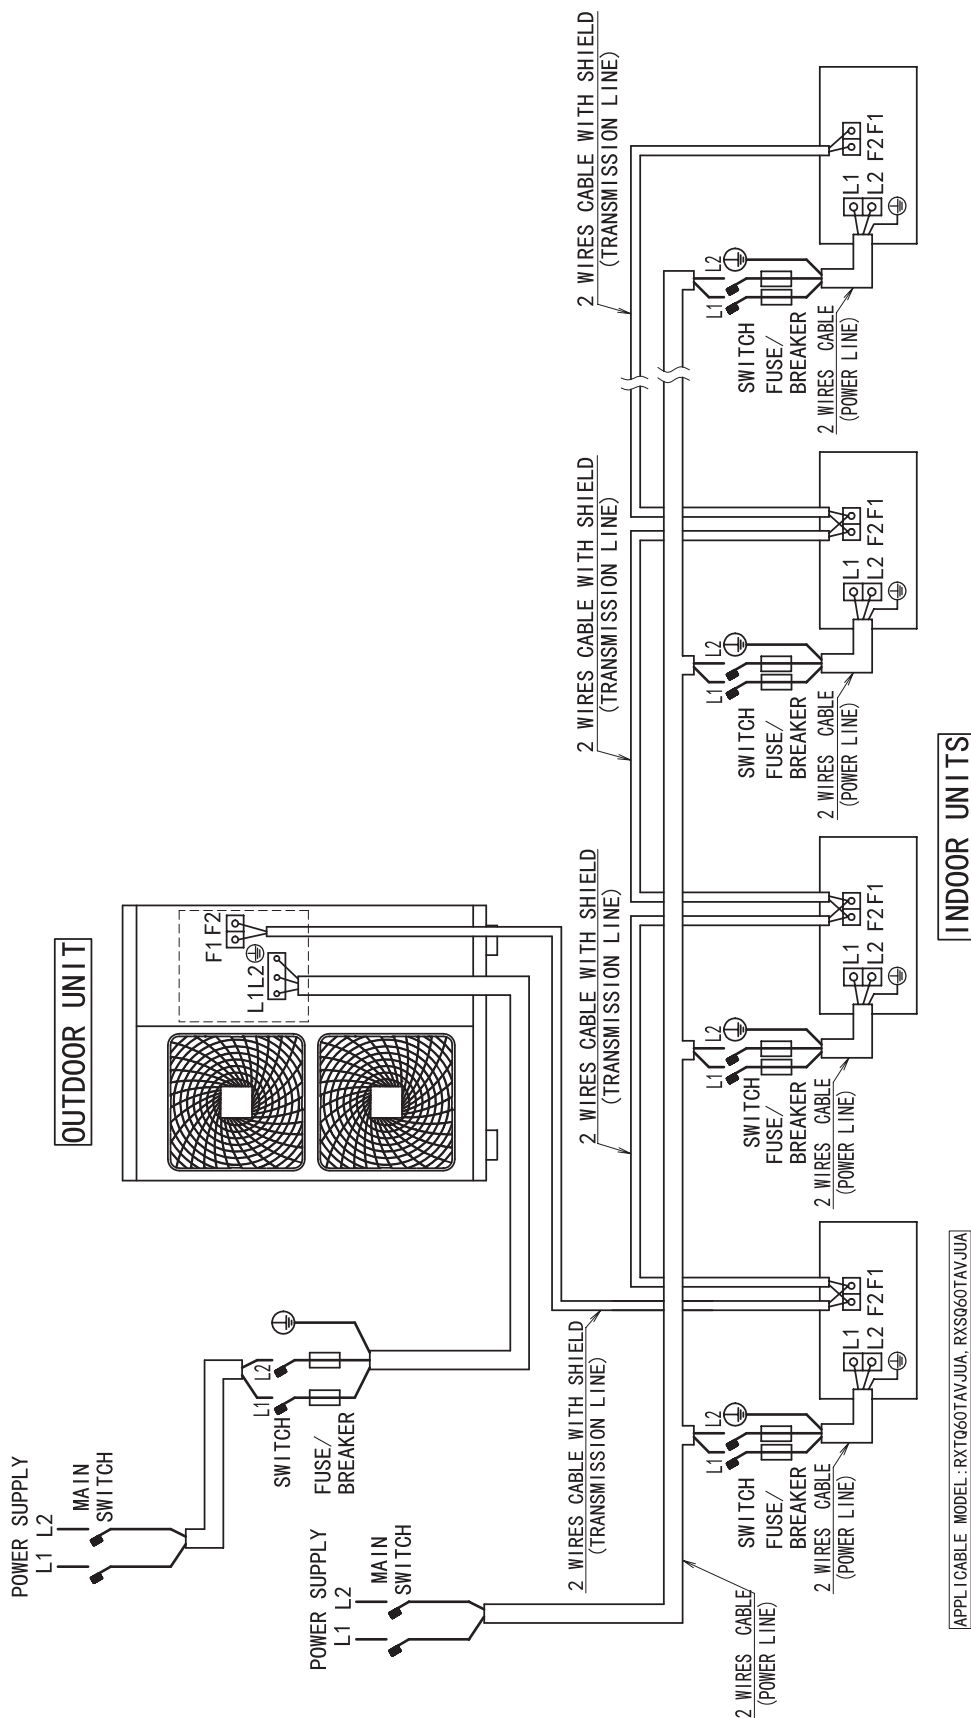

NOTES: 1) ALL WIRING, COMPONENTS AND MATERIALS TO BE PROCURED ON THE SITE MUST COMPLY WITH THE APPLICABLE LOCAL AND NATIONAL CODES.

- (1) ALL WIRING COMPONENTS AND MATERIALS TO BE PROCURED ON THE SITE MUST COMPLY WITH THE APPLICABLE LOCAL AND NATIONAL CODES.
- (2) USE COPPER CONDUCTORS ONLY.
- (3) AS FOR DETAILS, SEE WIRING DIAGRAM.
- (4) INSTALL CIRCUIT BREAKER FOR SAFETY.
- (5) ALL FIELD WIRING AND COMPONENTS MUST BE PROVIDED BY LICENSED ELECTRICIAN.
- (6) UNIT SHALL BE GROUNDED IN COMPLIANCE WITH THE APPLICABLE LOCAL AND NATIONAL CODES.
- (7) WIRING SHOWN IS GENERAL POINTS-OF-CONNECTION GUIDES ONLY AND IS NOT INTENDED FOR OR TO INCLUDE ALL DETAILS FOR A SPECIFIC INSTALLATION.
- (8) BE SURE TO INSTALL A SWITCH AND A FUSE TO THE POWER LINE OF EACH EQUIPMENT.
- (9) INSTALL A MAIN SWITCH THAT CAN INTERRUPT ALL THE POWER SOURCES IN AN INTEGRATED MANNER BECAUSE THIS SYSTEM CONSISTS OF EQUIPMENT UTILIZING THE MULTIPLE POWER SOURCES.

3D127113

13. Electrical Characteristics

RXSQ24 - 60TAVJUA

Model	Units				power supply		Comp.	OFM	
	Hz	Volts	Min.	Max.	MCA	MOP	RLA	KW	FLA
RXSQ24TAVJUA	60	208/230	187	253	16.5	20	15.3	0.2	0.6
RXSQ36TAVJUA	60	208/230	187	253	16.5	20	15.3	0.2	0.6
RXSQ48TAVJUA	60	208/230	187	253	29.1	35	19.0	0.2	0.6
RXSQ60TAVJUA	60	208/230	187	253	29.1	35	23.2	0.070 + 0.070	0.3 + 0.3

Notes :


1. RLA is based on the following conditions.
Power supply : 60Hz 208V/230V
Cooling
Indoor temp. 80.0°F DB (26.7°C DB) / 67.0°F WB (19.4°C WB)
Outdoor temp. 95.0°F DB (35.0°C DB)
Heating
Indoor temp. 70.0°F DB (21.1°C DB)
Outdoor temp. 47.0°F DB (8.3°C DB) / 43.0°F WB (6.1°C WB)
2. Voltage range.
Units are suitable for use on electrical systems where voltage supplied to unit terminal is not below or above listed range limits.
3. Maximum allowable voltage variation between phases is 2%.
4. MCA represents maximum input current.
5. MOP represents capacity which may accept MCA.
6. Select wire size based on the value of MCA.
7. MOP is used to select a fuse, circuit breaker, or ground fault circuit interrupter.

Symbols:

MCA : Minimum Circuit Ampacity. (A)
MOP : Maximum Overcurrent Protective Device (See note 7). (A)
RLA : Rated Load Ampere. (A)
OFM : Outdoor Fan Motor. (A)
FLA : Full Load Ampere. (A)
KW : Fan Motor Rated Output. (kW)


14.Operation Limits

RXSQ24 - 60TAVJUA

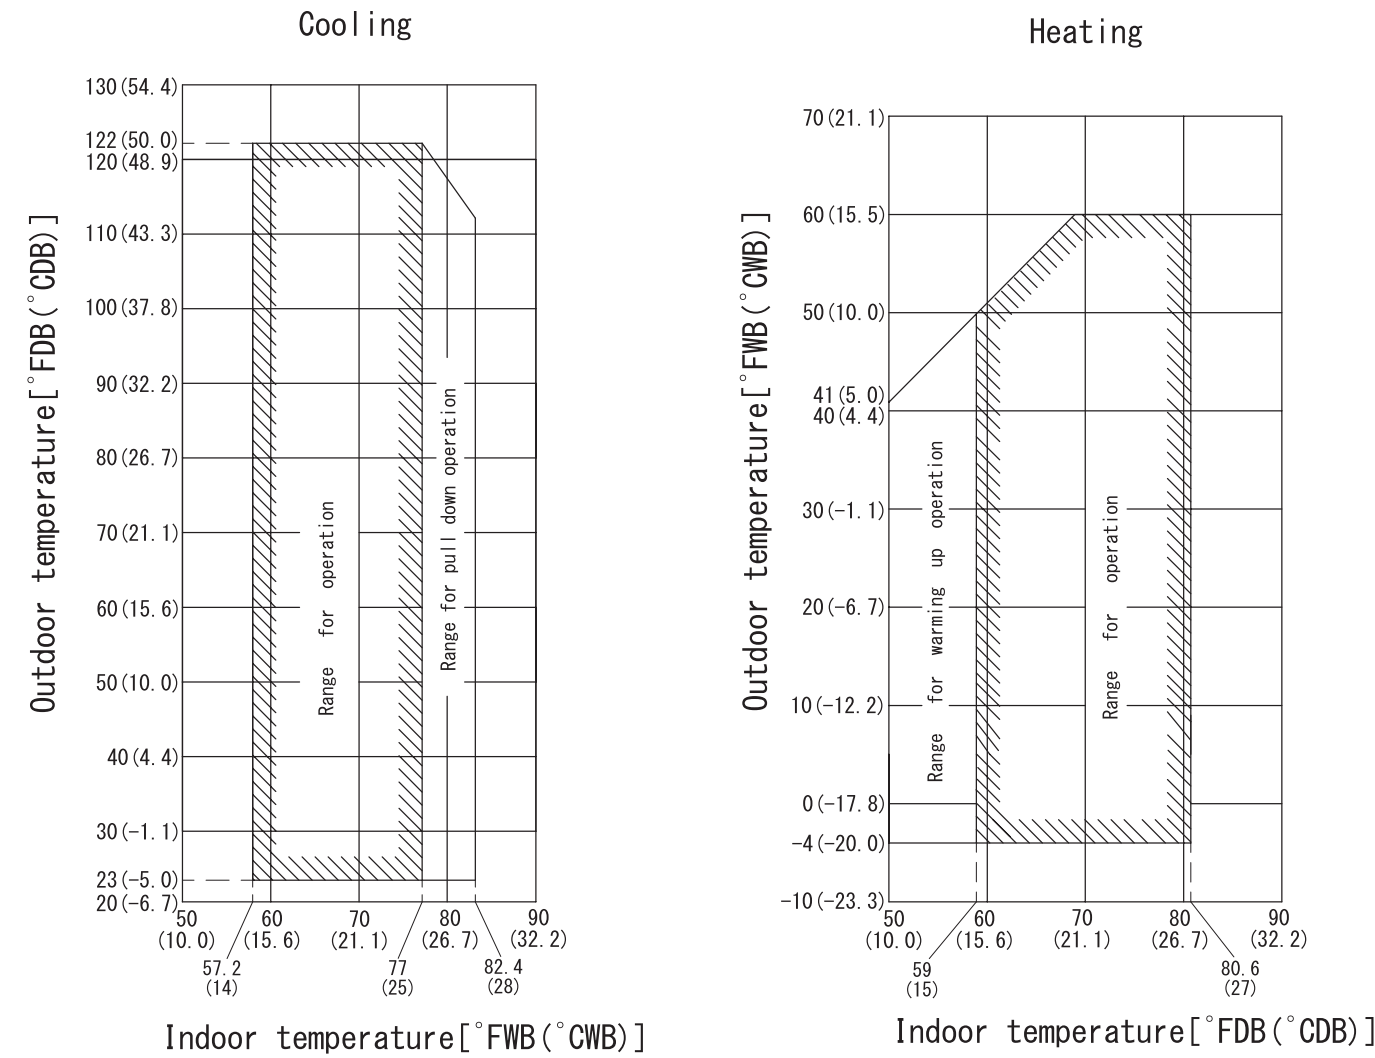


15.Sound Levels (Reference Data)

RXSQ24TAVJUA (Cooling)

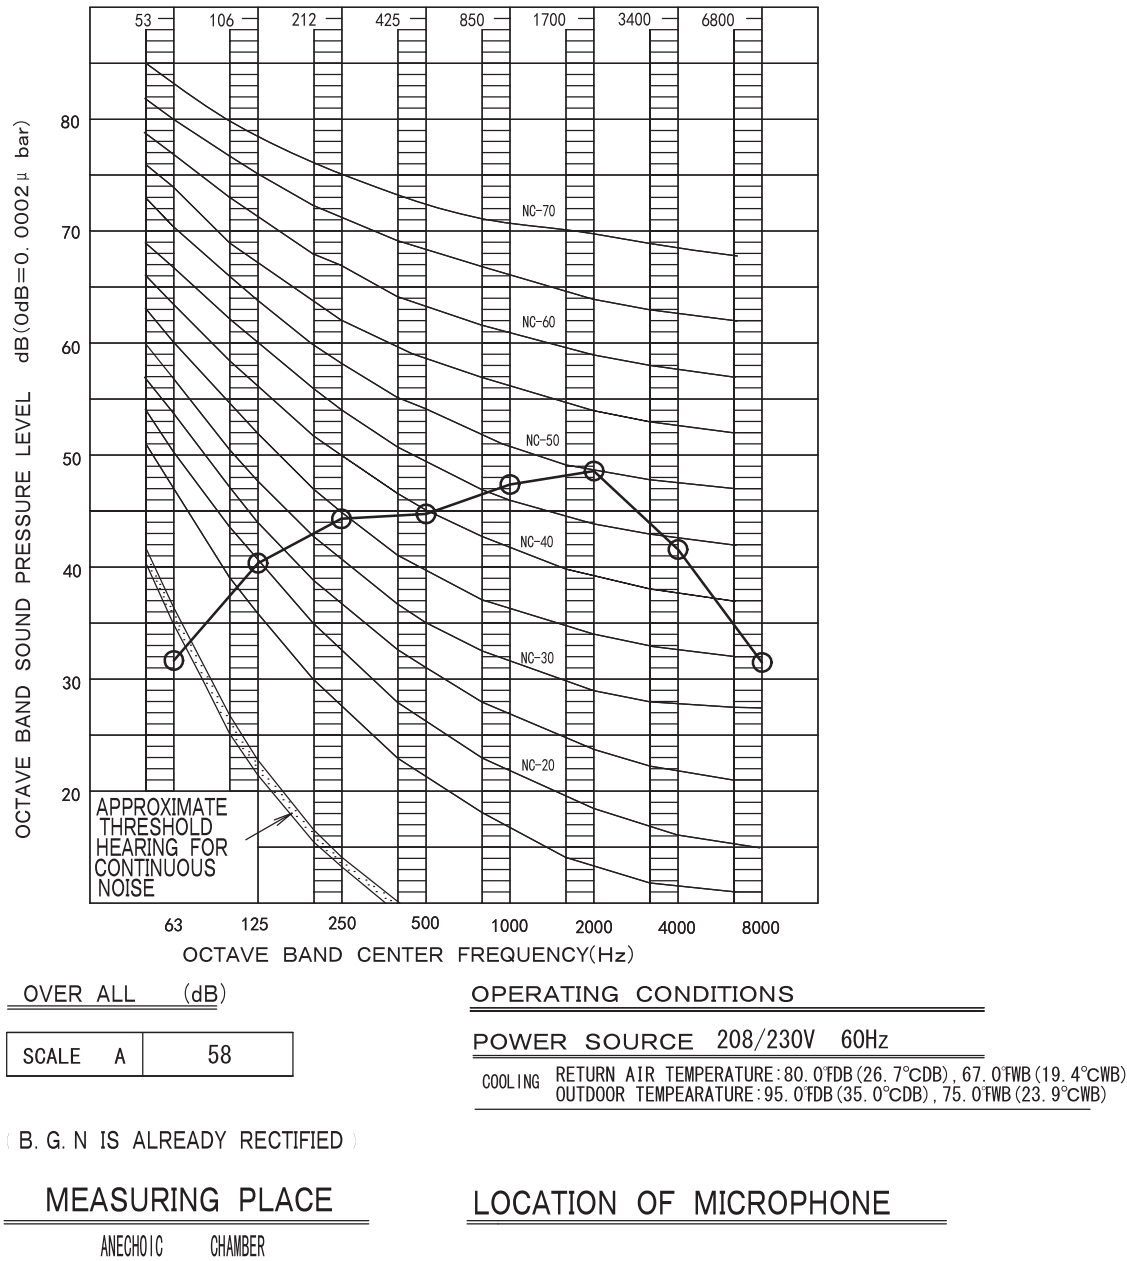

NOTE:THE OPERATING SOUND IS MEASURED IN ANECHOIC CHAMBER,
IF IT IS MEASURED UNDER THE ACTUAL INSTALLATION CONDITIONS,
IT IS NORMALLY OVER THE SET VALUE DUE TO ENVIRONMENTAL NOISE AND SOUND REFLECTION.

RXSQ24TAVJUA (Heating)

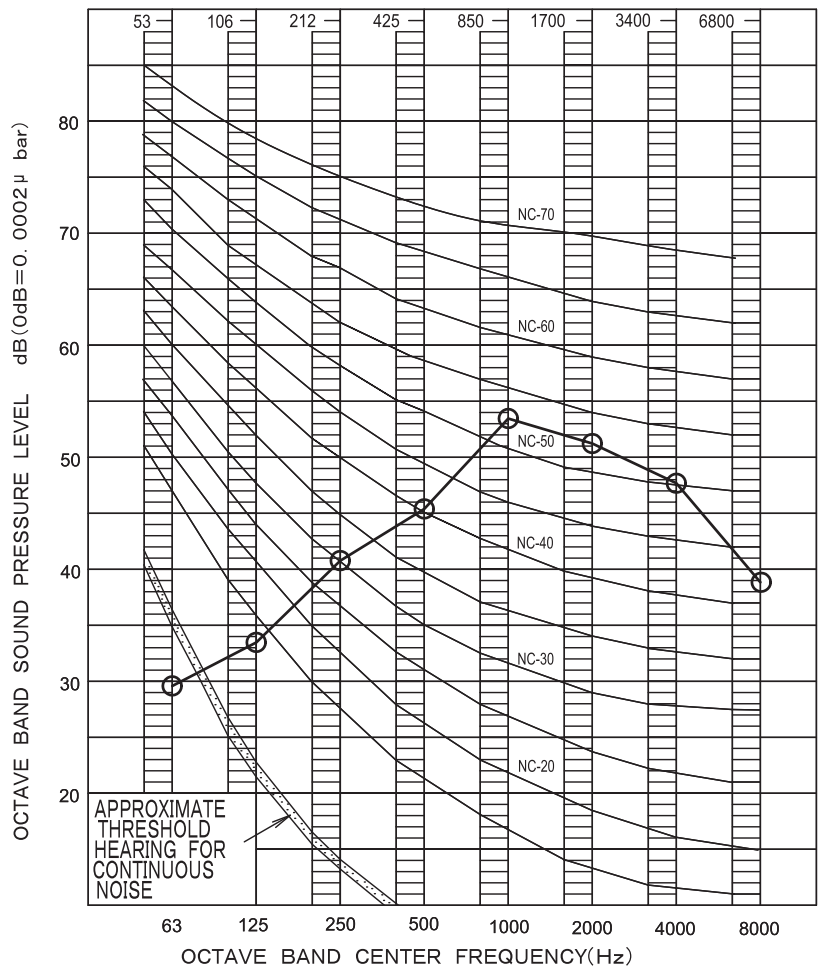

OVER ALL (dB)

SCALE A	61
---------	----

OPERATING CONDITIONS

POWER SOURCE 208/230V 60Hz


HEATING RETURN AIR TEMPERATURE: 70.0°FDB (21.1°CDB)
OUTDOOR TEMPEARATURE: 47.0°FDB (8.3°CDB), 43.0°FWB (6.1°CWB)

(B. G. N IS ALREADY RECTIFIED)

MEASURING PLACE


ANECHOIC CHAMBER

LOCATION OF MICROPHONE

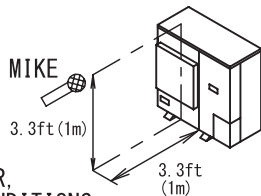

NOTE: THE OPERATING SOUND IS MEASURED IN ANECHOIC CHAMBER.
IF IT IS MEASURED UNDER THE ACTUAL INSTALLATION CONDITIONS,
IT IS NORMALLY OVER THE SET VALUE DUE TO ENVIRONMENTAL NOISE AND SOUND REFLECTION.
WHEN FROSTING ON COIL, OPERATING SOUND MAY BECOME LARGER THAN THE ABOVE VALUE.

RXSQ36TAVJUA (Cooling)

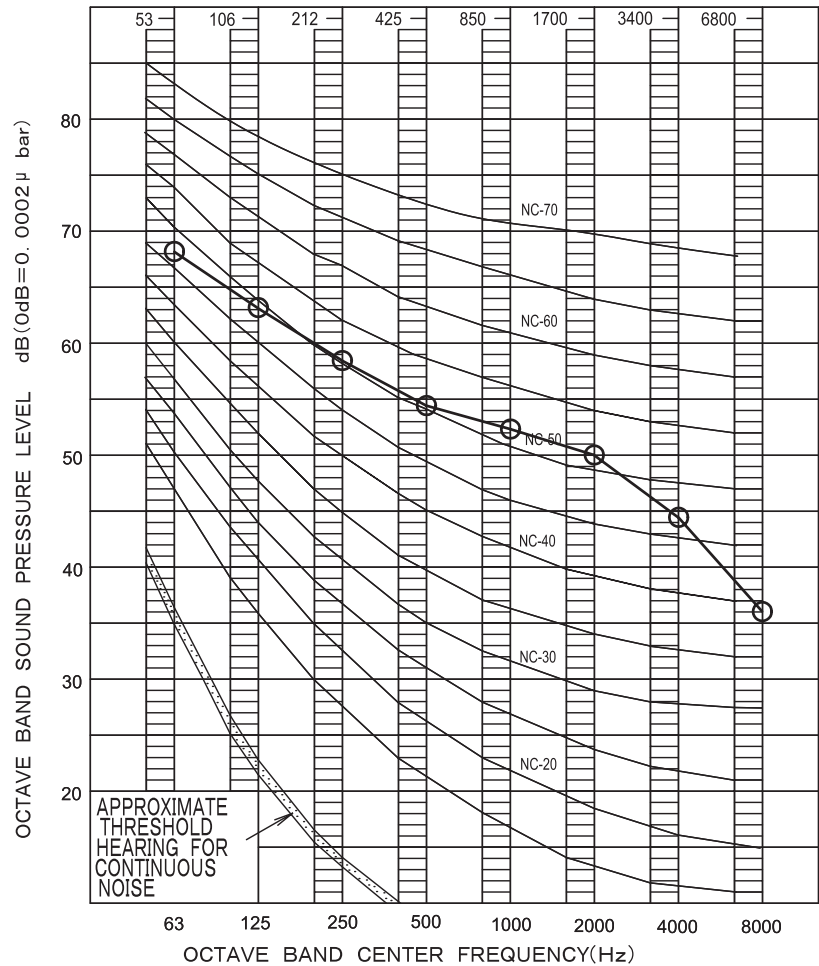

OVER ALL (dB)

SCALE A	58
---------	----

OPERATING CONDITIONS

POWER SOURCE 208/230V 60Hz


COOLING RETURN AIR TEMPERATURE: 80.0°FDB (26.7°CDB), 67.0°FWB (19.4°CWB)
OUTDOOR TEMPEARATURE: 95.0°FDB (35.0°CDB), 75.0°FWB (23.9°CWB)

(B. G. N IS ALREADY RECTIFIED)

MEASURING PLACE


ANECHOIC CHAMBER

LOCATION OF MICROPHONE

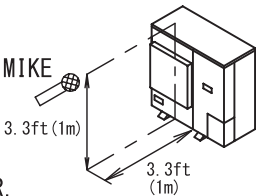

NOTE: THE OPERATING SOUND IS MEASURED IN ANECHOIC CHAMBER,
IF IT IS MEASURED UNDER THE ACTUAL INSTALLATION CONDITIONS,
IT IS NORMALLY OVER THE SET VALUE DUE TO ENVIRONMENTAL NOISE AND SOUND REFLECTION.

RXSQ36TAVJUA (Heating)

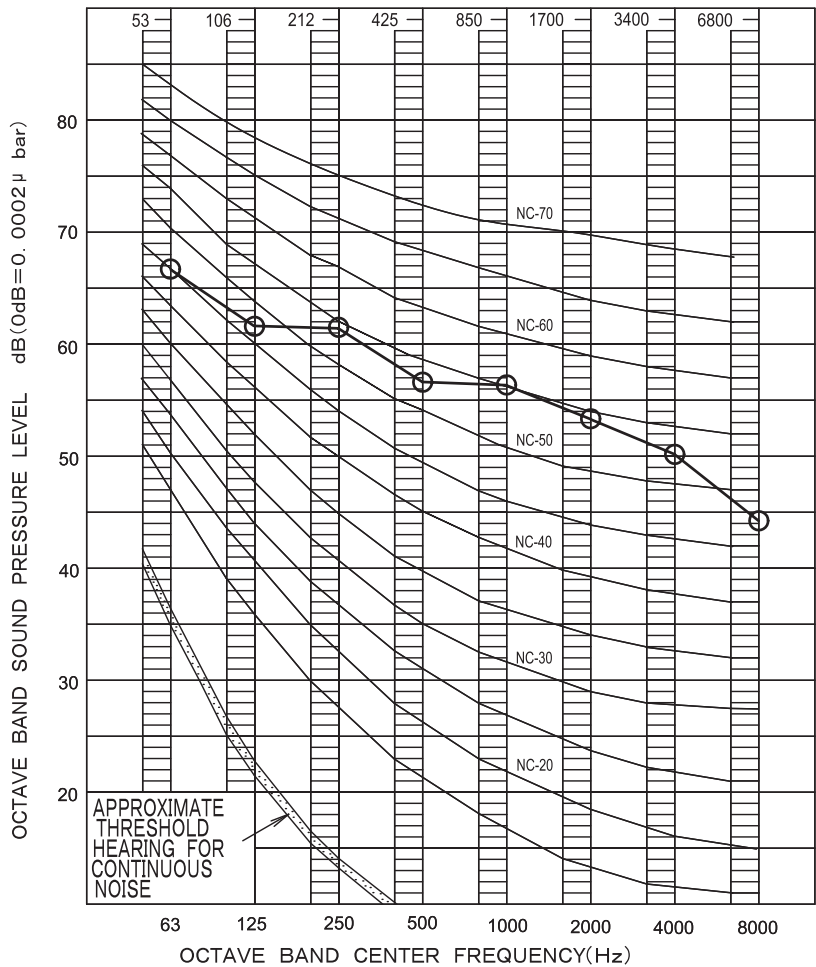

OVER ALL (dB)

SCALE A	61
---------	----

OPERATING CONDITIONS

POWER SOURCE 208/230V 60Hz


HEATING RETURN AIR TEMPERATURE: 70.0°FDB (21.1°CDB)
OUTDOOR TEMPEARATURE: 47.0°FDB (8.3°CDB) , 43.0°FDB (6.1°CWB)

(B. G. N IS ALREADY RECTIFIED)

MEASURING PLACE


ANECHOIC CHAMBER

LOCATION OF MICROPHONE

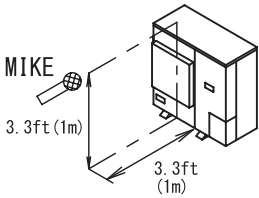

NOTE: THE OPERATING SOUND IS MEASURED IN ANECHOIC CHAMBER.
IF IT IS MEASURED UNDER THE ACTUAL INSTALLATION CONDITIONS,
IT IS NORMALLY OVER THE SET VALUE DUE TO ENVIRONMENTAL NOISE AND SOUND REFLECTION.
WHEN FROSTING ON COIL, OPERATING SOUND MAY BECOME LARGER THAN THE ABOVE VALUE.

RXSQ48TAVJUA (Cooling)

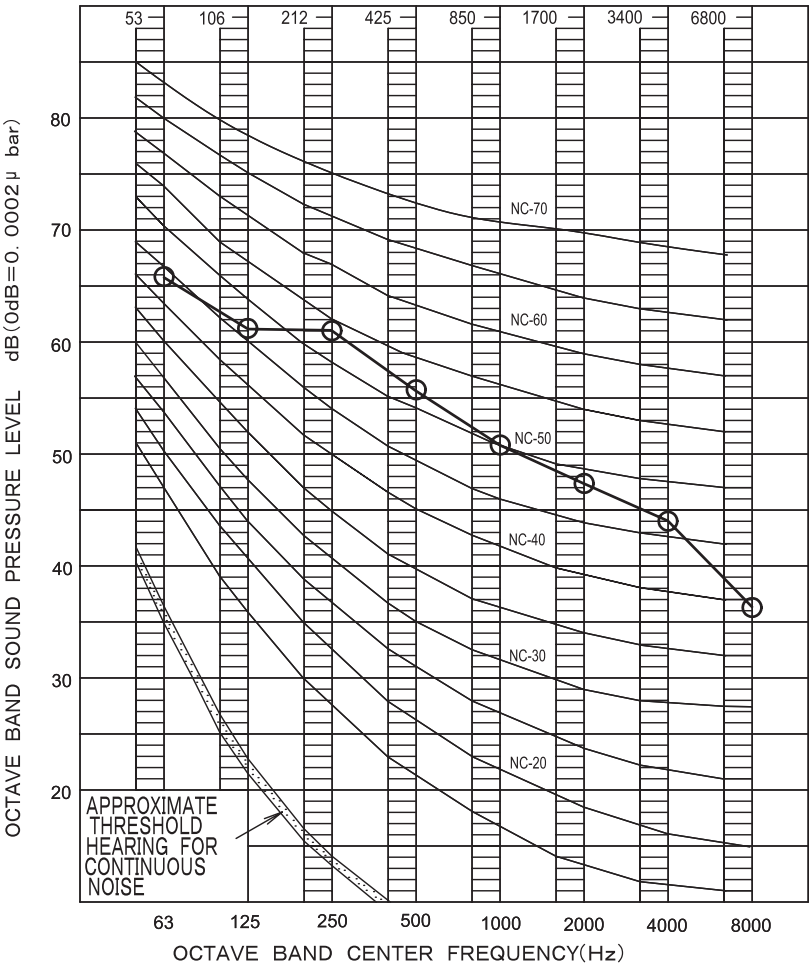

OVER ALL (dB)

SCALE A	58
---------	----

OPERATING CONDITIONS


POWER SOURCE 208/230V 60Hz
COOLING RETURN AIR TEMPERATURE: 80.0°FDB (26.7°CDB), 67.0°FWB (19.4°CWB)
OUTDOOR TEMPEARATURE: 95.0°FDB (35.0°CDB), 75.0°FWB (23.9°CWB)

(B. G. N IS ALREADY RECTIFIED)

MEASURING PLACE


ANECHOIC CHAMBER

LOCATION OF MICROPHONE

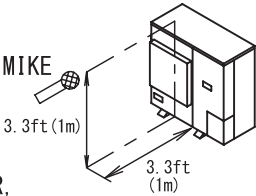

NOTE: THE OPERATING SOUND IS MEASURED IN ANECHOIC CHAMBER,
IF IT IS MEASURED UNDER THE ACTUAL INSTALLATION CONDITIONS,
IT IS NORMALLY OVER THE SET VALUE DUE TO ENVIRONMENTAL NOISE AND SOUND REFLECTION.

RXSQ48TAVJUA (Heating)

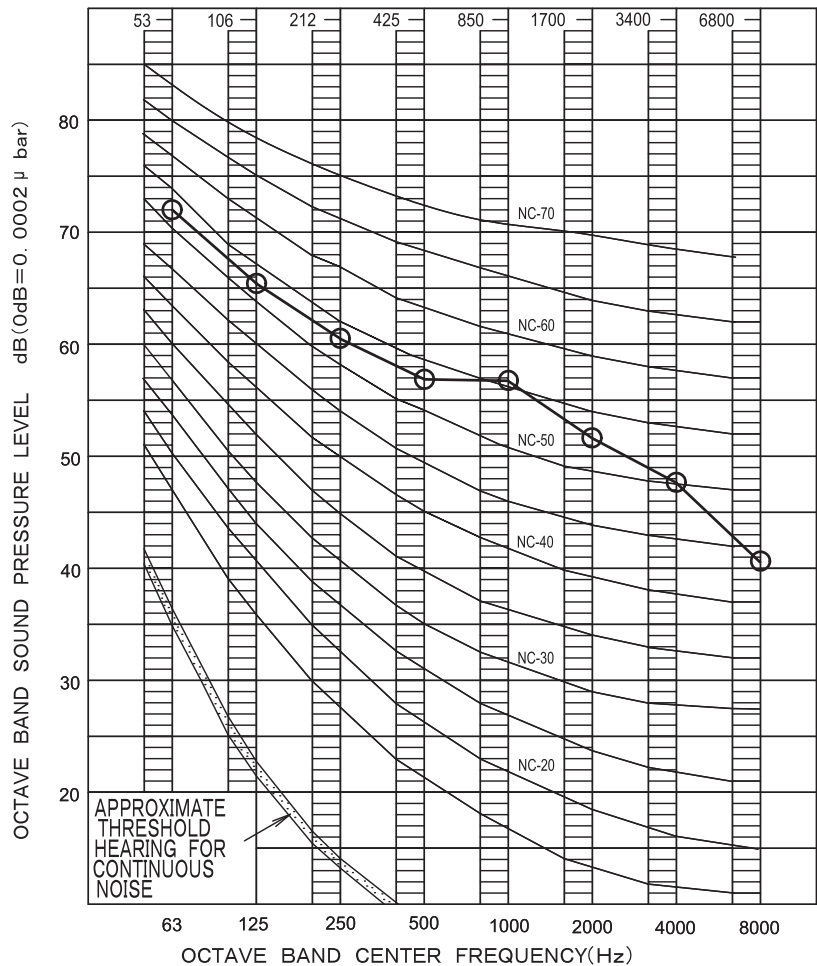

OVER ALL (dB)

SCALE A	61
---------	----

OPERATING CONDITIONS

POWER SOURCE 208/230V 60Hz


HEATING RETURN AIR TEMPERATURE: 70. 0°FDB (21. 1°CDB)
OUTDOOR TEMPEARATURE: 47. 0°FDB (8. 3°CDB) , 43. 0°FWB (6. 1°CWB)

(B. G. N IS ALREADY RECTIFIED)

MEASURING PLACE


ANECHOIC CHAMBER

LOCATION OF MICROPHONE

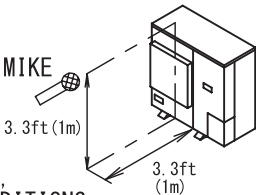

NOTE: THE OPERATING SOUND IS MEASURED IN ANECHOIC CHAMBER,
IF IT IS MEASURED UNDER THE ACTUAL INSTALLATION CONDITIONS,
IT IS NORMALLY OVER THE SET VALUE DUE TO ENVIRONMENTAL NOISE AND SOUND REFLECTION.
WHEN FROSTING ON COIL, OPERATING SOUND MAY BECOME LARGER THAN THE ABOVE VALUE.

RXSQ60TAVJUA (Cooling)

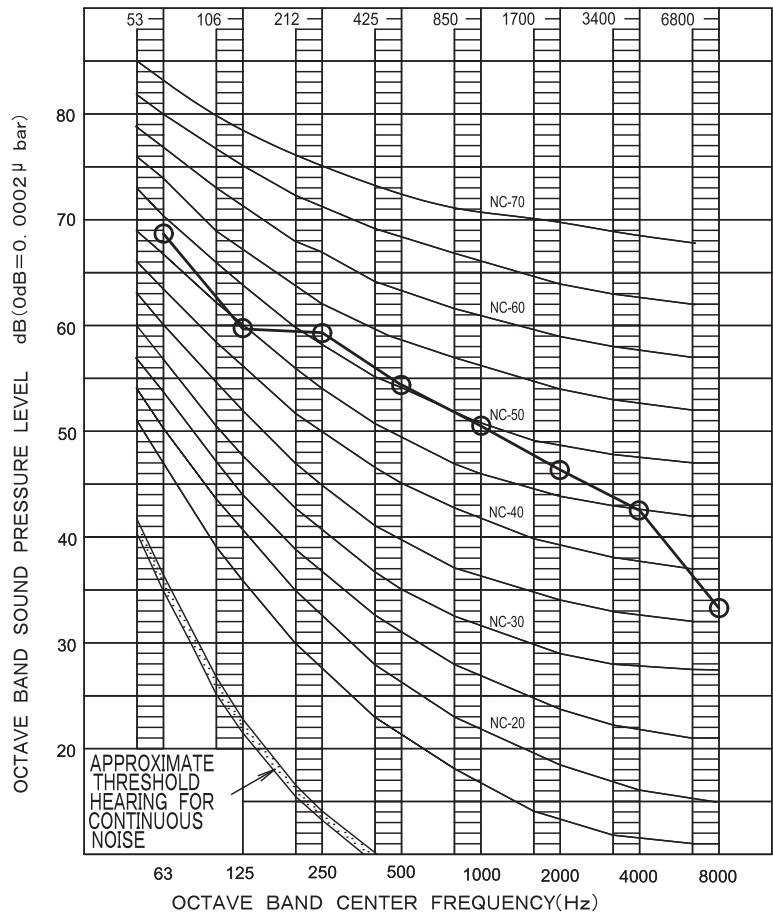

OVER ALL (dB)

SCALE A	57
---------	----

OPERATING CONDITIONS

POWER SOURCE 208/230V 60Hz


COOLING RETURN AIR TEMPERATURE: 80.0°FDB (26.7°CDB), 67.0°FWB (19.4°CWB)
OUTDOOR TEMPEARATURE: 95.0°FDB (35.0°CDB), 75.0°FWB (23.9°CWB)

(B. G. N IS ALREADY RECTIFIED)

MEASURING PLACE


ANECHOIC CHAMBER

LOCATION OF MICROPHONE

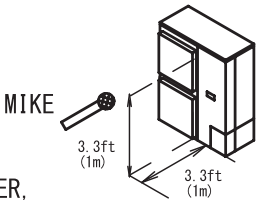

NOTE: THE OPERATING SOUND IS MEASURED IN ANECHOIC CHAMBER,
IF IT IS MEASURED UNDER THE ACTUAL INSTALLATION CONDITIONS,
IT IS NORMALLY OVER THE SET VALUE DUE TO ENVIRONMENTAL NOISE AND SOUND REFLECTION.

RXSQ60TAVJUA (Heating)

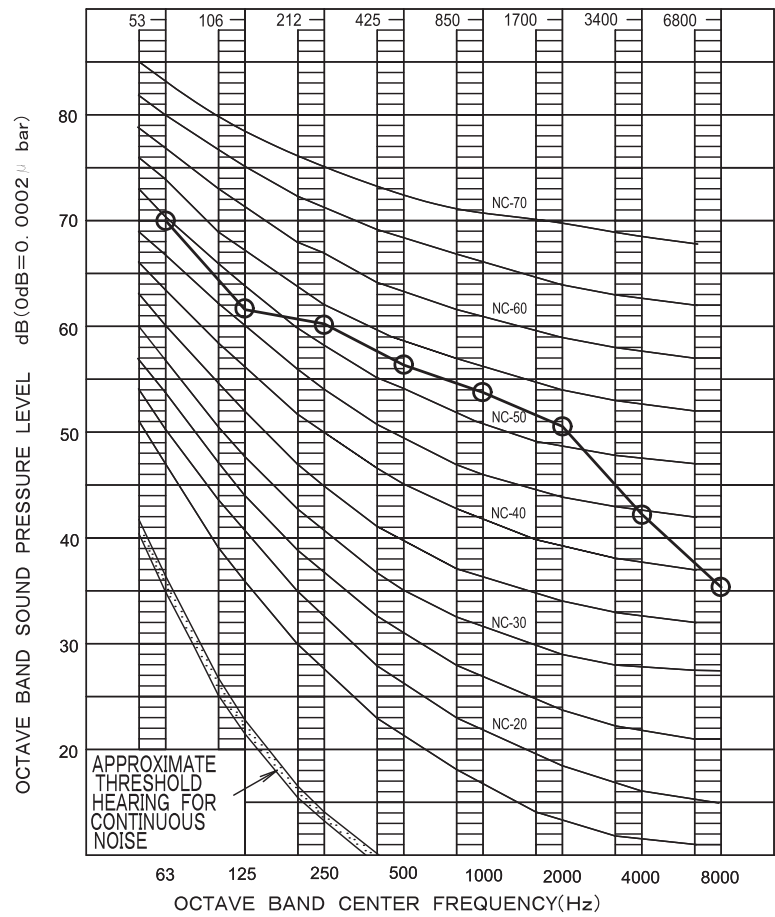

OVER ALL (dB)

SCALE A	59
---------	----

OPERATING CONDITIONS

POWER SOURCE 208/230V 60Hz


HEATING RETURN AIR TEMPERATURE: 70.0°FDB (21.1°CDB)
OUTDOOR TEMPEARATURE: 47.0°FDB (8.3°CDB), 43.0°FWB (6.1°CWB)

(B. G. N IS ALREADY RECTIFIED)

MEASURING PLACE

ANECHOIC CHAMBER

LOCATION OF MICROPHONE

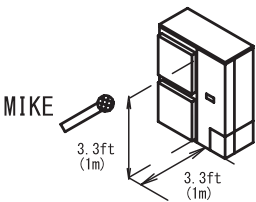

NOTE: THE OPERATING SOUND IS MEASURED IN ANECHOIC CHAMBER.
IF IT IS MEASURED UNDER THE ACTUAL INSTALLATION CONDITIONS,
IT IS NORMALLY OVER THE SET VALUE DUE TO ENVIRONMENTAL NOISE AND SOUND REFLECTION.
WHEN FROSTING ON COIL, OPERATING SOUND MAY BECOME LARGER THAN THE ABOVE VALUE.

16.Accessories

16.1 Optional Accessories

RXSQ24 - 60TAVJUA

Optional accessories		RXSQ24TAVJUA RXSQ36TAVJUA	RXSQ48TAVJUA	RXSQ60TAVJUA
ABC I/P printed circuit board kit		—	BRP2A82	
Distributive piping	REFNET header	KHRP26M22H9 (Max. 4 branch) KHRP26M33H9 (Max. 8 branch)		
	REFNET joint	KHRP26A22T9		

4D109819A

17. Selection Procedure

17.1 Selection Procedure

17.1.1 Flowchart

[1] Given conditions

Given conditions:

- Indoor unit design temperature and humidity
- Outside ambient design conditions for heat pump operation (if necessary)
- Outside ambient design conditions for gas furnace heating (if necessary)
- Required cooling and heating load of each zone
- Required total system load (if necessary)
- Refrigerant piping lengths, vertical piping length differences
- Desired indoor unit types (type and number of indoor units)

Define the allowable tolerance or safety factor for the indoor units and the outdoor units.

[2] Select indoor unit(s) and gas furnace(s)

For CXTQ cased coil units:

- Select CXTQ with capacity that meets the required cooling load
- Select gas furnace with High Fire output capacity that meets the required heating load
- Ensure the selected gas furnace is compatible with the CXTQ cased coil units

For VRV indoor units:

- Select indoor unit with capacity that meets the required cooling and heating loads

Indoor unit cooling / heating capacity at operating indoor temperature (DB/WB) $\geq$ (required cooling / heating load) $\times$ (tolerance / safety factor)

Gas furnace High Fire output $\geq$ (required heating load) $\times$ (tolerance / safety factor)

[3] Select of outdoor unit

Define required total cooling load to outdoor unit
Define required total heat pump heating load to outdoor unit from **VRV** indoor units

1a) Use the sum total of cooling loads for all zones.

1b) Use the sum total of heating loads for **VRV** indoor units

2a) Use the system total (block) cooling load.

2b) Use the system total (block) heating load.

Provisionally select the outdoor unit size based on the design's allowable connection ratio.

Confirm that the number of indoor units connected to the outdoor unit is within the allowable number of indoor units.

Make corrections to adjust the capacity of the outdoor unit for the following items:

- Longest refrigerant piping distance
- Piping vertical separation distances (height from outdoor units to indoor units)
- Connection ratio
- Design cooling / heating ambient operating temperatures
- Defrost factor (for heating capacity)
- Outdoor unit tolerance / safety factor

Is the corrected cooling (heating) capacity of the outdoor unit $\geq$ required total cooling (heating) capacity of the outdoor unit?

No

Yes

Is the design heating ambient temperature below -4°F ?

No

Yes

Design a secondary source of heat for spaces served by only **VRV** indoor units if the home will require heating operation below -4°F . Select appropriate KRP accessory to allow the **VRV** unit to turn out the heat source.

VRV LIFE™ system selection is complete

17.1.2 Selection Example 1 - CXTQ & VRV Indoor Units

The following is a selection example for a **VRV** LIFE system incorporating a CXTQ & gas furnace and other **VRV** indoor units.

[1] Given conditions

-System arrangement

- The home will use a CXTQ & gas furnace as a Central Zone to supply air to most of the home.
- There is a Bonus Room upstairs that has historically been uncomfortable. This room will use an FXEQ one-way-blow cassette to give independent temperature control to the room.
- The outdoor unit will be located on the ground level.
- The CXTQ & gas furnace will be installed in the basement, 10 ft. below ground level.
- The FXEQ will be installed in the Bonus Room upstairs 18 ft. above ground level.
- The equivalent piping length for the system is 45 feet.

-Design conditions

- Indoor air temperature — cooling: 77°FDB / 64°FWB
- Indoor air temperature — heating: 70°FDB
- Outdoor ambient air temperature for cooling: 95°FDB
- Outdoor ambient air temperature for heating operation: 13°FDB / 7°FWB

-Determine the required cooling and heating capacities using an industry accepted load calculation method (i.e. ACCA Manual J or similar).

Zone	Cooling load	Heat pump heating load	Gas furnace heating load
Central Zone	42,350 Btu/h	—	95,000 Btu/h
Bonus Room	8,000 Btu/h	10,000 Btu/h	—

-Safety factor

For this example, no safety factor will be used. (i.e. safety factor = 1.0)

[2] Selection of indoor unit(s) and gas furnace(s)

To select the CXTQ & gas furnace:

- Determine the corrected total cooling capacity of the CXTQ at the defined indoor air temperature by referencing the capacity table in the CXTQ Engineering Data manual.
- If the design indoor air temperature falls between temperatures listed in the capacity table, calculate the capacity by interpolation.
- The corrected total cooling capacity should meet the required cooling load of the zone.
- The selected gas furnace should have a High Fire output that meets or exceeds the required heating load of the zone.
- The selected gas furnace should also be confirmed to be a compatible furnace combination with the selected CXTQ. Refer to the CXTQ Engineering Data manual.

To select the **VRV** indoor unit:

- Determine the corrected cooling capacity and the corrected heating capacity of the unit at the defined indoor air temperatures by referencing the capacity table in the indoor unit's Engineering Data manual.
- If the design indoor air temperature falls between temperatures listed in the capacity table, calculate the capacity by interpolation.
- The selected indoor unit's corrected cooling capacity and corrected heating capacity should meet or exceed the zone's cooling and heating loads, respectively.

Cooling capacity — CXTQ

MODEL	Indoor Air Temp. °FWB											
	61		64		67		70		72		75	
	T _c	SHC	T _c	SHC	T _c	SHC	T _c	SHC	T _c	SHC	T _c	SHC
	MBH	MBH	MBH	MBH	MBH	MBH	MBH	MBH	MBH	MBH	MBH	MBH
CXTQ24	19.0	14.9	21.5	15.6	24.0	16.0	24.5	15.6	24.8	15.6	25.3	15.1
CXTQ36	28.4	20.6	32.2	20.2	36.0	20.7	36.7	21.1	37.2	21.1	37.9	20.0
CXTQ48	37.9	29.4	43.0	30.6	48.0	31.1	49.0	29.5	49.6	29.5	50.5	27.4
CXTQ60	47.4	37.4	53.6	38.8	60.0	40.0	61.2	39.5	62.0	39.5	63.2	38.4

Heating capacity — Gas furnace

	DM97MC 0603BNA	DM97MC 0803BNA	DM97MC 0804CNA	DM97MC 1005CNA	DM97MC 1205DNA	DC97MC 0603BNA	DC97MC 0803BNA	DC97MC 0804CNA	DC97MC 1005CNA
HEATING DATA									
High Fire Input ¹	60,000	80,000	80,000	100,000	120,000	60,000	80,000	80,000	100,000
High Fire Output ¹	58,800	77,600	78,400	97,000	116,400	58,200	77,600	77,600	97,000
Low-Fire Steady-State Input ¹	30,000	40,000	40,000	50,000	60,000	30,000	40,000	40,000	50,000
Low-Fire Steady-State Output ¹	29,400	38,800	39,200	48,500	58,200	29,100	38,800	38,800	48,500
AFUE ²	98	97	98	97	97	97	97	97	97
Temperature Rise Range (°F)	25 - 55	30 - 60	25 - 55	35 - 65	35 - 65	35 - 65	35 - 65	35 - 65	35 - 65
Vent Diameter ³	2" - 3"	2" - 3"	2" - 3"	2" - 3"	2" - 3"	2" - 3"	2" - 3"	2" - 3"	2" - 3"
No. of Burners	3	4	4	5	6	3	4	4	5

Cooling capacity — FXEQ One way blow cassette

Model	Indoor air temp. °FWB (T _e : 43°F (6°C))											
	61		64		67		70		72		75	
	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
	MBH	MBH	MBH	MBH	MBH	MBH	MBH	MBH	MBH	MBH	MBH	MBH
FXEQ07PVJU	5.9	4.9	6.7	5.4	7.5	5.8	7.6	5.9	7.8	5.4	7.9	5.1
FXEQ09PVJU	7.5	6.2	8.5	6.9	9.5	7.1	9.7	7.3	9.8	6.8	10.0	6.3
FXEQ12PVJU	9.5	7.5	10.7	8.2	12.0	8.3	12.2	8.8	12.4	8.4	12.6	8.0
FXEQ15PVJU	11.8	9.2	13.4	9.9	15.0	10.7	15.3	10.5	15.5	10.2	15.8	9.5
FXEQ18PVJU	14.2	11.1	16.1	12.1	18.0	12.9	18.4	12.9	18.6	12.2	18.9	11.9
FXEQ24PVJU	19.0	14.7	21.5	15.9	24.0	16.9	24.5	16.7	24.8	16.1	25.3	15.5

TC: Total capacity: MBH

SHC: Sensible heat capacity: MBH

Heating capacity — FXEQ One way blow cassette

Model	Indoor air temp. °FDB (T _c : 115°F (46°C))					
	62	65	68	70	72	75
	TC	TC	TC	TC	TC	TC
	MBH	MBH	MBH	MBH	MBH	MBH
FXEQ07PVJU	9.9	9.3	8.8	8.5	8.2	7.7
FXEQ09PVJU	12.3	11.5	10.9	10.5	10.1	9.5
FXEQ12PVJU	15.8	14.8	14.0	13.5	13.0	12.3
FXEQ15PVJU	19.2	18.0	17.1	16.5	15.9	15.0
FXEQ18PVJU	23.3	21.9	20.7	20.0	19.3	18.1
FXEQ24PVJU	31.5	29.5	28.0	27.0	26.0	24.5

TC: Total capacity: MBH

Selection results of indoor units:

- Required cooling capacity for Central Zone = 42,350 Btu/h → **CXTQ48TASBLU**
- Required gas furnace capacity for Central Zone = 95,000 Btu/h → **DM97MC1005CNA**
- Required cooling capacity for Bonus Room = 8,000 Btu/h → **FXEQ09PVJU**
- Required heat pump heating capacity for Bonus Room = 10,000 Btu/h

In the case of a selection based on Total Cooling Load and Sensible Cooling Load, select the indoor unit(s) which will satisfy not only the Total Cooling Load (TC) but also the Sensible Cooling Load (SHC) of each zone. The sensible capacity of the unit should also be corrected for indoor air temperature.

[3] Selection of outdoor unit

[3] –1 Define the total cooling and heating load from the indoor units to the outdoor unit

Define the total required cooling load (A) and heating load (B) for the system according to:

- (1a) Sum total of cooling loads for all zones
- (1b) Sum total of heat pump heating loads for all zones
- Or
- (2a) Total system cooling load
- (2b) Total system heat pump heating load

Note:

Using the sum-total load approach results in selecting an outdoor unit that will provide full capacity to all zones simultaneously. This approach is more conservative but may result in an oversized unit, depending on the actual diversity of the cooling and heating loads in each zone.

Using the Total-system approach allows the outdoor unit size to be optimized to meet the total system load. For example, it is assumed the Bonus Room will not require full capacity at the same time the Central Zone is requiring full capacity. The **VRV** LIFE system can manage refrigerant flow to each CXTQ and/or **VRV** indoor unit to independently control the capacity of each unit.

When selecting the **VRV** LIFE outdoor unit for **heating capacity**, typically only the spaces served by **VRV** indoor units are considered. Zones served by a gas furnace will not require heat pump heating on the coldest days of the year, so the **VRV** LIFE outdoor unit should be selected to ensure that heat pump heating can be provided to the **VRV** indoor units.

In this example, select an outdoor unit using method (2a/2b). It is assumed that the total home cooling and heating loads have been calculated as:

(A) = (2a) = 48,250 Btu/h cooling load

(B) = (2b) = 10,000 Btu/h heat pump heating load

[3] -2 Provisionally select the outdoor unit**(1) Calculate the Capacity Index (CI) of the selected indoor units**

CI of **VRV** indoor units and CXTQ cased coil units

CI of FXEQ09PVJU = 9.5

CI of CXTQ48TASBLU = 48

Model	FXEQ07P	FXEQ09P	FXEQ12P	FXEQ15P	FXEQ18P	FXEQ24P
Capacity Index	7.5	9.5	12	15	18	24

Model	CXTQ24T	CXTQ36T	CXTQ48T	CXTQ60T
Capacity Index	24	36	48	60

Calculate the total CI of the indoor units and CXTQ cased coil units.

Total CI = 48 + 9.5 = 57.5

(2) Provisionally select an outdoor unit based on the total CI of the indoor units

The connection ratio of RXSQ-TA shall be between 50% and 130%.

As the total CI of the indoor units is 57.5, 4-ton and 5-ton outdoor units are connectable.

Start from the 4-ton unit, which is smallest.

Model	Ton	Capacity Index	Total capacity index of connectable indoor units	Maximum number of connectable indoor units
RXSQ24TA	2	24	12 - 31.2	4
RXSQ36TA	3	36	18 - 46.8	6
RXSQ48TA	4	48	24 - 62.4	8
RXSQ60TA	5	57	28.5 - 74.1	9

(3) Confirm that the number of connected indoor units is within the limitation.

The CXTQ should be treated as an indoor unit for purposes of counting the total number of indoor units.

- The number of connected indoor units = 2
- The maximum number of connectable indoor units to the 4-ton unit = 8

[3] -3 Calculate the corrected capacity of the outdoor unit.

Calculate the connection ratio of the system. The connection ratio is the ratio of indoor unit capacity to outdoor unit capacity.

- Total CI of indoor units = 57.5
- CI of RXSQ48TAVJUA = 48
- Connection ratio = $57.5 / 48 = 120\%$

Using the capacity table of the outdoor unit, determine the corrected outdoor unit capacity using the outside ambient temperature, indoor air temperature, and connection ratio.

When calculating the heat pump heating capacity of the system, it is important to consider the gas furnace use. Typically the gas furnace will be providing the heating capacity to the zone served by the CXTQ & gas furnace, therefore it is only necessary to ensure the outdoor unit can provide the heat pump heating capacity required for only the **VRV** indoor units at the design outside ambient air temperature.

Note:

In the case that the outdoor temperature, indoor temperature, or connection ratio falls between the temperatures or connection ratios listed in the tables, calculate the capacity by interpolation.

RXSQ48TAVJUA Cooling Capacity for Standard Condition (Te: 43°F)

Connection ratio	Outdoor air temp.	Indoor air temp. (°FWB)															
		57		61		64		67		70		72		75			
		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI		
%	*FDB	MBH	kW	MBH	kW	MBH	kW	MBH	kW	MBH	kW	MBH	kW	MBH	kW		
130	23	44.6	2.09	51.7	2.48	57.1	2.78	62.4	3.08	67.3	3.35	68.0	3.30	69.0	3.22		
	30	44.6	2.16	51.7	2.56	57.1	2.87	62.4	3.18	65.8	3.32	66.5	3.27	67.5	3.18		
	40	44.6	2.27	51.7	2.69	57.1	3.01	62.4	3.34	63.6	3.28	64.3	3.22	65.3	3.13		
	50	44.6	2.38	51.7	2.83	57.1	3.17	60.5	3.32	61.5	3.23	62.1	3.17	63.1	3.03		
	54	44.6	2.43	51.7	2.88	57.1	3.23	59.6	3.30	60.6	3.21	61.3	3.15	62.3	3.05		
	58	44.6	2.48	51.7	2.95	57.1	3.30	58.7	3.28	59.7	3.20	60.4	3.21	61.4	3.23		
	62	44.6	2.54	51.7	3.01	56.9	3.35	57.9	3.37	58.9	3.39	59.5	3.40	60.5	3.43		
	66	44.6	2.59	51.7	3.15	56.0	3.53	57.0	3.56	58.0	3.58	58.7	3.59	59.7	3.62		
	70	44.6	2.75	51.7	3.41	55.1	3.72	56.1	3.75	57.1	3.77	57.8	3.79	58.8	3.81		
	72	44.6	2.85	51.7	3.55	54.7	3.81	55.7	3.84	56.7	3.87	57.4	3.88	58.4	3.91		
	75	44.6	3.02	51.7	3.76	54.0	3.96	55.0	3.98	56.0	4.01	56.7	4.03	57.7	4.05		
	79	44.6	3.25	51.7	4.05	53.2	4.14	54.2	4.17	55.2	4.20	55.8	4.22	56.8	4.25		
	83	44.6	3.50	51.3	4.30	52.3	4.33	53.3	4.37	54.3	4.40	55.0	4.42	56.0	4.45		
	87	44.6	3.76	50.4	4.49	51.4	4.53	52.4	4.56	53.4	4.59	54.1	4.61	54.6	4.63		
	91	44.6	4.04	49.6	4.68	50.6	4.72	51.6	4.75	52.5	4.78	52.5	4.78	52.5	4.79		
	93	44.6	4.19	49.1	4.78	50.1	4.81	51.1	4.85	51.5	4.86	51.5	4.86	51.5	4.86		
	95	44.6	4.34	48.7	4.87	49.7	4.91	50.5	4.94	50.5	4.94	50.5	4.94	50.5	4.94		
	99	44.6	4.65	47.8	5.06	48.4	5.09	48.4	5.09	48.4	5.09	48.4	5.09	48.5	5.09		
	103	44.6	4.99	46.3	5.23	46.4	5.23	46.4	5.23	46.4	5.23	46.4	5.23	46.4	5.23		
	106	43.6	4.94	43.7	4.95	43.8	4.96	43.8	4.97	43.9	4.97	44.0	4.98	44.1	4.98		
	110	37.3	4.24	37.4	4.25	37.5	4.26	37.5	4.27	37.6	4.27	37.7	4.28	37.8	4.28		
	115	29.4	3.37	29.5	3.38	29.6	3.38	29.7	3.39	29.8	3.40	29.8	3.40	29.9	3.41		
	118	24.7	2.84	24.8	2.85	24.9	2.86	25.0	2.87	25.0	2.87	25.1	2.88	25.2	2.88		
	122	18.4	2.14	18.5	2.15	18.6	2.16	18.7	2.17	18.7	2.17	18.8	2.18	18.9	2.18		
120	23	41.1	1.91	47.7	2.26	52.7	2.53	57.6	2.81	62.5	3.09	65.8	3.28	67.9	3.30		
	30	41.1	1.98	47.7	2.34	52.7	2.62	57.6	2.90	62.5	3.19	65.4	3.35	66.4	3.27		
	40	41.1	2.07	47.7	2.45	52.7	2.74	57.6	3.04	62.5	3.31	64.2	3.23	65.2	3.23		
	50	41.1	2.17	47.7	2.58	52.7	2.89	57.6	3.20	60.5	3.32	61.1	3.26	62.0	3.18		
	54	41.1	2.22	47.7	2.63	52.7	2.95	57.6	3.27	59.6	3.30	60.2	3.24	61.2	3.16		
	58	41.1	2.26	47.7	2.69	52.7	3.01	57.6	3.34	58.7	3.28	59.4	3.22	60.3	3.21		
	62	41.1	2.31	47.7	2.74	52.7	3.08	57.0	3.35	57.9	3.37	58.5	3.38	59.4	3.40		
	66	41.1	2.36	47.7	2.80	52.7	3.24	56.1	3.54	57.0	3.56	57.6	3.57	58.5	3.59		
	70	41.1	2.45	47.7	3.03	52.7	3.51	55.2	3.72	56.1	3.75	56.8	3.76	57.7	3.78		
	72	41.1	2.55	47.7	3.15	52.7	3.65	54.8	3.82	55.7	3.84	56.3	3.86	57.2	3.88		
	75	41.1	2.69	47.7	3.34	52.7	3.86	54.1	3.96	55.1	3.98	55.7	4.00	56.6	4.02		
	79	41.1	2.90	47.7	3.59	52.3	4.12	53.3	4.15	54.2	4.17	54.8	4.19	55.7	4.22		
	83	41.1	3.12	47.7	3.87	51.5	4.31	52.4	4.34	53.3	4.37	53.9	4.38	54.9	4.41		
	87	41.1	3.35	47.7	4.16	50.6	4.50	51.5	4.53	52.5	4.56	53.1	4.58	54.0	4.61		
	91	41.1	3.59	47.7	4.47	49.7	4.69	50.7	4.72	51.6	4.75	52.2	4.77	52.5	4.79		
	93	41.1	3.72	47.7	4.64	49.3	4.78	50.2	4.82	51.2	4.85	51.5	4.86	51.5	4.86		
	95	41.1	3.86	47.7	4.81	48.9	4.88	49.8	4.91	50.5	4.94	50.5	4.94	50.5	4.94		
	99	41.1	4.13	47.1	5.03	48.5	5.07	48.4	5.09	48.4	5.09	48.4	5.09	48.5	5.09		
	103	41.1	4.43	46.2	5.23	46.4	5.23	46.4	5.23	46.4	5.23	46.4	5.23	46.4	5.23		
	106	41.1	4.67	43.7	4.95	43.8	4.96	43.8	4.97	43.9	4.97	44.0	4.98	44.1	4.98		
	110	37.3	4.24	37.4	4.25	37.5	4.26	37.5	4.27	37.6	4.27	37.7	4.28	37.8	4.28		
	115	29.4	3.37	29.5	3.38	29.6	3.38	29.7	3.39	29.8	3.40	29.8	3.40	29.9	3.41		
	118	24.7	2.84	24.8	2.85	24.9	2.86	25.0	2.87	25.0	2.87	25.1	2.88	25.2	2.88		
	122	18.4	2.14	18.5	2.15	18.6	2.16	18.7	2.17	18.7	2.17	18.8	2.18	18.9	2.18		

RXSQ48TAVJUA Heating Capacity

In this example, heat pump heating is only required for the FXEQ09PVJU at the 13°F. The gas furnace will handle the heating capacity for the zone served by the CXTQ. Determine the capacity available to **VRV** indoor units by considering the connection ratio of the **VRV** indoor unit capacity index vs. **VRV** outdoor unit capacity index. If the ratio is less than 50%, assume a 50% connection ratio for reference.


RXSQ48TAVJUA Heating Capacity for Standard Condition (Tc: 115°F)

Connection ratio	Outdoor air temp.	Indoor air temp. ("FDB)												
		61		65		68		70		72		75		
		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	
%	*FDB	*FWB	MBH	kW	MBH	kW	MBH	kW	MBH	kW	MBH	kW	MBH	kW
50	-3.64	-4.0	31.2	4.43	28.9	4.04	27.2	3.75	26.0	3.56	24.8	3.38	23.1	3.11
	-1.84	-2.2	31.2	4.27	28.9	3.89	27.2	3.61	26.0	3.43	24.8	3.26	23.1	3.00
	5.5	5.0	31.2	3.72	28.9	3.40	27.2	3.17	26.0	3.01	24.8	2.86	23.1	2.64
	9.5	8.5	31.2	3.51	28.9	3.21	27.2	2.99	26.0	2.85	24.8	2.71	23.1	2.50
	13.0	12.0	31.2	3.31	28.9	3.00	27.2	2.78	26.0	2.70	24.8	2.57	23.1	2.37
	15.0	14.0	31.2	3.21	28.9	2.95	27.2	2.75	26.0	2.62	24.8	2.49	23.1	2.31
	17.0	15.5	31.2	3.14	28.9	2.88	27.2	2.69	26.0	2.57	24.8	2.44	23.1	2.26
	19.0	18.0	31.2	3.03	28.9	2.78	27.2	2.60	26.0	2.48	24.8	2.36	23.1	2.19
	22.0	20.0	31.2	2.95	28.9	2.71	27.2	2.53	26.0	2.42	24.8	2.30	23.1	2.13
	26.0	24.0	31.2	2.80	28.9	2.57	27.2	2.41	26.0	2.30	24.8	2.19	23.1	2.03
	30.0	28.0	31.2	2.66	28.9	2.45	27.2	2.29	26.0	2.19	24.8	2.09	23.1	1.94
	35.0	32.0	31.2	2.54	28.9	2.34	27.2	2.19	26.0	2.10	24.8	2.00	23.1	1.86
	39.0	36.0	31.2	2.43	28.9	2.24	27.2	2.10	26.0	2.01	24.8	1.92	23.1	1.79
	44.0	40.0	31.2	2.33	28.9	2.15	27.2	2.02	26.0	1.93	24.8	1.84	23.1	1.72
	47.0	43.0	31.2	2.26	28.9	2.09	27.2	1.96	26.0	1.88	24.8	1.79	23.1	1.67
	51.0	47.0	31.2	2.18	28.9	2.01	27.2	1.89	26.0	1.81	24.8	1.73	23.1	1.61
	54.0	50.0	31.2	2.12	28.9	1.96	27.2	1.84	26.0	1.76	24.8	1.69	23.1	1.57
	57.0	53.0	31.2	2.06	28.9	1.91	27.2	1.79	26.0	1.72	24.8	1.64	23.1	1.54
	60.0	56.0	31.2	2.01	28.9	1.86	27.2	1.75	26.0	1.68	24.8	1.61	23.1	1.50

Determine the cooling and capacity correction factor from the refrigerant piping length and vertical piping differences. Heating capacity is not affected by refrigerant piping lengths.

- Cooling capacity correction factor calculation
 - System equivalent piping length: 45 feet
 - Piping vertical height separation: 18 feet from outdoor unit

1. Rate of change in cooling capacity

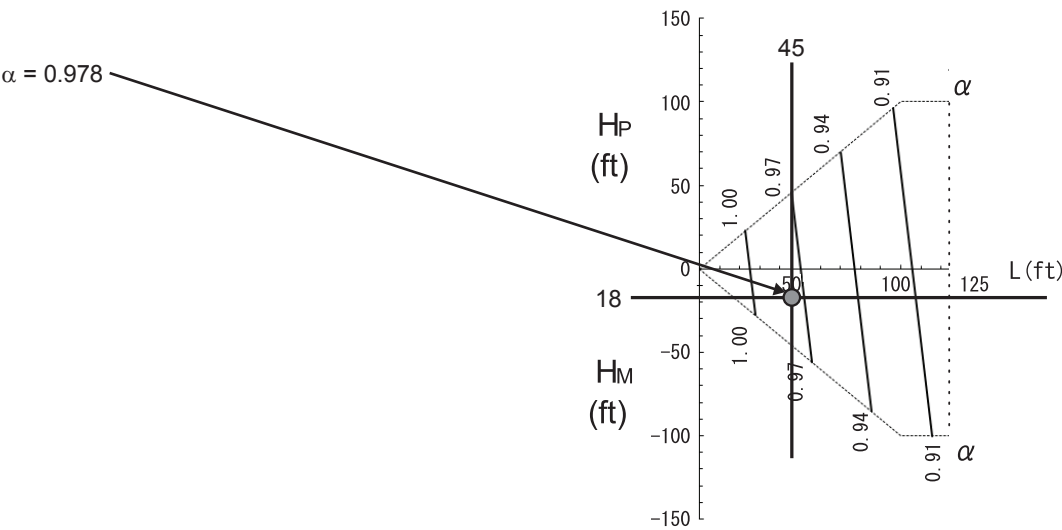

CC = Cooling capacity from capacity table = 48.9 MBH
 α = Cooling capacity correction factor = 0.978

Corrected cooling capacity = $CC \times \alpha = 48.9 \text{ MBH} \times 0.978 = \mathbf{47.82 \text{ MBH}}$

Determine the heating capacity correction factor for frost building during heating operation.

Inlet air temperature to the outdoor unit heat exchanger (°FDB/RH85%)	≤19.5	23.0	26.5	32.0	37.5	41.0	44.5
Correction factor for frost accumulation	0.95	0.93	0.88	0.84	0.85	0.90	1.00

In this example, the design ambient condition for heat pump heating operation is 13°FDB, so defrost correction factor for frost accumulation is 0.95.

HH = Heating capacity from capacity table = 26.0 MBH
 β = Defrost correction factor for frost accumulation = 0.95

Corrected heating capacity = $HH \times \beta = 26.0 \text{ MBH} \times 0.95 = \mathbf{24.7 \text{ MBH}}$

[4] Select an auxiliary heat source, if necessary

For **VRV** LIFE systems designed to operate in extreme cold climates (lower than -4°F, the minimum heat pump operating range for **VRV** LIFE) by running the gas furnace, it may be necessary to select a third part auxiliary heat source to provide heating capacity to zones served only by **VRV** indoor units.

In this example, the winter design ambient temperature condition is 13°F and the heat pump heating capacity of the **VRV** LIFE system can provide enough heating capacity to the Bonus Room, so there is no need to select any auxiliary heat source.

18. Caution Label

18.1 RXSQ24 - 36TAVJUA

Service precautions



Warning




Caution to electric shock

○ Precautions for servicing control box


- Before service inspection, be sure to measure the power supply terminal (X1M) with a multimeter and confirm the power supply is turned off.
- Be careful not to touch the high-temperature components.
There is a possibility that each component within the control box can generate high temperature.
- Be careful not to touch the live parts.
Do not touch the live parts before making sure the residual voltage is less of 50V.
 - After turning off the power supply, leave the units unused for 10 minutes.
 - To prevent a damage of the PC board, always touch the ground terminal with your hands to discharge the static electricity on your body.
 - Do not touch the live parts. Measure the residual voltage of the measuring position using the multimeter.
 - After confirming the residual voltage, pull out the connector for the fan motor in the outdoor unit immediately. (If the fan in the outdoor unit rotates by strong headwinds, it may cause storage of electricity in the capacitor and electric shock.)

※ After completing service work, plug in the connector for the fan motor in the outdoor unit.

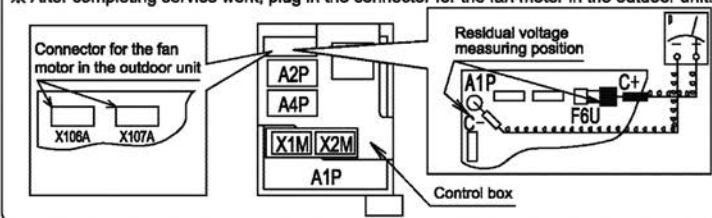

Precautions to Cool/Heat remote controller wiring


- The setting should be carried out only when the changeover of Cool/Heat is set by the remote controller installed in the outdoor unit.
- Wire the Cool/Heat changeover remote controller (optional accessory) to the terminals (A, B and C) on the PC board (A4P) of the outdoor unit.
 - Set the Cool/Heat changeover setting switch DSI-1 on the PC board (A2P) of the outdoor unit from IN (factory setting) to OUT.

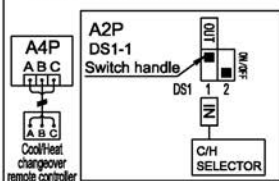

If you get confused in the setting process, push the MODE button (BS1) to return to the **SETTING MODE 1** (H1P: Light OFF).

(The LED display on the left side shows the factory setting state)


LED display ● : Light OFF ☀ : Light ON ⚡ : Flashing ✱ : Light ON or Light OFF

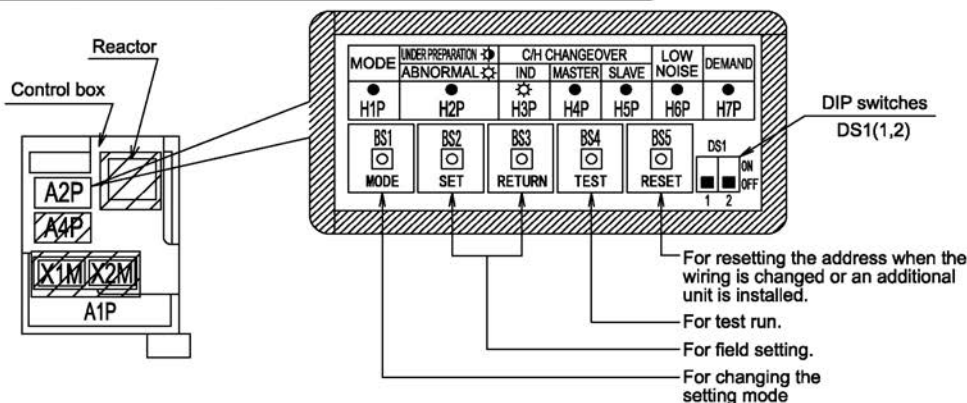

⚠ When performing the operations such as inspection, to prevent electric shocks, protect the shaded area of the electrical components using the insulating tape.

Changing the setting mode

 The setting mode can be changed by the MODE button (BS1) according to the following procedure.



< Caution >

For selecting low noise operation by an outside order, demand operation and operation mode setting with a Cool/Heat central remote controller, the external control adapter for outdoor unit (optional accessory) is required. For details, see the instruction attached to the adapter.

Make settings (Cool/Heat selection setting) in the SETTING MODE 1 (H1P: Light OFF)		Example of LED display and its position						
Setting procedure	Description	H1P	H2P	H3P	H4P	H5P	H6P	H7P
① Push the SET button (BS2) and adjust the LED display to the example shown on the right.	When setting Cool/Heat selection for each outdoor system individually (factory setting)	●	●	●	●	●	●	●
	For the master unit, when setting Cool/Heat selection for multiple outdoor systems together ※	●	●	●	●	●	●	●
	For the slave unit, when setting Cool/Heat selection for multiple outdoor systems together ※	●	●	●	●	●	●	●
② Push the RETURN button (BS3) to define the setting.								

Items marked "※" mean the external control adapter (optional accessory) for the outdoor unit should be configured separately. See the operation manual of the adapter for details.

Make settings in the SETTING MODE 2 (H1P: Light ON)

Settings of the following items (A) ~ (F) can be carried out.

Setting procedure	Details of setting	Example of LED display and its position						
		H1P	H2P	H3P	H4P	H5P	H6P	H7P
① Push the SET button (BS2) and adjust the LED display to the example shown on the right according to the required setting (A) ~ (F).	(A) Additional refrigerant charging operation setting	☀	●	☀	●	☀	●	☀
	(B) Refrigerant recovery/Evacuation mode setting	☀	●	☀	●	☀	●	☀
	(C) Night-time automatic low noise setting	☀	●	☀	●	☀	●	☀
	(D) External low noise standard setting	☀	●	☀	●	☀	●	☀
	(E) Demand standard setting	☀	●	☀	●	☀	●	☀
	(F) External low noise demand setting	☀	●	☀	●	☀	●	☀
	② Push the RETURN button (BS3) to indicate the present setting. (Refer to ③)							
③ Setting values For (A) (B) (F) – ON and OFF For (C) – OFF, Level 1~3 For (D) (E) – Level 1~3 Push the SET button (BS2) and adjust the LED display to the example shown on the right according to the above required setting. ※ For (C) and (D), operation noise: Level 1 > Level 2 > Level 3 For (E), power consumption: Level 1 < Level 2 < Level 3 (See the service manual for details.)	(A) (B) (F)	ON	☀	●	●	●	●	☀
	(C)	OFF (Factory setting)	☀	●	●	●	●	☀
		Level 1	☀	●	●	●	●	☀
		Level 2	☀	●	●	●	●	☀
		Level 3	☀	●	●	●	●	☀
	(D) (E)	Level 1	☀	●	●	●	●	☀
		Level 2 (Factory setting)	☀	●	●	●	●	☀
		Level 3	☀	●	●	●	●	☀
	④ Push the RETURN button (BS3) to define the setting. (Light ON instead of flashing for H1P.)							
	⑤ Push the RETURN button (BS3) again to start the operation according to the setting.		☀	●	●	●	●	●

※ For settings other than the above, see the service manual.

Confirmation of setting items		The following items can be confirmed in the SETTING MODE 1.						
Confirming items	Example of LED display	Example of LED display and its position						
		H1P	H2P	H3P	H4P	H5P	H6P	H7P
The present operating state	●: Normal ☀: Abnormal ☀: Under preparation or check operation	●	●	☀	●	☀	●	☀
Cool/Heat selection setting	When setting Cool/Heat selection for each outdoor system individually (factory setting)	●	●	☀	●	☀	●	☀
	For the master unit, when setting Cool/Heat selection for multiple outdoor systems together	●	●	☀	●	☀	●	☀
	For the slave unit, when setting Cool/Heat selection for multiple outdoor systems together	●	●	☀	●	☀	●	☀
Low noise operating state	● Under normal operation (factory setting) ☀ Under low noise operation	●	●	☀	●	☀	●	☀
Demand operating state	● Under normal operation (factory setting) ☀ Under demand operation	●	●	☀	●	☀	●	☀

Precautions for test run

※ After the power supply is turned on, do not operate the air conditioner before the UNDER PREPARATION (H2P) indicator is OFF (maximum for 12 minutes).

- Check the stop valves. Make sure to completely open the stop valve on the gas side and the stop valve on the liquid side.
- Make sure to carry out test run after the first installation. Otherwise, the malfunction code "U3" will be displayed and normal operation cannot be carried out.
- ① To protect the compressor, make sure to turn on the power supply for 6 hours before starting operation.
- ② Enter the [SETTING MODE 1] (H1P: Light OFF).
- ③ In the stopped status, hold down the TEST button (BS4) for more than 5 seconds to start test run.

H2P will flash up and "Test operation" and "Under centralized control" will be displayed in the remote controller.

It may take about 10 minutes to bring the state of refrigerant stable before the compressor starts, but this is not malfunction.

Test run is automatically carried out in the cooling mode.

(※ The refrigerant running sound or the magnetic sound of a solenoid valve may become loud during this operation.)

Following items can be automatically checked.

- Incorrect wiring checking
- Unopened stop valve checking
- Piping length auto determination

To discontinue the operation, push the RETURN button (BS3). The system will stop after operation for 30 seconds around.

(During the test run, it is impossible to stop the unit from the remote controller.)

④ Close the front panel.

⑤ The system will stop automatically after running 30 minutes around (maximum 1 hour). Check the operation results by the outdoor unit LED display.

<See the table shown below>

	H1P	H2P	H3P	H4P	H5P	H6P	H7P
Normal	●	●	☀	●	●	●	●
Abnormal	●	☀	☀	●	●	●	●

< Caution >

- Do not simply check the abnormality of one indoor unit. After the operation is finished, start the normal operation from the remote controller and check.
- The LED display will change during this operation, but this is not malfunction.
- To prevent electric shock during this operation, install the front panel firmly.

[Measures for abnormal finish]

1. Confirm the malfunction code by the remote controller.
2. Correct the abnormality. (See the installation manual, operation manual or service manual, or contact your dealer.)
3. After correcting the abnormality, push the RETURN button (BS3) to reset the malfunction code.
4. Carry out the test run again and confirm the abnormality is properly corrected.

※ If there is no malfunction code displayed in the remote controller, the system will carry out normal operation after about 5 minutes.

Precautions to service mode operation

※ After turning on the power supply, the unit can not start service mode until H2P goes off (maximum for 12 minutes around).

• **For internal evacuation** (At the first installation, this internal evacuation is not required. It is only required for service.)

- ① When the unit is at standstill, set ⑧ Refrigerant recovery/Evacuation mode to ON in the [SETTING MODE 2].
(After the setting is defined, do not reset the [SETTING MODE 2] until the evacuation is completed.)
(If "Test operation" and "Under centralized control" are displayed in the remote controller, the operation will be rejected.)
- ② Evacuate the system with a vacuum pump.
- ③ Push the MODE button (BS1) to reset the [SETTING MODE 2].

• **For refrigerant recovery by refrigerant reclaimer**

- ① When the unit is at standstill, set ⑧ Refrigerant recovery/Evacuation mode to ON in the [SETTING MODE 2].
(The expansion valves in the indoor and outdoor units will be opened completely. Some of the solenoid valves are ON.)
(If "Test operation" and "Under centralized control" displayed in the remote controller, the operation will be rejected.)
- ② Recover the refrigerant by a refrigerant reclaimer in accordance with the local laws and regulations.
- ③ Push the MODE button (BS1) to reset the [SETTING MODE 2].

Caution

Do not shut off the power supply of the outdoor unit when recovering the refrigerant.
(Otherwise, the solenoid valves will be closed and the refrigerant of the outdoor unit can not be recovered.)

Precautions for charging additional refrigerant

※ When the outdoor unit is stopped and the entire quantity of refrigerant can not be charged, make sure to charge the remaining quantity of refrigerant using this procedure. Otherwise, the unit may malfunction.

- ① Turn on the power supply of the indoor unit and outdoor unit.
- ② Completely open the stop valve on the gas side and the stop valve on the liquid side.
- ③ Connect the service port to the charge hose(gas stop valve).
- ④ When the unit is at standstill and under the [SETTING MODE 2] (H1P: Light ON), set ④ "Additional refrigerant charging mode" to "ON".
- ⑤ The operation is automatically started. (H2P flickers, and "Test operation" and "Under centralized control" are displayed in the remote controller.)
- ⑥ After charging the specified quantity of refrigerant, push the RETURN button (BS3) to stop the operation.
The operation is stopped within 30 minutes around.
If refrigerant charging is not completed within 30 minutes, set ④ "Additional refrigerant charging mode" to ON and perform this operation again.
If this operation is stopped soon after restarting, the refrigerant may be overcharged. Stop charging extra refrigerant.
- ⑦ Disconnect the refrigerant charge hose.

1. Record of setting details

After performing settings to ③ ~ ⑤ in the [SETTING MODE 2], make a record by marking ○ in the table below.

③Night-time automatic low noise setting				④External low noise standard setting			⑤Demand standard setting		
OFF	Level 1	Level 2	Level 3	Level 1	Level 2	Level 3	Level 1	Level 2	Level 3

(Be sure to fill in the table by the after-sales service staff.)

2. Record of additional refrigerant charging amount

Calculate the refrigerant charging amount based on the following formula. Refer to Installation manual for more details.

Additional charge amount	=	1)Liquid Refrigerant amount for field piping	+	2)Main Gas Refrigerant amount for field piping	+	3) ODU Capacity	+	4) Indoor unit type
lbs		Total lbs		Total lbs		lbs		Total lbs

3. Record of indoor unit model name and installation location


No.	1	2	3	4	5	6	7	8	9
Model name									
Installation location									

18.2 RXSQ48TAVJUA


Service precautions**Warning****Caution to electric shock****⊙ Precautions for servicing control box**

1. Before service inspection, be sure to measure the power supply terminal (X1M) with a multimeter and confirm the power supply is turned off.
2. Be careful not to touch the high-temperature components.
There is a possibility that each component within the control box can generate high temperature.
3. Be careful not to touch the live parts.
Do not touch the live parts before making sure the residual voltage is less of 50V.
 - ① After turning off the power supply, leave the units unused for 10 minutes.
 - ② To prevent a damage of the PC board, always touch the ground terminal with your hands to discharge the static electricity on your body.
 - ③ Do not touch the live parts. Measure the residual voltage of the measuring position using the multimeter.
 - ④ After confirming the residual voltage, pull out the connector for the fan motor in the outdoor unit immediately.
(If the fan in the outdoor unit rotates by strong headwinds, it may cause storage of electricity in the capacitor and electric shock.)

※ After completing service work, plug in the connector for the fan motor in the outdoor unit, then restore the insulating film to its state as delivered.

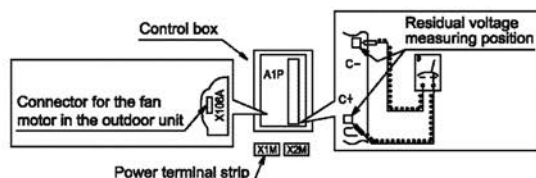


LED display ● : Light OFF ☀ : Light ON ⚡ : Flashing ※ : Light ON or Light OFF

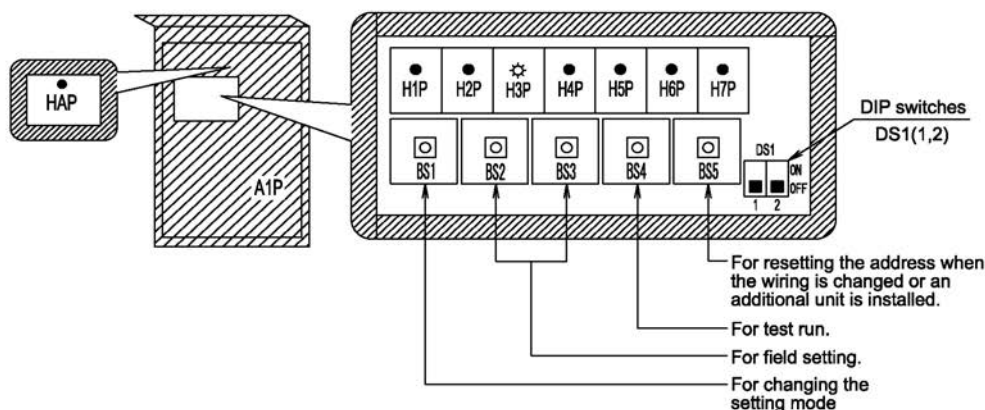

⚠ While performing check and other operations, do not uncover the insulating film or remove the P board protective cover to avoid electric shock and injury!

Changing the setting mode

 The setting mode can be changed by the MODE button (BS1) according to the following procedure.

**⚠ Caution**

For selecting low noise operation by an outside order, demand operation and operation mode setting with a Cool/Heat central remote controller, the external control adapter for outdoor unit (optional accessory) is required. For details, see the instruction attached to the adapter.

Make settings (Cool/Heat selection setting) in the SETTING MODE 1 (H1P: Light OFF)		Example of LED display and its position						
Setting procedure	Description	H1P	H2P	H3P	H4P	H5P	H6P	H7P
① Push the SET button (BS2) and adjust the LED display to the example shown on the right.	When setting Cool/Heat selection for each outdoor system individually (factory setting)	●	●	●	●	●	●	●
	For the master unit, when setting Cool/Heat selection for multiple outdoor systems together ※	●	●	●	●	●	●	●
	For the slave unit, when setting Cool/Heat selection for multiple outdoor systems together ※	●	●	●	●	●	●	●
② Push the RETURN button (BS3) to define the setting.								
Items marked "※" mean the external control adapter (optional accessory) for the outdoor unit should be configured separately. See the operation manual of the adapter for details.								
Make settings in the SETTING MODE 2 (H1P: Light ON)		Example of LED display and its position						
Setting procedure	Details of setting	H1P	H2P	H3P	H4P	H5P	H6P	H7P
① Push the SET button (BS2) and adjust the LED display to the example shown on the right according to the required setting (A ~ F).	Ⓐ Additional refrigerant charging operation setting	☀	●	☀	●	☀	●	☀
	Ⓑ Refrigerant recovery/Evacuation mode setting	☀	●	☀	●	☀	●	☀
	Ⓒ Night-time automatic low noise setting	☀	●	☀	●	☀	●	☀
	Ⓓ External low noise standard setting	☀	●	☀	●	☀	●	☀
	Ⓔ Demand standard setting	☀	●	☀	●	☀	●	☀
	Ⓕ External low noise demand setting	☀	●	☀	●	☀	●	☀
② Push the RETURN button (BS3) to indicate the present setting. (Refer to ③)								
③ Setting values For Ⓐ Ⓑ Ⓕ – ON and OFF For Ⓒ – OFF, Level 1~3 For Ⓓ Ⓔ – Level 1~3 Push the SET button (BS2) and adjust the LED display to the example shown on the right according to the above required setting. ※ For Ⓒ and Ⓓ, operation noise: Level 1 > Level 2 > Level 3 For Ⓔ, power consumption: Level 1 < Level 2 < Level 3 (See the service manual for details.)	Ⓐ Ⓑ	ON	☀	●	☀	●	☀	●
	Ⓕ	OFF (Factory setting)	☀	●	☀	●	☀	●
	Ⓒ	OFF (Factory setting)	☀	●	☀	●	☀	●
		Level 1	☀	●	☀	●	☀	●
		Level 2	☀	●	☀	●	☀	●
		Level 3	☀	●	☀	●	☀	●
	Ⓓ Ⓔ	Level 1	☀	●	☀	●	☀	●
		Level 2 (Factory setting)	☀	●	☀	●	☀	●
		Level 3	☀	●	☀	●	☀	●
④ Push the RETURN button (BS3) to define the setting. (Light ON instead of flashing for H1P.)								
⑤ Push the RETURN button (BS3) again to start the operation according to the setting.		☀	●	☀	●	☀	●	☀
※ For settings other than the above, see the service manual.								
Confirmation of setting items		The following items can be confirmed in the [SETTING MODE 1].						
Confirming items	Example of LED display	Example of LED display and its position						
The present operating state	●:Normal ☀:Abnormal ☀:Under preparation or check operation	☀	●	☀	●	☀	●	☀
Cool/Heat selection setting	When setting Cool/Heat selection for each outdoor system individually (factory setting)	●	●	☀	●	☀	●	●
	For the master unit, when setting Cool/Heat selection for multiple outdoor systems together	●	●	☀	●	☀	●	●
	For the slave unit, when setting Cool/Heat selection for multiple outdoor systems together	●	●	☀	●	☀	●	●
Low noise operating state	●:Under normal operation (factory setting) ☀:Under low noise operation	●	●	☀	●	☀	●	☀
Demand operating state	●:Under normal operation (factory setting) ☀:Under demand operation	●	●	☀	●	☀	●	☀

Precautions for test run

※ After the power supply is turned on, do not operate the air conditioner before the UNDER PREPARATION (H2P) indicator is OFF (maximum for 12 minutes).

- Check the stop valves. Make sure to completely open the stop valve on the gas side and the stop valve on the liquid side.
- Make sure to carry out test run after the first installation. Otherwise, the malfunction code "U3" will be displayed and normal operation cannot be carried out.
- ① To protect the compressor, make sure to turn on the power supply for 6 hours before starting operation.
- ② Enter the [SETTING MODE 1] (H1P: Light OFF).
- ③ In the stopped status, hold down the TEST button (BS4) for more than 5 seconds to start test run.

H2P will flash up and "Test operation" and "Under centralized control" will be displayed in the remote controller.

It may take about 10 minutes to bring the state of refrigerant stable before the compressor starts, but this is not malfunction.

Test run is automatically carried out in the cooling mode.

(※ The refrigerant running sound or the magnetic sound of a solenoid valve may become loud during this operation.)

Following items can be automatically checked.

- Incorrect wiring checking
- Unopened stop valve checking
- Piping length auto determination

To discontinue the operation, push the RETURN button (BS3). The system will stop after operation for 30 seconds around.

(During the test run, it is impossible to stop the unit from the remote controller.)

④ Close the front panel.

⑤ The system will stop automatically after running 30 minutes around (maximum 1 hour). Check the operation results by the outdoor unit LED display.

<See the table shown below>

	H1P	H2P	H3P	H4P	H5P	H6P	H7P
Normal	●	●	☀	●	●	●	●
Abnormal	●	☀	☀	●	●	●	●

Caution

- Do not simply check the abnormality of one indoor unit. After the operation is finished, start the normal operation from the remote controller and check.
- The LED display will change during this operation, but this is not malfunction.
- To prevent electric shock during this operation, install the front panel firmly.

[Measures for abnormal finish]

1. Confirm the malfunction code by the remote controller.
2. Correct the abnormality. (See the installation manual, operation manual or service manual, or contact your dealer.)
3. After correcting the abnormality, push the RETURN button (BS3) to reset the malfunction code.
4. Carry out the test run again and confirm the abnormality is properly corrected.

※ If there is no malfunction code displayed in the remote controller, the system will carry out normal operation after about 5 minutes.

Precautions to service mode operation

※ After turning on the power supply, the unit can not start service mode until H2P goes off (maximum for 12 minutes around).

• **For internal evacuation** (At the first installation, this internal evacuation is not required. It is only required for service.)

- ① When the unit is at standstill, set ⑤ Refrigerant recovery/Evacuation mode to ON in the [SETTING MODE 2].
(After the setting is defined, do not reset the [SETTING MODE 2] until the evacuation is completed.)
(If "Test operation" and "Under centralized control" are displayed in the remote controller, the operation will be rejected.)
- ② Evacuate the system with a vacuum pump.
- ③ Push the MODE button (BS1) to reset the [SETTING MODE 2].

• **For refrigerant recovery by refrigerant reclaimer**

- ① When the unit is at standstill, set ⑤ Refrigerant recovery/Evacuation mode to ON in the [SETTING MODE 2].
(The expansion valves in the indoor and outdoor units will be opened completely. Some of the solenoid valves are ON.)
(If "Test operation" and "Under centralized control" displayed in the remote controller, the operation will be rejected.)
- ② Recover the refrigerant by a refrigerant reclaimer in accordance with the local laws and regulations.
- ③ Push the MODE button (BS1) to reset the [SETTING MODE 2].


Caution

Do not shut off the power supply of the outdoor unit when recovering the refrigerant.
(Otherwise, the solenoid valves will be closed and the refrigerant of the outdoor unit can not be recovered.)

Precautions for charging additional refrigerant

※ When the outdoor unit is stopped and the entire quantity of refrigerant can not be charged, make sure to charge the remaining quantity of refrigerant using this procedure. Otherwise, the unit may malfunction.

- ① Turn on the power supply of the indoor unit and outdoor unit.
- ② Completely open the stop valve on the gas side and the stop valve on the liquid side.
- ③ Connect the service port (for additionally charging the refrigerant) to the charge hose.
- ④ When the unit is at standstill and under the [SETTING MODE 2] (H1P: Light ON), set ④ "Additional refrigerant charging mode" to "ON".
- ⑤ The operation is automatically started. (H2P flickers, and "Test operation" and "Under centralized control" are displayed in the remote controller.)
- ⑥ After charging the specified quantity of refrigerant, push the RETURN button (BS3) to stop the operation.
The operation is stopped within 30 minutes around.
If refrigerant charging is not completed within 30 minutes, set ④ "Additional refrigerant charging mode" to ON and perform this operation again.
If this operation is stopped soon after restarting, the refrigerant may be overcharged. Stop charging extra refrigerant.
- ⑦ Disconnect the refrigerant charge hose.

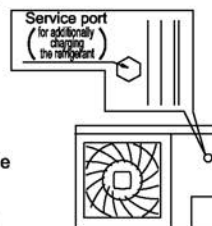**1. Record of setting details**

After performing settings to ㉓ ~ ㉓ in the [SETTING MODE 2], make a record by marking ○ in the table below.

㉓Night-time automatic low noise setting				㉓External low noise standard setting			㉓Demand standard setting		
OFF	Level 1	Level 2	Level 3	Level 1	Level 2	Level 3	Level 1	Level 2	Level 3

(Be sure to fill in the table by the after-sales service staff.)

2. Record of additional refrigerant charging amount

Calculate the refrigerant charging amount based on the following formula. Refer to Installation manual for more details.

Additional charge amount	=	1)Liquid Refrigerant amount for field piping	+	2)Main Gas Refrigerant amount for field piping	+	3) ODU Capacity	+	4) Indoor unit type
lbs		Total lbs		Total lbs		lbs		Total lbs

3. Record of indoor unit model name and installation location

No.	1	2	3	4	5	6	7	8	9
Model name									
Installation location									

18.3 RXSQ60TAVJUA

Service precautions**Warning****Caution to electric shock****ⓘ Precautions for servicing control box**

1. Before service inspection, be sure to measure the power supply terminal (X1M) with a multimeter and confirm the power supply is turned off.

2. Be careful not to touch the high-temperature components.

There is a possibility that each component within the control box can generate high temperature.

3. Be careful not to touch the live parts.

Do not touch the live parts before making sure the residual voltage is less of 50V.


① After turning off the power supply, leave the units unused for 10 minutes.

② To prevent a damage of the PC board, always touch the ground terminal with your hands to discharge the static electricity on your body.


③ Do not touch the live parts. Measure the residual voltage of the measuring position using the multimeter.

④ After confirming the residual voltage, pull out the connector for the fan motor in the outdoor unit immediately.
(If the fan in the outdoor unit rotates by strong headwinds, it may cause storage of electricity in the capacitor and electric shock.)

※ After completing service work, plug in the connector for the fan motor in the outdoor unit, then restore the insulating film to its state as delivered.

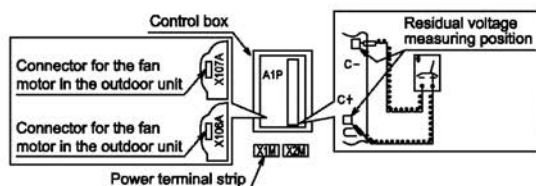


LED display ● : Light OFF ☀ : Light ON ⚡ : Flashing ※ : Light ON or Light OFF

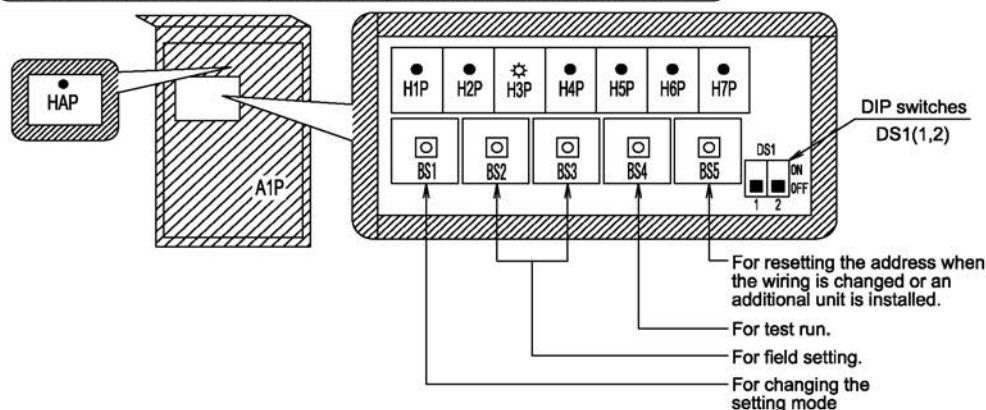

⚠ While performing check and other operations, do not uncover the insulating film or remove the P board protective cover to avoid electric shock and injury!

Changing the setting mode

 The setting mode can be changed by the MODE button (BS1) according to the following procedure.

**⚠ Caution**

For selecting low noise operation by an outside order, demand operation and operation mode setting with a Cool/Heat central remote controller, the external control adapter for outdoor unit (optional accessory) is required. For details, see the instruction attached to the adapter.

Make settings (Cool/Heat selection setting) in the SETTING MODE 1 (H1P: Light OFF)		Example of LED display and its position						
Setting procedure	Description	H1P	H2P	H3P	H4P	H5P	H6P	H7P
① Push the SET button (BS2) and adjust the LED display to the example shown on the right.	When setting Cool/Heat selection for each outdoor system individually (factory setting)	●	●	☀	●	●	●	●
	For the master unit, when setting Cool/Heat selection for multiple outdoor systems together ※	●	●	☀	☀	●	●	●
	For the slave unit, when setting Cool/Heat selection for multiple outdoor systems together ※	●	●	☀	●	☀	●	●
② Push the RETURN button (BS3) to define the setting.								

Items marked "※" mean the external control adapter (optional accessory) for the outdoor unit should be configured separately. See the operation manual of the adapter for details.

Make settings in the SETTING MODE 2 (H1P: Light ON)

Settings of the following items ① ~ ⑦ can be carried out.

Setting procedure		Example of LED display and its position						
Details of setting		H1P	H2P	H3P	H4P	H5P	H6P	H7P
① Push the SET button (BS2) and adjust the LED display to the example shown on the right according to the required setting (A ~ F).	① Additional refrigerant charging operation setting	☀	●	☀	●	☀	●	●
	② Refrigerant recovery/Evacuation mode setting	☀	☀	☀	☀	☀	☀	☀
	③ Night-time automatic low noise setting	☀	●	☀	●	☀	●	☀
	④ External low noise standard setting	☀	☀	☀	☀	☀	☀	☀
	⑤ Demand standard setting	☀	☀	☀	☀	☀	☀	☀
	⑥ External low noise demand setting	☀	☀	☀	☀	☀	☀	☀
② Push the RETURN button (BS3) to indicate the present setting. (Refer to ③)								
③ Setting values For ① ② ⑥ – ON and OFF For ③ – OFF, Level 1~3 For ④ ⑤ – Level 1~3 Push the SET button (BS2) and adjust the LED display to the example shown on the right according to the above required setting. ※ For ③ and ④, operation noise: Level 1 > Level 2 > Level 3 For ⑤, power consumption: Level 1 < Level 2 < Level 3 (See the service manual for details.)	① ②	ON	☀	●	●	●	●	☀
	⑥	OFF (Factory setting)	☀	●	●	●	●	☀
	③	OFF (Factory setting)	☀	●	●	●	●	☀
		Level 1	☀	●	●	●	●	☀
		Level 2	☀	●	●	●	●	☀
		Level 3	☀	●	●	●	●	☀
	④ ⑤	Level 1	☀	●	●	●	●	☀
		Level 2 (Factory setting)	☀	●	●	●	●	☀
		Level 3	☀	●	●	●	●	☀
	④ Push the RETURN button (BS3) to define the setting. (Light ON instead of flashing for H1P.)		☀	●	●	●	●	●
⑤ Push the RETURN button (BS3) again to start the operation according to the setting.		☀	●	●	●	●	●	●
※ For settings other than the above, see the service manual.								

Confirmation of setting items		Example of LED display and its position						
Confirming items	Example of LED display	H1P	H2P	H3P	H4P	H5P	H6P	H7P
The present operating state	●:Normal ☀:Abnormal ☀:Under preparation or check operation	●	●	☀	●	●	●	●
Cool/Heat selection setting	When setting Cool/Heat selection for each outdoor system individually (factory setting)	●	●	☀	●	●	●	●
	For the master unit, when setting Cool/Heat selection for multiple outdoor systems together	●	●	☀	☀	●	●	●
	For the slave unit, when setting Cool/Heat selection for multiple outdoor systems together	●	●	☀	●	☀	●	●
Low noise operating state	● Under normal operation (factory setting) ☀ Under low noise operation	●	●	☀	●	●	●	☀
Demand operating state	● Under normal operation (factory setting) ☀ Under demand operation	●	●	☀	●	●	●	☀

Precautions for test run

※ After the power supply is turned on, do not operate the air conditioner before the UNDER PREPARATION (H2P) indicator is OFF (maximum for 12 minutes).

- Check the stop valves. Make sure to completely open the stop valve on the gas side and the stop valve on the liquid side.
- Make sure to carry out test run after the first installation. Otherwise, the malfunction code "U3" will be displayed and normal operation cannot be carried out.
- ① To protect the compressor, make sure to turn on the power supply for 6 hours before starting operation.
- ② Enter the **SETTING MODE 1** (H1P: Light OFF).
- ③ In the stopped status, hold down the TEST button (BS4) for more than 5 seconds to start test run.

H2P will flash up and "Test operation" and "Under centralized control" will be displayed in the remote controller.
It may take about 10 minutes to bring the state of refrigerant stable before the compressor starts, but this is not malfunction.

Test run is automatically carried out in the cooling mode.

(※ The refrigerant running sound or the magnetic sound of a solenoid valve may become loud during this operation.)

Following items can be automatically checked.

- Incorrect wiring checking
- Unopened stop valve checking
- Piping length auto determination

To discontinue the operation, push the RETURN button (BS3). The system will stop after operation for 30 seconds around.

(During the test run, it is impossible to stop the unit from the remote controller.)

④ Close the front panel.

⑤ The system will stop automatically after running 30 minutes around (maximum 1 hour). Check the operation results by the outdoor unit LED display.

<See the table shown below>

	H1P	H2P	H3P	H4P	H5P	H6P	H7P
Normal	●	●	☀	●	●	●	●
Abnormal	●	☀	☀	●	●	●	●

< Caution >

- Do not simply check the abnormality of one indoor unit. After the operation is finished, start the normal operation from the remote controller and check.
- The LED display will change during this operation, but this is not malfunction.
- To prevent electric shock during this operation, install the front panel firmly.

[Measures for abnormal finish]

1. Confirm the malfunction code by the remote controller.
2. Correct the abnormality. (See the installation manual, operation manual or service manual, or contact your dealer.)
3. After correcting the abnormality, push the RETURN button (BS3) to reset the malfunction code.
4. Carry out the test run again and confirm the abnormality is properly corrected.

※ If there is no malfunction code displayed in the remote controller, the system will carry out normal operation after about 5 minutes.

Precautions to service mode operation

※ After turning on the power supply, the unit can not start service mode until H2P goes off (maximum for 12 minutes around).

• **For internal evacuation** (At the first installation, this internal evacuation is not required. It is only required for service.)

- ① When the unit is at standstill, set ⑤ Refrigerant recovery/Evacuation mode to ON in the [SETTING MODE 2].
(After the setting is defined, do not reset the [SETTING MODE 2] until the evacuation is completed.)
(If "Test operation" and "Under centralized control" are displayed in the remote controller, the operation will be rejected.)
- ② Evacuate the system with a vacuum pump.
- ③ Push the MODE button (BS1) to reset the [SETTING MODE 2].

• **For refrigerant recovery by refrigerant reclaimer**

- ① When the unit is at standstill, set ⑤ Refrigerant recovery/Evacuation mode to ON in the [SETTING MODE 2].
(The expansion valves in the indoor and outdoor units will be opened completely. Some of the solenoid valves are ON.)
(If "Test operation" and "Under centralized control" displayed in the remote controller, the operation will be rejected.)
- ② Recover the refrigerant by a refrigerant reclaimer in accordance with the local laws and regulations.
- ③ Push the MODE button (BS1) to reset the [SETTING MODE 2].

Caution


Do not shut off the power supply of the outdoor unit when recovering the refrigerant.

(Otherwise, the solenoid valves will be closed and the refrigerant of the outdoor unit can not be recovered.)

Precautions for charging additional refrigerant

※ When the outdoor unit is stopped and the entire quantity of refrigerant can not be charged, make sure to charge the remaining quantity of refrigerant using this procedure. Otherwise, the unit may malfunction.

- ① Turn on the power supply of the indoor unit and outdoor unit.
- ② Completely open the stop valve on the gas side and the stop valve on the liquid side.
- ③ Connect the service port (for additionally charging the refrigerant) to the charge hose.
- ④ When the unit is at standstill and under the [SETTING MODE 2] (H1P: Light ON), set ① "Additional refrigerant charging mode" to "ON".
- ⑤ The operation is automatically started. (H2P flickers, and "Test operation" and "Under centralized control" are displayed in the remote controller.)
- ⑥ After charging the specified quantity of refrigerant, push the RETURN button (BS3) to stop the operation.
The operation is stopped within 30 minutes around.
If refrigerant charging is not completed within 30 minutes, set ① "Additional refrigerant charging mode" to ON and perform this operation again.
If this operation is stopped soon after restarting, the refrigerant may be overcharged. Stop charging extra refrigerant.
- ⑦ Disconnect the refrigerant charge hose.

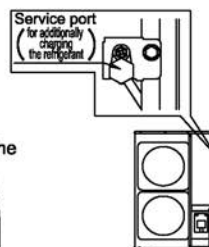**1. Record of setting details**

After performing settings to ㉔ ~ ㉞ in the [SETTING MODE 2], make a record by marking ○ in the table below.

㉔Night-time automatic low noise setting				㉞External low noise standard setting			㉞Demand standard setting		
OFF	Level 1	Level 2	Level 3	Level 1	Level 2	Level 3	Level 1	Level 2	Level 3

(Be sure to fill in the table by the after-sales service staff.)

2. Record of additional refrigerant charging amount

Calculate the refrigerant charging amount based on the following formula. Refer to Installation manual for more details.

Additional charge amount	=	1)Liquid Refrigerant amount for field piping	+	2)Main Gas Refrigerant amount for field piping	+	3) ODU Capacity	+	4) Indoor unit type
lbs		Total lbs		Total lbs		lbs		Total lbs

3. Record of indoor unit model name and installation location

No.	1	2	3	4	5	6	7	8	9
Model name									
Installation location									

19. Caution for Refrigerant Leaks

19.1 Introduction

Points to note in connection with refrigerant leaks


The installer and system specialist shall secure safety against leakage according to local regulations or standards. The following standards may be applicable if local regulations are not available.

The **VRV** System, like other air conditioning systems, uses R410A as refrigerant. R410A itself is an entirely safe non-toxic, non-combustible refrigerant. Nevertheless care must be taken to ensure that air conditioning facilities are installed in a room which is sufficiently large. This assures that the maximum concentration level of refrigerant gas is not exceeded, in the unlikely event of major leak in the system and this in accordance to the local applicable regulations and standards.

Maximum concentration level

The maximum charge of refrigerant and the calculation of the maximum concentration of refrigerant is directly related to the humanly occupied space in to which it could leak.

The unit of measurement of the concentration is lb./1000 ft.³ (the weight in lbs. of the refrigerant gas in 1 ft.³ volume of the occupied space). Compliance to the local applicable regulations and standards for the maximum allowable concentration level is required.

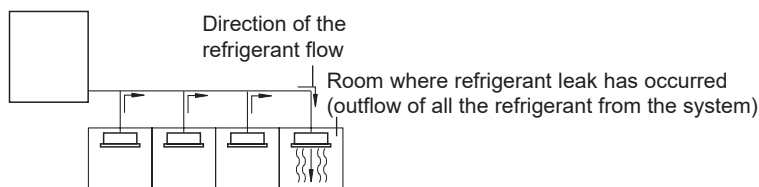

Pay special attention to places, such as basements, etc. where refrigerant can stay, since refrigerant is heavier than air.

19.2 Procedure for Checking Maximum Concentration

Check the maximum concentration level in accordance with steps 1 to 4 below and take whatever action is necessary to comply.

Step 1: Calculate the amount of refrigerant (lbs.) charged to each system separately.

Amount of refrigerant in a single unit system (amount of refrigerant with which the system is charged before leaving the factory)	+	Additional charging amount (amount of refrigerant added locally in accordance with the length or diameter of the refrigerant piping)	=	Total amount of refrigerant (lbs.) in the system
---	---	--	---	--




Note:

Where a single refrigerant facility is divided into 2 entirely independent refrigerant systems then use the amount of refrigerant with which each separate system is charged.


Step 2: Calculate the smallest room volume (ft.³)

In case like the following, calculate the volume of (a), (b) as a single room or as the smallest room.

(a) Where there are no smaller room divisions.

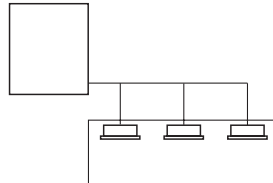


(b) Where there is a room division but there is an opening between the rooms sufficiently large to permit a free flow of air back and forth.

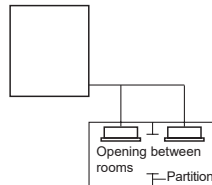

(Where there is an opening without a door or where there are openings above and below the door which are each equivalent in size to 0.15% or more of the floor area.)

(c) Where there is a gas leak detection alarm device linked to a mechanical ventilator in the smallest room then the next smallest room will become the measurement target.

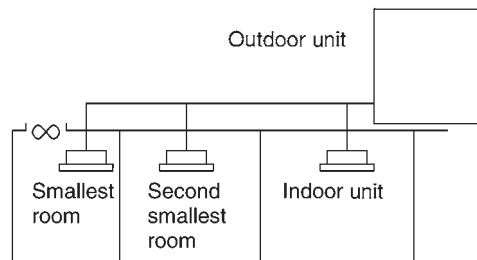

Step 3: Calculating the refrigerant density using the results of the calculations in steps 1 and 2 above.

$$\frac{\text{Total volume of refrigerant in the refrigerant system}}{\text{Size (ft.}^3\text{) of the smallest room in which there is an indoor unit installed}} \leq \text{Maximum concentration level (lbs./ft.}^3\text{)}$$

If the result of the above calculation exceeds the maximum concentration level then make similar calculations for the second then third smallest room and so until the result falls short of the maximum concentration.

Step 4: Dealing with the situations where the result exceeds the maximum concentration level.

Where the installation of a facility results in a concentration in excess of the maximum concentration level then it will be necessary to revise the system.

Please consult your Daikin supplier.

20. Safety Devices Setting

20.1 FXFQ-T

Model		FXFQ07TVJU	FXFQ09TVJU	FXFQ12TVJU	FXFQ15TVJU	FXFQ18TVJU
Printed circuit board fuse		250 V, 3.15 A	250 V, 3.15 A	250 V, 3.15 A	250 V, 3.15 A	250 V, 3.15 A
Drain pump thermal fuse	°F (°C)	—	—	—	—	—
Fan motor thermal protector	°F (°C)	—	—	—	—	—
Fan motor thermal fuse	°F (°C)	—	—	—	—	—

Model		FXFQ24TVJU	FXFQ30TVJU	FXFQ36TVJU	FXFQ48TVJU
Printed circuit board fuse		250 V, 3.15 A	250 V, 3.15 A	250 V, 3.15 A	250 V, 3.15 A
Drain pump thermal fuse	°F (°C)	—	—	—	—
Fan motor thermal protector	°F (°C)	—	—	—	—
Fan motor thermal fuse	°F (°C)	—	—	—	—

C: 3D086932C

20.2 FXZQ-TA

Model		FXZQ05TAVJU	FXZQ07TAVJU	FXZQ09TAVJU	FXZQ12TAVJU	FXZQ15TAVJU	FXZQ18TAVJU
Printed circuit board fuse		250 V, 3.15 A	250 V, 3.15 A	250 V, 3.15 A	250 V, 3.15 A	250 V, 3.15 A	250 V, 3.15 A
Fan motor thermal fuse	°F (°C)	—	—	—	—	—	—
Fan motor thermal protector	°F (°C)	—	—	—	—	—	—
Drain pump fuse	°F (°C)	—	—	—	—	—	—

C: 4D110603

20.3 FXUQ-P

Model		FXUQ18PVJU	FXUQ24PVJU	FXUQ30PVJU	FXUQ36PVJU
Printed circuit board fuse		250 V, 3.15 A	250 V, 3.15 A	250 V, 3.15 A	250 V, 3.15 A
Drain pump thermal fuse	°F (°C)	—	—	—	—
Fan motor thermal protector	°F (°C)	—	—	—	—
Fan motor thermal fuse	°F (°C)	—	—	—	—

C: 3D090213

20.4 FXEQ-P

Model		FXEQ07PVJU	FXEQ09PVJU	FXEQ12PVJU	FXEQ15PVJU	FXEQ18PVJU	FXEQ24PVJU
Printed circuit board fuse	A1P	250 V, 3.15 A	250 V, 3.15 A	250 V, 3.15 A	250 V, 3.15 A	250 V, 3.15 A	250 V, 3.15 A
Fan motor thermal protector	°F (°C)	OFF: 223±9 (106±5) ON: 205±27 (96±15)	OFF: 223±9 (106±5) ON: 205±27 (96±15)	OFF: 223±9 (106±5) ON: 205±27 (96±15)	OFF: 223±9 (106±5) ON: 205±27 (96±15)	OFF: 223±9 (106±5) ON: 205±27 (96±15)	OFF: 223±9 (106±5) ON: 205±27 (96±15)

C: 4D098709

20.5 FXDQ-M

Model		FXDQ07MVJU	FXDQ09MVJU	FXDQ12MVJU	FXDQ18MVJU	FXDQ24MVJU
Printed circuit board fuse	A1P	250 V, 5 A	250 V, 5 A	250 V, 5 A	250 V, 5 A	250 V, 5 A
Fan motor thermal protector	°F	OFF: 266±9 ON: 181±27	OFF: 266±9 ON: 181±27	OFF: 266±9 ON: 181±27	OFF: 266±9 ON: 181±27	OFF: 266±9 ON: 181±27

C: 3D051758

20.6 FXSQ-TA

Model		FXSQ05TAVJU	FXSQ07TAVJU	FXSQ09TAVJU	FXSQ12TAVJU	FXSQ15TAVJU
Printed circuit board fuse		250 V, 3.15 A	250 V, 3.15 A	250 V, 3.15 A	250 V, 3.15 A	250 V, 3.15 A
Printed circuit board fuse (Fan driver)		250 V, 6.3 A	250 V, 6.3 A	250 V, 6.3 A	250 V, 6.3 A	250 V, 6.3 A
Drain pump thermal fuse	°F (°C)	—	—	—	—	—

Model		FXSQ18TAVJU	FXSQ24TAVJU	FXSQ30TAVJU	FXSQ36TAVJU	FXSQ48TAVJU	FXSQ54TAVJU
Printed circuit board fuse		250 V, 3.15 A	250 V, 3.15 A	250 V, 3.15 A	250 V, 3.15 A	250 V, 3.15 A	250 V, 3.15 A
Printed circuit board fuse (Fan driver)		250 V, 6.3 A	250 V, 6.3 A	250 V, 6.3 A	250 V, 6.3 A	250 V, 6.3 A	250 V, 6.3 A
Drain pump thermal fuse	°F (°C)	—	—	—	—	—	—

3D112398

20.7 FXMQ-PB

Model		FXMQ07PBVJU	FXMQ09PBVJU	FXMQ12PBVJU	FXMQ15PBVJU	FXMQ18PBVJU
Printed circuit board fuse		250 V, 3.15 A	250 V, 3.15 A	250 V, 3.15 A	250 V, 3.15 A	250 V, 3.15 A
Printed circuit board fuse (Fan driver)		250 V, 5 A	250 V, 5 A	250 V, 5 A	250 V, 6.3 A	250 V, 6.3 A
Drain pump thermal fuse	°F (°C)	293 (145)	293 (145)	293 (145)	293 (145)	293 (145)

Model		FXMQ24PBVJU	FXMQ30PBVJU	FXMQ36PBVJU	FXMQ48PBVJU	FXMQ54PBVJU
Printed circuit board fuse		250 V, 3.15 A	250 V, 3.15 A	250 V, 3.15 A	250 V, 3.15 A	250 V, 3.15 A
Printed circuit board fuse (Fan driver)		250 V, 6.3 A	250 V, 6.3 A	250 V, 6.3 A	250 V, 6.3 A	250 V, 6.3 A
Drain pump thermal fuse	°F (°C)	293 (145)	293 (145)	293 (145)	293 (145)	293 (145)

C: 3D086916B

20.8 FXHQ-M

Model		FXHQ12MVJU	FXHQ24MVJU	FXHQ36MVJU
Printed circuit board fuse		250 V, 5 A	250 V, 5 A	250 V, 5 A
Fan motor thermal fuse	°F	—	—	—
Fan motor thermal protector	°F	OFF: 266±9 ON: 176±36	OFF: 266±9 ON: 176±36	OFF: 266±9 ON: 176±36

C: 3D049334A

20.9 FXAQ-P

Model		FXAQ07PVJU	FXAQ09PVJU	FXAQ12PVJU	FXAQ18PVJU	FXAQ24PVJU
Printed circuit board fuse		250 V, 3.15 A	250 V, 3.15 A	250 V, 3.15 A	250 V, 3.15 A	250 V, 3.15 A
Fan motor thermal fuse	°F	—	—	—	—	—
Fan motor thermal protector	°F	—	—	—	—	—

C: 4D047085D

20.10 FXLQ-M, FXNQ-M

Model		FXLQ07MVJU FXNQ07MVJU	FXLQ09MVJU FXNQ09MVJU	FXLQ12MVJU FXNQ12MVJU	FXLQ18MVJU FXNQ18MVJU	FXLQ24MVJU FXNQ24MVJU
Printed circuit board fuse		250 V, 5 A	250 V, 5 A	250 V, 5 A	250 V, 5 A	250 V, 5 A
Fan motor thermal protector	°F (°C)	OFF: 275±18 (135±10) ON: 248 (120) or less	OFF: 275±18 (135±10) ON: 248 (120) or less	OFF: 275±18 (135±10) ON: 248 (120) or less	OFF: 275±18 (135±10) ON: 248 (120) or less	OFF: 275±18 (135±10) ON: 248 (120) or less

C: 3D045646B

20.11 FXTQ-TA

Model	FXTQ09TAVJUA	FXTQ12TAVJUA	FXTQ18TAVJUA	FXTQ24TAVJUA	FXTQ30TAVJUA
Model (with factory disconnect)	FXTQ09TAVJUD	FXTQ12TAVJUD	FXTQ18TAVJUD	FXTQ24TAVJUD	FXTQ30TAVJUD
Printed circuit board fuse (F1U)	32 V, 3 A	32 V, 3 A	32 V, 3 A	32 V, 3 A	32 V, 3 A
Printed circuit board fuse (F2U)	250 V, 3.15 A	250 V, 3.15 A	250 V, 3.15 A	250 V, 3.15 A	250 V, 3.15 A
Others	Blower motor, Fan driver overload protector				

Model	FXTQ36TAVJUA	FXTQ42TAVJUA	FXTQ48TAVJUA	FXTQ54TAVJUA	FXTQ60TAVJUA
Model (with factory disconnect)	FXTQ36TAVJUD	FXTQ42TAVJUD	FXTQ48TAVJUD	FXTQ54TAVJUD	FXTQ60TAVJUD
Printed circuit board fuse (F1U)	32 V, 3 A	32 V, 3 A	32 V, 3 A	32 V, 3 A	32 V, 3 A
Printed circuit board fuse (F2U)	250 V, 3.15 A	250 V, 3.15 A	250 V, 3.15 A	250 V, 3.15 A	250 V, 3.15 A
Others	Blower motor, Fan driver overload protector				

20.12 CXTQ-TA

Model	CXTQ24TASBLU	CXTQ36TASBLU	CXTQ48TASBLU	CXTQ60TASBLU
Printed circuit board fuse (F1U)	32 V, 3 A	32 V, 3 A	32 V, 3 A	32 V, 3 A
Printed circuit board fuse (F2U)	250 V, 3.15 A	250 V, 3.15 A	250 V, 3.15 A	250 V, 3.15 A

Appendix

- 1. Introduction.....68
 - 1.1 ED Book List 68
 - 1.2 Publication List of Engineering Data for **VRV** Products 69

1. Introduction

1.1 ED Book List

Design Manual RXSQ-TAVJUA **EDUS331721A-D**
(This booklet)

Capacity Table Book

Heat Pump RXSQ-TAVJUA **EDUS331721A-C**

Installation

Heat Pump, Heat Recovery..... RXYQ
REYQ **EDUS371848-N**

Indoor Units

Ceiling Mounted Cassette Type (Round Flow with Sensing) FXFQ-T **EDUS391400A-F14**

VISTA™ 2 × 2 Cassette Unit FXZQ-TA **EDUS391776-F9**

4-Way Blow Ceiling-Suspended Type FXUQ-P **EDUS391437-F15**

One Way Blow Cassette Type FXEQ-P **EDUS391533-F16**

Slim Ceiling Mounted Duct Type FXDQ-M **EDUS39-600-F2**

MSP Concealed Duct Unit FXSQ-TA **EDUS391777-F17**

Ceiling Mounted Duct Type FXMQ-PB **EDUS391503A-F4**

Ceiling Suspended Type FXHQ-M **EDUS39-600-F5**

Wall Mounted Type FXAQ-P **EDUS391100-F6**

Floor Standing Type / Concealed Floor Standing Type..... FXLQ-M
FXNQ-M **EDUS391502-F7**

Air Handling Unit..... FXTQ-TA **Engineering Data FXTQ-TA**

Cased Coil Unit CXTQ-TA **Engineering Data CXTQ-TA**

Controls **EDUS721909-T**

Remote Controller

Navigation Remote Controller..... BRC1E73 **EDUS721438**

1.2 Publication List of Engineering Data for VRV Products

Shaded sections indicate Engineering Data Book/s published for this series.

Timing of publication is subject to change without notice.

Outdoor Unit

Refrigerant	Category	Product series	Type	Volts	Model name	Area	Book category	Book No.	Published in
R410A	Air cooled	VRV IV-X	H/R	208/230 V 460 V 575 V	REYQ-XATJA, XAYDA, XAYCA	USA Canada	Design manual	EDUS371848A-D	Jan.2020
							Capacity table	EDUS371848A-C	
			H/P	208/230 V 460 V	RXYQ-XATJA, XAYDA	USA Canada	Design manual	EDUS341923-D	Nov.2019
							Capacity table	EDUS341923-C	
				575 V	RXYQ-XAYCA	Canada	Design manual	EDUS341928-D	
							Capacity table	EDUS341928-C	
		VRV IV	H/R	208/230 V 460 V	REYQ-TATJA, TAYDA	USA Canada	Design manual	EDUS371704C-D	Feb.2020
							Capacity table	EDUS371704C-C	
				575 V	REYQ-TAYCA	Canada	Design manual	EDUS371706C-D	
							Capacity table	EDUS371706C-C	
			H/P	208/230 V 460 V	RXYQ-TATJA, TAYDA	USA Canada	Design manual	EDUS341703B-D	Jan.2020
							Capacity table	EDUS341703B-C	
				575 V	RXYQ-TAYCA	Canada	Design manual	EDUS341824A-D	
							Capacity table	EDUS341824A-C	
		VRV Aurora	H/R	208/230 V 460 V 575 V	RELQ-TATJA, TAYDA, TAYCA	USA Canada	Design manual	EDUS371705C-D	Feb.2020
							Capacity table	EDUS371705C-C	
			H/P	208/230 V 460 V 575 V	RXLQ-TATJA, TAYDA, TAYCA	USA Canada	Design manual	EDUS341819A-D	Jan.2020
							Capacity table	EDUS341819A-C	
		VRV IV-S	H/P	208/230 V	RXTQ36TAVJ9A RXTQ48/60TAVJUA	USA Canada	Design manual	EDUS331608C-D	Feb.2020
							Capacity table	EDUS331608C-C	
		VRV 	H/P	208/230 V	RXSQ24-60TAVJUA	USA Canada	Design manual	EDUS331721A-D	Feb.2020
							Capacity table	EDUS331721A-C	
		Installation for all VRV air cooled type					Installation	EDUS371848-N	Aug.2019
	Water cooled	VRV-W	H/P H/R	208/230 V 460 V 575 V	RWEQ-TATJU, TAYDU, TAYCU RWEQ-TATJA, TAYDA	USA Canada	Design manual	EDUS301864A-D	Jan.2020
							Capacity table	EDUS301864A-C	
		Installation for all VRV water cooled type					Installation	EDUS301864-N	Aug.2019

Note:

C/O: Cooling only, H/P: Heat pump, H/R: Heat recovery

Indoor Unit and Other Products

Refrigerant	Product category	Product type	Model name	Area	Book No.	Published in
R410A	VRV Indoor units	Ceiling Mounted Cassette Type (Round Flow with Sensing)	FXFQ07-48TVJU	USA	EDUS391400A-F14	May 2018
		VISTA™ 2 x 2 Cassette Unit	FXZQ05-18TAVJU	USA	EDUS391776-F9	Mar.2018
		4-Way Blow Ceiling- Suspended Type	FXUQ18-36PVJU	USA	EDUS391437-F15	May 2015
		One Way Blow Cassette Type	FXEQ07-24PVJU	USA	EDUS391533-F16	Oct.2015
		Slim Ceiling Mounted Duct Type	FXDQ07-24MVJU	USA	EDUS39-600-F2	Sep.2006
		MSP Concealed Ducted Unit	FXSQ05-54TAVJU	USA	EDUS391777-F17	Mar.2018
		Ceiling Mounted Duct Type (Middle and High Static Pressure)	FXMQ07-54PBVJU	USA	EDUS391503A-F4	May 2018
		Ceiling Mounted Duct Type	FXMQ72/96MVJU	USA	EDUS39-900A-F11	May 2010
		Ceiling Suspended Type	FXHQ12-36MVJU	USA	EDUS39-600-F5	Sep.2006
		Wall Mounted Type	FXAQ07-24PVJU	USA	EDUS391100-F6	Jan.2012
		Floor Standing Type Concealed Floor Standing Type	FXLQ07-24MVJU FXNQ07-24MVJU	USA	EDUS391502-F7	Jul.2015
		Air Handling Unit	FXTQ09-60TAVJUA FXTQ09-60TAVJUD	USA	Engineering Data FXTQ-TA	Sep.2016
		Cased Coil Unit	CXTQ24-60TASBLU	USA	Engineering Data CXTQ-TA	—
		Outdoor Air Processing Unit	FXMQ48-96MFVJU	USA	EDUS39-900A-F10	May 2010
		Single Branch Selector Unit	BSQ36-96TVJ	USA	EDUS391434-B	Aug.2015
		Multi Branch Selector Unit	BS4-12Q54TVJ	USA	EDUS391434-B	Aug.2015
	Controls and networks	Remote controllers Control devices Adaptors	BRC1E73, BRC4C/7E/082A, BRC2A71 DCS302C71, DST301BA61, DCS601C71 KRP1C74/75	USA	EDUS721909-T	Dec.2019
		Navigation remote controller	BRC1E73	USA	EDUS721438	Apr.2015
		intelligent Touch Manager	DCM601A71, DCM601A72	USA	EDUS721212	Oct.2012
		intelligent Touch Controller	DCS601C71	USA	EDUS72-608	Dec.2006
		Interface for use in BACnet®	DMS502B71	USA	EDUS72-749	Oct.2007
Option for all type			For indoor and outdoor units	USA	OHUS07-1	Nov.2007
Energy Recovery Ventilator (VAM)			VAM300-1200GVJU	USA	EDUS711116A	Jun.2017

Warning

- Ask a qualified installer or contractor to install this product. Do not try to install the product yourself. Improper installation can result in water or refrigerant leakage, electrical shock, fire or explosion.
- Use only those parts and accessories supplied or specified by Daikin. Ask a qualified installer or contractor to install those parts and accessories. Use of unauthorised parts and accessories or improper installation of parts and accessories can result in water or refrigerant leakage, electrical shock, fire or explosion.
- Read the user's manual carefully before using this product. The user's manual provides important safety instructions and warnings. Be sure to follow these instructions and warnings.

If you have any enquiries, please contact your local importer, distributor and/or retailer.

Cautions on product corrosion

1. Air conditioners should not be installed in areas where corrosive gases, such as acid gas or alkaline gas, are produced.
2. If the outdoor unit is to be installed close to the sea shore, direct exposure to the sea breeze should be avoided. If you need to install the outdoor unit close to the sea shore, contact your local distributor.