


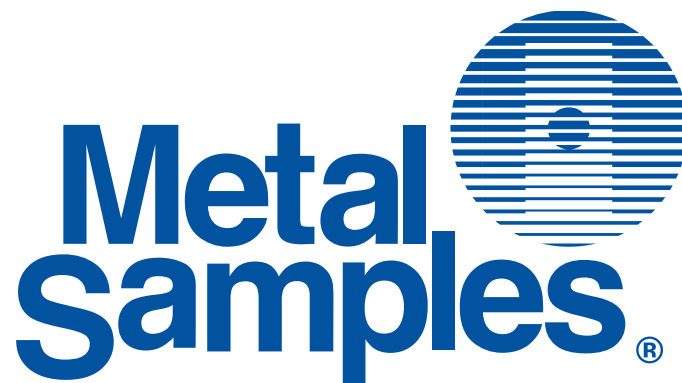

MS2500L Transmitter Operator's Manual

Metal Samples Company

A Division of Alabama Specialty Products, Inc.

152 Metal Samples Rd., Munford, AL 36268 Phone: (256) 358-4202 Fax: (256) 358-4515
E-mail: msc@alspi.com Internet: www.metalsamples.com

Table of Contents

I. Introduction	1
A. General Description	1
B. Principle of Operation	2
C. Modes of Operation	3
D. Specifications	4
E. Summary	5
II. Installation Procedures	6
A. MS2500L Transmitter Mounting	6
B. MS2510 Receiver Installation	6
III. Operation	7
A. Cycle Time Predetermination	7
IV. Accessories	8
A. MS2510 Receiver/Power Supply	8
B. Probes and Electrodes	9
C. Electrodes Normally Carried in Stock	10
D. Probe Placement	11
E. Probe Installation	11
F. PAIR™ Probe Assembly	12
V. Circuit Description	14
A. Introduction	14
B. LPR Measurement Technique	15
C. Basic Structure	16
D. Circuit Description	17
E. Operation Modes	20
VI. Calibration Procedure	21
A. Disassembly	21
B. Equipment Needed	21
C. Applying Power	21
D. Frequency Calibration	21
E. Zeroing Adjustments	22
F. Current Span Adjustment	22
G. Disconnection	22

VII. Instrument Testing and Repair	23
A. Recommended Test Equipment	23
B. Board Removal	23
C. Electrostatic Shield Removal	23
D. Visual Inspection	24
E. Electrical Testing	24
VIII. Current Loop Operation and Testing	28
A. Recommended Test Equipment	28
B. Instrument and Loop Verification	28
C. Probe Element Testing	28
D. Current Loop Isolation Testing	29
Appendix A: Drawings	30
Assembly Drawings	31
Installation Drawing	36
Appendix B: Parts List	37
Appendix C: Effects of Process Variables	38
Temperature	38
pH 54	38
Oxygen Concentration	38
Fluid Velocity	38
Suspended Solids	39
Electrode Potentials	41
Common Corrosive Agents	43
Appendix D: Warranty Information	44
Appendix E: Maintenance and Repair Instructions	45

I. Introduction

A. General Description

The MS2500L corrosion rate transmitter is a two-wire, 4-20mA current loop transmitter for corrosion measurements using the three-electrode, linear polarization technique (LPR). Functionally, the MS2500L transmitter operates under the same principles as the automatic LPR instruments offered by Metal Samples with the exception of its low-power current loop operation.



Figure 1. MS2500L

The MS2500L transmitter is housed in an explosion-proof enclosure with the following ratings:

Housing Ratings:

Class I	Groups B,C,D
Class II	Groups E,F,G
Class III	NEMA 4X
FM Approved	CSA Approved

The MS2500L is equipped with 10 feet of transmitter-to-probe cable and uses the standard five-pin environmental connector found on all of our existing LPR equipment. This light-armor cable passes into the housing through an explosion-proof cable gland.

Located inside the housing is an electronics package consisting of two printed circuit cards, the mounting bracket for the circuit cards, and all the necessary termination points for the cable and current loop connections.

The termination points on the printed circuit cards are constructed using removable terminal blocks. This provides a permanent screw type connection which can break-away from the printed circuit cards for their easy removal.

The printed circuit cards rest in slide rails within the mounting bracket. Once the terminal blocks are detached from the printed circuit cards, the circuit cards slide out of the instrument for easy repair, calibration, or replacement.

B. Principle of Operation

The MS2500L transmitter reads and stores the potential difference between a reference electrode and a test electrode. It then applies a current through an auxiliary electrode and the test electrode until the potential measurement between the test and the reference electrodes changes by 10 millivolts. The instrument then allows this current to settle for a predetermined length of time (*polarization cycle*), after which, it samples this current and updates the current loop output using the conversion factor of 5.5 μA per MPY.

Note: The surface area of the electrode has been adjusted where 5.5 μA converts to 1 MPY.

The polarizing current is then turned off and the cell is allowed to relax for the same length of time as the polarization cycle.

Cycle Time Adjustment

The MS2500L uses a digital timing circuit which can be adjusted using three 10-position rotary switches (Figure 2). The first switch represents tens of minutes, the second switch represents minutes, and the third switch represents tenths of minutes. This allows user-selectable time cycles from 00.1 minutes to 99.9 minutes in 00.1 minute increments. The switches are located in the upper right hand corner.

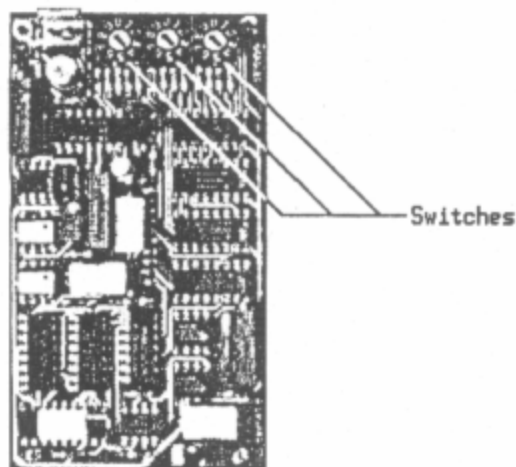


Figure 2. Back Board

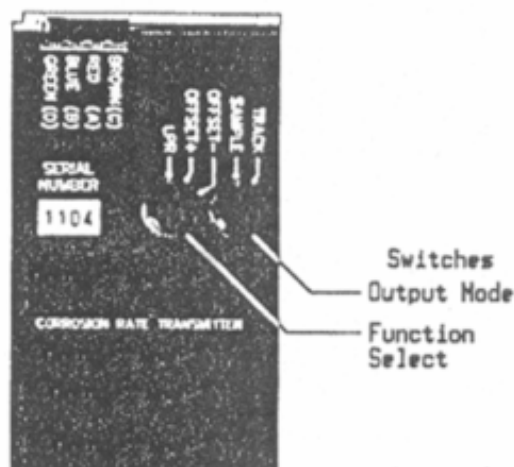


Figure 3. Front Board

C. Modes of Operation

An additional feature that is incorporated into the MS2500L transmitter is the ability to monitor and transmit the corrosion potential of the cell. This is a switch selectable function where the 4-20mA current loop represents a corrosion potential of 1V positive or 250 mV negative full scale.

In either mode, **LPR** or **OFFSET**, the user can select two different modes of current loop response. The first mode is the normal operation mode or **SAMPLE** mode. This mode is as the one described earlier where the current loop information is updated upon the completion of a measurement cycle. This is the logical choice of operation when taking **LPR** measurements where the current loop information constantly represents the corrosion rate in mils per year. This mode of operation can also be used in conjunction with electrode potential measurements where the corrosion potential can be sampled and the current loop updated on intervals as set by the cycle time adjustment.

The second mode of operation is the **TRACK** mode. In this mode, the current loop output is updated every 1.5 seconds. When taking corrosion potential measurements, this provides the user with a current loop output that constantly tracks the cell corrosion potential. For **LPR** measurements, the current loop will reflect the cell response to the applied current. This provides an excellent method for selecting the cycle time for the normal mode of operation.

D. Specifications

Model

MS2500L - Loop-Powered LPR Transmitter (Ordering # IN2500L)

Physical Data

Instrument Weight:	5.02 lb. (2.28 Kg)
Total Weight w/ Accessories:	7.08 lb. (3.21 Kg)
Instrument Dimensions:	5.81"H x 4.5"W x 4.81"D (14.76cm x 11.43cm x 12.22cm)
Case Specifications:	Explosion Proof (FM, CSA, CENELEC, UL) Class I, Groups B, C, D, Class II, Groups E, F, G, Class III, CENELEC: Eexd IIC
	NEMA 4X, 7BCD, 9EFG
Mounting Specifications:	0.728"H x 1.756"W (1.85cm x 4.46cm) Bolt Pattern with 1/4-20 Tapped Mounting Holes, or May Be Mounted on a 1/2" to 2" (1.27cm to 5.08cm) Pipe Using Supplied Hardware
Operating Temperature:	32° to 158°F (0° to 70°C)
Storage Temperature:	32° to 158°F (0° to 70°C)

Performance Data

Measurement Type:	3-Electrode LPR, Potential
Range:	3-Electrode: 0-100 mpy Potential: ± 1 V
Cycle Time:	0.1 to 99.9 minutes

Electrical Data

Power Requirements:	11 to 35 VDC
Maximum Probe Cable Distance:	10 ft (3.05 m)
Output Specifications:	4-20mA Current Loop Output

Special Features

- Switch selectable measurement type and cycle time
- Loop powered

Accessory Items

10' Probe Cable (attached), Meter Prover, Mounting Hardware, Operation Manual

E. Summary

The MS2500L transmitter moves on-line corrosion monitoring into the realm of conventional plant practice by placing the D.C.- powered transmitter close to the corrosion rate probe (the sensor) and using the two-wire signal loop to provide both the power to the transmitter and the proportional signal corresponding to the data.

User Selectable Operation

Switches on the transmitter's circuit board allow the user to select necessary parameters such as:

- **Operation Mode:** Track or Sample
- **Cycle Time:** .1 - 99.9 minutes
- **Transmitter Data Type:** Corrosion Rate (MPY) or Electrode Potential (mV)

Low Cost

Since the transmitter is of the two-wire type, the installed cost of an installation is far less than if the analyzer is located in the control room and signal cables are run from the sensor to the analyzer.

Safe

The transmitter itself is housed in a compact explosion-proof housing.

Standardized Output

Since the 4-20mA data signal from the transmitter is the most common in industrial use today, the display of the corrosion rate data is simplified. The data may be displayed on a suitable recorder, digital voltmeter or on the optional MS2510 digital display unit which will display loop current, corrosion rate (MPY), or electrode potential (mV). The MS2510 also has an auxiliary power supply for powering the transmitter and a current loop output for passing the data on to another reading device.

PAIRTM probes (*3-electrode, Linear Polarization type*) can be used as sensors for the MS2500L without modification.

II. Installation Procedures

A. MS2500L Transmitter Mounting

When mounting the MS2500L choose a location that is free from vibration. The mounting bracket (U-bolts) can accept a pipe that is no larger than 2.5 inches.

Always remove power to the instrument when mounting; especially when mounting it in a hazardous area.

(See Drawing No. 8102 in Appendix A for preferred hardware mounting scheme.)

B. MS2510 Receiver Installation

The MS2500L transmitter can be used in conjunction with the MS2510 receiver. (See Drawing No. 8101 in Appendix A for connecting these two instruments together. See Section IV for description and specifications of the MS2510.)

Front Panel

Two of the three positions on the front panel of the MS2510 are used with the MS2500L. One is the loop current in milliamps and the other (far right) is corrosion rate in mils per year.

Back Panel

The back panel's 10-position rotary switches must be set to 999 when operated in the **Corrosion Rate Mode**. In **Current Loop Mode** the switch positions do not matter.

Wire Connections

Once the MS2500L is installed, connections are made by connecting the red wire (+) coming out of the MS2500L to the (+) side of terminals on back of the MS2510 receiver labeled - LOOP +. Connect the black wire (-) to the (-) side under - LOOP +.

III. Operation

A. Cycle Time Predetermination

The following procedure assumes both the mechanical and electrical installation of the instrument. This procedure also requires that some form of device is available for monitoring the loop (ie., DVM, chart recorder, etc).

1. Connect the instrument cable to the probe.
2. Set the sample time adjust switches on the MS2500L to 999.
3. Set the operation switches to **LPR** and **TRACK** mode.
4. Power up the loop and observe the loop current (using a ammeter, recorder, etc). The current reading will change every two seconds. These readings will then begin to settle. Depending upon the conditions, this may take from 30 seconds to 30 minutes. Record this time interval.

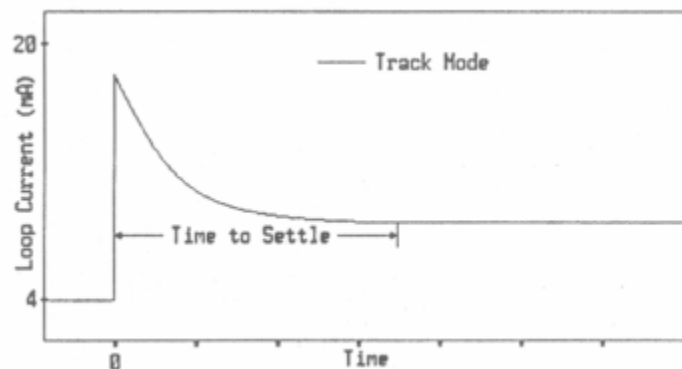


Figure 4. Settle Time

5. Set the sample time adjust switches to this time interval.
6. Set the operation switches to **LPR** and **SAMPLE**.
7. Cycle the loop power on and off. (Break Loop)
8. The instrument is now in the run mode and will update the current loop output once every two sample time intervals.

IV. Accessories

A. MS2510 Receiver/Power Supply

When operated together, the MS2510 receiver and MS2500L transmitter provide the corrosion investigator with a low-cost, 4-20mA corrosion monitoring system. Data received from the transmitter is displayed on the receiver's front panel, a three digit L.E.D. The three-position function switch, located at the center of the receiver's front panel, permits the data to be displayed in one of two formats, depending on switch position: milliamps and corrosion rate (MPY). Located at the back of the receiver are 4-20mA and 10V output terminals for connection of the receiver to a customer-supplied computer, data logger, or recorder; connection terminals for the MS2500L; and an AC power cord connector.

General Specifications - MS2510

Display: 3-digit L.E.D. display to give:
a) Loop Current (in mA)
b) Probe Reading (0-100 MPY)

Dimensions: Length: 5.25"
Width: 2.0"
Height: 6.6"

**Required
Installation Space:** 4.3" x 2"

Weight: 3 lbs.

Electrical Specifications - MS2510

Power Requirements: 120/240V AC 50/60 Hz @ ½ Amp

Outputs: 24V DC - 4 to 20 mA current loop drive
4-20mA - isolated output to CPU, etc.
0-10V - isolated output to chart recorder

B. Probes and Electrodes

The PAIR™ probes used in conjunction with Metal Samples corrosion rate instruments are an essential component of a corrosion rate measuring system. For this reason, the composition of the electrodes installed on the probe must be matched as nearly as possible to the composition of the components of the processing system in which the probe and electrodes are installed. In addition, the placement of the probe is extremely important in obtaining accurate corrosion rate readings. Basically, a probe is simply a means of mounting the three electrodes which are necessary to make the corrosion rate measurement and provides a means of electrically connecting the electrodes, the composition of which is determined by the customer.

The probes are generally classified into two types: laboratory probes and industrial probes. All probes are supplied with MIL environmental electrical connectors unless otherwise specified. For further information on probes and electrodes contact:

Metal Samples
P.O. Box 8
Munford, AL 36268
Phone: (256) 358-4202
Fax: (256) 358-4515
E-mail: msc@alspi.com
Internet: www.metalsamples.com

C. Electrodes Normally Carried in Stock

EL-600	Lazaran ¹ Reference Electrode with one VITON ² Gasket
EL-601	Aluminum, Alloy 6061 (standard)
EL-610	Copper (99.0% Pure)
EL-611	Brass (85-15)
EL-612	Admiralty Metal
EL-613	Copper-Nickel
EL-614	Aluminum/Bronze (92 Cu-8 Al)
EL-615	Copper-Nickel (70-30)
EL-620	Cold Rolled Mild Steel (1018) 0.250" Dia.
EL-621	Cold Rolled Mild Steel (1018) 0.375" Dia.
EL-630	304 Stainless Steel
EL-631	316 Stainless Steel
EL-632	410 Stainless Steel
EL-633	430 Stainless Steel
EL-634	304 Low Carbon Stainless Steel
EL-635	316 Low Carbon Stainless Steel
EL-640	Hastelloy ³ B
EL-641	Hastelloy C
EL-643	Hastelloy N
EL-651	Nickel 200
EL-652	Inconel ⁴ 600
EL-653	Inconel 625
EL-654	Incolloy ⁴ 800
EL-655	Incolloy 825
EL-657	Monel ⁴
EL-658	Alloy 20 Cb ⁵
EL-660	Zinc
EL-671	Titanium
EL-672	Tantalum
EL-673	Zirconium
EL-687	Aluminum/Brass
EL-681	Replaceable Electrode Assembly for PR-556-E Flush Mounted Probe

¹ Registered trademark of Beckman Instruments, Inc.

² Registered trademark of DuPont.

³ Registered trademark of Stellite Division, Cabot Corp.

⁴ Registered trademark of Huntington Alloys Inc.

⁵ Registered trademark of Carpenter Technology.

D. Probe Placement

Proper probe location is the first and one of the most important considerations in obtaining pertinent data with the corrosion rate instrument. Any system can be expected to have corrosion occurring at several rates as a function of location within the system. The different rates may be due to changes of temperature, changes in velocity, impingement effects, differences of metallurgy, variations in character of fluid stream, etc. It is therefore unlikely that a single probe location will be able to produce quantitative corrosion rate data for the overall system. Each probe does, however, provide valuable information by reading the corrosion at the particular location, and by indicating the general range of overall corrosion by following changes in corrosion rates caused by adjustments in inhibitors, oxygen level or process variables.

The change in corrosion rate of a system due to altering a variable should be in direct ratio for all parts even though the absolute rates are widely different. For instance, if the addition of an inhibitor will reduce the instrument's reading by 90 percent, all normal surfaces of the same metal contacted by the inhibitor should have their corrosion rates similarly reduced. Usually, a probe location is selected to read on the high side of a system's average rate in order to accentuate changes.

It should be emphasized that a corrosion rate reading is the actual corrosion rate taking place on the surface of the Test electrode at the time of measurement.

The condition of the probe's Test electrode surface due to past service, as well as current process conditions, may have an important bearing on the readings.

The corrosion engineer is challenged to adapt the above to his situation and interpret the results in light of the location and operational factors involved.

E. Probe Installation

Probe installations should generally be selected on the following basis:

1. Locate the probe as close as possible to the warmest section of the system. If vaporization is experienced in the process, the probe should be installed immediately after condensation.
2. If the fluid is normally flowing, it is recommended that the probe be inserted in such a way as to experience approximate pipe wall velocity. The probe should not be installed in a stagnant section of line. Some turbulence at an elbow or tee may result in slightly high, but acceptable, corrosion rate readings.

3. Direct fluid impingement on the probe's electrodes (at a very high velocity of about 10-feet-per-second or so), should be avoided as this usually results in abnormally high corrosion rates aggravated by erosion.
4. The probe should not be installed in a position where solids are likely to collect. Solids can build up on the probe base and electrically short out the electrodes.
5. Any surface area in contact with a hydrocarbon phase or gas phase will not be corroding. Therefore, representative maximum corrosion rates are obtained when the total Test electrode surface is in water or electrolyte.
6. A bypass loop around a section of the main piping may be considered. Probe inspection and electrode replacement can be made without system shutdown. Effects of velocity can be checked by throttling of bypass valves.

The above is furnished as a general guideline. The existing physical facilities of most systems will dictate the probe location. If this turns out to be in conflict with the ideal considerations, the probe should be installed keeping in mind the problems that may arise.

F. PAIR™ Probe Assembly

All probes with replaceable electrodes are shipped with the electrodes and gaskets in a separate packet if the electrodes are purchased with the probes.

When ready to install, open the packet and place one of the gaskets on each of the three mounting pins.

Pin A is connected to the Reference electrode, **Pins B and D** are connected to the Test electrode and **Pin C** is connected to the Auxiliary electrode.



Figure 5. Electrode Mounting Configurations

The electrodes should not be handled with bare sweaty or oily hands. If possible, pick up the electrodes with a paper towel or clean cloth and thread onto each of the three mounting pins. The electrodes should be *firmly* hand tightened in place sufficiently to deform the gasket. A one inch piece of plastic tubing slipped over an electrode is an effective means of tightening it on the probe without soil or damage. **Do not force with pliers or in a vise, as this will mark the surfaces. Do not use thread lubricant.**

The mild steel electrodes have been given a surface preparation to permit fastest possible equilibrium to the system. Any foreign material such as grease, oil or sweat will delay obtaining uniform readings.

Should a change in location or environmental service of mild steel electrodes be desired, the electrodes need to be removed, scrubbed with scouring powder and water, and then placed in a beaker of 5-10 percent hydrochloric acid (*uninhibited*) until the surfaces are uniformly covered with a layer of hydrogen gas bubbles. They should be rinsed thoroughly in clean water before reinstalling. This action is usually sufficient to prevent effects of previous service seriously interfering with the new application.

V. Circuit Description

A. Introduction

The MS2500L is a Linear Polarization Resistance (LPR) type corrosion monitoring instrument that translates corrosion rates obtained from polarization techniques into a 4-20mA current which is then transmitted through a two-wire twisted cable.

This instrument also incorporates the ability to monitor and transmit the Corrosion Potential, obtained from LPR probes using a reference electrode. The power for the instrument is supplied on the same two wires that return the corrosion rate signal. Therefore, to power its internal circuitry, the instrument can use no more than the four milliamp, live zero, current supplied on the loop. This 4-20mA type of monitoring instrumentation has become a standard in the process monitoring industry. The 4 and 20 milliamp values are used for several reasons:

1. A power supply voltage of 25 volts or more can be supplied to overcome long cable drops or to fulfill power requirements for the instrumentation.
2. The 4 milliamp live zero not only provides current to power the instrument, but also provides a method to determine loop failure. If the zero output point of the instrument was at zero milliamps, there would be no way to differentiate between a zero output or a failure in the loop.
3. The transmission of a low impedance signal, (such as a current), rather than a high impedance signal, (such as a voltage), sets up a transmission technique that is much more impervious. Generally, noises induced onto signal cables are of very high impedances. It would take a very large external force to induce a noise signal onto the loop at a current of 4mA or more. Again, if a true zero point were used, it might be possible to induce a noise error around the zero current level. However, the use of the 4mA live zero precludes this possibility.

B. LPR Measurement Technique

The LPR technique is a near instantaneous method for determination of corrosion rates using PAIR™ probes or similar probes. It is a simple process which incorporates several steps.

1. The potential difference between the test and the reference electrode is sampled and recorded.
2. A current is forced between the auxiliary and test electrodes until the original potential difference is changed by 10 millivolts.
3. This polarization current is allowed to settle for a user specified duration.
4. The current is then sampled and a conversion factor is used to calculate the MPY value. 5.5 μA /MPY.
5. The polarization current is relaxed for the same duration after which, the process can then be repeated.

The MS2500L instrument incorporates the circuitry necessary to perform the above steps as well as the ability to monitor and transmit the potential difference between the reference and test electrodes. Following the above description, the circuitry is divided into several sections:

- Potential measurement and recording.
- Polarization reference and current control.
- Clock and timing circuits.
- Polarization current measurement and conversion.

General circuitry required for the operation of the instrument.

- Power supplies.
- Current loop sensing and control.
- Power on reset

C. Basic Structure

The circuitry for the MS2500L is contained on two circuit cards.

The **A1 Board** contains circuitry for:

- Corrosion potential measurement.
- Corrosion potential null and hold.
- 10 millivolt probe polarization and reference.
- Polarization current control, measurement and conversion.

The **A2 Board** contains circuitry for:

- Power supplies.
- Clock and timing control circuits.
- Power on reset.
- Current loop sensing and control.
- Output sample and hold.

D. Circuit Description

The following circuit description describes the behavior of the circuitry in the LPR mode with the output mode set to SAMPLE. This is the most common mode of operation for this type of instrument. Differences in operation modes are described in following sections.

Power Supplies

The power supply circuitry is contained on the **A2 Board**. This includes:

- A 2.5 volt reference circuit made up of U9 and CR6.
- The main 6 volt source maintained by AR5-A and Q2.
- The 1 volt common reference maintained by AR6.
- The Auxiliary common reference and supply consisting of AR5-A and AR5-D.

The constant current IC, U9, and the micropower reference diode, CR6, maintain a stable 2.5 volt reference. This reference is amplified and regulated at 6 volts by AR5-A. Since this is the main power source for the circuitry, the 2N2222 transistor, Q2, in the feedback loop of AR5-A adds extra current drive. AR6 contains a built-in 200 millivolt reference and a power OP-amp. Together these are used to supply a 1 volt common source for most of the analog and digital circuitry. AR5-C and AR5-D are unity gain buffers used to supply the power to the clock circuitry which tend to degrade the power supplies.

Clock, Timer and Power On Reset Circuit

The clock, timing and power on reset circuitry are contained on the **A2 Board**. These circuits consist of:

- A power on reset pulse generator; U17.
- A clock oscillator and divider circuit consisting of U16 and U12.
- A user programmable timer circuit made up of U8, U10, and U11, and SW3, SW4, and SW5.

Upon power up, a pulse is generated by U17 which sets the initial states of the timer circuits to the user selected BCD value using SW3, SW4, and SW5. The timers are cascaded in order to count down upon every pulse generated from the Q14 output of U12. Upon each completion of

count down, a pulse is generated to reload the counters and to initiate either a polarization cycle or a relaxation cycle, (initially a polarization cycle), depending upon the previous state. Pulses from Q14 output of U12 are generated upon 1/10 minute intervals, (0.166 Hz), which are divided down from the 2730 Hz signal developed by the U16 clock oscillator. A 5.332 Hz signal generated by the Q9 output of U12 is also used to clock the sample and hold circuits.

Potential Sample and Hold Circuits

The potential sample and hold and measurement circuits are contained on the **A1 Board** and are made up of:

- An infinite term digital sample and hold consisting of:
A bipolar successive approximation ADC using U7, U4, U5 and AR4-B-C-D.
A 200 millivolt ADC reference using part of AR3.
- A low power instrumentation amplifier made up from AR1-A-B, AR2, R4, R5, R8 and R9.
- An inverting amplifier using AR1-C, R1 and R2.

As explained earlier, the first part of the LPR measurement process is the sampling and storing of the potential value. This is accomplished by a digital sample and hold technique with an indefinite holding capability. On the initiation of a polarization cycle, a pulse triggers the start of a successive approximation conversion performed by U4 and U5. U4 and U5 switch the output of the 12 bit D/A converter circuit, (U7, AR4-C and AR4-B), using the comparison generated by AR4-D between common and the output of the instrumentation amplifier, (AR1-A, AR1-B and AR2), unto the output of the instrumentation amp is zero. This is by setting a bias on the reference of the instrumentation amp, SW1-C, using the output of the D/A converter circuit.

This scheme nulls the instrumentation output to zero so an offset shift of 10 millivolts can be easily read by the next process step. Upon the completion of this process, an end of conversion signal is generated by the successive approximation registers. This signal is used to trigger the remaining portion of the polarization cycle.

If the OFFSET+ or OFFSET- function is selected, the above scheme is bypassed with the reference point of the instrumentation amplifier, SW1-C, set to common and the output of the instrumentation amplifier, which reflects the potential difference, is sent directly to the output circuits or, if OFFSET- is selected, the output is inverted and amplified by AR1-C.

Polarization Current Control and Measurement

The circuitry for the polarization current control and measurement resides on the **A1 Board** and consists of:

- A 10 millivolt polarization reference made up from the reference portion of AR3.
- Current drive and scaling amplifier using the power amp portion of AR3.
- Polarization balancing amplifier; AR1-D.
- Current sensing differential amplifier; AR4-A.
- Solid state current control switching; U1-A and U1-B.

Upon the end of conversion signal generated by the potential sample and hold, the current control is enabled via SW1-A. U1-B and U1-A are enabled allowing a current path through the cell between the auxiliary and test electrodes. As current is allowed to flow, the potential of the cell (voltage *between* the reference and test electrodes, changes. AR1-D monitors this change, compares it with the 10 millivolt reference (generated by AR3, R3, R7 and R10), and controls the current drive by AR3 until a balance point is reached where the potential of the cell has changed by 10 millivolts. The 1.82K resistor, R11, in the feedback loop of AR3 gives a 0.0 - 1.0 volt drop for a span of 0 - 100 MPY using the conversion factor of 5.5 μ /MPY. AR4-A is used as a differential amplifier which converts the 0 - 1 volt drop across R11 to a 0.0 - 1.0 volt signal which is sent to the output circuitry.

Output Sample and Hold

The output sample and hold circuits are contained on the A2 Board and consist of:

- An infinite term digital sample and hold consisting of a successive approximation ADC using U13, U14, U18, AR9 and AR8.
- A short term sample and hold using U15-A, AR7 and C13.

When operating in the SAMPLE mode, there is a possibility of 3.5 hour holds between reading updates. This long hold time is accomplished by a second infinite term digital sample and hold.

At the end of a polarization cycle, a conversion is initiated to sample the current amplifier output in the LPR and SAMPLE modes. During this conversion process, a conversion in process signal is generated by the successive approximation registers. This signal is used to disable U15-A thus maintaining a short term sample and hold using C13 and AR7. Once completed, the end of conversion signal reenables U15-A and triggers the relaxation portion of the LPR cycle. The gain of AR7 rescales the signal to a 1.0 to 5.0 volt signal (with reference to true ground), which is used by the current loop control circuitry.

Current Loop Control

The circuitry for the current loop control is contained on the A2 Board and consists of:

- The current loop sense and balancing amplifier; AR5-B.
- The current loop control transistor; Q1.
- The current loop sense network; R23, R24, R25, and R41.

The output of the current loop must be maintained at the desired signal level regardless of the amount of current drawn in order to power the circuitry. This is accomplished by using the R23 resistor placed in the loop to develop a voltage drop from -1.0 to -5.0 volts for a current span of 4-20 milliamps. At an output of zero, the sample and hold circuitry is at 1.0 volt (with reference to ground), this voltage is subtracted from the negative voltage developed by R23 using the R24, R41, and R25 network. AR5-B senses this difference and biases Q1 until the current loop develops a -1.0 volt drop across R23, (4mA). At full scale output, the sample and hold develops a 5.0 volt signal thus requiring a 20mA loop current to balance the circuit.

E. Operation Modes

Offset Mode

As mentioned earlier, the polarization current and the potential null circuitry are disabled when operating in the OFFSET+ and OFFSET- modes. The reference to the instrumentation amplifier, SW1-C, is set to the common reference and the output of the instrumentation reflects the cell potential difference. This value is sent directly to the output sample and hold circuitry in the OFFSET+ mode. If OFFSET- mode is selected, AR1-C inverts the polarity and amplifies the signal before it reaches the output sample and hold circuit.

Track Mode

When the TRACK mode is selected, the output sample and hold circuitry is set to run repetitive conversion cycles constantly updating its output on 2.5 second intervals.

VI. Calibration Procedure

A. Disassembly

After unscrewing enclosure cover and disconnecting J5 connector, remove interconnected boards A1 and A2 from bracket.

Remove shield by removing nuts and washers from switches SW1 and SW2 and screws Z5 and Z6. Replace both screws.

B. Equipment Needed

- 1 - Adjustable 18 Volt Power Supply
- 2 - Digital Volt Meters and Leads
- 1 - Frequency Counter and Probe
- 1 - Shorting Plug
- 1 - Spare Lead

C. Applying Power

Connect positive (+) lead of digital volt meter (DVM) to the positive terminal of J3/J6. Connect the negative (-) lead to positive terminal of power supply. Attach spare lead to negative terminal of power supply and other end to negative terminal of J3/J6.

Note: While making connections, power supply should be off. The power supply, DVM, and leads will remain in place during all calibrations.

Turn power supply adjustment all the way down. Turn on power supply and DVM. Set volt meter to read in the 200 milliamp range. (200.0 mA)

While watching DVM, slowly adjust power supply up to 18 Volts; making sure that the DVM reading does not exceed 40.0 mA.

D. Frequency Calibration

Connect frequency counter ground to pin 8 on U12 and probe to pin 11 on U12.

Adjust R50 until the frequency read is 2730 Hz $\pm$ 1 Hz.

Disconnect frequency counter.

E. Zeroing Adjustments

Connect shorting plug to J1. Set switch SW1 to the Offset + position and SW2 to the Track position.

Using the second DVM, connect the positive lead to pin 6 on AR2 and the negative lead to wire on shorting plug.

Adjust R12 until a reading of $0.0 \text{ mV} \pm 0.1 \text{ mV}$ is shown on second DVM.

Move same two leads to pins 2 and 3 on AR7 and adjust R46 until it reads $0.0 \text{ mV} \pm 0.1 \text{ mV}$.

While looking at other (original) meter, adjust R25 until the current reads 4.00 mA.

F. Current Span Adjustment

Replace shorting plug with the instruments meter cable. Insure that 10 MPY prover is still in place.

Hook the positive lead on second DVM to the (A) red position on J1/J5 and the negative to the (B) blue position on J1/J5. Set meter to read in the 20 mV range.

Set SW1 to the LPR position, SW2 to the Sample, SW3 to 0, SW4 to 0 and SW5 to 4.

Turn off power supply, wait one second and turn it back on. Let instrument sit for one full minute.

Note: During this time, the second DVM will cycle from 0 mV to ~10 mV every 24 seconds. During the time that the DVM reads ~10 mV, adjust R3 until the meter reads $10.00 \text{ mV} \pm .01 \text{ mV}$ exactly. You have 24 seconds to do this before next cycle.

Once R3 is adjusted, observe meter for two more cycles to insure that $10.00 \text{ mV} \pm .01 \text{ mV}$ is held.

Remove leads from J1/J5. Adjust R45 until original meter reads 5.60 mA.

G. Disconnection

Remove power from power supply and remove all leads.

Replace connectors and instrument shield. Put instrument back in the condition that it was first received.

VII. Instrument Testing and Repair

A. Recommended Test Equipment

- 1 - Adjustable Power Supply.
- 1 - Digital Voltmeter.
- 1 - Digital Voltmeter with capability of reading current.
- 1 - Dual channel oscilloscope.
- 1 - 10 MPY meter prover.
- 1 - Set of working replacement boards.
- 1 - Replacement cable and connector assembly.

Note: Unless suitable environment and expertise is available for the testing and repair of sensitive electronics, it is recommended that component level testing and replacement for this instrument be performed only by Metal Samples.

Caution: When instrument is operated in hazardous areas all power to the instrument must be removed before opening cover. The instrument was designed for easy board access and replacement in the field. However, it is recommended that all electrical tests be performed in a laboratory or bench top environment.

B. Board Removal

After unscrewing enclosure cover and removing probe and loop current connectors, remove interconnected boards from bracket. The boards should easily slide out from bracket.

C. Electrostatic Shield Removal

Using a 1/16" Allen wrench, remove the knobs from the shafts by loosening the 4 Allen head set screws. Then remove the two switch mounting nuts using a 3/8" socket wrench. Remove the two Phillips head screws from the top of the electrostatic shield and remove the electrostatic shield

D. Visual Inspection

Carefully separate the boards and inspect the two circuit boards for:

- Signs of overheating or overheated components.
- Short circuits caused by foreign debris.
- Broken or cracked solder traces.
- Corrosion on connector surfaces.
- General corrosion attack to boards or components in general.
- Signs of moisture damage or condensation.
- Tampering or abuse.

Inspect all cable connections and connectors for integrity. If necessary, use a DVM set to read ohms or continuity to test cables and connectors.

E. Electrical Testing

Carefully reassemble the two circuit cards. For testing or calibration purposes, the instrument can be operated without the electrostatic shield. However, it is necessary to replace the two screws used to secure the upper part of the shield. These two points are used for board interconnection of the instrument ground. It will also be necessary to temporarily replace the two control knobs by tightening only the two set screws used to bind the flat parts of the switch posts.

Connect the spare cable assembly to the connector on the A1 Board. Note that the cable shield need not be connected for testing purposes. Place a 10 MPY prover on the cable connector. With the power supply turned off, connect the power supply and the current reading DVM to the A2 Board connector observing proper polarity. Set the mode of operation to LPR and the output mode to SAMPLE. (Refer to the labeling on the electrostatic shield). Set the SAMPLE TIME to 00.1 minutes. Turn on the power supply and observe the current. If the unit functions properly, the current reading should settle out to 5.6mA (± 0.1 mA) after 2 to 3 polarization cycles. If the unit malfunctions, one or more of the following symptoms will appear:

1. The unit gives incorrect readings (Error > ± 0.1 mA).
2. The unit is erratic or has intermittent operation (Readings fluctuate).
3. The unit draws excessive current (30mA or more).

Isolate the problem to the faulty board by substituting a spare working board and retesting the instrument following the above procedures. At this point, repairs could be considered complete by using the replacement board. The instrument can now be reassembled, recalibrated, and placed back into service. However, if component level repairs are intended, the following guidelines are intended to help isolate the cause of the problem.

Incorrect Readings

If the errors are minimal (± 2 mA), this can usually be corrected by recalibration of the instrument. Follow the recalibration procedures and retest the instrument. If the instrument cannot be recalibrated then check the following points:

During a relaxation cycle, the output of the instrumentation amplifier (AR2 pin 6) should be equal to the common reference point. If there is an error, the problem is in the instrumentation amplifier (AR1-A, AR1-B and A2) or the operation of the OCP sample and hold circuit (U7, U4, U5, AR4-C, AR4-B and AR4-D). Be sure to check the sample and hold clock (U12 pin 13) and the triggering signal (U2 pin 1) for this circuit.

Test voltage between J1-B and J1-A for the 10.00 mV offset during a polarization cycle. If there is no offset, then check the 200mV reference at AR3 pin 1 and the divider output at AR1-12 (~ 10 mV). Check the current gate (U1-A and U1-B) and the current enable pulse at U1 pin 6. Also test CR1 and CR2.

If there is an error in the offset ($> \pm 1$ mV) during the polarization cycle, the output of the instrumentation amplifier (AR2 pin 6) should be ~ 10 mV, the inputs of AR1-D (pins 12 and 13) should be equal, and the output of AR3 pin 6 should be ~ 100 mV. Test the operation of AR1-D, this amplifier controls the offset voltage by adjusting the current driven by AR3.

Test the operation of the differential amplifier (AR4-A). The output of AR4-A pin1 should be 100 mV.

Test the operation of the long term sample and hold (U13, U14, U18, AR9 and AR8). During a relaxation cycle, the output of AR9 should be 100 mV; same as the input of AR8 pin 3. If there is an error, check the operation of U13, U14, U18 the sample and hold clock (U12 pin 13) and the trigger pulse at the end of the polarization cycle (U3 pin 13).

Test the operation of the short term sample and hold (U15-A, C13, and AR7). During the relaxation cycle, the output of AR7 should be at 500mV. If there is an error, check the operation of the sample and hold gate (U15) and the hold pulse (U15 pin 13) the hold pulse should only occur during a conversion cycle of U13 and U14.

Test the operation of the current loop control circuit (AR5-B and Q1). The inputs of AR5-B pins 5 and 6 should be equal. The voltage drop across R23 will represent the total loop current. The difference between the voltage drop across R40 and the voltage drop across R23 will reflect the amount of current required to power the circuitry. This current cannot exceed 4mA.

Erratic or Intermittent Operation

This problem is most often caused by faulty switch contacts. Again, if there is visual evidence of corrosion attack or moisture on the boards, then the switch contacts are most likely damaged. It will be necessary to replace the switches or the boards.

Check the operation of the power on reset circuit. cycle the power off and on and check the output of U17 pin 3. There should be a high pulse for one second after the power is applied to the circuit.

Check the operation of the system clock. U16 pin 3 should show a 2750 Hz square wave. This is divided down to a .1666 Hz square wave by U12 pin 3.

Check the timer circuits (U8, U10, and U11). There should be a pulse each the time the counter reaches 0 at U8 pin 12 and the counters reloaded with the BCD value of the switch settings.

Check the control circuits. U2-B outputs (pin 13 and 12) will alternate between polarization mode and relaxation mode upon each countdown of the timer circuits. U3-A controls the current gate (pin 1), U2-A controls the OCP sample trigger (pin 1), and U3-B controls the output sample and hold (pin 13)

Excessive Current

This symptom (current > 30mA) is usually caused by a faulty or damaged component which draws an excessive amount of supply power. Test for a voltage drop across R4.

If a voltage drop appears, current is drawn by the loop control circuit. Test the operation of Q1 and AR5. Test to see that R23 is not damaged.

If no voltage drop appears, current is drawn by a faulty or damaged component. Check the +V and +V1 rails. They should be about +6 volts with reference to ground. Also check COM and COM1 these common reference points should be at + 1 volt with reference to ground. If left operating for 30 minutes or more, the faulty component may overheat. If this occurs, the component can then be easily located and replaced. If not, then the component must be located by substitution or the board replaced.

If the cause of the problem cannot be resolved, send unit back to Metal Samples for repair. Use form in the Appendix E of this manual.

Recalibration

Once the instrument has been repaired, it should be recalibrated as described by the Calibration Procedure in Section VI.

Replacement

After repairing or replacing boards, interconnect the two boards making sure that the connectors on each board (probe and loop current) are at the same end and that no pins are bent while inserting.

Replace the shield after removing nuts and washers from switches. Put screws back into boards and nuts and washers back on switches to secure. Replace knobs on the switches.

Reinsert boards back into brackets with connectors facing out. Insure that the connectors face their respective access holes in the housing.

Test the instrument using a prover to insure proper operation.

VIII. Current Loop Operation and Testing

A. Recommended Test Equipment

- 1 - Portable DVM with the ability to read current.
- 1 -10 MPY meter prover.
- 1 -1K ohm 1/4 watt resistor.

B. Instrument and Loop Verification

With the instrument installed and the wiring for the current loop complete, install the DVM in the current loop and set it to read current in milliamps. Install the 10 MPY meter prover on the probe cable. Set the operation switches to LPR and SAMPLE. Set the sample time switches to 00.1 minutes.

The use of the 10 MPY prover insures that there are no ground fault currents caused by a non-isolated loop during this step of the test procedure.

Power up the loop and observe the current. After 30 seconds, the current should settle out to 5.6 milliamps. If the readings are correct, the operation of the instrument and the current loop are correct. If the readings are incorrect, test the voltage at the current loop terminals for the minimum specification of 11 volts. If the voltage meets the specification, then it is possible that the instrument needs repair or recalibration.

C. Probe Element Testing

Set the DVM to read DC voltage in millivolts. Test the Offset Corrosion Potential across the Reference and Test electrodes (pins A and B on the probe connector). For the MS2500L to operate correctly in the LPR mode, this offset potential can be no greater than + 200 millivolts and no less than -200 millivolts. If the OCP does not fall within these limits of ± 200 millivolts, it is possible that a Lazaran type electrode is used for the reference or, the reference and test electrodes are of dissimilar metals. Depending upon the application, this may be the intention of the user if the instrument is Intended to operate only in the OFFSET mode.

D. Current Loop Isolation Testing

Disconnect the current loop connections from the MS2500L instrument. Using a clamp or alligator type connectors, connect one end of the 1K ohm resistor to the probe body. Connect the positive side of the current loop to the other end of the 1K ohm resistor. With the current loop powered up, read the voltage drop across the 1K ohm resistor in both AC and DC modes on DVM. In either mode there should be less than 10 millivolts to indicate a floating loop. Repeat the test using the negative side of the loop. If the voltage drop is greater, this indicates the presence of a non-floating power supply or the current loop monitoring device (chart recorder, panel meter, computer inputs, etc.) is of a grounded or non-floating nature. If this is the case, do not attempt to connect the probe connector to the probe. A loop isolator or a repeater power supply such as a MTL #2441 must be used.

Appendix A: Drawings

1. Assembly Drawings

A1 Board Overlays


A2 Board Overlays

Cable Assembly

2. Installation Drawings


Physical Dimensions and Mounting Details

Field Wiring

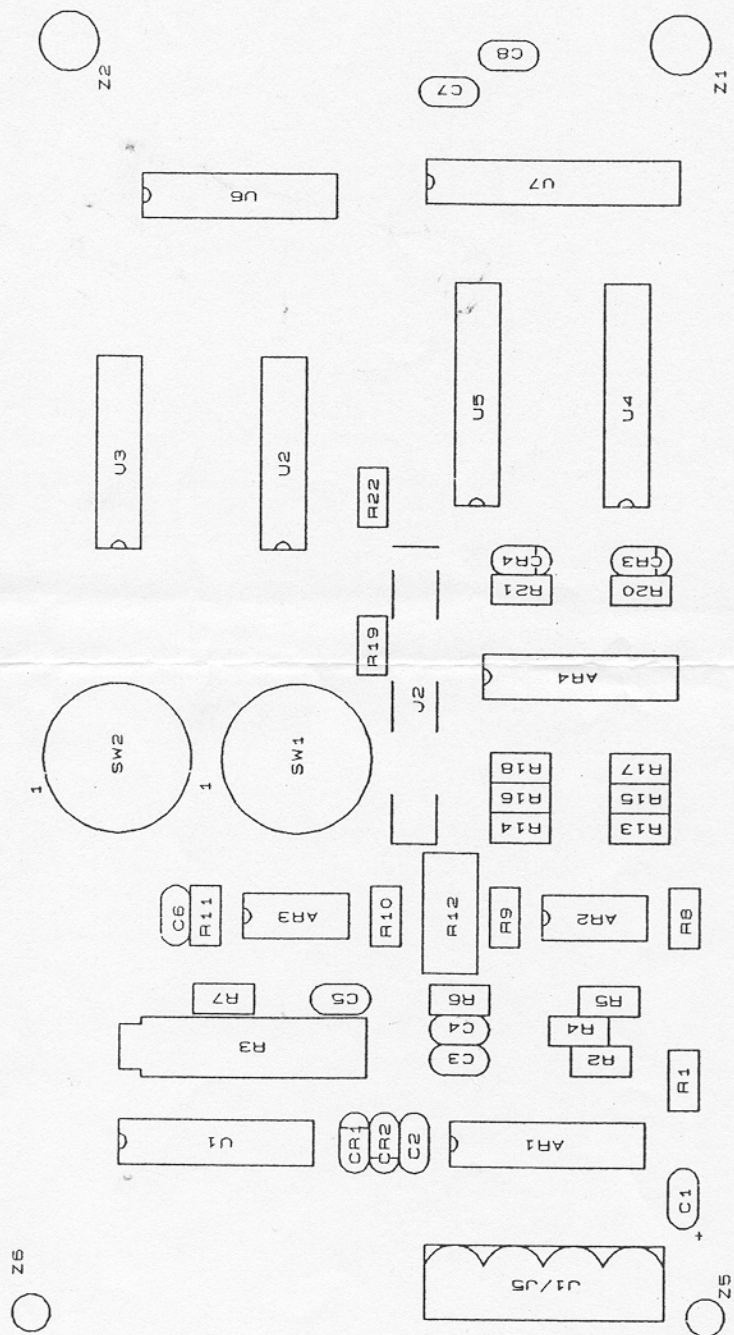

MATERIAL PART NUMBER

THIS DRAWING IS THE PROPERTY OF THE DRAWING OFFICE. IT IS TO BE USED FOR THE PURPOSES SPECIFIED ONLY. IT IS NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM, WITHOUT THE WRITTEN PERMISSION OF THE DRAWING OFFICE.		PARTIAL TITLE INSTRUMENTS		DATE: 10/1/84	
PART NO.:		DESIGNER		DATE APPROVAL	
MODEL/JOB		INSTRUMENT		DATE APPROVAL	
TITLE:		REVISIONS		DATE APPROVAL	
A1 MEASUREMENT AND CONTROL BOARD		NOTES		DATE APPROVAL	
SCALE: NONE		TYPE OF DWG.:		TEXT ASSY	
DWG. NO. 05A122		ENGINEER		DATE	
CHECKER		DATE		DATE	
DRAFTSMAN		DATE		DATE	
MANUFACTURING DATE		DATE		DATE	
G. C.		DATE		DATE	
SCALE: NONE		SHEET 1 OF 1		DATE	
TYPE OF DWG.:		DATE		DATE	
TEXT ASSY		DATE		DATE	
DWG. NO. 05A122		DATE		DATE	

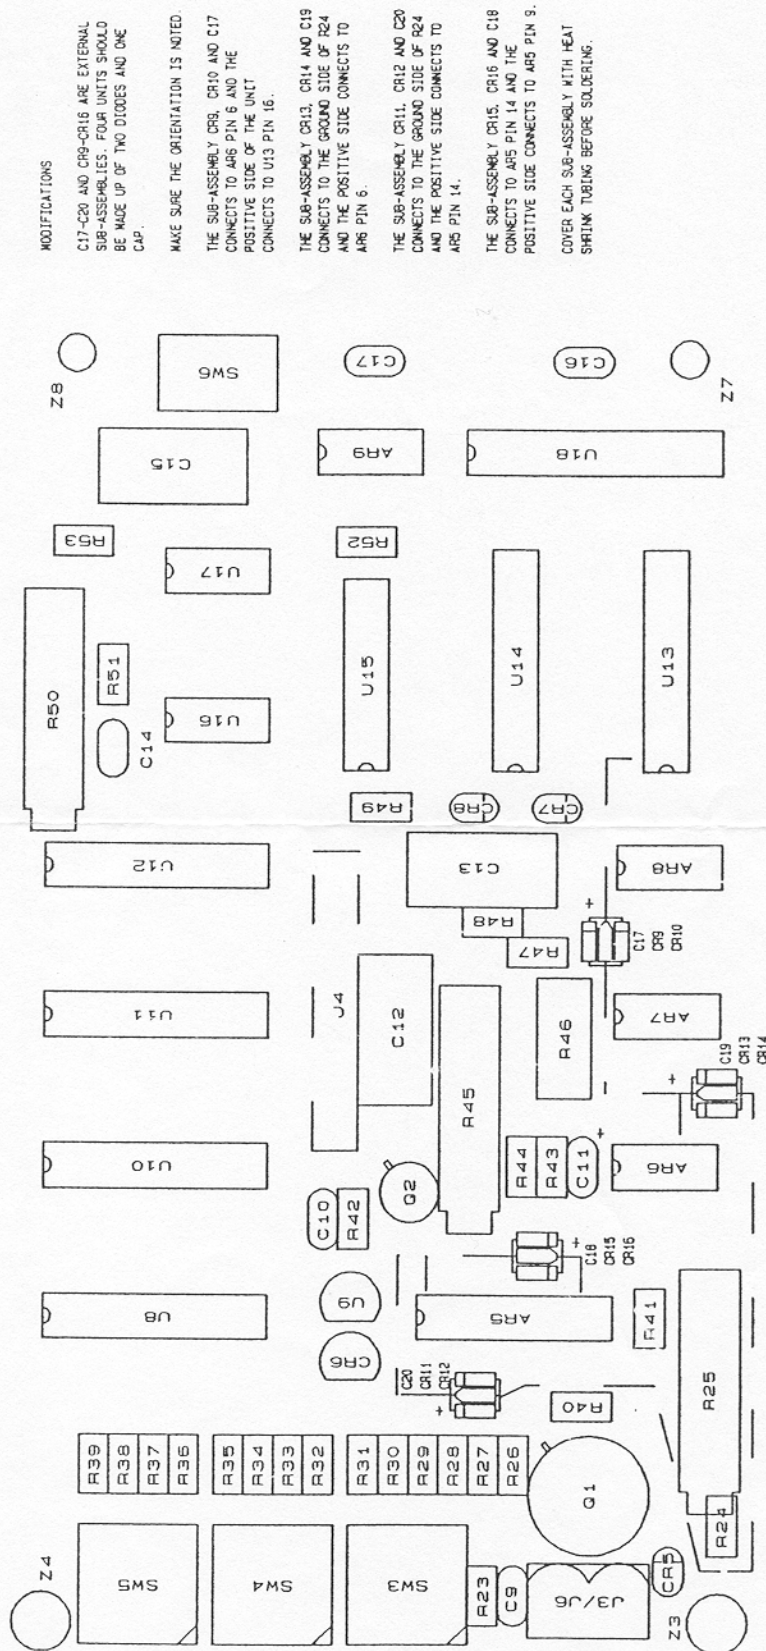

MODIFICATIONS

C17-C20 AND C99-CR16 ARE EXTERNAL SUB-ASSEMBLIES. FOUR UNITS SHOULD BE MADE UP OF TWO DIODES AND ONE CAP.

MAKE SURE THE ORIENTATION IS NOTED.

THE SUB-ASSEMBLY CR8, CR10 AND C17 CONNECTS TO AR5 PIN 6 AND THE POSITIVE SIDE OF THE UNIT CONNECTS TO U13 PIN 16.

THE SUB-ASSEMBLY CR13, CR14 AND C19 CONNECTS TO THE GROUND SIDE OF R24 AND THE POSITIVE SIDE CONNECTS TO AR6 PIN 6.

THE SUB-ASSEMBLY CR11, CR12 AND C20 CONNECTS TO THE GROUND SIDE OF R24 AND THE POSITIVE SIDE CONNECTS TO AR5 PIN 14.

THE SUB-ASSEMBLY CR15, CR16 AND C18 CONNECTS TO AR5 PIN 14 AND THE POSITIVE SIDE CONNECTS TO AR5 PIN 9.


COVER EACH SUB-ASSEMBLY WITH HEAT SHRINK TUBING BEFORE SOLDERING.

MATERIAL PART NUMBER



THIS DRAWING IS THE PROPERTY OF THE COMPANY AND IS NOT TO BE REPRODUCED OR COPIED IN ANY MANNER WITHOUT THE WRITTEN PERMISSION OF THE COMPANY. IT IS TO BE USED FOR THE MANUFACTURE OF THE PRODUCT SPECIFIED HEREIN AND IS NOT TO BE USED FOR ANY OTHER PURPOSE. IT IS TO BE KEPT IN THE COMPANY'S FILES AND IS TO BE DESTROYED WHEN THE PRODUCT IS NO LONGER IN PRODUCTION.	
TITLE: A2 LDDP CONTROL AND TIMING BOARD	
PART NO.: IN3300	
FINISH: IN3300	
MODEL/VER: IN3300	
DATE APPROVAL: LTH	
NOTES: LTH	
REVISIONS: LTH	
UNLESS OTHERWISE SPECIFIED: 1. DIMENSIONS ARE IN INCHES. 2. DIMENSIONS ARE IN MILLIMETERS. 3. DIMENSIONS ARE IN INCHES. 4. TOLERANCE DECIMAL: .005 5. TOLERANCE FRACTION: 1/16 6. TOLERANCE FRACTION: 1/32 7. TOLERANCE FRACTION: 1/64 8. TOLERANCE FRACTION: 1/128 9. TOLERANCE FRACTION: 1/256 10. TOLERANCE FRACTION: 1/512 11. TOLERANCE FRACTION: 1/1024 12. TOLERANCE FRACTION: 1/2048 13. TOLERANCE FRACTION: 1/4096 14. TOLERANCE FRACTION: 1/8192 15. TOLERANCE FRACTION: 1/16384 16. TOLERANCE FRACTION: 1/32768 17. TOLERANCE FRACTION: 1/65536 18. TOLERANCE FRACTION: 1/131072 19. TOLERANCE FRACTION: 1/262144 20. TOLERANCE FRACTION: 1/524288 21. TOLERANCE FRACTION: 1/1048576 22. TOLERANCE FRACTION: 1/2097152 23. TOLERANCE FRACTION: 1/4194304 24. TOLERANCE FRACTION: 1/8388608 25. TOLERANCE FRACTION: 1/16777216 26. TOLERANCE FRACTION: 1/33554432 27. TOLERANCE FRACTION: 1/67108864 28. TOLERANCE FRACTION: 1/134217728 29. TOLERANCE FRACTION: 1/268435456 30. TOLERANCE FRACTION: 1/536870912 31. TOLERANCE FRACTION: 1/1073741824 32. TOLERANCE FRACTION: 1/2147483648 33. TOLERANCE FRACTION: 1/4294967296 34. TOLERANCE FRACTION: 1/8589934592 35. TOLERANCE FRACTION: 1/17179869184 36. TOLERANCE FRACTION: 1/34359738368 37. TOLERANCE FRACTION: 1/68719476736 38. TOLERANCE FRACTION: 1/137438953472 39. TOLERANCE FRACTION: 1/274877906944 40. TOLERANCE FRACTION: 1/549755813888 41. TOLERANCE FRACTION: 1/1099511627776 42. TOLERANCE FRACTION: 1/2199023255552 43. TOLERANCE FRACTION: 1/4398046511104 44. TOLERANCE FRACTION: 1/8796093022208 45. TOLERANCE FRACTION: 1/17592186044416 46. TOLERANCE FRACTION: 1/35184372088832 47. TOLERANCE FRACTION: 1/70368744177664 48. TOLERANCE FRACTION: 1/140737488355328 49. TOLERANCE FRACTION: 1/281474976710656 50. TOLERANCE FRACTION: 1/562949953421312 51. TOLERANCE FRACTION: 1/1125899906842624 52. TOLERANCE FRACTION: 1/2251799813685248 53. TOLERANCE FRACTION: 1/4503599627370496 54. TOLERANCE FRACTION: 1/9007199254740992 55. TOLERANCE FRACTION: 1/18014398509481984 56. TOLERANCE FRACTION: 1/36028797018963968 57. TOLERANCE FRACTION: 1/72057594037927936 58. TOLERANCE FRACTION: 1/144115188075855872 59. TOLERANCE FRACTION: 1/288230376151711744 60. TOLERANCE FRACTION: 1/576460752303423488 61. TOLERANCE FRACTION: 1/1152921504606846976 62. TOLERANCE FRACTION: 1/2305843009213693952 63. TOLERANCE FRACTION: 1/4611686018427387904 64. TOLERANCE FRACTION: 1/9223372036854775808 65. TOLERANCE FRACTION: 1/18446744073709551616 66. TOLERANCE FRACTION: 1/36893488147419103232 67. TOLERANCE FRACTION: 1/73786976294838206464 68. TOLERANCE FRACTION: 1/147573952589676412928 69. TOLERANCE FRACTION: 1/295147905179352825856 70. TOLERANCE FRACTION: 1/590295810358705651712 71. TOLERANCE FRACTION: 1/1180591620717411303424 72. TOLERANCE FRACTION: 1/2361183241434822606848 73. TOLERANCE FRACTION: 1/4722366482869645213696 74. TOLERANCE FRACTION: 1/9444732965739290427392 75. TOLERANCE FRACTION: 1/18889465931478580854784 76. TOLERANCE FRACTION: 1/37778931862957161709568 77. TOLERANCE FRACTION: 1/75557863725914323419136 78. TOLERANCE FRACTION: 1/151115727451828646838272 79. TOLERANCE FRACTION: 1/302231454903657293676544 80. TOLERANCE FRACTION: 1/604462909807314587353088 81. TOLERANCE FRACTION: 1/1208925819614629174706176 82. TOLERANCE FRACTION: 1/2417851639229258349412352 83. TOLERANCE FRACTION: 1/4835703278458516698824704 84. TOLERANCE FRACTION: 1/9671406556917033397649408 85. TOLERANCE FRACTION: 1/19342813113834066795298816 86. TOLERANCE FRACTION: 1/38685626227668133590597632 87. TOLERANCE FRACTION: 1/77371252455336267181195264 88. TOLERANCE FRACTION: 1/154742504910672534362390528 89. TOLERANCE FRACTION: 1/309485009821345068724781056 90. TOLERANCE FRACTION: 1/618970019642690137449562112 91. TOLERANCE FRACTION: 1/1237940039285380274899124224 92. TOLERANCE FRACTION: 1/2475880078570760549798248448 93. TOLERANCE FRACTION: 1/4951760157141521099596496896 94. TOLERANCE FRACTION: 1/9903520314283042199192993792 95. TOLERANCE FRACTION: 1/19807040628566084398385987584 96. TOLERANCE FRACTION: 1/39614081257132168796771975168 97. TOLERANCE FRACTION: 1/79228162514264337593543950336 98. TOLERANCE FRACTION: 1/158456325028528675187087900672 99. TOLERANCE FRACTION: 1/316912650057057350374175801344 100. TOLERANCE FRACTION: 1/633825300114114700748351602688	
DRAFTSMAN	DATE
CHECKER	DATE
ENGINEER	DATE
MANUFACTURING DATE	
G. C.	DATE
SCALE	SHEET
NONE	1 OF 1
TYPE OF DWD.	
O	
NEXT ASSY.	
DWG. NO.	
05A123	

REV	DATE	DESCRIPTION	BY	CHKD

IN2500L-3		
#	P/N	DESCRIPTION
1	ET0437	VINYL #10 CRIMP TERMINAL
2	ET0439	CABLE GLAND
3	ET0438	CABLE 6 WIRE ARMORED
4	ET0275	BOOT
5	ET435	CONNECTOR, 5-PIN FEMALE

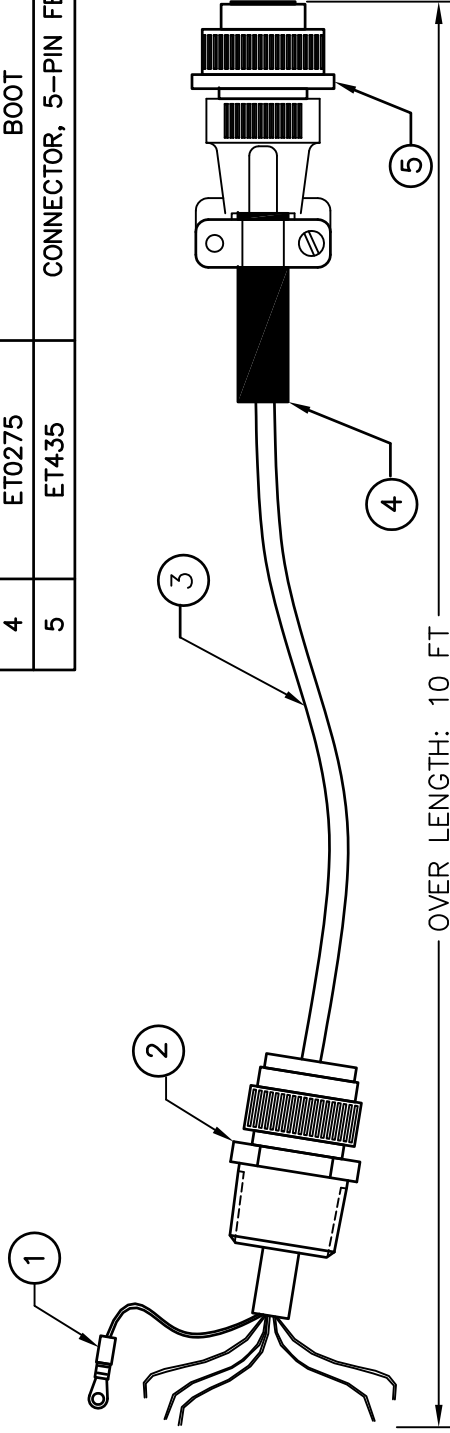

5-PIN FEMALE CONNECTOR

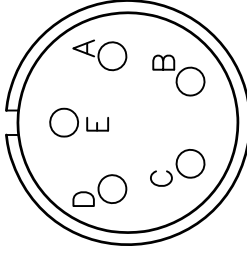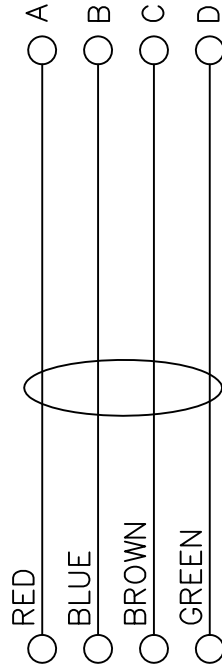

5-PIN FEMALE CONNECTOR
(VIEWED FROM SOLDER SIDE)

**ALABAMA
SPECIALTY
PRODUCTS INC.**

152 METAL SAMPLES RD, MUNFORD, AL 36268
PHONE: (256)-358-4202 FAX: (256)-358-4515

© ALABAMA SPECIALTY PRODUCTS INC. 2000
THIS DOCUMENT, INCLUDING THE INFORMATION HEREIN, IS THE
PROPERTY OF ALABAMA SPECIALTY PRODUCTS INC. (ASPI). IT
CONTAINS PROPRIETARY INFORMATION AND MAY NOT BE REPRODUCED
OR COPIED IN WHOLE OR IN PART, NOR MAY IT BE FURNISHED TO
OTHERS WITHOUT EXPRESS WRITTEN CONSENT FROM ASPI. THIS
BE USED IN ANY WAY THAT IS OR MAY BE HARMFUL TO ASPI. THIS
PRINT WILL BE RETURNED UPON REQUEST TO ASPI.

ACAD	ENGINEERED BY	DRAWN BY	CHECKED BY	Q.C.	DATE	DWG TYPE
	BKF	JDC	PDG	LWB	4/7/16	STD
TOLERANCES UNLESS OTHERWISE SPECIFIED						
1 PLACE ±.020	ANGLES ±1 DEG	TITLE PROBE CABLE ASSEMBLY <i>MS2500L-3</i>				
2 PLACE ±.010	FRACTIONS ± 1/32					
3 PLACE ±.005		SCALE SJC	SHT. NO. 01	TOT. NO. 01	DWG. NO. MS2500L-3	REV. Ø

Appendix B: Parts List

B.1 MS2500L

Reference Designators	Part No.	Description	Quantity
A1	IN2500L-1	Measurement and Control Board	1
A2	IN2500L-2	Loop Control & Timing Board	1
H1	IN2500L-12	Enclosure Assembly	1
CA1	IN2500L-3	Cable Assembly	1
AC1	IN2500L-4	Accessory Kit	1
MN	N/A	Operation / Maintenance Manual	1

Appendix C: Effects of Process Variables

1. Temperature

As a general rule, increasing temperature increases corrosion rates. This is due to a combination of factors: first, the common effect of temperature on the reaction kinetics themselves and second, the higher diffusion rate of many corrosive by-products at increased temperatures. This latter action delivers these by-products to the surface more efficiently.

Occasionally, the corrosion rates in a system will decrease with increasing temperatures. This can occur because of certain solubility considerations. Many gases have lower solubility in open systems at higher temperatures. As temperatures increase, the resulting decrease in solubility of the gas causes corrosion rates to go down.

2. pH

Corrosion rates almost always increase with decreasing pH (increasing acidity). This is a direct result of increasing the concentration of an aggressive ion (H^+) and increasing the solubility of most potentially corrosive products.

3. Oxygen Concentration

Oxygen's role in corrosion is as an aggressive gas or oxidizing agent. As its concentration increases, corrosion rates increase until the rates of diffusion to the surfaces reach a maximum. The same principles apply to most other oxidizing agents, such as Cl_2 , H_2O_2 , Br_2 .

4. Fluid Velocity

The dependence of corrosion rate on fluid velocity is complex. In general, the higher the velocity, the higher the corrosion rate. At very low velocities, even zero, there are diffusion effects that can cause corrosion. As fluid velocities increase from stagnant to moderate values, the corrosion rates increase. Then, as the limit of diffusion at a particular temperature is reached, further increases in velocity have little effect on the corrosion rate. At some point, however, the velocity reaches such high values that the surface film of the metal begins to be damaged. At these velocities, the corrosion rates resume increasing with the higher velocities.

5. Suspended Solids

An increase in suspended solids levels will accelerate corrosion rates. These solids include any inorganic or organic contaminants present in the water. Examples of these contaminants include clay, sand, silt or biomass.

Some specific contaminants can interfere with the Linear Polarization corrosion rate measurement, among these are iron sulfide, and hydrocarbons.

Iron sulfide, in the form frequently encountered in some applications, is electronically conductive. Since the Linear Polarization Technique assumes ionic conductivity between the electrodes, this interferes with the measurements. When significant amounts of FeS are present in the system, its interference exhibits itself as rapidly increasing corrosion rates until the maximum full scale (or unreasonably high) level is reached.

In the opposite way, hydrocarbon contamination of Linear Polarization electrodes will effect the readings. Usually, hydrocarbon “*coating*” of the electrodes isolates them from the electrolyte and from electrical communication with each other. This results in very low corrosion rate readings.

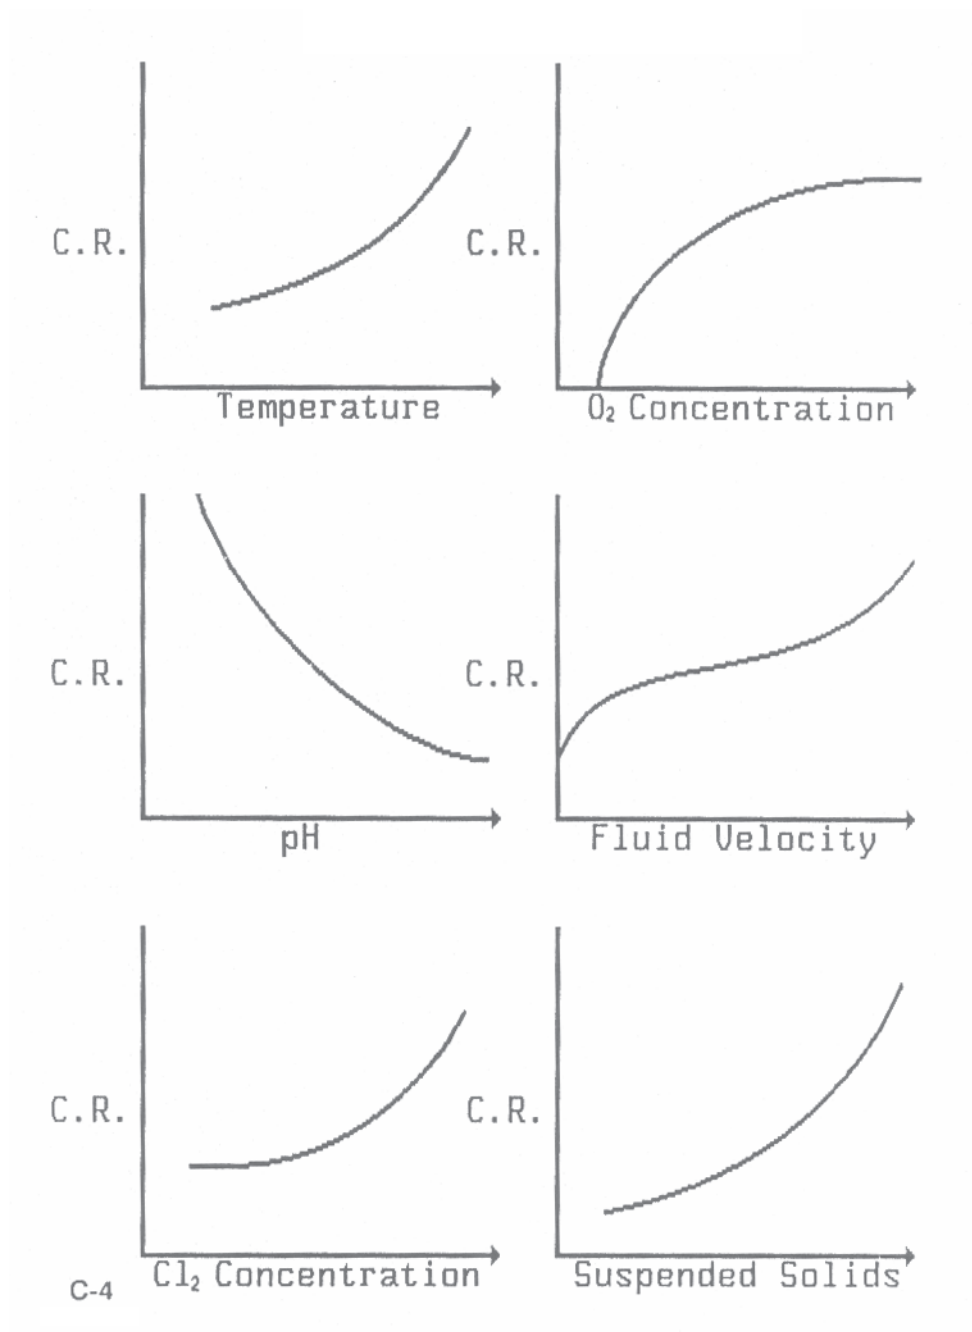


Figure 6. Typical Behavior of Corrosion Rate as a Function of Process Variables

6. Electrode Potentials

Corrosion reactions are a combination of oxidation and reduction reactions.

Oxidation is the electrochemical process by which an element or species loses electrons and increases its valence state. A metal transforming to a metal ion with the simultaneous loss of an electron is an example.


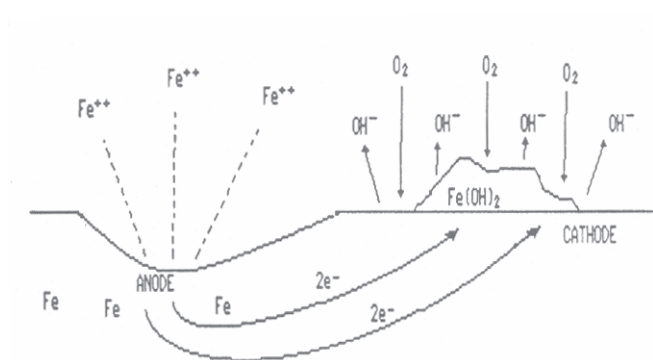


Figure 7. Corrosion Reactions on Iron

 Reduction is the electrochemical process by which an element or species acquires one or more electrons, thus reducing its valence. The transformation of hydrogen ions to atomic hydrogen is an example.




When reactions of these types occur, they never occur in isolation, only in pairs or combination. In fact, the oxidation process, which produces more electrons, depends on the simultaneous consumption of those electrons by a reduction reaction. If no reduction reaction is available, no oxidation occurs. In these cases, the species which undergoes a reduction reaction is called the oxidizing agent.

The quantitative study of oxidation reduction reactions has resulted in two useful concepts:


1. Oxidation reduction potentials (which apply to elements and compound).
2. Galvanic series (which applies to alloys in their environments).

Oxidation Reduction Potentials

 The table below is a listing of some useful oxidation-reduction potentials. These values represent the thermodynamic tendency for the indicated reaction to occur on a relative basis. All potential values are compared to an arbitrary value of 0.00 volts which is assigned to the hydrogen oxidation reaction. The more negative a value, the more likely the reaction will proceed in the direction shown in table. Thus we see that zinc oxidation



 is more likely to occur than iron oxidation



which, in turn, is more likely than hydrogen oxidation



Some other generalizations drawn from the standard oxidation reduction potential table are:


1. Oxygen is a stronger oxidizing agent than hydrogen ion.
2. Iron is more reactive than lead, copper or silver.
3. Gold is very unreactive.

More Reactive



More Noble

Reaction

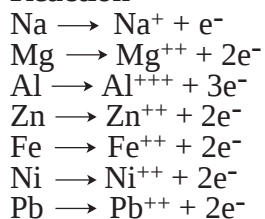

Eo (volts)

- 2.71
- 2.38
- 1.66
- 0.763
- 0.409
- 0.250
- 0.126
0.00 Reference
+ 0.34
+ 0.401
+ 0.771
+ 0.799
+ 0.905
+ 1.06
+ 1.23
+ 1.36
+ 1.2
+ 1.498

Galvanic Series


The table below is a simple version of the galvanic series of alloys in seawater. Because electrode (oxidation-reduction) potentials only apply to pure elements and true compounds, another system was developed to compare the relative reactivity of alloys in an environment. This series has the added advantage of allowing you to predict the galvanic behavior of certain alloy pairs in an environment.

If a pair of alloys listed in the series are coupled, the alloy higher in the list will be corroded more rapidly than if it were uncoupled, and the alloy lower in the series will be protected, or corrode more slowly than if it were uncoupled. The table shows why alloys of aluminum and magnesium are galvanically coupled to steel to protect the steel. Coupling steel to copper, brass, or stainless steel accelerates the corrosion of steel.

Active / Anodic	Magnesium
	Zinc
	Aluminum
	Iron / Steel
	Lead
	Brass
	Admiralty
	Copper
	70-30 Copper Nickel
	Stainless Steel (passive)
Noble / Cathodic	

7. Common Corrosive Agents

Most, but not all, of the common corrosive agents encountered in industrial waters are gases. The reactions of importance are:

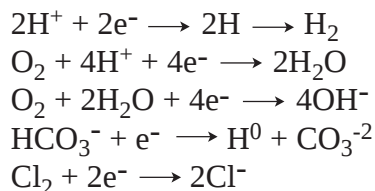

Other corrosive agents occur in industrial waters, although infrequently. Among these are the ferric ion (Fe^{+++}), sulfide ion (S^{-2}), bromine (Br_2), and cupric ion (Cu^{++}).

Appendix D: Warranty Information

Metal Samples warrants that any part of the MS2500L and accessories which proves to be defective in material or workmanship within one year of the date of original shipment to Purchaser will be repaired or replaced, at Metal Samples' option, free of charge. This warranty does not cover (1) probe assemblies, (2) items expendable in nature, or (3) items subject to damage from normal wear, misuse or abuse, or failure to follow use and care instructions.

All damaged items are to be shipped at Purchaser's expense to and from Metal Samples which shall have the right to final determination as to the existence and cause of a defect.

The foregoing shall constitute the sole and exclusive remedy of any purchaser of Metal Samples products for breach of warranty and IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED, IMPLIED OR STATUTORY, INCLUDING THE IMPLIED WARRANTIES OR MERCHANTABILITY AND FITNESS. IN NO EVENT SHALL METAL SAMPLES BE LIABLE FOR SPECIAL OR CONSEQUENTIAL DAMAGES, OR FOR ANY DELAY IN THE PERFORMANCE OF THIS WARRANTY DUE TO CAUSES BEYOND ITS CONTROL.

Orders or request for additional information should be addressed to:

Metal Samples
P.O. Box 8
Munford, AL 36268
Telephone: (256) 358-4202
Fax: (256) 358-4515
E-mail: msc@alspi.com

The technical information and suggestions contained herein are believed to be reliable, but they are not to be construed as warranties since conditions of use are beyond our control.

Shipping Address

Metal Samples
152 Metal Samples Road
Munford, AL 36268
Telephone: (256) 358-4202
Fax: (256) 358-4515
E-mail: msc@alspi.com

Appendix E: Maintenance and Repair Instructions

This form may be photocopied for use when returning instruments to Metal Samples for repair. Please fill in all known information. Enclose a copy of the filled in form with the instrument.

1. Check one:

_____ Repair this instrument under warranty.

_____ Repair this instrument regardless of problem or cost of repair.

_____ Inspect the instrument and advise the customer of the approximate cost of repairs if the instrument is not covered under warranty. (Note: This procedure may delay the return of the instrument to you.)

2. Instrument Identification:

Instrument Model # _____ Serial # _____

Date and Location of Purchase _____

Company's Purchase Order # for Original Sale _____

3. Return the Instrument to:

Company Name _____

Address/Location _____

Telephone Number: _____

4. Description of Trouble: (a clear description of the problem may shorten repair time) _____

5. Urgency of Repairs: _____
