


BASIC USER'S GUIDE

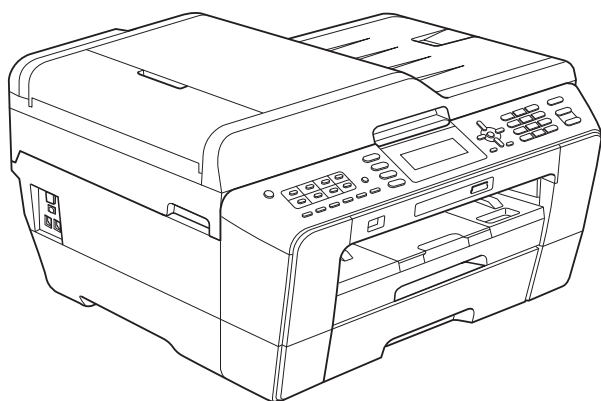

MFC-J6510DW
MFC-J6710DW

If you need to call Customer Service

Please complete the following information for future reference:

Model Number: MFC-J6510DW and MFC-J6710DW
(Circle your model number)

Serial Number: ¹ _____

Date of Purchase: _____

Place of Purchase: _____

¹ The serial number is on the back of the unit. Retain this User's Guide with your sales receipt as a permanent record of your purchase, in the event of theft, fire or warranty service.

Register your product on-line at

<http://www.brother.com/registration/>

User's Guides and where do I find it?

Which manual?	What's in it?	Where is it?
Safety and Legal	Read this Guide first. Please read the Safety Instructions before you set up your machine. See this Guide for trademarks and legal limitations.	Printed / In the box
Quick Setup Guide	Follow the instructions for setting up your machine and installing the drivers and software for the operating system and connection type you are using.	Printed / In the box
Basic User's Guide	Learn the basic Fax, Copy, Scan and PhotoCapture Center™ operations and how to replace consumables. See troubleshooting tips.	Printed / In the box
Advanced User's Guide	Learn more advanced operations: Fax, Copy, security features, printing reports and performing routine maintenance.	PDF file / Documentation CD-ROM
Software User's Guide	Follow these instructions for Printing, Scanning, Network Scanning, PhotoCapture Center™, Remote Setup, PC-Fax, and using the Brother ControlCenter utility.	PDF file / Documentation CD-ROM
Network Glossary	This Guide provides basic information about advanced network features of Brother machines along with explanations about general networking and common terms.	PDF file / Documentation CD-ROM
Network User's Guide	This Guide provides useful information about wired and wireless network settings and security settings using the Brother machine. You can also find supported protocol information for your machine and detailed troubleshooting tips.	PDF file / Documentation CD-ROM

Table of Contents

(BASIC USER'S GUIDE)

1	General information	1
	Using the documentation	1
	Symbols and conventions used in the documentation	1
	Accessing the Advanced User's Guide, Software User's Guide, Network User's Guide and Network Glossary	1
	Viewing Documentation	1
	Accessing Brother Support (Windows®)	3
	Accessing Brother Support (Macintosh)	3
	Control panel overview	4
	LCD screen indications	7
	Basic Operations	8
	Volume Settings	8
	Ring Volume	8
	Beeper Volume	9
	Speaker Volume	9
	LCD display	9
	Setting the backlight brightness	9
2	Loading paper	10
	Loading paper and other print media	10
	Loading paper in paper tray #1	10
	Loading paper in paper tray #2 (MFC-J6710DW only)	13
	Loading paper in the manual feed slot	17
	Loading envelopes and postcards	19
	Printable area	21
	Paper settings	22
	Paper Size and Type (MFC-J6510DW)	22
	Paper Size and Type (MFC-J6710DW)	23
	Tray use in Copy mode (MFC-J6710DW only)	23
	Tray use in Fax mode (MFC-J6710DW only)	24
	Secure Paper Feed mode for A3 size Short Grain Paper	24
	Acceptable paper and other print media	25
	Recommended print media	25
	Handling and using print media	26
	Choosing the right print media	27
3	Loading documents	29
	How to load documents	29
	Using the ADF	29
	Using the scanner glass	30
	Scannable area	31

4	Sending a fax	32
	How to send a fax	32
	Stop faxing	33
	Setting scanner glass size for faxing	33
	Colour fax transmission	33
	Cancelling a fax in progress	33
	How to preview an outgoing fax	34
	Transmission Verification Report.....	34
5	Receiving a fax	36
	Receive Modes	36
	Choose the Receive Mode	36
	Using Receive Modes	37
	Fax Only	37
	Fax/Tel.....	37
	Manual.....	37
	External TAD	37
	Receive Mode settings	38
	Ring Delay	38
	F/T Ring Time (Fax/Tel mode only).....	38
	Fax Detect	39
	Fax Preview (Monochrome only).....	39
	How to preview a received fax.....	39
6	Telephone and external devices	41
	Voice operations	41
	Tone or Pulse	41
	Fax/Tel mode.....	41
	Caller ID (U.K. and Ireland only).....	41
	Telephone services.....	42
	Setting the Telephone Line Type.....	42
	Connecting an external TAD (telephone answering device).....	44
	Connections settings	44
	Recording an outgoing message (OGM) on an external TAD	44
	Multi-line connections (PBX)	45
	External and extension telephones.....	45
	Connecting an external or extension telephone	45
	Operation from external and extension telephones	46
	Using extension telephones (U.K. only)	46
	Using a cordless external telephone	47
	Using remote codes.....	47

7	Dialling and storing numbers	49
	How to dial	49
	Manual dialling	49
	One Touch Dialling	49
	Speed Dialling	49
	Search	50
	Fax Redial	50
	Additional Dialling Operations.....	51
	Outgoing Call history	51
	Caller ID history	51
	Storing numbers	52
	Storing a pause	52
	Storing One Touch Dial numbers	52
	Storing Speed Dial numbers.....	53
	Changing One Touch or Speed Dial names or numbers.....	54
8	Making copies	55
	How to copy	55
	Stop copying	55
	Copy settings.....	55
	Paper Options.....	56
9	Printing photos from a memory card or USB Flash memory drive	57
	PhotoCapture Center™ operations	57
	Using a memory card or USB Flash memory drive	57
	Getting started	58
	Print Images.....	60
	View Photos.....	60
	PhotoCapture Center™ print settings.....	60
	How to scan to a memory card or USB Flash memory drive.....	61
10	How to print from a computer	63
	Printing a document.....	63
11	How to scan to a computer	64
	Scanning a document.....	64
	Scanning using the scan key	64
	Scanning using a scanner driver	65

A	Routine maintenance	66
	Replacing the ink cartridges	66
	Cleaning and checking the machine	68
	Cleaning the scanner glass	68
	Cleaning the print head	69
	Checking the print quality	70
	Checking the print alignment	71
B	Troubleshooting	72
	Error and Maintenance messages	72
	Error animations display	79
	Transferring your faxes or Fax Journal report	79
	Document jam	80
	Printer jam or paper jam	81
	Troubleshooting	88
	If you are having difficulty with your machine	88
	Dial Tone detection	95
	Telephone line interference / VoIP	95
	Machine Information	96
	Checking the serial number	96
	Reset functions	96
	How to reset the machine	96
C	Menu and features	97
	On-screen programming	97
	Menu table	98
	Entering Text	124
	Inserting spaces	124
	Making corrections	124
	Repeating letters	124
	Special characters and symbols	124
D	Specifications	125
	General	125
	Print media	127
	Fax	129
	Copy	130
	PhotoCapture Center™	131
	PictBridge	132
	Scanner	133
	Printer	134
	Interfaces	135
	Computer requirements	136
	Consumable items	137
	Network (LAN)	138
E	Index	139

Table of Contents

(ADVANCED USER'S GUIDE)

The *Advanced User's Guide* explains the following features and operations.

You can view the *Advanced User's Guide* on the Documentation CD-ROM.

1 General setup

Memory storage
Automatic Daylight Saving Time
Sleep Mode
LCD display
Mode Timer

2 Security features

Secure Function Lock 2.0

3 Sending a fax

Additional sending options
Additional sending operations
Polling overview

4 Receiving a fax

Memory Receive (Monochrome only)
Remote Retrieval
Additional receiving operations
Polling overview

5 Dialling and storing numbers

Voice operations
Additional dialling operations
Additional ways to store numbers

6 Printing reports

Fax reports
Reports

7 Making copies

Copy settings

8 Printing photos from a memory card or USB Flash memory drive

PhotoCapture Center™ operations
Print Images
PhotoCapture Center™ print settings
Scan to a memory card or USB Flash memory drive

9 Printing photos from a camera

Printing photos directly from a PictBridge camera
Printing photos directly from a digital camera (without PictBridge)

A Routine maintenance

Cleaning and checking the machine
Packing and shipping the machine

B Glossary

C Index

Using the documentation

Thank you for buying a Brother machine! Reading the documentation will help you make the most of your machine.

Symbols and conventions used in the documentation

The following symbols and conventions are used throughout the documentation.

Bold	Bold typeface identifies specific buttons on the machine's control panel, or on the computer screen.
<i>Italics</i>	Italicized typeface emphasizes an important point or refers you to a related topic.
<code>Courier New</code>	Text in the Courier New font identifies messages on the LCD of the machine.

WARNING

WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injuries.

CAUTION

CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injuries.

IMPORTANT

IMPORTANT indicates a potentially hazardous situation which, if not avoided, may result in damage to property or loss of product functionality.



Notes tell you how you should respond to a situation that may arise or give tips about how the operation works with other features.



Electrical Hazard icons alert you to possible electrical shock.

Accessing the Advanced User's Guide, Software User's Guide, Network User's Guide and Network Glossary

This Basic User's Guide does not contain all the information about the machine such as how to use the advanced features of the Fax, Copy, PhotoCapture Center™, Printer, Scanner, PC-Fax and Network. When you are ready to learn detailed information about these operations, read the **Advanced User's Guide**, **Software User's Guide**, **Network User's Guide** and **Network Glossary** that are on the Documentation CD-ROM.

Viewing Documentation

- 1 Turn on your computer. Insert the Documentation CD-ROM into your CD-ROM drive. For Windows® users, go to step 3.




Note

(Windows® users)


If the screen does not appear automatically, go to **My Computer (Computer)**, double-click the CD-ROM icon, and then double-click **index.html**.

- 2 (Macintosh users)
Double-click the Documentation CD-ROM icon, and then double-click **index.html**.

3 Click your country.

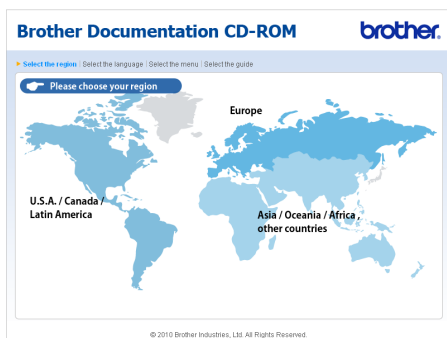

4 Point to your language, point to **View Guide**, and then click the guide you want to read.

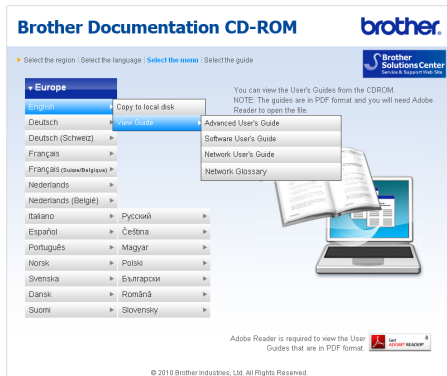

Note

- (Windows® users only)
Your Web browser may display a yellow bar at the top of the page that contains a security warning about Active X controls. For the page to display correctly you must click on the bar, click **Allow Blocked Content**, then click **Yes** in the Security Warning dialog box.
- (Windows® users only)¹
For faster access, you can copy all user documentation in PDF format to a local folder on your computer. Point to your language, then click **Copy to local disk**.

¹ Microsoft® Internet Explorer® 6.0 or greater.

How to find Scanning instructions

There are several ways you can scan documents. You can find the instructions as follows:

Software User's Guide

- *Scanning*
- *ControlCenter*
- *Network Scanning*

ScanSoft™ PaperPort™ 12SE with OCR How-to-Guides (Windows® users)

- The complete ScanSoft™ PaperPort™ 12SE with OCR How-to-Guides can be viewed from the Help selection in the ScanSoft™ PaperPort™ 12SE application.
(Windows® 2000 users need to download and install PaperPort™ 11SE from website.)

Presto! PageManager User's Guide (Macintosh users)



Note

Presto! PageManager must be downloaded and installed before use. See *Accessing Brother Support (Macintosh)* on page 3 for further instructions.

- The complete Presto! PageManager User's Guide can be viewed from the Help selection in the Presto! PageManager application.


How to find Network setup instructions

Your machine can be connected to a wireless or wired network. You can find basic setup instructions in the Quick Setup Guide. If your wireless access point or router supports Wi-Fi Protected Setup or AOSS™, you can also follow the steps in the Quick Setup Guide. For more information about network setup please see the *Network User's Guide* on the Documentation CD-ROM.

Accessing Brother Support (Windows®)

You can find all the contacts you will need, such as Web support (Brother Solutions Center) on the Installation CD-ROM.

- Click **Brother Support** on **Top Menu**.
The following screen will appear:

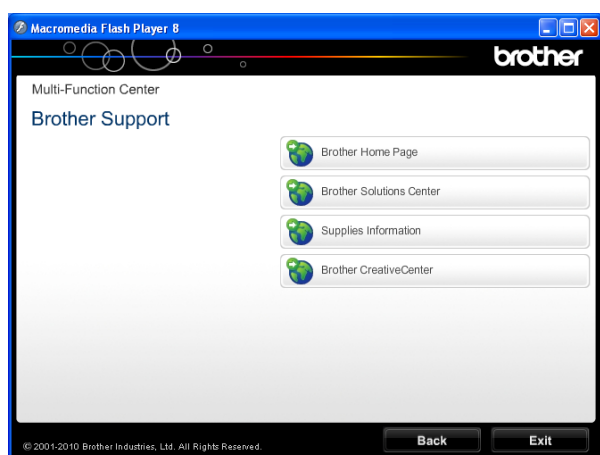


- To access our website (<http://www.brother.com/>), click **Brother Home Page**.
- For the latest news and product support information (<http://solutions.brother.com/>), click **Brother Solutions Center**.
- To visit our website for original Brother Supplies (<http://www.brother.com/original/>), click **Supplies Information**.
- To access the Brother CreativeCenter (<http://www.brother.com/creativecenter/>) for FREE photo projects and printable downloads, click **Brother CreativeCenter**.
- To return to the **Top Menu**, click **Back** or if you have finished, click **Exit**.

Accessing Brother Support (Macintosh)

You can find all the contacts you will need, such as Web support (Brother Solutions Center) on the Installation CD-ROM.

- Double-click the **Brother Support** icon.
The following screen will appear:

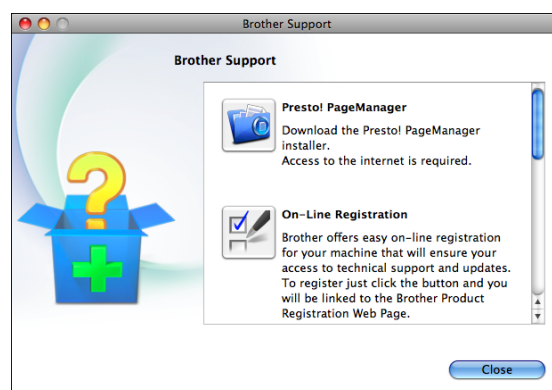

- To download and install Presto! PageManager, click **Presto! PageManager**.
- To register your machine from the Brother Product Register Page (<http://www.brother.com/registration/>), click **On-Line Registration**.
- For the latest news and product support information (<http://solutions.brother.com/>), click **Brother Solutions Center**.
- To visit our website for original Brother Supplies (<http://www.brother.com/original/>), click **Supplies Information**.


Control panel overview




Note



Most of the illustrations in this User's Guide show the MFC-J6710DW.

MFC-J6510DW

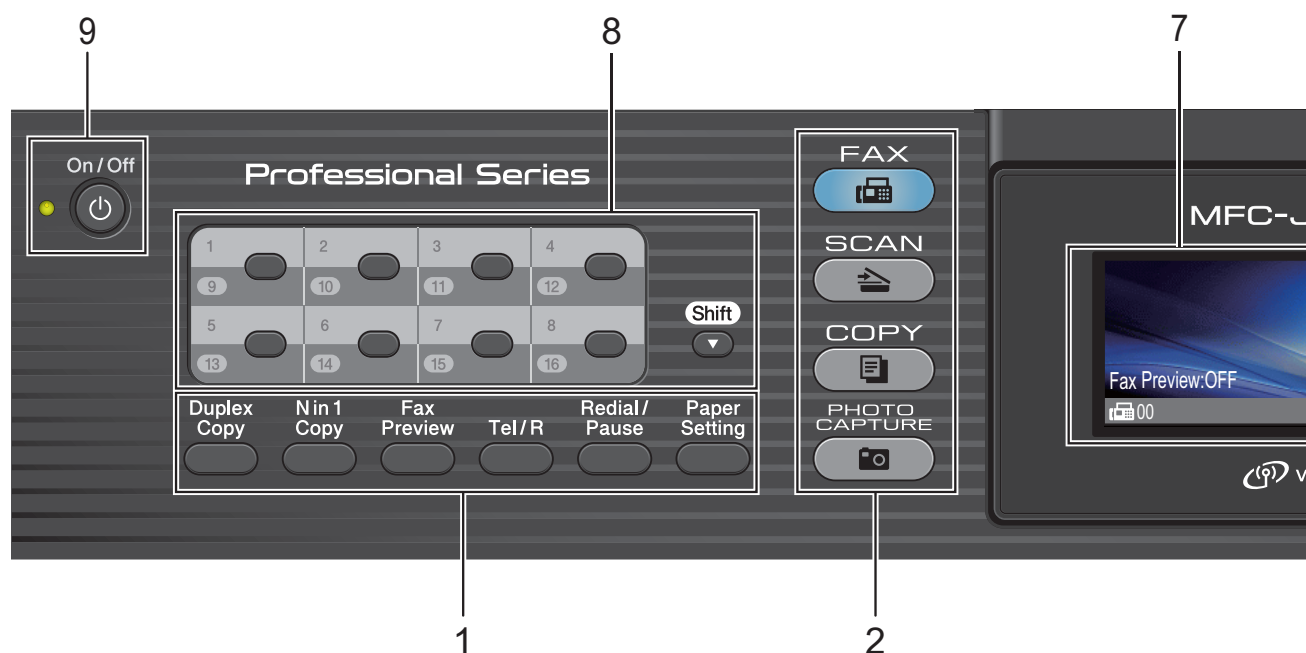

MFC-J6710DW

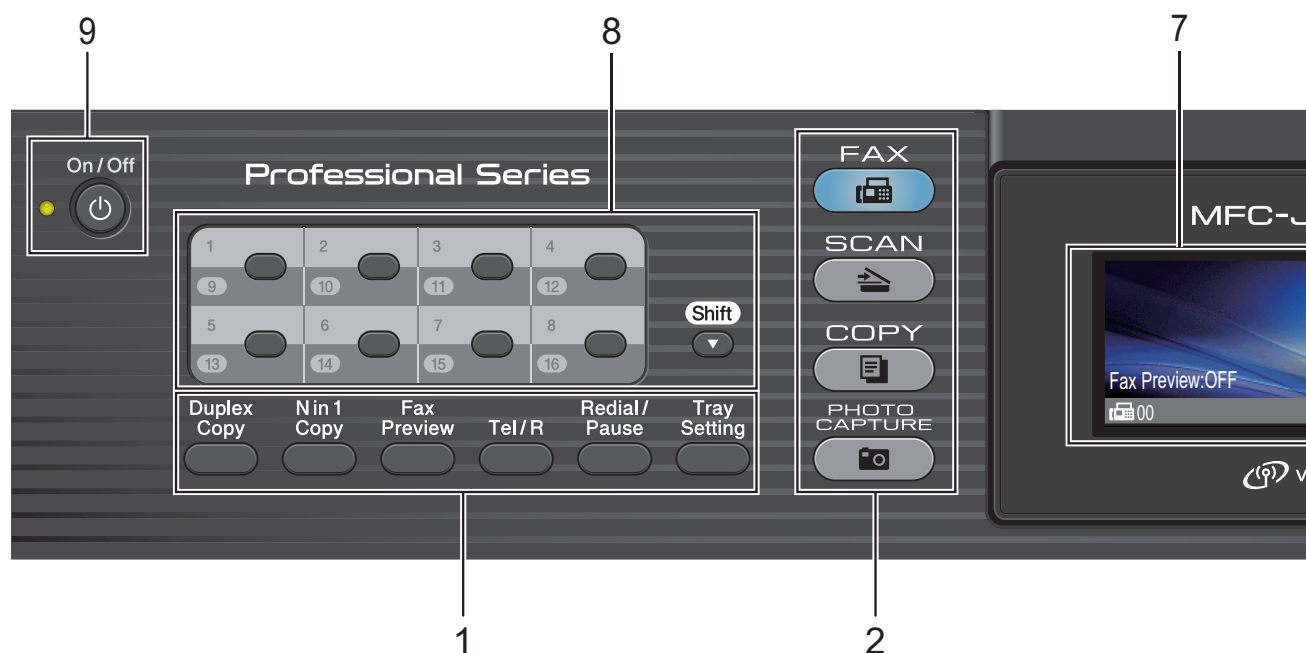

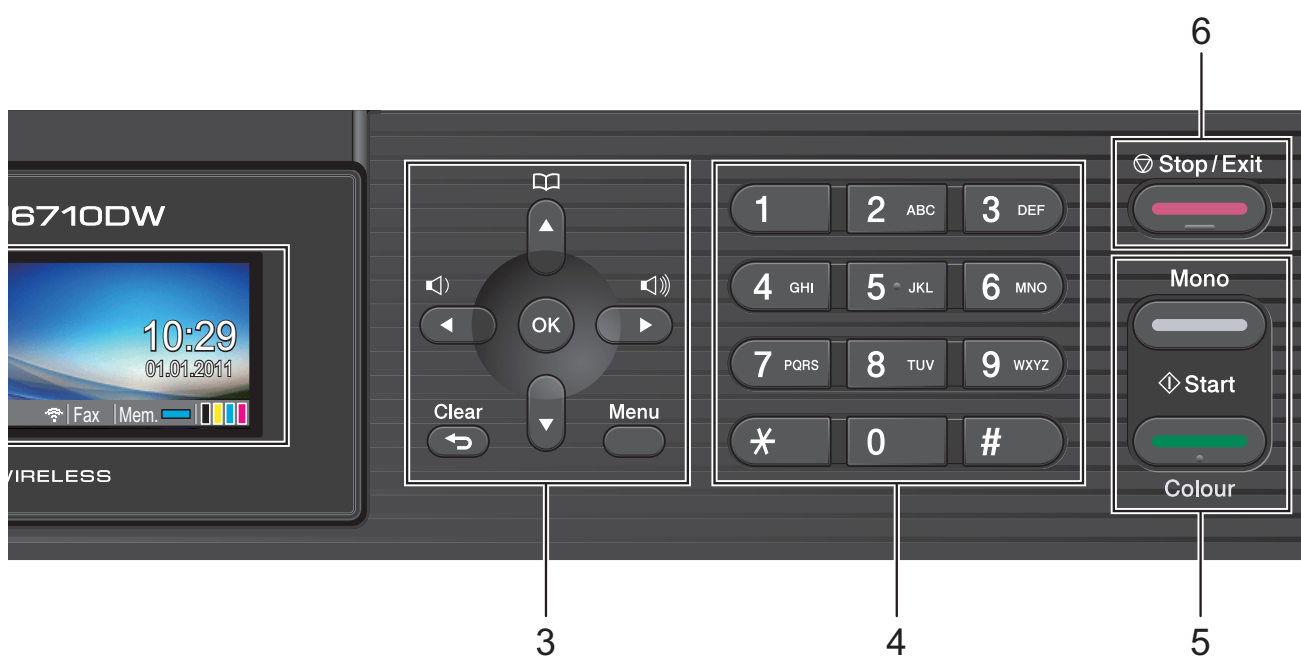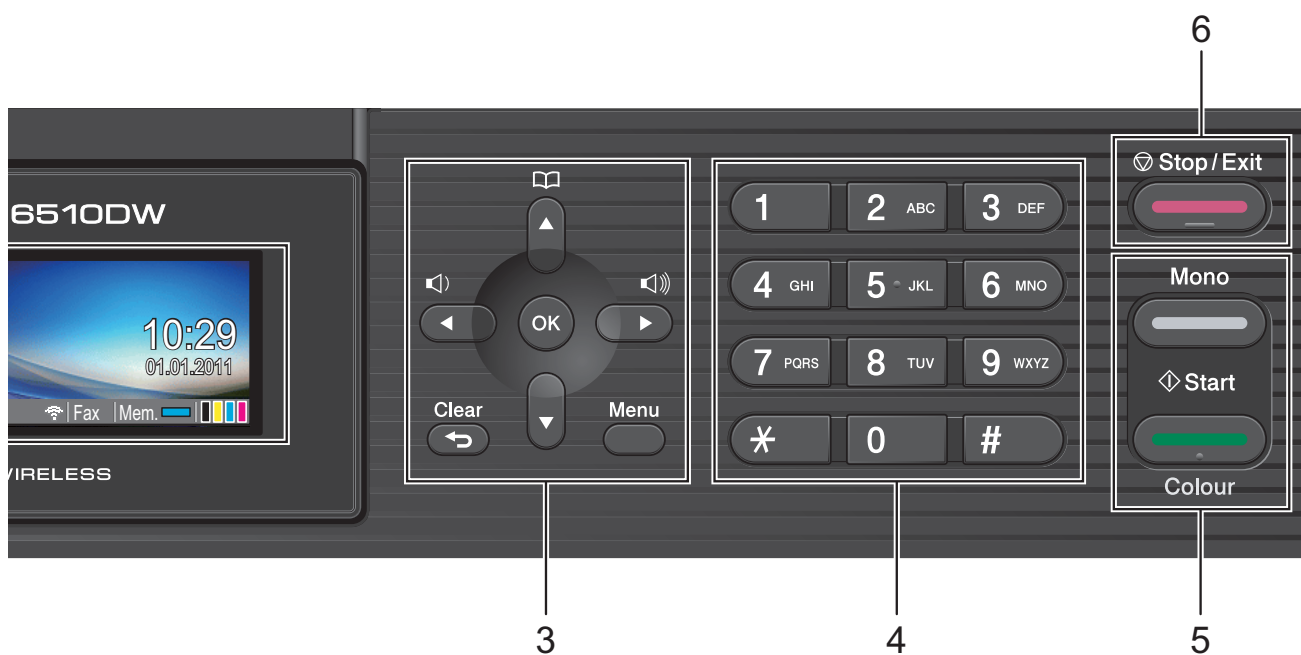

1 Fax, Telephone and Copy keys:■ **Duplex Copy**

Press this key to copy on both sides of the paper.

■ **N in 1 Copy**

Press this key to make N in 1 or Poster copies.

■ **Fax Preview**

Lets you preview incoming and outgoing faxes on the LCD.

■ **Tel/R**

This key is used to have a telephone conversation after picking up the external handset during the F/T Ring (fast double-ring).

Also, when connected to a PBX, you can use this key to gain access to an outside line or to transfer a call to another extension.

■ **Redial/Pause**

Redials the last 30 numbers called. It also inserts a pause when programming quick dial numbers.

■ **Paper Setting** (MFC-J6510DW)

Press this key to set the paper size or paper type.

■ **Tray Setting** (MFC-J6710DW)

Press this key to choose the tray you want to use for printing.

2 Mode keys:■ **FAX**

Lets you access Fax mode.

■ **SCAN**

Lets you access Scan mode.

■ **COPY**

Lets you access Copy mode.

■ **PHOTO CAPTURE**

Lets you access PhotoCapture Center™ mode.

3 Menu keys:■ **Volume keys**

While the machine is idle, you can press these keys to adjust the ring volume.

■ **Phone Book key**

Lets you store, look up, and dial numbers that are stored in the memory.

■ **◀ or ▶**

Press to scroll backward or forward to a menu selection.

Also, press to choose options.

■ **▲ or ▼**

Press to scroll through the menus and options.

■ **Menu**

Access the main menu.

■ **Clear**

Press to delete characters or to go back to the previous menu level.

■ **OK**

Lets you confirm a selection.

4 Dial Pad

Use these keys to dial telephone and fax numbers and as a keyboard for entering information into the machine.

The # key lets you temporarily switch the dialling mode during a telephone call from Pulse to Tone.

5 Start keys:■ **Mono Start**

Lets you start sending faxes or making copies in monochrome. Also lets you start a scanning operation (in colour or mono depending on the scan setting in the ControlCenter software).

■ **Colour Start**

Lets you start sending faxes or making copies in full colour. Also lets you start a scanning operation (in colour or mono, depending on the scan setting in the ControlCenter software).

6 **Stop/Exit**

Stops an operation or exits the menu.

7 LCD (Liquid Crystal Display)

Displays messages on the screen to help you set up and use your machine.

Also, you can adjust the angle of the LCD by lifting it.

8 One Touch keys

These 8 keys give you instant access to 16 previously stored numbers.

Shift

To access One Touch numbers 9 to 16, hold down **Shift** as you press the One Touch key.

Also, if no number is assigned to the key, you can directly store the number by pressing the empty key.

9 On/Off

You can turn the machine on and off.

Press **On/Off** to turn the machine on.

Press and hold down **On/Off** to turn the machine off. The LCD will show

Shutting Down and will stay on for a few seconds before going off.

If you have connected an external telephone or TAD, it is always available.

If you turn the machine off, it will still periodically clean the print head to maintain print quality. To prolong print head life, provide the best ink cartridge economy, and maintain print quality, you should keep your machine connected to the power at all times.

2 Faxes in memory

Shows how many received faxes are in the memory.

3 Wireless Status

A four level indicator shows the current wireless signal strength if you are using a wireless connection.

**4 Current Receive Mode**

Lets you see the current receive mode.

- Fax (Fax Only)
- F/T (Fax/Tel)
- TAD (External TAD)
- Mnl (Manual)

5 Memory Status

Lets you see the available memory in the machine.

6 Ink indicator

Lets you see the available ink volume.

The warning icon  appears when there is an error or maintenance message. For details, see *Error and Maintenance messages* on page 72.

**Note**

If you receive a fax containing multiple paper sizes (for example, a page of A4 data and a page of A3 data), the machine may create and store a file for each paper size. The LCD may show that more than one fax job has been received.

LCD screen indications

The LCD shows the current machine status when the machine is idle.


**1 Fax Preview**

You can check the Fax Preview status.

Basic Operations


The following steps show how to change a setting in the machine. In this example the Mode Timer setting is changed from 2 minutes to 30 seconds.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to choose General Setup.

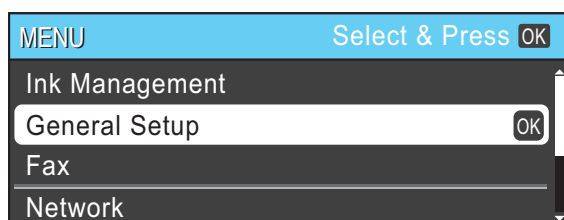


Press **OK**.

- 3 Press **▲** or **▼** to choose Mode Timer.

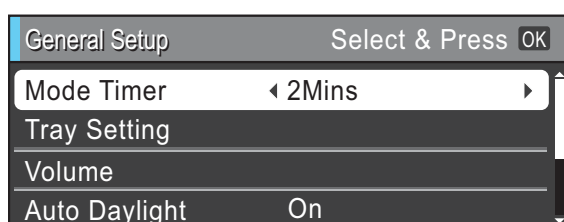


- 4 Press **◀** or **▶** to choose 30Secs.

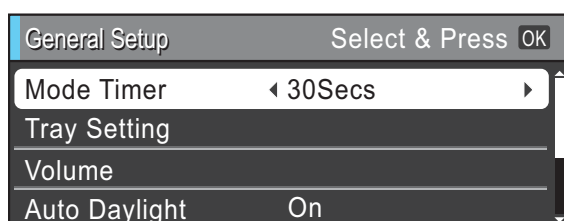

Press **OK**.

You can see the current setting on the LCD:

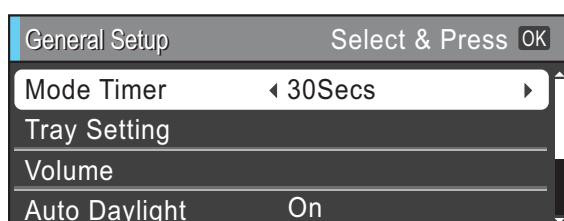

Note

Press **Clear** to go back to the previous level.

- 5 Press **Stop/Exit**.

Volume Settings

Ring Volume

You can choose a range of ring volume levels, from **High** to **Off**.

While the machine is idle, press **◀** or **▶** to adjust the volume level. The LCD shows the current setting, and each key press will change the volume to the next level. The machine will keep the new setting until you change it.

You can also change the volume through the menu, by following the instructions below:

Setting the Ring Volume from the menu

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to choose General Setup.
Press **OK**.
- 3 Press **▲** or **▼** to choose Volume.
Press **OK**.
- 4 Press **▲** or **▼** to choose Ring.
- 5 Press **◀** or **▶** to choose Low, Med, High or Off.
Press **OK**.
- 6 Press **Stop/Exit**.

Beeper Volume

When the beeper is on, the machine will beep when you press a key, make a mistake, or after you send or receive a fax.

You can choose a range of beeper volume levels, from **High** to **Off**.

- 1 Press **Menu**.
- 2 Press ▲ or ▼ to choose **General Setup**. Press **OK**.
- 3 Press ▲ or ▼ to choose **Volume**. Press **OK**.
- 4 Press ▲ or ▼ to choose **Beeper**.
- 5 Press ◀ or ▶ to choose **Low, Med, High** or **Off**. Press **OK**.
- 6 Press **Stop/Exit**.

Speaker Volume

You can choose a range of speaker volume levels, from **High** to **Off**.

- 1 Press **Menu**.
- 2 Press ▲ or ▼ to choose **General Setup**. Press **OK**.
- 3 Press ▲ or ▼ to choose **Volume**. Press **OK**.
- 4 Press ▲ or ▼ to choose **Speaker**.
- 5 Press ◀ or ▶ to choose **Low, Med, High** or **Off**. Press **OK**.
- 6 Press **Stop/Exit**.

LCD display

Setting the backlight brightness

If you are having difficulty reading the LCD, try changing the brightness setting.

- 1 Press **Menu**.
- 2 Press ▲ or ▼ to choose **General Setup**. Press **OK**.
- 3 Press ▲ or ▼ to choose **LCD Settings**. Press **OK**.
- 4 Press ▲ or ▼ to choose **Backlight**.
- 5 Press ◀ or ▶ to choose **Light, Med** or **Dark**. Press **OK**.
- 6 Press **Stop/Exit**.

2

Loading paper

Loading paper and other print media




Note

(MFC-J6710DW only)

For Tray #2, see *Loading paper in paper tray #2 (MFC-J6710DW only)* on page 13.


Loading paper in paper tray #1

- 1 Pull the paper tray completely out of the machine.

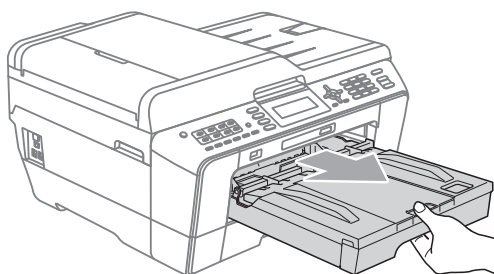


Note

If the paper support flap (1) is open, close it, and then close the paper support (2).

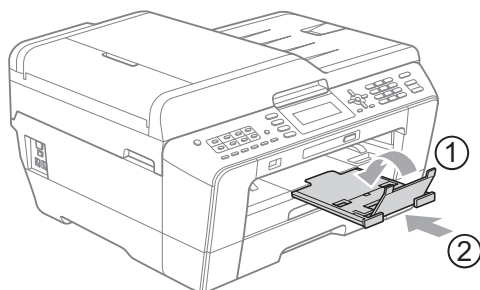


Note

- When you are using A3, Legal or Ledger size paper, press the universal guide release button (1) as you slide out the front of the paper tray. Make sure that when using Legal or A3 or Ledger size paper, the triangular mark on the output paper tray cover is aligned with the line indicating Legal (2) or A3 or Ledger (3) size, as shown in the illustration.

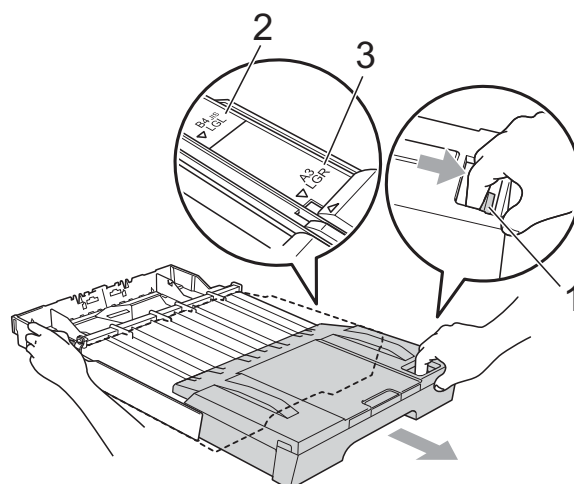


- If you are using A5 or smaller size paper, make sure that the paper tray is not extended.
- (MFC-J6710DW)
When you load a different paper size in a tray, you will need to change the paper size setting in the machine at the same time. (See *Paper Size and Type (MFC-J6710DW)* on page 23.)

- 2 Open the output paper tray cover (1).

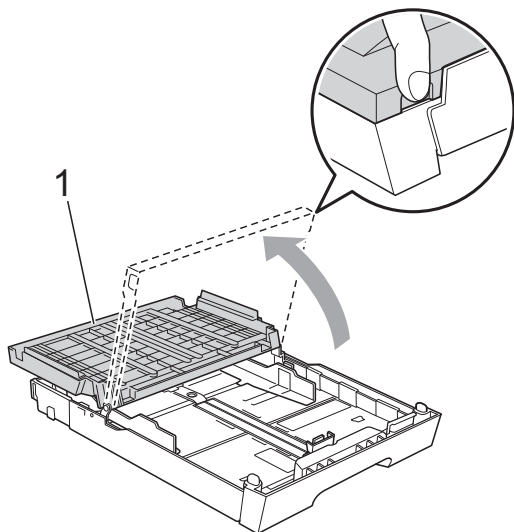


- 3 With both hands, gently press and slide the paper length guide (1) and then the paper side guides (2) to fit the paper size.

Make sure that the triangular marks (3) on the paper length guide (1) and paper side guides (2) line up with the mark for the paper size you are using.

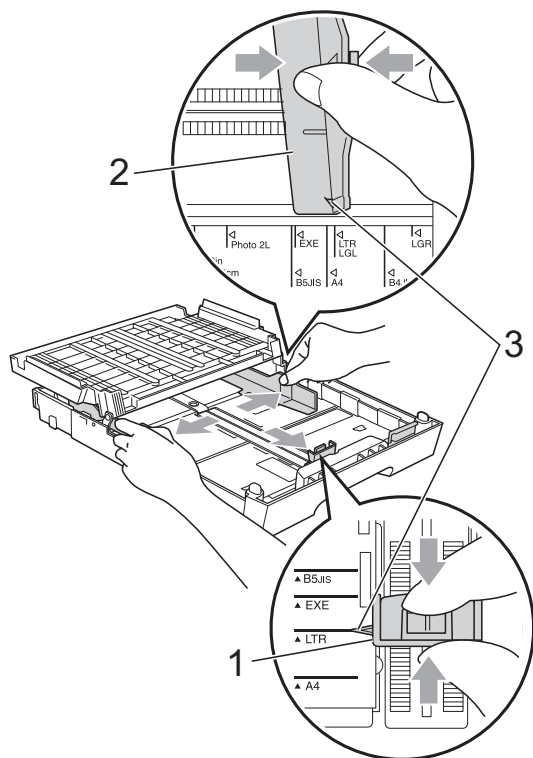


- 4 Fan the stack of paper well to avoid paper jams and misfeeds.

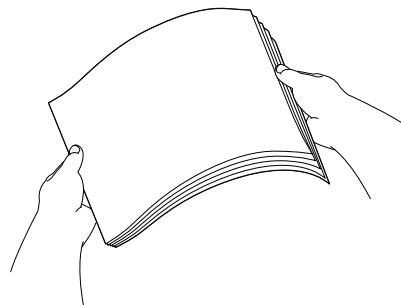

Note


Always make sure that the paper is not curled.

- 5 Gently put the paper into the paper tray print side down and top edge in first. Check that the paper is flat in the tray.

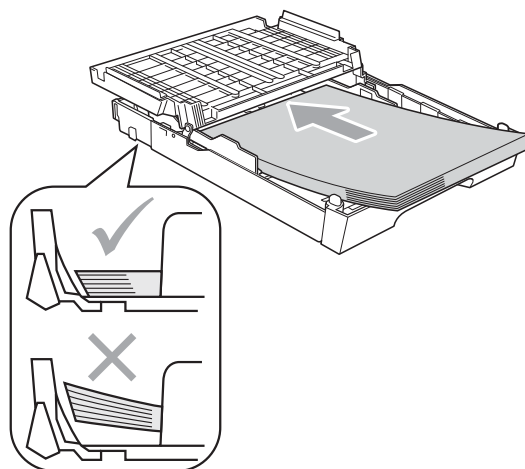


Note

When you put Photo L size into the paper tray, you need to release the hinges on both sides of the output paper tray cover, and push the cover over. And then slide the paper length guide.

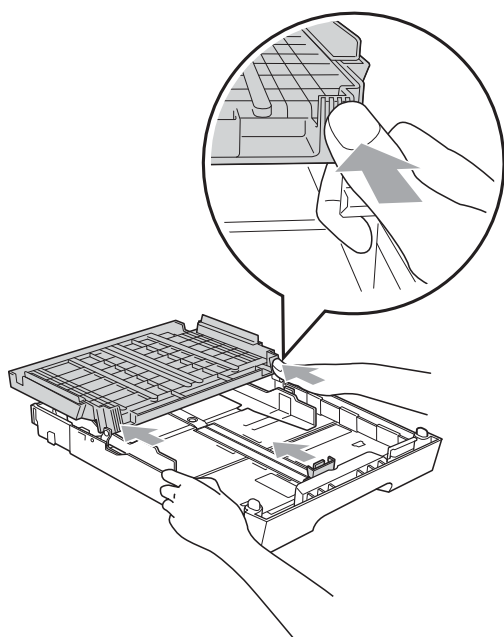


- 6 Gently adjust the paper side guides to the paper with both hands. Make sure the paper side guides touch the sides of the paper.

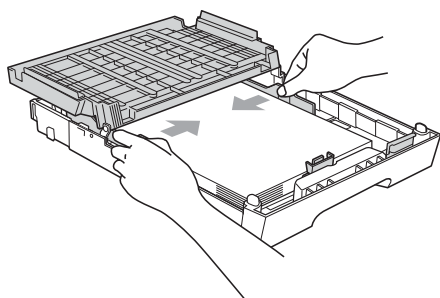


Note

Be careful that you do not push the paper in too far; it may lift at the back of the tray and cause feed problems.

- 7 Close the output paper tray cover. Check that the paper is flat in the tray and below the maximum paper mark (1). Overfilling the paper tray may cause paper jams.

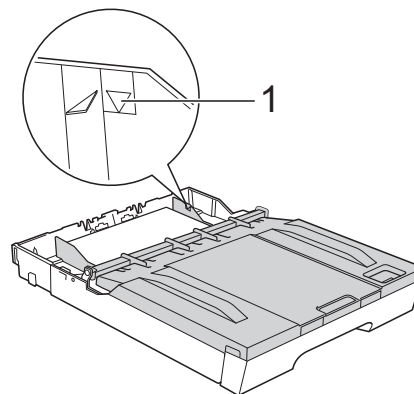


- 8 Slowly push the paper tray completely into the machine.

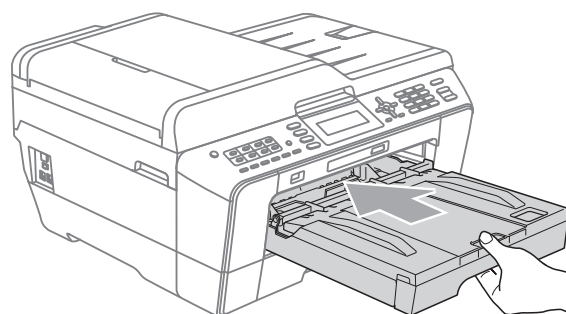

WARNING



DO NOT push Tray #1 into the machine too quickly. Doing this may cause injury to your hand by trapping it between Tray #1 and Tray #2. Please push Tray #1 slowly.

- 9 While holding the paper tray in place, pull out the paper support (1) until it clicks and unfold the paper support flap (2).

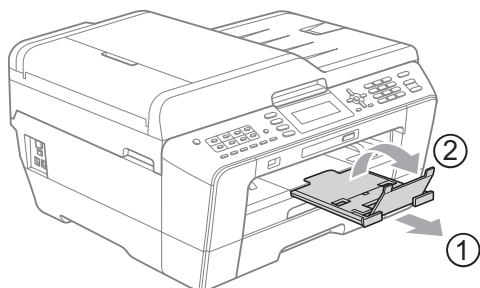

Note

Before you shorten Tray #1, take the paper out of the tray. Then shorten the tray by pressing the universal guide release button (1). Adjust the paper length guide (2) to fit the paper size you are going to use. Then put the paper into the tray.

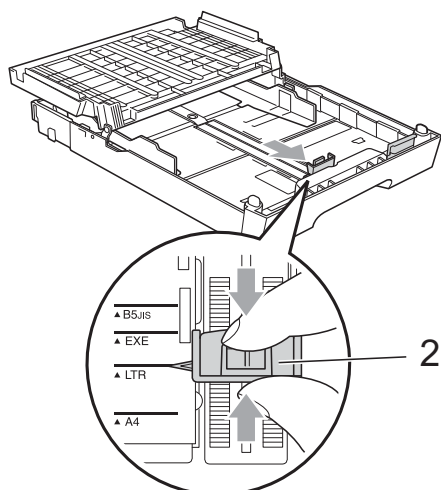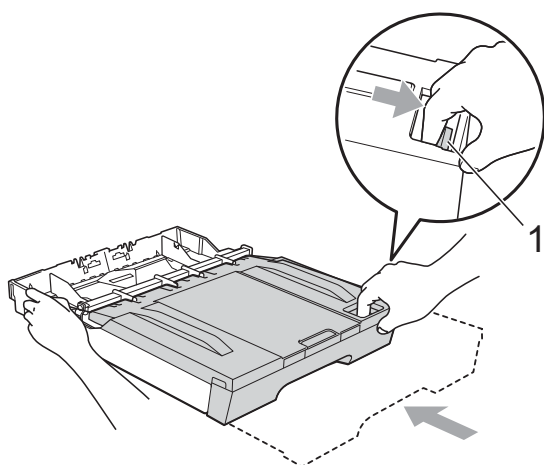


Loading paper in paper tray #2 (MFC-J6710DW only)

Note


- You can only use plain paper sizes A4, A3, Ledger, Letter or Legal in Tray #2.
- When you use the Borderless printing feature paper must be fed from Tray #1.

- 1 Pull the paper tray completely out of the machine.

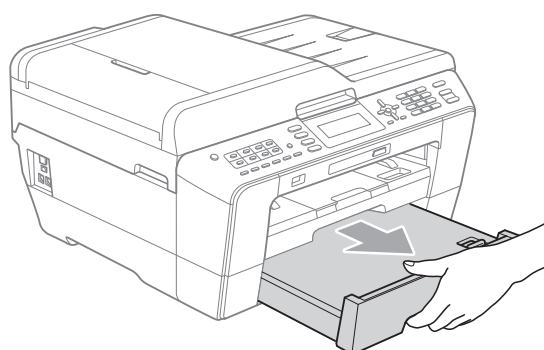


Note


- If you are using A3, Ledger or Legal size paper, press the universal guide release button (1) as you slide out the front of the paper tray until it clicks.
- You can check if the length of the tray is adjusted correctly by opening the paper tray cover.

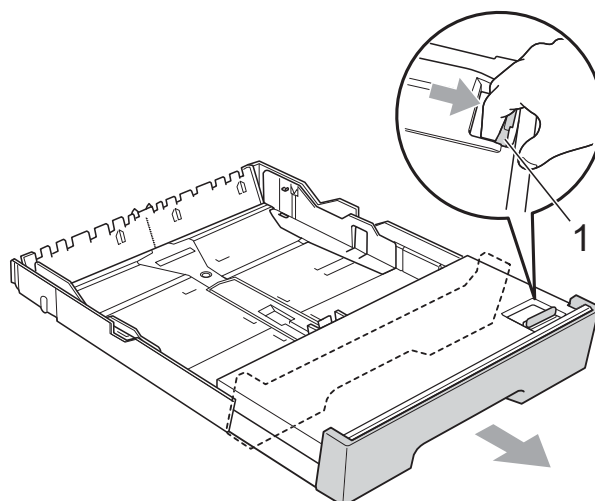

- 2 Open the paper tray cover (1).

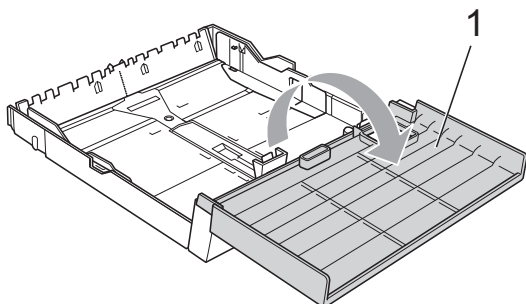

- 3 Using both hands, gently press and slide the paper length guide (1) and then the paper side guides (2) to fit the paper size. Make sure that the triangular marks (3) on the paper length guide (1) and paper side guides (2) line up with the marks for the paper size you are using.

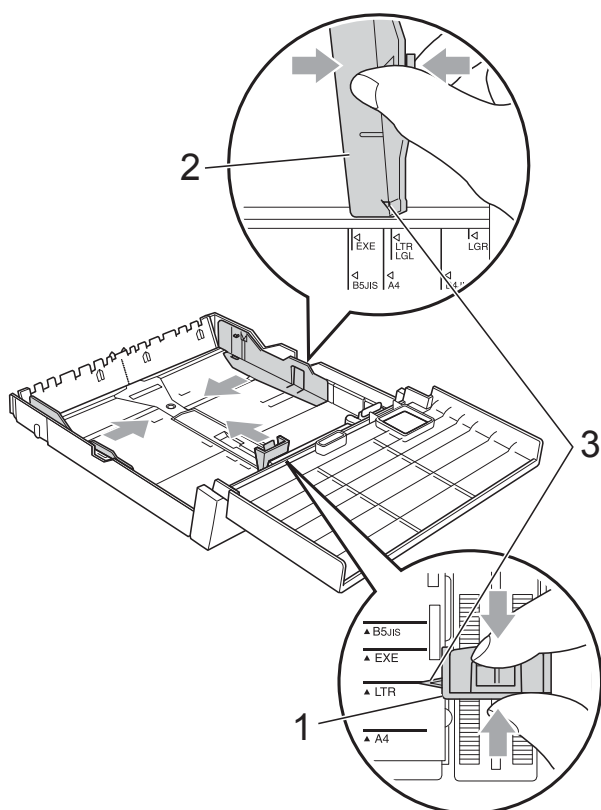


- 4 Fan the stack of paper well to avoid paper jams and misfeeds.





Note

Always make sure that the paper is not curled.

- 5 Gently put the paper into the paper tray print side down and top edge in first. Check that the paper is flat in the tray and below the maximum paper mark (1). Overfilling the paper tray may cause paper jams.

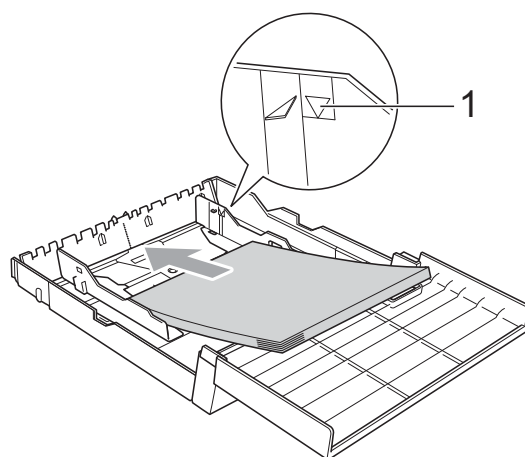


- 6 Using both hands, gently adjust the paper side guides so they touch the sides of the paper stack.

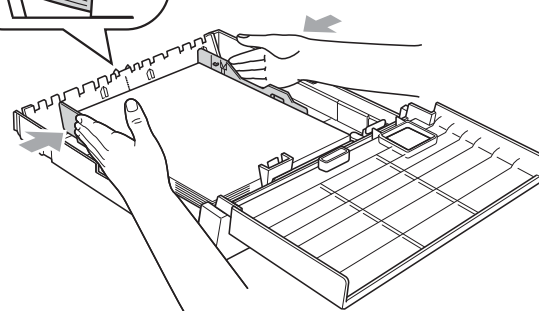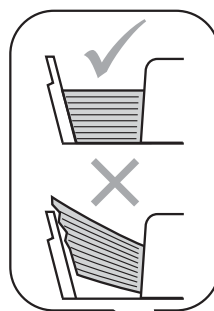


**Note**

Be careful that you do not push the paper in too far; it may lift at the back of the tray and cause feed problems.

- 7** Close the paper tray cover.

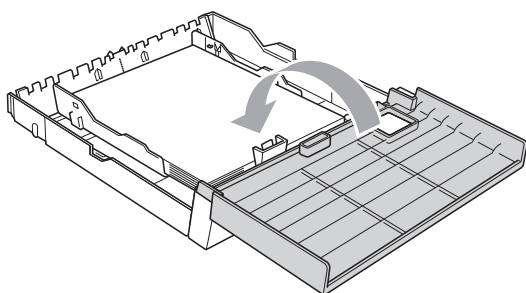

- 8** *Slowly* push the paper tray back into the machine.

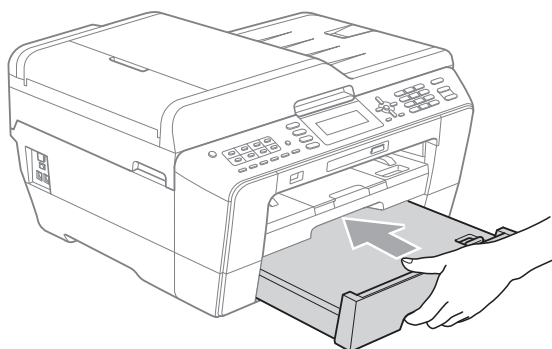

- 9** Do one of the following:



- If you are using A3, Ledger or Legal size paper, go to step **10**.

**Note**


When you are using large size paper in Tray #2, you may need to extend Tray #1 out over Tray #2 to prevent printed pages from falling off the output tray.

- If you are using A4 or Letter size paper, go to step **13**.


- 10** Pull tray #1 out of the machine. Press the universal guide release button (1) as you slide out the front of the paper tray.

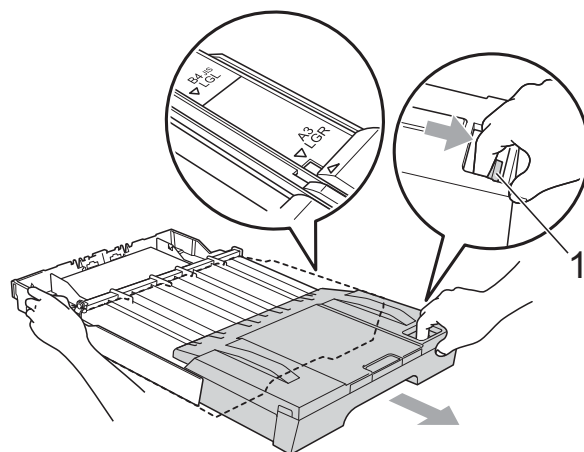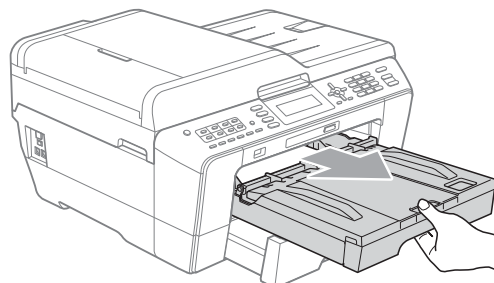


- 11** Open the output paper tray cover and adjust the paper length guide (1) for the paper.

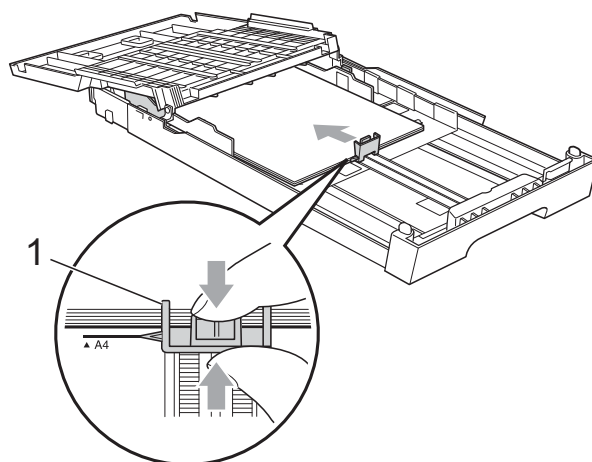

- 12** Close the output paper tray cover and *slowly* push the paper tray into the machine.


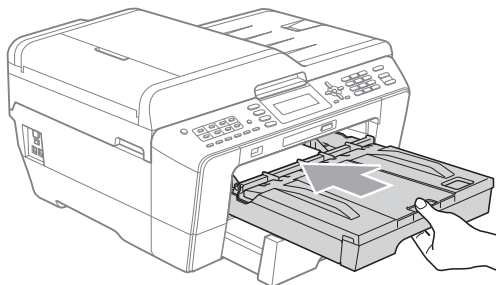


- 13** Pull out the paper support (1) until it clicks and unfold the paper support flap (2).

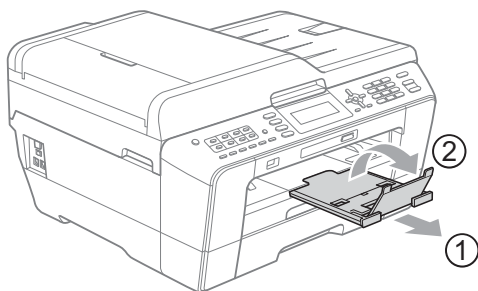

Note

If you are finished using A3, Ledger or Legal size paper and want to use a smaller paper size, take the paper out of the tray. Then shorten the tray by pressing the universal guide release button (1). Adjust the paper length guide (2) to fit the paper size you are going to use. Then put the smaller paper into the tray.

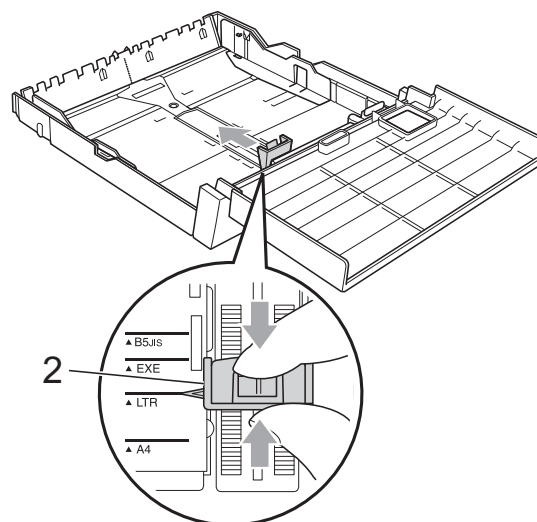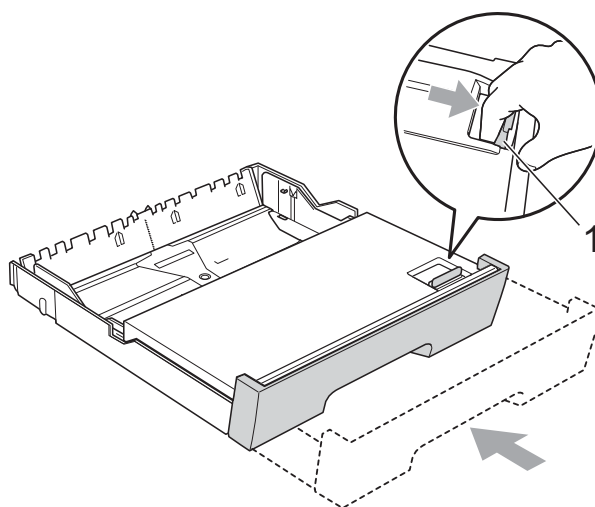


Loading paper in the manual feed slot

You can load special print media one at a time into this slot. Use the manual feed slot to print or copy on envelopes, labels or thicker paper.


Note

- The machine automatically turns on the Manual Feed mode when you put paper in the manual feed slot.
- When you use the Borderless printing feature paper must be fed from Tray #1.


- 1 Open the manual feed slot cover.

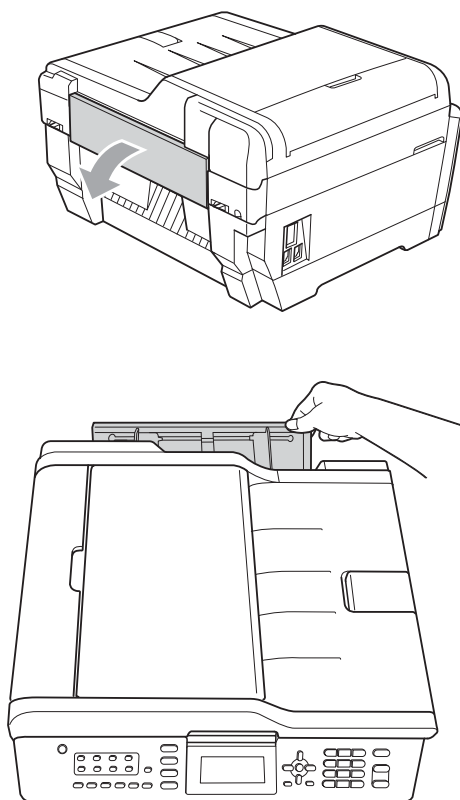

- 2 Slide the manual feed slot paper guides to fit the paper width that you are going to use.

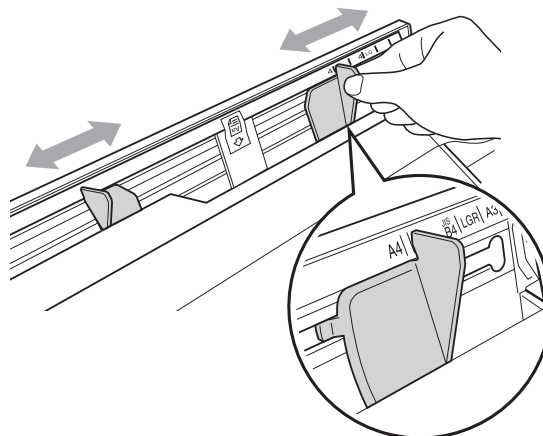


- 3 Put *only* one sheet of paper in the manual feed slot with the side to be printed *face up*.

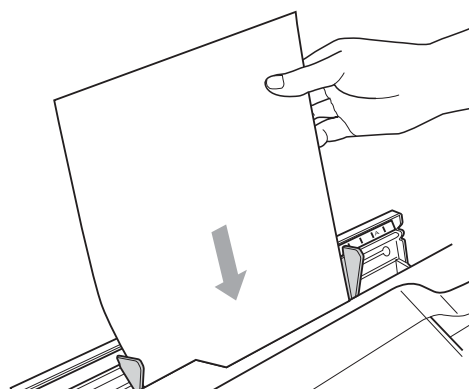

! IMPORTANT

- DO NOT put more than one sheet of paper in the manual feed slot at any time. Doing this may cause a paper jam. Wait until the LCD shows
Put paper in Manual Feed Slot
Then Press Start **before** you feed the next sheet of paper in the manual feed slot.
- DO NOT put paper in the manual feed slot when you are printing from Tray #1 or Tray #2. Doing this may cause a paper jam.


- 4 Using both hands gently adjust the manual feed slot paper guides to fit the paper.

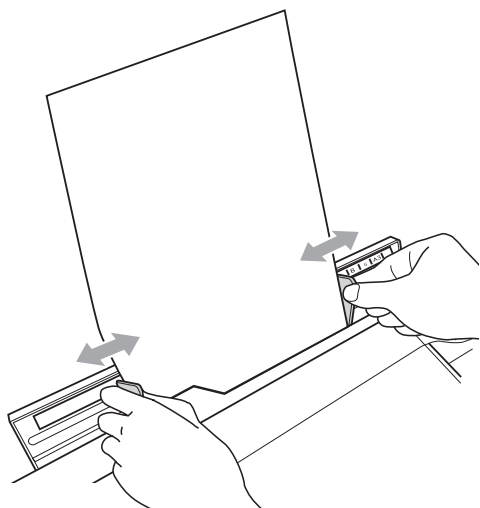

Note

- DO NOT press the paper guides too tightly against the paper. Doing this may cause the paper to fold.
- Place the paper in the centre of the manual feed slot between the paper guides. If the paper is not centred, pull it out and insert it again at the centre position.

- 5 Using both hands, put one sheet of paper in the manual feed slot until the front edge touches the paper feed roller and the machine beeps. Let go of the paper when you feel the machine feed the paper in a short distance. The LCD will show
Manual Feed Slot ready.

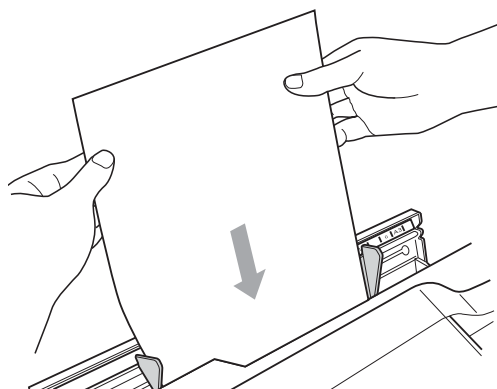

Note

When loading an envelope, or a sheet of thick paper, push the envelope into the manual feed slot until you feel it grab the envelope.

6

If the data does not fit on one page, the LCD will prompt you to load another page. Place another sheet of paper in the manual feed slot, and then press **Mono Start** or **Colour Start**.



Note

- Make sure printing has finished before you close the manual feed slot.
- When paper is placed in the manual feed slot, the machine always prints from the manual feed slot.
- Paper inserted in the manual feed slot while a test page, fax or report is being printed will be ejected.
- During the machine's cleaning process, paper you place in the manual feed slot will be ejected. Wait until the machine finishes its cleaning, and then put the paper into the manual feed slot again.

Loading envelopes and postcards



About envelopes

- Use envelopes that weigh between 80 to 95 g/m².
- Some envelopes need margin settings to be set in the application. Make sure you do a test print first before printing many envelopes.

! IMPORTANT

DO NOT use any of the following types of envelopes, as they will cause paper feed problems:

- That are of a baggy construction.
- That have windows.
- That are embossed (have raised writing on them).
- That have clasps or staples.
- That are pre-printed on the inside.

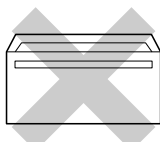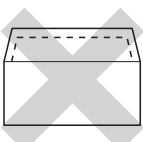Glue	Double flaps
	




Occasionally you may experience paper feed problems caused by the thickness, size and flap shape of the envelopes you are using.

Loading envelopes and postcards


- 1 Before loading, press the corners and sides of envelopes or postcards to make them as flat as possible.

! IMPORTANT

If envelopes or postcards are “double-feeding”, put one envelope or postcard in the paper tray at a time.

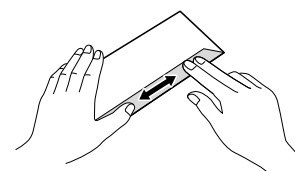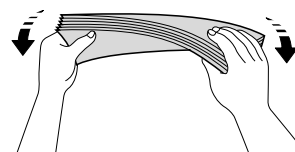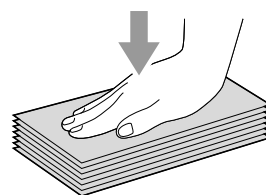


- 2 Put envelopes or postcards in the paper tray with the address side down and the leading edge (top of the envelopes) in first. Using both hands, gently press and slide the paper length guide (1) and paper side guides (2) to fit the size of the envelopes or postcards.

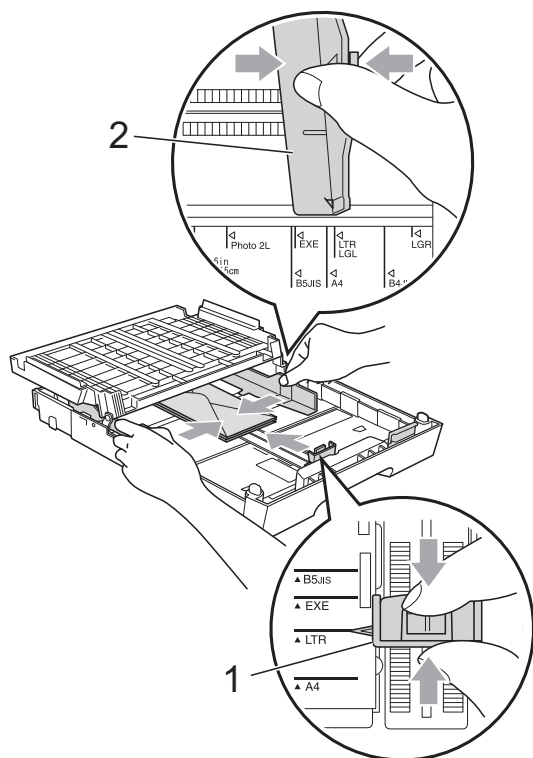

If you have problems when printing on envelopes, try the following suggestions:

- 1 Open the envelope flap.
- 2 Make sure the open flap is to the back edge of the envelope when printing.

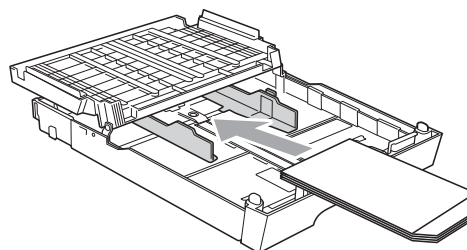


- 3 Adjust the size and margin in your application.


Printable area

The printable area depends on the settings in the application you are using. The figures below show the unprintable areas on cut sheet paper and envelopes. The machine can print in the shaded areas of cut sheet paper when the Borderless print feature is available and turned on. (See *Printing for Windows*[®] or *Printing and Faxing* for Macintosh in the *Software User's Guide*.)

Cut Sheet Paper

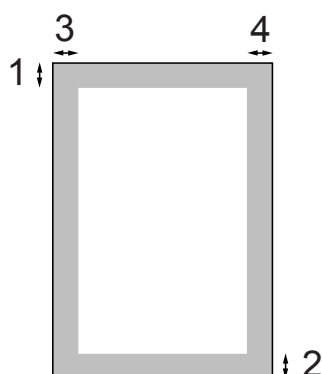

Envelopes

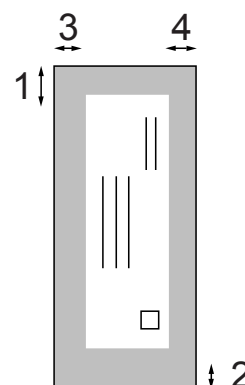

	Top (1)	Bottom (2)	Left (3)	Right (4)
Cut Sheet	3 mm	3 mm	3 mm	3 mm
Cut Sheet (Duplex print when using A3, Ledger or B4 size)	22 mm	22 mm	3 mm	3 mm
Envelopes	22 mm ¹	22 mm	3 mm	3 mm

¹ The top margin of Y4 envelopes is 12 mm.

Note

- The Borderless feature is not available for envelopes and duplex printing.
- When you use the Borderless printing feature paper must be fed from Tray #1.

Paper settings

Paper Size and Type (MFC-J6510DW)

Paper Type

To get the best print quality, set the machine for the type of paper you are using.

- 1 Press **Paper Setting**.
- 2 Press **▲** or **▼** to choose Paper Type.
- 3 Press **◀** or **▶** to choose Plain Paper, Inkjet Paper, Brother BP71, Brother BP61, Other Glossy or Transparency.
Press **OK**.
- 4 Press **▲** or **▼** to choose Complete.
Press **OK**.



Note

The machine ejects paper with printed surfaces face up onto the paper tray in front of the machine. When you use transparencies or glossy paper, remove each sheet at once to prevent smudging or paper jams.

Paper Size

You can use seven sizes of paper for printing copies: A4, A5, A3, 10 × 15 cm, Letter, Legal and Ledger and five sizes for printing faxes: A4, A3, Ledger, Letter and Legal. When you change the size of paper you load in the machine, you will need to change the paper size setting at the same time so your machine can fit an incoming fax on the page.

- 1 Press **Paper Setting**.
- 2 Press **▲** or **▼** to choose Paper Size.
- 3 Press **◀** or **▶** to choose A4, A5, A3, 10x15cm, Letter, Legal or Ledger.
Press **OK**.
- 4 Press **▲** or **▼** to choose Complete.
Press **OK**.

Paper Size and Type (MFC-J6710DW)

To get the best print quality, set the machine for the type of paper you are using.

You can use seven sizes of paper for printing copies: A4, A5, A3, 10 × 15 cm, Letter, Legal and Ledger and five sizes for printing faxes: A4, A3, Ledger, Letter and Legal. When you load a different size of paper in the machine, you will need to change the paper size setting at the same time so your machine can fit an incoming fax on the page.

- 1 Press **Tray Setting**.
- 2 Press ▲ or ▼ to choose Tray#1 or Tray#2.
Press **OK**.
- 3 Do one of the following:
 - If you chose Tray#1, press ▲ or ▼ to choose Paper Type and press ◀ or ▶ to choose Plain Paper, Inkjet Paper, Brother BP71, Brother BP61, Other Glossy or Transparency.
Press **OK**.

Press ▲ or ▼ to choose Paper Size and press ◀ or ▶ to choose A4, A5, A3, 10x15cm, Letter, Legal or Ledger.
Press **OK**.
 - If you chose Tray#2, press ▲ or ▼ to choose Paper Size and press ◀ or ▶ to choose A4, A3, Letter, Legal or Ledger.
Press **OK**.
- 4 Press ▲ or ▼ to choose Complete.
Press **OK**.
- 5 Press ▲ or ▼ to choose Complete.
Press **OK**.



Note

- You can only use plain paper and paper sizes A3, A4, Ledger, Letter or Legal in Tray#2.
- The machine ejects paper with printed surfaces face up onto the paper tray in front of the machine. When you use transparencies or glossy paper, remove each sheet at once to prevent smudging or paper jams.

Tray use in Copy mode (MFC-J6710DW only)

You can change the default tray the machine will use for printing copies.

Auto Select will allow your machine to feed paper from either Tray #1 or Tray #2, using the paper type and size settings from the **COPY** key menu.

To change the default setting follow the instructions below:

- 1 Press **Tray Setting**.
- 2 Press ▲ or ▼ to choose Tray Use:Copy.
- 3 Press ◀ or ▶ to choose Tray#1, Tray#2 or Auto Select.
Press **OK**.
- 4 Press ▲ or ▼ to choose Complete.
Press **OK**.



Note

You can change the paper size and tray selection temporarily for the next copy. (See *Paper Size* on page 56 and *Tray Select (MFC-J6710DW only)* on page 56.)

Tray use in Fax mode (MFC-J6710DW only)

You can change the default tray the machine will use for printing received faxes.

`Auto Select` will allow your machine to take paper from Tray #1 first, or from Tray #2 if:

- Tray #2 is set to a different paper size that is more suitable for the received faxes.
- Both trays are using the same size paper and Tray #1 is not set to use plain paper.

- 1 Press **Tray Setting**.
- 2 Press ▲ or ▼ to choose `Tray Use:Fax`.
- 3 Press ◀ or ▶ to choose `Tray#1`, `Tray#2` or `Auto Select`. Press **OK**.
- 4 Press ▲ or ▼ to choose `Complete`. Press **OK**.

Secure Paper Feed mode for A3 size Short Grain Paper

If your prints have horizontal lines when using A3 paper, your paper may be long grain paper. Set `A3 - Short Grain` to `Off` to avoid this problem.

- 1 Press **Menu**.
- 2 Press ▲ or ▼ to choose `General Setup`. Press **OK**.
- 3 Press ▲ or ▼ to choose `A3 - Short Grain`.
- 4 Press ◀ or ▶ to choose `Off`. Press **OK**.
- 5 Press **Stop/Exit**.



Note

- If you are not sure about the type of paper you are using, consult the paper packaging or manufacturer for paper specifications.
- Printing will be slower when using the `A3 - Short Grain` setting `On`.

Acceptable paper and other print media

The print quality can be affected by the type of paper you use in the machine.

To get the best print quality for the settings you have chosen, always set the Paper Type to match the type of paper you load.

You can use plain paper, inkjet paper (coated paper), glossy paper, transparencies and envelopes.

We recommend testing various paper types before buying large quantities.

For best results, use Brother paper.

- When you print on inkjet paper (coated paper), transparencies and glossy paper, be sure to choose the correct print media in the “**Basic**” tab of the printer driver or in the Paper Type setting of the menu. (See *Paper Type* on page 22.)
- When you print on Brother Photo paper, load one extra sheet of the same photo paper in the paper tray. An extra sheet has been included in the paper package for this purpose.
- When you use transparencies or photo paper, remove each sheet at once to prevent smudging or paper jams.
- Avoid touching the printed surface of the paper immediately after printing; the surface may not be completely dry and may stain your fingers.

Recommended print media

To get the best print quality, we suggest using Brother paper. (See the table below.)

If Brother paper is not available in your country, we recommend testing various papers before purchasing large quantities.

We recommend using “3M Transparency Film” when you print on transparencies.

Brother paper

Paper Type	Item
A3 Plain	BP60PA3
A3 Glossy Photo	BP71GA3
A3 Inkjet (Matte)	BP60MA3
A4 Plain	BP60PA
A4 Glossy Photo	BP71GA4
A4 Inkjet (Matte)	BP60MA
10 × 15 cm Glossy Photo	BP71GP


Handling and using print media

- Store paper in its original packaging, and keep it sealed. Keep the paper flat and away from moisture, direct sunlight and heat.
- Avoid touching the shiny (coated) side of photo paper. Load photo paper with the shiny side facing down.
- Avoid touching either side of transparencies because they absorb water and perspiration easily, and this may cause decreased output quality. Transparencies designed for laser printers/copiers may stain your next document. Use only transparencies recommended for inkjet printing.

! IMPORTANT

DO NOT use the following kinds of paper:

- Damaged, curled, wrinkled, or irregularly shaped paper

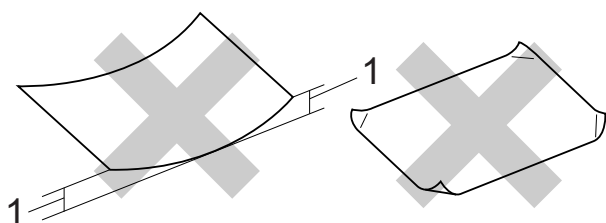

1 2 mm or greater curl may cause jams to occur.


- Extremely shiny or highly textured paper
- Paper that cannot be arranged uniformly when stacked
- Short grain paper

Labels

Labels should be arranged so that they cover the entire length and width of the sheet. Using labels with spaces may result in labels peeling off and causing serious jams or print problems.

Types of labels to avoid

Do not use labels that are damaged, curled, wrinkled or an unusual shape.

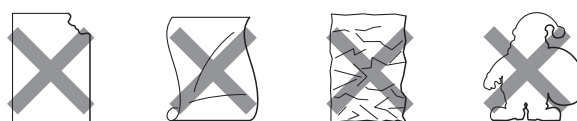

! IMPORTANT

- DO NOT feed part used label sheets. The exposed carrier sheet will damage your machine.
- DO NOT reuse or insert labels that have previously been used or are missing few labels on the sheet.

Paper capacity of the output paper tray cover

Up to 50 sheets of 80 g/m² A4 paper.

- Transparencies and photo paper must be picked up from the output paper tray cover one page at a time to avoid smudging.

Choosing the right print media

Paper type and size for each operation

Paper Type	Paper Size		Usage			
			Fax	Copy	Photo Capture	Printer
Cut Sheet	A3	297 × 420 mm (11.7 × 16.5 in.)	Yes	Yes	Yes	Yes
	A4	210 × 297 mm (8.3 × 11.7 in.)	Yes	Yes	Yes	Yes
	Ledger	279.4 × 431.8 mm (11 × 17 in.)	Yes	Yes	Yes	Yes
	Letter	215.9 × 279.4 mm (8 1/2 × 11 in.)	Yes	Yes	Yes	Yes
	Legal	215.9 × 355.6 mm (8 1/2 × 14 in.)	Yes	Yes	–	Yes
	Executive	184 × 267 mm (7 1/4 × 10 1/2 in.)	–	–	–	Yes
	JIS B4	257 × 364 mm (10.1 × 14.3 in.)	–	–	–	User Defined
	JIS B5	182 × 257 mm (7.2 × 10.1 in.)	–	–	–	User Defined
	A5	148 × 210 mm (5.8 × 8.3 in.)	–	Yes	–	Yes
	A6	105 × 148 mm (4.1 × 5.8 in.)	–	–	–	Yes
Cards	Photo	10 × 15 cm (4 × 6 in.)	–	Yes	Yes	Yes
	Photo L	89 × 127 mm (3 1/2 × 5 in.)	–	–	–	Yes
	Photo 2L	13 × 18 cm (5 × 7 in.)	–	–	Yes	Yes
	Index Card	127 × 203 mm (5 × 8 in.)	–	–	–	Yes
	Postcard 1	100 × 148 mm (3.9 × 5.8 in.)	–	–	–	User Defined
	Postcard 2 (Double)	148 × 200 mm (5.8 × 7.9 in.)	–	–	–	User Defined
Envelopes	C5 Envelope	162 × 229 mm (6.4 × 9 in.)	–	–	–	Yes
	DL Envelope	110 × 220 mm (4.3 × 8.7 in.)	–	–	–	Yes
	COM-10	105 × 241 mm (4 1/8 × 9 1/2 in.)	–	–	–	Yes
	Monarch	98 × 191 mm (3 7/8 × 7 1/2 in.)	–	–	–	Yes
	Y4 Envelope	105 × 235 mm (4.1 × 9.3 in.)	–	–	–	Yes
Transparencies	A4	210 × 297 mm (8.3 × 11.7 in.)	–	Yes	–	Yes
	Letter	215.9 × 279.4 mm (8 1/2 × 11 in.)	–	Yes	–	Yes
	Legal	215.9 × 355.6 mm (8 1/2 × 14 in.)	–	Yes	–	Yes
	A5	148 × 210 mm (5.8 × 8.3 in.)	–	Yes	–	Yes
Labels ¹			–	–	–	User Defined

¹ Manual Feed Slot only

Paper capacity of the paper trays

	Paper size	Paper types	No. of sheets
Tray #1	A4, Ledger, A3, Legal, Executive, Letter, A5, A6, JIS B4, JIS B5, Envelopes (commercial No.10, DL, C5, Monarch, Y4), Photo, Photo L, Photo 2L, Index Card, Postcard 1, Postcard 2	Plain Paper	250 ¹
		Inkjet Paper	20
		Glossy Paper, Photo	20
		Index Card, Postcard	30
		Envelopes, Transparencies	10
Tray #2 (MFC-J6710DW only)	A4, Ledger, A3, Legal, Executive, Letter, JIS B4, JIS B5	Plain Paper	250 ¹
Manual Feed Slot	A4, Ledger, A3, Legal, Executive, Letter, A5, A6, JIS B4, JIS B5, Envelopes (commercial No.10, DL, C5, Monarch, Y4), Photo, Photo L, Photo 2L, Index Card, Postcard 1, Postcard 2	Plain Paper, Inkjet Paper, Glossy Paper, Envelopes, Transparencies and Labels	1

¹ Up to 250 sheets of 80 g/m² paper.

Paper weight and thickness

Paper Type		Weight	Thickness
Cut Sheet	Plain Paper	64 to 120 g/m ²	0.08 to 0.15 mm
	(Tray #2) Plain Paper	64 to 105 g/m ²	0.08 to 0.15 mm
	Inkjet Paper	64 to 200 g/m ²	0.08 to 0.25 mm
	Glossy Paper ¹	Up to 220 g/m ²	Up to 0.25 mm
Cards	Photo Card ¹	Up to 220 g/m ²	Up to 0.25 mm
	Index Card	Up to 120 g/m ²	Up to 0.15 mm
	Postcard 1 Postcard 2	Up to 200 g/m ²	Up to 0.25 mm
Envelopes		75 to 95 g/m ²	Up to 0.52 mm
Transparencies		—	—
Labels		—	—

¹ BP71 (260 g/m²) paper is especially designed for Brother inkjet machines.

How to load documents

You can send a fax, make copies, and scan from the ADF (automatic document feeder) and from the scanner glass.

Using the ADF

The ADF can hold up to 35 pages and feeds each sheet individually. Use standard 80 g/m² paper and always fan the pages before putting them in the ADF.

Document Sizes Supported

Recommended Paper: 80 g/m² A4

Length:	148 to 431.8 mm
Width:	148 to 297 mm
Weight:	64 to 90 g/m ²


How to load documents

! IMPORTANT


- DO NOT pull on the document while it is feeding.
- DO NOT use paper that is curled, wrinkled, folded, ripped, stapled, paper clipped, pasted or taped.
- DO NOT use cardboard, newspaper or fabric.

Make sure documents written with ink are completely dry.

- 1 Unfold the ADF Document Support (1) and the ADF Document Output Support Flap (2).

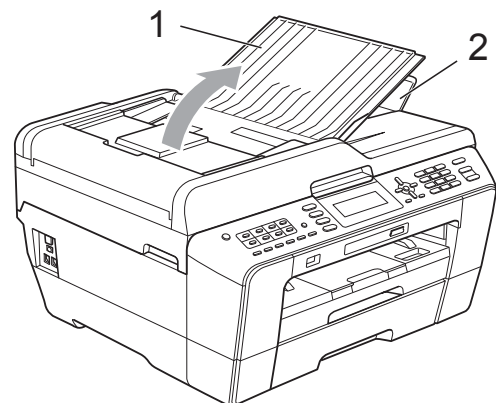

- 2 Fan the pages well.
- 3 Adjust the paper guides (1) to fit the width of your documents.

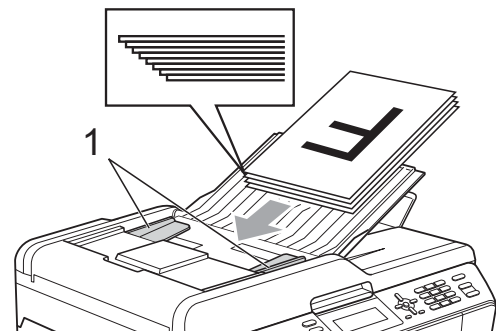

- 4 Place your documents, **face up, top edge first** in the ADF until you feel them touch the feed rollers.

! IMPORTANT

DO NOT leave thick documents on the scanner glass. If you do this, the ADF may jam.

Using the scanner glass

You can use the scanner glass to fax, copy or scan pages of a book or one page at a time.

Document Sizes Supported

Length:	Up to 431.8 mm
Width:	Up to 297 mm
Weight:	Up to 2 kg



How to load documents



Note

To use the scanner glass, the ADF must be empty.

- 1 Lift the document cover.
- 2 Using the document guidelines on the left and top, place the document **face down** in the upper left corner of the scanner glass.

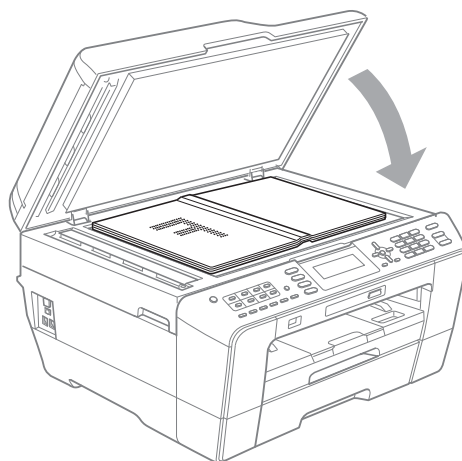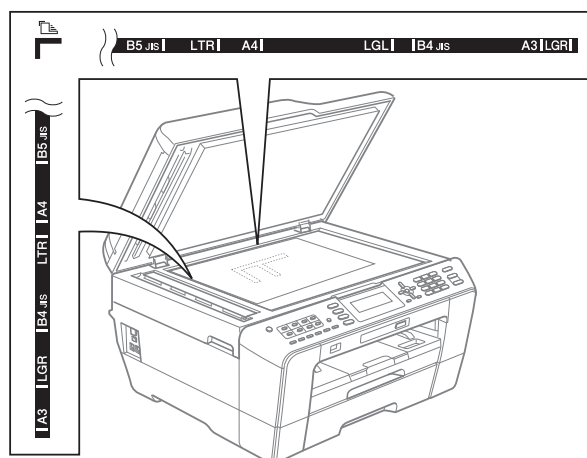

- 3 Close the document cover.




IMPORTANT

If you are scanning a book or thick document, DO NOT slam the cover down or press on it.

Scannable area

The scannable area depends on the settings in the application you are using. The figures below show unscannable areas.

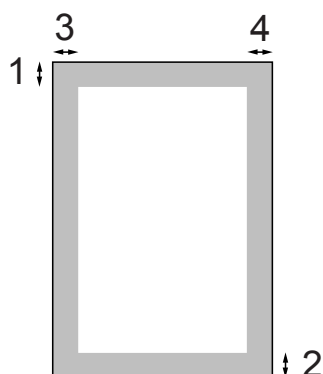

Usage	Document Size	Top (1) Bottom (2)	Left (3) Right (4)
Fax	A3	3 mm	4.5 mm
	A4	3 mm	3 mm ¹
	Ledger	3 mm	3.7 mm
	Letter	3 mm	4 mm
	Legal		
Copy	All paper sizes	3 mm	3 mm
Scan			

¹ The unscannable area is 1 mm when you use the ADF.


4

Sending a fax


How to send a fax

The following steps show how to send a fax.

- 1 When you want to send a fax, or change fax send or receive settings, press the  (**FAX**) key to illuminate it in blue.

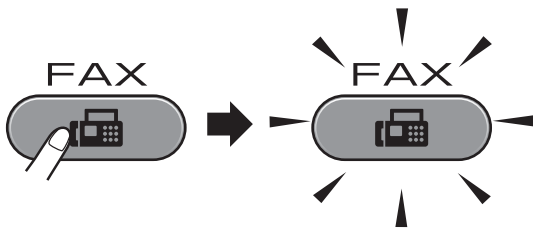

■ The LCD shows:

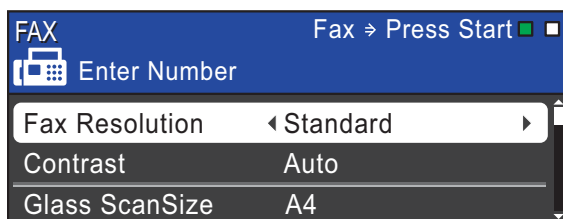

- 2 Do one of the following to load your document:
 - Place the document *face up* in the ADF. (See *Using the ADF* on page 29.)
 - Load your document *face down* on the scanner glass. (See *Using the scanner glass* on page 30.)



Note

- To send colour faxes with multiple pages use the ADF.
- If you send a mono fax from the ADF when the memory is full it will be sent in real time.
- You can use the scanner glass to fax pages of a book one at a time. The documents can be up to A3 or Ledger size.
- Since you can only scan one page at a time, it is easier to use the ADF if you are sending a multiple page document.

- 3 You can change the following fax sending settings. Press **FAX** and then press ▲ or ▼ to scroll through the fax settings. When the setting you want is highlighted, then press ◀ or ▶ to choose your option, and press **OK**.

(Basic User's Guide)

For details changing the following fax sending settings, see pages 33 to 35.

- Glass ScanSize
- Colour Fax Transmission
- Preview Outgoing Fax
- Transmission Verification Report (Setup)

(Advanced User's Guide)

For more advanced fax sending operations and settings, see Chapter 3 *Sending a fax* in the *Advanced User's Guide*:

- Contrast
- Fax Resolution
- Set New Defaults
- Factory Reset
- Faxing at End of Call
- Broadcasting
- Real Time TX
- Overseas Mode
- Delayed Fax
- Batch TX
- Canceling Waiting Jobs
- Polled Transmit

- 4 Enter the fax number.

Using the dial pad

Using the Phone Book

- Phone Book

Using call history

- Outgoing Call
- Caller ID hist.



Note

You can preview a fax message before sending it by setting `Fax Preview` to `ON`. (See *How to preview an outgoing fax* on page 34.)

- 5 Press **Mono Start** or **Colour Start**.

Faxing from the ADF

- The machine starts scanning the document.

Faxing from the scanner glass

- When you press **Mono Start**, the machine starts scanning the first page.

Do one of the following:

- To send a single page, press **2** to choose `No (Send)` (or press **Mono Start** again).

The machine starts sending the document.

- To send more than one page, press **1** to choose `Yes` and place the next page on the scanner glass. Press **OK**. The machine starts scanning the page. (Repeat this step for each additional page.)

- If you press **Colour Start**, the machine starts sending the document.

Stop faxing

To stop faxing, press **Stop/Exit**.

Setting scanner glass size for faxing

When documents are Letter size, you need to set `Scan Size` to `Letter`. If you do not, the side portion of the faxes will be missing.

- 1 Press  (**FAX**).
- 2 Press **▲** or **▼** to choose `Glass ScanSize`.
- 3 Press **◀** or **▶** to choose `A4`, `A3`, `Letter`, `Legal` or `Ledger`. Press **OK**.



Note

- You can save the setting you use most often by setting it as default. (See *Setting your changes as a new default* in chapter 3 of the *Advanced User's Guide*.)
- This setting is only available for sending documents from the scanner glass.

Colour fax transmission

Your machine can send a colour fax to machines that support this feature.

Colour faxes cannot be stored in the memory. When you send a colour fax, the machine will send it in real time (even if `Real Time TX` is set to `Off`).

Cancelling a fax in progress

If you want to cancel a fax while the machine is scanning, dialling or sending, press **Stop/Exit**.

How to preview an outgoing fax

You can preview a fax message before you send it. You must set the Real Time Transmission and Polling RX to **Off** before you use this feature.

- 1 Press  (**FAX**).
- 2 Load the document.
- 3 Enter the fax number using the dial pad, One Touch or Speed Dial.
- 4 Press **Fax Preview**.
The machine starts scanning the document and the outgoing fax appears on the LCD. When the fax is open the control panel keys will perform the operations shown below.

Key	Description
	Enlarge the fax.
	Reduce the fax.
▲ or ▼	Scroll vertically.
◀ or ▶	Scroll horizontally.
	Rotate the fax clockwise.
	Go back to the previous page.
	Go to the next page.



Note

If you preview a colour fax before it is sent, you will only be able to send it in black & white. To send a colour fax do not press the **Fax Preview** key.

- 5 Press **Mono Start**.



Note

The fax message in the memory will be sent and then erased when you press **Mono Start**.

Transmission Verification Report

You can use the Transmission Verification Report as proof that you sent a fax. This report lists the sender's name or fax number, the time and date of transmission, duration of transmission, number of pages sent, and whether or not the transmission was successful.

There are several settings available for the Transmission Verification Report:

- **On**: Prints a report after every fax you send.
- **On+Image**: Prints a report after every fax you send. A portion of the fax's first page appears on the report.
- **Off**: Prints a report if your fax is unsuccessful due to a transmission error. The report will also print if the receiving machine modifies the size of the document you fax. **Off** is the default setting.
- **Off+Image**: Prints a report if your fax is unsuccessful due to a transmission error. The report will also print if your fax is successful, but the receiving machine modifies the size of the document you fax. A portion of the fax's first page appears on the report.
- **Off2**: Prints a report *only* if your fax is unsuccessful due to a transmission error.
- **Off2+Image**: Prints a report *only* if your fax is unsuccessful due to a transmission error. A portion of the fax's first page appears on the report.

- 1 Press **Menu**.
- 2 Press ▲ or ▼ to choose **Fax**.
Press **OK**.
- 3 Press ▲ or ▼ to choose
Report Setting.
Press **OK**.
- 4 Press ▲ or ▼ to choose **XMIT Report**.
- 5 Press ◀ or ▶ to choose **On, On+Image,**
Off, Off+Image, Off2 or
Off2+Image.
Press **OK**.
- 6 Press **Stop/Exit**.

**Note**

- If you choose **On+Image, Off+Image or Off2+Image** the image will only appear on the Transmission Verification Report if Real Time Transmission is set to Off. (See *Real Time Transmission* in chapter 3 of the *Advanced User's Guide*.)
- If your transmission is successful, "OK" will appear next to "RESULT" on the Transmission Verification Report. If transmission is not successful, "ERROR" will appear next to "RESULT".

5

Receiving a fax


Receive Modes

You must choose a receive mode depending on the external devices and telephone services you have on your line.

Choose the Receive Mode

By default, your machine will automatically receive any faxes that are sent to it. The diagram below will help you choose the correct mode.

For more detailed information on the receive modes, see *Using Receive Modes* on page 37.

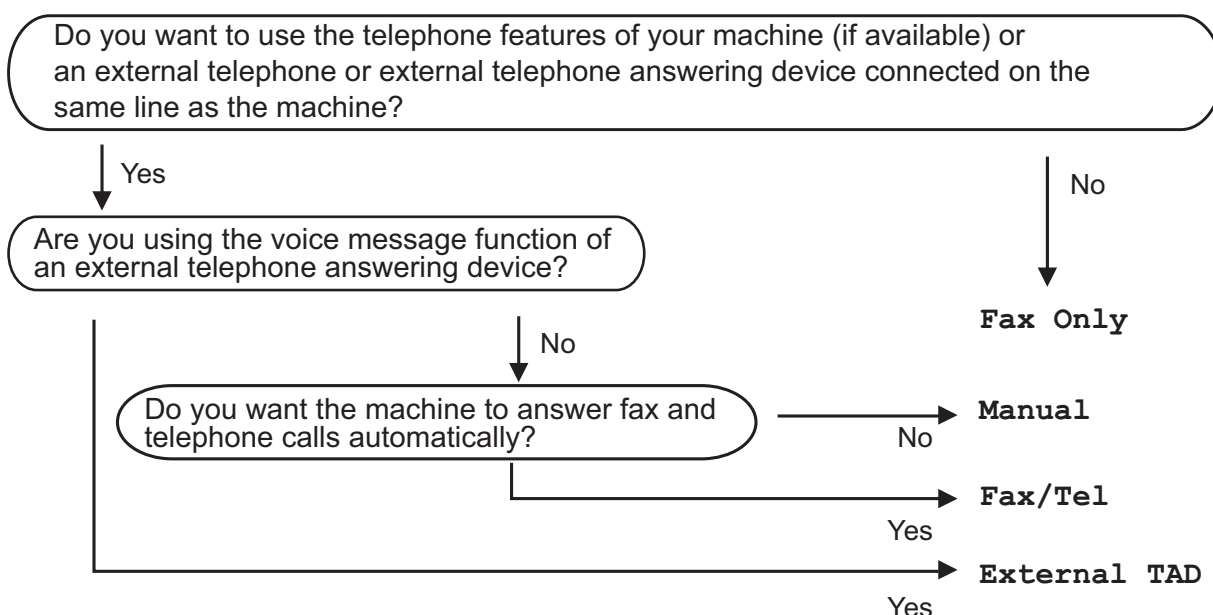

To set a receive mode follow the instructions below:

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to choose `Initial Setup`. Press **OK**.
- 3 Press **▲** or **▼** to choose `Receive Mode`.
- 4 Press **◀** or **▶** to choose `Fax Only`, `Fax/Tel`, `External TAD` or `Manual`. Press **OK**.
- 5 Press **Stop/Exit**.
The LCD will display the current receive mode.

Using Receive Modes

Some receive modes answer automatically (**Fax Only** and **Fax/Tel**). You may want to change the ring delay before using these modes. (See *Ring Delay* on page 38.)

Fax Only

Fax Only mode will automatically answer every call as a fax call.

Fax/Tel

Fax/Tel mode helps you automatically manage incoming calls, by recognising whether they are fax or voice calls and dealing with them in one of the following ways:

- Faxes will be automatically received.
- Voice calls will start the F/T Ring to tell you to pick up the line. The F/T Ring is a fast double-ring made by your machine.

(Also see *F/T Ring Time (Fax/Tel mode only)* on page 38 and *Ring Delay* on page 38.)

Manual

Manual mode turns off all automatic answering functions unless you are using the BT Call Sign feature.

To receive a fax in manual mode lift the handset of an external telephone. When you hear fax tones (short repeating beeps), press **Mono Start** or **Colour Start** and choose **Receive**. You can also use the Fax Detect feature to receive faxes by lifting a handset on the same line as the machine.

(Also see *Fax Detect* on page 39.)

External TAD

External TAD mode lets an external answering device manage your incoming calls. Incoming calls will be dealt with in one of the following ways:

- Faxes will be automatically received.
- Voice callers can record a message on the external TAD.

(For more information see *Connecting an external TAD (telephone answering device)* on page 44.)

Receive Mode settings

Ring Delay

The Ring Delay sets the number of times the machine rings before it answers in **Fax Only** or **Fax/Tel** mode. If you have external or extension telephones on the same line as the machine choose the maximum number of rings.

(See *Operation from external and extension telephones* on page 46 and *Fax Detect* on page 39.)

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to choose **Fax**. Press **OK**.
- 3 Press **▲** or **▼** to choose **Setup Receive**. Press **OK**.
- 4 Press **▲** or **▼** to choose **Ring Delay**.
- 5 Press **◀** or **▶** to choose how many times the line rings before the machine answers. Press **OK**.
If you choose 0, the line will not ring at all.
- 6 Press **Stop/Exit**.

F/T Ring Time (Fax/Tel mode only)

When somebody calls your machine, you and your caller will hear the normal telephone ring sound. The number of rings is set by the ring delay setting.

If the call is a fax, then your machine will receive it; however, if it is a voice call the machine will sound the F/T Ring (a fast double-ring) for the time you have set in the F/T Ring Time setting. If you hear the F/T Ring it means that you have a voice caller on the line.

Because the F/T Ring is made by the machine, extension and external telephones will *not* ring; however, you can still answer the call on any telephone. (For more information see *Using remote codes* on page 47.)

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to choose **Fax**. Press **OK**.
- 3 Press **▲** or **▼** to choose **Setup Receive**. Press **OK**.
- 4 Press **▲** or **▼** to choose **F/T Ring Time**.
- 5 Press **◀** or **▶** to choose how long the machine will ring to alert you that you have a voice call (20, 30, 40 or 70 seconds). Press **OK**.
- 6 Press **Stop/Exit**.



Note

Even if the caller hangs up during the fast double-ring, the machine will continue to ring for the set time.

Fax Detect

If Fax Detect is On:

The machine receives a fax call automatically, even if you answer the call. When you see **Receiving** on the LCD or when you hear “chirps” through the handset you are using, just replace the handset. Your machine will do the rest.

If Fax Detect is Off:

If you are at the machine and answer a fax call by lifting the handset, press **Mono Start** or **Colour Start**, then press **2** to receive the fax.

If you answered at an extension or external telephone, press * **5 1**. (See *Operation from external and extension telephones* on page 46.)



Note

- If this feature is set to **On**, but your machine does not connect a fax call when you lift an extension or external telephone handset, press the remote activation code * **5 1**.
- If you send faxes from a computer on the same telephone line and the machine intercepts them, set Fax Detect to **Off**.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to choose **Fax**. Press **OK**.
- 3 Press **▲** or **▼** to choose **Setup Receive**. Press **OK**.
- 4 Press **▲** or **▼** to choose **Fax Detect**.
- 5 Press **◀** or **▶** to choose **On** (or **Off**). Press **OK**.
- 6 Press **Stop/Exit**.

Fax Preview (Monochrome only)

How to preview a received fax

You can view received faxes on the LCD by pressing the **Fax Preview** key. When the machine is in Ready mode, a popup message will appear on the LCD to alert you of new faxes.

Setting Fax Preview

- 1 Press **Fax Preview**.
- 2 Press **1** to choose **Yes**.
The LCD asks you again to confirm because faxes will viewed instead of automatically printed.
Press **1** to choose **OK**.



Note

- When Fax Preview is turned on, a backup copy of received faxes will not be printed for Fax Forwarding and PC-Fax Receiving operations, even if you have set Backup Print to **On**.
- Fax Preview is not available when Fax Forwarding is turned on.

Using Fax Preview

When you receive a fax, you will see the pop-up message on the LCD. (For example:

New Fax(es) : 02)

- 1 Press **Fax Preview**.
You can see the new fax list.

Note

- If you receive a fax containing multiple paper sizes (for example, a page of A4 data and a page of A3 data), the machine may create and store a file for each paper size. The LCD may show that more than one fax job has been received.
- You can also see your old fax list by pressing *. Press # to go back to your new fax list.

- 2 Press ▲ or ▼ to choose the fax you want to see.
Press **OK**.

Note

- If your fax is large there may be a delay before it is displayed on the LCD.
- The LCD will show the current page number and total pages of the fax message. When your fax message is over 99 pages the total number of pages will be shown as "XX".

- 3 Press **Stop/Exit**.

When a fax is open the control panel keys will perform the operations shown below.

Key	Description
	Enlarge the fax.
	Reduce the fax.
▲ or ▼	Scroll vertically.
◀ or ▶	Scroll horizontally.
	Rotate the fax clockwise.
	Delete the fax. Press 1 to confirm.
	Go back to the previous page.
	Go to the next page.
	Go to the next step. (Print, Back and Exit are available.)
Clear 	Go back to the fax list.
 Mono Start	Print the fax. Do one of the following: ■ Press 1 to print the whole message. ■ Press 2 to print only the displayed page. ■ Press 3 to print from the displayed page. (After printing, you can choose to delete or re-print the fax.)

How to delete all faxes in the list

- 1 Press **Fax Preview**.
- 2 Press ▲ or ▼ to choose `Delete All`.
Press **OK**.
Press 1 to confirm.
- 3 Press **Stop/Exit**.

How to print all faxes in the list

- 1 Press **Fax Preview**.
- 2 Press ▲ or ▼ to choose `Print All`.
Press **OK**.
- 3 Press **Stop/Exit**.

Voice operations

Tone or Pulse

If you have a Pulse dialling service, but need to send tone signals (for example, for telephone banking), follow the instructions below:

- 1 Pick up the handset of the external telephone.
- 2 Press **#** on the machine's control panel. Any digits dialled after this will send tone signals.

When you hang up, the machine will return to the Pulse dialling service.

Fax/Tel mode

When the machine is in Fax/Tel mode, it will use the F/T Ring (fast double-ring) to alert you to pick up a voice call.

If you are at an external telephone, lift the handset of the external telephone, and then press **Tel/R** to answer.

If you are at an extension telephone, you'll need to lift the handset during the F/T Ring Time and then press **# 5 1** between the fast double-rings. If no one is on the line, or if someone wants to send you a fax, send the call back to the machine by pressing *** 5 1**.

Caller ID (U.K. and Ireland only)

The Caller ID feature lets you use the Caller ID subscriber service offered by many local telephone companies. Call your telephone company for details. This service shows the telephone number, or name if it is available, of your caller as the line rings.

After a few rings, the LCD shows the telephone number of your caller (and name, if available). Once you answer a call, the Caller ID information disappears from the LCD, but the call information stays stored in the Caller ID memory.

You can view the list or choose one of these numbers to fax to, add to One Touch or Speed Dial, or delete from the history. (See *Caller ID history* on page 51.)

- You can see the first 20 characters of the number (or name).
- The **ID Unknown** message means the call originated outside your Caller ID service area.
- The **ID Withheld** message means the caller has intentionally blocked transmission of information.

You can print a list of the Caller ID information received by your machine. (See *How to print a report* in *chapter 6* of the *Advanced User's Guide*.)



Note

The Caller ID service varies with different carriers. Call your local telephone company to find out about the kind of service available in your area.

Setting the Caller ID to On

If you have Caller ID on your line, then this function should be set to **On** to display the caller's telephone number on the LCD as the telephone rings.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to choose **Fax**. Press **OK**.
- 3 Press **▲** or **▼** to choose **Miscellaneous**. Press **OK**.
- 4 Press **▲** or **▼** to choose **Caller ID**.
- 5 Press **◀** or **▶** to choose **On** (or **Off**). Press **OK**.
- 6 Press **Stop/Exit**.

Telephone services

Your machine supports the Caller ID subscriber telephone service that some telephone companies offer.

Features like Voice Mail, Call Waiting, Call Waiting/Caller ID, answering services, alarm systems or other custom features on one telephone line may create problems with the operation of your machine.



Note

Caller ID is available for U.K. and Ireland only.

Setting the Telephone Line Type

If you are connecting the machine to a line that features PBX or ISDN to send and receive faxes, it is also necessary to change the Telephone Line Type accordingly by completing the following steps.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to choose **Initial Setup**. Press **OK**.
- 3 Press **▲** or **▼** to choose **Phone Line Set**. Press **OK**.
- 4 Press **▲** or **▼** to choose **PBX, ISDN** (or **Normal**). Press **OK**.
- 5 Do one of the following:
 - If you choose **PBX**, go to step 6.
 - If you choose **ISDN** or **Normal**, go to step 9.
- 6 Press **▲** or **▼** to choose **On** or **Always**. Press **OK**.

**Note**

If you choose **On**, the machine dials a prefix number before the fax number you dial only when **Tel/R** is pressed.

If you choose **Always**, the machine always automatically dials a prefix number before the fax number.

7

Press **▲** or **▼** to choose **Change**. Press **OK**.

8

Enter the prefix number on the dial pad. Press **OK**.

9

Press **Stop/Exit**.

**Note**

- If your telephone system requires a timed break recall (TBR), press **Tel/R** to enter the break.
- You can use the numbers 0 to 9, #, * and !. (Press **Tel/R** to display !.) You cannot use ! with any other numbers or characters.

PBX and TRANSFER

The machine is initially set to **Normal**, which lets the machine connect to a standard PSTN (Public Switched Telephone Network) line.

However, many offices use a central telephone system or Private Branch Exchange (PBX). Your machine can be connected to most types of PBX. The machine's recall feature supports timed break recall only (TBR). TBR will work with most PBX systems allowing you to gain access to an outside line, or transfer calls to another extension. The feature works when **Tel/R** is pressed.

**Note**

You can program a **Tel/R** key press as part of a number stored in a One Touch Dial or Speed Dial location. When programming the One Touch Dial or Speed Dial number, press **Tel/R** first (the LCD shows "!"), then enter the telephone number. If you do this, you do not need to press **Tel/R** each time before you dial using a One Touch Dial or Speed Dial location. (See *Storing numbers* on page 52.) However, if PBX is not chosen in the Telephone Line Type setting, you cannot use the One Touch Dial or Speed Dial number that the **Tel/R** press is programmed into.

Connecting an external TAD (telephone answering device)


You may choose to connect an external answering device. However, when you have an **external** TAD on the same telephone line as the machine, the TAD answers all calls and the machine “listens” for fax calling (CNG) tones. If it hears them, the machine takes over the call and receives the fax. If it does not hear CNG tones, the machine lets the TAD continue playing your outgoing message so your caller can leave you a voice message.

The TAD must answer within four rings (the recommended setting is two rings). The machine cannot hear CNG tones until the TAD has answered the call, and with four rings there are only 8 to 10 seconds of CNG tones left for the fax “handshake”. Make sure you carefully follow the instructions in this guide for recording your outgoing message. We do not recommend using the toll saver feature on your external answering machine if it exceeds five rings.



Note

If you do not receive all your faxes, shorten the Ring Delay setting on your external TAD.

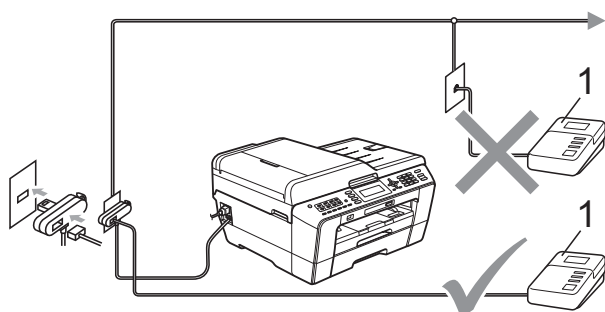

1 TAD

When the TAD answers a call, the LCD shows **Telephone**.

! IMPORTANT

DO NOT connect a TAD elsewhere on the same telephone line.

Connections settings

The external TAD must be connected as shown in the previous illustration.

- 1 Set your external TAD to one or two rings. (The machine's Ring Delay setting does not apply.)
- 2 Record the outgoing message on your external TAD.
- 3 Set the TAD to answer calls.
- 4 Set the Receive Mode to **External TAD**. (See *Choose the Receive Mode* on page 36.)

Recording an outgoing message (OGM) on an external TAD

Timing is important in recording this message.

- 1 Record 5 seconds of silence at the beginning of your message. (This allows your machine time to listen for the fax CNG tones of automatic transmissions before they stop.)
- 2 Limit your speaking to 20 seconds.



Note

We recommend beginning your OGM with an initial 5-second silence because the machine cannot hear fax tones over a resonant or loud voice. You may try omitting this pause, but if your machine has trouble receiving, then you must re-record the OGM to include it.

Multi-line connections (PBX)

We suggest you ask the company who installed your PBX to connect your machine. If you have a multi line system we suggest you ask the installer to connect the unit to the last line on the system. This prevents the machine being activated each time the system receives telephone calls. If all incoming calls will be answered by a switchboard operator we recommend that you set the Receive Mode to *Manual*.

We cannot guarantee that your machine will operate correctly under all circumstances when connected to a PBX. Any difficulties with sending or receiving faxes should be reported first to the company who handles your PBX.




Note

Make sure the Telephone Line Type is set to PBX. (See *Setting the Telephone Line Type* on page 42.)

External and extension telephones

Connecting an external or extension telephone

You can connect a separate telephone to your machine as shown in the diagram below.

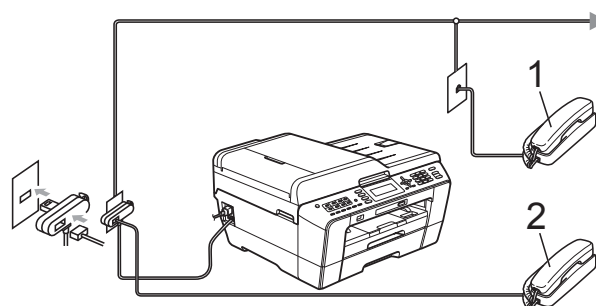

1 Extension telephone

2 External telephone

When you are using a telephone on the same phone line, the LCD shows *Telephone*.



Note

Please make sure you use an external telephone with a cable no more than 3 metres long.

Operation from external and extension telephones

If you answer a fax call on an extension or an external telephone, you can make your machine take the call by using the Remote Activation Code. When you press the Remote Activation Code * **5 1**, the machine starts to receive the fax.

If the machine answers a voice call and fast double-rings for you to take over, use the Remote Deactivation Code # **5 1** to take the call at an extension telephone. (See *F/T Ring Time (Fax/Tel mode only)* on page 38.)

If you answer a call and no one is on the line:

You should assume that you're receiving a manual fax.

Press * **5 1** and wait for the chirp or until the LCD shows *Receiving*, and then hang up.



Note

You can also use the Fax Detect feature to make your machine automatically take the call. (See *Fax Detect* on page 39.)

Using extension telephones (U.K. only)

Your premises may already be wired with parallel extension telephones, or you may plan to add extension telephones to your line, as well as your machine. While the simplest arrangement is a straightforward parallel connection, there are some problems with this arrangement, the most obvious of which is inadvertent interruption of a facsimile transmission caused by someone picking up an extension telephone to make an outgoing call. Also, remote activation code may not operate reliably in such a simple configuration.


This machine may also be set to make a delayed transmission (i.e. a transmission at a pre-set time). This pre-set job may coincide with someone picking up an extension handset.

These problems can easily be eliminated, if you arrange modification of your extension wiring circuit, such that extension devices are connected “downstream” of your machine in a master/slave configuration (see fig. 2). In this configuration the machine can always detect whether a telephone is in use. Thus it will not attempt to seize the line during that time. This is known as “telephone off-hook detection.”

The inadvisable configuration is shown in figure 1, and the recommended master/slave configuration is shown in figure 2.


This new connection configuration can be arranged by contacting BT, Kingston upon Hull Telecommunications, your PBX maintainer or a qualified telephone installation company as appropriate. Simply explained, the extension telephone circuit should be terminated on a normal modular plug (BT 431A style), which in turn should be put into the modular socket of the white “T”-shaped connector provided as part of the line cord assembly.

Inadvisable connection of extension sockets (Fig. 1.)

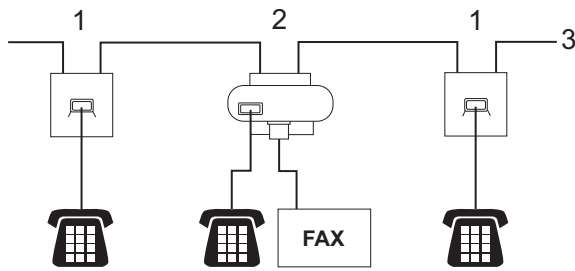

- 1 Extension socket
- 2 Master socket
- 3 Incoming line

Recommended connection of extension sockets (Fig. 2.)

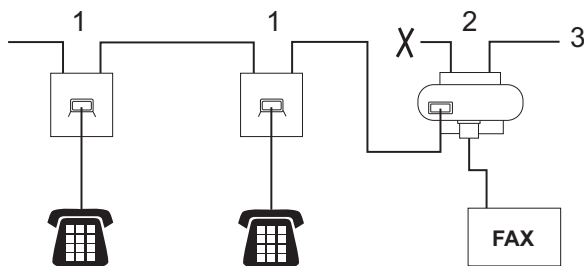

- 1 Extension socket
- 2 Master socket
- 3 Incoming line

The fax machine must be plugged into the master socket.



Note

These telephones are now connected as external devices (see *Connecting an external or extension telephone* on page 45), because they are connected to the fax machine via the T-connector.

Using a cordless external telephone

Once the base unit of the cordless telephone has been connected to the same telephone line as the machine (see *External and extension telephones* on page 45), it is easier to answer calls during the Ring Delay if you carry the cordless handset around with you.

If you let the machine answer first, you will have to go to the machine so you can press **Tel/R** to send the call to the cordless handset.

Using remote codes

Remote Activation code

If you answer a fax call on an extension or external telephone, you can tell your machine to receive it by dialling the Remote Activation Code * **5 1**. Wait for the chirping sounds then replace the handset. (See *Fax Detect* on page 39.)

If you answer a fax call at the external telephone, you can make the machine receive the fax by pressing **Mono Start** and choose *Receive*.

Remote Deactivation Code

If you receive a voice call and the machine is in F/T mode, it will start to sound the F/T Ring (fast double-ring), after the initial ring delay. If you pick up the call on an extension telephone you can turn the F/T Ring off by pressing **# 5 1** (make sure you press this *between* the rings).

If the machine answers a voice call and fast double-rings for you to take over, you can take the call at the external telephone by pressing **Tel/R**.

Changing the remote codes

If you want to use Remote Activation, you have to turn on the remote codes. The preset Remote Activation Code is * 5 1. The preset Remote Deactivation Code is # 5 1. If you want to, you can replace them with your own codes.

- 1 Press **Menu**.
- 2 Press ▲ or ▼ to choose `Fax`. Press **OK**.
- 3 Press ▲ or ▼ to choose `Setup Receive`. Press **OK**.
- 4 Press ▲ or ▼ to choose `Remote Codes`.
- 5 Press ◀ or ▶ to choose `On` (or `Off`). Press **OK**.
- 6 Enter the new Remote Activation Code. Press **OK**.
- 7 Press ▲ or ▼ to choose `Deact. Code`: and enter the new Remote Deactivation Code. Press **OK**.
- 8 Press **Stop/Exit**.




Note

- If you are always disconnected when accessing your external TAD remotely, try changing the Remote Activation Code and Remote Deactivation Code to another three-digit code using the numbers **0-9**, *****, **#**.
 - Remote Codes might not work with some telephone systems.
-

How to dial


Manual dialling

Press all of the digits of the fax or telephone number.

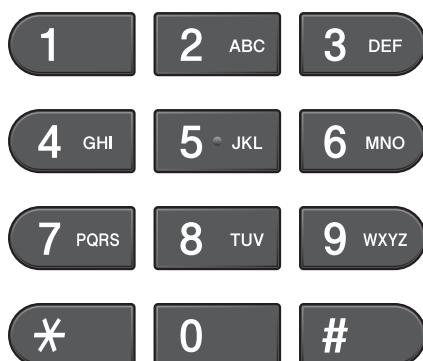

One Touch Dialling

Your machine has 8 One Touch keys where you can store 16 fax or telephone numbers for automatic dialling.

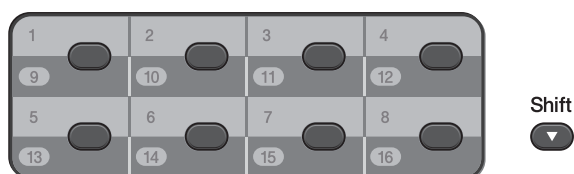

Press the One Touch key that stores the number you want to call. (See *Storing One Touch Dial numbers* on page 52.) To access numbers 9 to 16, hold down **Shift** as you press the One Touch key.

Speed Dialling

- 1 Press  (Phone Book).



You can also choose Phone Book by pressing  (FAX).

- 2 Press  or  to choose Search. Press **OK**.
- 3 Do one of the following:

- Press  or  to choose Alphabetic Order or Numeric Order. Press **OK**.

If you have two numbers in the location, press  or  to choose the number you want to call. Press **OK**.

- Enter the 2-digit Speed Dial number using the dial pad. (See *Storing Speed Dial numbers* on page 53.)



Note

If the LCD shows **Not Registered** when you enter or search a Speed Dial number that has not been stored at this location.

Search

You can search for names you have stored in the One Touch and Speed Dial memory.

- 1 Press  (**Phone Book**).
You can also choose **Phone Book** by pressing  (**FAX**).
- 2 Press  or  to choose **Search**. Press **OK**.
- 3 Press  or  to choose **Alphabetic Order** or **Numeric Order**. Press **OK**.



Note

- Press * to make the LCD font size larger.
- Press # to make the LCD font size smaller.

- 4 If you chose **Alphabetic Order** in step 3, use the dial pad to enter the first letter of the name, and then press  or  to choose the name and number you want to call. Press **OK**.

Fax Redial

If you are sending a fax manually and the line is busy, press **Redial/Pause**, and then press **Mono Start** or **Colour Start** to try again. If you want to make a second call to a number you recently dialled, you can press **Redial/Pause** and choose one of the last 30 numbers from the Outgoing Call List.

Redial/Pause only works if you dialled from the control panel. *If you are sending a fax automatically* and the line is busy, the machine will automatically redial up to three times at five minute intervals.

- 1 Press **Redial/Pause**.
- 2 Press  or  to choose the number you want to redial. Press **OK**.
- 3 Press  or  to choose **Send a fax**. Press **OK**.
- 4 Press **Mono Start** or **Colour Start**.



Note

In Real Time Transmission the automatic redial feature does not work when using the scanner glass.

Additional Dialling Operations

Outgoing Call history

The last 30 numbers you sent a fax to will be stored in the outgoing call history. You can choose one of these numbers to fax to, add to One Touch or Speed Dial, or delete from the history.

- 1 Press **Redial/Pause**.
You can also choose *Outgoing Call* by pressing  (**FAX**).
- 2 Press **▲** or **▼** to choose the number you want.
Press **OK**.
- 3 Do one of the following:
 - To send a fax, press **▲** or **▼** to choose *Send a fax*.
Press **OK**.
Press **Mono Start** or **Colour Start**.
 - If you want to store the number, press **▲** or **▼** to choose *Add To Phone Book*.
Press **OK**.
(See *Storing One Touch numbers from Outgoing Calls* or *Storing Speed Dial numbers from Outgoing Calls* in chapter 5 of the *Advanced User's Guide*.)
 - Press **▲** or **▼** to choose *Delete*.
Press **OK**.
Press **1** to confirm.
- 4 Press **Stop/Exit**.

Caller ID history

This feature requires the Caller ID subscriber service offered by many local telephone companies. (See *Caller ID (U.K. and Ireland only)* on page 41.)

The numbers, or names if available, from the last 30 faxes and telephone calls you received will be stored in the Caller ID history. You can view the list or choose one of these numbers to fax to, add to One Touch or Speed Dial, or delete from the history. When the thirty-first call comes into the machine, it replaces information about the first call.



Note

If you are not a Caller ID subscriber, you can still view call dates from the Caller ID history, and delete entries from the list.

- 1 Press **Redial/Pause** and press *****.
You can also choose *Caller ID hist.* by pressing  (**FAX**).
- 2 Press **▲** or **▼** to choose the number you want.
Press **OK**.
- 3 Do one of the following:
 - To send a fax, press **▲** or **▼** to choose *Send a fax*.
Press **OK**.
Press **Mono Start** or **Colour Start**.
 - If you want to store the number, press **▲** or **▼** to choose *Add To Phone Book*.
Press **OK**.
(See *Storing One Touch numbers from the Caller ID history* or *Storing Speed Dial numbers from the Caller ID history* in chapter 5 of the *Advanced User's Guide*.)
 - If you want to delete the number, press **▲** or **▼** to choose *Delete*.
Press **OK**.
Press **1** to confirm.

- 4 Press **Stop/Exit**.



Note

You can print the Caller ID list.
(See *How to print a report* in chapter 6 of the *Advanced User's Guide*.)

Storing numbers

You can set up your machine to do the following types of easy dialling: One Touch, Speed Dial and Groups for broadcasting faxes. When you dial a Quick Dial number, the LCD shows the number.



Note

If you lose electrical power, the Quick Dial numbers that are in the memory will not be lost.

Storing a pause

Press **Redial/Pause** to put a 3.5-second pause between numbers. If you are dialling overseas, you can press **Redial/Pause** as many times as needed to increase the length of the pause.

Storing One Touch Dial numbers

Your machine has 8 One Touch keys where you can store 16 fax or telephone numbers for automatic dialling. To access numbers 9 to 16 hold down **Shift** as you press the One Touch key.

- 1 Press the One Touch key where you want to store the number.
Press **1** to choose **Yes**.



Note

You can also store one Touch Dial numbers pressing  (**Phone Book**).

Press **▲** or **▼** to choose **Set One Touch**.
Press **OK**.

Press **▲** or **▼** to choose the location where you want to store the number.
Press **OK**.

- 2 Do one of the following:
 - Enter the name (up to 16 characters) using the dial pad.
Press **OK**.
(To help you enter letters, see *Entering Text* on page 124.)
 - To store the number without a name, press **OK**.
- 3 Enter the fax or telephone number (up to 20 digits).
Press **OK**.

**Note**

If you downloaded Internet Fax:

If you want to store an E-mail address to use with Internet fax or Scan to E-mail server, press **▲** to choose *Dial Type*, and then press **◀** or **▶** to change the option to *E-Address*. Press **▼** to choose *FAX/TEL/MAIL* and then enter the E-mail address. (See *Entering Text* on page 124.)

- 4 Press **▲** or **▼** to choose *Complete*.
Press **OK**.
- 5 Press **Stop/Exit**.

Storing Speed Dial numbers

Names and numbers can be stored as two-digit Speed Dial locations. You can store up to 100 different Speed Dial locations. When you dial you will only have to press a few keys (for example: **☰** (**Phone Book**), *Search*, **OK**, the two-digit number, and **Mono Start** or **Colour Start**).

- 1 Press **☰** (**Phone Book**).
- 2 Press **▲** or **▼** to choose *Set Speed Dial*.
Press **OK**.

- 3 Press **▲** or **▼** to choose the Speed Dial location where you want to store the number.
Press **OK**.
- 4 Do one of the following:
 - Enter the name (up to 16 characters) using the dial pad.
Press **OK**.
(To help you enter letters, see *Entering Text* on page 124.)
 - To store the number without a name, press **OK**.
- 5 Enter the fax or telephone number (up to 20 digits).
Press **OK**.
- 6 Do one of the following:
 - Enter the second fax or telephone number (up to 20 digits).
Press **OK**.
 - If you do not want to store a second number, press **OK**.
- 7 Press **▲** or **▼** to choose *Complete*.
Press **OK**.
- 8 Do one of the following:
 - To store another Speed Dial number, go to step 3.
 - If you are finished storing numbers, press **Stop/Exit**.

Changing One Touch or Speed Dial names or numbers

You can change a One Touch or Speed Dial name or number that has already been stored.

- 1 Press  (**Phone Book**).
- 2 Press ▲ or ▼ to choose
Set One Touch or
Set Speed Dial.
Press **OK**.
- 3 Press ▲ or ▼ to choose the 2-digit One Touch or Speed Dial location you want to change.
Press **OK**.
- 4 Do one of the following:
 - Press ▲ or ▼ to choose **Change**.
Press **OK**.
 - Press ▲ or ▼ to choose **Delete**.
Press **OK**.
Press **1** to confirm.
Go to step 6.



Note

How to change the stored name or number:


If you want to change a character, press ◀ or ▶ to position the cursor under the character you want to change, and then press **Clear**. Re-enter the character.

- 5 If you want to change the name, press ▲ or ▼ to choose **Name**, then press ▶ and enter the new name using the dial pad (up to 16 characters).
Press **OK**.
(See *Entering Text* on page 124.)
- 6 If you want to change a Fax/Tel number, do one of the following:
 - If you want to change the first Fax/Tel number, press ▲ or ▼ to choose **Fax/Tel1: (One Touch Dial)** or **Fax/Tel1: (Speed Dial)**, then press ▶ and enter the new fax or telephone number using the dial pad (up to 20 digits).
Press **OK**.
 - If you want to change the second Fax/Tel number, press ▲ or ▼ to choose **Fax/Tel2: (Speed Dial)**, then press ▶ and enter the new fax or telephone number using the dial pad (up to 20 digits).
Press **OK**.
 - If you want to change both numbers in this Speed Dial location, repeat this step and choose the other number.
- 7 Press ▲ or ▼ to choose **Complete**.
Press **OK**.
- 8 Press **Stop/Exit**.


How to copy

The following steps show the basic copy operation. For details about each option, see the *Advanced User's Guide*.

- 1 Make sure you are in copy mode, press  (**COPY**) to illuminate it in blue.

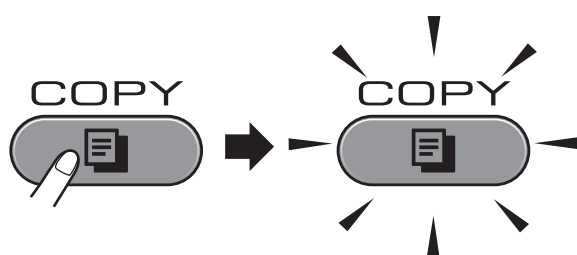

- The LCD shows:

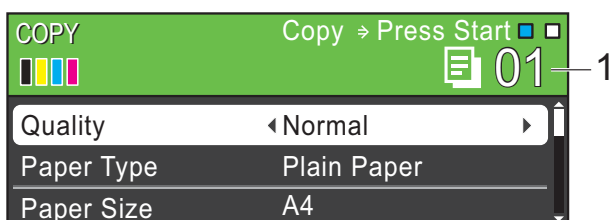

1 No. of Copies

You can enter the number of copies you want by using the dial pad.



Note

The default setting is Fax mode. You can change the amount of time that the machine stays in Copy mode after the last copy operation. (See *Mode Timer* in chapter 1 of the *Advanced User's Guide*.)

- 2 Do one of the following to load your document:
 - Place the document *face up* in the ADF.
(See *Using the ADF* on page 29.)
 - Place the document *face down* on the scanner glass.
(See *Using the scanner glass* on page 30.)
- 3 If you want more than one copy, enter the number (up to 99).
- 4 Press **Mono Start** or **Colour Start**.

Stop copying

To stop copying, press **Stop/Exit**.

Copy settings

You can change the following copy settings. Press **COPY** and then press ▲ or ▼ to scroll through the copy settings. When the setting you want is highlighted, then press ◀ or ▶ to choose your option, and press **OK**.

(Basic User's Guide)

For details about changing the following copy settings, see page 56.

- Paper Type
- Paper Size
- Tray Select (MFC-J6710DW)

(Advanced User's Guide)

For details about changing the following copy settings, see chapter 7:

- Quality
- Enlarge/Reduce
- Page Layout
- 2 in 1 (ID)

- Stack/Sort
- Density
- Ink Save Mode
- Thin Paper Copy
- Skew Adjustment
- Book Copy
- Watermark Copy
- Duplex Copy
- Set New Default
- Factory Reset

**Note**

If you want to sort copies, use the ADF.

Paper Options

Paper Type

If you are copying on special paper, set the machine for the type of paper you are using to get the best print quality.

- 1 Press  (**COPY**).
- 2 Load your document.
- 3 Enter the number of copies you want.
- 4 Press ▲ or ▼ to choose Paper Type.
- 5 Press ◀ or ▶ to choose Plain Paper, Inkjet Paper, Brother BP71, Brother BP61, Other Glossy or Transparency. Press **OK**.
- 6 If you do not want to change additional settings, press **Mono Start** or **Colour Start**.

Paper Size

If you are copying on paper other than A4 size, you will need to change the paper size setting. You can copy only on A4, A5, A3, Photo 10 × 15 cm, Letter, Legal or Ledger paper.

- 1 Press  (**COPY**).
- 2 Load your document.
- 3 Enter the number of copies you want.
- 4 Press ▲ or ▼ to choose Paper Size.
- 5 Press ◀ or ▶ to choose A4, A5, A3, 10x15cm, Letter, Legal or Ledger. Press **OK**.
- 6 If you do not want to change additional settings, press **Mono Start** or **Colour Start**.

Tray Select (MFC-J6710DW only)

You can change the tray temporarily for the next copy. To change the default tray setting see *Tray use in Copy mode (MFC-J6710DW only)* on page 23.

- 1 Press  (**COPY**).
- 2 Load your document.
- 3 Enter the number of copies you want.
- 4 Press ▲ or ▼ to choose Tray Select.
- 5 Press ◀ or ▶ to choose Tray#1, Tray#2 or Auto Select. Press **OK**.
- 6 If you do not want to change additional settings, press **Mono Start** or **Colour Start**.

**Note**

Poster copy is not available when you use Tray #2.

PhotoCapture Center™ operations

Even if your machine is *not* connected to your computer, you can print photos directly from digital camera media or a USB Flash memory drive. (See *Print Images* on page 60.)

You can scan documents and save them directly to a memory card or USB Flash memory drive. (See *How to scan to a memory card or USB Flash memory drive* on page 61.)

If your machine is connected to a computer, you can access a memory card or USB Flash memory drive that is inserted in the front of the machine from your computer.

(See *PhotoCapture Center™* for Windows® or *Remote Setup & PhotoCapture Center™* for Macintosh in the *Software User's Guide*.)


Using a memory card or USB Flash memory drive

Your Brother machine has media drives (slots) for use with the following popular digital camera media: Memory Stick™, Memory Stick PRO™, Memory Stick Duo™, Memory Stick PRO Duo™, SD, SDHC, MultiMedia Card, MultiMedia Card plus and USB Flash memory drives.


The PhotoCapture Center™ feature lets you print digital photos from your digital camera at high resolution to get photo quality printing.

Getting started

Firmly put a memory card or USB Flash memory drive into the correct slot.

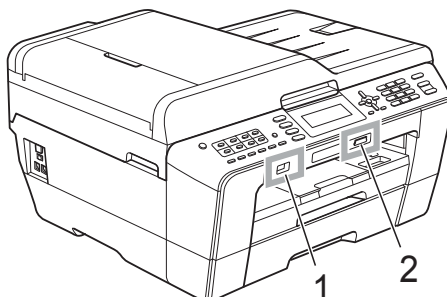




1 USB Flash memory drive

 

! IMPORTANT

The USB direct interface supports only a USB Flash memory drive, a PictBridge compatible camera, or a digital camera that uses the USB mass storage standard. Any other USB devices are not supported.

 
2 Memory card slot

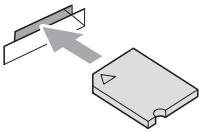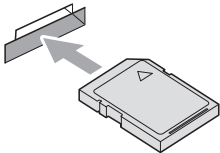Slot	Compatible memory cards	
Upper slot 		Memory Stick™ Memory Stick PRO™
		Memory Stick Duo™ Memory Stick PRO Duo™
		Memory Stick Micro™ (Adapter required)
Lower slot 		SD SDHC MultiMedia Card MultiMedia Card plus
		mini SD (Adapter required) micro SD (Adapter required) mini SDHC (Adapter required) micro SDHC (Adapter required) MultiMedia Card mobile (Adapter required)

! IMPORTANT

DO NOT insert a Memory Stick Duo™ into the lower SD slot, this may cause damage to the machine.

PHOTO CAPTURE key indications:

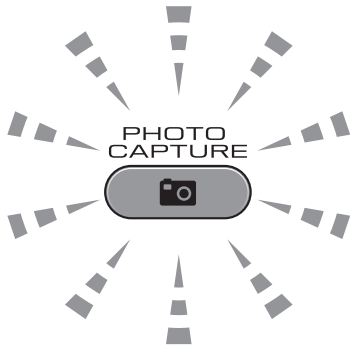

- **PHOTO CAPTURE** light is on, the memory card or USB Flash memory drive is correctly inserted.
- **PHOTO CAPTURE** light is off, the memory card or USB Flash memory drive is not correctly inserted.
- **PHOTO CAPTURE** light is blinking, the memory card or USB Flash memory drive is being read or written to.

! IMPORTANT

DO NOT unplug the power cord or remove the memory card or USB Flash memory drive from the media drive (slot) or USB direct interface while the machine is reading or writing to the memory card or USB Flash memory drive (the **PHOTO CAPTURE** key is blinking). **You will lose your data or damage the card.**

The machine can only read one device at a time.

Print Images

View Photos

You can preview your photos on the LCD before you print them. If your photos are large files there may be a delay before each photo is displayed on the LCD.

- 1 Make sure you have put the memory card or USB Flash memory drive in the correct slot.
Press  (**PHOTO CAPTURE**).
- 2 Press ▲ or ▼ to choose View Photo(s).
Press **OK**.
- 3 Press ◀ or ▶ to choose your photo.
- 4 Enter the number of copies you want using the dial pad.
- 5 Repeat step 3 and step 4 until you have chosen all the photos.



Note

Press **Clear** to go back to the previous level.

- 6 After you have chosen all the photos, do one of the following:
 - Press **OK** and change the print settings. (See *PhotoCapture Center™ print settings* on page 60.)
 - If you do not want to change any settings, press **Colour Start** to print.

PhotoCapture Center™ print settings


You can change the print settings temporarily.

The machine returns to its default settings after 3 minutes, or if the Mode Timer returns the machine to Fax mode. (See *Mode Timer* in chapter 1 of the *Advanced User's Guide*.)



Note

You can save the print settings you use most often by setting them as the default. (See *Setting your changes as a new default* in chapter 8 of the *Advanced User's Guide*.)

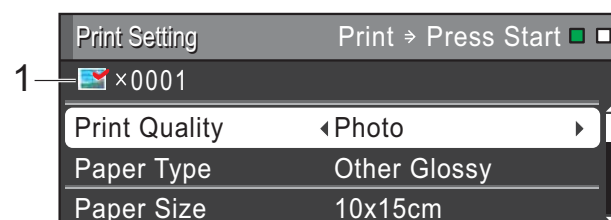

1 No. of prints

(For View Photo(s), Search by Date, Slide Show)

You can see the total number of photos that will be printed.

(For Print All Photos, Print Photos, Enhance Photos, Trimming)

You can see the number of copies of each photo that will be printed.

(For DPOF printing) This does not appear.

How to scan to a memory card or USB Flash memory drive

You can scan monochrome and colour documents onto a memory card or USB Flash memory drive. Monochrome documents will be stored in PDF (*.PDF) or TIFF (*.TIF) file formats. Colour documents may be stored in PDF (*.PDF) or JPEG (*.JPG) file formats. The factory setting is **Color 200** and the default file format is PDF. The machine automatically creates file names based on the current date. (For details, see the *Quick Setup Guide*.) For example, the fifth image scanned on July 1, 2011 would be named 01071105.PDF. You can change the colour and quality.

Quality	Selectable File Format
Color 100	JPEG / PDF
Color 200	JPEG / PDF
Color 300	JPEG / PDF
Color 600	JPEG / PDF
B/W 100	TIFF / PDF
B/W 200	TIFF / PDF
B/W 300	TIFF / PDF

- 1 Make sure you have put the memory card or USB Flash memory drive in the correct slot.


! IMPORTANT

DO NOT take out the memory card or USB Flash memory drive while **PHOTO CAPTURE** is blinking to avoid damaging the card, USB Flash memory drive or data stored on them.

- 2 Load your document.

- 3 When you want to scan to a memory card or USB Flash memory drive, press  (**SCAN**).

- 4 Press **▲** or **▼** to choose **Scan to Media**.

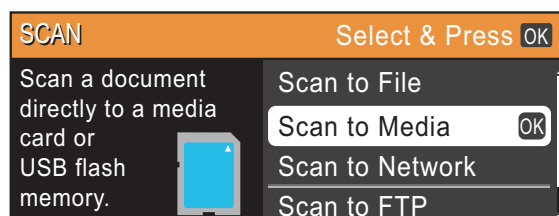

Press **OK**.

- 5 Do one of the following:
 - To change the quality, press **▲** or **▼** to choose **Quality**.
Go to step 6.
 - Press **Mono Start** or **Colour Start** to start scanning without changing additional settings.

- 6 Press **◀** or **▶** to choose **Color 100**, **Color 200**, **Color 300**, **Color 600**, **B/W 100**, **B/W 200** or **B/W 300**. Press **OK**.

- 7 Do one of the following:
 - To change the file type, go to step 8.
 - Press **Mono Start** or **Colour Start** to start scanning without changing additional settings.

- 8 Press **▲** or **▼** to choose **File Type**. Press **◀** or **▶** to choose **JPEG**, **PDF** or **TIFF**. Press **OK**.



Note

- If you chose a **Color** resolution in step 6, you cannot choose **TIFF**.
- If you chose a **B/W** resolution in step 6, you cannot choose **JPEG**.

- 9 Do one of the following:
- To change the file name, go to step 10.
 - Press **Mono Start** or **Colour Start** to start scanning without changing additional settings.



Note

If you are using the scanner glass of the machine you can change the glass scan size.

Press ▲ or ▼ to choose `Glass ScanSize` and ◀ or ▶ to choose `A4`, `A3`, `Letter`, `Legal` or `Ledger`.

- 10 The file name is assigned automatically; however, you can enter a name of your choice using the dial pad.
- Press ▲ or ▼ to choose `File Name`.
Enter the new name. (See *Entering Text* on page 124.)
You can only change the first 6 characters.
Press **OK**.



Note

Press **Clear** to delete the current name.

- 11 Press **Mono Start** or **Colour Start**.



Note

You can place multiple documents on the scanner glass and scan them as separate files. (See *Auto Crop* in *chapter 8* of the *Advanced User's Guide*.)

Printing a document

The machine can receive data from your computer and print it. To print from a computer, install the printer driver.

(See *Printing* for Windows® or *Printing and Faxing* for Macintosh in the *Software User's Guide* for details about the print settings.)

- 1 Install the Brother printer driver on the Installation CD-ROM. (See the *Quick Setup Guide*.)
- 2 From your application, choose the Print command.
- 3 Choose the name of your machine in the **Print** dialog box and click **Properties**.
- 4 Choose the settings you want in the Properties dialog box.
 - **Media Type**
 - **Print Quality**
 - **Paper Size**
 - **Orientation**
 - **Colour/Greyscale**
 - **Ink Save Mode**
 - **Scaling**
- 5 Click **OK**.
- 6 Click **OK** to begin printing.

Scanning a document

There are several ways to scan documents. You can use the **SCAN** key on the machine or the scanner drivers on your computer.

- 1 To use the machine as a scanner, install a scanner driver. If the machine is on a Network, configure it with a TCP/IP address.
 - Install the scanner drivers on the Installation CD-ROM. (See the *Quick Setup Guide* and *Scanning* in the *Software User's Guide*.)
 - Configure the machine with a TCP/IP address if network scanning does not work. (See *Configuring Network Scanning* in the *Software User's Guide*.)
- 2 Load your document. (See *How to load documents* on page 29.)
 - Use the ADF to scan multiple pages of documents. It feeds each sheet automatically.
 - Use the scanner glass to scan a page of a book or one sheet at a time.
- 3 Do one of the following:
 - To scan using the **SCAN** key, go to *Scanning using the scan key*.
 - To scan using a scanner driver at your computer, go to *Scanning using a scanner driver*.

Scanning using the scan key

For more information, see *Using the Scan key* in the *Software User's Guide*.

- 1 Press  (**SCAN**).
 - 2 Choose the scan mode you want.
 - Scan to File
 - Scan to Media
 - Scan to Network
 - Scan to FTP
 - Scan to E-mail
 - Scan to OCR¹
 - Scan to Image
- ¹ (Macintosh users)
Presto! PageManager must be downloaded and installed before use. See *Accessing Brother Support (Macintosh)* on page 3 for further instructions.
- 3 (For network users)
Choose the computer you want to send the data to.
 - 4 Press **Start** to begin scanning.

Scanning using a scanner driver

For more information, see *Scanning a document using the TWAIN driver* or *Scanning a document using the WIA driver* in the *Software User's Guide*.

- 1 Start a scanning application and click the **Scan** button.
- 2 Adjust the settings such as **Resolution**, **Brightness** and **Scan Type** in the **Scanner Setup** dialog box.
- 3 Click **Start** or **Scan** to begin scanning.

A

Routine maintenance

Replacing the ink cartridges

Your machine is equipped with an ink dot counter. The ink dot counter automatically monitors the level of ink in each of the four cartridges. When the machine detects an ink cartridge is running out of ink, the machine will tell you with a message on the LCD.



The LCD will tell you which ink cartridge is low or needs replacing. Be sure to follow the LCD prompts to replace the ink cartridges in the correct order.

Even though the machine tells you to replace an ink cartridge, there will be a small amount of ink left in the ink cartridge. It is necessary to keep some ink in the ink cartridge to prevent air from drying out and damaging the print head assembly.

! IMPORTANT



Brother multifunction machines are designed to work with ink of a particular specification and will work to a level of optimum performance and reliability when used with Brother Original ink cartridges. Brother cannot guarantee this optimum performance and reliability if ink or ink cartridges of other specifications are used. Brother does not therefore recommend the use of cartridges other than Brother Original cartridges or the refilling of used cartridges with ink from other sources. If damage is caused to the print head or other parts of this machine as a result of using incompatible products with this machine, any repairs required as a result may not be covered by the warranty.

- 1 Open the ink cartridge cover. If one or more of the ink cartridges have reached the end of their life, the LCD shows **B&W Print Only** or **Cannot Print**.
- 2 Press the lock release lever as shown to release the cartridge indicated on the LCD. Remove the cartridge from the machine.

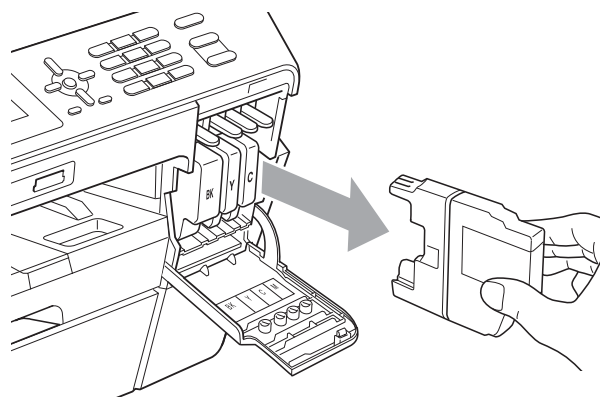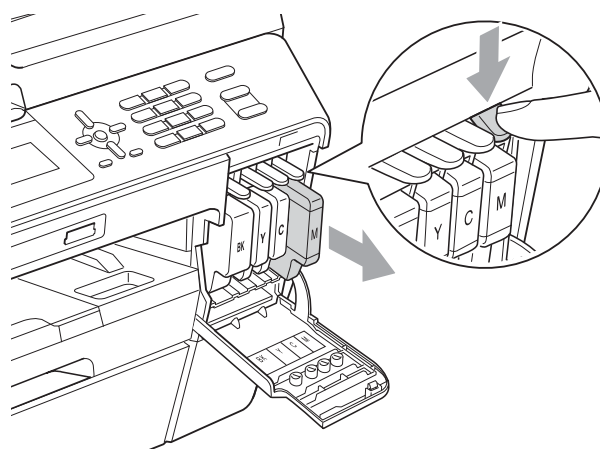


- 3 Open the new ink cartridge bag for the colour shown on the LCD, and then take out the ink cartridge.


- 4 Turn the green release lever on the orange protective packing (1) clockwise until it clicks to release the vacuum seal. Then remove the orange protective packing as shown.

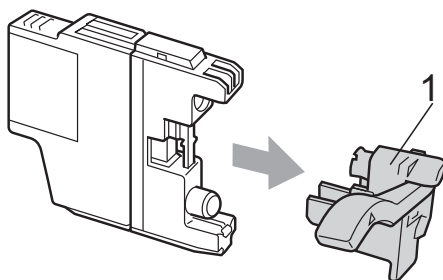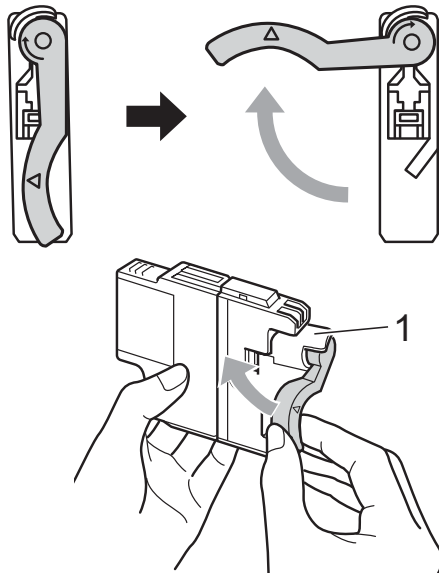

- 5 Each colour has its own correct position. Insert the ink cartridge in the direction of the arrow on the label.

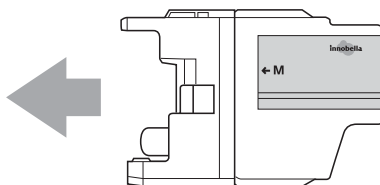

- 6 Gently push the back of the ink cartridge marked "PUSH" until it clicks, and then close the ink cartridge cover.

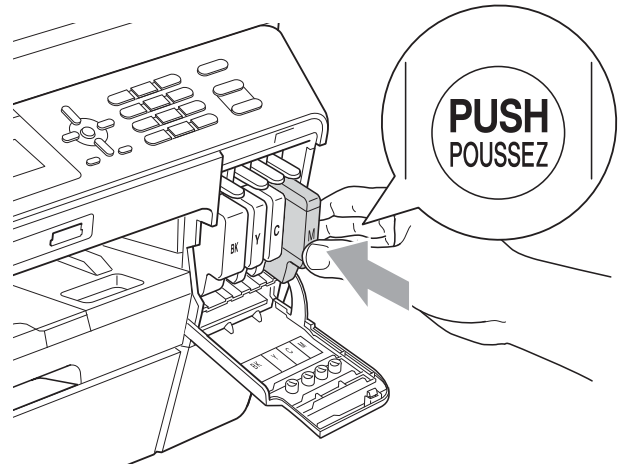

- 7 The machine will automatically reset the ink dot counter.



Note

- If you replaced an ink cartridge, for example Black, the LCD may ask you to verify that it was a brand new one (for example, Did You Change **BK** Black). For each new cartridge you installed, press **1** (Yes) to automatically reset the ink dot counter for that colour. If the ink cartridge you installed is not a brand new one, be sure to press **2** (No).
- If the LCD shows **No Ink Cartridge** or **Cannot Detect** after you install the ink cartridges, check that the ink cartridges are installed correctly.

CAUTION

If ink gets in your eyes, wash it out with water at once and call a doctor if you are concerned.


! IMPORTANT

- DO NOT take out ink cartridges if you do not need to replace them. If you do so, it may reduce the ink quantity and the machine will not know the quantity of ink left in the cartridge.
- DO NOT touch the cartridge insertion slots. If you do so, the ink may stain your skin.
- If ink gets on your skin or clothing immediately wash it off with soap or detergent.
- If you mix the colours by installing an ink cartridge in the wrong position, clean the print head several times after correcting the cartridge installation.
- Once you open an ink cartridge, install it in the machine and use it up within six months of installation. Use unopened ink cartridges by the expiration date written on the cartridge package.
- DO NOT dismantle or tamper with the ink cartridge, this can cause the ink to leak out of the cartridge.


Cleaning and checking the machine

Cleaning the scanner glass

- 1 Unplug the machine from the electrical socket.
- 2 Lift the document cover (1). Clean the scanner glass (2) and the white plastic (3) with a soft lint-free cloth moistened with a non-flammable glass cleaner.

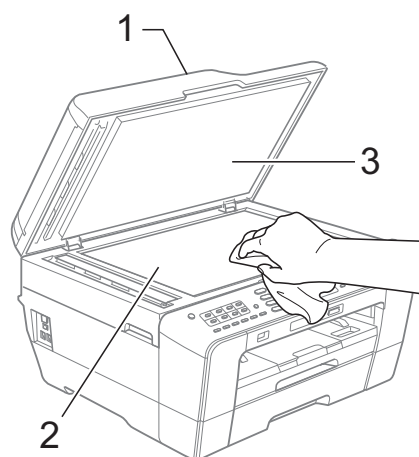

- 3 In the ADF unit, clean the white bar (1) and the glass strip (2) with a lint-free cloth moistened with a non-flammable glass cleaner.

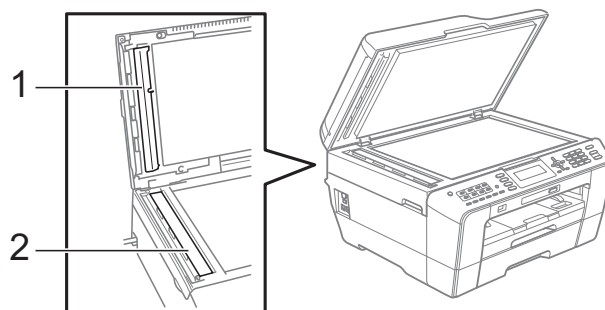

- 4 Re-connect the power cord.

Note

In addition to cleaning the glass strip with a non-flammable glass cleaner, run your finger tip over the glass strip to see if you can feel anything on it. If you feel dirt or debris, clean the glass strip again concentrating on that area. You may need to repeat the cleaning process three or four times. To test, make a copy after each cleaning attempt.



When there is a spot of dirt or correction fluid on the glass strip the printed sample shows a vertical line.



After the glass strip is cleaned the vertical line is gone.

Cleaning the print head

To maintain good print quality, the machine will automatically clean the print head when needed. You can start the cleaning process manually if there is a print quality problem.

Clean the print head and ink cartridges if you get a horizontal line in the text or graphics, or blank text on your printed pages. You can clean Black only, three colours at a time (Yellow/Cyan/Magenta), or all four colours at once.

Cleaning the print head consumes ink. Cleaning too often uses ink unnecessarily.

! IMPORTANT

DO NOT touch the print head. Touching the print head may cause permanent damage and may void the print head's warranty.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to choose Ink Management.
Press **OK**.
- 3 Press **▲** or **▼** to choose Cleaning.
Press **OK**.
- 4 Press **▲** or **▼** to choose Black, Color or All.
Press **OK**.
The machine cleans the print head.
When cleaning is finished, the machine will go back to the standby mode automatically.

Note

 
If you clean the print head at least five times and the print has not improved, try installing a new Brother Original Innobella™ ink cartridge for each problem colour. Try cleaning the print head again up to five more times. If the print has not improved call your Brother dealer.

Checking the print quality


If faded or streaked colours and text appear on your output, some of the nozzles may be clogged. You can check this by printing the Print Quality Check Sheet and looking at the nozzle check pattern.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to choose Ink Management.
Press **OK**.
- 3 Press **▲** or **▼** to choose Test Print.
Press **OK**.
- 4 Press **▲** or **▼** to choose Print Quality.
Press **OK**.
- 5 Press **Colour Start**.
The machine begins printing the Print Quality Check Sheet.
- 6 Check the quality of the four colour blocks on the sheet.
- 7 The LCD asks you if the print quality is OK.
Do one of the following:
 - If all lines are clear and visible, press **1 (Yes)** to finish the Print Quality check and go to step 11.
 - If you can see missing short lines as shown below, press **2** to choose No.

OK



Poor

 

- 8 The LCD asks you if the print quality is OK for black and the three colours.
Press **1 (Yes)** or **2 (No)**.

- 9 The LCD asks you if you want to start cleaning.
Press **1 (Yes)**.
The machine starts cleaning the print head.

- 10 After cleaning is finished, press **Colour Start**.
The machine starts printing the Print Quality Check Sheet again. Return to step 6.

- 11 Press **Stop/Exit**.
If you repeat this procedure at least five times and the print quality is still poor, replace the ink cartridge for the clogged colour.
After replacing the ink cartridge, check the print quality. If the problem still exists, repeat the cleaning and test print procedures at least five times for the new ink cartridge. If ink is still missing, call your Brother dealer.

! IMPORTANT

DO NOT touch the print head. Touching the print head may cause permanent damage and may void the print head's warranty.

Note



When a print head nozzle is clogged the printed sample looks like this.



After the print head nozzle is cleaned, the horizontal lines are gone.

Checking the print alignment

You may need to adjust the print alignment after transporting the machine, if your printed text becomes blurred or images become faded.

- 1 Press **Menu**.
- 2 Press ▲ or ▼ to choose `Ink Management`. Press **OK**.
- 3 Press ▲ or ▼ to choose `Test Print`. Press **OK**.
- 4 Press ▲ or ▼ to choose `Alignment`. Press **OK**.
- 5 Press **Mono Start** or **Colour Start**. The machine starts printing the Alignment Check Sheet.
- 6 For the “A” pattern, press the number of the test print that has the least visible vertical stripes (1-9).
- 7 For the “B” pattern, press the number of the test print that has the least visible vertical stripes (1-9).
- 8 For the “C” pattern, press the number of the test print that has the least visible vertical stripes (1-9).
- 9 For the “D” pattern, press the number of the test print that has the least visible vertical stripes (1-9).
- 10 Press **Stop/Exit**.

Error and Maintenance messages

As with any sophisticated office product, errors may occur and consumable items may need to be replaced. If this happens, your machine identifies the error and shows an error message. The most common error and maintenance messages are shown below.

You can correct most errors and routine maintenance by yourself. If you need more help, the Brother Solutions Center offers the latest FAQs and troubleshooting tips.

Visit us at <http://solutions.brother.com/>.

Error Message	Cause	Action
B&W Print Only Replace Ink	One or more of the colour ink cartridges have reached the end of their life. You can use the machine in monochrome mode for approximately four weeks depending on the number of pages you print. While this message appears on the LCD, each operation works in the following way: ■ Printing If you click Greyscale in the Advanced tab of the printer driver you can use the machine as a monochrome printer. ■ Copying If the paper type is set to Plain Paper you can make copies in monochrome. Duplex copy is not available when this message appears. ■ Faxing If the paper type is set to Plain Paper or Inkjet Paper, the machine will receive and print the faxes in monochrome. If a sending machine has a colour fax, the machine's "handshake" will ask that the fax be sent as monochrome. If the paper type is set to Other Glossy, Brother BP71 or Brother BP61 the machine will stop all print operations.	Replace the ink cartridges. (See <i>Replacing the ink cartridges</i> on page 66.) <i>If you unplug the machine, or take out the ink cartridge, you cannot use the machine until you change to a new ink cartridge.</i>

Error Message	Cause	Action
BT Call Sign On (U.K. only)	BT Call Sign is set to ON. You cannot change the Receive Mode from Manual to another mode.	Set BT Call Sign to OFF. (See <i>BT Call Sign (U.K. only)</i> in chapter 5 of the <i>Advanced User's Guide</i> .)
Cannot Detect	You installed a new ink cartridge too quickly and the machine did not detect it.	Take out the new ink cartridge and re-install it slowly until it clicks.
	If you are using non Brother Original ink the machine may not detect the ink cartridge.	Replace the cartridge with a Brother Original ink cartridge. If the error message remains, contact your Brother dealer.
	An ink cartridge is not installed correctly.	Take out the new ink cartridge and re-install it slowly until it clicks. (See <i>Replacing the ink cartridges</i> on page 66.)
Cannot Print Replace Ink	One or more of the ink cartridges have reached the end of their life. The machine will stop all print operations. While memory is available, monochrome faxes will be stored in the memory. If a sending machine has a colour fax, the machine's "handshake" will ask that the fax be sent as monochrome.	Replace the ink cartridges. (See <i>Replacing the ink cartridges</i> on page 66.)
Comm.Error	Poor telephone line quality caused a communication error.	If the problem continues, call the telephone company and ask them to check your telephone line.
Connection Fail	You tried to poll a fax machine that is not in Polled Waiting mode.	Check the other fax machine's polling setup.
Cover is Open	The scanner cover is not completely closed.	Lift the scanner cover and then close it again.
	The ADF cover is not completely closed.	Open the ADF cover and then close it again.
	The ink cartridge cover is not completely closed.	Firmly close the ink cartridge cover until it clicks.
Data Remaining	Print data is left in the machine's memory.	Press Stop/Exit . The machine will cancel the job and clear it from the memory. Try to print again.
Disconnected	The other person or other person's fax machine stopped the call.	Try to send or receive again. If calls are stopped repeatedly and you are using a VoIP (Voice over IP) system, try changing the Compatibility to Basic (for VoIP). (See <i>Telephone line interference / VoIP</i> on page 95.)
Document Jam	The document was not inserted or fed correctly, or the document scanned from the ADF was too long.	(See <i>Using the ADF</i> on page 29.) (See <i>Document jam</i> on page 80.)
High Temperature	The print head is too warm.	Allow the machine to cool down.

Error Message	Cause	Action
Hub is Unusable.	A Hub or USB Flash memory drive with Hub has been connected to the USB direct interface.	A Hub or USB Flash memory drive with Hub are not supported. Unplug the device from the USB direct interface.
Image Too Long.	The proportions of your photo are irregular so effects could not be added.	Choose a regularly proportioned image.
Image Too Small.	The size of your photo is too small to trim.	Choose a larger image.
Ink Absorber Full	Internal servicing required. This problem may be caused by the use of cartridges other than Brother Original cartridges or the refilling of empty cartridges with ink from other sources. If damage is caused to the print head or other parts of this machine as a result of using other brands of ink or ink cartridges, any repairs required as a result may not be covered by the warranty.	Call Brother Customer Service / your Brother dealer.
Ink Absorber NearFull	The ink absorber box or flushing box is near full.	Call Brother Customer Service / your Brother dealer.
Ink low	One or more of the ink cartridges are near the end of their life. If a sending machine has a colour fax to send, your machine's "handshake" will ask that the fax be sent as monochrome. If the sending machine has the ability to convert it, the colour fax will be printed at your machine as a monochrome fax.	Order a new ink cartridge. You can continue printing until the LCD shows <i>Cannot Print.</i> (See <i>Replacing the ink cartridges</i> on page 66.)
Low Temperature	The print head is too cold.	Allow the machine to warm up.
Media Error	The memory card is either corrupted, incorrectly formatted, or there is a problem with the memory card.	Put the card firmly into the slot again to make sure it is in the correct position. If the error remains, check the media drive (slot) of the machine by putting in another memory card that you know is working.
Media is Full.	The memory card or USB Flash memory drive you are using has no available space or already contains 999 files.	Your machine can only save to your memory card or USB Flash memory drive if it contains less than 999 files. Try deleting unused files to free some space and try again.
No Caller ID	There is no incoming call history. You did not receive calls or you have not subscribed to the Caller ID service from your telephone company.	If you want to use the Caller ID feature call your telephone company. (See <i>Caller ID (U.K. and Ireland only)</i> on page 41.)
No File	The memory card or USB Flash memory drive in the media drive does not contain a .JPG file.	Put the correct memory card or USB Flash memory drive into the slot again.

Error Message	Cause	Action
No Ink Cartridge	An ink cartridge is not installed correctly.	Take out the new ink cartridge and re-install it slowly until it clicks. (See <i>Replacing the ink cartridges</i> on page 66.)
No Paper Fed	The machine is out of paper or paper is not correctly loaded in the paper tray.	Do one of the following: ■ Refill the paper in the paper tray, and then press Mono Start or Colour Start. ■ Remove the paper and load it again and then press Mono Start or Colour Start. (See <i>Loading paper and other print media</i> on page 10.)
	The paper is jammed in the machine.	Remove the jammed paper by following the steps in <i>Printer jam or paper jam</i> on page 81.
		If you see this error often when making a duplex copy or duplex print, the paper feed rollers may be stained with ink. Clean the paper feed rollers. (See <i>Cleaning the paper feed rollers</i> in appendix A of the <i>Advanced User's Guide</i> .)
	Paper powder has accumulated on the surface of the paper pick-up rollers and the back sides of the paper feed rollers.	Clean the paper pick-up rollers and the back sides of the paper feed rollers. (See <i>Cleaning the paper pick-up rollers</i> in appendix A of the <i>Advanced User's Guide</i> .)
	The Jam Clear Cover is not closed correctly.	Check the Jam Clear Cover is closed evenly at both ends. (See <i>Printer jam or paper jam</i> on page 81.)
	The paper was not inserted in the centre position of the manual feed slot.	Remove the paper and re-insert it in the centre of the manual feed slot, and then press Mono Start or Colour Start . (See <i>Loading paper in the manual feed slot</i> on page 17.)
No Response/Busy	The number you dialled does not answer or is busy.	Verify the number and try again.
Not Registered	You tried to access a One Touch or Speed Dial number that is not programmed.	Set up the One Touch or Speed Dial number. (See <i>Storing One Touch Dial numbers</i> on page 52 and <i>Storing Speed Dial numbers</i> on page 53.)

Error Message	Cause	Action
Out of Memory	The machine's memory is full.	Copy operation in progress Press Stop/Exit and wait until the other operations in progress finish and then try again.
	The memory card or USB Flash memory drive you are using does not have enough free space to scan the documents.	Delete unused files from your memory card or USB Flash memory drive to make some free space and then try again.
Out of Fax Memory	The fax memory is full.	Do one of the following: ■ Clear the data in the memory. To gain extra memory, you can turn off Memory Receive. (See <i>Turning off Memory Receive operations</i> in chapter 4 of the <i>Advanced User's Guide</i>.) ■ Print the faxes that are in the memory. (See <i>Printing a fax from the memory</i> in chapter 4 of the <i>Advanced User's Guide</i>.)
Paper Jam [Front]	Paper is jammed in the machine.	Remove the jammed paper by following the steps in <i>Paper is jammed at the front of the machine</i> on page 81. Make sure the paper length guide is set to the correct paper size. DO NOT extend the paper tray when you load A5 or smaller size paper.
Paper Jam [Front,Rear]	Paper is jammed in the machine.	Remove the jammed paper by following the steps in <i>Paper is jammed at the front and back of the machine</i> on page 83. Make sure the paper length guide is set to the correct paper size. DO NOT extend the paper tray when you load A5 or smaller size paper.
	More than one sheet of paper was placed in the manual feed slot. —OR— Another sheet of paper was placed in the manual feed slot before the LCD showed Put paper in Manual Feed Slot Then Press Start.	Do not put more than one sheet of paper in the manual feed slot at any one time. Wait until the LCD shows Put paper in Manual Feed Slot Then Press Start before you feed the next sheet of paper in the manual feed slot. Remove the jammed paper by following the steps in <i>Paper is jammed at the front and back of the machine</i> on page 83.

Error Message	Cause	Action
Paper Jam [Rear]	Paper is jammed in the machine.	Remove the jammed paper by following the steps in <i>Paper is jammed at the back of the machine</i> on page 82. Make sure the paper length guide is set to the correct paper size. DO NOT extend the paper tray when you load A5 or smaller size paper.
	Paper powder has accumulated on the surface of the paper pick-up rollers and the back sides of the paper feed rollers.	Clean the paper pick-up rollers and the back sides of the paper feed rollers. (See <i>Cleaning the paper pick-up rollers</i> in <i>appendix A</i> of the <i>Advanced User's Guide</i> .)
Unable to CleanXX Unable to Init.XX Unable to PrintXX Unable to ScanXX	The machine has a mechanical problem. —OR— A foreign object such as a paper clip or ripped paper is in the machine.	Open the scanner cover and remove any foreign objects and paper scraps from inside the machine. If the error message continues, disconnect the machine from the power for several minutes and reconnect it. (The machine can be turned off for approximately 24 hours without losing faxes stored in the memory. See <i>Transferring your faxes or Fax Journal report</i> on page 79.)
Unusable Device Disconnect device from front connector & turn machine off & then on	A broken device has been connected to the USB direct interface.	Unplug the device from the USB direct interface, then press On/Off to turn the machine off and then on again.
Unusable Device Please Disconnect USB Device.	A USB device or USB Flash memory drive that is not supported has been connected to the USB direct interface. For more information, visit us at http://solutions.brother.com/ .	Unplug the device from the USB direct interface. Turn the machine off and then on again.
Wrong Ink Color	A colour ink cartridge has been installed in the Black ink cartridge position.	Check which ink cartridges are not matched by colour to their ink cartridge positions and move them to their correct positions.

Error Message	Cause	Action
Wrong Paper Size	The Paper Size setting does not match the size of paper in the tray. Or, you did not set the paper guides in the tray to the indicators for the paper size you are using.	1 Check that the paper size you choose matches the size of paper in the tray. 2 Make sure you loaded the paper in a Portrait position, by setting the paper guides at the indicators for your paper size. 3 After you have checked the paper size and the paper position, press Mono Start or Colour Start to continue printing.
Wrong Tray Setting (MFC-J6710DW)	The machine's Paper Size and Tray Use settings do not match the size of paper in the tray you are using.	1 Press Tray Setting, and make sure the machine's Paper Size and Tray Use settings match the size of paper in the tray you are using. (See <i>Paper Size and Type (MFC-J6710DW)</i> on page 23 and <i>Tray use in Copy mode (MFC-J6710DW only)</i> on page 23.) 2 After you have checked the paper size and tray use settings, press ▲ or ▼ to choose Restart Printing, and press OK to continue printing.

Error animations display

Error animations display step-by-step instructions when paper gets jammed. You can read the steps at your own pace by pressing ► to see the next step and ◀ to go backward.

Transferring your faxes or Fax Journal report

If the LCD shows:

- Unable to CleanXX
- Unable to Init.XX
- Unable to PrintXX
- Unable to ScanXX

We recommend transferring your faxes to another fax machine or to your PC. (See *Transferring faxes to another fax machine* on page 79 or *Transferring faxes to your PC* on page 79.)

You can also transfer the Fax Journal report to see if there are any faxes you need to transfer. (See *Transferring the Fax Journal report to another fax machine* on page 80.)

Transferring faxes to another fax machine

If you have not set up your Station ID, you cannot enter fax transfer mode. (See *Enter personal information (Station ID)* in the *Quick Setup Guide*.)

- 1 Press **Stop/Exit** to interrupt the error temporarily.
- 2 Press **Menu**.
- 3 Press ▲ or ▼ to choose *Service*. Press **OK**.
- 4 Press ▲ or ▼ to choose *Data Transfer*. Press **OK**.

- 5 Press ▲ or ▼ to choose *Fax Transfer*. Press **OK**.
- 6 Do one of the following:
 - If the LCD shows *No Data*, there are no faxes left in the machine's memory.
Press **Stop/Exit**.
 - Enter the fax number to which faxes will be forwarded.
- 7 Press **Mono Start**.

Transferring faxes to your PC

You can transfer the faxes from your machine's memory to your PC.

- 1 Press **Stop/Exit** to interrupt the error temporarily.
- 2 Make sure you have installed **MFL-Pro Suite** on your PC, and then turn on **PC-FAX Receiving** on the PC. (For details see *PC-FAX receiving* in the *Software User's Guide*.)
- 3 Make sure you have set PC-Fax Receive on the machine. (See *PC-Fax Receive (Windows® only)* in chapter 4 of the *Advanced User's Guide*.)
If faxes are in the machine's memory when you set up PC-Fax Receive, the LCD will ask if you want to transfer the faxes to your PC.
- 4 Do one of the following:
 - To transfer all faxes to your PC, press **1**. You will be asked if you want a backup print.
 - To exit and leave the faxes in the memory, press **2**.
- 5 Press **Stop/Exit**.

Transferring the Fax Journal report to another fax machine

If you have not set up your Station ID, you cannot enter fax transfer mode. (See *Enter personal information (Station ID)* in the *Quick Setup Guide*.)


- 1 Press **Stop/Exit** to interrupt the error temporarily.
- 2 Press **Menu**.
- 3 Press **▲** or **▼** to choose *Service*. Press **OK**.
- 4 Press **▲** or **▼** to choose *Data Transfer*. Press **OK**.
- 5 Press **▲** or **▼** to choose *Report Trans.* Press **OK**.
- 6 Enter the fax number to which the Fax Journal report will be forwarded.
- 7 Press **Mono Start**.

Document jam

Documents can jam in the ADF unit if they are not inserted or fed correctly, or if they are too long. Follow the steps below to clear a document jam.

Document is jammed in the top of the ADF unit

- 1 Take out any paper from the ADF that is not jammed.
- 2 Open the ADF cover.
- 3 Pull the jammed document out to the right.

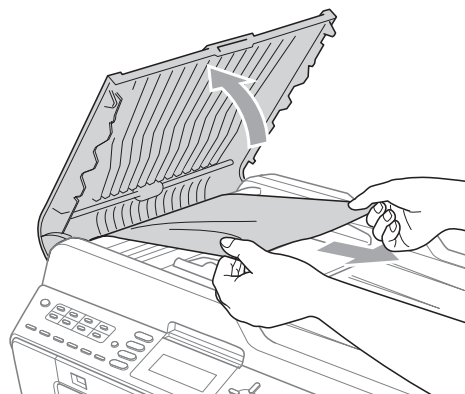


- 4 Close the ADF cover.
- 5 Press **Stop/Exit**.

! IMPORTANT

To avoid document jams close the ADF cover correctly by pushing it gently in the middle.

Document is jammed inside the ADF unit


- 1 Take out any paper from the ADF that is not jammed.
- 2 Lift the document cover.
- 3 Pull the jammed document out to the right.

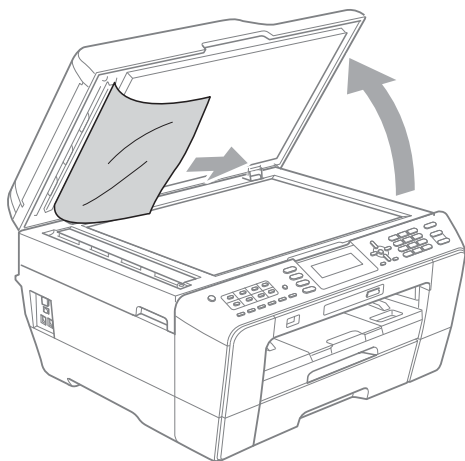

- 4 Close the document cover.
- 5 Press **Stop/Exit**.

Removing small documents jammed in the ADF

- 1 Lift the document cover.
- 2 Insert a piece of stiff paper, such as cardstock, into the ADF to push any small paper scraps through.

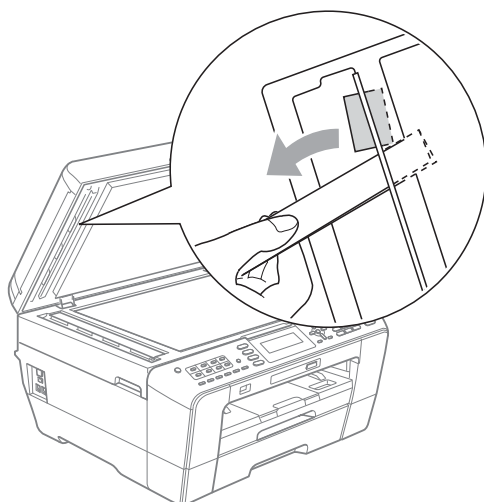

- 3 Close the document cover.
- 4 Press **Stop/Exit**.


Printer jam or paper jam

Take out the jammed paper depending on where it is jammed in the machine.


Paper is jammed at the front of the machine

If the LCD shows **Paper Jam [Front]**, follow these steps:


- 1 Unplug the machine from the electrical socket.
- 2 Pull the paper tray (1) completely out of the machine.

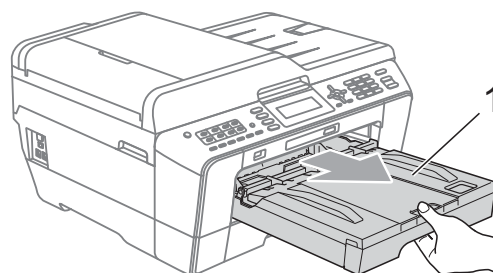


- 3 Pull out the jammed paper (1).

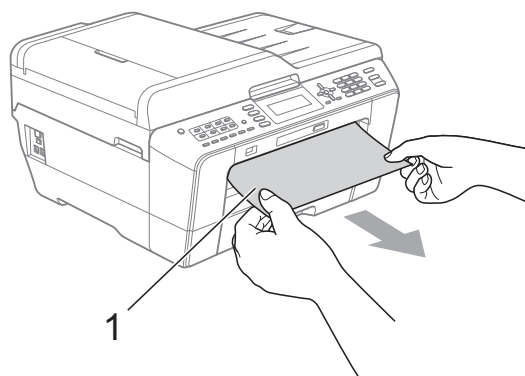

- 4 Lift the Jam Clear flap, and remove the jammed paper.

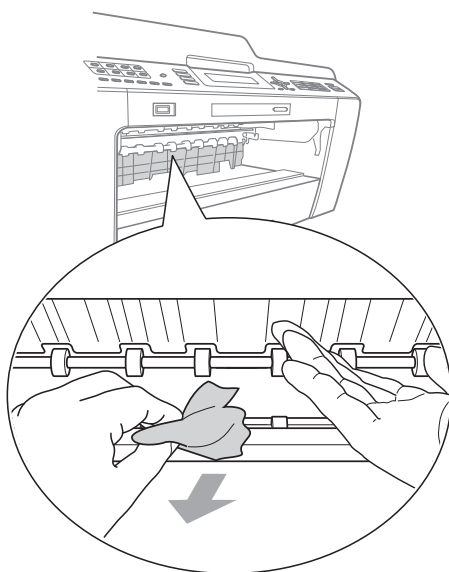

- 5 Put the paper tray firmly back in the machine.

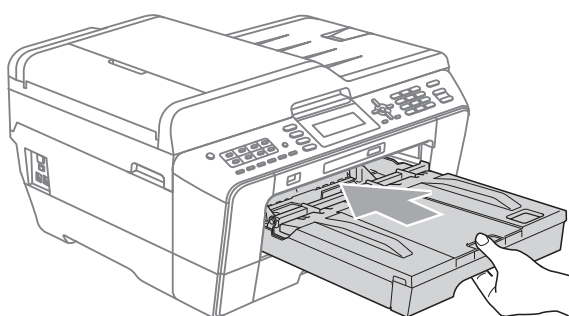

 Note

Make sure you pull out the paper support until it clicks.

- 6 Re-connect the power cord.

 Note

If there is a repeat paper jam, a small piece of paper may be stuck in the machine. (See *Additional paper jam clear operations* on page 86.)

Paper is jammed at the back of the machine

If the LCD shows **Paper Jam [Rear]**, follow these steps:


- 1 Unplug the machine from the electrical socket.




Note

Make sure you remove paper from the manual feed slot, and then close it.


- 2 Open the Jam Clear Cover (1) at the back of the machine.

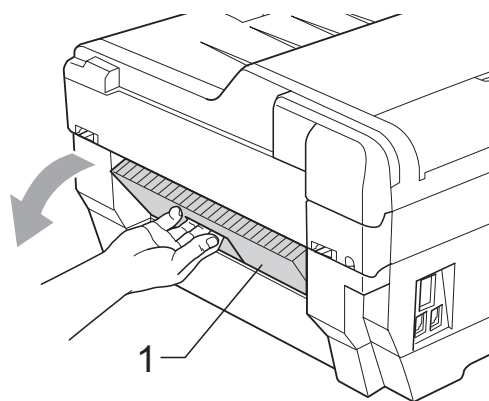

- 3 Pull the jammed paper out of the machine.

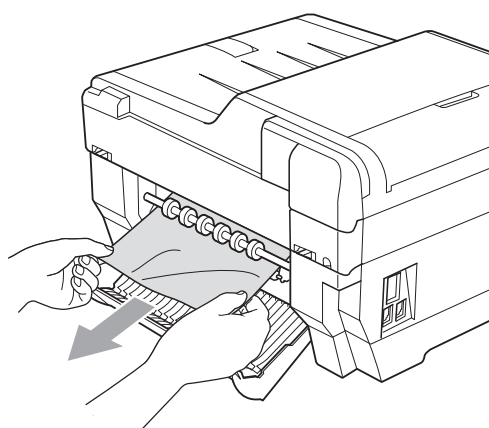

- 4 Close the Jam Clear Cover. Make sure the cover is closed correctly.

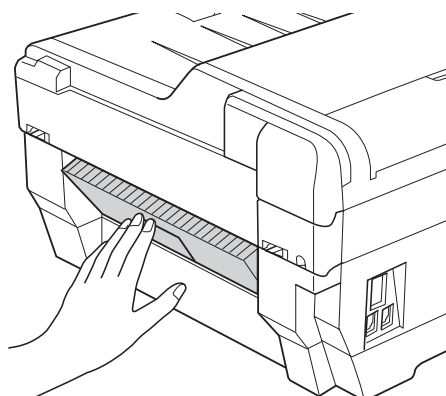

- 5 Re-connect the power cord.

Paper is jammed at the front and back of the machine

If the LCD shows

Paper Jam [Front,Rear], follow these steps:



- 1 Unplug the machine from the electrical socket.




Note

Make sure you remove paper from the manual feed slot, and then close it.


- 2 Pull paper tray #1 (1) and then tray #2 (2) (MFC-J6710DW) completely out of the machine.

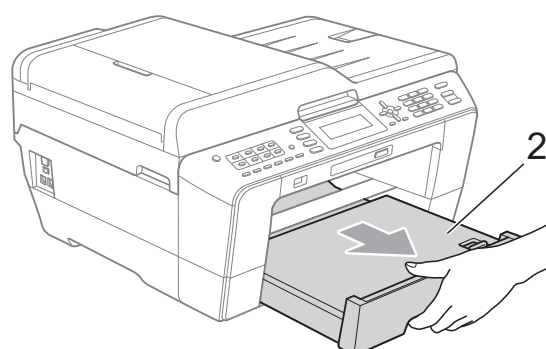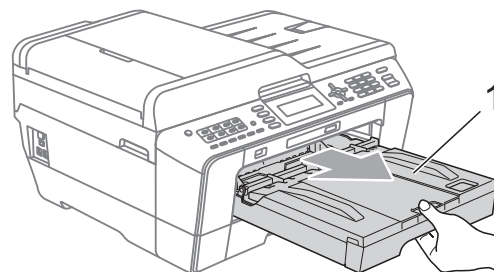


- 3 Pull out the jammed paper (1).

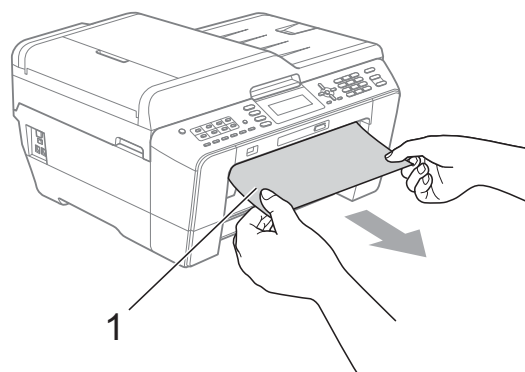


- 4** Lift the flap, and remove the jammed paper.
(With trays removed, go to step **5**.)

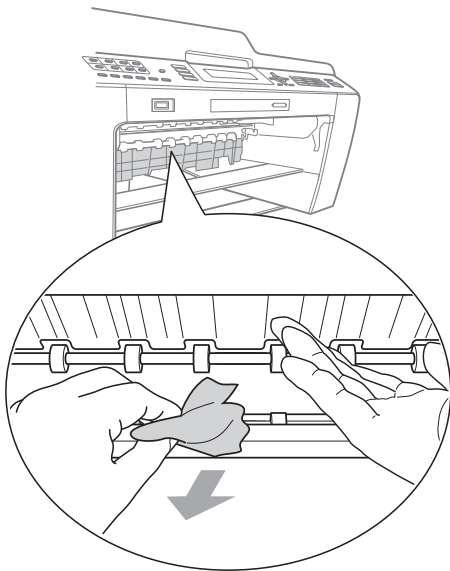


- 5** Open the Jam Clear Cover (1) at the back of the machine.

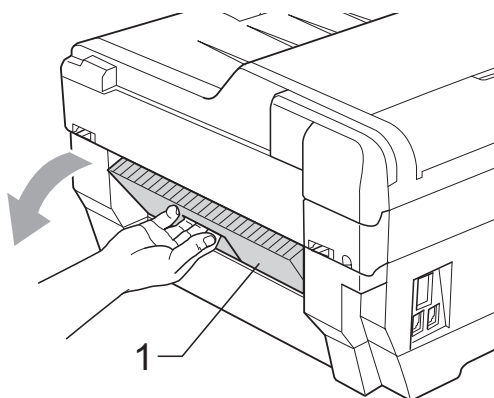



- 6** Pull the jammed paper out of the machine.

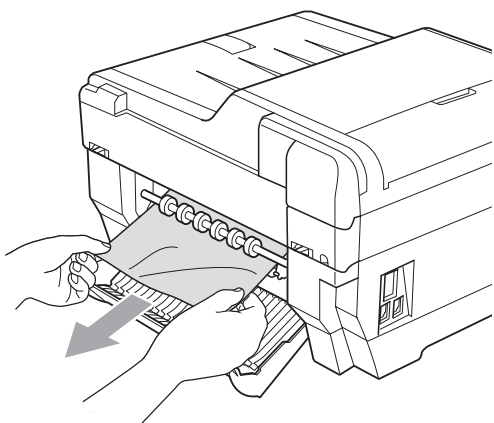


- 7** Close the Jam Clear Cover. Make sure the cover is closed correctly.

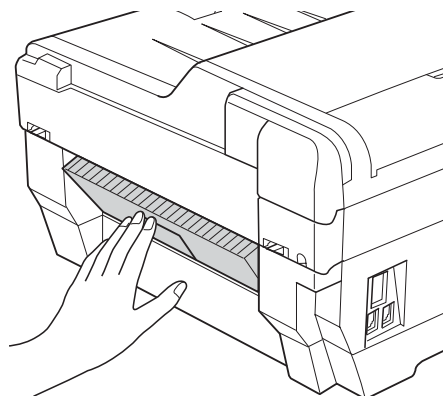

- 8** Put paper tray #1 (1) and then tray #2 (2) firmly back in the machine.

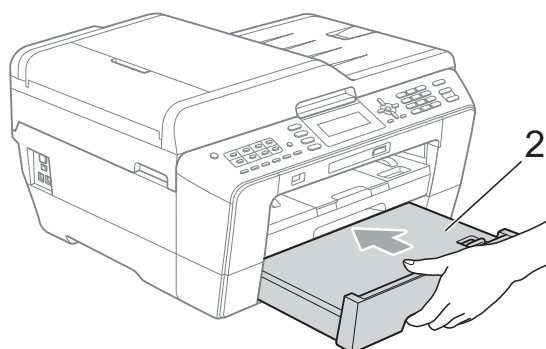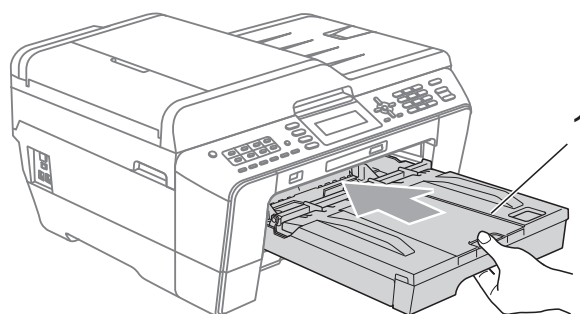


- 9 Using both hands, use the finger holds on each side of the machine to lift the scanner cover (1) into the open position. Make sure that there is no jammed paper left in the corners of the machine.

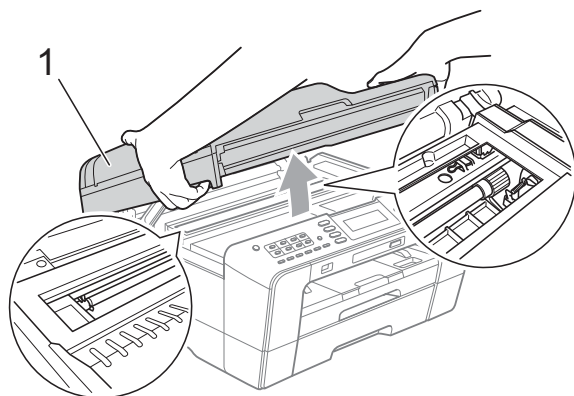


! IMPORTANT

- If the paper is jammed under the print head, unplug the machine from the power source, and then move the print head to take out the paper.
- If the print head is at the right corner as shown in the illustration, you cannot move the print head. Re-connect the power cord. Hold down **Stop/Exit** until the print head moves to the middle. Then unplug the machine from the power source, and take out the paper.

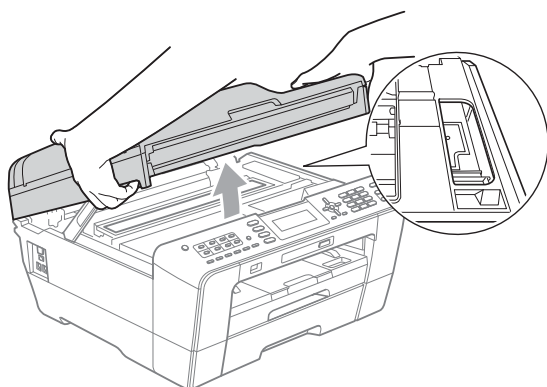

- If ink gets onto your skin, immediately wash with soap and plenty of water.

- 10 Gently close the scanner cover using the finger holds on each side.

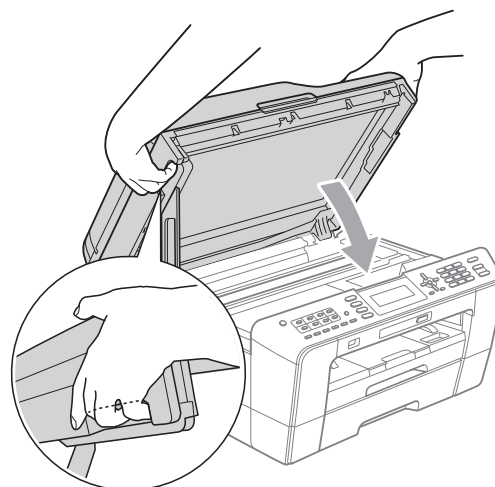

! CAUTION

Be careful not to trap your fingers under the scanner cover.

Always use the finger holds provided on each side of the scanner cover when opening and closing it.



Note

Make sure you pull out the paper support until it clicks.

- 11 Re-connect the power cord.



Note

If there is a repeat paper jam, a small piece of paper may be stuck in the machine. (See *Additional paper jam clear operations* on page 86.)


Additional paper jam clear operations

- 1 Using both hands, use the finger holds on each side of the machine to lift the scanner cover into the open position.




Note

If the print head is at the right corner as shown in the illustration, hold down **Stop/Exit** until the print head moves to the middle.

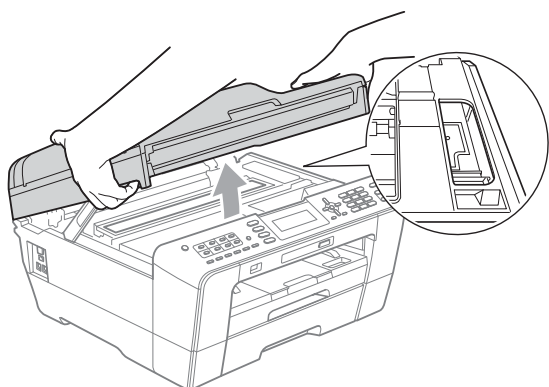

- 2 Unplug the machine from the electrical socket.
- 3 Gently close the scanner cover using the finger holds on each side.

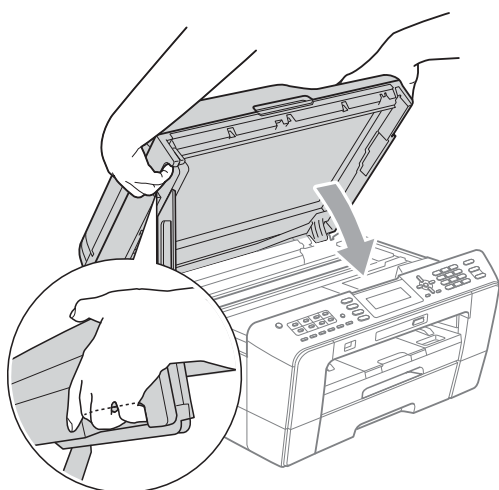


⚠ CAUTION


Be careful not to trap your fingers under the scanner cover.

Always use the finger holds provided on each side of the scanner cover when opening and closing it.

- 4 Open the manual feed slot cover.

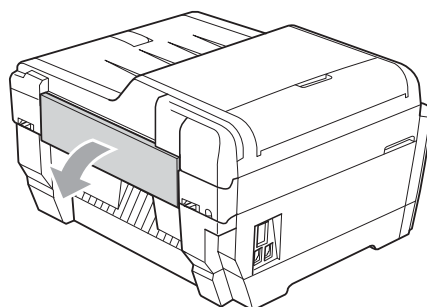

- 5 Put only one sheet of A4 or letter sized thick paper such as glossy paper in a Landscape position in the manual feed slot. Push it into the manual feed slot.

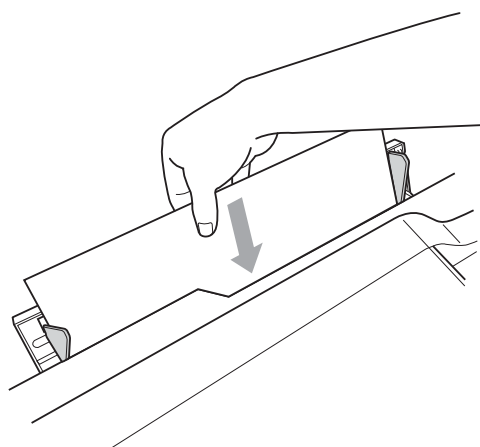

Note

- We recommend you use glossy paper.
- If you don't push the paper deep into the manual feed slot, the machine will not feed it when you re-connect the power cord.

- 6 Re-connect the power cord.
The paper you placed in the manual feed slot will be fed through the machine and ejected.
- 7 Using both hands, use the finger holds on each side of the machine to lift the scanner cover into the open position. Make sure that a piece of paper is not still jammed inside the machine. Gently close the scanner cover using the finger holds on each side.

Troubleshooting

If you think there is a problem with your machine, check the chart below and follow the troubleshooting tips.

Most problems can be easily resolved by yourself. If you need additional help, the Brother Solutions Center offers the latest FAQs and troubleshooting tips.

Visit us at <http://solutions.brother.com/>.

If you are having difficulty with your machine

Printing

Difficulty	Suggestions
No printout.	Check the interface cable or wireless connection on both the machine and your computer. (See the <i>Quick Setup Guide</i> .)
	Check that the machine is plugged in and that the On/Off key is on.
	One or more ink cartridges have reached the end of their life. (See <i>Replacing the ink cartridges</i> on page 66.)
	Check to see if the LCD is showing an error message. (See <i>Error and Maintenance messages</i> on page 72.)
	If the LCD shows <code>Cannot Print and Replace Ink</code> , see <i>Replacing the ink cartridges</i> on page 66.
	Check that the correct printer driver has been installed and chosen.
	Make sure that the machine is online. Click Start and then Printers and Faxes . Brother MFC-XXXXX (where XXXXX is your model name), and make sure that Use Printer Offline is unchecked.
Poor print quality.	Check the print quality. (See <i>Checking the print quality</i> on page 70.)
	Make sure that the Media Type setting in the printer driver or the <code>Paper Type</code> setting in the machine's menu matches the type of paper you are using. (See <i>Printing for Windows®</i> or <i>Printing and Faxing for Macintosh</i> in the <i>Software User's Guide</i> and <i>Paper Type</i> on page 22.)
	Make sure that your ink cartridges are fresh. The following may cause ink to clog: ■ The expiration date written on the cartridge package has passed. (Brother Original cartridges stay usable for up to two years if kept in their original packaging.) ■ The ink cartridge has been in your machine for over six months. ■ The ink cartridge may not have been stored correctly before use.
	Make sure you are using Brother Original Innobella™ ink. Brother does not recommend the use of cartridges other than Brother Original cartridges or the refilling of used cartridges with ink from other sources.
	Try using the recommended types of paper. (See <i>Acceptable paper and other print media</i> on page 25.)
	The recommended environment for your machine is between 20 °C to 33 °C.
White horizontal lines appear in text or graphics.	Clean the print head. (See <i>Cleaning the print head</i> on page 69.)
	Make sure you are using Brother Original Innobella™ ink.
	Try using the recommended types of paper. (See <i>Acceptable paper and other print media</i> on page 25.)

Printing (continued)

Difficulty	Suggestions
The machine prints blank pages.	Clean the print head. (See <i>Cleaning the print head</i> on page 69.)
	Make sure you are using Brother Original Innobella™ ink.
Characters and lines are blurred.	Check the printing alignment. (See <i>Checking the print alignment</i> on page 71.)
Printed text or images are skewed.	Make sure the paper is loaded correctly in the paper tray and the paper side guides are adjusted correctly. (See <i>Loading paper and other print media</i> on page 10.)
	Make sure the Jam Clear Cover is closed correctly.
Smudge or stain at the top centre of the printed page.	Make sure the paper is not too thick or curled. (See <i>Acceptable paper and other print media</i> on page 25.)
Printing appears dirty or ink seems to run.	Make sure you are using the recommended types of paper. (See <i>Acceptable paper and other print media</i> on page 25.) Don't handle the paper until the ink is dry.
	Make sure you are using Brother Original Innobella™ ink.
	If you are using photo paper, make sure that you have set the correct paper type. If you are printing a photo from your PC, set the Media Type in the Basic tab of the printer driver.
Stains appear on the reverse side or at the bottom of the page.	Make sure the printer platen is not dirty with ink. (See <i>Cleaning the machine's printer platen</i> in appendix A of the <i>Advanced User's Guide</i> .)
	Make sure you are using Brother Original Innobella™ ink.
	Make sure you are using the paper support flap. (See <i>Loading paper and other print media</i> on page 10.)
The machine prints dense lines on the page.	Check Reverse Order in the Basic tab of the printer driver.
The printouts are wrinkled.	(Windows® users) In the printer driver Advanced tab, click Colour Settings , and uncheck Bi-Directional Printing . (Macintosh users) In the printer driver, choose Print Settings , click Advanced , choose Other Print Options , and uncheck Bi-Directional Printing .
	Make sure you are using Brother Original Innobella™ ink.
Cannot perform "Page Layout" printing.	Check that the paper size setting in the application and in the printer driver are the same.
Print speed is too slow.	Try changing the printer driver setting. The highest resolution needs longer data processing, sending and printing time. Try the other quality settings in the printer driver Advanced tab. Also, click Colour Settings , and make sure you uncheck Colour Enhancement .
	Turn the borderless feature off. Borderless printing is slower than normal printing. (See <i>Printing for Windows®</i> or <i>Printing and Faxing for Macintosh</i> in the <i>Software User's Guide</i> .)
Colour Enhancement is not working correctly.	If the image data is not full colour in your application (such as 256 colour), Colour Enhancement will not work. Use at least 24 bit colour data with the Colour Enhancement feature.
Photo paper does not feed correctly.	When you print on Brother Photo paper, load one extra sheet of the same photo paper in the paper tray. An extra sheet has been included in the paper package for this purpose.
	Clean the paper pick-up rollers. (See <i>Cleaning the paper pick-up rollers</i> in appendix A of the <i>Advanced User's Guide</i> .)

Printing (continued)

Difficulty	Suggestions
Machine feeds multiple pages.	Make sure the paper is loaded correctly in the paper tray. (See <i>Loading paper and other print media</i> on page 10.)
	Load only one size of paper and one type of paper in the paper tray at any one time.
	Make sure the Base Pad in the paper tray is not dirty. (See <i>Cleaning the paper pick-up rollers</i> in <i>appendix A</i> of the <i>Advanced User's Guide</i> .)
	If there are only a few sheets of paper in the paper tray the machine may not pick them up correctly. Make sure there are at least 10 sheets of paper in the tray.
There is a paper jam.	Make sure the paper length guide is set to the correct paper size. Do not extend the paper tray when you load A5 or smaller size paper. (See <i>Printer jam or paper jam</i> on page 81.)
Paper jam reoccurs.	If there is a repeat paper jam, a small piece of paper may be stuck in the machine. Make sure paper is not still jammed in the machine. (See <i>Additional paper jam clear operations</i> on page 86.)
The paper jams when you use duplex copy or duplex print.	Use one of the jam prevention settings, DX1 or DX2. For copying, see <i>Duplex (2-sided) copying</i> in <i>chapter 7</i> of the <i>Advanced User's Guide</i> ; for printing see <i>Duplex / Booklet</i> for Windows® or <i>Duplex Printing</i> for Macintosh in the <i>Software User's Guide</i> .
	If paper jams often when using duplex copy or duplex print, the paper feed rollers may be stained with ink. Clean the paper feed rollers. (See <i>Cleaning the paper feed rollers</i> in <i>appendix A</i> of the <i>Advanced User's Guide</i> .)
Printed pages are not stacked neatly.	Make sure you are using the paper support flap. (See <i>Loading paper and other print media</i> on page 10.)
Machine does not print from Adobe® Illustrator®.	Try to reduce the print resolution. (See <i>Printing</i> for Windows® or <i>Printing and Faxing</i> for Macintosh in the <i>Software User's Guide</i> .)

Printing Received Faxes

Difficulty	Suggestions
Condensed print and white streaks across the page or the top and bottom of sentences are cut off.	You probably had a bad connection, with static or interference on the telephone line. Ask the other party to send the fax again.
Vertical black lines when receiving.	The sender's scanner may be dirty. Ask the sender to make a copy to see if the problem is with the sending machine. Try receiving from another fax machine.
Received colour fax prints only in black and white.	Replace the colour ink cartridges that have reached the end of their life, and then ask the other person to send the colour fax again. (See <i>Replacing the ink cartridges</i> on page 66.)
Left and Right margins are cut off or a single page is printed on two pages.	Turn on Auto Reduction. (See <i>Printing a reduced incoming fax</i> in <i>chapter 4</i> of the <i>Advanced User's Guide</i> .)

Telephone Line or Connections

Difficulty	Suggestions
Dialling does not work. (No dial tone)	Make sure the machine is plugged in and turned on.
	Check the line cord connections.
	Change the Tone/Pulse setting. (See the <i>Quick Setup Guide</i> .)
	Lift the external telephone's handset and listen for a dial tone. If there is no dial tone, ask your telephone company to check the line and/or socket.
The machine does not answer when called.	Make sure the machine is in the correct Receive Mode for your setup. (See <i>Choose the Receive Mode</i> on page 36.) Check for a dial tone. If possible, call your machine to hear it answer. If there is still no answer, check the telephone line cord connection. If there is no ringing when you call your machine, ask your telephone company to check the line.

Receiving Faxes

Difficulty	Suggestions
Cannot receive a fax.	If you connect your machine to PBX or ISDN, set the menu setting of Telephone Line Type to your telephone type. (See <i>Setting the Telephone Line Type</i> on page 42.)

Sending Faxes

Difficulty	Suggestions
Cannot send a fax.	Check all line cord connections.
	Make sure that the FAX  key is illuminated.
	Ask the other party to check that the receiving machine has paper.
	Print the Transmission Verification Report and check for an error. (See <i>Reports in chapter 6 of the Advanced User's Guide</i> .)
Transmission Verification Report says "RESULT:ERROR".	There is probably temporary noise or static on the line. Try sending the fax again. If you send a PC FAX message and get "RESULT:ERROR" on the Transmission Verification Report, your machine may be out of memory. To gain extra memory, you can turn off Memory Receive (see <i>Turning off Memory Receive operations in chapter 4 of the Advanced User's Guide</i>), print fax messages in memory (see <i>Printing a fax from the memory in chapter 4 of the Advanced User's Guide</i>) or cancel a Delayed Fax or Polling Job. (see <i>Cancelling a fax in progress on page 33</i> and <i>Checking and cancelling waiting jobs in chapter 3 of the Advanced User's Guide</i> .) If the problem continues, ask the telephone company to check your telephone line.
	If you often get transmission errors due to possible interference on the telephone line, try changing the menu setting of Compatibility to Basic (for VoIP) . (See <i>Telephone line interference / VoIP on page 95</i> .)
	If you connect your machine to PBX or ISDN, set the menu setting of Telephone Line Type to your telephone type. (See <i>Setting the Telephone Line Type on page 42</i> .)
Poor fax send quality.	Try changing your resolution to Fine or S. Fine . Make a copy to check your machine's scanner operation. If the copy quality is not good, clean the scanner. (See <i>Cleaning the scanner glass on page 68</i> .)
Vertical black lines when sending.	Black vertical lines on faxes you send are typically caused by dirt or correction fluid on the glass strip. Clean the glass strip. (See <i>Cleaning the scanner glass on page 68</i> .)

Handling Incoming Calls

Difficulty	Suggestions
The machine "Hears" a voice as a CNG Tone.	If Fax Detect is set to On, your machine is more sensitive to sounds. It may mistakenly interpret certain voices or music on the line as a fax machine calling and respond with fax receiving tones. Deactivate the machine by pressing Stop/Exit . Try avoiding this problem by turning Fax Detect to Off. (See <i>Fax Detect</i> on page 39.)
Sending a fax call to the machine.	If you answered on an extension or external telephone, press your Remote Activation Code (the factory setting is * 5 1). If you answered on an external telephone, press Start to receive the fax. When your machine answers, hang up.
Custom features on a single line.	If you have Call Waiting, Call Waiting/Caller ID, an alarm system or other custom feature on a single telephone line with your machine, it may create a problem sending or receiving faxes. For example: If you subscribe to Call Waiting or some other custom service and its signal comes through the line while your machine is sending or receiving a fax, the signal can temporarily interrupt or disrupt the faxes. Brother's ECM (Error Correction Mode) feature should help overcome this problem. This condition is related to the telephone system industry and is common to all devices that send and receive information on a single, shared line with custom features. If avoiding a slight interruption is crucial to your business, a separate telephone line with no custom features is recommended.

Copying Difficulties

Difficulty	Suggestions
Cannot make a copy.	Make sure that the COPY  key is illuminated.
Poor copy results when using the ADF.	Try using the scanner glass. (See <i>Using the scanner glass</i> on page 30.)
Vertical black lines or streaks appear in copies.	Vertical black lines or streaks on copies are typically caused by dirt or correction fluid on the glass strip. Clean the glass strip. (See <i>Cleaning the scanner glass</i> on page 68.)
Fit to Page does not work correctly.	Make sure your source document is not skewed. Reposition the document and try again.

Scanning Difficulties

Difficulty	Suggestions
TWAIN or WIA errors appear when starting to scan. (Windows®)	Make sure the Brother TWAIN or WIA driver is chosen as the primary source in your scanning application. For example, in PaperPort™ 12SE with OCR, click File , Scan or Get Photo and click Select to choose the Brother TWAIN/WIA driver.
TWAIN or ICA errors appear when starting to scan. (Macintosh)	Make sure the Brother TWAIN driver is chosen as the primary source. In PageManager, click File , Select Source and choose the Brother TWAIN driver. Mac OS X 10.6.x users can also scan documents using the ICA Scanner Driver. See <i>Scanning a document using the ICA driver (Mac OS X 10.6.x)</i> in the <i>Software User's Guide</i> .
Poor scanning results when using the ADF.	Try using the scanner glass. (See <i>Using the scanner glass</i> on page 30.)

Scanning Difficulties (continued)

Difficulty	Suggestions
OCR does not work.	Try increasing the scanner resolution. (Macintosh users) Presto! PageManager must be downloaded and installed before use. See <i>Accessing Brother Support (Macintosh)</i> on page 3 for further instructions.

Software Difficulties

Difficulty	Suggestions
Cannot install software or print.	(Windows® users only) Run the Repair MFL-Pro Suite program on the Installation CD-ROM. This program will repair and reinstall the software.
"Device Busy"	Make sure the machine is not showing an error message on the LCD.
Cannot print images from FaceFilter Studio.	To use FaceFilter Studio, you must install the FaceFilter Studio application from the Installation CD-ROM supplied with your machine. To install FaceFilter Studio see the <i>Quick Setup Guide</i>. Also, before you start FaceFilter Studio for the first time, you must make sure your Brother machine is turned on and connected to your computer. This will allow you to access all the functions of FaceFilter Studio.

PhotoCapture Center™ Difficulties

Difficulty	Suggestions
Removable Disk does not work correctly.	- Have you installed the Windows® 2000 update? If not, do the following: - Unplug the USB cable. - Install the Windows® 2000 update using one of the following methods. - Install MFL-Pro Suite from the Installation CD-ROM. (See the <i>Quick Setup Guide</i>.) - Download the latest service pack from the Microsoft Web site. - Wait about 1 minute after you restart the PC, and then connect the USB cable. - Take out the memory card or USB Flash memory drive and put it back in again. - If you have tried "Eject" from within Windows®, take out the memory card or USB Flash memory drive before you continue. - If an error message appears when you try to eject the memory card or USB Flash memory drive, it means the card is being accessed. Wait a while and then try again. - If all of the above do not work, turn off your PC and machine, and then turn them on again. (You will have to unplug the power cord of the machine to turn it off.)
Cannot access Removable Disk from Desktop icon.	Make sure that you have correctly inserted the memory card or USB Flash memory drive.
Part of my photo is missing when printed.	Make sure that Borderless printing and Cropping are turned off. (See <i>Borderless printing</i> and <i>Cropping</i> in chapter 8 of the <i>Advanced User's Guide</i> .)

Network Difficulties

Difficulty	Suggestions
Cannot print over the network.	Make sure that your machine is powered on and is online and in Ready mode. Print a Network Configuration list (see <i>Reports</i> in <i>chapter 6</i> of the <i>Advanced User's Guide</i>.) and check the current Network settings printed in this list. Reconnect the LAN cable to the hub to verify that the cabling and network connections are good. If possible, try connecting the machine to a different port on your hub using a different cable. If the connections are good, the machine shows LAN Active for 2 seconds. (If you are having Network problems, see the <i>Network User's Guide</i> for more information.)
The network scanning feature does not work.	(Windows® users) It is necessary to configure third-party Security/Firewall Software to allow Network scanning. To add port 54925 for Network scanning, enter the information below: In Name: Enter any description, for example Brother NetScan. In Port number: Enter 54925. In Protocol: UDP is selected. Please refer to the instruction manual that came with your third-party Security/Firewall Software or contact the software manufacturer. (Macintosh users) Re-select your machine in the Device Selector application located in Macintosh HD/Library/Printers/Brother/Utilities/DeviceSelector or from the model list in ControlCenter2.
The network PC-Fax Receive feature does not work.	(Windows® users only) It is necessary to set the third-party Security/Firewall Software to allow PC-FAX Rx. To add port 54926 for Network PC-FAX Rx, enter the information below: In Name: Enter any description, for example Brother PC-FAX Rx. In Port number: Enter 54926. In Protocol: UDP is selected. Please refer to the instruction manual that came with your third-party Security/Firewall Software or contact the software manufacturer.
The Brother software cannot be installed.	(Windows® users) Allow network access to the following programs if your security software displays an alert message during MFL-Pro Suite installation. (Macintosh users) If you are using a firewall function of anti-spyware or antivirus security software, temporarily disable it and then install the Brother software.
Cannot connect to wireless network.	Investigate the problem using the WLAN Report. Press Menu key, choose Print Reports and then press OK. Choose WLAN Report. For details, see the <i>Network User's Guide</i>.
Reset the network settings.	Press Menu key, choose Network and then press OK. Choose Network Reset. For details, see the <i>Network User's Guide</i>.

Dial Tone detection

When you send a fax automatically, by default your machine will wait for a fixed amount of time before it starts to dial the number. By changing the Dial Tone setting to `Detection` you can make your machine dial as soon as it detects a dial tone. This setting can save a small amount of time when sending a fax to many different numbers. If you change the setting and start having problems with dialling you should change back to the factory `No Detection` setting.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to choose `Initial Setup`. Press **OK**.
- 3 Press **▲** or **▼** to choose `Dial Tone`.
- 4 Press **◀** or **▶** to choose `Detection` or `No Detection`. Press **OK**.
- 5 Press **Stop/Exit**.

Telephone line interference / VoIP

If you are having problems sending or receiving a fax due to possible interference on the telephone line, you can change the compatibility setting, which reduces the modem speed to minimise errors.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to choose `Initial Setup`. Press **OK**.
- 3 Press **▲** or **▼** to choose `Compatibility`.
- 4 Press **◀** or **▶** to choose `High`, `Normal` or `Basic (for VoIP)`.
 - `Basic (for VoIP)` cuts the modem speed to 9,600 bps and turns off colour fax receiving and ECM, except for colour fax sending. Unless interference is a recurring problem on your telephone line, you may prefer to use it only when needed.
 - To improve compatibility with most VoIP services, Brother recommends changing the compatibility setting to `Basic (for VoIP)`.
 - `Normal` sets the modem speed at 14,400 bps.
 - `High` increases the modem speed to 33,600 bps. (factory setting)
 Press **OK**.

- 5 Press **Stop/Exit**.



Note

VoIP (Voice over IP) is a type of phone system that uses an internet connection, rather than a traditional phone line.

Machine Information

Checking the serial number

You can see the machine's serial number on the LCD.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to choose `Machine Info.`
Press **OK**.
- 3 Press **▲** or **▼** to choose `Serial No.`
Press **OK**.
- 4 Press **Stop/Exit**.

Reset functions

The following reset functions are available:

1 `Network`

You can reset the print server back to its default factory settings such as the password and IP address information.

2 `Speed Dial&Fax`

Speed Dial & Fax resets the following settings:

- **Speed Dial**
(Speed-Dial and Setup Groups)
- **Programmed fax jobs in the memory**
(Polled Transmit, Delayed Fax and Delayed Batch Transmission)
- **Station ID**
(Name and Number)
- **Remote Fax Options**
(Fax Forwarding)
- **Report settings**
(Transmission Verification Report, Quick Dial List and Fax Journal)
- **History**
(Caller ID history and Outgoing Call)
- **Faxes in memory**

3 `All Settings`

You can restore all settings to their factory defaults.

Brother strongly recommends you use this operation when you dispose of the machine.



Note

Unplug the interface cable before you choose `Network` or `All Settings`.

How to reset the machine

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to choose `Initial Setup`.
Press **OK**.
- 3 Press **▲** or **▼** to choose `Reset`.
Press **OK**.
- 4 Press **▲** or **▼** to choose the type of reset you want to use.
Press **OK**.
Press **1** to confirm.
- 5 Press **1** to reboot the machine.

On-screen programming

Your machine is designed to be easy to operate with LCD on-screen programming using the menu keys. User-friendly programming helps you take full advantage of all the menu selections your machine has to offer.

Since your programming is done on the LCD, we have created step-by-step on-screen instructions to help you program your machine. All you need to do is follow the instructions as they guide you through the menu selections and programming options.

Menu table

The menu table will help you understand the menu selections and options that are found in the machine's programs. The factory settings are shown in Bold with an asterisk.

Menu (Menu)

Level1	Level2	Level3	Options	Descriptions	Page
Ink Management	Test Print	—	Print Quality Alignment	Lets you check the print quality or alignment.	70
	Cleaning	—	Black Color All	Lets you clean the print head.	69
	Ink Volume	—	—	Lets you check the available ink volume.	See ¹ .
General Setup	Mode Timer	—	Off 0Sec 30Secs 1Min 2Mins* 5Mins	Sets the time to return to Fax mode.	
	Tray Setting (MFC-J6710DW)	Tray#1	Paper Type (Options) Plain Paper* Inkjet Paper Brother BP71 Brother BP61 Other Glossy Transparency	Sets the type of paper in the paper tray #1.	23
			Paper Size (Options) A4* A5 A3 10x15cm Letter Legal Ledger	Sets the size of paper in the paper tray #1.	
¹ See <i>Advanced User's Guide</i> .					
 The factory settings are shown in Bold with an asterisk.					

Level1	Level2	Level3	Options	Descriptions	Page
General Setup (Continued)	Tray Setting (MFC-J6710DW) (Continued)	Tray#2	Paper Type (Option) Plain Paper*	Sets the type of paper in the paper tray #2.	23
			Paper Size (Options) A4* A3 Letter Legal Ledger	Sets the size of paper in the paper tray #2.	
		Tray Use:Copy	Tray#1 Tray#2 Auto Select*	Choose the tray that will be used for Copy mode.	23
		Tray Use:Fax	Tray#1 Tray#2 Auto Select*	Choose the tray that will be used for Fax mode.	24
		Paper Setting (MFC-J6510DW)	Paper Type	Plain Paper* Inkjet Paper Brother BP71 Brother BP61 Other Glossy Transparency	Sets the type of paper in the paper tray.
	Paper Size		A4* A5 A3 10x15cm Letter Legal Ledger	Sets the size of paper in the paper tray.	22
¹ See <i>Advanced User's Guide</i> .					
 The factory settings are shown in Bold with an asterisk.					

Level1	Level2	Level3	Options	Descriptions	Page
General Setup (Continued)	Volume	Ring	Off Low Med* High	Adjusts the ring volume.	8
		Beeper	Off Low* Med High	Adjusts the volume level of the beeper.	9
		Speaker	Off Low Med* High	Adjusts the volume level of the speaker.	9
	Auto Daylight	—	On* Off	Changes for Daylight Savings Time automatically.	See ¹ .
	LCD Settings	Backlight	Light* Med Dark	You can adjust the brightness of the LCD backlight.	9
		Dim Timer	Off 10Secs 20Secs 30Secs*	You can set how long the LCD backlight stays on for after the last key press.	See ¹ .
		Wallpaper	1* 2 3 4	You can choose the wallpaper of the LCD.	
	Sleep Mode	—	1Min 2Mins 3Mins 5Mins* 10Mins 30Mins 60Mins	You can choose how long the machine will remain idle before it goes into sleep mode.	
	A3 - Short Grain	—	On* Off	Turn on this setting when you use A3 short grain paper.	24
	Function Lock	Set Password	—	You can restrict selected machine operation for up to 10 restricted users and all other non-authorized Public users.	See ¹ .
		Lock Off-On	—		
		Setup User	—		

¹

See *Advanced User's Guide*.



The factory settings are shown in Bold with an asterisk.

Level1	Level2	Level3	Options	Descriptions	Page
Fax	Setup Receive	Ring Delay	0 1 2* 3 4 5 6 7 8 (Example for the U.K.)	Sets the number of rings before the machine answers in Fax Only or Fax/Tel mode.	38
		F/T Ring Time	20Secs 30Secs* 40Secs 70Secs	Sets the fast double-ring time in Fax/Tel mode.	38
		Fax Detect	On* Off	Receives fax messages automatically when you answer a call and hear fax tone.	39
		Remote Codes	On* (*51, #51) Off	Allows you to answer all calls at an extension or external telephone and use codes to turn the machine on or off. You can personalize these codes.	47
		Auto Reduction	On* Off	Cuts the size of incoming faxes to fit the paper size.	See ¹ .
		Memory Receive	Off* Fax Forward Fax Storage PC Fax Receive	You can set the machine to either forward fax messages, store incoming faxes in the memory (so you can retrieve them while you are away from your machine), or send faxes to your PC. If you choose Fax Forward or PC-Fax Receive, you can turn on the safety feature Backup Print.	
¹ See <i>Advanced User's Guide</i> .					
 The factory settings are shown in Bold with an asterisk.					

Level1	Level2	Level3	Options	Descriptions	Page
Fax (Continued)	Report Setting	XMIT Report	On On+Image Off* Off+Image Off2 Off2+Image	Initial setup for Transmission Verification Report and Fax Journal Report.	34
		Journal Period	Off Every 50 Faxes* Every 6 Hours Every 12 Hours Every 24 Hours Every 2 Days Every 7 Days		See ¹ .
	Print Document	—	—	Prints incoming faxes stored in the memory.	
	Remote Access	—	---*	Set your own code for Remote Retrieval.	
	Remaining Jobs	—	—	Check which jobs are in the memory and lets you cancel chosen jobs.	
	Miscellaneous	BT Call Sign On (U.K. Only)	On Off*	Uses with BT Call Sign.	
		Caller ID (U.K. and Ireland only)	On* Off	View or print a list of the last 30 Caller IDs stored in the memory.	41
	¹ See <i>Advanced User's Guide</i> .				
 The factory settings are shown in Bold with an asterisk.					

Network menu

Level1	Level2	Level3	Level4	Options	Descriptions
Network	Wired LAN	TCP/IP	BOOT Method	Auto* Static RARP BOOTP DHCP	Chooses the BOOT method that best suits your needs.
			IP Address	[000-255]. [000-255]. [000-255]. [000-255]	Enter the IP address.
			Subnet Mask	[000-255]. [000-255]. [000-255]. [000-255]	Enter the Subnet mask.
			Gateway	[000-255]. [000-255]. [000-255]. [000-255]	Enter the Gateway address.
			Node Name	BRNXXXXXXXXXXXX	Enter the Node name.
			WINS Config	Auto* Static	Chooses the WINS configuration mode.
			WINS Server	(Primary) 000.000.000.000 (Secondary) 000.000.000.000	Specifies the IP address of the primary or secondary server.
			DNS Server	(Primary) 000.000.000.000 (Secondary) 000.000.000.000	Specifies the IP address of the primary or secondary server.
			APIPA	On* Off	Automatically allocates the IP address from the link-local address range.
			IPv6	On Off*	Enable or disable the IPv6 protocol.
See Network User's Guide.					
 The factory settings are shown in Bold with an asterisk.					

Level1	Level2	Level3	Level4	Options	Descriptions
Network (Continued)	Wired LAN (Continued)	Ethernet	—	Auto* 100B-FD 100B-HD 10B-FD 10B-HD	Chooses the Ethernet link mode.
		MAC Address	—	—	You can see your machine's MAC address from the control panel.
	WLAN	TCP/IP	BOOT Method	Auto* Static RARP BOOTP DHCP	Chooses the BOOT method that best suits your needs.
			IP Address	[000-255]. [000-255]. [000-255]. [000-255]	Enter the IP address.
			Subnet Mask	[000-255]. [000-255]. [000-255]. [000-255]	Enter the Subnet mask.
			Gateway	[000-255]. [000-255]. [000-255]. [000-255]	Enter the Gateway address.
			Node Name	BRWXXXXXXXXXXXX	Enter the Node name.
			WINS Config	Auto* Static	Chooses the WINS configuration mode.
			WINS Server	(Primary) 000.000.000.000 (Secondary) 000.000.000.000	Specifies the IP address of the primary or secondary server.
			DNS Server	(Primary) 000.000.000.000 (Secondary) 000.000.000.000	Specifies the IP address of the primary or secondary server.
See <i>Network User's Guide</i> .					
 The factory settings are shown in Bold with an asterisk.					

Level1	Level2	Level3	Level4	Options	Descriptions
Network (Continued)	WLAN (Continued)	TCP/IP (Continued)	APIPA	On* Off	Automatically allocates the IP address from the link-local address range.
			IPv6	On Off*	Enable or disable IPv6 protocol for a wireless LAN.
		Setup Wizard	—	—	You can manually configure your print server for a wireless network.
		WPS/AOSS	—	—	You can easily configure your wireless network settings using the one-button push method.
		WPS w/PIN Code	—	—	You can easily configure your wireless network settings using WPS with a PIN code.
		WLAN Status	Status	—	You can see the current wireless network status.
			Signal	—	You can see the current wireless network signal strength.
			SSID	—	You can see the current SSID.
			Comm. Mode	—	You can see the current Communication Mode.
		MAC Address	—	—	You can see your machine's MAC address from the control panel.
See <i>Network User's Guide</i> .					
 The factory settings are shown in Bold with an asterisk.					

Level1	Level2	Level3	Level4	Options	Descriptions
Network (Continued)	E-mail/IFAX (Available after IFAX is downloaded)	Mail Address	—	—	Enter the mail address. (Up to 60 characters)
		Setup Server	SMTP Server	Name (Up to 30 characters) IP Address [000-255]. [000-255]. [000-255]. [000-255]	Enter the SMTP server address.
			SMTP Port	[00001-65535]	Enter the SMTP port number.
			Auth. for SMTP	None* SMTP-AUTH POP bef.SMTP	Selects the Security method for E-mail notification.
			POP3 Server	Name (Up to 30 characters) IP Address [000-255]. [000-255]. [000-255]. [000-255]	Enter the POP3 server address.
			POP3 Port	[00001-65535]	Enter the POP3 port number.
			Mailbox Name	—	Enter the mail box name. (Up to 20 characters)
			Mailbox Pwd	—	Enter the password to login to the POP3 server. (Up to 20 characters)
			APOP	On off*	Enables or disables APOP.
See <i>Network User's Guide</i> .					
 The factory settings are shown in Bold with an asterisk.					

Level1	Level2	Level3	Level4	Options	Descriptions
Network (Continued)	E-mail/IFAX (Available after IFAX is downloaded) (Continued)	Setup Mail RX	Auto Polling	On* Off	Automatically checks the POP3 server for new messages.
			Poll Frequency	10Min(s)*	Sets the interval for checking for new messages on the POP3 server.
			Header	All Subject+From+To None*	Selects the contents of the mail header to be printed.
			Del Error Mail	On* Off	Deletes error mails automatically.
			Notification	On MDN Off*	Receives notification messages.
		Setup Mail TX	Sender Subject	—	Displays the subject that is attached to the Internet Fax data.
			Size Limit	On Off*	Limits the size of E-mail documents.
			Notification	On Off*	Sends notification messages.
		Setup Relay	Rly Broadcast	On Off*	Relays a document to another fax machine over the internet.
			Relay Domain	RelayXX:	Registers the Domain name.
			Relay Report	On Off*	Prints the Relay Broadcast Report.
	Time Zone	—	UTCXXX:XX	—	Sets the time zone for your country.
	Network I/F	—	Wired LAN* WLAN	—	You can choose the network connection type.
	Network Reset	—	—	—	Restore all network settings to factory default.
See Network User's Guide.					
 The factory settings are shown in Bold with an asterisk.					

Menu (Menu) (continued)

Level1	Level2	Level3	Options	Descriptions	Page
Print Reports	XMIT Verify	—	—	Prints these lists and reports.	See ¹ .
	Help List	—	—		
	Quick Dial	—	Alphabetic Order Numeric Order		
	Fax Journal	—	—		
	User Settings	—	—		
	Network Config	—	—		
	WLAN Report	—	—		
	Caller ID hist.	—	—		
Machine Info.	Serial No.	—	—	Lets you check the serial number of your machine.	96
Initial Setup	Receive Mode	—	Fax Only* Fax/Tel External TAD Manual	Choose the receive mode that best suits your needs.	36
	Date&Time	—	—	Puts the date and time on the LCD and in headings of faxes you send.	See ² .
	Station ID	—	Fax: Name:	Set your name and fax number to appear on each page you fax.	
	Tone/Pulse	—	Tone* Pulse	Choose the dialling mode.	
	Dial Tone	—	Detection No Detection*	Turns Dial Tone Detection on or off.	95
	Phone Line Set	—	Normal* PBX ISDN	Choose the telephone line type.	42
¹ See <i>Advanced User's Guide</i> . ² See <i>Quick Setup Guide</i> .					
 The factory settings are shown in Bold with an asterisk.					

Level1	Level2	Level3	Options	Descriptions	Page		
Initial Setup (Continued)	Compatibility	—	High* Normal Basic (for VoIP)	Adjusts the modem speed to help resolve transmission problems.	95		
	Reset	Network	—	Resets the print server back to its factory default settings, such as the password and IP address information.	96		
		Speed Dial&Fax	—	Deletes all stored Speed Dial numbers and faxes, restores the Station ID, Quick Dial List, Transmission Verification Report and Fax Journal back to the factory default settings.			
		All Settings	—	Resets all the machine's settings back to the settings that were set at the factory.			
¹ See <i>Advanced User's Guide</i> . ² See <i>Quick Setup Guide</i> .							
 The factory settings are shown in Bold with an asterisk.							

FAX ()

Level1	Level2	Level3	Options	Descriptions	Page
Fax Resolution	—	—	Standard* Fine S.Fine Photo	Sets the resolution for outgoing faxes.	See ¹ .
Contrast	—	—	Auto* Light Dark	Changes the lightness or darkness of faxes you send.	
Glass ScanSize	—	—	A4* A3 Letter Legal Ledger	Sets the glass scan size for faxes.	33
Internet Fax (Available after IFAX is downloaded)	—	—	—	You can send and receive fax documents using the Internet.	See ² .
Phone Book	Search	—	Alphabetic Order Numeric Order	You can dial by pressing only a few keys (and Start).	50
	Set One Touch	—	—	Stores One Touch Dial numbers, so you can dial by pressing only a few keys (and Start).	52
	Set Speed Dial	—	—	Stores Speed Dial numbers, so you can dial by pressing only a few keys (and Start).	53
	Setup Groups	—	—	You can set up Group numbers for Broadcasting.	See ¹ .
Outgoing Call	Send a fax Add To Phone Book Delete	—	—	You can choose a number from the Outgoing Call history and then make a telephone call to it, send a fax to it, add it to Speed Dial, or delete it.	51
Caller ID hist. (U.K. and Ireland only)	Send a fax Add To Phone Book Delete	—	—	You can choose a number from the Caller ID history and then send a fax to it, add it to Speed Dial, or delete it.	51
¹ See <i>Advanced User's Guide</i> . ² See <i>Network User's Guide</i> .					
 The factory settings are shown in Bold with an asterisk.					

Level1	Level2	Level3	Options	Descriptions	Page	
Broadcasting	Dial Type (Available after IFAX is downloaded)	—	Fax/Tel* E-Address	You can send the same fax message to more than one fax number.	See ¹ .	
	Add Number Phone Book Complete	—	—			
Delayed Fax	—	—	On Off*	Sets the time of day in 24-hour format that the delayed faxes will be sent.		
Batch TX	—	—	On Off*	Combines delayed faxes to the same fax number at the same time of day into one transmission.		
Real Time TX	—	—	On Off*	You can send a fax without using the memory.		
Polled TX	—	—	Standard Secure Off*	Sets up the document on your machine to be retrieved by another fax machine.		
Polling RX	—	—	Standard Secure Timer Off*	Sets up your machine to poll another fax machine.		
Overseas Mode	—	—	On Off*	If you are having difficulty sending faxes overseas, set this to On.		
Set New Default	—	—	Fax Resolution Contrast Glass ScanSize Real Time TX	You can save your fax settings.		
Factory Reset	—	—	—	You can restore all settings to the factory settings.		
¹ See <i>Advanced User's Guide</i> .						
² See <i>Network User's Guide</i> .						
 The factory settings are shown in Bold with an asterisk.						

SCAN ()

Level1	Option1	Option2	Option3	Descriptions	Page
Scan to File	—	—	—	You can scan a monochrome or a colour document into your computer.	See ¹ .
Scan to Media (when a memory card or USB Flash memory drive is inserted)	Quality	—	Color 100 Color 200* Color 300 Color 600 B/W 100 B/W 200 B/W 300	You can choose the scan resolution and file format for your document.	61
	File Type	—	(If you choose colour option in Quality setting) PDF* JPEG		
			(If you choose Mono option in Quality setting) TIFF PDF*		
	Glass ScanSize	—	A4* A3 Letter Legal Ledger	Sets the glass scan size for scans.	See ² .
	File Name	—	—	You can rename the file.	61
	Auto Crop	—	On Off*	Scan multiple documents placed on the scanner glass to a memory card or USB Flash memory drive one at a time.	See ² .
	Set New Default	—	Quality File Type Glass ScanSize Auto Crop	You can save your scan settings.	
	Factory Reset	—	—	You can restore all settings to the factory settings.	

¹ See *Software User's Guide*.

² See *Advanced User's Guide*.

³ (Macintosh users)

Presto! PageManager must be downloaded and installed before use. See *Accessing Brother Support (Macintosh)* on page 3 for further instructions.



The factory settings are shown in Bold with an asterisk.

Level1	Option1	Option2	Option3	Descriptions	Page	
Scan to Network	(Profile Name)	—	—	You can send a scanned data to a CIFS server on your local network or on the internet.	See ¹ .	
Scan to FTP	(Profile Name)	—	—	You can send a scanned data via FTP.		
Scan to E-mail	PC	—	—	You can scan a monochrome or a colour document into your E-mail application.		
	E-mail Server (Available after IFAX is downloaded)	Manual	—	You can enter an E-mail address using the dial pad.		
		Phone Book	Alphabetic Order Numeric Order	You can search for an E-mail address that you have stored in the machine.		
		Quality	Color 100 Color 200* Color 300 Color 600 B/W 100 B/W 200 B/W 300	Chooses the file format to send the scanned data via E-mail server.		
		File Type	(If you choose colour option in Quality setting) PDF* JPEG			
			(If you choose Mono option in Quality setting) TIFF PDF*			
Glass ScanSize	A4* A3 Letter Legal Ledger	Sets the glass scan size for scans.				
1 See <i>Software User's Guide</i>. 2 See <i>Advanced User's Guide</i>. 3 (Macintosh users) Presto! PageManager must be downloaded and installed before use. See <i>Accessing Brother Support (Macintosh)</i> on page 3 for further instructions.						
The factory settings are shown in Bold with an asterisk.						

Level1	Option1	Option2	Option3	Descriptions	Page
Scan to E-mail (Continued)	E-mail Server (Available after IFAX is downloaded) (Continued)	Set New Default	Quality File Type Glass ScanSize	You can save your scan settings.	See ¹ .
		Factory Reset	—	You can restore all settings to the factory settings.	
Scan to OCR ³	—	—	—	You can have your text document converted to an editable text file.	
Scan to Image	—	—	—	You can scan a colour picture into your graphics application.	
¹ See <i>Software User's Guide</i> . ² See <i>Advanced User's Guide</i> . ³ (Macintosh users) Presto! PageManager must be downloaded and installed before use. See <i>Accessing Brother Support (Macintosh)</i> on page 3 for further instructions.					
 The factory settings are shown in Bold with an asterisk.					

COPY ()

Level1	Level2	Level3	Options	Descriptions	Page
Quality	—	—	Fast Normal* Best	Choose the Copy resolution for the next copy.	See ¹ .
Paper Type	—	—	Plain Paper* Inkjet Paper Brother BP71 Brother BP61 Other Glossy Transparency	Choose the paper type that matches the paper in the tray.	56
Paper Size	—	—	A4* A5 (tray #1 only) A3 10x15cm (tray #1 only) Letter Legal Ledger	Choose the paper size that matches the paper in the tray.	56
Tray Select (MFC-J6710DW)	—	—	Tray#1 Tray#2 Auto Select*	Choose the tray that will be used for Copy mode.	56
Enlarge/Reduce	100%*	—	—	—	See ¹ .
	Enlarge	—	198% 10x15cm→A4 186% 10x15cm→LTR 141% A4→A3, A5→A4	You can choose the enlargement ratio for the next copy.	
	Reduce	—	97% LTR→A4 93% A4→LTR 83% LGL→A4 69% A3→A4, A4→A5 47% A4→10x15cm	You can choose the reduction ratio for the next copy.	
	Fit to Page	—	—	Your machine will adjust the size automatically to the paper size you set.	
	Custom (25-400%)	—	—	You can choose the enlargement or reduction ratio for your type of document.	
¹ See <i>Advanced User's Guide</i> .					
 The factory settings are shown in Bold with an asterisk.					

Level1	Level2	Level3	Options	Descriptions	Page
Density	—	—	*	Adjusts the density of copies.	See ¹ .
Stack/Sort	—	—	Stack* Sort	You can choose to stack or sort multiple copies.	
Page Layout	—	Off (1 in 1)* 2 in 1 (P) 2 in 1 (L) 2 in 1 (ID) 4 in 1 (P) 4 in 1 (L) 1 to 2 Poster (2 x 1) Poster (2 x 2) Poster (3 x 3)	If you choose A3 or Ledger: (When 2 in 1 is chosen) LGRx2 → LGRx1 LTRx2 → LGRx1 A3x2 → A3x1 A4x2 → A3x1 (When poster 2x2 is chosen) LGRx1 → LGRx4 LTRx1 → LGRx4 A3x1 → A3x4 A4x1 → A3x4	You can make N in 1 or Poster copies.	
Skew Adjustment	—	—	Auto* Off	If your scanned copy is skewed, your machine can correct the data automatically.	
Duplex Copy	On	Flip Type	LongEdge Flip(P)* LongEdge Flip(L) ShortEdge Flip(P) ShortEdge Flip(L)	Enables or disables duplex printing. You can also choose long edge or short edge duplex printing.	
		Advanced	Normal* DX1 DX2		
		A3/LGR DX Setting	Fit to Page* Keep Scale		
	Off*	—	—		

¹ See *Advanced User's Guide*.

The factory settings are shown in Bold with an asterisk.

Level1	Level2	Level3	Options	Descriptions	Page
Advanced Settings	—	—	Off* Ink Save Mode Thin Paper Copy Book Copy Watermark Copy	You can choose various settings for copy such as Book Copy and Watermark Copy.	See ¹ .
Set New Default	—	—	Quality Tray Select (MFC-J6710DW) Enlarge/Reduce Density Page Layout Skew Adjustment Ink Save Mode Thin Paper Copy Duplex Copy	You can save your copy settings.	
Factory Reset	—	—	—	You can restore all settings to the factory settings.	

¹ See *Advanced User's Guide*.

 The factory settings are shown in Bold with an asterisk.

Watermark Copy Settings

Option1	Option2	Option3	Option4	Descriptions	Page
Template	Text	—	CONFIDENTIAL* DRAFT COPY	Uses a template to place text into your document as a Watermark.	See ¹ .
	Position		A B C D E* F G H I Pattern		
	Size		Small Medium* Large		
	Angle		-90° -45°* 0° 45° 90°		
	Transparency		-2 -1 0* +1 +2		
	Colour		Red Orange Yellow Blue Green Purple Black*		
	Apply		—		

¹ See *Advanced User's Guide*.





The factory settings are shown in Bold with an asterisk.

Option1	Option2	Option3	Option4	Descriptions	Page
Media	(Select image from media)	Position	A	Places a logo or text into your document as a Watermark using an image from removable media.	See ¹ .
			B		
			C		
			D		
			E*		
			F		
			G		
H					
I					
Pattern					
		Size	Small		
			Medium*		
			Large		
		Angle	-90°		
			-45°*		
			0°		
			45°		
			90°		
		Transparency	-2		
			-1		
			0*		
			+1		
			+2		
		Apply	—		
Scan	(Set watermark document and press Start .)	Transparency	-2	You can place a logo or text into your document as a Watermark by scanning a paper document.	
			-1		
			0*		
+1					
			+2		
		Apply	—		
¹ See <i>Advanced User's Guide</i> .					
 The factory settings are shown in Bold with an asterisk.					

PHOTO CAPTURE ()

Level1	Level2	Level3	Options	Descriptions	Page
View Photo(s)	—	—	See the print settings in the following table.	You can preview your photos on the LCD.	60
Print Index	Layout Format	—	6 Images/Line* 5 Images/Line	You can print a thumbnail page.	See ¹ .
	Paper Type		Plain Paper* Inkjet Paper Brother BP71 Brother BP61 Other Glossy		
	Paper Size		A4* Letter		
Print Photos	—	—	See the print settings in the following table.	You can print an individual image.	
Enhance Photos	Auto Correct	—		You can adjust your photos with these settings.	
	Enhance Skin				
	Enhance Scenery				
	Remove Red-Eye				
	Night Scene				
	Fill Light				
	Whiteboard				
	Monochrome				
	Sepia				
Search by Date	—	—		You can search your photos in date order.	
Print All Photos	—	—		You can print all photos in your memory card or USB Flash memory drive.	
Slide Show	—	—		The machine starts a Slide Show of your photos.	
Trimming	—	—		You can trim your photo and print a part of the image.	
¹ See <i>Advanced User's Guide</i> .					
 The factory settings are shown in Bold with an asterisk.					

Print Settings

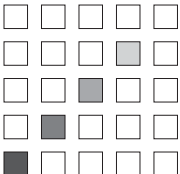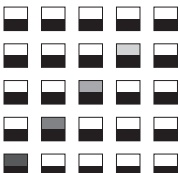Option1	Option2	Option3	Option4	Descriptions	Page	
Print Quality (Not available for DPOF printing.)	Normal Photo*	—	—	Choose the print quality.	See ¹ .	
Paper Type	Plain Paper Inkjet Paper Brother BP71 Brother BP61 Other Glossy*	—	—	Choose the paper type.		
Paper Size	10x15cm* 13x18cm A4 A3 Letter Ledger	(When A4 or Letter is chosen) 8 x 10cm 9 x 13cm 10 x 15cm 13 x 18cm 15 x 20cm Max. Size*	—	Choose the paper and print size.		
Brightness (Not available when Enhance Photos is chosen.)		—	—	Adjusts the brightness.		
Contrast (Not available when Enhance Photos is chosen.)		—	—	Adjusts the contrast.		
¹ See <i>Advanced User's Guide</i> .						
 The factory settings are shown in Bold with an asterisk.						

Option1	Option2	Option3	Option4	Descriptions	Page
Color Enhance (Not available when Enhance Photos is chosen.)	On Off*	White Balance	+2 +1 0 -1 -2	Adjusts the hue of the white areas.	See ¹ .
		Sharpness	+2 +1 0 -1 -2	Enhances the detail of the image.	
		Color Density	+2 +1 0 -1 -2	Adjusts the total amount of colour in the image.	
Cropping	On* Off	—	—	Crops the image around the margin to fit the paper size or print size. Turn this feature off if you want to print whole images or prevent unwanted cropping.	
Borderless	On* Off	—	—	Expands the printable area to fit the edges of the paper.	
Date Print (Not available for DPOF printing.)	On Off*	—	—	Prints the date on your photo.	
Set New Default	Print Quality Paper Type Paper Size Brightness Contrast Color Enhance Cropping Borderless Date Print	—	—	You can save your print settings.	
Factory Reset	—	—	—	You can restore all the settings to factory settings.	
¹ See <i>Advanced User's Guide</i> .					
 The factory settings are shown in Bold with an asterisk.					

Phone Book

Level1	Level2	Level3	Options	Descriptions	Page
Search	—	—	Alphabetic Order Numeric Order	You can search for names you have stored in the Speed Dial memory.	50
Set One Touch	—	—	—	You can store your most frequently called numbers on the One Touch keys.	52
Set Speed Dial	—	—	—	Stores Speed Dial numbers, so you can dial by pressing only a few keys (and Start).	53
Setup Groups	—	—	—	Sets up Group numbers for Broadcasting.	See ¹ .
¹ See <i>Advanced User's Guide</i> .					
 The factory settings are shown in Bold with an asterisk.					

Redial/Pause ()

Level1	Level2	Level3	Options	Descriptions	Page
Outgoing Call	Send a fax Add To Phone Book Delete	—	—	You can choose a number from the Outgoing Call history and then make a telephone call to it, send a fax to it, add it to Speed Dial, or delete it.	51
Caller ID hist. (U.K. and Ireland only)	Send a fax Add To Phone Book Delete	—	—	You can choose a number from the Caller ID history and then send a fax to it, add it to Speed Dial, or delete it.	51
 The factory settings are shown in Bold with an asterisk.					

Fax Preview ()

Level1	Level2	Level3	Options	Descriptions	Page
Fax Preview	—	—	ON OFF*	You can view faxes you send and receive on the LCD screen.	39
 The factory settings are shown in Bold with an asterisk.					

Entering Text

When you are setting certain menu selections, such as the Station ID, you may need to enter text into the machine. Most dial pad keys have three or four letters printed on keys. The keys for **0**, **#** and ***** do not have printed letters because they are used for special characters.

Press the appropriate dial pad key the number of times shown in this reference table to access the character you want.

Press Key	one time	two times	three times	four times	five times
2	A	B	C	2	A
3	D	E	F	3	D
4	G	H	I	4	G
5	J	K	L	5	J
6	M	N	O	6	M
7	P	Q	R	S	7
8	T	U	V	8	T
9	W	X	Y	Z	9

Inserting spaces

To enter a space in a fax number, press ► once between numbers. To enter a space in a name, press ► twice between characters.

Making corrections

If you entered an incorrect character and want to change it, press ◀ or ▶ to move the cursor under the incorrect character. Then press **Clear**. Re-enter the correct character. You can also back up and insert characters.

Repeating letters

If you need to enter a letter that is on the same key as the letter before, press ► to move the cursor to the right before you press the key again.

Special characters and symbols

Press *****, **#** or **0**, repeatedly until you see the special character or symbol you want.

Press ***** for (space) ! " # \$ % & ' () * + , - . / €

Press **#** for : ; < = > ? @ [] ^ _

Press **0** for Ä Ë Ö Ü À Ç È É 0

General

**Note**


This chapter provides a summary of the machines' specifications. For additional specifications visit <http://www.brother.com/> for details.

Printer Type	Inkjet	
Print Method	Mono:	Piezo with 210 × 1 nozzle
	Colour:	Piezo with 210 × 3 nozzles
Memory Capacity	64 MB	
LCD (Liquid Crystal Display)	Wide 3.3 in. (82.8 mm) TFT Colour LCD	
Power Source	AC 220 to 240V 50/60Hz	
Power Consumption ¹	Copying Mode:	Approx. 26 W ²
	Ready Mode:	Approx. 7.5 W
	Sleep Mode:	Approx. 4 W
	Off:	Approx. 0.3 W


¹ Measured when the machine is connected to the USB interface.

² When using ADF, single-side printing, resolution: standard / document: ISO/IEC 24712 printed pattern.

Dimension (MFC-J6510DW)

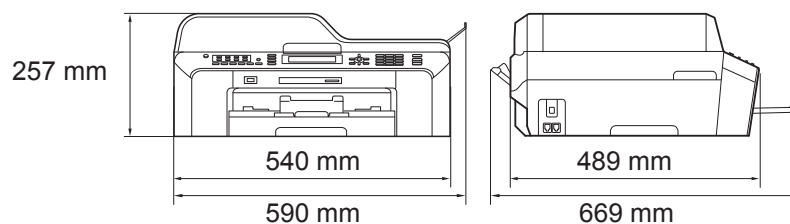

(MFC-J6710DW)

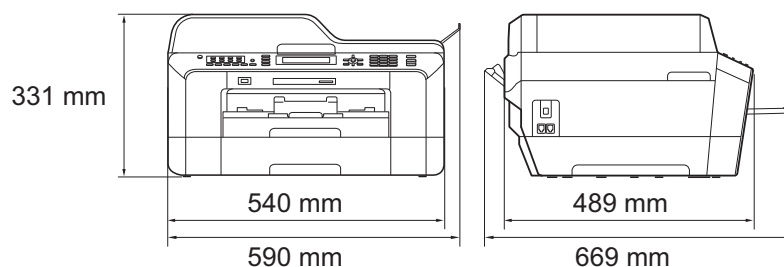

Weight

(MFC-J6510DW) 15.8 kg

(MFC-J6710DW) 18.2 kg

Noise

Noise per ISO9296

Operating: LPAM = 50 dB or less ¹

Copying: (MFC-J6510DW)
LWAd = 6.38 B(A) ² (Mono)

LWAd = 6.01 B(A) (Colour)

(MFC-J6710DW)

LWAd = 6.31 B(A) ² (Mono)

LWAd = 6.22 B(A) (Colour)

Ready: (MFC-J6510DW)

LWAd = 3.05 B(A) (Mono/Colour)

(MFC-J6710DW)

LWAd = 3.07 B(A) (Mono/Colour)

Temperature

Operating: 10 to 35 °C

Best Print Quality: 20 to 33 °C

Humidity

Operating: 20 to 80% (without condensation)

Best Print Quality: 20 to 80% (without condensation)

ADF (automatic document feeder)

Up to 35 pages

Paper: 80 g/m² A4 or Letter size

Document Size

ADF Width: 148 mm to 297 mm

ADF Length: 148 mm to 431.8 mm

Scanner Glass Width: Max. 297 mm

Scanner Glass Length: Max. 431.8 mm

¹ Noise depends on printing conditions.

² Office equipment with LWAd>6.30 B(A) is not suitable for use in room where people do primarily intellectual work. Such equipment should be placed in separate rooms because of the noise emission.

Print media

Paper Input

Paper Tray #1

- Paper type:

Plain paper, inkjet paper (coated paper),
glossy paper¹ and transparency^{1 2}

- Paper size:

A4, Ledger, A3, Legal, Executive, Letter, A5, A6, JIS B4, JIS B5,
Envelopes (commercial No.10, DL, C5, Monarch, Y4),
Photo 10 × 15 cm, Photo L 89 × 127 mm, Photo 2L 13 × 18 cm,
Index Card and PostCard³

Width: 89 mm - 297 mm

Length: 127 mm - 431.8 mm

For more details, see *Paper weight and thickness* on page 28.

- Maximum paper tray capacity:

Approx. 250 sheets of 80 g/m² plain paper

Paper Tray #2 (MFC-J6710DW)

- Paper type:

Plain paper

- Paper size:

A4, Ledger, A3, Legal, Executive, Letter, JIS B4, JIS B5

Width: 182 mm - 297 mm

Length: 257 mm - 431.8 mm

For more details, see *Paper weight and thickness* on page 28.

- Maximum paper tray capacity:

Approx. 250 sheets of 80 g/m² plain paper

¹ For glossy paper or transparencies, remove printed pages from the output paper tray immediately after they exit the machine to avoid smudging.

² Use only transparencies recommended for inkjet printing.

³ See *Paper type and size for each operation* on page 27.

Paper Input

(Continued)

Manual Feed Slot

■ Paper type:

Plain paper, inkjet paper (coated paper), glossy paper¹, transparency^{1 2}, envelopes and Labels

■ Paper size:

A4, Ledger, A3, Legal, Executive, Letter, A5, A6, JIS B4, JIS B5, Envelopes (commercial No.10, DL, C5, Monarch, Y4), Photo 10 × 15 cm, Photo L 89 × 127 mm, Photo 2L 13 × 18 cm, Index Card and PostCard³

Width: 89 mm - 297 mm

Length: 127 mm - 431.8 mm

For more details, see *Paper weight and thickness* on page 28.

■ Maximum paper tray capacity:

1 sheet of special print media

Paper Output

Up to 50 sheets of A4 plain paper (face up print delivery to the output paper tray)¹

¹ For glossy paper or transparencies, remove printed pages from the output paper tray immediately after they exit the machine to avoid smudging.

² Use only transparencies recommended for inkjet printing.

³ See *Paper type and size for each operation* on page 27.

Fax

Compatibility	ITU-T Super Group 3
Modem Speed	Automatic Fallback 33,600 bps
Scanning Width	288 mm (A3)
Printing Width	291 mm (A3)
Greyscale	Levels: 64 (B&W) / 256 (Colour)
Resolution	Standard 203 × 98 dpi (Mono) 203 × 196 dpi (Colour) Fine 203 × 196 dpi (Mono/Colour) Superfine 203 × 392 dpi (Mono) Photo 203 × 196 dpi (Mono)
One Touch Dial	16 (8 × 2)
Speed Dial	100 stations × 2 numbers
Groups	Up to 6
Broadcasting	266 (200 Speed Dial/16 One Touch Dial/ 50 Manual Dial)
Automatic Redial	3 times at 5 minute intervals
Memory Transmission	Up to 400 ¹ pages
Out of Paper Reception	Up to 400 ¹ pages

¹ “Pages” refers to the “ITU-T Test Chart #1” (a typical business letter, Standard resolution, MMR code). Specifications and printed materials are subject to change without prior notice.

Copy

Colour/Monochrome	Yes/Yes
Copy Width	Max. 291 mm
Multiple Copies	Stacks/Sorts up to 99 pages
Enlarge/Reduce	25% to 400% (in increments of 1%)
Resolution	Prints up to 1200 × 1200 dpi
Duplex	■ Paper type: Plain paper ■ Paper size: A4, Ledger¹, A3¹, Legal, Letter, A5

¹ Minimum top and bottom margins of 22 mm

PictBridge

Compatibility

Supports the Camera & Imaging Products Association PictBridge standard CIPA DC-001.

Visit <http://www.cipa.jp/pictbridge/> for more information.

Interface

USB direct interface

Scanner

Colour/Monochrome	Yes/Yes
TWAIN Compliant	Yes (Windows® 2000 Professional/Windows® XP/ Windows® XP Professional x64 Edition/Windows Vista®/ Windows® 7) Mac OS X 10.4.11, 10.5.x, 10.6.x ¹
WIA Compliant	Yes (Windows® XP ² /Windows Vista®/Windows® 7)
ICA Compliant	Yes (Mac OS X 10.6.x)
Colour Depth	48 bit colour Processing (Input) 24 bit colour Processing (Output)
Resolution	Up to 19200 × 19200 dpi (interpolated) ³ Up to 2400 × 2400 dpi (optical) (Scanner Glass) Up to 2400 × 1200 dpi (optical) (ADF)
Scanning Speed	Monochrome: up to 3.49 sec. Colour: up to 3.37 sec. (A4 size at 100 × 100 dpi)
Scanning Width	Up to 291 mm
Scanning Length	Up to 426 mm
Greyscale	256 levels

¹ For the latest driver updates for the Mac OS X you are using, visit us at <http://solutions.brother.com/>.

² Windows® XP in this User's Guide includes Windows® XP Home Edition, Windows® XP Professional, and Windows® XP Professional x64 Edition.

³ Maximum 1200 × 1200 dpi scanning when using the WIA Driver for Windows® XP, Windows Vista® and Windows® 7 (resolution up to 19200 × 19200 dpi can be selected by using the Brother scanner utility).

Printer

Resolution	Up to 1200 × 6000 dpi
Printing Width	291 mm [297 mm (borderless) ¹] ³
Borderless	A4, Letter, Ledger, A3, A6, B4, Photo 10 × 15 cm, Index Card 127 × 203 mm Photo L 89 × 127 mm, Photo 2L 13 × 18 cm ²
Duplex	■ Paper type: Plain paper ■ Paper size: A4, Letter, Ledger ⁴ , A3 ⁴ , Legal, A5, A6, Executive, B4 ⁴ , B5

Print Speed ⁵

- ¹ When the Borderless feature is set to On.
- ² See *Paper type and size for each operation* on page 27.
- ³ When printing on A3 size paper.
- ⁴ Minimum top and bottom margins of 22 mm
- ⁵ For detailed specifications visit <http://www.brother.com/>.

Interfaces

USB ^{1 2}	A USB 2.0 interface cable that is no longer than 2 m.
LAN cable ³	Ethernet UTP cable category 5 or greater.
Wireless LAN	IEEE 802.11b/g/n (Infrastructure/Ad-hoc Mode)

¹ Your machine has a Hi-Speed USB 2.0 interface. The machine can also be connected to a computer that has a USB 1.1 interface.

² Third party USB ports are not supported.

³ See the *Network User's Guide* for detailed network specifications.

Computer requirements

SUPPORTED OPERATING SYSTEMS AND SOFTWARE FUNCTIONS								
Computer Platform & Operating System Version		Supported PC Software Functions	PC Interface	Processor Minimum Speed	Minimum RAM	Recommended RAM	Hard Disk Space to install	
							For Drivers	For Applications
Windows® Operating System ¹	Windows® 2000 Professional ⁶	Printing, PC Fax ⁴ , Scanning, Removable Disk ⁷	USB, 10/100 Base-TX (Ethernet), Wireless 802.11b/g/n	Intel® Pentium® II or equivalent	64 MB	256 MB	150 MB	500 MB
	Windows® XP Home ^{2 5} Windows® XP Professional ^{2 5}				128 MB		150 MB	500 MB
	Windows® XP Professional x64 Edition ²			64-bit (Intel® 64 or AMD64) supported CPU	256 MB	512 MB	150 MB	500 MB
	Windows Vista® ^{2 5}			Intel® Pentium® 4 or equivalent 64-bit (Intel® 64 or AMD64) supported CPU	512 MB	1 GB	500 MB	1.2 GB
	Windows® 7 ^{2 5}				1 GB (32 bit) 2 GB (64 bit)	1 GB (32 bit) 2 GB (64 bit)	650 MB	1.2 GB
	Windows Server® 2003 (print only via network)	Printing	10/100 Base-TX (Ethernet), Wireless 802.11b/g/n	Intel® Pentium® III or equivalent	256 MB	512 MB	50 MB	N/A
	Windows Server® 2003 x64 Edition (print only via network)			64-bit (Intel® 64 or AMD64) supported CPU				
	Windows Server® 2003 R2 (print only via network)			Intel® Pentium® III or equivalent				
	Windows Server® 2003 R2 x64 Edition (print only via network)			64-bit (Intel® 64 or AMD64) supported CPU	512 MB	1 GB		
	Windows Server® 2008 (print only via network)			Intel® Pentium® 4 or equivalent 64-bit (Intel® 64 or AMD64) supported CPU		2 GB		
	Windows Server® 2008 R2 (print only via network)			64-bit (Intel® 64 or AMD64) supported CPU				
Macintosh Operating System	Mac OS X 10.4.11, 10.5.x	Printing, PC Fax Send ⁴ , Scanning, Removable Disk ⁷	USB ³ , 10/100 Base-TX (Ethernet), Wireless 802.11b/g/n	PowerPC G4/G5 Intel® Core™ Processor	512 MB	1 GB	80 MB	400 MB
	Mac OS X 10.6.x			Intel® Core™ Processor	1 GB	2 GB		

Conditions:

- ¹ Microsoft® Internet Explorer® 5.5 or greater.
- ² For WIA, 1200 × 1200 resolution. Brother Scanner Utility enables to enhance up to 19200 × 19200 dpi.
- ³ Third party USB ports are not supported.
- ⁴ PC Fax supports black and white only.
- ⁵ PaperPort™ 12SE supports Windows® XP (SP3 or higher), Windows Vista® (SP2 or higher) and Windows® 7.
- ⁶ PaperPort™ 11SE supports Microsoft® SP4 or higher for Windows® 2000 (Available from the internet).
- ⁷ Removable disk is a function of PhotoCapture Center™.

For the latest driver updates, visit us at <http://solutions.brother.com/>.

All trademarks, brand and product names are the property of their respective companies.

Consumable items

Ink	The machine uses individual Black, Yellow, Cyan and Magenta ink cartridges that are separate from the print head assembly.
Service Life of Ink Cartridge	The first time you install a set of ink cartridges the machine will use an amount of ink to fill the ink delivery tubes for high quality printouts. This process will only happen once. After this process is complete the cartridges provided with your machine will have a lower yield than standard cartridges (65%). With all following ink cartridges you can print the specified number of pages.
Replacement Consumables	<Super High Yield Black> LC1280XLBK <Super High Yield Yellow> LC1280XLY <Super High Yield Cyan> LC1280XLC <Super High Yield Magenta> LC1280XLM Black - Approximately 2,400 pages ¹ Yellow, Cyan, Magenta - Approximately 1,200 pages ¹ <High Yield Black> LC1240BK <High Yield Yellow> LC1240Y <High Yield Cyan> LC1240C <High Yield Magenta> LC1240M Black, Yellow, Cyan, Magenta - Approximately 600 pages ¹ ¹ Approx. cartridge yield is declared in accordance with ISO/IEC 24711. For more information about the replacement consumables, visit us at http://www.brother.com/pageyield/.

What is Innobella™?

Innobella™ is a range of genuine consumables offered by Brother. The name "Innobella™" derives from the words "Innovation" and "Bella" (meaning "Beautiful" in Italian) and is a representation of the "innovative" technology providing you with "beautiful" and "long lasting" print results.

When you print photo images, Brother recommends Innobella™ glossy photo paper (BP71 series) for high quality. Brilliant prints are made easier with Innobella™ Ink and paper.



Network (LAN)

 Note

For details about the full Network specifications, see the *Network User's Guide*.

LAN	You can connect your machine to a network for Network Printing, Network Scanning, PC Fax Send, PC Fax Receive (Windows® only), Remote Setup, and access photos from PhotoCapture Center™ ¹ . Also included is Brother BRAdmin Light ² Network Management software.	
Wireless Network Security	SSID (32 chr), WEP 64/128 bit, WPA-PSK (TKIP/AES), WPA2-PSK (AES)	
Setup Support Utility	AOSS™	Yes
	WPS	Yes

¹ See the Computer Requirements chart on page 136.

² If you require more advanced printer management, use the latest Brother BRAdmin Professional utility version that is available as a download from <http://solutions.brother.com/>.

A

ADF (automatic document feeder)	29
Answering machine (TAD)	44
connecting	44
Apple Macintosh	
See Software User's Guide.	
Automatic	
fax receive	36
Fax Detect	39

B

Brother	
CreativeCenter	3

C

Caller ID	41
Caller ID history	51
Add To Phone Book	51
Delete	51
Send a fax	51
Cleaning	
print head	69
scanner	68
Connecting	
external TAD (answering machine)	44
external telephone	45
Consumable items	137
Control panel overview	4
ControlCenter	
See Software User's Guide.	
Copy	
paper size	56
paper type	56
tray use	23
using scanner glass	30
Cordless telephone	47
Custom telephone features on a single line	92

D

Dialling	
a pause	52
access codes and credit card	
numbers	54
Caller ID history	51
manual	49
One Touch	49
Outgoing Call	51
Speed Dial	49
Document	
loading	29, 30

E

Envelopes	17, 19, 27, 28
Error messages on LCD	72
B&W Print Only	72
Cannot Detect	73
Cannot Print	73
Comm. Error	73
Cover is Open	73
Data Remaining	73
Document Jam	73
Ink Absorber Full	74
Ink Absorber NearFull	74
Ink Low	74
No Ink Cartridge	75
No Paper Fed	75
Not Registered	49, 75
Out of Memory	76
Paper Jam	76
Unable to Clean	77
Unable to Init.	77
Unable to Print	77
Unable to Scan	77
Wrong Paper Size	78
Wrong Tray Setting	78
Extension telephone, using	46, 47
External telephone, connecting	45

F

Fax codes	
changing	48
Remote Activation Code	39, 46, 47
Remote Deactivation Code	46, 47
using	47
Fax Detect	39
Fax, from PC	
See Software User's Guide.	
Fax, stand-alone	
receiving	36
difficulties	90, 91
F/T Ring Time, setting	38
Fax Detect	39
Fax Preview	39, 40
from extension telephone	46, 47
Ring Delay, setting	38
telephone line interference / VoIP	95
tray use	24
sending	32
change scanner glass size	33
colour fax	33
difficulties	91
Fax Preview	34
telephone line interference / VoIP	95
Transmission Verification Report	34
Fax/Tel mode	
answering at extension	
telephones	46, 47
Remote Activation Code	46, 47
Remote Deactivation Code	46, 47
Ring Delay	38

G

Greyscale	129, 133
-----------------	----------

H

Help	
LCD messages	97
Menu Table	98

I

Ink cartridges	
ink dot counter	66
replacing	66
Innobella™	137

J

Jams	
document	80
paper	81

L

Labels	17, 26, 27, 28
LCD (Liquid Crystal Display)	97
Brightness	9

M

Macintosh	
See Software User's Guide.	
Maintenance, routine	
replacing ink cartridges	66
Manual	
dialling	49
receive	36
Manual feed slot	17
Mode, entering	
Copy	6
Fax	6
PhotoCapture	6
Scan	6
Multi-line connections (PBX)	45

N

Network	
Printing	
See Network User's Guide.	
Scanning	
See Software User's Guide.	

O

One touch	
changing	54
setting up	52
using	49
Outgoing Call	
Add To Phone Book	51
Delete	51
Send a fax	51

P

Paper	25, 127, 128
capacity	28
loading	10, 13, 19
loading envelopes and postcard	19
printable area	21
size	22
size of document	29
type	22, 23, 27
PaperPort™ 12SE with OCR	
See Software User's Guide. See also Help in the PaperPort™ 12SE application.	
PhotoCapture Center™	
from PC	
See Software User's Guide.	
Memory Stick PRO™	57
Memory Stick™	57
MultiMedia Card	57
Preview photos	60
Print settings	
Quality	60
Scan to Media	
change file name	61
SD	57
SDHC	57
specifications	131
Presto! PageManager	
See Software User's Guide. See also Help in the Presto! PageManager application.	
Print	
difficulties	88
paper jams	81
printable area	21
resolution	134
specifications	134
Printing	
See Software User's Guide.	
Programming your machine	97

Q

Quick Dial	52
Group dial	
changing	54
One Touch Dial	
custom scan profile	52
setting up	52
Search	50
Speed Dial	
changing	54
using	49

R

Receive Mode	
External TAD	36
Fax Only	36
Fax/Tel	36
Manual	36
Redial/Pause	50
Remote Setup	
See Software User's Guide.	
Resolution	
copy	130
fax	129
print	134
scan	133
Ring Delay, setting	38

S

Scannable area	31
Scanning	
See Software User's Guide.	
Serial Number	
how to find	See inside front cover
Sockets	
EXT	
External telephone	45
Speed Dial	
changing	54
setting up	53
using	49

T

TAD (telephone answering device),	
external	36, 44
connecting	44
receive mode	36
recording OGM	44
Telephone line	
connections	44
difficulties	91
interference / VoIP	95
multi-line (PBX)	45
type	42
Text, entering	124
special characters	124
Transferring your faxes or	
Fax Journal report	79
Transparencies	25, 26, 28, 127, 128
Tray Select key	56
Troubleshooting	88
document jam	80
error messages on LCD	72
if you are having difficulty	
copying	92
document jam	80
incoming calls	92
Network	94
PhotoCapture Center™	93
printing	88
printing received faxes	90
receiving faxes	91
scanning	92
software	93
telephone line or connections	91
maintenance messages on LCD	72
paper jam	81

V

Volume, setting	
beeper	9
ring	8
speaker	9

W

Windows®	
See Software User's Guide.	
Wireless Network	
See Quick Setup Guide and Network	
User's Guide.	



Visit us on the World Wide Web
<http://www.brother.com/>

This machine is approved for use in the country of purchase only. Local Brother companies or their dealers will only support machines purchased in their own countries.