


USER'S GUIDE

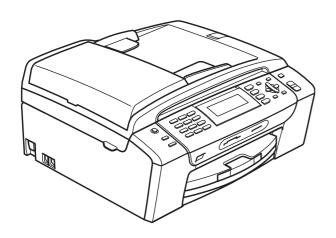

MFC-490CW

If you need to call Customer Service

Please complete the following information for future reference:

Model Number: MFC-490CW

Serial Number:

Date of Purchase:

Place of Purchase:

The serial number is on the back of the unit. Retain this User's Guide with your sales receipt as a permanent record of your purchase, in the event of theft, fire or warranty service.

Register your product on-line at

http://www.brother.com/registration/

By registering your product with Brother, you will be recorded as the original owner of the product. Your registration with Brother:

- may serve as confirmation of the purchase date of your product should you lose your receipt;
- may support an insurance claim by you in the event of product loss covered by insurance; and,
- will help us notify you of enhancements to your product and special offers.

The most convenient and efficient way to register your new product is online at http://www.brother.com/registration/

Brother numbers

IMPORTANT

For technical help, you must call the country where you bought the machine. Calls must be made *from within* that country.

Register your product

By registering your product with Brother International Corporation, you will be recorded as the original owner of the product. Your registration with Brother:

- may serve as confirmation of the purchase date of your product should you lose your receipt;
- may support an insurance claim by you in the event of product loss covered by insurance; and,
- will help us notify you of enhancements to your product and special offers.

Please complete and fax the Brother Warranty Registration And Test Sheet or, for your convenience and most efficient way to register your new product, register on-line at

http://www.brother.com/registration/

FAQs (frequently asked questions)

The Brother Solutions Center is our one-stop resource for all your Fax Machine/Multi-Function Center needs. You can download the latest software documents and utilities, read FAQs and troubleshooting tips, and learn how to get the most from your Brother product.

http://solutions.brother.com/



- · You can check here for Brother driver updates.
- To keep your machine performance up to date, check here for the latest firmware upgrade (for Windows[®] only).

For Customer Service

In USA: 1-877-BROTHER (1-877-276-8437)

1-901-379-1215 (fax)

In Canada: 1-877-BROTHER

(514) 685-4898 (fax)

Service Center Locator (USA only)

For the location of a Brother authorized service center, call 1-877-BROTHER (1-877-276-8437).

Service Center Locations (Canada only)

For the location of a Brother authorized service center, call 1-877-BROTHER.

Ordering accessories and supplies

For best quality results use only genuine Brother accessories, which are available at most Brother retailers. If you cannot find the accessory you need and you have a Visa, MasterCard, Discover, or American Express credit card, you can order accessories directly from Brother. (You can visit us online for a complete selection of the Brother accessories and supplies that are available for purchase.)



In Canada only Visa and MasterCard are accepted.

In USA: 1-877-552-MALL (1-877-552-6255)

1-800-947-1445 (fax)

http://www.brothermall.com/

In Canada: 1-877-BROTHER

http://www.brother.ca/

Description	Item
Ink Cartridge Standard black>	LC61BK (Prints approx. 450 pages) ¹
Ink Cartridge <cyan> (blue)</cyan>	LC61C (Prints approx. 325 pages) ¹
Ink Cartridge <magenta> (red)</magenta>	LC61M (Prints approx. 325 pages) ¹
Ink Cartridge <yellow></yellow>	LC61Y (Prints approx. 325 pages) ¹
Premium Plus Glossy Finish Photo Paper	
(Letter size / 20 sheets)	BP71GLTR
(4"×6" size / 20 sheets)	BP71GP
Matte Finish Inkjet Paper	
(Letter size / 25 sheets)	BP60ML (USA only)
Plain Finish Inkjet Paper	
(Letter size / 100 sheets)	BP60PL100 (USA only)
Telephone Line Cord	LG3077001 (USA only)
User's Guide	LS6196001 (English for USA and Canada)
	LS6196002 (French for Canada)

For more information about the replacement consumables, visit us http://www.brother.com/pageyield.

Notice - Disclaimer of Warranties (USA and Canada)

BROTHER'S LICENSOR(S), AND THEIR DIRECTORS, OFFICERS, EMPLOYEES OR AGENTS (COLLECTIVELY BROTHER'S LICENSOR) MAKE NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, REGARDING THE SOFTWARE. BROTHER'S LICENSOR(S) DOES NOT WARRANT, GUARANTEE OR MAKE ANY REPRESENTATIONS REGARDING THE USE OR THE RESULTS OF THE USE OF THE SOFTWARE IN TERMS OF ITS CORRECTNESS, ACCURACY, RELIABILITY, CURRENTNESS OR OTHERWISE. THE ENTIRE RISK AS TO THE RESULTS AND PERFORMANCE OF THE SOFTWARE IS ASSUMED BY YOU. THE EXCLUSION OF IMPLIED WARRANTIES IS NOT PERMITTED BY SOME STATES IN THE USA AND SOME PROVINCES IN CANADA. THE ABOVE EXCLUSION MAY NOT APPLY TO YOU.

IN NO EVENT WILL BROTHER'S LICENSOR(S) BE LIABLE TO YOU FOR ANY CONSEQUENTIAL, INCIDENTAL OR INDIRECT DAMAGES (INCLUDING DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, LOSS OF BUSINESS INFORMATION, AND THE LIKE) ARISING OUT OF THE USE OR INABILITY TO USE THE SOFTWARE EVEN IF BROTHER'S LICENSOR HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. BECAUSE SOME STATES IN THE USA AND SOME PROVINCES IN CANADA DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU. IN ANY EVENT BROTHER'S LICENSOR'S LIABILITY TO YOU FOR ACTUAL DAMAGES FROM ANY CAUSE WHATSOEVER, AND REGARDLESS OF THE FORM OF THE ACTION (WHETHER IN CONTRACT, TORT (INCLUDING NEGLIGENCE), PRODUCT LIABILITY OR OTHERWISE), WILL BE LIMITED TO \$50.

Compilation and Publication Notice

Under the supervision of Brother Industries Ltd., this manual has been compiled and published, covering the latest product descriptions and specifications.

The contents of this manual and the specifications of this product are subject to change without notice.

Brother reserves the right to make changes without notice in the specifications and materials contained herein and shall not be responsible for any damages (including consequential) caused by reliance on the materials presented, including but not limited to typographical and other errors relating to the publication.

Brother[®] One-Year Limited Warranty and Replacement Service (USA Only)

Who is covered:

- This limited warranty ("warranty") is given only to the original end-user/retail purchaser (referred to in this warranty as "Original Purchaser") of the accompanying product, consumables and accessories (collectively referred to in this warranty as "this Product").
- If you purchased a product from someone other than an authorized Brother reseller in the United States or if the product was used (including but not limited to floor models or refurbished product), prior to your purchase you are not the Original Purchaser and the product that you purchased is not covered by this warranty.

What is covered:

- This Product includes a Machine and Consumable and Accessory Items. Consumable and Accessory Items include but are not limited to print heads, toner, drums, ink cartridges, print cartridges, cordless handset battery, refill ribbons, therma PLUS paper and thermal paper.
- Except as otherwise provided herein, Brother warrants that the Machine and the accompanying Consumable and Accessory Items will be free from defects in materials and workmanship, when used under normal conditions.
- This warranty applies only to products purchased and used in the United States. For products purchased in, but used outside, the United States, this warranty covers only warranty service within the United States (and does not include shipping outside the United States).

What is the length of the Warranty Periods:

- Machines: one year from the original purchase date.
- Accompanying Consumable and Accessory Items: 90 days from the original purchase date or the rated life of consumable, whichever comes first.

What is NOT covered:

This warranty does not cover:

- 1 Physical damage to this Product;
- 2 Damage caused by improper installation, improper or abnormal use, misuse, neglect or accident (including but not limited to transporting this Product without the proper preparation and/or packaging);

- 3 Damage caused by another device or software used with this Product (including but not limited to damage resulting from use of non Brother[®]-brand parts and Consumable and Accessory Items);
- 4 Consumable and Accessory Items that expired in accordance with a rated life;
- 5 Problems arising from other than defects in materials or workmanship; and,
- 6 Normal Periodic Maintenance Items, such as Paper Feeding Kit, Fuser and Laser Units

This limited warranty is VOID if this Product has been altered or modified in any way (including but not limited to attempted warranty repair without authorization from Brother and/or alteration/removal of the serial number).

What to do if you think your Product is eligible for warranty service:

Report your issue to either our Customer Service Hotline at 1-877-BROTHER (1-877-276-8437) or to a Brother Authorized Service Center within the applicable warranty period. Supply Brother or the Brother Authorized Service Center with a copy of your dated bill of sale showing that this Product was purchased within the U.S. For the name of local Brother Authorized Service Center(s), call 1-877-BROTHER (1-877-276-8437) or visit www.brother-usa.com.

What Brother will ask you to do:

After contacting Brother or a Brother Authorized Service Center, you may be required to deliver (by hand if you prefer) or send the Product properly packaged, freight prepaid, to the Authorized Service Center together with a photocopy of your bill of sale. You are responsible for the cost of shipping, packing product, and insurance (if you desire). You are also responsible for loss or damage to this Product in shipping. What Brother will do:

If the problem reported concerning your Machine and/or accompanying Consumable and Accessory Items is covered by this warranty and if you first reported the problem to Brother or an Authorized Service Center within the applicable warranty period, Brother or its Authorized Service Center will repair or replace the Machine and/or accompanying Consumable and Accessory Items at no charge to you for parts or labor. The decision as to whether to repair or replace the Machine and/or accompanying Consumable and Accessory Items is made by Brother in its sole

Brother[®] One-Year Limited Warranty and Replacement Service (USA Only)

discretion. Brother reserves the right to supply a refurbished or remanufactured replacement Machine and/or accompanying Consumable and Accessory Items and use refurbished parts provided such replacement products conform to the manufacturer's specifications for new product/parts. The repaired or replacement Machine and/or accompanying Consumable and Accessory Items will be returned to you freight prepaid or made available for you to pick up at a conveniently located Authorized Service Center.

If the Machine and/or accompanying Consumable and Accessory Items are not covered by this warranty (either stage), you will be charged for shipping the Machine and/or accompanying Consumable and Accessory Items back to you and charged for any service and/or replacement parts/products at Brother's then current published rates.

The foregoing are your sole (i.e., only) and exclusive remedies under this warranty.

What happens when Brother elects to replace your Machine:

When a replacement Machine is authorized by Brother, and you have delivered the Machine an Authorized Service Center, Authorized Service Center will provide you with a replacement Machine after receiving one from Brother. If you are dealing directly with Brother's Express Exchange Service Brother will send to you a replacement Machine shipped for receipt within two business days, with the understanding that you will, after receipt of the replacement Machine, supply the required proof of purchase information, together with the Machine that Brother agreed to replace. You are then expected to pack the Machine that Brother agreed to replace in the package from the replacement Machine and return it to Brother using the pre-paid freight bill supplied by Brother in accordance with the instructions provided by Brother. Since you will be in possession of two machines, Brother will require that you provide a valid major credit card number. Brother will issue a hold against the credit card account number that you provide until Brother receives your original Product and determines that your original Product is entitled to warranty coverage. Your credit card will be charged up to the cost of a new Product only if: (i) you do not return your original Product to Brother within five (5) business days; (ii) the problems with your original Product are not covered by the limited warranty; (iii) the proper packaging instructions are not followed and has caused damage to

the product; or (iv) the warranty period on your original Product has expired or has not been sufficiently validated with a copy of the proof of purchase (bill of sale). The replacement Machine you receive (even if refurbished or remanufactured) will be covered by the balance of the limited warranty period remaining on the original Product, plus an additional thirty (30) days. You will keep the replacement Machine that is sent to you and your original Machine shall become the property of Brother. Retain your original Accessory Items and a copy of the return freight bill, signed by the courier.

Limitations:

Brother is not responsible for damage to or loss of any equipment, media, programs or data related to the use of this Product. Except for the repair or replacement as described above, Brother shall not be liable for any direct, indirect, incidental or consequential damages or specific relief. Because some states do not allow the exclusion or limitation of consequential or incidental damages, the above limitation may not apply to you.

THIS WARRANTY IS GIVEN IN LIEU OF ALL OTHER WARRANTIES, WRITTEN OR ORAL, WHETHER EXPRESSED BY AFFIRMATION, PROMISE, DESCRIPTION, DRAWING, MODEL OR SAMPLE. ANY AND ALL WARRANTIES OTHER THAN THIS ONE, WHETHER EXPRESS OR IMPLIED, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY DISCLAIMED.

- This Limited Warranty is the only warranty that Brother is giving for this Product. It is the *final expression and the exclusive and only statement* of Brother's obligations to you. It replaces all other agreements and understandings that you may have with Brother or its representatives.
- This warranty gives you certain rights and you may also have other rights that may vary from state to state.
- This Limited Warranty (and Brother's obligation to you) may not be changed in any way unless you and Brother sign the same piece of paper in which we (1) refer to this Product and your bill of sale date, (2) describe the change to this warranty and (3) agree to make that change.

Important: We recommend that you keep all original packing materials, in the event that you ship this Product.

BROTHER MULTIFUNCTION CENTER / FAX MACHINE LIMITED WARRANTY

(Canada only)

Pursuant to the limited warranty of 1 year from the date of purchase for labour and parts, Brother International Corporation (Canada) Ltd. ("Brother"), or its Authorized Service Centres, will repair or replace (at Brother's sole discretion) this MFC/Fax machine free of charge if defective in material or workmanship. This warranty applies only to products purchased and used in Canada. This limited Warranty does not include cleaning, consumables (including, without limitation, ink cartridges, print cartridges, print rolls, thermal paper rolls, toner cartridges, drum units, OPC belts, fixing units, print heads, paper feed rollers, transfer rolls, cleaning rollers, waste toner packs, oil bottles) or damage caused by accident, neglect, misuse or improper installation or operation, any damage caused from service, maintenance, modifications, or tampering by anyone other than a Brother Authorized Service Representative, or if shipped out of the country.

The use of supplies or consumable items that are non-Brother products may void your warranty. This limited warranty ceases when this machine is rented, sold, or otherwise disposed of.

Operation of the MFC/Fax machine in excess of the specifications or with the Serial Number or Rating Label removed shall be deemed abuse and all repairs thereafter shall be the sole liability of the end-user/purchaser. In order to obtain warranty service, the MFC/Fax machine must be delivered or shipped freight prepaid by the end-user/purchaser to a "Brother" Authorized Service Centre, together with your Canadian Proof of Purchase in the form of a Sales Receipt.

When shipping or transporting your MFC/Fax machine, please refer to your Operation Manual for the proper packaging procedures.

For Laser units: Failure to remove the Toner Cartridge (and Toner Drum Unit, waste toner packs or oil bottles on applicable models) during shipping or transport will cause severe damage to the Laser MFC/Fax machine and will void the Warranty.

For inkjet units: (When shipping your Inkjet MFC/Fax machine remove the ink cartridges and replace them with the original protective parts. If original protective parts are not available, leave ink cartridges installed. Please avoid shipping the unit without original protective parts or ink cartridges.) Damage to your print head resulting from packing the Inkjet MFC/Fax machine without the ink cartridges or the protective parts will void your warranty.

Improper packaging may cause severe damage to the machine during shipping and will void the warranty. BROTHER DISCLAIMS ALL OTHER WARRANTIES EXPRESSED OR IMPLIED INCLUDING, WITHOUT LIMITATIONS, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, EXCEPT TO THE EXTENT THAT ANY WARRANTIES IMPLIED BY LAW CANNOT BE VALIDLY WAIVED.

No oral or written information, advice or representation provided by Brother, its Authorized Service Centres, Distributors, Dealers, Agents or employees, shall create another warranty or modify this warranty. The warranty states Brother's entire liability and your exclusive remedy against Brother for any failure of the MFC/Fax machine to operate properly.

Neither Brother nor anyone else involved in the development, production, or delivery of this MFC/Fax machine shall be liable for any indirect, incidental, special, consequential, exemplary, or punitive damages, including lost profits, arising from the use of or inability to use the product, even if advised by the end user/purchaser of the possibility of such damages. Since some Provinces do not allow the above limitation of liability, such limitation, may not apply to you.

This Limited Warranty gives you specific legal rights and you may also have other rights which vary from Province to Province.

Warranty Service is available at Brother Authorized Service Centres throughout Canada.

For Technical Assistance or for the name and location of your nearest Authorized Service Centre call 1-877-BROTHER.

Internet support: support@brother.ca or browse Brother's Web Site www.brother.ca.

Table of Contents

Section I General

1	General Information	2
	Using the documentation	2
	Symbols and conventions used in the documentation	
	Accessing the Software User's Guide and Network User's Guide	
	Viewing Documentation	
	Accessing Brother Support (For Windows®)	5
	Control panel overview	
	LCD screen	
	Basic Operations	
2	Loading paper and documents	9
	Loading paper and other print media	9
	Loading envelopes and post cards	
	Loading photo paper	
	Removing small printouts from the machine	
	Printable area	
	Acceptable paper and other print media	
	Recommended print media	
	Handling and using print media	
	Choosing the right print media	
	Loading documents	
	Using the ADF	
	Using the scanner glass	
	Scannable area	
3	General setup	23
	On/Off key	23
	Turning the machine off	
	Turning the machine on	23
	Power Off setting	23
	Mode Timer	24
	Paper settings	
	Paper Type	
	Paper Size	
	Volume Settings	
	Ring Volume	
	Beeper Volume	
	Speaker Volume	
	Automatic Daylight Savings Time	
	Sleep Mode	
	•	

	LCD screen	28
	LCD Contrast	
	Setting the backlight brightness	
	Setting the Dim Timer for the backlight	
	Setting the Wallpaper	28
4	Security features	29
	TX Lock	29
	Setting and changing the TX Lock password	
	Turning TX Lock on/off	
Sec	tion II Fax	
5	Sending a Fax	32
	Entering Fax mode	32
	Faxing from the ADF	
	Faxing from the scanner glass	
	Faxing A4 size documents from the scanner glass	
	Color fax transmission	
	Canceling a fax in progress	33
	Broadcasting (Black & White only)	
	Canceling a Broadcast in progress	35
	Additional sending operations	
	Sending faxes using multiple settings	
	Contrast	
	Changing fax resolution	
	Dual access (Black & White only)	
	Real time transmission	
	Overseas Mode	
	Delayed Faxing (Black & White only)	
	Delayed Batch Transmission (Black & White only)	
	Checking and canceling waiting jobs	
	Setting your changes as the new default	
	Restoring all settings to the factory settings	
	Sending a fax manually Sending a fax at the end of a conversation	
	<u> </u>	
	Out of Memory message	39

0	Receiving a rax	40
	Receive modes	40
	Choose the correct Receive Mode	
	Using receive modes	
	Fax only	
	Fax/Tel	
	Manual	42
	External TAD	
	Receive mode settings	43
	Ring Delay	43
	F/T Ring Time (Fax/Tel mode only)	43
	Easy Receive	44
	Memory Receive (Black & White only)	44
	Fax Forwarding	44
	Paging	45
	Fax Storage	46
	PC Fax Receive	
	Turning off Memory Receive Operations	
	Changing Memory Receive Operations	
	Additional receiving operations	
	Printing a reduced incoming fax	
	Receiving a fax at the end of a conversation	
	Receiving faxes into memory when paper tray is empty	
	Printing a fax from the memory	
	Remote Retrieval	
	Setting a Remote Access Code	
	Using your Remote Access Code	
	Remote Fax commands	
	Retrieving fax messages	
	Changing your Fax Forwarding number	52
7	Talambana Caminas and External devices	F 2
	Telephone Services and External devices	53
	Voice operations	53
	Tone or Pulse (Canada only)	
	Fax/Tel mode when the power key is on	
	Fax/Tel mode when the power key is off	
	Telephone services	
	· Voice Mail	
	Distinctive Ring	55
	Caller ID	
	Connecting an external TAD (telephone answering device)	58
	Connections	
	Recording outgoing message (OGM) on an external TAD	60
	Special line considerations	
	Multi-line connections (PBX)	61
	External and extension telephones	62
	Connecting an external or extension telephone	
	Using external and extension telephones	62
	Using a Non-Brother cordless external telephone	
	Using remote codes	63

8	Dialing and storing numbers	64
	How to Dial	64
	Manual dialing	64
	Speed Dialing	
	Search	
	Fax Redial	65
	Outgoing Call	65
	Caller ID history	66
	Storing numbers	66
	Storing a pause	66
	Storing Speed Dial numbers	66
	Changing Speed Dial names or numbers	68
	Setting up groups for broadcasting	69
	Dialing Access codes and credit card numbers	71
9	Printing Reports	72
	Fax reports	72
	Transmission Verification Report	
	Fax Journal (activity report)	
	Reports	
	How to print a report	
10	Polling	75
		75
	Polling overviewPolling receive	
	Setup to receive polling	
	Sequential polling (Black & White only)	
	Polled transmit (Black & White only)	
	Set up for polled transmit	
	Set up for policy transitiff	/0

Section III Copy

11	Making copies	78
	How to copy	78
	Entering Copy mode	
	Making a single copy	78
	Making multiple copies	
	Stop copying	
	Copy settings	
	Changing copy quality	
	Enlarging or reducing the image copied	
	Making N in 1 copies or a poster (Page Layout)	
	Sorting copies using the ADF	
	Adjusting Brightness and Contrast	
	Paper Options	
	Book Copy	
	Watermark Copy Setting your changes as the new default	
	Restoring all settings to the factory settings 'Out of Memory' message	
12	PhotoCapture Center®: Printing photos from a memory card	
12	USB Flash memory drive	88
12	USB Flash memory drive PhotoCapture Center® Operations	88 88
12	PhotoCapture Center® Operations	88 88
12	PhotoCapture Center® Operations	88 88
12	PhotoCapture Center® Operations	88 88 88
12	PhotoCapture Center® Operations	88 88 88 88
12	PhotoCapture Center® Operations	88 88 88 88 88
12	PhotoCapture Center® Operations	88 88 88 88 89
12	PhotoCapture Center® Operations	88 88 88 88 89 90
12	PhotoCapture Center® Operations Printing from a memory card or USB Flash memory drive without a PC Scanning to a memory card or USB Flash memory drive without a PC Using PhotoCapture Center® from your computer Using a memory card or USB Flash memory drive Memory cards or a USB Flash memory drive folder structure Getting started Entering PhotoCapture mode Print Images	88 88 88 88 89 90
12	PhotoCapture Center® Operations Printing from a memory card or USB Flash memory drive without a PC Scanning to a memory card or USB Flash memory drive without a PC Using PhotoCapture Center® from your computer Using a memory card or USB Flash memory drive Memory cards or a USB Flash memory drive folder structure Getting started Entering PhotoCapture mode Print Images View Photo(s)	88 88 88 89 90 91
12	PhotoCapture Center® Operations Printing from a memory card or USB Flash memory drive without a PC Scanning to a memory card or USB Flash memory drive without a PC Using PhotoCapture Center® from your computer Using a memory card or USB Flash memory drive Memory cards or a USB Flash memory drive folder structure Getting started	88 88 88 88 89 90 91 91
12	PhotoCapture Center® Operations	88 88 88 89 91 91 91 91
12	PhotoCapture Center® Operations Printing from a memory card or USB Flash memory drive without a PC. Scanning to a memory card or USB Flash memory drive without a PC. Using PhotoCapture Center® from your computer Using a memory card or USB Flash memory drive Memory cards or a USB Flash memory drive folder structure. Getting started Entering PhotoCapture mode Print Images. View Photo(s) Print Index (Thumbnails) Printing Photos Enhance Photos	88 88 88 89 90 91 91 91 91 92
12	PhotoCapture Center® Operations Printing from a memory card or USB Flash memory drive without a PC. Scanning to a memory card or USB Flash memory drive without a PC. Using PhotoCapture Center® from your computer Using a memory card or USB Flash memory drive Memory cards or a USB Flash memory drive folder structure. Getting started Entering PhotoCapture mode Print Images. View Photo(s) Print Index (Thumbnails) Printing Photos Enhance Photos Search by Date	88 88 88 89 91 91 91 91 91
12	PhotoCapture Center® Operations Printing from a memory card or USB Flash memory drive without a PC. Scanning to a memory card or USB Flash memory drive without a PC. Using PhotoCapture Center® from your computer Using a memory card or USB Flash memory drive Memory cards or a USB Flash memory drive folder structure. Getting started Entering PhotoCapture mode Print Images. View Photo(s) Print Index (Thumbnails) Printing Photos Enhance Photos Search by Date Print All Photos	88 88 88 89 90 91 91 91 91 92 92 92
12	PhotoCapture Center® Operations Printing from a memory card or USB Flash memory drive without a PC Scanning to a memory card or USB Flash memory drive without a PC Using PhotoCapture Center® from your computer Using a memory card or USB Flash memory drive Memory cards or a USB Flash memory drive folder structure Getting started Entering PhotoCapture mode Print Images View Photo(s) Print Index (Thumbnails) Printing Photos Enhance Photos Search by Date Print All Photos Slide show	88 88 88 89 90 91 91 91 91 92 92 93 93
12	PhotoCapture Center® Operations Printing from a memory card or USB Flash memory drive without a PC. Scanning to a memory card or USB Flash memory drive without a PC. Using PhotoCapture Center® from your computer Using a memory card or USB Flash memory drive Memory cards or a USB Flash memory drive folder structure. Getting started Entering PhotoCapture mode Print Images. View Photo(s) Print Index (Thumbnails) Printing Photos Enhance Photos Search by Date Print All Photos	88888889919191919191929293

	PhotoCapture Center® print settings	99
	Print Quality	
	Paper options	
	Adjusting Brightness, Contrast and Color	101
	Cropping	
	Borderless printing	
	Print Date	102
	Setting your changes as the new default	103
	Restoring all settings to the factory settings	103
	Scan to a memory card or USB Flash memory drive	103
	Entering Scan mode	
	How to scan to a memory card or USB Flash memory drive	104
	How to change the file name	
	How to set a new default	105
	How to reset to the factory settings	105
	Understanding the Error Messages	
13	Printing photos from a camera	107
13	<u> </u>	
13	Printing photos directly from a PictBridge camera	107
13	Printing photos directly from a PictBridge camera PictBridge requirements	107
13	Printing photos directly from a PictBridge camera PictBridge requirements Setting your digital camera	107 107
13	Printing photos directly from a PictBridge camera PictBridge requirements Setting your digital camera Printing Images	107 107 107
13	Printing photos directly from a PictBridge camera PictBridge requirements Setting your digital camera Printing Images DPOF printing	107 107 107 108
13	Printing photos directly from a PictBridge camera	107 107 107 108 108
13	Printing photos directly from a PictBridge camera	107 107 107 108 109
13	Printing photos directly from a PictBridge camera	107 107 107 108 109
	Printing photos directly from a PictBridge camera PictBridge requirements Setting your digital camera Printing Images DPOF printing Printing photos directly from a digital camera (without PictBridge) Printing Images Understanding the Error Messages	107 107 107 108 109
	Printing photos directly from a PictBridge camera	107 107 107 108 109
	Printing photos directly from a PictBridge camera PictBridge requirements Setting your digital camera Printing Images DPOF printing Printing photos directly from a digital camera (without PictBridge) Printing Images Understanding the Error Messages	107 107 107 108 109

Section VI Appendixes

Α	Safety and Legal	114
	Choosing a location	114
	To use the machine safely	115
	Important safety instructions	
	Standard telephone and FCC Notices (These notices are in effect on	
	models sold and used in the United States only.)	121
	Federal Communications Commission (FCC) Declaration of Conformity	
	(USA only)	123
	Industry Canada Compliance Statement (Canada only)	123
	LAN connection	124
	International ENERGY STAR® Compliance Statement	124
	Legal limitations for copying	125
	Trademarks	
В	Troubleshooting and Routine Maintenance	127
	Troubleshooting	127
	If you are having difficulty with your machine	
	Dial Tone	
	Telephone line interference	
	Error and Maintenance messages	135
	Error animation	
	Transferring your faxes or Fax Journal report	140
	Document jam	141
	Printer jam or paper jam	142
	Routine maintenance	145
	Replacing the ink cartridges	145
	Cleaning the outside of the machine	147
	Cleaning the scanner	148
	Cleaning the machine printer platen	149
	Cleaning the paper pick-up roller	
	Cleaning the print head	150
	Checking the print quality	
	Checking the print alignment	
	Checking the ink volume	
	Machine Information	
	Checking the serial number	
	Packing and shipping the machine	152

С	Menu and Features	155
	On-screen programming	155
	Menu table	
	Memory storage	155
	Mode and menu keys	
	Menu table	156
	Entering Text	173
D	Specifications	174
	General	174
	Print media	
	Fax	
	Copy	179
	PhotoCapture Center®	
	PictBridge	181
	Scanner	182
	Printer	183
	Interfaces	184
	Computer requirements	185
	Consumable items	186
	Network (LAN)	
	Wireless one-push configuration	188
E	Glossary	189
F	Index	193

Section I

General

General Information	2
Loading paper and documents	9
General setup	23
Security features	29

1

General Information

Using the documentation

Thank you for buying a Brother machine! Reading the documentation will help you make the most of your machine.

Symbols and conventions used in the documentation

The following symbols and conventions are used throughout the documentation.

Bold Bold typeface identifies specific

keys on the machine's control

panel.

Italicized typeface emphasizes

an important point or refers you

to a related topic.

Courier

New

Text in Courier New font identifies messages on the

LCD of the machine.



Warnings tell you what to do to prevent possible personal injury.



Cautions specify procedures you must follow or avoid to prevent possible damage to the machine or other objects.



Electrical Hazard icons alert you to possible electrical shock.



Notes tell you how you should respond to a situation that may arise or give tips about how the operation works with other features.



Improper Setup icons alert you to devices and operations that are not compatible with the machine.

Accessing the Software User's Guide and Network User's Guide

This User's Guide does not contain all the information about the machine such as how to use the advanced features of the Printer, Scanner, PC Fax and Network. When you are ready to learn detailed information about these operations, read the **Software User's Guide** and **Network User's Guide** that are on the CD-ROM.

Viewing Documentation

Viewing Documentation (For Windows®)

To view the documentation, from the **Start** menu, point to **Brother**, **MFC-XXXX** (where XXXX is your model name) from the programs group, and then choose **User's Guides in HTML format**.

If you have not installed the software, you can find the documentation by following the instructions below:

- 1 Turn on your PC. Insert the Brother CD-ROM into your CD-ROM drive.
- 2 If the model name screen appears, click your model name.

If the language screen appears, click your language. The CD-ROM main menu will appear.





If this window does not appear, use Windows[®] Explorer to run the start.exe program from the root directory of the Brother CD-ROM.

- 4 Click **Documentation**.
- 5 Click the documentation you want to read.
 - HTML documents: Software User's Guide and Network User's Guide in HTML format.

This format is recommended for viewing on your computer.

■ PDF documents: User's Guide for stand-alone operations, Software User's Guide and Network User's Guide in PDF format.

This format is recommended for printing the manuals. Click to go to the Brother Solutions Center, where you can view or download the PDF documents. (Internet access and PDF Reader software are required.)

How to find Scanning instructions

There are several ways you can scan documents. You can find the instructions as follows:

Software User's Guide

- Scanning (For Windows[®] 2000 Professional/ Windows[®] XP and Windows Vista[®])
- ControlCenter3
 (For Windows® 2000 Professional/
 Windows® XP and Windows Vista®)
- Network Scanning

ScanSoft™ PaperPort™ 11SE with OCR How-to-Guides

■ The complete ScanSoft™ PaperPort™ 11SE with OCR How-to-Guides can be viewed from the Help selection in the ScanSoft™ PaperPort™ 11SE application.

How to find Network setup instructions


Your machine can be connected to a wireless or wired network. You can find basic setup instructions in the Quick Setup Guide. If your wireless access point supports

SecureEasySetup™, Wi-Fi Protected


Setup™ or AOSS™, follow the steps in the Quick Setup Guide. For more information about network setup please see the Network User's Guide.

Viewing Documentation (For Macintosh®)

1 Turn on your Macintosh®. Insert the Brother CD-ROM into your CD-ROM drive. The following window will appear.

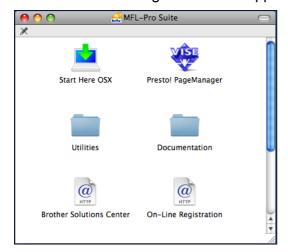

- 2 Double-click the **Documentation** icon.
- 3 Double-click your language folder.
- 4 Double-click the top.html file to view the Software User's Guide and Network User's Guide in HTML format.

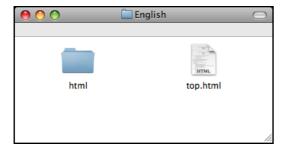

- 5 Click the documentation you want to read:
 - Software User's Guide
 - Network User's Guide

How to find Scanning instructions

There are several ways you can scan documents. You can find the instructions as follows:

Software User's Guide

- Scanning
 (For Mac OS® X 10.2.4 or greater)
- ControlCenter2
 (For Mac OS® X 10.2.4 or greater)
- Network Scanning (For Mac OS[®] X 10.2.4 or greater)

Presto!® PageManager® User's Guide

■ The complete Presto!® PageManager® User's Guide can be viewed from the Help selection in the Presto!® PageManager® application.

How to find Network setup instructions

Your machine can be connected to a wireless or wired network. You can find basic setup instructions in the Quick Setup Guide. If your wireless access point supports
SecureEasySetup™, Wi-Fi Protected
Setup™ or AOSS™, follow the steps in the Quick Setup Guide. For more information about network setup please see the Network User's Guide.

Accessing Brother Support (For Windows®)

You can find all the contacts you will need, such as Web support (Brother Solutions Center), Customer Service and Brother Authorized Service Centers in *Brother numbers* on page i and on the Brother CD-ROM.

Click Brother Support on the main menu. The following screen will appear:



- To access our web site (http://www.brother.com), click **Brother** Home Page.
- To view all Brother Numbers, including Customer Service numbers for the USA and Canada, click **Support Information**.
- To access the USA Brother online shopping mall (http://www.brothermall.com) for additional product and services information, click **Brother Mall.com**.
- To access Canada's Brother online shopping mall (<u>http://www.brother.ca</u>) for additional product and services information, click **Shop Online (Canada)**.
- For the latest news and product support information (http://solutions.brother.com), click **Brother Solutions Center**.

- To visit our web site for original/genuine Brother Supplies (http://www.brother.com/original/), click Supplies Information.
- To access the Brother CreativeCenter (http://www.brother.com/creativecenter/) for FREE photo projects and printable downloads, click **Brother** CreativeCenter.
- To return to the main page, click **Back** or if you have finished, click **Exit**.

Control panel overview



1 Fax and telephone keys:

■ Redial/Pause

Redials the last 30 numbers called. It also inserts a pause when programming quick dial numbers.

■ Hook

Press before dialing if you want to make sure a fax machine will answer, and then press **Black Start** or **Color Start**.

Also, press this key after picking up the handset of an external telephone during the F/T pseudo/double-ring.

2 Dial Pad

Use these keys to dial telephone and fax numbers and as a keyboard for entering information into the machine.

(Canada only) The # key lets you temporarily switch the dialing mode during a telephone call from Pulse to Tone.

3 Mode keys:

■ 📠 Fax

Lets you access Fax mode.

■ **Scan**

Lets you access Scan mode.

Lets you access Copy mode.

■ Photo Capture

Lets you access PhotoCapture Center® mode.

4 Menu keys:

■ Volume keys



While the machine is idle, you can press these keys to adjust the ring volume.

■ Speed Dial key



Press to store Speed Dial and Group numbers in the machine's memory. Lets you store, look up, and dial numbers that are stored in the memory.

■ **d** or **b**

Press to scroll backward or forward to a menu selection.

Also, press to choose options.

■ A or ▼

Press to scroll through the menus and options.



■ Menu

Access the main menu.

■ Clear/Back

Press to delete characters or to go back to the previous menu level.

■ OK

Choose a setting.

5 Start keys:



Color Start

Lets you start sending faxes or making copies in full color. Also lets you start a scanning operation (in color or black & white, depending on the scanning setting in the ControlCenter software).

Black Start

Lets you start sending faxes or making copies in black & white. Also lets you start a scanning operation (in color or black & white depending on the scanning setting in the ControlCenter software).

6 Stop/Exit

Stops an operation or exits from a menu.

7 Ink

Lets you clean the print head, check the print quality, and check the available ink volume.

8 LCD (liquid crystal display)

Displays messages on the screen to help you set up and use your machine.

Also, you can adjust the angle of the LCD screen by lifting it.

9 On/Off

You can turn the machine on or off.
The On/Off key can be customized by changing the Power Off setting.

 
LCD screen

The LCD shows the current machine status when the machine is idle.



1 Wireless Status

A four level indicator shows the current wireless signal strength if you are using a wireless connection.



2 Memory Status

Lets you see the available memory in the machine.

3 Ink indicator

Lets you see the available ink volume.

4 Current Receive Mode

Lets you see the current receive mode.

- Fax (Fax only)
- F/T (Fax/Tel)
- TAD (External TAD)
- Mnl (Manual)

 
5 Faxes in memory

Shows how many received faxes are in the memory.

Basic Operations


The following steps show how to change a setting in the machine. In this example the Mode Timer setting is changed from 2 minutes to 30 seconds.

- 1 Press Menu.
- Press ▲ or ▼ to choose General Setup.
- 3 Press **OK**.
- 4 Press ▲ or ▼ to choose Mode Timer.
- 5 Press **d** or **▶** to choose 30 Secs.



Press OK.

 You can see the current setting on the LCD:



6 Press Stop/Exit.

2


Loading paper and documents

Loading paper and other print media




To print on Photo (4" \times 6") or Photo L (3.5" \times 5") paper, you must use the photo bypass tray. (See *Loading photo paper* on page 13.)


1 If the paper support flap is open, close it, and then close the paper support. Pull the paper tray completely out of the machine.

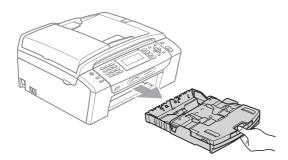

2 Lift the output paper tray cover (1).

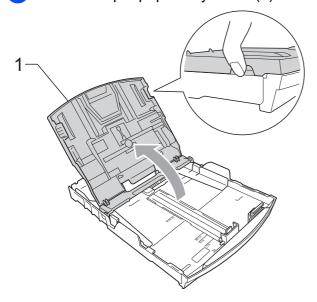


With both hands, gently press and slide the paper side guides (1) and then the paper length guide (2) to fit the paper size. Make sure that the triangular marks (3) on the paper side guides (1) and paper length guide (2) line up with the mark for the paper size you are using.

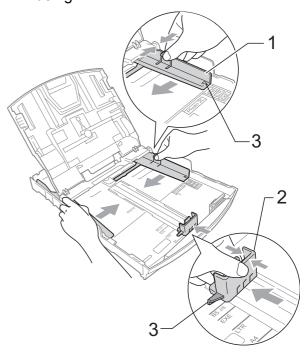




When you are using Legal size paper, press and hold the universal guide release button (1) as you slide out the front of the paper tray.

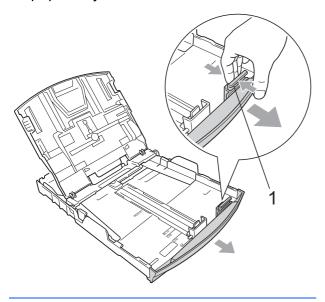


4) Fan the stack of paper well to avoid paper jams and misfeeds.

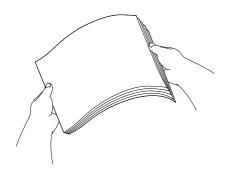


Note

Always make sure that the paper is not curled or wrinkled.

Gently put the paper into the paper tray print side down and top edge in first. Check that the paper is flat in the tray.

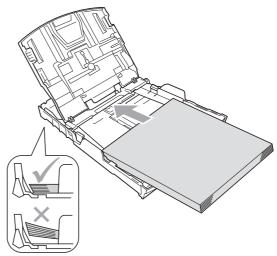


Gently adjust the paper side guides (1) to fit the paper with both hands. Make sure the paper side guides touch the sides of the paper.

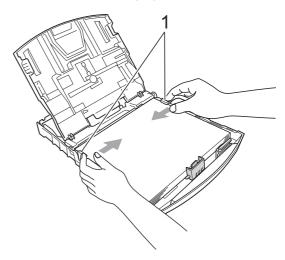


Note

Be careful that you do not push the paper in too far; it may lift at the back of the tray and cause feed problems.

7 Close the output paper tray cover.

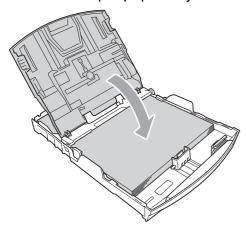

8 Slowly push the paper tray completely into the machine.

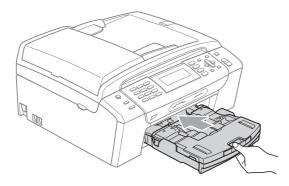

9 While holding the paper tray in place, pull out the paper support (1) until it clicks, and then unfold the paper support flap (2).





Do not use the paper support flap for Legal paper.

Loading envelopes and post cards

About envelopes

- Use envelopes that weigh from 20 to 25 lb (80 to 95 g/m²).
- Some envelopes need margin settings to be set in the application. Make sure you do a test print first before printing many envelopes.

CAUTION

DO NOT use any of the following types of envelopes, as they will cause paper feed problems:

- · That are of a baggy construction.
- That are embossed (have raised writing on them).
- That have clasps or staples.
- That are pre-printed on the inside.

Glue	Double flap


Occasionally you may experience paper feed problems caused by the thickness, size and flap shape of the envelopes you are using.

How to load envelopes and post cards


1 Before loading, press the corners and sides of envelopes or post cards to make them as flat as possible.



If envelopes or post cards are 'double-feeding', put one envelope or post card in the paper tray at a time.

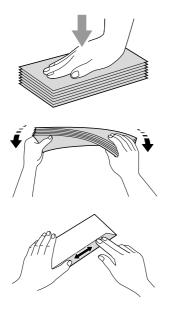


Put envelopes or post cards in the paper tray with the address side down and the leading edge in first as shown in the illustration. With both hands, gently press and slide the paper side guides (1) and paper length guide (2) to fit the size of the envelopes or post cards.

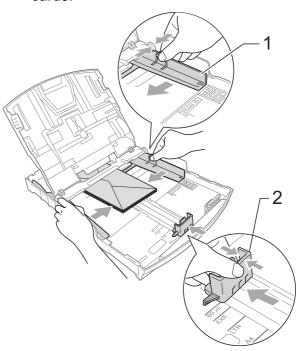

If you have problems when printing on envelopes, try the following suggestions:

- 1 Open the envelope flap.
- 2 Make sure the open flap is either to the side of the envelope or to the back edge of the envelope when printing.
- Adjust the size and margin in your application.

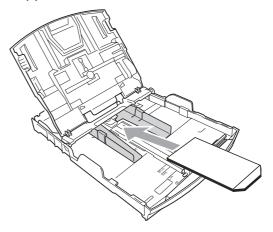

Loading photo paper



In Canada, the **photo bypass tray** is called the **photo paper tray**.

Use the photo bypass tray, which is located on the top of the output paper tray cover, to print on Photo (4" \times 6") and Photo L (3.5" \times 5") size paper. When you use the photo bypass tray, you do not have to take out the paper that is in the tray beneath it.

1 Squeeze the blue photo bypass tray release button (1) using your right index finger and thumb and push the photo bypass tray forward until it clicks into the photo printing position (2).


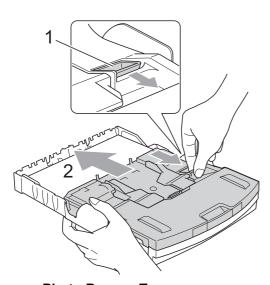


Photo Bypass Tray

Press and slide the paper side guides (1) and paper length guide (2) to fit the paper size.

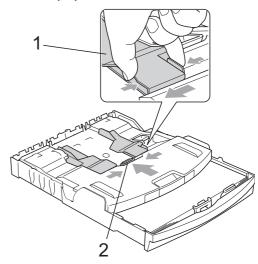

3 Put the photo paper into the photo bypass tray and gently adjust the paper side guides to the paper.

Make sure the paper side guides touch the sides of the paper.

Check that the paper is flat in the tray.




Note

- Be careful that you do not push the paper in too far; it may lift at the back of the tray and cause feed problems.
- Always make sure that the paper is not curled or wrinkled.

Chapter 2


When you have finished printing photos return the photo bypass tray to the normal printing position.

Squeeze the blue photo bypass tray release button (1) using your right index finger and thumb and push the photo

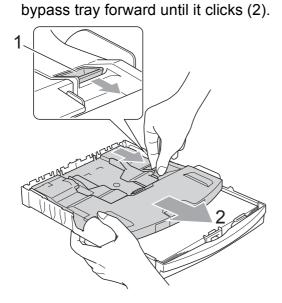

Removing small printouts from the machine


When the machine ejects small paper onto the output paper tray you may not be able to reach it. Make sure printing has finished, and then pull the tray completely out of the machine.

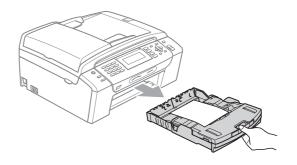


Printable area

The printable area depends on the settings in the application you are using. The figures below show the unprintable areas on cut sheet paper and envelopes. The machine can only print in the shaded areas when the Borderless print feature is available and turned on.

Cut Sheet Paper

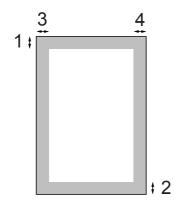

Envelopes

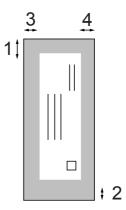

	Top (1)	Bottom (2)	Left (3)	Right (4)
Cut Sheet	0.12 in. (3 mm)	0.12 in. (3 mm)	0.12 in. (3 mm)	0.12 in. (3 mm)
Envelopes	0.47 in. (12 mm)	0.95 in. (24 mm)	0.12 in. (3 mm)	0.12 in. (3 mm)



The Borderless feature is not available for envelopes.

Acceptable paper and other print media

The print quality can be affected by the type of paper you are using in the machine.

To get the best print quality for the settings you have chosen, always set the Paper Type to match the type of paper you load.

You can use plain paper, inkjet paper (coated paper), glossy paper, transparencies and envelopes.

We recommend testing various paper types before buying large quantities.

For best results, use Brother paper.

- When you print on inkjet paper (coated paper), transparencies and photo paper, be sure to choose the proper print media in the 'Basic' tab of the printer driver or in the Paper Type setting of the machine's menu. (See Paper Type on page 24.)
- When you print on Brother Photo paper, load one extra sheet of the same photo paper in the paper tray. An extra sheet has been included in the paper package for this purpose.
- When you use transparencies or photo paper, remove each sheet at once to prevent smudging or paper jams.
- Avoid touching the printed surface of the paper immediately after printing; the surface may not be completely dry and may stain your fingers.

Recommended print media

To get the best print quality, we suggest using Brother paper. (See table below.)

We recommend using '3M Transparency Film' when you print on transparencies.

Brother paper

Paper Type	Item
Letter Plain	BP60PL100 (USA only)
Letter Glossy Photo	BP71GLTR
Letter Inkjet (Matte)	BP60ML (USA only)
4 × 6 in. Glossy Photo	BP71GP

Handling and using print media

 
- Store paper in its original packaging, and keep it sealed. Keep the paper flat and away from moisture, direct sunlight and heat.
- Avoid touching the shiny (coated) side of photo paper. Load photo paper with the shiny side facing down.
- Avoid touching either side of transparencies because they absorb water and perspiration easily, and this may cause decreased output quality. Transparencies designed for laser printers/copiers may stain your next document. Use only transparencies recommended for inkjet printing.
- You can only print on both sides of the paper with PC printing. (See Printing for Windows[®] in the Software User's Guide on the CD-ROM.)

0

Improper Setup

DO NOT use the following kinds of paper:

 Damaged, curled, wrinkled, or irregularly shaped paper



1 0.08 in. (2 mm) or greater

- · Extremely shiny or highly textured paper
- Paper that cannot be arranged uniformly when stacked
- · Paper made with a short grain

Paper capacity of the output paper tray cover

Up to 50 sheets of Letter, Legal or A4 20 lb (80 g/m²) paper.

Transparencies and photo paper must be picked up from the output paper tray cover one page at a time to avoid smudging.

Choosing the right print media

Paper type and size for each operation

Paper Type	Paper Size		Usage			
			Fax	Сору	Photo Capture	Printer
Cut Sheet	Letter	8 1/2 × 11 in. (215.9 × 279.4 mm)	Yes	Yes	Yes	Yes
	A4	8.3×11.7 in. (210 \times 297 mm)	Yes	Yes	Yes	Yes
	Legal	8 1/2 \times 14 in. (215.9 \times 355.6 mm)	Yes	Yes	_	Yes
	Executive	7 $1/4 \times 10 \ 1/2 \ in. \ (184 \times 267 \ mm)$	_	_	_	Yes
	JIS B5	7.2×10.1 in. (182 \times 257 mm)	_	_	_	Yes
	A5	5.8×8.3 in. (148 \times 210 mm)	_	Yes	_	Yes
	A6	4.1×5.8 in. (105 × 148 mm)	_	_	_	Yes
Cards	Photo	4 × 6 in. (10 × 15 cm)	_	Yes	Yes	Yes
	Photo L	3 1/2 \times 5 in. (89 \times 127 mm)	_	_	_	Yes
	Photo 2L	5×7 in. (13 \times 18 cm)	_	_	Yes	Yes
	Index Card	5×8 in. (127 \times 203 mm)	_	_	_	Yes
	Post Card 1	3.9×5.8 in. (100 \times 148 mm)	_	_	_	Yes
	Post Card 2 (Double)	5.8×7.9 in. (148 × 200 mm)	_	_	_	Yes
Envelopes	C5 Envelope	6.4 × 9 in. (162 × 229 mm)	_	_	_	Yes
	DL Envelope	4.3×8.7 in. (110 × 220 mm)	_	_	_	Yes
	COM-10	4 1/8 \times 9 1/2 in. (105 \times 241 mm)	_	_	_	Yes
	Monarch	3 7/8 \times 7 1/2 in. (98 \times 191 mm)	_	_	_	Yes
	JE4 Envelope	4.1×9.3 in. (105 × 235 mm)	_	_	_	Yes
Transparencies	Letter	8 1/2 × 11 in. (215.9 × 279.4 mm)	_	Yes	_	Yes
	A4	8.3×11.7 in. (210 \times 297 mm)	_	Yes	_	Yes

Paper weight, thickness and capacity

Paper Type		Weight	Thickness	No. of sheets
Cut Sheet	Plain Paper	17 to 32 lb (64 to 120 g/m ²)	3 to 6 mil (0.08 to 0.15 mm)	100 ¹
	Inkjet Paper	17 to 53 lb (64 to 200 g/m ²)	3 to 10 mil (0.08 to 0.25 mm)	20
	Glossy Paper	Up to 58 lb (Up to 220 g/m ²)	Up to 10 mil (Up to 0.25 mm)	20 ^{2 3}
Cards	Photo 4"×6"	Up to 58 lb (Up to 220 g/m ²)	Up to 10 mil (Up to 0.25 mm)	20 ^{2 3}
	Index Card	Up to 32 lb (Up to 120 g/m ²)	Up to 6 mil (Up to 0.15 mm)	30
	Post Card	Up to 53 lb (Up to 200 g/m ²)	Up to 10 mil (Up to 0.25 mm)	30
Envelopes		20 to 25 lb (75 to 95 g/m ²)	Up to 20 mil (Up to 0.52 mm)	10
Transparencies		-	_	10

Up to 100 sheets of plain paper 20 lb (80 g/m²).

For Photo 4"x6" paper and Photo L 3.5"x5" paper, use the photo bypass tray (in USA) or the photo paper tray (in Canada). (See *Loading photo paper* on page 13.)

³ BP71 69 lb (260 g/m²) paper is especially designed for Brother inkjet machines.

Loading documents

You can send a fax, make copies, and scan from the ADF (automatic document feeder) and from the scanner glass.

Using the ADF

The ADF can hold up to 15 pages and feeds each sheet individually. Use standard 20 lb (80 g/m²) paper and always fan the pages before putting them in the ADF.

Recommended environment

Temperature: 68 to 86° F (20 to 30° C)

Humidity: 50% to 70%

Paper: 20 lb LTR (80 g/m² A4)

Document Sizes Supported

Length: 5.8 to 14 in. (148 to 355.6 mm)

Width: 5.8 to 8.5 in. (148 to 215.9 mm)

Weight: 17 to 24 lb (64 to 90 g/m²)

How to load documents




CAUTION

DO NOT pull on the document while it is feeding.

DO NOT use paper that is curled, wrinkled, folded, ripped, stapled, paper clipped, pasted or taped.

DO NOT use cardboard, newspaper or fabric.

- Make sure documents with ink or liquid correction fluid are completely dry.
- 1 Unfold the ADF Document Output Support Flap (1).
- 2 Fan the pages well.
- 3 Adjust the paper guides (2) to fit the width of your document.
- 4 Place your document, face down, top edge first in the ADF until the LCD display shows ADF Ready and you feel it touch the feed roller.

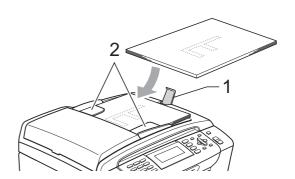



CAUTION

DO NOT leave a thick document on the scanner glass. If you do this, the ADF may jam.

Using the scanner glass

You can use the scanner glass to fax, copy or scan pages of a book or one page at a time.

Document Sizes Supported

Length: Up to 11.7 in. (297 mm) Width: Up to 8.5 in. (215.9 mm) Up to 4.4 lb (2 kg) Weight:


How to load documents



To use the scanner glass, the ADF must be empty.

Lift the document cover.

Using the document guidelines on the left and top, place the document in the upper left hand corner with the document face down on the scanner glass.

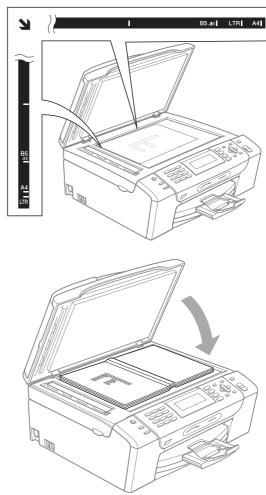

Close the document cover.




CAUTION

If you are scanning a book or thick document, DO NOT slam the cover down or press on it.

Scannable area

The scannable area depends on the settings in the application you are using. The figures below show the unscannable area.

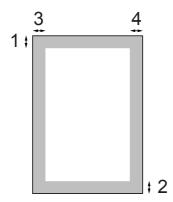

Usage	Document Size	Top (1) Bottom (2)	Left (3) Right (4)
Fax	Letter	0.12 in. (3 mm)	0.16 in. (4 mm)
	A4	0.12 in. (3 mm)	(Scanner Glass) 0.12 in. (3 mm)
			(ADF) 0.04 in. (1 mm)
	Legal	0.12 in. (3 mm)	0.16 in. (4 mm)
Сору	All paper sizes	0.12 in. (3 mm)	0.12 in. (3 mm)
Scan	All paper sizes	0.12 in. (3 mm)	0.12 in. (3 mm)

General setup

On/Off key

You can turn the machine on and off by pressing the **On/Off** key.



- If you press the On/Off key while the machine is in use it will finish the operation before going into the Off mode.
- If you have connected an external telephone or TAD, it is always available.

Turning the machine off

1 Press and hold down the On/Off key until the LCD shows Shutting Down. The LCD will stay on for a few seconds before going off.

Turning the machine on

1 Press the On/Off key.

Power Off setting

You can customize the machine's **On/Off** key. The factory setting is

Fax Receive:Off. Your machine will not work when it is switched off, but it will clean the print head periodically. If you turn this setting to Fax Receive:On, you can receive faxes or calls even when the machine is switched off. (See On/Off key on this page.)

- 1 Press Menu.
- Press A or ▼ to choose General Setup. Press OK.
- 3 Press ▲ or ▼ to choose PwrOff Setting.
- 4 Press ◀ or ▶ to choose
 Fax Receive:On (or Fax Receive:Off).
 Press OK.
- 5 Press Stop/Exit.

On/Off setting	Receive mode	Available operations
Fax Receive: Off	_	No machine operations will be
(factory setting)		available.
Fax Receive:	Fax Only	Fax Receive
On ¹	External	Easy Receive
	TAD	Delayed Fax ³
		Fax Forward ³
		Paging ³
		Fax Storage 3
		PC Fax Receive 3
		Remote Retrieval ³
	Manual	Easy Receive
	Fax/Tel ²	Delayed Fax ³

- You cannot receive a fax with Black Start or Color Start.
- You cannot receive a fax automatically if you have set the receive mode to Fax/Tel.
- Set before you switch off the machine.

Mode Timer

The machine has four temporary mode keys on the control panel: Fax, Scan, Copy and Photo Capture. You can change the amount of time the machine takes after the last Scan, Copy or PhotoCapture operation before it returns to Fax mode. If you choose Off, the machine stays in the mode you used last.



- 1 Press Menu.
- 2 Press A or ▼ to choose General Setup. Press OK.
- 3 Press ▲ or ▼ to choose Mode Timer.
- 4 Press ◀ or ▶ to choose OSec, 30Secs, 1Min, 2Mins, 5Mins or Off.
 Press OK.
- 5 Press Stop/Exit.

Paper settings

Paper Type

To get the best print quality, set the machine for the type of paper you are using.

- 1 Press Menu.
- Press ▲ or ▼ to choose
 General Setup.
 Press OK.
- 3 Press ▲ or ▼ to choose Paper Type.
- 4 Press ◀ or ▶ to choose Plain Paper, Inkjet Paper, Brother BP71, Other Glossy Or Transparency. Press OK.
- 5 Press Stop/Exit.



The machine ejects paper with printed surfaces face up onto the paper tray in front of the machine. When you use transparencies or glossy paper, remove each sheet at once to prevent smudging or paper jams.

6

Paper Size

You can use five sizes of paper for printing and copying: Letter, Legal, A4, A5 and 4×6 in. (10×15 cm) and three sizes for printing faxes: Letter, Legal and A4. When you change the size of paper you load in the machine, you will need to change the paper size setting at the same time so your machine can fit an incoming fax on the page.

- 1 Press Menu.
- Press ▲ or ▼ to choose
 General Setup.
 Press OK.
- 3 Press ▲ or ▼ to choose Paper Size.
- Press ◀ or ▶ to choose Letter, Legal,
 A4, A5 and 4"X6".
 Press OK.
- 5 Press Stop/Exit.

Volume Settings

Ring Volume

You can choose a range of ring volume levels, from High to Off.

While the machine is idle, press < o < or > < or >

Setting the Ring Volume from the menu

- 1 Press Menu.
- Press ▲ or ▼ to choose
 General Setup.
 Press OK.
- 3 Press A or ▼ to choose Volume. Press OK.
- 4 Press A or ▼ to choose Ring.
- Press ◀ or ▶ to choose Low, Med, High or Off. Press OK.
- 6 Press Stop/Exit.

Beeper Volume

When the beeper is on, the machine will beep when you press a key, make a mistake or after you send or receive a fax.

You can choose a range of volume levels, from High to Off.

- 1 Press Menu.
- Press ▲ or ▼ to choose
 General Setup.
 Press OK.
- 3 Press A or ▼ to choose Volume. Press OK.
- Press ▲ or ▼ to choose Beeper.
- Press ◀ or ▶ to choose Low, Med, High or Off.
 Press OK.
- 6 Press Stop/Exit.

Speaker Volume

You can choose a range of speaker volume levels, from High to Off.

- 1 Press Menu.
- Press ▲ or ▼ to choose
 General Setup.
 Press OK.
- 3 Press ▲ or ▼ to choose Volume. Press OK.
- 4 Press A or ▼ to choose Speaker.
- Fress ◀ or ▶ to choose Low, Med, High or Off.
 Press OK.
- 6 Press Stop/Exit.

You can also adjust the speaker volume by pressing **Hook**.

- 1 Press Hook.
- Press ▲ and ◄ or ▶ ◄ ».
 This setting will stay until you change it again.
- 3 Press **Hook**.

-3

Automatic Daylight Savings Time

You can set the machine to change automatically for daylight savings time. It will reset itself forward one hour in the Spring and backward one hour in the Fall. Make sure you have set the correct date and time in the Date&Time setting.

The factory setting is Off, so you will have to turn on Automatic Daylight Saving Time as follows.

- 1 Press Menu.
- Press ▲ or ▼ to choose
 General Setup.
 Press OK.
- 3 Press A or ▼ to choose Auto Daylight.
- Press ◀ or ▶ to choose On (or Off). Press OK.
- 5 Press Stop/Exit.

Sleep Mode

You can choose how long the machine must be idle (from 1 to 60 minutes) before it goes into sleep mode. The timer will restart if any operation is carried out on the machine.

- 1 Press Menu.
- Press ▲ or ▼ to choose
 General Setup.
 Press OK.
- 3 Press A or V to choose Sleep Mode.
- 4 Press ◀ or ▶ to choose 1Min, 2Mins, 3Mins, 5Mins, 10Mins, 30Mins or 60Mins, which is the length of time the machine is idle before entering sleep mode.

Press OK.

5 Press Stop/Exit.

LCD screen

LCD Contrast

You can adjust the LCD contrast for a sharper and more vivid display. If you are having difficulty reading the LCD, try changing the contrast setting.

- Press Menu.
- Press ▲ or ▼ to choose
 General Setup.
 Press OK.
- 3 Press A or ▼ to choose LCD Settings. Press OK
- 4 Press ▲ or ▼ to choose LCD Contrast.
- 5 Press ◀ or ▶ to choose Light, Med or Dark.
 Press OK.
- 6 Press Stop/Exit.

Setting the backlight brightness

You can adjust the brightness of the LCD backlight. If you are having difficulty reading the LCD, try changing the brightness setting.

- 1 Press Menu.
- Press ▲ or ▼ to choose
 General Setup.
 Press OK.
- 3 Press A or ▼ to choose LCD Settings. Press OK.
- 4 Press A or V to choose Backlight.
- 5 Press ◀ or ▶ to choose Light, Med or Dark.
 Press OK.
- 6 Press Stop/Exit.

Setting the Dim Timer for the backlight

You can set how long the LCD backlight stays on after you go back to the Ready screen.

- 1 Press Menu.
- Press ▲ or ▼ to choose
 General Setup.
 Press OK.
- 3 Press A or ▼ to choose LCD Settings. Press OK.
- 4 Press ▲ or ▼ to choose Dim Timer.
- 5 Press ◀ or ▶ to choose 10Secs, 20Secs, 30Secs or Off.
 Press OK.
- 6 Press Stop/Exit.

Setting the Wallpaper

You can change the wallpaper.

- 1 Press Menu.
- Press ▲ or ▼ to choose
 General Setup.
 Press OK.
- 3 Press A or ▼ to choose LCD Settings. Press OK.
- 4 Press A or V to choose Wallpaper.
 Press OK.
- Press ▲ or ▼ to choose your wallpaper from the four available designs. Press OK.
- 6 Press Stop/Exit.

Security features

TX Lock

TX Lock lets you prevent unauthorized access to the machine. You will not be able to continue to schedule Delayed Faxes or Polling jobs. However, any pre-scheduled Delayed Faxes will be sent even if you turn on TX Lock, so they will not be lost.

While TX Lock is On, the following operations are available:

- Receiving faxes
- Fax Forwarding (If Fax Forwarding was already On)
- Paging (If Paging was already On)
- Remote retrieval (If Fax Storage was already On)
- PC Fax Receive (If PC Fax Receive was already On)

While TX Lock is On, the following operations are NOT available:

- Sending faxes
- Copying
- PC printing
- Scanning
- PhotoCapture
- Operation from Control panel



If you forget the TX Lock password, please call Brother Customer Service.

Setting and changing the TX Lock password



If you have already set the password, you will not need to set it again.

Setting up the password

- Press Menu.
- Press ▲ or ▼ to choose Fax. Press **OK**.
- Press ▲ or ▼ to choose Miscellaneous. Press OK.
- Press ▲ or ▼ to choose TX Lock. Press OK.
- 5 Enter a 4-digit number for the password. Press OK.
- 6 When the LCD shows Verify:, re-enter the password. Press OK.
- Press Stop/Exit.

Changing the password

- 1 Press Menu.
- Press ▲ or ▼ to choose Fax. Press OK.
- 3 Press ▲ or ▼ to choose
 Miscellaneous.
 Press OK.
- Press A or ▼ to choose TX Lock. Press OK.
- 5 Press A or ▼ to choose Set Password.
 Press OK.
- 6 Enter a 4-digit number for the current password.
 Press **OK**.
- 7 Enter a 4-digit number for a new password. Press **OK**.
- 8 When the LCD shows Verify:, re-enter the password. Press **OK**.
- 9 Press Stop/Exit.

Turning TX Lock on/off

Turning TX Lock on

- 1 Press Menu.
- Press ▲ or ▼ to choose Fax. Press OK.
- Press ▲ or ▼ to choose
 Miscellaneous.
 Press OK.
- 4 Press ▲ or ▼ to choose TX Lock.
 Press OK.
- 5 Press A or V to choose Set TX Lock. Press OK.
- 6 Enter the registered 4-digit password. Press **OK**.

 The machine goes offline and the LCD shows TX Lock Mode.

Turning TX Lock off

- 1 Press Menu.
- 2 Enter the registered 4-digit password. Press **OK**. TX lock is automatically turned off.

Note

If you enter the wrong password, the LCD shows Wrong Password and stays offline. The machine will stay in TX Lock mode until the registered password is entered.

Section II


Fax

Sending a Fax	32
Receiving a Fax	40
Telephone Services and External devices	53
Dialing and storing numbers	64
Printing Reports	72
Polling	75

Sending a Fax

Entering Fax mode

 When the machine is idle, the time appears on the LCD. When you want to send a fax, or change fax send or receive settings, press the (Fax) key to illuminate it in blue.



The LCD shows:



Press ▲ or ▼ to scroll through the **Fax** key options. Some functions are only available when sending black & white faxes.

- Fax Resolution (See page 36.)
- Contrast (See page 36.)
- Speed Dial (See page 64.)
- Outgoing Call (See page 65.)
- Caller ID hist. (See page 66.)
- Broadcasting (See page 34.)
- Delayed Fax (See page 37.)
- Batch TX (See page 38.)
- Real Time TX (See page 37.)
- Polled TX (See page 76.)
- Polling RX (See page 75.)
- Overseas Mode (See page 37.)
- Glass ScanSize (See page 33.)
- Set New Default (See page 38.)
- Factory Reset (See page 39.)

When the option you want is highlighted, press **OK**.

Faxing from the ADF

- 1 Press (Fax).
- 2 Place the document face down in the ADF. (See *Using the ADF* on page 20.)
- 3 Enter the fax number using the dial pad, Speed Dial or Search. (For details, see *How to Dial* on page 64.)
- Press Black Start or Color Start.
 The machine starts scanning the document.



- To cancel, press Stop/Exit.
- If you send a black & white fax when the memory is full it will be sent in real time.

Faxing from the scanner glass

You can use the scanner glass to fax pages of a book one at a time. The document can be up to Letter or A4 size.

You cannot send color faxes with multiple pages.



Since you can only scan one page at a time, it is easier to use the ADF if you are sending a multiple page document.

- 1 Press 庙 (Fax).
- 2 Load your document face down on the scanner glass. (See *Using the scanner glass* on page 21.)
- 3 Enter the fax number using the dial pad, Speed Dial or Search.
- Press Black Start or Color Start.
 - If you press Black Start, the machine starts scanning the first page. Go to step 6.
 - If you press Color Start, the machine starts sending the document.
- Do one of the following:
 - To send a single page, press 2 to choose No (or press Black Start again).

The machine starts sending the document.

- To send more than one page, press 1 to choose Yes and go to step ⑥.
- 6 Place the next page on the scanner glass.

Press OK.

The machine starts scanning the page. (Repeat steps **6** and **6** for each additional page.)

Faxing A4 size documents from the scanner glass

When documents are A4 size, you need to set the correct Scan Size to A4. If you do not, the bottom portion of the faxes will be missing.

- 1 Press (Fax).
- Press ▲ or ▼ to choose
 Glass ScanSize.
- 3 Press ◀ or ▶ to choose A4 (or Letter). Press OK.



- You can save the setting you use most often by setting it as default. (See Setting your changes as the new default on page 38.)
- This setting is only available for sending documents from the scanner glass.

Color fax transmission

Your machine can send a color fax to machines that support this feature.

Color faxes cannot be stored in the memory. When you send a color fax, the machine will send it in real time (even if Real Time TX is set to Off).

Canceling a fax in progress

If you want to cancel a fax while the machine is scanning, dialing or sending, press **Stop/Exit**.

Broadcasting (Black & White only)

Broadcasting is when the same fax message is automatically sent to more than one fax number. You can include Groups, Speed Dial numbers and up to 50 manually dialed numbers in the same broadcast.

After the broadcast is finished, a Broadcast Report will be printed.

- 1 Press (Fax).
- 2 Load your document.
- 3 Press A or ▼ to choose Broadcasting. Press OK.
- 4 You can add numbers to the broadcast in the following ways:
 - Press A or V to choose Add Number and enter the number using a dial pad.

Press OK.

- Press A or V to choose Speed Dial and OK. Press A or V to choose Alphabetical Order Or Numerical Order and OK. Press A or V to select a number and OK.
- After you have entered all the fax numbers by repeating step ♠, press ♠ or ▼ to choose Complete. Press OK.

6 Press Black Start.



- If you have not used up any of the numbers for Groups, you can broadcast up to 250 different numbers.
- The available memory will vary depending on the types of jobs in the memory and the number of locations used for broadcasting. If you broadcast to the maximum numbers available, you will not be able to use dual access and delayed fax.
- If the memory is full, press Stop/Exit to stop the job. If more than one page has been scanned, press Black Start to send the portion that is in the memory.

Canceling a Broadcast in progress

- 1 Press Menu.
- Press ▲ or ▼ to choose Fax. Press OK.
- 3 Press ▲ or ▼ to choose

Remaining Jobs.

Press OK.

The LCD will show the fax number being dialed and the Broadcast job number.

4 Press **OK**.

The LCD will ask you the following message:

Cancel Job?
Yes → Press 1
No → Press 2

5 Press 1 to cancel the number being dialed.

The LCD will then show the Broadcast job number.

6 Press **OK**.

The LCD will ask you the following message:

Cancel Job?
Yes → Press 1
No → Press 2

- Press 1 to cancel the Broadcast.
- 8 Press Stop/Exit.

Additional sending operations

Sending faxes using multiple settings

When you send a fax you can choose any combination of these settings: resolution, contrast, scan size, overseas mode, delayed fax timer, polling transmission and real time transmission.

1 Press (Fax). The LCD shows:



- Press ▲ or ▼ to choose a setting you want to change.
- Press **d** or **>** to choose an option. Press **OK**.
- 4 Repeat steps 2 to 3 to change more settings.



- Most settings are temporary and the machine returns to its default settings after you send a fax.
- You can save some of the settings you use most often by setting them as default. These settings will stay until you change them again. (See Setting your changes as the new default on page 38.)

Contrast

If your document is very light or very dark, you may want to change the contrast. For most documents the factory setting Auto can be used. It automatically chooses the suitable contrast for your document.

Use Light when sending a light document. Use Dark when sending a dark document.

- 1 Press (Fax).
- Press ▲ or ▼ to choose Contrast.
- 3 Press ◀ or ▶ to choose Auto, Light or Dark.

Press OK.



Even if you choose Light or Dark, the machine will send the fax using the Auto setting in any of the following conditions:

- · When you send a color fax.
- When you choose Photo as the Fax Resolution.

Changing fax resolution

The quality of a fax can be improved by changing the fax resolution.

- 1 Press (Fax).
- Press ▲ or ▼ to choose
 Fax Resolution.
- 3 Press ◀ or ▶ to choose the resolution you want. Press OK.



You can choose four different resolution settings for black & white faxes and two for color.

Black & White		
Standard	Suitable for most typed documents.	
Fine	Good for small print and transmits a little slower than Standard resolution.	
S.Fine	Good for small print or artwork and transmits slower than Fine resolution.	
Photo	Use when the document has varying shades of gray or is a photograph. This has the slowest transmission.	

Color	
Standard	Suitable for most typed documents.
Fine	Use when the document is a photograph. The transmission time is slower than Standard resolution.

If you choose S. Fine or Photo and then use the Color Start key to send a fax, the machine will send the fax using the Fine setting.

Dual access (Black & White only)

You can dial a number and start scanning the fax into memory—even when the machine is sending from memory, receiving faxes or printing PC data. The LCD shows the new job number and available memory.

The number of pages you can scan into the memory will vary depending on the data that is printed on them.



If the Out of Memory message appears while scanning a document, press

Stop/Exit to cancel or Black Start to send the scanned pages.

Real time transmission

When you are sending a fax, the machine will scan the document into the memory before sending. Then, as soon as the telephone line is free, the machine will start dialing and sending.

If the memory is full and you are sending a black & white fax from the ADF, the machine will send the document in real time (even if Real Time TX is set to Off). Color faxes and faxes from the scanner glass cannot be sent until you clear some of the memory.

Sometimes, you may want to send an important document immediately, without waiting for memory transmission. You can turn on Real Time TX.

- 1 Press (Fax).
- Press ▲ or ▼ to choose Real Time TX.
- 3 Press ◀ or ▶ to choose on (or off).
 Press OK.



In real time transmission, the automatic redial feature does not work when using the scanner glass.

Overseas Mode

If you are having difficulty sending a fax overseas due to possible interference on the telephone line, we recommend that you turn on the Overseas mode. After you send a fax using this feature, the feature will turn itself off.

- 1 Press (Fax).
- 2 Load your document.
- 3 Press ▲ or ▼ to choose
 Overseas Mode.
- Press ◀ or ▶ to choose on (or off).
 Press OK.

Delayed Faxing (Black & White only)

During the day you can store up to 50 faxes in the memory to be sent within 24-hours. These faxes will be sent at the time of day you enter in step **5**.

- 1 Press (Fax).
- 2 Load your document.
- 3 Press A or V to choose Delayed Fax.
- 4 Press ◀ or ▶ to choose on.
 Press OK.
- 5 Enter the time you want the fax to be sent (in 24-hour format).
 (For example, enter 19:45 for 7:45 PM.)
 Press **OK**.



The number of pages you can scan into the memory depends on the amount of data that is printed on each page.

Delayed Batch Transmission (Black & White only)

Before sending the delayed faxes, your machine will help you economize by sorting all the faxes in the memory by destination and scheduled time. All delayed faxes that are scheduled to be sent at the same time to the same fax number will be sent as one fax to save transmission time.

- 1 Press (Fax).
- Press ▲ or ▼ to choose Batch TX.
- 3 Press ◀ or ▶ to choose on. Press OK.
- 4 Press Stop/Exit.

Checking and canceling waiting jobs

You can check which jobs are still waiting in the memory to be sent and cancel a job. (If there are no jobs, the LCD shows No Jobs Waiting.)

- 1 Press Menu.
- Press ▲ or ▼ to choose Fax. Press OK.
- Press ▲ or ▼ to choose
 Remaining Jobs.
 Press OK.
 Any waiting jobs appear on the LCD.
- Press ▲ or ▼ to scroll through the jobs and choose the job you want to cancel. Press OK.
- 5 Do one of the following:
 - To cancel, press 1 to choose Yes.

 If you want to cancel another job go to step 4.
 - To exit without canceling, press 2 to choose No.
- 6 When you have finished, press Stop/Exit.

Setting your changes as the new default

You can save the fax settings for

Fax Resolution, Contrast, Glass ScanSize and Real Time TX you use most often by setting them as default. These settings will stay until you change them again.

- 1 Press (Fax).
- Press ▲ or ▼ to choose your new setting you want to change, and then press ◀ or ▶ to choose the new option. Press OK.
 Repeat this step for each setting you want to change.
- After changing the last setting, press ▲ or ▼ to choose Set New Default. Press OK.
- Press 1 to choose Yes.
- 5 Press Stop/Exit.

Restoring all settings to the factory settings

You can restore all the settings you have changed to the factory settings. These settings will stay until you change them again.

- 1 Press (Fax).
- Press ▲ or ▼ to choose
 Factory Reset.
 Press OK.
- 3 Press 1 to choose Yes.
- 4 Press Stop/Exit.

Sending a fax manually

Manual transmission lets you hear the dialing, ringing and fax-receiving tones while sending a fax.

- 1 Press (Fax).
- 2 Load your document.
- To listen for a dial tone press **Hook** or pick up the handset of an external telephone.
- Dial the fax number.
- When you hear the fax tone, press Black Start or Color Start.

 If you are using the scanner glass press 1 to send a fax.
- 6 If you picked up the handset of an external telephone, replace it.

Sending a fax at the end of a conversation

At the end of a conversation you can send a fax to the other party before you both hang up.

- Ask the other party to wait for fax tones (beeps) and then to press the Start or Send key before hanging up.
- 2 Press (Fax).
- 3 Load your document.
- Press Black Start or Color Start.
 - If you are using the scanner glass, press 1 to send a fax.
- 5 Replace the handset of the external phone.

Out of Memory message

If you get an Out of Memory message while scanning the first page of a fax, press **Stop/Exit** to cancel the fax.

If you get an Out of Memory message while scanning a subsequent page, you will have the option to press **Black Start** or **Color Start** to send the pages scanned so far, or to press **Stop/Exit** to cancel the operation.



If you get an Out of Memory message while faxing and you do not want to delete your stored faxes to clear the memory, you can send the fax in real time. (See *Real time transmission* on page 37.)

Receive modes

Choose the correct Receive Mode

The correct Receive mode is determined by the external devices and telephone subscriber services (Voice Mail, Distinctive Ring, etc.) you have (or will be using) on the same line as the Brother machine

Will you be using a Distinctive Ring number for receiving faxes?

Brother uses the term "Distinctive Ring" but different telephone companies may have other names for this service such as Custom Ringing, RingMaster, Personalized Ring, Teen Ring, Ident-A-Ring, Ident-A-Call, Data Ident-A-Call, Smart Ring and SimpleBiz Fax & Alternate Number Ringing. See Distinctive Ring on page 55 for instruction on setting up your machine using this feature.

Will you be using Voice Mail on the same telephone line as your Brother machine?

If you have Voice Mail on the same telephone line as your Brother machine, there is a strong possibility that Voice Mail and the Brother machine will conflict with each other when receiving incoming calls. See Voice Mail on page 54 for instructions on setting up your machine using this service.

Will you be using a Telephone Answering Device on the same telephone line as your Brother

Your external telephone answering device (TAD) will automatically answer every call. Voice messages are stored on the external TAD and fax messages are printed. Choose External TAD as your receive mode. See External TAD on page 42.

Will you be using your Brother machine on a dedicated fax line?

Your machine automatically answers every call as a fax. Choose Fax Only as your receive mode. See Fax only on page 42.

Will you be using your Brother machine on the same line as your telephone?

Do you want to receive voice calls and faxes automatically?

The Fax/Tel receive mode is used when sharing the Brother machine and your telephone on the same line. Choose Fax/Tel as your receive mode. See Fax/Tel on page 42.

Important Note: You cannot receive voice messages on either Voice Mail or an answering machine with the Fax/Tel mode.

Do you expect to receive very few faxes?

Choose Manual as your receive mode. You control the telephone line and must answer every call yourself. See Manual on page 42.

To set the receive mode follow the instructions below:

- 1 Press Menu.
- Press A or ▼ to choose Initial Setup.
 Press OK.
- 3 Press ▲ or ▼ to choose Receive Mode.
- 4 Press ◀ or ▶ to choose Fax Only, Fax/Tel, External TAD or Manual. Press OK.
- 5 Press **Stop/Exit**.
 The LCD will display the current receive mode.

Using receive modes

Some receive modes answer automatically (Fax Only and Fax/Tel). You may want to change the ring delay before using these modes. (See *Ring Delay* on page 43.)

Fax only

Fax only mode will automatically answer every call as a fax call.

Fax/Tel

Fax/Tel mode helps you automatically manage incoming calls, by recognizing whether they are fax or voice calls and handling them in one of the following ways:

- Faxes will be automatically received.
- Voice calls will start the F/T ring to tell you to pick up the line. The F/T ring is a fast pseudo/double-ring made by your machine.

(Also see *F/T Ring Time (Fax/Tel mode only)* on page 43 and *Ring Delay* on page 43.)

Manual

Manual mode turns off all automatic answering functions unless you are using the Distinctive Ring feature.

To receive a fax in manual mode lift the handset of an external telephone or press **Hook**. When you hear fax tones (short repeating beeps), press **Black Start** or **Color Start** and choose Receive. You can also use the Easy Receive feature to receive faxes by lifting a handset on the same line as the machine.

(Also see Easy Receive on page 44.)

External TAD

External TAD mode lets an external answering device manage your incoming calls. Incoming calls will be handled in one of the following ways:

- Faxes will be automatically received.
- Voice callers can record a message on the external TAD.

(For more information see Connecting an external TAD (telephone answering device) on page 58.)

Receive mode settings

Ring Delay

The Ring Delay sets the number of times the machine rings before it answers in Fax Only or Fax/Tel mode. If you have external or extension telephones on the same line as the machine, keep the ring delay setting of 4 rings.

(See Using external and extension telephones on page 62 and Easy Receive on page 44.)

- 1 Press Menu.
- Press ▲ or ▼ to choose Fax. Press OK.
- 3 Press A or ▼ to choose
 Setup Receive.
 Press OK.
- Press ▲ or ▼ to choose Ring Delay.
- Press ◀ or ▶ to choose how many times the line rings before the machine answers.

Press **OK**. If you choose 0, the line will not ring at

6 Press Stop/Exit.

all.

F/T Ring Time (Fax/Tel mode only)

When somebody calls your machine, you and your caller will hear the normal telephone ring sound. The number of rings is set by the ring delay setting.

If the call is a fax, then your machine will receive it; however, if it is a voice call the machine will sound the F/T ring (a fast double-ring) for the time you have set in the F/T ring time setting. If you hear the F/T ring it means that you have a voice caller on the line.

Because the F/T ring is made by the machine, extension and external telephones will *not* ring; however, you can still answer the call on any telephone. (For more information see *Using remote codes* on page 63.)

- 1 Press Menu.
- Press **A** or **▼** to choose Fax. Press **OK**.
- 3 Press ▲ or ▼ to choose Setup Receive. Press OK.
- 4 Press A or V to choose F/T Ring Time.
- Press ◀ or ▶ to choose how long the machine will ring to alert you that you have a voice call (20, 30, 40 or 70 seconds). Press OK.
- 6 Press Stop/Exit.



Even if the caller hangs up during the pseudo/double-ringing, the machine will continue to ring for the set time.

Easy Receive

If Easy Receive is On:

The machine receives a fax call automatically, even if you answer the call. When you see Receiving on the LCD or when you hear "chirps" through the handset you are using, just replace the handset. Your machine will do the rest.

If Easy Receive is Off:

If you are at the machine and answer a call first by lifting a handset, then press **Black Start** or **Color Start**, and then press **2** to receive.

If you answered at an extension telephone press * **5 1**. (See *Using external and extension telephones* on page 62.)



- If this feature is set to On, but your machine does not connect a fax call when you lift an extension or external telephone handset, press the fax receive code * 5 1.
- If you send faxes from a computer on the same telephone line and the machine intercepts them, set Easy Receive to Off.
- 1 Press Menu.
- Press ▲ or ▼ to choose Fax. Press OK.
- 3 Press ▲ or ▼ to choose Setup Receive. Press OK.
- Press ▲ or ▼ to choose Easy Receive.
- Fress ◀ or ▶ to choose on (or off).
 Press OK.
- 6 Press Stop/Exit.

Memory Receive (Black & White only)

You can only use one Memory Receive operation at a time.

- Fax Forwarding
- Paging
- Fax Storage
- PC Fax Receive
- Off

You can change your selection at any time. If received faxes are still in the machine's memory when you change the memory receive operation, a LCD question will appear on the LCD. (See *Changing Memory Receive Operations* on page 48.)

Fax Forwarding

When you choose Fax Forward, your machine stores the received fax in the memory. The machine will then dial the fax number you have programmed and forward the fax message.

- 1 Press Menu.
- Press ▲ or ▼ to choose Fax. Press OK.
- 3 Press ▲ or ▼ to choose
 Setup Receive.
 Press OK.
- Press ▲ or ▼ to choose

 Memory Receive.

 Press OK.
- 5 Press A or V to choose Fax Forward.
 Press OK.
- 6 Enter the forwarding number (up to 20 digits).
 Press **OK**.

Press A or V to choose
Backup Print:On or
Backup Print:Off.
Press OK.



- If you choose Backup Print:On, the machine will also print the fax at your machine so you will have a copy. This is a safety feature in case there is a power failure before the fax is forwarded or a problem at the receiving machine.
- When you receive a color fax, your machine prints the color fax at your machine but does not send the fax to the fax forwarding number you programmed.
- 8 Press Stop/Exit.

Paging

When you choose Paging, your machine dials the pager number you have programmed, and then dials your PIN (Personal Identification Number). This activates your pager so you will know that you have a fax message in the memory.

If you have set Paging, a backup copy of the received fax will automatically be printed at the machine.

- 1 Press Menu.
- Press ▲ or ▼ to choose Fax.
 Press OK.
- 3 Press ▲ or ▼ to choose Setup Receive. Press OK.
- 4 Press ▲ or ▼ to choose
 Memory Receive.
 Press OK.
- 5 Press ▲ or ▼ to choose Paging. Press OK.

6 Enter your pager phone number followed by # # (up to 20 digits).

Press **OK**.

Do not include the area code if it is

Do not include the area code if it is the same as that of your machine. For example, press:

18005551234##.

- 7 Do one of the following:
 - If your pager needs a PIN, enter the PIN, press #, press Redial/Pause, and then enter your fax number followed by # #.

Press **OK**.

For example, press:

1 2 3 4 5 # Redial/Pause 1 8 0 0 5 5 5 6 7 8 9 # #

■ If you do not need a PIN, press:

Redial/Pause, and then enter your fax number followed by ##. Press **OK**.

For example, press:

Redial/Pause 18005556789##

8 Press Stop/Exit.



You cannot change a paging number or PIN remotely.

Fax Storage

If you choose Fax Storage, your machine stores the received fax in the memory. You will be able to retrieve fax messages from another location using the remote retrieval commands.

If you have set Fax Storage, a backup copy will automatically be printed at the machine.

- 1 Press Menu.
- Press ▲ or ▼ to choose Fax. Press OK.
- 3 Press A or ▼ to choose
 Setup Receive.
 Press OK.
- 4 Press ▲ or ▼ to choose
 Memory Receive.
 Press OK.
- 5 Press A or ▼ to choose Fax Storage. Press OK.
- 6 Press Stop/Exit.



Color faxes cannot be stored in the memory. When you receive a color fax your machine prints the color fax at your machine.

PC Fax Receive

If you turn on the PC-Fax Receive feature your machine will store received faxes in memory and send them to your PC automatically. You can then use your PC to view and store these faxes.

Even if you have turned off your PC (at night or on the weekend, for example), your machine will receive and store your faxes in its memory. The number of received faxes that are stored in the memory will appear at the bottom left side of the LCD.

When you start your PC and the PC-FAX Receiving software runs, your machine transfers your faxes to your PC automatically.

To transfer the received faxes to your PC you must have the PC-FAX Receiving software running on your PC. (For details, see *PC-FAX receiving* in the Software User's Guide on the CD-ROM.)

If you choose Backup Print:On the machine will also print the fax.

- 1 Press Menu.
- Press ▲ or ▼ to choose Fax. Press OK.
- 3 Press ▲ or ▼ to choose
 Setup Receive.
 Press OK.
- 4 Press ▲ or ▼ to choose
 Memory Receive.
 Press OK.
- Press ▲ or ▼ to choose PC Fax Receive. Press OK.
- 6 Press ▲ or ▼ to choose <USB> or the PC you want to receive faxes.

 Press OK.
- 7 Press A or V to choose
 Backup Print:On or
 Backup Print:Off.
 Press OK.

8 Press Stop/Exit.



- PC Fax Receive is not supported in the Mac OS[®].
- Before you can set up PC Fax Receive you must install the MFL-Pro Suite software on your PC. Make sure your PC is connected and turned on. (For details see PC-FAX Receiving in the Software User's Guide on the CD-ROM.)
- If you get an error message and the machine cannot print the faxes in memory, you can use this setting to transfer your faxes to your PC. (For details, see *Error* and Maintenance messages on page 135.)
- When you receive a color fax, your machine prints the color fax at your machine but does not send the fax to your PC.

Changing the destination PC

- 1 Press Menu.
- Press ▲ or ▼ to choose Fax. Press OK.
- 3 Press ▲ or ▼ to choose Setup Receive. Press OK.
- 4 Press ▲ or ▼ to choose
 Memory Receive.
 Press OK.
- 5 Press ▲ or ▼ to choose
 PC Fax Receive.
 Press OK.
- 6 Press A or ▼ to choose Change.
 Press OK.
- 7 Press ▲ or ▼ to choose <USB>, or the PC you want to receive faxes.
 Press OK.
- 8 Press A or V to choose
 Backup Print:On or
 Backup Print:Off.
 Press OK.
- 9 Press Stop/Exit.

Turning off Memory Receive Operations

- 1 Press Menu.
- Press ▲ or ▼ to choose Fax. Press **OK**.
- 3 Press ▲ or ▼ to choose
 Setup Receive.
 Press OK.
- 4 Press ▲ or ▼ to choose

 Memory Receive.

 Press OK.
- 5 Press ▲ or ▼ to choose off.
 Press OK.
- 6 Press Stop/Exit.



The LCD will give you more options if there are received faxes still in your machine's memory. (See *Changing Memory Receive Operations* on page 48.)

Changing Memory Receive Operations

If received faxes are left in your machine's memory when you change the Memory Receive Operations, the LCD will ask you one of the following questions:

- Erase All Fax?
 Yes → Press 1
 No → Press 2
 Print All Fax?
 Yes → Press 1
 - No → Press 2
 If you press 1, faxes in the memory will be erased or printed before the setting
 - If you press 2, faxes in the memory will not be erased or printed and the setting will be unchanged.

changes. If a backup copy has already

been printed it will not be printed again.

If received faxes are left in the machine's memory when you change to

PC Fax Receive from another option

[Fax Forward, Paging Or Fax Storage], press ▲ or ▼ to choose the PC.

The LCD will ask you the following question:

- Send Fax to PC?

 Yes → Press 1

 No → Press 2
 - If you press 1, faxes in the memory will be sent to your PC before the setting changes. You will be asked if you want to turn on Backup Print. (For detail, see PC Fax Receive on page 46.)
 - If you press 2, faxes in the memory will not be erased or transferred to your PC and the setting will be unchanged.

Additional receiving operations

Printing a reduced incoming fax

If you choose On, the machine automatically reduces each page of an incoming fax to fit on one page of Letter, Legal or A4 size paper. The machine calculates the reduction ratio by using the page size of the fax and your Paper Size setting. (See *Paper Size* on page 25.)

- 1 Press Menu.
- Press ▲ or ▼ to choose Fax. Press OK.
- 3 Press ▲ or ▼ to choose
 Setup Receive.
 Press OK.
- 4 Press ▲ or ▼ to choose
 Auto Reduction.
- Fress or beto choose on (or off).
 Press ok.
- 6 Press Stop/Exit.

Receiving a fax at the end of a conversation

At the end of a conversation you can ask the other party to fax you information before you both hang up.

- 1 Ask the other party to place the document in their machine and to press the Start or Send key.
- When you hear the other machine's CNG tones (slowly repeating beeps), press **Black Start** or **Color Start**.
- Press 2 to receive a fax.
- 4 Replace the handset of the external telephone.

Receiving faxes into memory when paper tray is empty

As soon as the paper tray becomes empty during fax reception, the LCD shows

No Paper Fed. Put some paper in the paper tray. (See Loading paper and other print media on page 9.)

The machine will carry on receiving the fax, with the remaining pages being stored in memory, if enough memory is available.

Further incoming faxes will also be stored into memory until the memory is full. When the memory is full the machine will stop automatically answering calls. To print the faxes, put fresh paper in the tray.

Printing a fax from the memory

If you have chosen paging or fax storage, you can still print a fax from the memory when you are at your machine. (See *Memory Receive* (*Black & White only*) on page 44.)

- 1 Press Menu.
- Press ▲ or ▼ to choose Fax. Press OK.
- 3 Press A or ▼ to choose Print Fax. Press OK.
- 4 Press Black Start.
- 5 Press Stop/Exit.



When you print a fax from the memory, the fax data will be erased.

Remote Retrieval

You can call your machine from any touch tone telephone or fax machine, then use the remote access code and remote commands to retrieve fax messages.

Setting a Remote Access Code

The remote access code lets you access the remote retrieval features when you are away from your machine. Before you can use the remote access and retrieval features, you have to set up your own code. The factory default code is inactive code (---*).

- 1 Press Menu.
- Press A or ▼ to choose Fax. Press OK.
- 3 Press ▲ or ▼ to choose
 Remote Access.
- Enter a three-digit code using numbers 0-9, *, or #. Press OK. (The preset '*' cannot be changed.)



Do not use the same code as your Fax Receive Code (* **5 1**) or Telephone Answer Code (**# 5 1**). (See *Using external* and extension telephones on page 62.)

5 Press Stop/Exit.



You can change your code at any time by entering a new one. If you want to make your code inactive, press **Clear/Back** in step 4 to restore the inactive setting (---*) and press **OK**.

Using your Remote Access Code

- 1 Dial your fax number from a touch tone telephone or another fax machine.
- When your machine answers, enter your remote access code (3 digits followed by *) at once.
- The machine signals if it has received messages:
 - 1 long beep Fax messages
 - No beeps No messages
- When the machine gives two short beeps, enter a command.
 The machine will hang up if you wait longer than 30 seconds to enter a command.
 The machine will beep three times if you enter an invalid command.
- 5 Press **9 0** to reset the machine when you have finished.
- 6 Hang up.



If your machine is set to Manual mode and you want to use the remote retrieval features, wait about 100 seconds after it starts ringing, and then enter the remote access code within 30 seconds.

Remote Fax commands

Follow the commands below to access features when you are away from the machine. When you call the machine and enter your remote access code (3 digits followed by \ast), the system will give two short beeps and you must enter a remote command.

Remote commands		Operation details	
95	Change the Fax Forwarding, Paging or Fax Storage settings		
	1 OFF	You can choose Off after you have retrieved or erased all your messages.	
	2 Fax Forwarding	One long beep means the change is accepted. If you hear	
	3 Paging	three short beeps, you cannot change because somethin has not been set up (for example, a Fax Forwarding or	
	4 Fax Forwarding number	Paging number has not been registered). You can register	
	6 Fax Storage	your Fax Forwarding number by entering 4. (See <i>Changii</i> your Fax Forwarding number on page 52.) Once you have registered the number, Fax Forwarding will work.	
96	Retrieve a fax		
	2 Retrieve all faxes	Enter the number of a remote fax machine to receive stored fax messages. (See <i>Retrieving fax messages</i> on page 52.)	
	3 Erase faxes from the memory	If you hear one long beep, fax messages have been erased from the memory.	
97	Check the receiving status		
	1 Fax	You can check whether your machine has received any faxes. If yes, you will hear one long beep. If no, you will hear three short beeps.	
98	Change the Receive Mode		
	1 External TAD	If you hear one long beep, your change has been accepted.	
	2 Fax/Tel		
	3 Fax Only		
90	Exit	Pressing 9 0 allows you to exit remote retrieval. Wait for the long beep, then replace the handset.	

Retrieving fax messages

You can call your machine from any touch tone telephone and have your fax messages sent to a machine. Before you use this feature, you have to turn on Fax Storage.

- Dial your fax number.
- When your machine answers, enter your remote access code (3 digits followed by *) at once. If you hear one long beep, you have messages.
- When you hear two short beeps, press **9 6 2**.
- 4 Wait for the long beep, enter the number (up to 20 digits) of the remote fax machine you want your fax messages sent to using the dial pad, then enter ##.



You cannot use * and # as dial numbers. However, press # if you want to create a pause.

Hang up after you hear your machine beep. Your machine will call the other fax machine, which will then print your fax messages.

Changing your Fax Forwarding number

You can change the default setting of your fax forwarding number from another touch tone telephone or fax machine.

- 1 Dial your fax number.
- When your machine answers, enter your remote access code (3 digits followed by *) at once. If you hear one long beep, you have messages.
- When you hear two short beeps, press **9 5 4**.
- Wait for the long beep, enter the new number (up to 20 digits) of the remote fax machine you want your fax messages forwarded to using the dial pad, then enter ##.



You cannot use * and # as dial numbers. However, press # if you want to create a pause.

- 5 Press **9 0** to reset the machine when you have finished.
- 6 Hang up after you hear your machine beep.

7

Telephone Services and External devices

Voice operations

Voice calls can be made either with an external telephone, by dialing manually, or by using Quick Dial numbers.

Tone or Pulse (Canada only)

If you have a Pulse dialing service, but need to send Tone signals (for example, for telephone banking), follow the instructions below:

- 1 Pick up the handset of an external telephone or press **Hook**.
- Press # on the machine's control panel. Any digits dialed after this will send tone signals.

When you hang up, the machine will return to the Pulse dialing service.

Fax/Tel mode when the power key is on

When the machine is in Fax/Tel mode, it will use the F/T Ring Time (pseudo/double-ringing) to alert you to pick up a voice call.

If you are at an extension telephone, you'll need to lift the handset during the F/T Ring Time and then press # 5 1 between the pseudo/double-rings. If no one is on the line, or if someone wants to send you a fax, send the call back to the machine by pressing * 5 1.

If you are at the machine, lift the external telephone's handset, and then press **Hook** to answer.

Fax/Tel mode when the power key is off

You can change the default setting of the **On/Off** key to Fax Receive: On so that you can receive faxes when the power key is off. (See *Power Off setting* on page 23.) Fax/Tel mode will work in the following way.

Fax/Tel mode does not work when the power key is off. The machine will not answer telephone or fax calls and will keep ringing. If you are at an external or extension telephone, lift the handset and talk. If you hear fax tones, hold the handset until Easy Receive activates your machine. If the other party says they want to send you a fax, activate the machine by pressing * 5 1.

Telephone services

Your machine supports the Caller ID and Distinctive Ring subscriber telephone services that some telephone companies offer.

Features like Voice Mail, Call Waiting, Call Waiting/Caller ID, RingMaster, answering services, alarm systems or other custom features on one telephone line may affect the way your machine works. If you have Voice Mail on your telephone line, please read the following carefully.

Voice Mail

If you have Voice Mail on the same telephone line as your Brother machine, Voice Mail and the Brother machine will conflict with each other when receiving incoming calls.

For example, if your Voice Mail is set to answer after 4 rings and your Brother machine is set to answer after 2 rings, then your Brother machine will answer first. This will prevent callers from being able to leave a message in your Voice Mail.

Similarly, if your Brother machine is set to answer after 4 rings and your Voice Mail is set to answer after 2 rings, then your Voice Mail will answer first. This will prevent your Brother machine from being able to receive an incoming fax, since Voice Mail cannot transfer the incoming fax back to the Brother machine.

To avoid conflicts between your Brother machine and your voice mail service, do one of the following:

Get the Distinctive Ring service from your telephone company. Distinctive Ring is a feature of your Brother machine that allows a person with one line to receive fax and voice calls through two different phone numbers on that one line. Brother uses the term 'Distinctive Ring,' but telephone companies market the service under a variety of names, such as Custom Ringing, Personalized Ring, Smart Ring, RingMaster, Ident-A-Ring, Ident-A-Call, Data Ident-A-Call, Teen Ring, and SimpleBiz Fax & Alternate Number Ringing. This service establishes a second telephone number on the same line as your existing telephone number, and each number has its own ring pattern. Typically, the original number rings with the standard ring pattern and is used for receiving voice calls, and the second number rings with a different ring pattern and is used for receiving faxes. (See Distinctive Ring on page 55.)

OR

Set your Brother machine's Receive Mode to "Manual." Manual Mode requires that you answer every incoming call if you want to be able to receive a fax. If the incoming call is a telephone call, then complete the call as you normally would. If you hear fax sending tones you must transfer the call to the Brother machine. (See *Using external and extension telephones* on page 62.) Unanswered fax and voice calls will go to your Voice Mail. (To set the machine in **MANUAL** Mode, see *Choose the correct Receive Mode* on page 40.)

Distinctive Ring

Distinctive Ring is a function of your Brother machine that allows a person with one line to receive fax and voice calls through two different phone numbers on that one line. Brother uses the term "Distinctive Ring," but telephone companies market the service under a variety of names, such as Smart Ring, Ring Master or Ident-a-Ring. This service establishes a second telephone number on the same line as your existing telephone number, and each number has its own ring pattern. Typically, the original number rings with the standard ring pattern and is used for receiving voice calls, and the second number rings with a different ring pattern and is used for receiving faxes.



- You must pay for your telephone company's Distinctive Ring service before you program the machine to work with it.
- Please call your telephone company for availability and rates.

What does your telephone company's 'Distinctive Ring' do?

Your telephone company's Distinctive Ring service allows you to have more than one number on the same telephone line. If you need more than one telephone number, it is cheaper than paying for an extra line. Each telephone number has its own distinctive ring pattern, so you will know which telephone number is ringing. This is one way you can have a separate telephone number for your machine.

What does Brother's 'Distinctive Ring' do?

The Brother machine has a Distinctive Ring feature that allows you to use your machine to take full advantage of the telephone company's Distinctive Ring service. The new telephone number on your line can just receive faxes.

Do you have Voice Mail?

If you have Voice Mail on the telephone line that you will install your new machine on, there is a strong possibility that Voice Mail and the machine will conflict with each other while receiving incoming calls. However, the Distinctive Ring feature allows you to use more than one number on your line, so both Voice Mail and the machine can work together without any problems. If each one has a separate telephone number, neither will interfere with the other's operations.

If you decide to get the Distinctive Ring service from the telephone company, you will need to follow the directions on next page to 'register' the new Distinctive Ring pattern they give you. This is so your machine can recognize its incoming calls.



You can change or cancel the Distinctive Ring pattern at any time. You can switch it off temporarily, and turn it back on later. When you get a new fax number, make sure you reset this feature.

Before you choose the ring pattern to register

You can only register one Distinctive Ring pattern with the machine. Some ring patterns cannot be registered. The ring patterns below are supported by your Brother machine. Register the one your telephone company gives you.

Ring Pattern	Rings	
1	long-long	5
2	short-long-short	5
3	short-short-long	5
4	very long (normal pattern)	7



Ring Pattern #1 is often called short-short and is the most commonly used. If the ring pattern you received is not on this chart, please call your telephone company and ask for one that is shown.

- The machine will only answer calls to its registered number.
- The first two rings are silent on the machine. This is because the fax must 'listen' to the ring pattern (to compare it to the pattern that was 'registered'). (Other telephones on the same line will ring.)
- If you program the machine properly, it will recognize the registered ring pattern of the 'fax number' within 2 ring patterns and then answer with a fax tone. When the 'voice number' is called, the machine will not answer.

Registering the Distinctive Ring pattern

Very Important!

After you have set the Distinctive Ring feature to On, your Distinctive Ring number will receive faxes automatically. The receive mode is automatically set to Manual and you cannot change it to another receive mode while Distinctive Ring is set to On. This ensures the Brother machine will only answer the Distinctive Ring number and not interfere when your main telephone number is called.

- 1 Press Menu.
- Press ▲ or ▼ to choose Fax.
 Press OK.
- 3 Press ▲ or ▼ to choose
 Miscellaneous.
 Press OK.
- Press ▲ or ▼ to choose Distinctive. Press OK.
- 5 Press A or V to choose Set. Press OK.
- 6 Press ▲ or ▼ to choose the stored ring pattern you want to use. Press OK.
 (You hear each pattern as you scroll through the four patterns. Make sure you choose the pattern that the telephone company gave you.)
- 7 Press Stop/Exit.
 Distinctive Ring is now set to on.

Turning off Distinctive Ring

- 1 Press Menu.
- Press ▲ or ▼ to choose Fax. Press OK.
- 3 Press ▲ or ▼ to choose
 Miscellaneous.
 Press OK.
- Press ▲ or ▼ to choose Distinctive. Press OK.
- 5 Press ▲ or ▼ to choose off.
 Press OK.
- 6 Press Stop/Exit.



If you turn off Distinctive Ring, the machine will stay in Manual receive mode. You will need to set the Receive Mode again. (See *Choose the correct Receive Mode* on page 40.)

Caller ID

The Caller ID feature lets you use the Caller ID subscriber service offered by many local telephone companies. Call your telephone company for details. This service shows the telephone number, or name if it is available, of your caller as the line rings.

After a few rings, the LCD shows the telephone number of your caller (and name, if available). Once you answer a call, the Caller ID information disappears from the LCD, but the call information stays stored in the Caller ID memory.

You can view the list or choose one of these numbers to fax to, add to Speed Dial or delete from the history. (See *Caller ID history* on page 66.)

- You can see the first 18 characters of the number (or name).
- The # Unavailable message means the call originated outside your Caller ID service area.
- The Private Call message means the caller has intentionally blocked transmission of information.

You can print a list of the Caller ID information received by your machine. (See *How to print a report* on page 74.)



- This feature may not be available in certain areas of the USA and Canada.
- The Caller ID service varies with different carriers. Call your local telephone company to find out about the kind of service available in your area.

Setting up your area code (USA only)

When returning calls from the caller ID history your machine will automatically dial "1" plus the area code for all calls. If your local dialing plan requires that the "1" not be used for calls within your area code enter your area code in this setting. With the area code setting, calls returned from the caller ID history to your area code will be dialed using 10 digits (area code + 7-digit number). If your dialing plan does not follow the standard 1 + area code + 7-digit number dialing system for calling outside your area code, you may experience problems returning calls automatically from the caller ID history. If this is not the procedure followed by your dialing plan, you will not be able to return calls automatically.

- 1 Press Menu.
- Press A or ▼ to choose Fax. Press OK.
- 3 Press A or ▼ to choose Miscellaneous. Press OK.
- 4 Press A or V to choose Caller ID. Press OK.
- Use the dial pad to enter your area code. Press **OK**.
- 6 Press Stop/Exit.

Connecting an external TAD (telephone answering device)

You may choose to connect an external answering device. However, when you have an **external** TAD on the same telephone line as the machine, the TAD answers all calls and the machine 'listens' for fax calling (CNG) tones. If it hears them, the machine takes over the call and receives the fax. If it does not hear CNG tones, the machine lets the TAD continue playing your outgoing message so your caller can leave you a voice message.

The TAD must answer within four rings (the recommended setting is two rings). The machine cannot hear CNG tones until the TAD has answered the call, and with four rings there are only 8 to 10 seconds of CNG tones left for the fax 'handshake'. Make sure you carefully follow the instructions in this guide for recording your outgoing message. We do not recommend using the toll saver feature on your external answering machine if it exceeds five rings.




- If you do not receive all your faxes, shorten the Ring Delay setting on your external TAD.
- If You Subscribe to your Telephone company's Distinctive Ring Service:

You may connect an external TAD to a separate wall jack only if you subscribe to your telephone company's Distinctive Ring service, have registered the distinctive ring pattern on your machine, and use that number as a fax number. The recommended setting is at least four rings on the external TAD when you have the telephone company's Distinctive Ring Service. You cannot use the Toll Saver setting.

 If You Do Not Subscribe to Distinctive Ring Service:

You must plug your TAD into the EXT. jack of your machine. If your TAD is plugged into a wall jack, both your machine and the TAD will try to control the telephone line. (See the illustration below.)

 Before you connect the external TAD, remove the protective cap (2) from the EXT. jack on the machine.

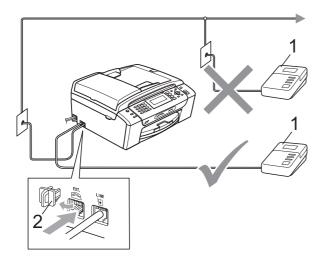


1 TAD

When the TAD answers a call, the LCD shows Telephone.

Connections

The external TAD must be plugged into the jack labeled EXT. Your machine cannot work properly if you plug the TAD into a wall jack (unless you are using Distinctive Ring).

- Plug the telephone line cord from the telephone wall jack into the jack labeled LINE.
- 2 Remove the protective cap (1) from the jack labeled EXT, and then plug the telephone line cord from the external TAD into the EXT. jack. (Make sure this cord is connected to the TAD at the TAD's telephone line jack, and not its handset jack.)

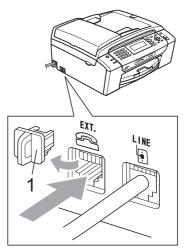

- 3 Set your external TAD to four rings or less. (The machine's Ring Delay setting does not apply.)
- 4 Record the outgoing message on your external TAD.
- 5 Set the TAD to answer calls.
- 6 Set the Receive Mode to

 External TAD. (See Choose the correct Receive Mode on page 40.)

Recording outgoing message (OGM) on an external TAD

Timing is important in recording this message. The message sets up the ways to handle both manual and automatic fax reception.

- 1 Record 5 seconds of silence at the beginning of your message. (This allows your machine time to listen for the fax CNG tones of automatic transmissions before they stop.)
- 2 Limit your speaking to 20 seconds.
- 3 End your 20-second message by giving your Fax Receive Code for people sending manual faxes. For example: 'After the beep, leave a message or send a fax by pressing * 5 1 and Start.'



We recommend beginning your OGM with an initial 5-second silence because the machine cannot hear fax tones over a resonant or loud voice. You may try omitting this pause, but if your machine has trouble receiving, then you must re-record the OGM to include it.

Special line considerations

Roll over telephone lines

A roll over telephone system is a group of two or more separate telephone lines that pass incoming calls to each other if they are busy. The calls are usually passed down or 'rolled over' to the next available telephone line in a preset order.

Your machine can work in a roll over system as long as it is the last number in the sequence, so the call cannot roll away. Do not put the machine on any of the other numbers; when the other lines are busy and a second fax call is received, the fax call will be sent to a line that does not have a fax machine. Your machine will work best on a dedicated line.

Two-line telephone system


A two-line telephone system is nothing more than two separate telephone numbers on the same wall outlet. The two telephone numbers can be on separate jacks (RJ11) or mixed into one jack (RJ14). Your machine must be plugged into an RJ11 jack. RJ11 and RJ14 jacks may be equal in size and appearance and both may contain four wires (black, red, green, yellow). To test the type of jack, plug in a two-line telephone and see if it can access both lines. If it can, you must separate the line for your machine. (See *Easy Receive* on page 44.)

Converting telephone wall outlets

There are three ways to convert to an RJ11 jack. The first two ways may require help from the telephone company. You can change the wall outlets from one RJ14 jack to two RJ11 jacks. Or you can have an RJ11 wall outlet installed and slave or jump one of the telephone numbers to it.

The third way is the easiest: Buy a triplex adapter. You can plug a triplex adapter into an RJ14 outlet. It separates the wires into two separate RJ11 jacks (Line 1, Line 2) and a third RJ14 jack (Lines 1 and 2). If your machine is on Line 1, plug the machine into L1 of the triplex adapter. If your machine is on Line 2, plug it into L2 of the triple adapter.

Triplex Adapter

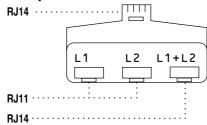


Installing machine, external two-line TAD and two-line telephone

When you are installing an external two-line telephone answering device (TAD) and a two-line telephone, your machine must be isolated on one line at both the wall jack and at the TAD. The most common connection is to put the machine on Line 2, which is explained in the following steps. The back of the two-line TAD must have two telephone jacks: one labeled L1 or L1/L2, and the other labeled L2. You will need at least three telephone line cords, the one that came with your machine and two for your external two-line TAD. You will need a fourth line cord if you add a two-line telephone.

- 1 Put the two-line TAD and the two-line telephone next to your machine.
- Plug one end of the telephone line cord for your machine into the L2 jack of the triplex adapter. Plug the other end into the LINE jack on the back of the machine.
- 3 Plug one end of the first telephone line cord for your TAD into the L1 jack of the triplex adapter. Plug the other end into the L1 or L1/L2 jack of the two-line TAD.

4 Plug one end of the second telephone line cord for your TAD into the L2 jack of the two-line TAD. Plug the other end into the EXT. jack on the left side of the machine.

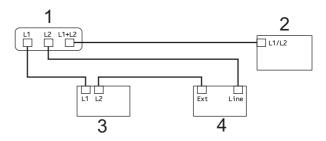

- 1 Triplex Adapter
- 2 Two Line Telephone
- 3 External Two Line TAD
- 4 Machine

You can keep two-line telephones on other wall outlets as always. There are two ways to add a two-line telephone to the machine's wall outlet. You can plug the telephone line cord from the two-line telephone into the L1+L2 jack of the triplex adapter. Or you can plug the two-line telephone into the TEL jack of the two-line TAD.

Multi-line connections (PBX)

We suggest you ask the company who installed your PBX to connect your machine. If you have a multi line system we suggest you ask the installer to connect the unit to the last line on the system. This prevents the machine being activated each time the system receives telephone calls. If all incoming calls will be answered by a switchboard operator we recommend that you set the Receive Mode to Manual.

We cannot guarantee that your machine will operate properly under all circumstances when connected to a PBX. Any difficulties with sending or receiving faxes should be reported first to the company who handles your PBX.


External and extension telephones

Connecting an external or extension telephone

You can connect a separate telephone or telephone answering device directly to your machine as shown in the diagram below.

Connect the telephone line cord to the jack labeled EXT.

Before you connect the external telephone, remove the protective cap (3) from the EXT. jack on the machine.

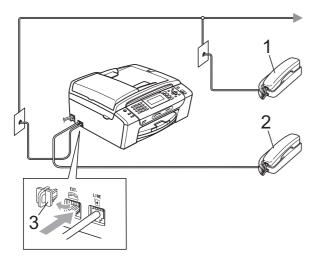

1 Extension telephone

2 External telephone

When you are using an external or extension telephone, the LCD shows Telephone.

Using external and extension telephones

Using extension telephones

If you answer a fax call at an extension telephone, you can make your machine receive the fax by pressing the Fax Receive Code * 5 1.

If the machine answers a voice call and pseudo/double-rings for you to take over, you can take the call at an extension telephone by pressing the Telephone Answer Code # 5 1. (See F/T Ring Time (Fax/Tel mode only) on page 43)

Using an external telephone (connected to the EXT. jack of the machine.)

If you answer a fax call at the external telephone, you can make the machine receive the fax by pressing **Black Start** and choose Receive.

If the machine answers a voice call and pseudo/double-rings for you to take over, you can take the call at the external telephone by pressing **Hook**.

If you answer a call and no one is on the line:

You should assume that you're receiving a manual fax.

Press * **5 1** and wait for the chirp or until the LCD shows Receiving, and then hang up.



You can also use the Easy Receive feature to make your machine automatically take the call. (See *Easy Receive* on page 44.)

Using a Non-Brother cordless external telephone

If your non-Brother cordless telephone is connected to the EXT. jack of the machine and you typically carry the cordless handset elsewhere, it is easier to answer calls during the Ring Delay.

If you let the machine answer first, you will have to go to the machine so you can press **Hook** to send the call to the cordless handset.

Using remote codes

Fax Receive code

If you answer a fax call on an extension telephone, you can tell your machine to receive it by dialing the Fax Receive Code * **5 1**. Wait for the chirping sounds then replace the handset. (See *Easy Receive* on page 44.) Your caller will have to press **Start** to send the fax.

If you answer a fax call at the external telephone, you can make the machine receive the fax by pressing **Black Start** and **choose** Receive.

Telephone Answer code

If you receive a voice call and the machine is in F/T mode, it will start to sound the F/T (double) ring after the initial ring delay. If you pick up the call on an extension telephone you can turn the F/T ring off by pressing # 5 1 (make sure you press this *between* the rings).

If the machine answers a voice call and pseudo/double-rings for you to take over, you can take the call at the external telephone by pressing **Hook**.

Changing the remote codes

The preset Fax Receive Code is * 5 1. The preset Telephone Answer Code is # 5 1. If you want to, you can replace them with your own codes.

- 1 Press Menu.
- Press ▲ or ▼ to choose Fax. Press **OK**.
- 3 Press ▲ or ▼ to choose Setup Receive. Press OK.
- 4 Press A or V to choose Remote Codes.
- 5 Press ◀ or ▶to choose on (or off). Press OK.
- 6 Enter the new Fax Receive Code. Press **OK**.
- Press ▲ or ▼ to choose Tel Answer: and enter the new Telephone Answer Code. Press OK.
- 8 Press Stop/Exit.




- If you are always disconnected when accessing your external TAD remotely, try changing the Fax Receive Code and Telephone Answer Code to another threedigit code (such as ### and 9 9 9).
- Remote Codes might not work with some telephone systems.

Dialing and storing numbers

How to Dial

Manual dialing

Press all of the digits of the fax or telephone number.

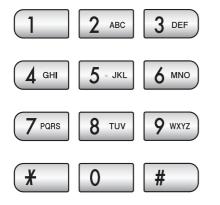

Speed Dialing

1 Press (Speed Dial).



Or, you can press (Fax) and then press A or ▼ to choose Speed Dial.

- Press ▲ or ▼ to choose Search.
 Press OK.
- 3 Do one of the following:
 - Press A or V to choose
 Alphabetical Order or
 Numerical Order.
 Press OK.
 - Press the two-digit Speed Dial number using the dial pad. (See Storing Speed Dial numbers on page 66.)

Press ▲ or ▼ to choose the number you want to dial.
Press OK.



If the LCD shows Not Registered when you enter or search a Speed Dial number, a number has not been stored at this location.

Search

You can search for names you have stored in the Speed Dial memory.

- 1 Press (Speed Dial).
 Or, you can press (Fax) and then press or ▼ to choose Speed Dial.
- 2 Press ▲ or ▼ to choose Search.
 Press OK.
- 3 Press ▲ or ▼ to choose
 Alphabetical Order or
 Numerical Order.
 Press OK.



- Press * to make the LCD font size larger.
- · Press # to make the LCD font size smaller.
- 4 If you chose Alphabetical Order in step ③, use the dial pad to enter the first letter of the name, and then press ▲ or ▼ to choose the name and number you want to call.

 Press OK.

Fax Redial

If you are sending a fax manually and the line is busy, press **Redial/Pause**, and then press **Black Start** or **Color Start** to try again. If you want to make a second call to a number you recently dialed, you can press **Redial/Pause** and choose one of the last 30 numbers from the Outgoing Call List.

Redial/Pause only works if you dialed from the control panel. *If you are sending a fax automatically* and the line is busy, the machine will automatically redial once after five minutes.

- 1 Press Redial/Pause.
- Press ▲ or ▼ to choose the number you want to redial.

 Press OK.
- Press A or ▼ to choose Send a fax. Press OK.
- Press Black Start or Color Start.



In Real Time Transmission the automatic redial feature does not work when using the scanner glass.

Outgoing Call

The last 30 numbers you sent a fax to will be stored in the outgoing call history. You can choose one of these numbers to fax to, add to Speed Dial or delete from the history.

- 1 Press Redial/Pause.
 You can also choose Outgoing Call
 by pressing (Fax).
- Press ▲ or ▼ to choose the number you want.
 Press OK.
- 3 Do one of the following:
 - To send a fax, press ▲ or ▼ to choose Send a fax.

Press **OK**.

Press Black Start or Color Start.

■ If you want to store the number,
 press A or ▼ to choose
Add to Speed Dial.

Press **OK**.

(See Storing Speed Dial numbers from Outgoing Calls on page 67.)

■ Press A or V to choose Delete.

Press OK.

Press 1 to confirm.

4 Press Stop/Exit.

Caller ID history

This feature requires the Caller ID subscriber service offered by many local telephone companies. (See Caller ID on page 57.)

The number, or name if available, from the last 30 faxes and telephone calls you received will be stored in the Caller ID history. You can view the list or choose one of these numbers to fax to, add to Speed Dial or delete from the history. When the thirty-first call comes in to the machine, it replaces information about the first call.

- 1 Press 🖼 (Fax).
- Press ▲ or ▼ to choose Caller ID hist. Press OK.
- 3 Press ▲ or ▼ to choose the number you want. Press **OK**.
- Do one of the following:
 - To send a fax, press A or V to choose Send a fax.

Press OK.

Press Black Start or Color Start.

If you want to store the number, press ▲ or ▼ to choose Add to Speed Dial.

Press OK. (See Storing Speed Dial numbers from Outgoing Calls on page 67.)

- Press A or V to choose Delete. Press OK. Press 1 to confirm.
- 5 Press Stop/Exit.



- (USA only) If you redial from the Caller ID history outside your area code, you must set up your AREA CODE in advance. (See Setting up your area code (USA only) on page 58.)
- You can print the Caller ID List. (See *How to print a report* on page 74.)

Storing numbers

You can set up your machine to do the following types of easy dialing: Speed Dial and Groups for broadcasting faxes. When you dial a Quick Dial number, the LCD shows the name, if you stored it, or the number.



If you lose electrical power, the Quick Dial numbers that are in the memory will not be lost.

Storing a pause

Press Redial/Pause to put a 3.5-second pause between numbers. If you are dialing overseas, you can press Redial/Pause as many times as needed to increase the length of the pause.

Storing Speed Dial numbers

You can store up to 100 2-digit Speed Dial locations with a name, and each name can have two numbers. When you dial you will only have to press a few keys (For example: $^{\upomega}$ (Speed Dial), Search, OK, the two-digit number, and Black Start or Color Start).

- 1 Press 🖺 (Speed Dial).
- Press ▲ or ▼ to choose Set Speed Dial. Press OK.
- Press ▲ or ▼ to choose the 2-digit Speed Dial location where you want to store the number. Press OK.

- 4 Do one of the following:
 - Enter the name (up to 16 characters) using the dial pad.

Press **OK**.

(To help you enter letters, see *Entering Text* on page 173.)

- To store the number without a name, press **OK**.
- Enter the fax or telephone number (up to 20 digits).
 Press **OK**.
- 6 Do one of the following:
 - Enter the second fax or telephone number (up to 20 digits).

Press OK.

- If you do not want to store a second number, press **OK**.
- Press A or ▼ to choose Complete. Press OK.
- 8 Do one of the following:
 - To store another Speed Dial number, go to step 3.
 - To finish the setting, press Stop/Exit.

Storing Speed Dial numbers from Outgoing Calls

You can also store Speed Dial numbers from the Outgoing Call history.

- Press Redial/Pause.
 You can also choose Outgoing Call
 by pressing (Fax).
- Press ▲ or ▼ to choose the name or number you want to store. Press OK.
- 3 Press A or V to choose
 Add to Speed Dial.
 Press OK.

- Press ▲ or ▼ to choose the 2-digit Speed Dial location you want to store the number in. Press **OK**.
- Do one of the following:
 - Enter the name (up to 16 characters) using the dial pad.

Press OK.

(To help you enter letters, see *Entering Text* on page 173.)

- To store the number without a name, press **OK**.
- 6 Press **OK** to confirm the fax or telephone number.
- 7 Do one of the following:
 - Enter the second fax or telephone number (up to 20 digits).

Press **OK**.

- If you do not want to store a second number, press **OK**.
- 8 Press A or ▼ to choose Complete.
 Press OK.
- 9 Press Stop/Exit.

Storing Speed Dial numbers from the Caller ID history

If you have the Caller ID subscriber service from your telephone company you can also store Speed Dial numbers from incoming calls in the Caller ID History. (See *Caller ID* on page 57.)

- 1 Press (Fax).
- Press ▲ or ▼ to choose
 Caller ID hist.
 Press OK.
- 3 Press ▲ or ▼ to choose the number you want to store. Press OK.

- 4 Press A or V to choose
 Add to Speed Dial.
 Press OK.
- 5 Press ▲ or ▼ to choose the 2-digit Speed Dial location you want to store the number in. Press OK.
- 6 Do one of the following:
 - If you want to store the displayed name, press **OK**.
 - Enter the name (up to 16 characters) using the dial pad.

Press **OK**.

(To help you enter letters, see *Entering Text* on page 173.)

- To store the number without a name, press **OK**.
- Press **OK** to confirm the fax or telephone number.
- 8 Do one of the following:
 - Enter the second fax or telephone number (up to 20 digits).

Press OK.

- If you do not want to store a second number, press **OK**.
- 9 Press A or ▼ to choose Complete. Press OK.
- 10 Press Stop/Exit.

Changing Speed Dial names or numbers

You can change or delete a Speed Dial number that has already been stored.

- 1 Press (Speed Dial).
- Press ▲ or ▼ to choose
 Set Speed Dial.
 Press OK.
- 3 Press ▲ or ▼ to choose the 2-digit Speed Dial location you want to change. Press **OK**.
- 4 Do one of the following:
 - Press ▲ or ▼ to choose Change.
 Press OK.
 - Press ▲ or ▼ to choose Delete. Press OK. Press 1 to confirm. Go to step ⑤.



How to change the stored name or number:

If you want to change a character, press ◀ or ▶ to position the cursor under the character you want to change, and then press Clear/Back. Re-enter the character.

6 If you want to change the first Fax/Tel number, press ▲ or ▼ to choose Fax/Tel:, then press ▶ and enter the new fax or telephone number using the dial pad (up to 20 digits).



For Speed Dial locations you can change Fax/Tell: and Fax/Tell:.

- 7 Do one of the following:
 - Enter the second new fax or telephone number (up to 20 digits).
 Press **OK**.
 - If you do not want to change the second number, press OK.
- 8 Press A or ▼ to choose Complete. Press OK.
- 9 Press Stop/Exit.

Setting up groups for broadcasting

Groups, which can be stored on a Speed Dial location, allow you to send the same fax message to many fax numbers by pressing only (Speed Dial), Search, OK, the two-digit location and Black Start. First, you'll need to store each fax number in a Speed-Dial location. Then you can include them as numbers in the Group. Each Group uses up a Speed Dial location. You can have up to six Groups, or you can assign up to 198 numbers in a large Group.

(See Storing Speed Dial numbers on page 66 and Broadcasting (Black & White only) on page 34.)

- Press (Speed Dial).
- Press A or ▼ to choose Setup Groups. Press OK.

- 3 Press ▲ or ▼ to choose GROUP1, GROUP2, GROUP3, GROUP4, GROUP5 or GROUP6 for the Group name where you will store the fax numbers.

 Press OK.
- Press ▲ or ▼ to choose the 2-digit Speed Dial location where you want to store the Group. Press OK.
- If you want to change the Group name, press ▲ or ▼ to choose Change Group Name and press OK. Then enter the new Group name and press OK.
- 6 Press ▲ or ▼ to choose Add Number.
 Press OK.
- 8 Do one of the following:
 - To add another number to the group, repeat steps 6 to 7.
 - If you are finished adding numbers to the group, press A or V to choose Complete.

Press OK.

- 9 Do one of the following:
 - To store another Group for broadcasting, repeat steps 3 to 8.
 - To finish storing Groups for broadcasting, press Stop/Exit.



You can print a list of all the Speed Dial numbers. Group numbers will be marked in the GROUP column. (See *Reports* on page 73.)

Changing a Group name

- 1 Press (Speed Dial).
- Press A or ▼ to choose Setup Groups. Press OK.
- Press ▲ or ▼ to choose the Group name you want to change. Press OK.
- 4 Press ▲ or ▼ to choose
 Change Group Name.
 Press OK.



How to change the stored name or number:

If you want to change a character, press ◀ or ▶ to position the cursor under the character you want to change, and then press **Clear/Back**. Re-enter the character.

- Enter the new name (up to 16 characters) using the dial pad. Press **OK**.
 (See *Entering Text* on page 173. For example, type NEW CLIENTS.)
- 6 Press ▲ or ▼ to choose Complete.
 Press OK.
- 7 Press Stop/Exit.

Deleting a Group

- 1 Press (Speed Dial).
- Press ▲ or ▼ to choose Setup Groups.
 Press OK.
- 3 Press ▲ or ▼ to choose the Group you want to delete.
 Press OK.
- Press ▲ or ▼ to choose Delete. Press OK. Press 1 to confirm.
- 5 Press Stop/Exit.

Deleting a number from a Group

- 1 Press (Speed Dial).
- Press A or ▼ to choose Setup Groups. Press OK.
- 3 Press ▲ or ▼ to choose the Group you want to change. Press OK.
- Press ▲ or ▼ to choose the number you want to delete.
 Press OK.
 Press 1 to confirm.
- Press ▲ or ▼ to choose Complete. Press OK.
- 6 Press Stop/Exit.

Dialing Access codes and credit card numbers

Sometimes you may want to choose from several long distance carriers when you make a call. Rates may vary depending on the time and destination. To take advantage of low rates, you can store the access codes of long-distance carriers and credit card numbers as Speed Dial numbers. You can store these long dialing sequences by dividing them and setting them up as separate Speed Dial numbers in any combination. You can even include manual dialing using the dial pad. (See *Storing Speed Dial numbers* on page 66.)

For example, you might have stored '555' on Speed Dial: 03 and '7000' on Speed Dial: 02. You can use them both to dial '555-7000' if you press the following keys:

- 1 Press (Speed Dial).
- Press ▲ or ▼ to choose Search.
 Press OK.
- 3 Enter **03**.
- Press ▲ or ▼ to choose Speed Dial. Press OK.



If you stored 2 numbers in one Speed Dial location, you will be asked which number you want to send to.

- Press ▲ or ▼ to choose Search. Press OK.
- 6 Enter **02**.



Press **Black Start** or **Color Start**. You will dial '555-7000'.

To temporarily change a number, you can substitute part of the number with manual dialing using the dial pad. For example, to change the number to 555-7001 you could press (Speed Dial), choose Search, press 03 and then press 7001 using the dial pad.



If you must wait for another dial tone or signal at any point in the dialing sequence, create a pause in the number by pressing **Redial/Pause**. Each key press adds a 3.5-second delay.

Printing Reports

Fax reports

You need to set up the Transmission Verification Report and Journal Period using the **Menu** keys.

Transmission Verification Report

You can use the Transmission Verification Report as proof that you sent a fax. This report lists the time and date of transmission and whether the transmission was successful (OK). If you choose On or On+Image, the report will print for every fax you send.

If you send a lot of faxes to the same place, you may need more than the job numbers to know which faxes you must send again. Choosing On+Image or Off+Image will print a section of the fax's first page on the report to help you remember.

When the Transmission Verification Report is set to Off or Off+Image, the Report will only print if there is a transmission error, and the fax was not sent.



If you choose On+Image, or Off+Image, the image will only appear on the Transmission Verification Report if Real Time Transmission is set to Off. (See *Real time transmission* on page 37.)

- 1 Press Menu.
- Press ▲ or ▼ to choose Fax. Press **OK**.
- 3 Press A or ▼ to choose
 Report Setting.
 Press OK.
- 4 Press ▲ or ▼ to choose Transmission.

- 5 Press ◀ or ▶ to choose On, On+Image,
 Off or Off+Image.
 Press OK.
- 6 Press Stop/Exit.

Fax Journal (activity report)

You can set the machine to print a journal at specific intervals (every 50 faxes, 6, 12 or 24 hours, 2 or 7 days). If you set the interval to Off, you can still print the report by following the steps in *How to print a report* on page 74. The factory setting is Every 50 Faxes.

- 1 Press Menu.
- Press ▲ or ▼ to choose Fax. Press OK.
- 3 Press ▲ or ▼ to choose
 Report Setting.
 Press OK.
- 4 Press ▲ or ▼ to choose
 Journal Period.
- 5 Press ◀ or ▶ to choose an interval. Press OK. (If you choose 7 days, the LCD will ask you to choose the first day for the 7-day countdown.)
 - 6, 12, 24 hours, 2 or 7 days

The machine will print the report at the chosen time and then erase all jobs from its memory. If the machine's memory becomes full with 200 jobs before the time you chose has passed, the machine will print the Journal early and then erase all jobs from the memory. If you want an extra report before it is due to print, you can print it without erasing the jobs from the memory.

■ Every 50 Faxes

The machine will print the Journal when the machine has stored 50 jobs.

6 Enter the time to start printing in 24-hour format.

Press OK.

(For example: enter 19:45 for 7:45 PM.)

Press Stop/Exit.

Reports

The following reports are available:

■ Transmission

Prints a Transmission Verification Report for your last transmission.

■ Help List

A help list showing how to program your machine.

■ Ouick Dial

Lists names and numbers stored in the Speed Dial memory, in alphabetical or numerical order.

■ Fax Journal

Lists information about the last incoming and outgoing faxes. (TX: Transmit.) (RX: Receive.)

User Settings
Lists your settings.

■ Network Config

Lists your Network settings.

■ Caller ID hist.

Lists the available Caller ID information about the last 30 received faxes and telephone calls.

How to print a report

- 1 Press Menu.
- Press ▲ or ▼ to choose
 Print Reports.
 Press OK.
- 3 Press ▲ or ▼ to choose the report you want. Press OK.
- 4 (Quick Dial only) Press ▲ or ▼ to choose Alphabetical Order or Numerical Order.

 Press OK.
- 5 Press Black Start.
- 6 Press Stop/Exit.

10 Polling

Polling overview

Polling lets you set up your machine so other people can receive faxes from you, but they pay for the call. It also lets you call somebody else's fax machine and receive a fax from it, so you pay for the call. The polling feature needs to be set up on both machines for this to work. Not all fax machines support polling.

Polling receive

Polling receive lets you call another fax machine to receive a fax.

Setup to receive polling

- 1 Press (Fax).
- Press ▲ or ▼ to choose Polling RX.
- 3 Press ◀ or ▶ to choose on (or off). Press OK.
- 4 Enter the fax number you are polling.
- 5 Press Black Start or Color Start. The LCD shows Dialing.

Sequential polling (Black & White only)

Sequential polling lets you request documents from several fax machines in one operation. Afterwards, a Sequential Polling Report will be printed.

- 1 Press (Fax).
- 2 Press **A** or **▼** to choose Polling RX.
- 3 Press ◀ or ▶ to choose on (or off). Press **OK**.
- Press ▲ or ▼ to choose Broadcasting. Press OK.

- Do one of the following:
 - Press A or V to choose Add Number and enter the number using a dial pad.

Press OK.

- Press A or ▼ to choose Speed Dial and OK. Press A or ▼ to choose Alphabetical Order Or Numerical Order and OK. Press A or ▼ to select a number and OK.
- 6 After you have entered all the fax numbers by repeating steps ⑤, press ▲ or ▼ to choose Complete. Press OK.
- Press Black Start.
 The machine polls each number or Group number in turn for a document.

Press **Stop/Exit** while the machine is dialing to cancel the polling process.

To cancel all sequential polling receive jobs, see *Checking and canceling waiting jobs* on page 38.

Polled transmit (Black & White only)

Polled transmit lets you set up your machine to wait with a document so another fax machine can call and retrieve it.

The document will be stored and can be retrieved by any other fax machine until you delete it from the memory. (See *Checking and canceling waiting jobs* on page 38.)

Set up for polled transmit

- 1 Press (Fax).
- 2 Load your document.
- 3 Press ▲ or ▼ to choose Polled TX.
- Press ◀ or ▶ to choose on (or off).
 Press OK.
- Press ▲ or ▼ to choose any settings you want to change. Press OK. After each setting is accepted, you can continue to change more settings.
- 6 Press Black Start.
- If you are using the scanner glass, the LCD will prompt you to choose one of the options.
 - Press 1 to send another page.Go to 8.
 - Press 2 or Black Start to send the document.
- 8 Place the next page on the scanner glass, press **OK**. Repeat **7** and **8** for each additional page.
 Your machine will automatically send the fax.

Section III



Copy

Making copies


78

Making copies


How to copy

Entering Copy mode

When you want to make a copy, press (Copy) to illuminate it in blue.

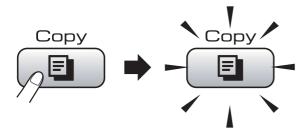

The LCD shows:

 

1 No. of Copies

You can enter the number of copies you want by using the dial pad.

Press ▲ or ▼ to scroll through the **Copy** key options.

- Quality (See page 79.)
- Enlarge/Reduce (See page 80.)
- Paper Type (See page 82.)
- Paper Size (See page 83.)
- Brightness (See page 82.)
- Contrast (See page 82.)
- Stack/Sort (See page 82.)
- Page Layout (See page 80.)
- Book Copy (See page 83.)
- Watermark Copy (See page 84.)
- Set New Default (See page 85.)
- Factory Reset (See page 86.)

When the option you want is highlighted, press **OK**.

Note

- The default setting is Fax mode. You can change the amount of time that the machine stays in Copy mode after the last copy operation. (See Mode Timer on page 24.)
- Book Copy and Watermark Copy features are supported by technology from Reallusion, Inc.

Making a single copy

- 1 Press (Copy).
- 2 Load your document. (See Loading documents on page 20.)
- 3 Press Black Start or Color Start.

Making multiple copies

You can make up to 99 copies.

- 1 Press (Copy).
- 2 Load your document. (See Loading documents on page 20.)
- 3 Enter the number of copies you want.
- 4 Press Black Start or Color Start.



To sort the copies, press ▲ or ▼ to choose Stack/Sort. (See Sorting copies using the ADF on page 82.)

Stop copying

To stop copying, press Stop/Exit.

11

Copy settings

You can change the copy settings temporarily for the next copy.

These settings are temporary, and the machine returns to its default settings 1 minute after copying, unless you have set the Mode Timer to 30 seconds or less. (See *Mode Timer* on page 24.)

If you have finished choosing settings, press **Black Start** or **Color Start**.

If you want to choose more settings, press \blacktriangle or \blacktriangledown .



You can save some of the settings that you use most often by setting them as default. These settings will stay until you change them again. (See Setting your changes as the new default on page 85.)

Changing copy quality

You can choose from a range of quality. The factory setting is Normal.

■ Fast

Fast copy speed and lowest amount of ink used. Use to save time printing documents to be proof-read, large documents or many copies.

■ Normal

Normal is the recommended mode for ordinary printouts. This produces good copy quality with good copy speed.

■ Best

Use best mode to copy precise images such as photographs. This provides the highest resolution and slowest speed.

- 1 Press (Copy).
- 2 Load your document.
- 3 Enter the number of copies you want.
- 4 Press ▲ or ▼ to choose Quality.
- 5 Press ✓ or ► to choose Fast, Normal or Best.

Press OK.

6 If you do not want to change additional settings, press Black Start or Color Start.

Enlarging or reducing the image copied

You can choose an enlargement or reduction ratio. If you choose Fit to Page, your machine will adjust the size automatically to the paper size you set.

- 1 Press (Copy).
- 2 Load your document.
- 3 Enter the number of copies you want.
- 4 Press ▲ or ▼ to choose Enlarge/Reduce.
- Press ◀ or ▶ to choose 100%, Enlarge,
 Reduce, Fit to Page Or
 Custom (25-400%).
- 6 Do one of the following:
 - If you chose Enlarge or Reduce, press OK and press or to choose the enlargement or reduction ratio you want. Press OK
 - If you chose Custom (25-400%), press **OK** and then enter an enlargement or reduction ratio from 25% to 400%.

Press **OK**

■ If you chose 100% or Fit to Page, go to step 7.

100%
198% 4"x6"→A4
186% 4"x6"→LTR
104% EXE→LTR
97% LTR→A4
93% A4→LTR
83% LGL→A4
78% LGL→LTR
46% LTR→4"x6"
Fit to Page
Custom(25-400%)

7 If you do not want to change additional settings, press Black Start or Color Start.



- Page Layout is not available with Enlarge/Reduce.
- Book Copy, Sort and Watermark Copy are not available with Fit to Page.
- Fit to Page does not work properly when the document on the scanner glass is skewed more than 3 degrees. Using the document guidelines on the left and top, place your document in the upper left hand corner, with the document face down on the scanner glass.
- Fit to Page is not available for a Legal size document.

Making N in 1 copies or a poster (Page Layout)

The N in 1 copy feature can help you save paper by letting you copy two or four pages onto one printed page.

You can also produce a poster. When you use the poster feature your machine divides your document into sections, then enlarges the sections so you can assemble them into a poster. If you want to print a poster, use the scanner glass.

Important

- Please make sure paper size is set to Letter or A4.
- You cannot use the Enlarge/Reduce setting with the N in 1 and Poster features.
- If you are producing multiple color copies, N in 1 copy is not available.
- (P) means Portrait and (L) means Landscape.
- You can only make one poster copy at a time.

Note

Watermark Copy, Book Copy, Sort and Enlarge/Reduce are not available with Page Layout.

- 1 Press (Copy).
- 2 Load your document.
- 3 Enter the number of copies you want.
- 4 Press ▲ or ▼ to choose Page Layout.
- 5 Press ◀ or ▶ to choose Off(1 in 1),
 2 in 1 (P), 2 in 1 (L),
 4 in 1 (P), 4 in 1 (L) or
 Poster(3x3).
 Press OK.
- If you do not want to change additional settings, press Black Start or Color Start to scan the page.

 If you placed the document in the ADF or are making a poster, the machine scans the pages and starts printing.

 
 If you are using the scanner glass, go to step 7.
- 7 After the machine scans the page, press **1** to scan the next page.
- 8 Place the next page on the scanner glass.
 Press **OK**.
 - Repeat steps 7 and 8 for each page of the layout.
- 9 After all the pages have been scanned, press 2 to finish.

Note


If photo paper has been chosen in the Paper Type setting for N in 1 copies, the machine will print the images as if Plain paper had been chosen.

Place the document face down in the direction shown below:

■ 2 in 1 (P)




■ 2 in 1 (L)

 

■ 4 in 1 (P)




 ■ 4 in 1 (L)



■ Poster (3 x 3)

You can make a poster size copy of a photograph.

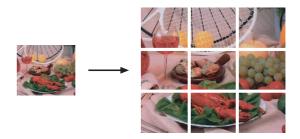

Sorting copies using the ADF

You can sort multiple copies. Pages will be stacked in the order 321, 321, 321, and so on.

- 1 Press (Copy).
- 2 Load your document.
- 3 Enter the number of copies you want.
- 4 Press A or ▼ to choose Stack/Sort.
- 5 Press ∢ or ▶ to choose Sort. Press OK.
- 6 If you do not want to change additional settings, press Black Start or Color Start.



Fit to Page, Page Layout and Book Copy are not available with Sort.

Adjusting Brightness and Contrast

Brightness

You can adjust the copy brightness to make copies darker or lighter.

- 1 Press (Copy).
- 2 Load your document.
- 3 Enter the number of copies you want.
- 4 Press ▲ or ▼ to choose Brightness.
- Press ◀ to make a darker copy or press
 to make a lighter copy.
 Press OK.
- 6 If you do not want to change additional settings, press Black Start or Color Start.

Contrast

You can adjust the copy contrast to help an image look sharper and more vivid.

- 1 Press (Copy).
- 2 Load your document.
- 3 Enter the number of copies you want.
- 4 Press ▲ or ▼ to choose Contrast.
- 5 Press ▶ to increase the contrast or press ◀ to decrease the contrast. Press OK.
- 6 If you do not want to change additional settings, press Black Start or Color Start.

Paper Options

Paper Type

If you are copying on special paper, set the machine for the type of paper you are using to get the best print quality.

- 1 Press 📳 (Copy).
- 2 Load your document.
- 3 Enter the number of copies you want.
- 4 Press ▲ or ▼ to choose Paper Type.
- 5 Press ◀ or ▶ to choose Plain Paper, Inkjet Paper, Brother BP71, Other Glossy Or Transparency. Press OK.
- 6 If you do not want to change additional settings, press Black Start or Color Start.

Paper Size

If copying on paper other than Letter size, you will need to change the paper size setting. You can copy only on Letter, Legal, A4, A5 or Photo 4 in. \times 6 in. (10 cm \times 15 cm) paper.

- 1 Press (Copy).
- 2 Load your document.
- 3 Enter the number of copies you want.
- 4 Press ▲ or ▼ to choose Paper Size.
- Press ◀ or ▶ to choose Letter, Legal, A4, A5 or 4"x6".

 Press OK.
- 6 If you do not want to change additional settings, press Black Start or Color Start.

Book Copy

Book copy corrects dark borders and skew when copying from the scanner glass. Your machine can correct the data automatically or you can make specific corrections.

- 1 Press (Copy).
- 2 Load your document.
- 3 Enter the number of copies you want.
- 4 Press ▲ or ▼ to choose Book Copy.
- 5 Do one of the following:
 - If you want to correct the data yourself, press or to choose On (Preview).

Press Black Start or Color Start and go to step **6**.

- If you want the machine to correct the data automatically, press ◀ or ▶ to choose on and go to step ?
- 6 Adjust the skewed data using # or *. Remove the shadows by using ▲ or ▼.
- 7 If you have finished making corrections, press Black Start or Color Start.



Book Copy is not available with
Page Layout, Sort, Fit to Page or
Watermark Copy.

Watermark Copy

You can place a logo or text into your document as a Watermark. You can select one of the template watermarks, data from your media cards or USB Flash memory drive, or scanned data.



Watermark Copy is not available with Fit to Page, Page Layout and Book Copy.

Using a template

- 1 Press (Copy).
- 2 Load your document.
- 3 Enter the number of copies you want.
- 4 Press ▲ or ▼ to choose
 Watermark Copy.
 Press OK.
- 5 Press **d** or **▶** to choose on.
- 6 Press ▲ or ▼ to choose
 Current Setting.
 Press OK.
- Press A or ▼ to choose Template. Press OK.
- 8 Change the settings from option on LCD if you need.
- If you do not want to change additional settings, press Black Start or Color Start.

Using media card or a USB Flash memory drive

- 1 Press (Copy).
- 2 Load your document.
- 3 Enter the number of copies you want.
- Press ▲ or ▼ to choose
 Watermark Copy.
 Press OK.
- 5 Press **∢** or **▶** to choose on.
- 6 Press ▲ or ▼ to choose
 Current Setting.
 Press OK.
- Insert a media card or USB Flash memory drive. Press ▲ or ▼ to choose Media.
- 8 Press **OK** and then press **◄** or **▶** to choose the data you want to use for the watermark.
- Press **OK** and change any additional settings from the options shown on the LCD.
- If you do not want to change additional settings, press Black Start or Color Start.

CAUTION

DO NOT take out the memory card or USB Flash memory drive while **Photo Capture** is blinking to avoid damaging the card, USB Flash memory drive or data stored on the card.

11

Using a scanned paper document as your watermark

- 1 Press (Copy).
- Enter the number of copies you want.
- 3 Press ▲ or ▼ to choose
 Watermark Copy.
 Press OK.
- 4 Press **◄** or **▶** to choose on.
- 5 Press ▲ or ▼ to choose
 Current Setting.
 Press OK.
- 6 Press ▲ or ▼ to choose Scan. Press OK, and place the page that you want to use for watermark on the scanner glass.
- Press Black Start or Color Start.
- 8 Take out the watermark document you scanned and load the document you want to copy.
- 9 Press ◀ or ▶ to change the Transparency of the watermark. Press OK.
- If you do not want to change any additional settings, press Black Start or Color Start.



You cannot enlarge or reduce the scanned watermark.

Setting your changes as the new default

You can save the copy settings for Quality, Enlarge/Reduce, Brightness, Contrast or Page Layout that you use most often by setting them the default settings. These settings will stay until you change them again.

- 1 Press (Copy).
- Press ▲ or ▼ to choose your new setting. Press OK. Repeat this step for each setting you want to change.
- 3 After changing the last setting, press ▲ or ▼ to choose Set New Default. Press OK.
- 4 Press 1 to choose Yes.
- 5 Press Stop/Exit.

Restoring all settings to the factory settings

You can restore all the settings you have changed to the factory settings. These settings will stay until you change them again.

- 1 Press (Copy).
- Press ▲ or ▼ to choose Factory Reset. Press OK.
- 3 Press 1 to choose Yes.
- 4 Press Stop/Exit.

'Out of Memory' message

If the Out of Memory message appears while scanning document, press **Stop/Exit** to cancel or **Black Start** or **Color Start** to copy the scanned pages.

You will need to clear some jobs from the memory before you can continue.

To free up extra memory, do the following:

- Turn off Memory Receive. (See *Turning* off Memory Receive Operations on page 48.)
- Print the faxes that are in the memory. (See *Printing a fax from the memory* on page 49.)

When you get an Out of Memory message, you may be able to make copies if you first print incoming faxes in the memory to restore the memory to 100%.

Section IV



Walk-up Photo Printing

PhotoCapture Center®: Printing photos from a memory card or USB Flash memory drive 88
Printing photos from a camera 107

PhotoCapture Center[®]: Printing photos from a memory card or USB Flash memory drive

PhotoCapture Center® Operations

Printing from a memory card or USB Flash memory drive without a PC

Even if your machine is not connected to your computer, you can print photos directly from digital camera media or a USB Flash memory drive. (See *Print Images* on page 91.)

Scanning to a memory card or USB Flash memory drive without a PC

You can scan documents and save them directly to a memory card or USB Flash memory drive. (See Scan to a memory card or USB Flash memory drive on page 103.)


Using PhotoCapture Center[®] from your computer

You can access a memory card or USB Flash memory drive that is inserted in the front of the machine from your computer.

(See PhotoCapture Center® for Windows® or Remote Setup & PhotoCapture Center® for Macintosh® in the Software User's Guide on the CD-ROM.)

Using a memory card or USB Flash memory drive

Your Brother machine has media drives (slots) for use with the following popular digital camera media: CompactFlash[®], Memory Stick[®], Memory Stick Pro™, SD, SDHC, xD-Picture Card™ and USB Flash memory drives.

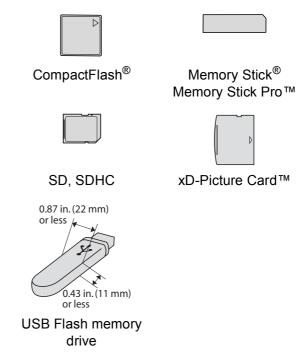

- miniSD[™] can be used with a miniSD[™] adapter.
- microSD can be used with a microSD adapter.
- Memory Stick Duo[™] can be used with a Memory Stick Duo[™] adapter.
- Memory Stick Pro Duo[™] can be used with a Memory Stick Pro Duo[™] adapter.
- Memory Stick Micro (M2) can be used with a Memory Stick Micro (M2) adapter.
- Adapters are not included with the machine. Contact a third party supplier for adapters.

19

The PhotoCapture Center® feature lets you print digital photos from your digital camera at high resolution to get photo quality printing.

Memory cards or a USB Flash memory drive folder structure

Your machine is designed to be compatible with modern digital camera image files, memory cards and USB Flash memory drive; however, please read the points below to avoid errors:

- The image file extension must be .JPG (Other image file extensions like .JPEG, .TIF, .GIF and so on will not be recognized).
- Walk-up PhotoCapture Center[®] printing must be performed separately from PhotoCapture Center[®] operations using the PC. (Simultaneous operation is not available.)
- IBM Microdrive[™] is not compatible with the machine.
- The machine can read up to 999 files (including the folder inside media) on a memory card or USB Flash memory drive.
- CompactFlash[®] Type II is not supported.
- This product supports xD-Picture CardTM Type M / Type M⁺ / Type H (Large Capacity).
- The DPOF file on the memory cards must be in a valid DPOF format. (See *DPOF* printing on page 98.)

Please be aware of the following:

- When printing the Print Index or Print Images, the PhotoCapture Center[®] will print all valid images, even if one or more images have been corrupted. Corrupted images will not be printed.
- (memory card users)


Your machine is designed to read memory cards that have been formatted by a digital camera.

When a digital camera formats a memory card it creates a special folder into which it copies image data. If you need to modify the image data stored on a memory card with your PC, we recommend that you do not modify the folder structure created by the digital camera. When saving new or modified image files to the memory card we also recommend you use the same folder your digital camera uses. If the data is not saved to the same folder, the machine may not be able to read the file or print the image.

(USB Flash memory drive users)
This machine supports USB Flash memory drives that have been formatted by Windows[®].

Getting started

Firmly put a memory card or USB Flash memory drive into the proper slot.

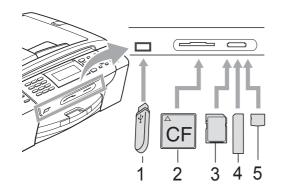


- 1 USB Flash memory drive
- 2 CompactFlash®
- 3 SD, SDHC
- 4 Memory Stick[®], Memory Stick Pro™
- 5 xD-Picture Card™



The USB direct interface supports only a USB Flash memory drive, a PictBridge compatible camera, or a digital camera that uses the USB mass storage standard. Any other USB devices are not supported.

Photo Capture key lights:

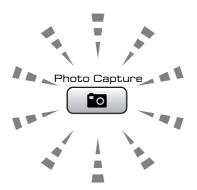

- Photo Capture light is on, the memory card or USB Flash memory drive is properly inserted.
- Photo Capture light is off, the memory card or USB Flash memory drive is not properly inserted.
- Photo Capture light is blinking, memory card or USB Flash memory drive is being read or written to.



DO NOT unplug the power cord or remove the media from the media drive (slot) or USB direct interface while the machine is reading or writing to the media (the **Photo Capture** key is blinking). **You will lose your data or damage the card.**

The machine can only read one memory card or USB Flash memory drive at a time so do not put more than one device in the machine at a time.


12

Entering PhotoCapture mode

After you insert the memory card or USB Flash memory drive, press the

(Photo Capture) key to illuminate it in blue and display the PhotoCapture options on the LCD.

The LCD shows:

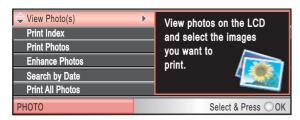

Press ▲ or ▼ to scroll through the PhotoCapture key options.

- View Photo(s) (See page 91.)
- Print Index (See page 92.)
- Print Photos (See page 92.)
- Enhance Photos (See page 93.)
- Search by Date (See page 96.)
- Print All Photos (See page 97.)
- Slide Show (See page 97.)
- Trimming (See page 98.)



If your digital camera supports DPOF printing, see *DPOF printing* on page 98.

When the option you want is highlighted, press **OK**.

Print Images

View Photo(s)

You can preview your photos on the LCD before you print them. If your photos are large files there may be a delay before each photo is displayed on the LCD.

1 Make sure you have put a memory card or USB Flash memory drive in the proper slot.

Press (Photo Capture).

- Press ▲ or ▼ to choose
 View Photo(s).
 Press OK.
- 3 Press ◀ or ▶ to choose your photo.



Instead of scrolling through your photos, you can use the dial pad to enter the number of the image from the index page. (See *Print Index (Thumbnails)* on page 92.)

- 4 Press ▲ or ▼ to increase or decrease the number of copies.
- 5 Repeat step 3 and step 4 until you have chosen all the photos.



Press **Clear/Back** to go back to the previous level.

- 6 After you have chosen all the photos, do one of the following:
 - Press **OK** and change the print settings. (See page 99.)
 - If you do not want to change any settings, press Color Start to print.

Print Index (Thumbnails)

The PhotoCapture Center® assigns numbers for images (such as No.1, No.2, No.3, and so on).

 


The PhotoCapture Center[®] does not recognize any other numbers or file names that your digital camera or computer has used to identify the pictures. You can print a thumbnail page. This will show all the pictures on the memory card or USB Flash memory drive.



Only file names that are 8 characters or less will be printed correctly on the index sheet.

- 1 Make sure you have put the memory card or USB Flash memory drive in the proper slot.
 - Press (Photo Capture).
- Press ▲ or ▼ to choose Print Index.
 Press OK.
- 3 Press ▲ or ▼ to choose
 Layout Format. Press ◀ or ▶ to
 choose 6 Images/Line or
 5 Images/Line.
 Press OK.



- 6 Images/Line
- 5 Images/Line

Print time for 5 Images/Line will be slower than 6 Images/Line, but the quality is better.

- 4 Do one of the following:
 - Press ▲ or ▼ to choose
 Paper Type, and press ◀ or ▶ to
 choose the type of paper you are
 using, Plain Paper,
 Inkjet Paper, Brother BP71 or
 Other Glossy.

Press OK.

- Press A or V to choose Paper Size and press d or b to choose the paper size you are using, Letter or A4.
 - Press **OK**.
- If you do not want to change the paper settings, go to 5.
- 5 Press Color Start to print.

Printing Photos

Before you can print an individual image, you have to know the image number.

- 1 Make sure you have put a memory card or USB Flash memory drive in the proper slot.
 - Press (Photo Capture).
- 2 Print the Index. (See *Print Index* (*Thumbnails*) on page 92.)
- 3 Press ▲ or ▼ to choose Print Photos. Press OK.
- 4 Enter the image number that you want to print from the Index page (Thumbnails). Press **OK**.

Repeat step 4 until you have entered all the image numbers that you want to print.



- You can enter multiple numbers at one time by using the * key for a comma or the # key for a hyphen. For example, Enter 1, *, 3, *, 6 to print images No.1, No.3 and No.6. Enter 1, #, 5 to print images No.1 to No.5.
- You can enter up to 12 characters (including commas) for the image numbers you want to print.
- 6 After you have chosen all the image numbers, press **OK** again.
- 7 Enter the number of copies you want using the dial pad.
- 8 Do one of the following:
 - Change the print settings. (See page 99.)
 - If you do not want to change any settings, press Color Start to print.

Enhance Photos

You can edit and add effects to your photos and view them on the LCD before printing.



- After adding each effect, you can enlarge the view of the image by pressing *. To go back to the original size, press * again.
- The Enhance Photos feature is supported by technology from Reallusion, Inc.



Auto Correct

Auto Correct is available for most photos. The machine decides the suitable effect for your photo.

1 Make sure you have put a memory card or USB Flash memory drive in the proper slot.

Press (Photo Capture).

- Press ▲ or ▼ to choose
 Enhance Photos.
 Press OK.
- 3 Press ◀ or ▶ to choose your photo. Press OK.
- Press A or ▼ to choose Auto Correct. Press OK.
- 5 Press **OK** and **▲** or **▼** to increase or decrease the number of copies.
- 6 Do one of the following.
 - Press **OK** and change the print settings. (See page 99.)
 - If you do not want to change any settings, press Color Start to print.



If Remove Red-Eye appears on the LCD, press # to attempt to remove red-eye from your photo.

Enhance Skin-Tone

Enhance Skin-Tone is best used for adjusting portrait photographs. It detects human skin color in your photos and adjusts the image.

1 Make sure you have put a memory card or USB Flash memory drive in the proper slot.

Press (Photo Capture).

Press ▲ or ▼ to choose
Enhance Photos.
Press OK.

- 3 Press ◀ or ▶ to choose your photo. Press **OK**.
- 4 Press A or ▼ to choose
 Enhance Skin-Tone.
 Press OK.



You can also adjust the effect level manually, by pressing **▲** or **▼**.

- 5 Press **OK** and **▲** or **▼** to increase or decrease the number of copies.
- 6 Do one of the following.
 - Press **OK** and change the print settings. (See page 99.)
 - If you do not want to change any settings, press Color Start to print.

Enhance Scenery

Enhance Scenery is best used for adjusting landscape photographs. It highlights green and blue areas in your photo, so that the landscape looks more sharp and vivid.

1 Make sure you have put the memory card or USB Flash memory drive in the proper slot.

Press (Photo Capture).

- 2 Press ▲ or ▼ to choose Enhance Photos. Press OK.
- 3 Press ◀ or ▶ to choose your photo. Press **OK**.
- 4 Press ▲ or ▼ to choose
 Enhance Scenery.
 Press OK.



You can also adjust the effect level manually, by pressing **▲** or **▼**.

- Press OK and ▲ or ▼ to increase or decrease the number of copies.
- 6 Do one of the following.
 - Press **OK** and change the print settings. (See page 99.)
 - If you do not want to change any settings, press **Color Start** to print.

Remove Red-Eye

The machine detects eyes in your photos and will attempt to remove red-eye from your photo.



There are some cases when red-eye may not be removed.

- When the face is too small in the image.
- When the face is turning too far up, down, left or right.
- 1 Make sure you have put a memory card or USB Flash memory drive in the proper slot.

Press (Photo Capture).

- Press ▲ or ▼ to choose Enhance Photos. Press OK.
- 3 Press ◀ or ▶ to choose your photo. Press OK.
- 4 Press ▲ or ▼ to choose

 Remove Red-Eye.

 Press OK.
 - When Remove Red-Eye is successful, the photo with the effect is shown. The adjusted part is shown in a red frame.
 - When Remove Red-Eye is unsuccessful,
 Unable to Detect. is shown.

Press **OK** to go back to the previous level.



Press # to try Remove Red-Eye once again.

- 6 Do one of the following.
 - Press **OK** and change the print settings. (See page 99.)
 - If you do not want to change any settings, press Color Start to print.

Monochrome

You can convert your photo to black & white.

1 Make sure you have put a memory card or USB Flash memory drive in the proper slot.

Press (Photo Capture).

- Press ▲ or ▼ to choose
 Enhance Photos.
 Press OK.
- 3 Press ◀ or ▶ to choose your photo. Press **OK**.
- 4 Press ▲ or ▼ to choose Monochrome. Press OK.
- 5 Press **OK** and **△** or **▼** to increase or decrease the number of copies.
- 6 Do one of the following.
 - Press **OK** and change the print settings. (See page 99.)
 - If you do not want to change any settings, press Color Start to print.

Sepia

You can convert the color of your photo to sepia.

1 Make sure you have put a memory card or USB Flash memory drive in the proper slot.

Press (Photo Capture).

- Press ▲ or ▼ to choose
 Enhance Photos.
 Press OK.
- 3 Press ◀ or ▶ to choose your photo. Press OK.
- 4 Press A or V to choose Sepia.
 Press OK.
- 5 Press **OK** and **▲** or **▼** to increase or decrease the number of copies.
- 6 Do one of the following.
 - Press **OK** and change the print settings. (See page 99.)
 - If you do not want to change any settings, press Color Start to print.

Search by Date

You can find your photos based on date.

1 Make sure you have put a memory card or USB Flash memory drive in the proper slot.

Press (Photo Capture).

- Press ▲ or ▼ to choose
 Search by Date.
 Press OK.
- Press ▲ or ▼ to choose the date that you want to search from.

 Press OK.
- Press ◀ or ▶ to choose your photo.



You can view photos with other dates by pressing ◀ or ▶ continuously. Press ◀ to view an older photo and ▶ to view a more recent photo.

- 5 Press ▲ or ▼ to increase or decrease the number of copies.
- 6 Repeat step 4 and step 5 until you have chosen all your photos.
- 7 After you have chosen all your photos, do one of the following:
 - Press **OK** and change the print settings. (See page 99.)
 - If you do not want to change any settings, press Color Start to print.

2

Print All Photos

You can print all the photos on your memory card or USB Flash memory drive.

1 Make sure you have put a memory card or USB Flash memory drive in the proper slot.

Press (Photo Capture).

- Press ▲ or ▼ to choose
 Print All Photos.
 Press OK.
- 3 Enter the number of copies you want using the dial pad.
- 4 Do one of the following:
 - Change the print settings. (See page 99.)
 - If you do not want to change any settings, press Color Start to print.

Slide show

You can view all your photos on the LCD using Slide Show. You can also choose a photo during the operation.

1 Make sure you have put a memory card or USB Flash memory drive in the proper slot.

Press (Photo Capture).

- 2 Press A or ▼ to choose Slide Show. Press OK.
- 3 Press Stop/Exit to finish Slide show.

Printing a photo during a Slide show

- 1 Press **OK** to stop at one image while Slide show is operating.
- Press ▲ or ▼ to increase or decrease the number of copies.
- 3 Do one of the following:
 - Press **OK** and change the print settings. (See page 99.)
 - If you do not want to change any settings, press Color Start to print.

Trimming

You can trim your photo and print a part of the image.



If your photo is very small or an irregular shape you may not be able to trim the photo. The LCD will display

Image Too Small. or
Image Too Long.

1 Make sure you have put a memory card or USB Flash memory drive in the proper slot.

Press (Photo Capture).

- Press ▲ or ▼ to choose Trimming. Press OK.
- 3 Press ◀ or ▶ to choose your photo. Press OK.
- 4 Adjust the red frame on your photo. The part inside of the red frame will be printed.
 - Press * or # to enlarge or reduce the frame size.
 - Press each arrow key to move the position of the frame.
 - Press **0** to rotate the frame.
 - Press **OK** when you have finished the frame setting.
- 5 Press ▲ or ▼ to increase or decrease the number of copies.
- 6 Do one of the following:
 - Press **OK** and change the print settings. (See page 99.)
 - If you do not want to change any settings, press Color Start to print.

DPOF printing

DPOF stands for Digital Print Order Format.

Major digital camera manufacturers (Canon Inc., Eastman Kodak Company, Fuji Photo Film Co. Ltd., Matsushita Electric Industrial Co. Ltd. and Sony Corporation) created this standard to make it easier to print images from a digital camera.

If your digital camera supports DPOF printing, you will be able to choose on the digital camera display the images and number of copies you want to print.

When the memory card (CompactFlash®, Memory Stick®, Memory Stick Pro™, SD, SDHC or xD-Picture Card™) with DPOF information is put into your machine, you can print the chosen image easily.

- 1 Make sure you have put a memory card in the proper slot.
 - Press (Photo Capture). The machine will ask you if you want to use DPOF setting.
- 2 Press 1 to choose Yes.
- 3 Do one of the following:
 - Change the print settings. (See page 99.)
 - If you do not want to change any settings, press **Color Start** to print.



An Invalid DPOF File error can occur if the print order that was created on the camera has been corrupted. Delete and recreate the print order using your camera to correct this problem. For instructions on how to delete or recreate the print order, refer to your camera manufacturer's support website or accompanying documentation.

PhotoCapture Center[®] print settings

You can change the print settings temporarily for the next printing.

These settings are temporary, and the machine returns to its default settings 3 minutes after printing, unless you have set the Mode Timer to 2 minutes or less. (See *Mode Timer* on page 24.)



You can save the print settings you use most often by setting them as default. (See Setting your changes as the new default on page 103.)



1 No. of prints

(For View Photo(s), Search by Date, Slide Show)

You can see the total number of photos that will be printed.

(For Print All Photos, Print Photos, Enhance Photos, Trimming)

You can see the number of copies of each photo that will be printed.

(For DPOF printing) This does not appear.

Menu Selections	Options 1	Options 2	Page
Print Quality	Normal/Photo	_	100
(Does not appear for DPOF printing)			
Paper Type	Plain Paper/Inkjet Paper/	_	100
	Brother BP71/Other Glossy		
Paper Size	4"x 6"/5"x 7"/Letter/A4	(When A4 or Letter is chosen)	100
		3"x 4"/3.5"x 5"/ 4"x 6"/ 5"x 7"/ 6"x 8"/Max. Size	
Brightness	■0 Dark Light	_	101
(Does not appear when Enhance Photos is chosen.)			
Contrast	4 +▶	_	101
(Does not appear when Enhance Photos is chosen.)			

Menu Selections	Options 1	Options 2	Page
True2Life	On/Off	-	101
(Does not appear when Enhance Photos is chosen.)	White Balance <pre> <pre> <pre> <pre> <pre> <pre> <pre> <pre> </pre> <pre> <p< td=""><td></td><td></td></p<></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre>		
Cropping	On/Off	_	102
Borderless	On/Off	_	102
Print Date (Does not appear when DPOF Print is chosen.)	On/Off	_	102
Set New Default	Yes/No	_	103
Factory Reset	Yes/No	_	103

Print Quality

- 1 Press ▲ or ▼ to choose Print Quality.
- Press ◀ or ▶ to choose Normal or Photo.

Press OK.

If you do not want to change additional settings, press **Color Start** to print.

Paper options

Paper Type


- Press A or ▼ to choose Paper Type.
- Press ◀ or ▶ to choose the paper type
 you are using, Plain Paper,
 Inkjet Paper, Brother BP71 or
 Other Glossy.
 Press OK.
- If you do not want to change additional settings, press **Color Start** to print.

Paper and print size

1 Press ▲ or ▼ to choose Paper Size.

- Press ◀ or ▶ to choose the paper size you are using, 4"x 6", 5"x 7",

 Letter or A4.
 - Press OK.
- If you chose Letter or A4, press ◀ or ► to choose the Print Size.
 Press OK.

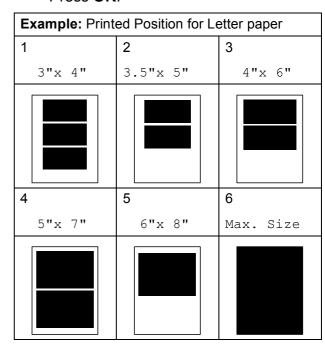

If you do not want to change additional settings, press **Color Start** to print.

Adjusting Brightness, Contrast and Color

Brightness

- 1 Press ▲ or ▼ to choose Brightness.
- Press ◀ to make a darker print or press
 ▶ to make a lighter print.
 Press OK.
- If you do not want to change additional settings, press **Color Start** to print.

Contrast

You can choose the contrast setting. More contrast will make an image look sharper and more vivid.

- 1 Press ▲ or ▼ to choose Contrast.
- If you do not want to change additional settings, press **Color Start** to print.

Color Enhancement (True2Life®)

You can turn on the color enhancement (True2Life®) feature to print more vivid images. Printing time will be slower.

- 1 Press ▲ or ▼ to choose True2Life.
 Press OK.
- 2 Do one of the following:
 - If you want to customize the

 White Balance, Sharpness or

 Color Density, press or to

 choose On, and then go to step ③.
 - If you do not want to customize, press ◀ or ▶ to choose Off.

Press **OK** and then go to step **6**.

- 3 Press ▲ or ▼ to choose
 White Balance, Sharpness Or
 Color Density.
- Press ◀ or ▶ to adjust the degree of the setting.
 Press OK.
- 5 Do one of the following:
 - If you want to customize another color enhancement, press ▲ or ▼ to choose another option.
 - If you want to change other settings, press A or V to choose Exit, and then press OK.
- 6 If you do not want to change additional settings, press **Color Start** to print.



White Balance

This setting adjusts the hue of the white areas of an image. Lighting, camera settings and other influences will effect the appearance of white. The white areas of a picture may be slightly pink, yellow or some other color. By using this setting, you can correct that effect and bring the white areas back to pure white.

Sharpness

This setting enhances the detail of an image, similar to adjusting the fine focus on a camera. If the image is not in true focus and you cannot see the fine details of the picture, then adjust the sharpness.

Color Density

This setting adjusts the total amount of color in the image. You can increase or decrease the amount of color in an image to improve a washed out or weak picture.

 
Cropping

If your photo is too long or wide to fit the available space on your chosen layout, part of the image will automatically be cropped.


The factory setting is On. If you want to print the whole image, turn this setting to Off. If you are also using the Borderless setting, turn Borderless to Off. (See Borderless printing on page 102.)

- 1 Press ▲ or ▼ to choose Cropping.
- Press ◀ or ▶ to choose Off (or On). Press OK.
- If you do not want to change additional settings, press **Color Start** to print.

Cropping: On



Cropping: Off

 

Borderless printing

This feature expands the printable area to the edges of the paper. Printing time will be slightly slower.

- 1 Press A or V to choose Borderless.
- Press ◀ or ▶ to choose Off (or On).
 Press OK.
- If you do not want to change additional settings, press **Color Start** to print.

Print Date

You can print the date if it is already in the data on your photo. The date will be printed on the lower right corner. If the data doesn't have the date information, you cannot use this function.

- 1 Press A or V to choose Print Date.
- Press ◀ or ▶ to choose on (or off).
 Press OK.
- If you do not want to change additional settings, press **Color Start** to print.



The DPOF setting on your camera must be turned off to use the Print Date feature.

12

Setting your changes as the new default

You can save the print settings you use most often by setting them as the default settings. These settings will stay until you change them again.

- Press ▲ or ▼ to choose your new setting. Press OK. Repeat this step for each setting you want to change.
- 2 After changing the last setting, press ▲ or ▼ to choose Set New Default. Press OK.
- 3 Press 1 to choose Yes.
- 4 Press Stop/Exit.

Restoring all settings to the factory settings

You can restore all the settings you have changed to the factory settings. These settings will stay until you change them again.

- Press ▲ or ▼ to choose
 Factory Reset.
 Press OK.
- 2 Press 1 to choose Yes.
- 3 Press Stop/Exit.

Scan to a memory card or USB Flash memory drive

Entering Scan mode

When you want to scan to a memory card or USB Flash memory drive, press



The LCD shows:



Press ▲ or ▼ to choose Scan to Media.

Press OK.

If you are not connected to your computer only the Scan to Media selection will appear on the LCD.

(See *Scanning* for Windows[®] or Macintosh[®] in the Software User's Guide on the CD-ROM for details about the other menu options.)

How to scan to a memory card or USB Flash memory drive

You can scan black & white and color documents into a memory card or USB Flash memory drive. Black & white documents will be stored in PDF (*.PDF) or TIFF (*.TIF) file formats. Color documents may be stored in PDF (*.PDF) or JPEG (*.JPG) file formats. The factory setting is Color 150 dpi and the default file format is PDF. File names default to the current date that you set using the control panel keys. (For details, see Quick Setup Guide.) For example, the fifth image scanned on July 1, 2009 would be named 07010905.PDF. You can change the color and quality.

Quality	Selectable File Format
Color 150 dpi	JPEG/PDF
Color 300 dpi	JPEG/PDF
Color 600 dpi	JPEG/PDF
B/W 200x100 dpi	TIFF/PDF
B/W 200 dpi	TIFF/PDF

Insert a CompactFlash[®], Memory Stick[®], Memory Stick Pro™, SD, SDHC, xD-Picture Card™ or USB Flash memory drive into your machine.

CAUTION

DO NOT take out the memory card or USB Flash memory drive while **Photo Capture** is blinking to avoid damaging the card or USB Flash memory drive or the data stored on them.

- 2 Load your document.
- 3 Press 😩 (Scan).
- Press ▲ or ▼ to choose
 Scan to Media.
 Press OK.
- 5 Do one of the following:
 - To change the quality, press \(\Delta \) or \(\Tilde{\text{to}} \) to choose Quality.

Go to step 6.

- Press Black Start or Color Start to start scanning without changing additional settings.
- 6 Press ◀ or ▶ to choose
 Color 150 dpi, Color 300 dpi,
 Color 600 dpi, B/W 200x100 dpi
 or B/W 200 dpi.
 Press OK.
- 7 Do one of the following:
 - To change the file type, go to step **3**.
 - Press Black Start or Color Start to start scanning without changing additional settings.
- 8 Press A or ▼ to choose File Type.
 Press ◀ or ▶ to choose JPEG, PDF or
 TIFF.
 Press OK.

Note

- If you chose color in the resolution setting, you cannot choose TIFF.
- If you chose black & white in the resolution setting, you cannot choose JPEG.
- Oo one of the following:
 - To change the file name, go to step **(1)**.
 - Press Black Start or Color Start to start scanning without changing additional settings.

The file name is set automatically however, you can set a name of your choice using the dial pad.

Press ▲ or ▼ to choose File Name.

Enter the new name. (See Entering Text on page 173.)

You can only change the first 6 digits.

Press OK.



Press **Clear/Back** to delete the current name.

11 Press Black Start or Color Start.

How to change the file name

You can change the file name.

- 1 Press (Scan).
- Press ▲ or ▼ to choose
 Scan to Media.
 Press OK.
- 3 Press ▲ or ▼ to choose File Name.
- 4 Enter the new name using the dial pad. You can only change the first 6 digits. (See *Entering Text* on page 173.)

How to set a new default

You can set your own default settings.

- 1 Press (Scan).
- Press ▲ or ▼ to choose
 Scan to Media.
 Press OK.
- 3 Press ▲ or ▼ to choose
 Set New Default. Press OK and 1 to choose Yes.
- 4 Press Stop/Exit.

How to reset to the factory settings

You can restore all the settings you have changed to the factory settings.

- 1 Press (Scan).
- 2 Press ▲ or ▼ to choose
 Scan to Media.
 Press OK.
- Press ▲ or ▼ to choose

 Factory Reset. Press OK and 1 to choose Yes.
- 4 Press Stop/Exit.

Understanding the Error Messages

Once you are familiar with the types of errors that can occur while you are using PhotoCapture Center[®], you can easily identify and troubleshoot any problems.

■ Hub is Unusable.

This message will appear if a Hub or USB Flash memory drive with a Hub has been put into the USB direct interface.

■ Media Error

This message will appear if you put in a memory card that is either bad or not formatted, or when there is a problem with the media drive. To clear this error, take out the memory card.

■ No File

This message will appear if you try to access a memory card or USB Flash memory drive in the drive (slot) that does not contain a .JPG file.

■ Out of Memory

This message will appear if you are working with images that are too large for the machine's memory. This message will also appear when a memory card or USB Flash memory drive you are using does not have enough space available for the scanned document.

■ Media is Full.

This message will appear if you are trying to save more than 999 files in a memory card or USB Flash memory drive.

■ Unusable Device

This message will appear if a USB device or USB Flash memory drive that is not supported has been connected to the USB direct interface. For more information, visit us at http://solutions.brother.com. This message will also appear if you connect a broken device to the USB direct interface.

13

Printing photos from a camera

Printing photos directly from a PictBridge camera



Your Brother machine supports the PictBridge standard, allowing you to connect to and print photos directly from any PictBridge compatible digital camera.

If your camera is using the USB Mass Storage standard, you can also print photos from a digital camera without PictBridge. (See *Printing photos directly from a digital* camera (without PictBridge) on page 109.)

PictBridge requirements

To avoid errors, remember the following points:

- The machine and the digital camera must be connected using a suitable USB cable.
- The image file extension must be .JPG (other image file extensions like .JPEG, .TIF, .GIF and so on will not be recognized).
- PhotoCapture Center® operations are not available when using the PictBridge feature.

Setting your digital camera

Make sure your camera is in PictBridge mode. The following PictBridge settings may be available from the LCD of your PictBridge compatible camera.

Depending on your camera some of these settings may not be available.

Camera Menu Selections	Options
Paper Size	Letter, A4, 4"×6", Printer
	Settings (Default setting) ²
Paper Type	Plain Paper, Glossy Paper, Inkjet Paper, Printer Settings
	(Default setting) ²
Layout	Borderless: On, Borderless: Off, Printer Settings
	(Default setting) ²
DPOF setting ¹	-
Print Quality	Normal, Fine,
	Printer Settings
	(Default setting) ²
Color	On, Off,
Enhancement	Printer Settings
	(Default setting) ²
Print Date	On, Off,
	Printer Settings
	(Default setting) ²

- See *DPOF printing* on page 108 for more details.
- If your camera is set to use the Printer Settings (Default setting), the machine will print your photo using the following settings.

Settings	Options
Paper Size	4"×6"
Paper Type	Glossy Paper
Layout	Borderless: On
Print Quality	Fine
Color Enhancement	Off
Print Date	Off

- When your camera does not have any menu selections, this setting is also used.
- The names and availability of each setting depends on the specification of your camera.


Please refer to the documentation supplied with your camera for more detailed information on changing PictBridge settings.

Printing Images



Remove any memory cards or USB Flash memory drive from the machine before connecting a digital camera.

1 Make sure that your camera is turned off. Connect your camera to the USB direct interface (1) on the machine using the USB cable.

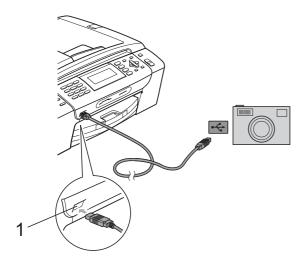

1 USB direct interface

- Turn on the camera.
 When the machine has recognized the camera, the LCD shows
 Camera Connected.
- Choose the photo you want to print following the instructions from your camera. When the machine starts printing a



To prevent damage to your machine, do not connect any device other than a digital camera or USB Flash memory drive to the USB direct interface.

photo, the LCD will show Printing.

DPOF printing

DPOF stands for Digital Print Order Format.

Major digital camera manufacturers (Canon Inc., Eastman Kodak Company, Fuji Photo Film Co. Ltd., Matsushita Electric Industrial Co. Ltd. and Sony Corporation) created this standard to make it easier to print images from a digital camera.

If your digital camera supports DPOF printing, you will be able to choose on the digital camera display the images and number of copies you want to print.



An Invalid DPOF File error can occur if the print order that was created on the camera has been corrupted. Delete and recreate the print order using your camera to correct this problem. For instructions on how to delete or recreate the print order, refer to your camera manufacturer's support website or accompanying documentation.

Printing photos directly from a digital camera (without PictBridge)

If your camera is using the USB Mass Storage standard, you can connect your camera in storage mode. This enables you to print photos from your camera.

(If you would like to print photos in PictBridge mode, see Printing photos directly from a PictBridge camera on page 107.)




The name, availability and operation differ among digital cameras. Please refer to the documentation supplied with your camera for detailed information, such as how to switch from PictBridge mode to USB mass storage mode.

Printing Images



Remove any memory cards or USB Flash memory drive from the machine before connecting a digital camera.

Make sure that your camera is turned off. Connect your camera to the USB direct interface (1) on the machine using the USB cable.

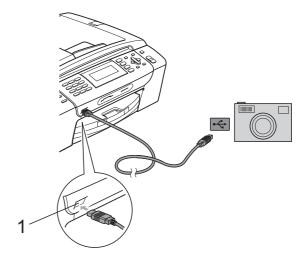

- **USB** direct interface
- Turn on the camera.
- Follow the steps in Print Images on page 91.



To prevent damage to your machine, do not connect any device other than a digital camera or USB Flash memory drive to the USB direct interface.

Understanding the Error Messages

Once you are familiar with the types of errors that can occur while you are printing from a camera, you can easily identify and troubleshoot any problems.

■ Out of Memory

This message will appear if you are working with images that are too large for the machine's memory.

■ Unusable Device

This message will appear if you connect a camera that is not using the USB Mass Storage standard. This message will also appear if you connect a broken device to the USB direct interface.

(For more detailed solutions see *Error and Maintenance messages* on page 135.)

Section V



Software

Software and Network features

112

Software and Network features

The CD-ROM includes the Software User's Guide and Network User's Guide for features available when connected to a computer (for example, printing and scanning). These guides have easy to use links that, when clicked, will take you directly to a particular section.

You can find information on these features:

- Printing
- Scanning
- ControlCenter3 (for Windows®)
- ControlCenter2 (for Macintosh®)
- Remote Setup
- Faxing from your computer
- PhotoCapture Center[®]
- Network Printing
- Network Scanning
- Wired and Wireless Network

How to read HTML User's Guide

This is a quick reference for using the HTML User's Guide.

(For Windows®)



If you have not installed the software, see Viewing Documentation on page 2.

- From the **Start** menu, point to **Brother**. MFC-XXXX (where XXXX is your model number) from the programs group, then click User's Guides in HTML format.
- Click SOFTWARE USER'S GUIDE (or NETWORK USER'S GUIDE) from the top menu.



Click the heading you would like to view from the list at the left of the window.



(For Macintosh®)

- Make sure your Macintosh® is turned on. Insert the Brother CD-ROM into your CD-ROM drive.
- Double-click the **Documentation** icon.
- Double-click your language folder, and then double-click the top.html file.
- Click SOFTWARE USER'S GUIDE (or **NETWORK USER'S GUIDE**) in the top menu, and then click the heading you would like to read from the list at the left of the window.



Section VI

Appendixes

Safety and Legal	114
Troubleshooting and Routine Maintenance	127
Menu and Features	155
Specifications	174
Glossary	189



Safety and Legal

Choosing a location

Put your machine on a flat, stable surface that is free of vibration and shocks, such as a desk. Put the machine near a telephone wall jack and a standard AC power outlet. Choose a location where the temperature remains between 50° F and 95° F (10° C and 35° C).



WARNING


DO NOT put the machine near heaters, air conditioners, refrigerators, medical equipment, chemicals or water.

DO NOT connect your machine to AC power outlets on the same circuit as large appliances or other equipment that might disrupt the power supply.

A

CAUTION

- Avoid placing your machine in a high-traffic area.
- Avoid placing your machine on a carpet.
- DO NOT expose the machine to direct sunlight, excessive heat, moisture, or dust.
- DO NOT connect your machine to AC power outlets controlled by wall switches or automatic timers.
- Disruption of power can wipe out information in the machine's memory.
- Avoid interference sources, such as speakers or the base units of non-Brother cordless telephones.

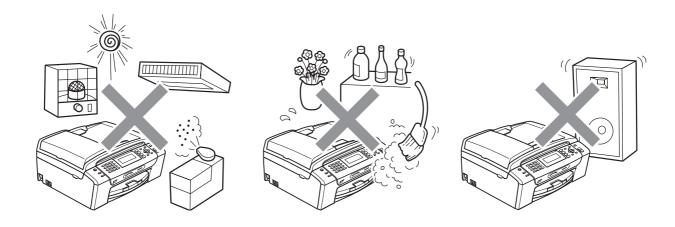

To use the machine safely

 
Please keep these instructions for later reference and read them before attempting any maintenance.



WARNING




There are high voltage electrodes inside the machine. Before you clean the inside of the machine, make sure you have unplugged the telephone line cord first and then the power cord from the AC power outlet. Doing this will prevent an electrical shock.





DO NOT handle the plug with wet hands. Doing this might cause an electrical shock.

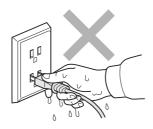




DO NOT pull on the middle of the AC power cord. Doing this might cause an electrical shock.

Δ




DO NOT put your hands on the edge of the machine under the document cover or the scanner cover. Doing this may cause injury.

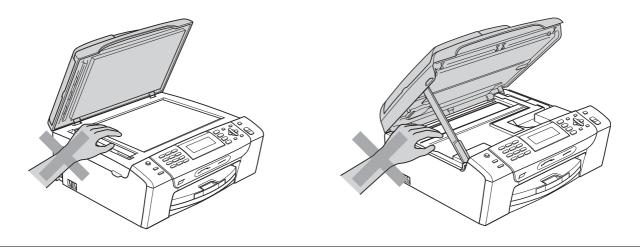





DO NOT put your hands on the edge of the paper tray under the paper tray cover. Doing this may cause injury.

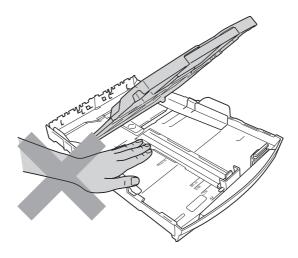


DO NOT touch the area shaded in the illustration. Doing this may cause injury.

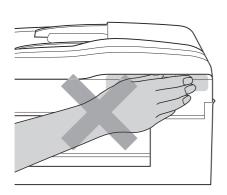


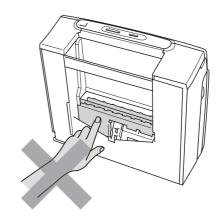



When moving the machine you must lift it from the base, by placing a hand at each side of the unit as shown in the illustration. DO NOT carry the machine by holding the scanner cover or the Jam Clear Cover.

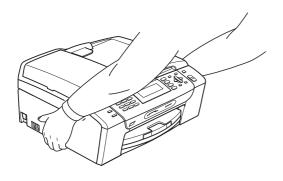

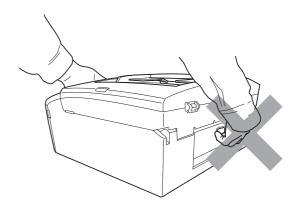



DO NOT use flammable substances, any type of spray, liquid or aerosol cleaners to clean the inside or outside of the machine. Doing this may cause a fire or electrical shock.





If the machine becomes hot, releases smoke, or generates any strong smells, immediately unplug the machine from the AC power outlet. Call Brother Customer Service. (See *Brother numbers* on page i.)



If metal objects, water or other liquids get inside the machine, immediately unplug the machine from the AC power outlet. Call Brother Customer Service. (See *Brother numbers* on page i.)



Use caution when installing or modifying telephone lines. Never touch telephone wires or terminals that are not insulated unless the telephone line has been unplugged at the wall jack. Never install telephone wiring during a lightning storm. Never install a telephone wall jack in a wet location.



This product must be installed near an AC power outlet that is easily accessible. In case of an emergency, you must unplug the power cord from the AC power outlet to shut off the power completely.



This product should be connected to an AC power source within the range indicated on the rating label. DO NOT connect it to a DC power source or inverter. If you are not sure, contact a qualified electrician.



Always make sure the plug is fully inserted.



DO NOT use the machine if the power cord is frayed or damaged, doing so may cause a fire.



To reduce the risk of shock or fire, use only a No. 26 AWG or larger telecommunication line cord.



When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to people, including the following:

- 1 DO NOT use this product near water, for example, near a bath tub, wash bowl, kitchen sink or washing machine, in a wet basement or near a swimming pool.
- 2 Avoid using this product during an electrical storm. There may be a remote risk of electric shock from lightning.
- 3 DO NOT use this product to report a gas leak in the vicinity of the leak.
- 4 DO NOT dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.
- 5 Use only the power cord provided with the machine.

0

CAUTION

Lightning and power surges can damage this product! We recommend that you use a quality surge protection device on the AC power line and on the telephone line, or unplug the cords during a lightning storm.

Important safety instructions

- 1 Read all of these instructions.
- 2 Save them for later reference.
- 3 Follow all warnings and instructions marked on the product.
- 4 DO NOT use this product near water.
- 5 DO NOT place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.
- 6 Slots and openings in the cabinet and the back or bottom are provided for ventilation. To ensure reliable operation of the product and to protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heater. This product should never be placed in a built-in installation unless proper ventilation is provided.
- 7 DO NOT allow anything to rest on the power cord. DO NOT place this product where people can walk on the cord.
- 8 If an extension cord is used with this product, make sure that the total ampere ratings of the products plugged into the extension cord do not exceed the extension cord ampere rating. Also, make sure that the total of all products plugged into the AC power outlet does not exceed 15 amperes (USA only).
- 9 DO NOT place anything in front of the machine that will block received faxes. DO NOT place anything in the path of received faxes.
- 10 Wait until pages have exited the machine before picking them up.
- 11 Never push objects of any kind into this product through cabinet slots, since they may touch dangerous voltage points or short out parts resulting in the risk of fire or electric shock. Never spill liquid of any kind on the product. DO NOT attempt to service this product yourself because opening or removing covers may expose you to dangerous voltage points and other risks and may void your warranty. Refer all servicing to a Brother Authorized Service Center. For the location of your nearest Brother Authorized Service Center, please call the following:

In USA: 1-877-BROTHER (1-877-276-8437)

In Canada: 1-877-BROTHER

- 12 Unplug this product from the AC power outlet and refer all servicing to Brother Authorized Service Personnel under the following conditions:
 - If liquid has been spilled into the product.
 - If the product has been exposed to rain or water.
 - If the product does not operate normally when the operating instructions are followed, adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
 - If the product has been dropped or the cabinet has been damaged.
 - If the product exhibits a distinct change in performance, indicating a need for service.

A

- 13 To protect your product against power surges, we recommend the use of a power protection device (Surge Protector).
- 14 To reduce the risk of fire, electric shock and injury to people, note the following:
 - DO NOT use this product near appliances that use water, a swimming pool, or in a wet basement.
 - DO NOT use the machine during an electrical storm (there is the remote possibility of an electrical shock) or to report a gas leak in the vicinity of the leak.
- 15 Caution To reduce the risk of fire, use only No.26 AWG or larger telecommunication line cord.

Standard telephone and FCC Notices (These notices are in effect on models sold and used in the United States only.)

When programming emergency numbers or making test calls to emergency numbers:

- Remain on the line and briefly explain to the dispatcher the reason for the call before hanging up.
- Perform these activities in the off-peak hours, such as early morning or late evening.

This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the backside of this equipment is a label that contains, among other information, a product identifier in the format US: AAAEQ##TXXXX. If requested, this number must be provided to the telephone company.

You may safely connect this equipment to the telephone line by means of a standard modular jack, USOC RJ11C.

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.

The REN is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company. For products approved after July 23, 2001, the REN for this product is part of the product identifier that has the format US:AAAEQ##TXXXX.The digits represented by ## are the REN without a decimal point (e.g., 06 is a REN of 0.6). For earlier products, the REN is separately shown on the label.

If this equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.

If trouble is experienced with this equipment, for repair or warranty information, please contact Brother Customer Service. (See *Brother numbers* on page i.) If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.

Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information.

If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, call your telephone company or a qualified installer.

If you are not able to solve a problem with your machine, call Brother Customer Service. (See *Brother numbers* on page i.)



WARNING

For protection against the risk of electrical shock, always disconnect all cables from the wall outlet before servicing, modifying or installing the equipment.

This equipment may not be used on coin service lines provided by the telephone company or connected to party lines.

Brother cannot accept any financial or other responsibilities that may be the result of your use of this information, including direct, special or consequential damages. There are no warranties extended or granted by this document.

This machine has been certified to comply with FCC standards, which are applied to the USA only.

Federal Communications Commission (FCC) Declaration of Conformity (USA only)

Responsible Brother International Corporation
Party: 100 Somerset Corporate Boulevard

Bridgewater, NJ 08807-0911 USA

TEL: (908) 704-1700

declares, that the products

Product Name: MFC-490CW

comply with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Call the dealer or an experienced radio/TV technician for help.
- This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

IMPORTANT

Changes or modifications not expressly approved by Brother Industries, Ltd. could void the user's authority to operate the equipment.

Industry Canada Compliance Statement (Canada only)

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Δ

LAN connection



CAUTION

DO NOT connect this product to a LAN connection that is subject to over-voltages.

International ENERGY STAR® Compliance Statement

The purpose of the International ENERGY STAR $^{\otimes}$ Program is to promote the development and popularization of energy-efficient office equipment.

As an ENERGY STAR[®] Partner, Brother Industries, Ltd. has determined that this product meets the ENERGY STAR[®] guidelines for energy efficiency.



Legal limitations for copying

Color reproductions of certain documents are illegal and may result in either criminal or civil liability. This memorandum is intended to be a guide rather than a complete listing of every possible prohibition. In case of doubt, we suggest that you check with counsel as to any particular questionable documents.

The following documents issued by the United States/Canadian Government or any of its Agencies may not be copied:

- Money
- Bonds or other certificates of indebtedness
- Certificates of Deposit
- Internal Revenue Stamps (canceled or uncanceled)
- Selective Service or draft papers
- Passports
- United States/Canadian Postage Stamps (canceled or uncanceled)
- Food Stamps
- Immigration Papers
- Checks or drafts drawn by Governmental agencies
- Identifying badges or insignias

Copyrighted works cannot be copied. Sections of a copyrighted work can be copied for 'fair use'. Multiple copies would indicate improper use.

Works of art should be considered the equivalent of copyrighted works.

Licenses and Certificates of Title to motor vehicles may not be copied under certain state/provincial laws.

A

Trademarks

The Brother logo is a registered trademark of Brother Industries, Ltd.

Brother is a registered trademark of Brother Industries, Ltd.

Multi-Function Link is a registered trademark of Brother International Corporation.

© 2008 Brother Industries, Ltd. All rights reserved.

Windows Vista is either a registered trademark or a trademark of Microsoft Corporation in the United States and other countries.

Microsoft, Windows and Windows Server are registered trademarks of Microsoft Corporation in the United States and/or other countries.

Macintosh and TrueType are registered trademarks of Apple Inc.

Nuance, the Nuance logo, PaperPort and ScanSoft are trademarks or registered trademarks of Nuance Communications, Inc. or its affiliates in the United States and/or other countries.

Presto! PageManager is a registered trademark of NewSoft Technology Corporation.

Microdrive is a trademark of International Business Machines Corporation.

CompactFlash is a registered trademark of SanDisk Corporation.

Memory Stick is a registered trademark of Sony Corporation.

SanDisk is a licensee of the SD and miniSD trademarks.

xD-Picture Card is a trademark of Fujifilm Co. Ltd., Toshiba Corporation and Olympus Optical Co. Ltd.

PictBridge is a trademark.

Memory Stick Pro, Memory Stick Pro Duo, Memory Stick Duo and MagicGate are trademarks of Sony Corporation.

BROADCOM, SecureEasySetup and the SecureEasySetup logo are trademarks or registered trademarks of Broadcom Corporation in the United States and/or other countries.

AOSS is a trademark of Buffalo Inc.

Wi-Fi, WPA and WPA2 are registered trademarks and Wi-Fi Protected Setup is a trademark of Wi-Fi Alliance.

FaceFilter Studio is a trademark of Reallusion, Inc.

Each company whose software title is mentioned in this manual has a Software License Agreement specific to its proprietary programs.

All other brand and product names mentioned in this User's Guide are registered trademarks of their respective companies.

B

Troubleshooting and Routine Maintenance

Troubleshooting

IMPORTANT

For technical help, you must call the country where you bought the machine. Calls must be made *from within* that country.

If you think there is a problem with your machine, check the chart below and follow the troubleshooting tips.

Most problems can be easily resolved by yourself. If you need additional help, the Brother Solutions Center offers the latest FAQs and troubleshooting tips. Visit us at http://solutions.brother.com.

If you are having difficulty with your machine

Printing

Difficulty	Suggestions
No printout	Check the interface cable or wireless connection on both the machine and your computer. (See the <i>Quick Setup Guide</i> .)
	Check that the machine is plugged in and that the On/Off key is on.
	One or more ink cartridges have reached the end of their life. (See <i>Replacing the ink cartridges</i> on page 145.)
	Check to see if the LCD is showing an error message. (See Error and Maintenance messages on page 135.)
	If the LCD says Cannot Print and Replace Ink, see Replacing the ink cartridges on page 145.
	Check that the correct printer driver has been installed and chosen.
	Make sure that the machine is online. Click Start and then Printers and Faxes . Right-click and choose Brother MFC-XXXX (where XXXX is your model name), and make sure that Use Printer Offline is unchecked.
	When you choose the Print Odd Pages and Print Even Pages settings, you may see a print error message on your computer, as the machine pauses during the printing process. The error message will disappear after the machine re-starts printing.

Printing (continued)

Difficulty	Suggestions
Poor print quality	Check the print quality. (See Checking the print quality on page 150.)
	Make sure that the Media Type setting in the printer driver or the Paper Type setting in the machine's menu matches the type of paper you are using. (See
	Printing for Windows [®] or Printing and Faxing for Macintosh [®] in the Software User's Guide on the CD-ROM and Paper Type on page 24.)
	Make sure that your ink cartridges are fresh. The following may cause ink to clog:
	The expiration date written on the cartridge package has passed. (Cartridges stay usable for up to two years if kept in their original packaging.)
	■ The ink cartridge was in your machine over six months.
	■ The ink cartridge may not have been stored properly before use.
	Make sure you are using Genuine Brother Innobella™ Ink.
	Try using the recommended types of paper. (See Acceptable paper and other print media on page 16.)
	The recommended environment for your machine is between 68° F to 91° F (20° C to 33° C).
White horizontal lines appear in text	Clean the print head. (See Cleaning the print head on page 150.)
or graphics.	Make sure you are using Genuine Brother Innobella™ Ink.
	Try using the recommended types of paper. (See Acceptable paper and other print media on page 16.)
The machine prints blank pages.	Clean the print head. (See Cleaning the print head on page 150.)
	Make sure you are using Genuine Brother Innobella™ Ink.
Characters and lines are stacked.	Check the printing alignment. (See <i>Checking the print alignment</i> on page 151.)
Printed text or images are skewed.	Make sure the paper is loaded properly in the paper tray and the paper side guides are adjusted correctly. (See <i>Loading paper and other print media</i> on page 9.)
	Make sure the Jam Clear Cover is closed properly.
Smudged stain at the top center of the printed page.	Make sure the paper is not too thick or curled. (See Acceptable paper and other print media on page 16.)
Smudged stain at the right or left corner of the printed page.	Make sure the paper is not curled when you print on the back side of the paper with the Print Odd Pages and Print Even Pages settings.
Printing appears dirty or ink seems to run.	Make sure you are using the recommended types of paper. (See <i>Acceptable paper and other print media</i> on page 16.) Don't handle the paper until the ink is dry.
	Make sure you are using Genuine Brother Innobella™ Ink.
	If you are using photo paper, make sure that you have set the correct paper type. If you are printing a photo from your PC, set the Media Type in the Basic tab of the printer driver.
Stains appear on the reverse side or at the bottom of the page.	Make sure the printer platen is not dirty with ink. (See Cleaning the machine printer platen on page 149.)
	Make sure you are using Genuine Brother Innobella™ Ink.
	Make sure you are using the paper support flap. (See Loading paper and other print media on page 9.)
The machine prints dense lines on the page.	Check Reverse Order in the Basic tab of the printer driver.

Printing (continued)

Difficulty	Suggestions
The printouts are wrinkled.	In the printer driver Advanced tab, click Color Settings, and uncheck
	Bi-Directional Printing for Windows® or Bi-Directional Printing for
	Macintosh [®] .
	Make sure you are using Genuine Brother Innobella™ Ink.
Cannot perform 'page layout' printing.	Check that the paper size setting in the application and in the printer driver are the same.
Print speed is too slow.	Try changing the printer driver setting. The highest resolution needs longer data processing, sending and printing time. Try the other quality settings in the printer driver Advanced tab. Also, click Color Settings , and make sure you uncheck
	Color Enhancement (True2Life [®]).
	Turn the borderless feature off. Borderless printing is slower than normal printing.
	(See <i>Printing</i> for Windows [®] or <i>Printing and Faxing</i> for Macintosh [®] in the Software User's Guide on the CD-ROM.)
True2Life [®] is not working properly.	If the image data is not full color in your application (such as 256 color), True2Life [®] will not work. Use at least 24 bit color data with the True2Life [®] feature.
Photo paper does not feed properly.	When you print on Brother Photo paper, load one extra sheet of the same photo paper in the paper tray. An extra sheet has been included in the paper package for this purpose. Clean the paper pick-up roller. (See Cleaning the paper pick-up roller on page 149.)
	Clean the paper pick-up roller. (See Cleaning the paper pick-up roller on page 149.)
Machine feeds multiple pages.	Make sure the paper is loaded properly in the paper tray. (See <i>Loading paper and other print media</i> on page 9.)
	Check that more than two types of paper are not loaded in the paper tray at any one time.
There is a paper jam.	See <i>Printer jam or paper jam</i> on page 142. Make sure the paper length guide is set to the paper size. Do not extend the paper tray when you load A5 or smaller size paper.
Printed pages are not stacked neatly.	Make sure you are using the paper support flap. (See Loading paper and other print media on page 9.)

Printing Received Faxes

Difficulty	Suggestions
Condensed print and white streaks across the page or the top and bottom of sentences are cut off.	You probably had a bad connection, with static or interference on the telephone line. Ask the other party to send the fax again.
Vertical black lines when receiving.	The sender's scanner may be dirty. Ask the sender to make a copy to see if the problem is with the sending machine. Try receiving from another fax machine.
Received color fax prints only in black & white.	Replace the color ink cartridges that have reached the end of their life, and then ask the other person to send the color fax again. (See Replacing the ink cartridges on page 145.)
Left and Right margins are cut off or a single page is printed on two pages.	Turn on Auto Reduction. (See <i>Printing a reduced incoming fax</i> on page 49.)

Telephone Line or Connections

Difficulty	Suggestions
Dialing does not work. (No dial tone)	Check that the machine is plugged in and that the On/Off key is on.
	Check all line cord connections. Make sure the telephone line cord is plugged into the telephone wall jack and the LINE jack of the machine.
	(Canada only) Change Tone/Pulse setting. (See the Quick Setup Guide.)
	Send a fax manually and wait to hear the fax receiving tones before you press Black Start or Color Start . (See <i>Sending a fax manually</i> on page 39.)
The machine does not answer when called.	Make sure the machine is in the correct receiving mode for your setup. (See <i>Choose the correct Receive Mode</i> on page 40.) Check for a dial tone. If possible, call your machine to hear it answer. If there is still no answer, check that the telephone line cord is plugged into the telephone wall jack and the LINE jack of the machine. If there is no ringing when you call your machine, ask your telephone company to check the line.

Receiving Faxes

Difficulty	Suggestions
Cannot receive a fax.	Check all line cord connections. Make sure the telephone line cord is plugged into the telephone wall jack and the LINE jack of the machine.
	Make sure the machine is in the correct receiving mode for your setup. (See <i>Receive mode settings</i> on page 43.)
	If you often have interference on the telephone line, try changing the menu setting of Compatibility to Basic (for VoIP). (See Telephone line interference on page 134.)

Sending Faxes

Difficulty	Suggestions
Cannot send a fax.	Check all line cord connections. Make sure the telephone line cord is plugged into the telephone wall jack and the LINE jack of the machine.
	Make sure that the Fax key is illuminated. (See Entering Fax mode on page 32.)
	Ask the other party to check that the receiving machine has paper.
	Print the Transmission Verification Report and check for an error. (See <i>Reports</i> on page 73.)
Transmission Verification Report says 'Result:NG'.	There is probably temporary noise or static on the line. Try sending the fax again. If you send a PC FAX message and get 'Result:NGERROR' on the Transmission Verification Report, your machine may be out of memory. To gain extra memory, you can turn off Memory Receive (see <i>Turning off Memory Receive Operations</i> on page 48), print fax messages in memory (see <i>Printing a fax from the memory</i> on page 49) or cancel a Delayed Fax or Polling Job (see <i>Checking and canceling waiting jobs</i> on page 38). If the problem continues, ask the telephone company to check your telephone line.
	If you often get transmission errors due to possible interference on the telephone line, try changing the menu setting of Compatibility to Basic (for VoIP). (See <i>Telephone line interference</i> on page 134.)

Sending Faxes (continued)

Difficulty	Suggestions
Poor fax send quality.	Try changing your resolution to Fine or S. Fine. Make a copy to check your machine's scanner operation. If the copy quality is not good, clean the scanner. (See Cleaning the scanner on page 148.)
Vertical black lines when sending.	Black vertical lines on faxes you send are typically caused by dirt or correction fluid on the glass strip. Clean the glass strip. (See Cleaning the scanner on page 148.)

Handling Incoming Calls

Difficulty	Suggestions
The machine 'Hears' a voice as a CNG Tone.	If Easy Receive is set to On, your machine is more sensitive to sounds. It may mistakenly interpret certain voices or music on the line as a fax machine calling and respond with fax receiving tones. Deactivate the machine by pressing Stop/Exit . Try avoiding this problem by turning Easy Receive to Off. (See <i>Easy Receive</i> on page 44.)
Sending a fax call to the machine.	If you answered on an extension telephone, press your Fax Receive Code (the factory setting is * 5 1). If you answer on an external telephone (connected to the EXT jack), press Start to receive the fax. When your machine answers, hang up.
Custom features on a single line.	If you have Call Waiting, Call Waiting/Caller ID, Voice Mail, an alarm system or other custom feature on a single telephone line with your machine, it may create a problem sending or receiving faxes.
	For example: If you subscribe to Call Waiting or some other custom service and its signal comes through the line while your machine is sending or receiving a fax, the signal can temporarily interrupt or disrupt the faxes. Brother's ECM feature should help overcome this problem. This condition is related to the telephone system industry and is common to all devices that send and receive information on a single, shared line with custom features. If avoiding a slight interruption is crucial to your business, a separate telephone line with no custom features is recommended.

Copying Difficulties

Difficulty	Suggestions
Cannot make a copy.	Make sure that the Copy key is illuminated. (See Entering Copy mode on page 78.)
Poor copy results when using the ADF.	Try using the scanner glass. (See <i>Using the scanner glass</i> on page 21.)
Vertical black lines or streaks appear in copies.	Vertical black lines or streaks on copies are typically caused by dirt or correction fluid on the scanner. Clean the glass strip and scanner glass and the white bar and white plastic above them. (See <i>Cleaning the scanner</i> on page 148.)
Fit to Page does not work properly.	Make sure the document is not skewed on the scanner glass.

Scanning Difficulties

Difficulty	Suggestions
TWAIN/WIA errors appear when starting to scan.	Make sure the Brother TWAIN/WIA driver is chosen as the primary source. In PaperPort [®] 11SE with OCR, click File , Scan and choose the Brother TWAIN/WIA driver.
Poor scanning results when using the ADF.	Try using the scanner glass. (See <i>Using the scanner glass</i> on page 21.)
OCR does not work.	Try increasing the scanner resolution.

Software Difficulties

Difficulty	Suggestions
Cannot install software or print.	Run the Repair MFL-Pro Suite program on the CD-ROM. This program will repair and reinstall the software.
'Device Busy'	Make sure the machine is not showing an error message on the LCD.
Cannot print images from FaceFilter Studio.	To use FaceFilter Studio, you must install the FaceFilter Studio application from the CD-ROM supplied with your machine. To install FaceFilter Studio see the <i>Quick Setup Guide</i> .
	Also, before you start FaceFilter Studio for the first time, you must make sure your Brother machine is turned On, and connected to your computer. This will allow you to access all the functions of FaceFilter Studio.

PhotoCapture Center® Difficulties

Difficulty	Suggestions
Removable Disk does not work	1 Have you installed the Windows® 2000 update? If not, do the following:
properly.	1) Unplug the USB cable.
	2) Install the Windows [®] 2000 update using one of the following methods.
	■ Install MFL-Pro Suite from the CD-ROM. (See the Quick Setup Guide.)
	■ Download the latest service pack from the Microsoft Web site.
	 Wait about 1 minute after you restart the PC, and then connect the USB cable.
	Take out the memory card or USB Flash memory drive and put it back in again.
	3 If you have tried 'Eject' from within Windows [®] , take out the memory card or USB Flash memory drive before you continue.
	4 If an error message appears when you try to eject the memory card or USB Flash memory drive, it means the card is being accessed. Wait a while and then try again.
	5 If all of the above do not work, turn off your PC and machine, and then turn them on again. (You will have to unplug the power cord of the machine to turn it off.)
Cannot access Removable Disk from Desktop icon.	Make sure that you have correctly inserted the memory card or USB Flash memory drive.
Part of my photo is missing when printed	Make sure that Borderless Printing and Cropping are turned off. (See <i>Borderless printing</i> on page 102, and <i>Cropping</i> on page 102.)

Network Difficulties

Difficulty	Suggestions
Cannot print over the Network.	Make sure that your machine is powered on and is online and in Ready mode. Print a Network Configuration list (see <i>Reports</i> on page 73.) and check the current Network settings printed in this list. Reconnect the LAN cable to the hub to verify that the cabling and network connections are good. If possible, try connecting the machine to a different port on your hub using a different cable. If the connections are good, the machine shows LAN Active for 2 seconds. (If you are using a wireless connection or are having Network problems, see the Network User's Guide for more information.)
The network scanning feature does not work.	(For Windows [®] users only) Firewall settings on your PC may be rejecting the necessary network connection. Follow the instructions below to configure the
The network PC-Fax Receive feature does not work.	Firewall. If you are using a personal Firewall software, see the User's Guide for your software or contact the software manufacturer.
	For Windows [®] XP SP2 and Windows Vista [®] users, see <i>Firewall settings</i> in the Software User's Guide on the CD-ROM.
	For Windows® XP SP1 user's, please visit the Brother Solutions Center (http://solutions.brother.com).
Your computer cannot find your	<windows® users=""></windows®>
machine.	Firewall settings on you PC may be rejecting the necessary network connection. For detail, see the instruction above.
	<macintosh<sup>® users></macintosh<sup>
	Re-select your machine in the Device Selector application located in Macintosh HD/Library/Printers/Brother/Utilities/DeviceSelector or from the model list in ControlCenter2.

Dial Tone

Setting the dial tone to Detection will shorten the dial detect pause.

- 1 Press Menu.
- Press ▲ or ▼ to choose
 Initial Setup.
 Press OK.
- 3 Press A or V to choose Dial Tone.
- Press ◀ or ▶ to choose Detection or No Detection. Press OK.
- 5 Press Stop/Exit.

Telephone line interference

If you are having problems sending or receiving a fax due to possible interference on the telephone line, we recommend that you adjust the Equalization for compatibility to reduce the modem speed for fax operations.

- 1 Press Menu.
- Press ▲ or ▼ to choose Fax. Press OK.
- Press ▲ or ▼ to choose
 Miscellaneous.
 Press OK.
- 4 Press ▲ or ▼ to choose Compatibility.
- 5 Press ◀ or ▶ to choose High, Normal or Basic (for VoIP).
 - Basic (for VoIP) reduces the modem speed to 9600 bps. Unless interference is a recurring problem on your telephone line, you may prefer to use it only when needed.
 - Normal sets the modem speed at 14400 bps. (factory setting)
 - High increases the modem speed to 33600 bps.

Press OK.

6 Press Stop/Exit.



When you change the compatibility to ${\tt Basic(for\ VoIP)}$, the ECM feature is only available for color fax sending.

Error and Maintenance messages

As with any sophisticated office product, errors may occur. If this happens, your machine identifies the error and shows an error message. The most common error and maintenance messages are shown below.

You can correct most errors and routine maintenance messages by yourself. If you need more help, the Brother Solutions Center offers the latest FAQs and troubleshooting tips. Visit us at http://solutions.brother.com.

Error Message	Cause	Action
B&W Print Only	One or more of the color ink cartridges have reached the end of their life.	Replace the ink cartridges. (See Replacing the ink cartridges on page 145.)
	While this message appears on the LCD, each operation works in the following way:	
	■ Printing	
	If you click Grayscale in the Advanced tab of the printer driver you can use the machine as a black & white printer for approximately four weeks depending on the number of pages you print.	
	■ Copying	
	If the paper type is set to Plain Paper or Inkjet Paper you can make copies in black & white.	
	■ Faxing	
	If the paper type is set to Plain Paper, Inkjet Paper or Transparency the machine will receive and print the faxes in black & white.	
	If a sending machine has a color fax, the machine's 'handshake' will ask that the fax be sent as black & white.	
	If the paper type is set to Other Glossy or Brother BP71, the machine will stop all print operations. If you unplug the machine, or take out the ink cartridge, you cannot use the machine until you change to a new ink cartridge.	

Error Message	Cause	Action
Cannot Detect	You installed a new ink cartridge too quickly and the machine did not detect it.	Take out the new ink cartridge and re-install it slowly until it clicks.
	If you are not using genuine Brother Innobella™ ink the machine may not detect the ink cartridge.	Use a new Genuine Brother Innobella™ Ink Cartridge. If the error is not cleared, call Brother Customer Service.
	An ink cartridge is not installed correctly.	Take out the new ink cartridge and reinstall it slowly until it clicks. (See Replacing the ink cartridges on page 145.)
Cannot Print	One or more of the ink cartridges have reached the end of their life. The machine will stop all print operations. While memory is available, black & white faxes will be stored in the memory. If a sending machine has a color fax, the machine's 'handshake' will ask that the fax be sent as black & white. If the sending machine has the ability to convert it, the color fax will be stored in the memory as a black & white fax.	Replace the ink cartridges. (See Replacing the ink cartridges on page 145.)
Comm.Error	Poor telephone line quality caused a communication error.	Send the fax again or connect the machine to another telephone line. If the problem continues, call the telephone company and ask them to check your telephone line.
Connection Fail	You tried to poll a fax machine that is not in Polled Waiting mode.	Check the other fax machine's polling setup.
Cover is Open	The scanner cover is not closed completely.	Lift the scanner cover and then close it again.
	The ink cartridge cover is not completely closed.	Firmly close the ink cartridge cover until it clicks.
Data Remaining	Print data is left in the machine's memory.	Press Stop/Exit . The machine will cancel the job and clear it from the memory. Try to print again.
Disconnected	The other person or other person's fax machine stopped the call.	Try to send or receive again.
Document Jam	The document was not inserted or fed properly, or the document scanned from the ADF was too long.	See Using the ADF on page 20. See Document jam on page 141.
DR Mode in Use	The machine is set to Distinctive Ring mode. You cannot change the Receive Mode from Manual to another mode.	Set Distinctive Ring to off. (See <i>Turning off Distinctive Ring</i> on page 57.)
High Temperature	The print head is too warm.	Allow the machine to cool down.

Error Message	Cause	Action
Hub is Unusable.	A Hub or USB Flash memory drive with Hub has been connected to the USB direct interface.	A Hub or USB Flash memory drive with Hub are not supported. Unplug the device from the USB direct interface.
Image Too Long.	The proportions of your photo are irregular so effects could not be added.	Choose a regularly proportioned image.
Image Too Small.	The size of your photo is too small to trim.	Choose a larger image.
Ink low	One or more of the ink cartridges are running out of ink. If a sending machine has a color fax, the machine's 'handshake' will ask that the fax be sent as black & white. If the sending machine has the ability to convert it, the color fax will be printed at your machine as a black & white fax.	Order a new ink cartridge. You can continue printing until the LCD shows Cannot Print. (See Ordering accessories and supplies on page ii and Replacing the ink cartridges on page 145.)
Low Temperature	The print head is too cold.	Allow the machine to warm up.
Media Error	The memory card is either corrupted, improperly formatted, or there is a problem with the card.	Put the card firmly into the slot again to make sure it is in the correct position. If the error remains, check the media drive (slot) of the machine by putting in another memory card that you know is working.
Media is Full.	The memory card or USB flash memory drive you are using already contains 999 files.	Your machine can only save to your memory card or USB flash memory drive if it contains less than 999 files. Try deleting unused files to free some space and try again.
No Caller ID	There is no incoming call history. You did not receive calls or you have not subscribed to the Caller ID service from your telephone company.	If you want to use the Caller ID feature call your telephone company. (See <i>Caller ID</i> on page 57.)
No Cartridge	An ink cartridge is not installed properly.	Take out the new ink cartridge and reinstall it slowly until it clicks. (See Replacing the ink cartridges on page 145.)
No File	The memory card or USB Flash memory drive in the media drive does not contain a .JPG file.	Put the correct memory card or USB Flash memory drive into the slot again.

Error Message	Cause	Action	
No Paper Fed	The machine is out of paper or paper is not properly loaded in the	Do one of the following:	
	paper tray.	Refill the paper in the paper tray, and then press Black Start or Color Start.	
		Remove the paper and load it again and then press Black Start or Color Start. (See Loading paper and other print media on page 9.)	
	The paper is jammed in the machine.	Remove the jammed paper by following the steps in <i>Printer jam or paper jam</i> on page 142.	
	The Jam Clear Cover is not closed properly.	Check the Jam Clear Cover is closed evenly at both ends. (See <i>Printer jam or paper jam</i> on page 142.)	
No Response/Busy	The number you dialed does not answer or is busy.	Verify the number and try again.	
Not Registered	You tried to access a Speed Dial number that is not programmed.	Set up the Speed Dial number. (See Storing Speed Dial numbers on page 66.)	
Out of Memory	The machine's memory is full.	Fax sending or copy operation in progress	
		Do one of the following:	
		Press Stop/Exit and wait until the other operations in progress finish and then try again.	
		■ Clear the data in the memory. To gain extra memory, you can turn off Memory Receive. (See <i>Turning off Memory Receive Operations</i> on page 48.)	
		Print the faxes that are in the memory. (See Printing a fax from the memory on page 49.)	
	The memory card or USB flash memory drive you are using does not have enough free space to scan the document.	Delete unused files from your memory card or USB Flash memory drive to make some free space and then try again.	
Paper Jam	Paper is jammed in the machine.	Open the Jam Clear Cover (at the back of the machine) and pull out the jammed paper by following the steps in <i>Printer jam or paper jam</i> on page 142. Make sure the paper length guide is set to the paper size.	
Replace Ink	One or more of the ink cartridges have reached the end of their life.	Replace the ink cartridges. (See Replacing the ink cartridges on page 145.)	

Error Message	Cause	Action
Unable to Clean XX	The machine has a mechanical problem. —OR— A foreign object such as a clip or ripped paper is in the machine.	Open the scanner cover and look inside the machine for foreign objects and paper scraps. If the error message continues, see <i>Transferring your faxes or Fax Journal report</i> on page 140 before disconnecting the machine so you will not lose any important messages. Then, disconnect the machine from the power source for several minutes and then reconnect it.
Unable to Init. XX	The machine has a mechanical problem. —OR— A foreign object such as a clip or ripped paper is in the machine.	Open the scanner cover and look inside the machine for foreign objects and paper scraps. If the error message continues, see <i>Transferring your faxes or Fax Journal report</i> on page 140 before disconnecting the machine so you will not lose any important messages. Then, disconnect the machine from the power source for several minutes and then reconnect it.
Unable to Print XX	The machine has a mechanical problem. —OR— A foreign object such as a clip or ripped paper is in the machine.	Open the scanner cover and look inside the machine for foreign objects and paper scraps. If the error message continues, see <i>Transferring your faxes or Fax Journal report</i> on page 140 before disconnecting the machine so you will not lose any important messages. Then, disconnect the machine from the power source for several minutes and then reconnect it.
Unable to Scan XX	The machine has a mechanical problem. —OR— A foreign object such as a clip or ripped paper is in the machine.	Open the scanner cover and look inside the machine for foreign objects and paper scraps. If the error message continues, see <i>Transferring your faxes or Fax Journal report</i> on page 140 before disconnecting the machine so you will not lose any important messages. Then, disconnect the machine from the power source for several minutes and then reconnect it.
Unusable Device Disconnect device from front connector & turn machine off & then on	A broken device has been connected to the USB direct interface.	Unplug the device from the USB direct interface, then press On/Off to turn the machine off and then on again.

Error Message	Cause	Action
Unusable Device	A USB device or USB Flash	Unplug the device from the USB direct
Please Disconnect USB Device.	memory drive that is not supported has been connected to the USB direct interface.	interface.
	For more information, visit us at http://solutions.brother.com .	
Wrong Paper Size	Paper is not the correct size.	Check that the machine's Paper Size setting matches the size of paper in the tray. (See <i>Paper Size</i> on page 25.)

Error animation

Error animation displays step-by-step instructions when paper gets jammed. You can read the steps at your own pace by pressing ▶ to see the next step and ◀ to go backward. If you do not press a key after 1 minute the animation starts running automatically again.



You can press **♦** or **OK** to pause the auto-animation and go back to step-bystep mode.

Transferring your faxes or Fax Journal report

If the LCD shows:

- Unable to Clean XX
- Unable to Init. XX
- Unable to Print XX
- Unable to Scan XX

We recommend transferring your faxes to another fax machine or to your PC. (See Transferring faxes to another fax machine on page 140 or Transferring faxes to your PC on page 141.)

You can also transfer the Fax Journal report to see if there are any faxes you need to transfer. (See Transferring Fax Journal report to another fax machine on page 141.)



If there is an error message on the machine's LCD, after the faxes have been transferred, disconnect the machine from the power source for several minutes, and then reconnect it.

Transferring faxes to another fax machine

If you have not set up your Station ID, you cannot enter fax transfer mode. (See Set your station ID in the Quick Setup Guide.)

- Press **Stop/Exit** to interrupt the error temporarily.
- Press Menu.
- Press ▲ or ▼ to choose Service. Press OK.
- Press ▲ or ▼ to choose Data Transfer. Press **OK**.
- Press A or V to choose Fax Transfer. Press OK.
- 6 Do one of the following:
 - If the LCD shows No Data, there are no faxes left in the machine's memory.

Press Stop/Exit.

- Enter the fax number to which faxes will be forwarded.
- Press Black Start.

Transferring faxes to your PC

You can transfer the faxes from your machine's memory to your PC.

- 1 Press **Stop/Exit** to interrupt the error temporarily.
- 2 Make sure you have installed MFL-Pro Suite on your PC, and then turn on PC FAX Receiving on the PC. (For details see PC- FAX receiving for Windows® in the Software User's Guide on the CD-ROM.)
- Make sure you have set PC Fax Receive on the machine. (See PC Fax Receive on page 46.)
 If faxes are in the machine's memory when you set up PC Fax Receive, the LCD will ask if you want to transfer the faxes to your PC.
- 4 Do one of the following:
 - To transfer all faxes to your PC, press 1. You will be asked if you want to also turn on backup print.
 - To exit and leave the faxes in the memory, press 2.
- 5 Press Stop/Exit.

Transferring Fax Journal report to another fax machine

If you have not set up your Station ID, you cannot enter fax transfer mode. (See Set your station ID in the Quick Setup Guide.)

- Press Stop/Exit to interrupt the error temporarily.
- 2 Press Menu.
- 3 Press ▲ or ▼ to choose Service.
 Press OK.
- Press ▲ or ▼ to choose

 Data Transfer.

 Press OK.


- Press ▲ or ▼ to choose
 Report Trans.
 Press OK.
- 6 Enter the fax number to which the Fax Journal report will be forwarded.
- 7 Press Black Start.

Document jam

Documents can jam in the ADF unit if they are not inserted or fed properly, or if they are too long. Follow the steps below to clear a document jam.

Document is jammed in the top of the ADF unit

- 1 Take out any paper from the ADF that is not jammed.
- Open the ADF cover.
- 3 Pull the jammed document out to the left.

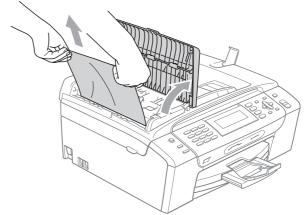


- 4 Close the ADF cover.
- 5 Press Stop/Exit.



To avoid future document jams close the ADF cover by pressing it down in the middle.

Document is jammed inside the ADF unit

- 1 Take out any paper from the ADF that is not jammed.
- 2 Lift the document cover.
- 3 Pull the jammed document out to the left.

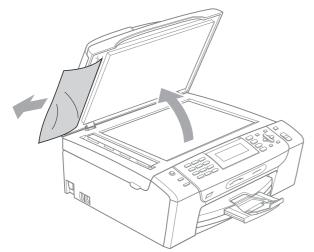


- 4 Close the document cover.
- 5 Press Stop/Exit.


Printer jam or paper jam

Take out the jammed paper depending on where it is jammed in the machine.

1 Pull the paper tray (1) out of the machine.

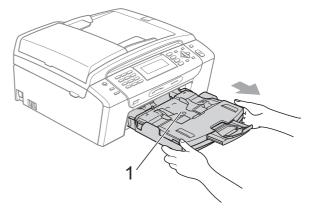



2 Pull out the jammed paper (1) and press **Stop/Exit**.

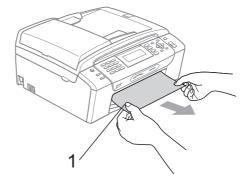


- 3 Reset the machine by lifting the scanner cover from the front of the machine and then closing it.
 - If you cannot remove the jammed paper from the front of the machine, or the error message still appears on the LCD after you have removed the jammed paper, please go to the next step.

4 Open the Jam Clear Cover (1) at the back of the machine. Pull the jammed paper out of the machine.

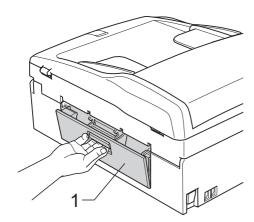


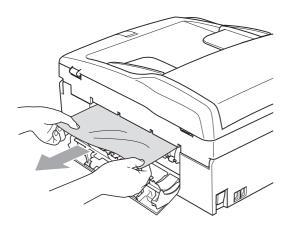

Close the Jam Clear Cover.
Make sure the cover is closed properly.

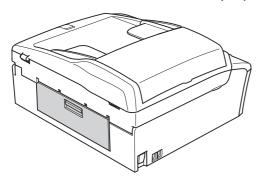

6 Lift the scanner cover (1) from the front side of the machine until it locks securely into the open position. Make sure that there is no jammed paper left inside the machine.

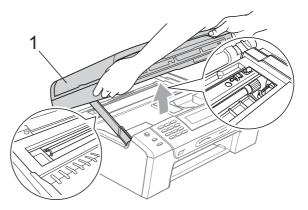


CAUTION


Before you unplug the machine from the power source, you can transfer your faxes that are stored in the memory to your PC or another fax machine so you will not lose any important messages. (See *Transferring your faxes or Fax Journal report* on page 140.)

Note

- If the paper is jammed under the print head, unplug the machine from the power source, and then move the print head to take out the paper.
- If the print head is at the right corner as shown in the illustration, you cannot move the print head. Press **Stop/Exit** until the print head moves to the middle. Then unplug the machine from the power source, and take out the paper.

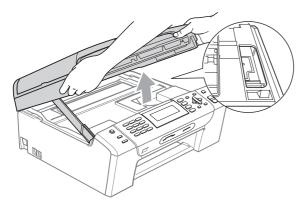


- If ink gets on your skin or clothing immediately wash it off with soap or detergent.
- 7 Lift the scanner cover to release the lock (1). Gently push the scanner cover support down (2) and close the scanner cover (3) using both bands.

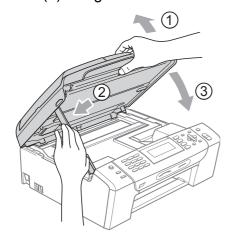

8 Push the paper tray firmly back into the machine.



Make sure you pull out the paper support until it clicks.

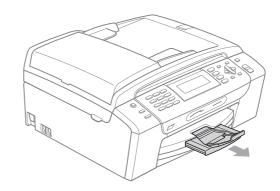

Routine maintenance

Replacing the ink cartridges

Your machine is equipped with an ink dot counter. The ink dot counter automatically monitors the level of ink in each of the 4 cartridges. When the machine detects an ink cartridge is running out of ink, the machine will tell you with a message on the LCD.

The LCD will tell you which ink cartridge is low or needs replacing. Be sure to follow the LCD prompts to replace the ink cartridges in the correct order.

Even though the machine tells you to replace an ink cartridge, there will be a small amount of ink left in the ink cartridge. It is necessary to keep some ink in the ink cartridge to prevent air from drying out and damaging the print head assembly.


CAUTION


Brother strongly recommends that you do not refill the ink cartridges provided with your machine. We also strongly recommend that you continue to use only Genuine Brother Brand replacement ink cartridges. Use or attempted use of potentially incompatible ink and/or cartridges in the Brother machine may cause damage to the machine and/or may result in unsatisfactory print quality. Our warranty coverage does not apply to any problem that is caused by the use of unauthorized third party ink and/or cartridges. To protect your investment and obtain premium performance from the Brother machine, we strongly recommend the use of Genuine Brother Supplies.

1 Open the ink cartridge cover.

If one or more of the ink cartridges have reached the end of their life, the LCD shows B&W Print Only or Cannot Print.


Press down to unlock the release lever and take out the ink cartridge for the color shown on the LCD.

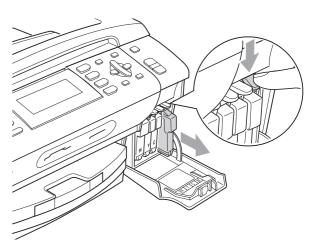

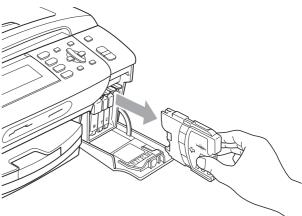


Open the new ink cartridge bag for the color shown on the LCD, and then take out the ink cartridge.


4 Turn the green knob on the protective yellow cap clockwise until it clicks to release the vacuum seal, then remove the cap (1).

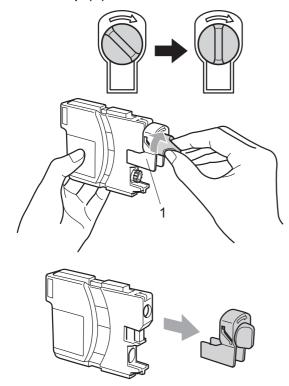

 5 Each color has its own correct position. Insert the ink cartridge in the direction of the arrow on the label.



6 Gently push the ink cartridge in until it clicks, and then close the ink cartridge cover.

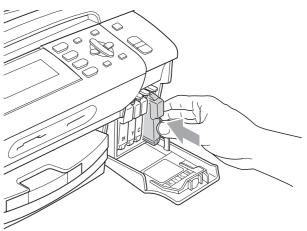

The machine will automatically reset the ink dot counter.



- If you replaced an ink cartridge, for example Black, the LCD may ask you to verify that it was a brand new one (for example, Did You Change BK Black). For each new cartridge you installed, press 1 (Yes) to automatically reset the ink dot counter for that color. If the ink cartridge you installed is not a brand new one, be sure to press 2 (No).
- If the LCD shows No Cartridge or Cannot Detect after you install the ink cartridges, check that the ink cartridges are installed properly.



WARNING

If ink gets in your eyes, wash them out with water at once and call a doctor if you are concerned.

CAUTION

DO NOT take out ink cartridges if you do not need to replace them. If you do so, it may reduce the ink quantity and the machine will not know the quantity of ink left in the cartridge.

DO NOT touch the cartridge insertion slots. If you do so, the ink may stain your skin.

If ink gets on your skin or clothing immediately wash it off with soap or detergent.

If you mix the colors by installing an ink cartridge in the wrong position, clean the print head several times after correcting the cartridge installation.

Once you open an ink cartridge, install it in the machine and use it up within six months of installation. Use unopened ink cartridges by the expiration date written on the cartridge package.

DO NOT dismantle or tamper with the ink cartridge, this can cause the ink to leak out of the cartridge.

Cleaning the outside of the machine

0

CAUTION


Use neutral detergents. Cleaning with volatile liquids such as thinner or benzine will damage the outside surface of the machine.

DO NOT use cleaning materials that contain ammonia.


DO NOT use isopropyl alcohol to remove dirt from the control panel. It may crack the panel.

Clean the outside of the machine as follows:

1 Pull the paper tray (1) completely out of the machine.

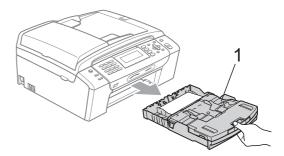


Wipe the outside of the machine with a soft cloth to remove dust.

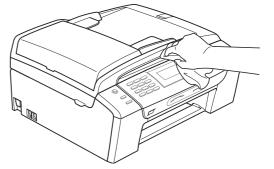

Remove anything that is stuck inside the paper tray.


Wipe the inside and outside of the paper tray with a soft cloth to remove dust.

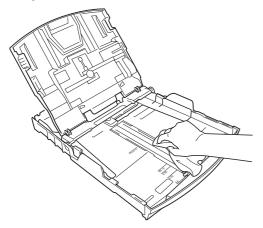


Put the paper tray firmly back in the machine.

Cleaning the scanner

1 Lift the document cover (1). Clean the scanner glass (2) and the white plastic (3) with a soft lint-free cloth moistened with a non-flammable glass cleaner.

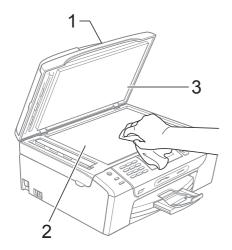

2 In the ADF unit, clean the white bar (1) and the glass strip (2) with a lint-free cloth moistened with a non-flammable glass cleaner.

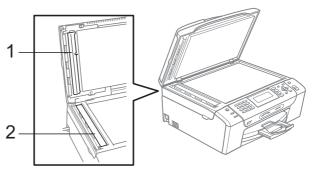



In addition to cleaning the scanner glass and glass strip with a non-flammable glass cleaner, run your finger tip over the glass to see if you can feel anything on it. If you feel dirt or debris, clean the glass again concentrating on that area. You may need to repeat the cleaning process three or four times. To test, make a copy after each cleaning.


Cleaning the machine printer platen

A

WARNING


Be sure to unplug the machine from the AC power outlet before cleaning the printer platen.

- 1 Lift the scanner cover until it locks securely into the open position.
- Clean the machine printer platen (1) and the area around it, wiping off any scattered ink with a soft, dry lint-free cloth.

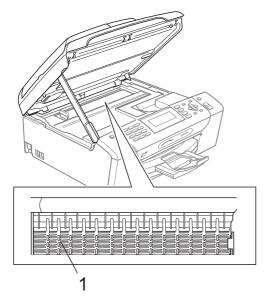


Cleaning the paper pick-up roller

- 1 Pull the paper tray completely out of the machine.
- 2 Unplug the machine from the AC power outlet and open the Jam Clear Cover (1) at the back of the machine.

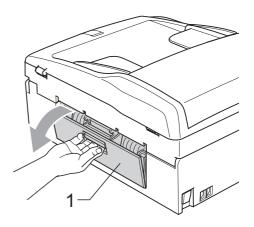

3 Clean the Paper Pick-up Roller (1) with isopropyl alcohol on a cotton swab.

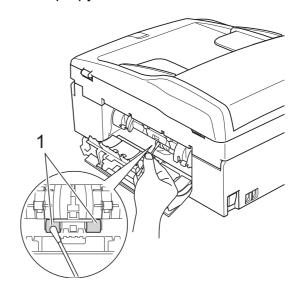

- 4 Close the Jam Clear Cover.
 Make sure the cover is closed properly.
- 5 Put the paper tray firmly back in the machine.
- 6 Re-connect the power cord.

Cleaning the print head

To maintain good print quality, the machine will automatically clean the print head. You can start the cleaning process manually if there is a print quality problem.

Clean the print head and ink cartridges if you get a horizontal line or blank text in the text or graphics on your printed pages. You can clean Black only, three colors at a time (Cyan/Yellow/Magenta), or all four colors at once.

Cleaning the print head consumes ink. Cleaning too often uses ink unnecessarily.



CAUTION

DO NOT touch the print head. Touching the print head may cause permanent damage and may void the print head's warranty.

- 1 Press Ink.
- Press A or ▼ to choose Cleaning. Press OK.
- 3 Press A or V to choose Black, Color or All.

Press OK.

The machine cleans the print head. When cleaning is finished, the machine will go back to standby mode automatically.



If you clean the print head at least five times and the print has not improved, try installing a new Genuine Brother Brand replacement cartridge for each problem color. Try cleaning the print head again up to five more times. If the print has not improved call Brother Customer Service (see *Brother numbers* on page i).

Checking the print quality

If faded or streaked colors and text appear on your output, some of the nozzles may be clogged. You can check this by printing the Print Quality Check Sheet and looking at the nozzle check pattern.

- 1 Press Ink.
- Press A or ▼ to choose Test Print. Press OK.
- Press ▲ or ▼ to choose
 Print Quality.
 Press OK.
- 4 Press Color Start.
 The machine begins printing the Print Quality Check Sheet.
- 5 Check the quality of the four color blocks on the sheet.
- 6 The LCD asks you if the print quality is OK

Do one of the following:

- If all lines are clear and visible, press 1 (Yes) to finish the Print Quality check and go to step .
- If you can see missing short lines as shown below, press 2 to choose No.

OK Poor





- 7 The LCD asks you if the print quality is OK for black and three colors.

 Press 1 (Yes) or 2 (No).
- 8 The LCD asks you if you want to start cleaning.

Press 1 (Yes).

The machine starts cleaning the print head.

9 After cleaning is finished, press Color Start.

The machine starts printing the Print Quality Check Sheet again and then return to step **5**.

10 Press Stop/Exit.

If you repeat this procedure at least five times and the print quality is still poor, replace the ink cartridge for the clogged color.

After replacing the ink cartridge, check the print quality. If the problem still exists, repeat the cleaning and test print procedures at least five times for the new ink cartridge. If ink is still missing, call Brother Customer Service. (See Brother numbers on page i)

Q CAUTION

DO NOT touch the print head. Touching the print head may cause permanent damage and may void the print head's warranty.

🛮 Note



When a print head nozzle is clogged the printed sample looks like this.



After the print head nozzle is cleaned, the horizontal lines are gone.

Checking the print alignment

You may need to adjust the print alignment after transporting the machine, or if your printed text becomes blurred or images become faded.

- 1 Press Ink.
- Press A or ▼ to choose Test Print. Press OK.
- 3 Press ▲ or ▼ to choose Alignment. Press OK.
- 4 Press Black Start or Color Start.
 The machine starts printing the
 Alignment Check Sheet.
- 5 Check the 600 dpi and 1200 dpi test prints to see if number 5 most closely matches number 0.
- 6 Do one of the following:
 - If the number 5 samples of both the 600 dpi and 1200 dpi test prints are the best matches, press 1 (Yes) to finish the Alignment Check and go to step 9.
 - If another test print number is a better match for either 600 dpi or 1200 dpi, press 2 (No) to choose it.
- 7 For 600 dpi, press the number of the test print that most closely matches the number 0 sample (1-8).
- 8 For 1200 dpi, press the number of the test print that most closely matches the number 0 sample (1-8).
- 9 Press Stop/Exit.

Checking the ink volume

Although an ink volume icon appears on the LCD, you can use the **Ink** key to see a large graph showing the ink that is left in each cartridge.

- 1 Press Ink.
- Press ▲ or ▼ to choose Ink Volume.

 Press OK.

 The LCD shows the ink volume.
- 3 Press Stop/Exit.



You can check the ink volume from your computer. (See *Printing* for Windows[®] or *Printing and Faxing* for Macintosh[®] in the Software User's Guide on the CD-ROM.)

Machine Information

Checking the serial number

You can see the machine's serial number on the LCD.

- 1 Press Menu.
- Press ▲ or ▼ to choose
 Machine Info.
 Press OK.
- 3 Press A or V to choose Serial No. Press OK.
- 4 Press Stop/Exit.

Packing and shipping the machine


When you transport the machine, use the packing materials that came with your machine. If you do not pack the machine properly, any damage that may occur in transit will not be covered by your warranty.

0

CAUTION

It is important to allow the machine to 'park' the print head after a print job. Listen carefully to the machine before unplugging it to make sure that all mechanical noise has stopped. Not allowing the machine to finish this parking process may lead to print problems and possible damage to the print head.


- Open the ink cartridge cover.
- Press the ink release lever to release the ink cartridge and take out the ink cartridges. (See *Replacing the ink cartridges* on page 145.)
- 3 Install the green protective part and then close the ink cartridge cover.

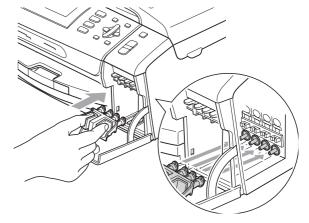

0


CAUTION

Make sure that the plastic tabs on both sides of the green protective part (1) have securely clicked into place (2).

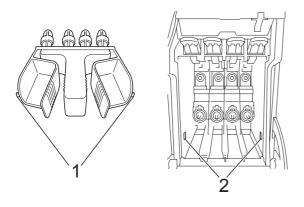

If you are not able to find the green protective part, DO NOT remove the ink cartridges before shipping. It is essential that the machine be shipped with either the green protective part or the ink cartridges in position. Shipping without them will cause damage to your machine and may void your warranty.


4 Lift the front of the machine and hook the long end (1) of the green protective part into the T-shaped hole underneath the machine. Push the forked end (2) onto the top of the paper tray.

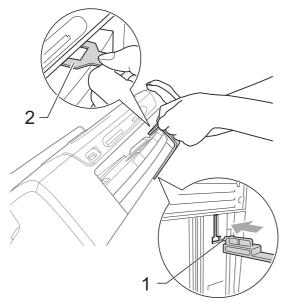

- Unplug the machine from the telephone wall jack and take the telephone line cord out of the machine.
- 6 Unplug the machine from the AC power outlet.
- 7 Using both hands, use the plastic tabs on both sides of the machine to lift the scanner cover until it locks securely into the open position. Then unplug the interface cable from the machine, if it is connected.
- 8 Lift the scanner cover (1) to release the lock. Gently push the scanner cover support down (2) and close the scanner cover (3) using both hands.



Wrap the machine in the bag.

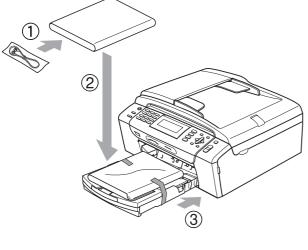




10 Pack the machine and the printed materials in the original carton with the original packing material as shown below. Do not pack the used ink cartridges in the carton.

Note

If you are returning your machine to Brother as part of the Exchange Service, pack *only* the machine. Keep all separate parts and printed materials to use with your 'Exchange' machine.

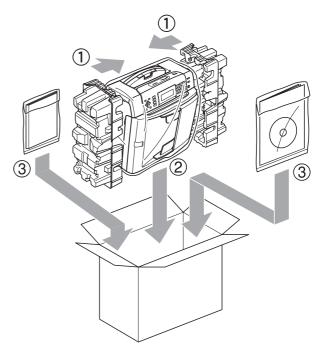

11 Close the carton and tape it shut.

C

Menu and Features

On-screen programming

Your machine is designed to be easy to operate with LCD on-screen programming using the menu keys. User-friendly programming helps you take full advantage of all the menu selections your machine has to offer.

Since your programming is done on the LCD, we have created step-by-step on-screen instructions to help you program your machine. All you need to do is follow the instructions as they guide you through the menu selections and programming options.

Menu table

You can program your machine by using the Menu table that begins on page 156. These pages list the menu selections and options.

Memory storage

Even if there is a power failure, you will not lose the settings you have chosen using the Menu key because they are stored permanently. Also, you will not lose your settings in the PhotoCapture, Fax and Copy mode key menus if you have chosen Set New Default. You may have to reset the date and time.

Mode and menu keys

Menu	Access the main menu.
Scan Copy Photo Capture	Access the mode and its menu of temporary settings.
A V	Scroll through the current menu level.
4	Go back to the previous menu level.
•	Go to the next menu level.
	■ Go to the next menu level.
ОК	Accept an option.
	■ Cancel the current operation.
Clear/Back	Go back to the previous menu level.
Stop/Exit	■ Stop the current operation.

Menu table

The menu table will help you understand the menu selections and options that are found in the machine's programs. The factory settings are shown in Bold with an asterisk.



Level1	Level2	Level3	Options	Descriptions	Page
General Setup	Mode Timer	_	Off	Sets the time to return to	24
			0Sec	Fax mode.	
			30Secs		
			1Min		
			2Mins*		
			5Mins		
	Paper Type	_	Plain Paper*	Sets the type of paper in	24
			Inkjet Paper	the paper tray.	
			Brother BP71		
			Other Glossy		
			Transparency		
	Paper Size	_	Letter*	Sets the size of the paper	25
			Legal	in the paper tray.	
			A4		
			A5		
			4"x6"		
	Volume	Ring	Off	Adjusts the ring volume.	25
			Low		
			Med*		
			High		
		Beeper	Off	Adjusts the volume level of the beeper.	26
			Low*		
			Med		
			High		
		Speaker	Off	Adjusts the volume level	26
			Low	of the speaker.	
			Med*		
			High		
	Auto Daylight	_	On	Change this setting to On	27
			Off*	if you want the machine to change automatically for Daylight Savings Time.	
	The factory setting	s are shown in Bold	d with an asterisk.		

Level1	Level2	Level3	Options	Descriptions	Page
General Setup	PwrOff Setting	_	Fax Receive:On	Customizes the On/Off	23
(Continued)			Fax Receive:Off*	key to receive faxes even in off mode.	
	LCD Settings	LCD Contrast	Light	Adjusts the contrast of the	28
			Med*	LCD.	
			Dark		
		Backlight	Light*	You can adjust the	28
			Med	brightness of the LCD backlight.	
			Dark	g	
		Dim Timer	Off	You can set how long the	28
			10Secs	LCD backlight stays on after the last key press.	
			20Secs		
			30Secs*		
		Wallpaper	_	You can choose the wallpaper of the LCD.	28
	Sleep Mode	_	1Min	You can choose how long	27
			2Mins	the machine must be idle before it goes into sleep mode.	
			3Mins		
			5Mins		
			10Mins*		
			30Mins		
			60Mins		
ax	Setup Receive	Ring Delay	0	Sets the number of rings	43
			1	before the machine answers in Fax Only or	
			2	Fax/Tel mode.	
			3		
			4*		
		F/T Ring Time	20Secs*	Sets the pseudo/double-	43
			30Secs	ring time in Fax/Tel mode.	
			40Secs		
			70Secs		
		Easy Receive	On*	Receives fax messages	44
			Off	automatically when you answer a call and hear fax tone.	

Level1	Level2	Level3	Options	Descriptions	Page
Fax (Continued)	Setup Receive (Continued)	Remote Codes	On* (*51, #51) Off	Allows you to answer all calls at an extension or external telephone and use codes to turn the machine on or off. You can personalize these	63
		Auto Reduction	On*	Reduces the size of incoming faxes.	49
		Memory Receive	Off* Fax Forward Paging Fax Storage PC Fax Receive	You can set the machine to either forward fax messages, call your pager, store incoming faxes in the memory (so you can retrieve them while you are away from your machine), or send faxes to your PC.	44
				If you choose Fax Forward or PC Fax Receive, you can turn on the safety feature Backup Print.	
	Report Setting	Transmission	On On+Image Off*	Initial setup for Transmission Verification Report and Fax Journal Report.	72
		Journal Period			72
			Every 50 Faxes* Every 6 Hours Every 12 Hours Every 24 Hours Every 2 Days Every 7 Days		
	Print Fax	_	—	Prints incoming faxes stored in the memory.	49
	Remote Access	_	*	Set your own code for Remote Retrieval.	50
	Remaining Jobs	_	_	Check which jobs are in the memory and lets you cancel chosen jobs.	38
	Miscellaneous	TX Lock		Prohibits most functions	29

Level1	Level2	Level3	Options	Descriptions	Page
Fax	Miscellaneous	Compatibility	High*	Adjusts the modem speed	134
(Continued)	(Continued)		Normal	to help resolve transmission problems.	
			Basic(for VoIP)	·	
		Distinctive	Off*	Uses the Telephone	55
			Set (On)	company's Distinctive Ring subscriber service to register the ring pattern with the machine.	
		Caller ID	Area Code	View or print a list of the	57
		(USA only)		last 30 Caller IDs stored in the memory.	
				Set up your 3-digit area code only if you do not dial it within your own area code.	
	The factory settings	s are shown in Bold	l with an asterisk.		

Network menu

Level1	Level2	Level3	Level4	Options	Descriptions
Network	Wired LAN	TCP/IP	BOOT Method	Auto*	Chooses the
				Static	BOOT method that best suits
				RARP	your needs.
				BOOTP	
				DHCP	
			IP Address	[000-255].	Enter the IP
				[000-255].	address.
				[000-255].	
				[000-255]	
			Subnet Mask	[000-255].	Enter the Subnet
				[000-255].	mask.
				[000-255].	
				[000-255]	

See Network User's Guide on the CD-ROM.



The factory settings are shown in Bold with an asterisk.

Level1	Level2	Level3	Level4	Options	Descriptions
Network	Wired LAN	TCP/IP	Gateway	[000-255].	Enter the
(Continued)	(Continued)	(Continued)		[000-255].	Gateway address.
				[000-255].	
				[000-255]	
			Node Name	BRNXXXXXXXXXXX	Enter the Node name.
			WINS Config	Auto*	Chooses the
				Static	WINS configuration
					mode.
			WINS Server	(Primary) 000.000.000	Specifies the IP address of the
				(Secondary)	primary or
				000.000.000.000	secondary server.
			DNS Server	(Primary)	Specifies the IP
				000.000.000.000	address of the
				(Secondary) 000.000.000	primary or secondary
			ADIDA	On*	server.
			APIPA		Automatically allocates the IP
				Off	address from the
					link-local address range.
		Ethernet	_	Auto*	Chooses the
				100B-FD	Ethernet link mode.
				100B-HD	mode.
				10B-FD	
				10B-HD	
	WLAN	TCP/IP	BOOT Method	Auto*	Chooses the
				Static	BOOT method that best suits
				RARP	your needs.
				BOOTP	
				DHCP	
			IP Address	[000-255].	Enter the IP
				[000-255].	address.
				[000-255].	
				[000-255]	
	See Network Us	er's Guide on the C	CD-ROM.		



The factory settings are shown in Bold with an asterisk.

Level1	Level2	Level3	Level4	Options	Descriptions
Network	WLAN	TCP/IP	Subnet Mask	[000-255].	Enter the Subnet
(Continued)	(Continued)	(Continued)		[000-255].	mask.
				[000-255].	
				[000-255]	
			Gateway	[000-255].	Enter the
				[000-255].	Gateway address.
				[000-255].	dudioss.
				[000-255]	
			Node Name	BRWXXXXXXXXXXX	Enter the Node name.
			WINS Config	Auto*	Chooses the
				Static	WINS configuration mode.
			WINS Server	(Primary) 000.000.000.000	Specifies the IP address of the
				(Secondary)	primary or secondary server.
			DNS Server	(Primary) 000.000.000	Specifies the IP address of the primary or
				(Secondary) 000.000.000.000	secondary server.
			APIPA	On* Off	Automatically allocates the IP address from the link-local address range.
		Setup Wizard	_	_	You can configure your print server.
		SES/WPS/AOSS	_	_	You can easily configure your wireless network settings using the one-button push method.
		WPS w/PIN Code	_	_	You can easily configure your wireless network settings using WPS with a PIN code.

40

Level1	Level2	Level3	Level4	Options	Descriptions
Network (Continued)	WLAN (Continued)	WLAN Status	Status	_	You can see the current wireless network status.
		SSID	Signal	_	You can see the current wireless network signal strength.
			SSID	_	You can see the current SSID.
			Comm. Mode	_	You can see the current Communication Mode.
	Network I/F	_	Wired LAN*	_	You can choose the network connection type.
	Factory Reset	_	Yes	_	Restores all wired and wireless network settings to the factory default.
	See Network User's	s Guide on the CD-	ROM.	•	



The factory settings are shown in Bold with an asterisk.

Menu (Menu (continued)

Level1	Level2	Level3	Options	Descriptions	Page
Print Reports	Transmission	_	_	Prints these lists and reports.	74
	Help List	_	_		
	Quick Dial	_	Alphabetical Order		
			Numerical Order		
	Fax Journal	_	_		
	User Settings	_	_		
	Network Config	_	_		
	Caller ID hist.	_	_		
Machine Info.	Serial No.	_	_	Lets you check the serial number of your machine.	152
	The factory setting:	s are shown in Bold	with an asterisk.		•

Level1	Level2	Level3	Options	Descriptions	Page
Initial Setup	Receive Mode	_	Fax Only*	Choose the receive mode	40
			Fax/Tel	that best suits your needs.	
			External TAD		
			Manual		
	Date&Time	_	_	Puts the date and time on the LCD and in headings of faxes you send.	See Quick Setup
	Station ID	_	Fax:	Set your name and fax	Guide.
			Name:	number to appear on each page you fax.	
	Tone/Pulse	_	Tone*	Choose the dialing mode.	
	(Canada only)		Pulse		
	Dial Tone	_	Detection	You can shorten the dial	134
			No Detection*	tone detect pause.	
	Local Language	_	English*	Allows you to change the	See
	(US only)		Spanish	LCD language for your country.	Quick Setup Guide.
	Local Language	_	English*	Allows you to change the	See
	(Canada only)		French	LCD language for your country.	Quick Setup Guide.
	The factory setting:	s are shown in Bold	d with an asterisk.	I	<u> </u>

Fax (🖼)

Level1	Level2	Level3	Options	Descriptions	Page
Fax Resolution	_	_	Standard*	Sets the resolution for outgoing faxes.	36
			Fine		
			S.Fine		
			Photo		
Contrast	_	_	Auto*	Changes the lightness or darkness of faxes you send.	36
			Light		
			Dark		
Speed Dial	Search	_	Alphabetical	You can dial by pressing only a few keys (and Start).	64
			Order		
			Numerical Order		
	Set Speed Dial	_	_	You can store Speed Dial numbers, so you can dial by pressing only a few keys (and Start).	64
	Setup Groups	_	_	Sets up a Group number for Broadcasting.	69
	The factory setting	s are shown in Bold	with an asterisk.		

Send a fax	_	_	You can choose a number	65
				-
Add to Speed Dial	_	_	from the Outgoing Call history and then make a	
Delete	_	_	fax to it, add it to Speed Dial, or delete it.	
Send a fax		_	You can choose a number	66
Add to Speed Dial		_	then send a fax to it, add it to	
Delete	_	_	Opeca Blai, or delete it.	
Add Number	_	_	You can send the same fax	34
Speed Dial	_	_	_	
Complete	_	_	iax number.	
_	_	On (00:00)	Sets the time of day in	37
		Off*	24-hour format that the delayed faxes will be sent.	
_	_	On Off*	Combines delayed faxes to the same fax number at the same time of day into one transmission.	38
	_	On Off*	You can send a fax without using the memory.	37
_	_	On Off*	Sets up your machine with an document to be retrieved by another fax machine.	76
_	_	On Off*	Sets up your machine to poll another fax machine.	75
_	_	On Off*	If you are having difficulty sending faxes overseas, set this to On.	37
_	_	Letter*	Adjust the scan area of the scanner glass to the size of the document.	33
_	_	Yes	You can save your fax settings.	38
_	_	Yes	You can restore all settings to the factory settings.	39
	Delete Send a fax Add to Speed Dial Delete Add Number Speed Dial Complete —	Delete — Send a fax — Add to Speed — Dial Delete — Add Number — Speed Dial — Complete — — — — — — — — — — — — — — — — — —	Delete	telephone call to it, send a fax to it, add it to Speed Dial, or delete it. Send a fax — — — You can choose a number from the Caller ID history and then send a fax to it, add it to Speed Dial. Delete — — — — You can send the same fax message to more than one fax number. Speed Dial — — — You can send the same fax message to more than one fax number. Complete — — — On (00:00) Off* Sets the time of day in 24-hour format that the delayed faxes will be sent. On Combines delayed faxes to the same fax number at the same time of day into one transmission. On Combines delayed faxes to the same fax number at the same time of day into one transmission. On You can send a fax without using the memory. On Sets up your machine with an document to be retrieved by another fax machine. On Sets up your machine to poll another fax machine. On Sets up your machine to poll another fax machine. On Sets up your machine to poll another fax machine. Adjust the scan area of the scanner glass to the size of the document. Yes You can save your fax settings.

Scan (😩)

Level1	Option1	Option2	Option3	Descriptions	Page
Scan to E-mail	_	_	_	You can scan a black & white or a color document into your E-mail application.	See Software User's
Scan to Image	_	_	_	You can scan a color picture into your graphics application.	Guide on the CD-ROM.
Scan to OCR	_	_	_	You can have your text document converted to an editable text file.	
Scan to File	_	_	_	You can scan a black & white or a color document into your computer.	
Scan to Media (when a memory card or USB Flash memory drive is inserted)	Quality	_	Color 150 dpi* Color 300 dpi Color 600 dpi B/W 200x100 dpi B/W 200 dpi	You can choose the scan resolution, file format and enter a file name for your document.	104
	File Type	_	(If you chose color option in Quality setting) PDF* JPEG (If you chose B&W option in Quality setting) PDF* TIFF		
	File Name	_	_	You can rename the file.	105
	Set New Default	Yes	_	You can save your scan settings as the default settings.	105
	Factory Reset	Yes	_	You can restore all settings to the original factory default settings.	105
	The factory settings	are shown in Bold v	vith an asterisk.		

Copy ()

Level1	Level2	Level3	Options	Descriptions	Page
Quality	_	_	Fast	Choose the Copy resolution	79
			Normal*	for your type of document.	
			Best		
Enlarge/Reduce	100%	_	_	_	80
	Enlarge	_	104% EXE→LTR	You can choose the	80
			186% 4"x6"→LTR	enlargement ratio for your type of document.	
			198% 4"x6"→A4		
	Reduce	_	46% LTR→4"x6"	You can choose the	80
			78% LGL→LTR	reduction ratio for your type of document.	
			83% LGL→A4		
			93% A4→LTR		
			97% LTR→A4		
	Fit to Page	_	_	Your machine will adjust the size automatically to the	80
				paper size you set.	
	Custom(25-400%)	_	_	You can enter an	80
				enlargement or reduction ratio.	
Paper Type	_	_	Plain Paper*	Choose the paper type that	82
			Inkjet Paper	matches the paper in the tray.	
			Brother BP71		
			Other Glossy		
			Transparency		
Paper Size	_	_	Letter*	Choose the paper size that	83
			Legal	matches the paper in the tray.	
			A4	udy.	
			A5		
			4"x 6"		
Brightness	_	_	Light	Adjusts the brightness of	82
			Light +2	copies.	
			0		
			-1		
			-2 Dark		
Contrast	_	_	+2	Adjusts the contrast of	82
			+1	copies.	
			0		
			-1 -2		
	The factory setting	l s are shown in Bold			

Level1	Level2	Level3	Options	Descriptions	Page
Stack/Sort	_	_	Stack*	You can choose to stack or	82
			Sort	sort multiple copies.	
Page Layout	_	Off(1 in 1)*	_	You can make N in 1 or	80
		2 in 1 (P)		Poster copies.	
		2 in 1 (L)			
		4 in 1 (P)			
		4 in 1 (L)			
		Poster(3x3)			
Book Copy	On	_	_	Corrects dark borders and skew when copying from the scanner glass.	83
	On(Preview)	Skew Adjustment	_		
		Shadow Revise	_		
	Off*	_	_		
Watermark Copy	Watermark Copy	On	(If you choose on,	You can place a logo or text	84
		Off*	see the watermark copy	into your document as a Watermark.	
	Current Setting	_	settings in the following table.)	waternark.	
	Exit	_	_		
Set New Default	_	_	Yes	You can save your copy	85
			No	settings.	
Factory Reset	_	_	Yes	You can restore all settings	86
			No	to the factory settings.	
	The factory settings	s are shown in Bold	with an asterisk.		



Watermark Copy Settings

Option1	Option2	Option3	Option4	Descriptions	Page
emplate	_	Text	CONFIDENTIAL*	Uses a template to place	84
			DRAFT	text into your document as a Watermark.	
			COPY		
		Position	А		
			В		
			С		
			D		
			E*		
			F		
			G		
			Н		
			I		
			Pattern		
		Size	Small	-	
			Medium*		
			Large		
		Angle	-90°	-	
			-45°*		
			0°		
			45°		
			90°		
		Transparency	-2	-	
			-1		
			0*		
			+1		
			+2		
		Color	Red	-	
			Orange		
			Yellow		
			Blue		
			Green		
			Purple		
			Black*		
		Apply	_	-	

Option1	Option2	Option3	Option4	Descriptions	Page
Media	(Select image	Position	А	Places a logo or text into	84
	from media)		В	your document as a Watermark using an image	
			С	from removable media.	
			D		
			E*		
			F		
			G		
			Н		
			I		
			Pattern		
		Size	Small	1	
			Medium*		
			Large		
		Angle	-90°		
			-45°*		
			0°		
			45°		
			90°		
		Transparency	-2		
			-1		
			0*		
			+1		
			+2		
		Apply	_		
Scan	(Set watermark	Transparency	-2	You can choose the level of	85
	document and press Start .)		-1	transparency of the watermark as you scan it	
	[0*	from a paper document.	
			+1		
			+2		
		Apply	_]	
	The factory setting	gs are shown in Bold	with an asterisk.		

PhotoCapture ()



Level1	Level2	Level3	Options	Descriptions	Page
View Photo(s)	_	_	See the print settings in the following table.	You can preview your photos on the LCD.	91
Print Index	_	Layout Format	<pre>6 Images/Line* 5 Images/Line</pre>	You can print a thumbnail page.	92
		Paper Type	Plain Paper*		
			Inkjet Paper		
			Brother BP71		
			Other Glossy		
		Paper Size	Letter*		
			A4		
Print Photos	_	_	See the print settings in the following table.	You can print an individual image.	92
Enhance Photos	Auto Correct	_		You can adjust your photos	93
	Enhance Skin- Tone			with these settings.	
	Enhance Scenery				
	Remove Red-Eye				
	Monochrome				
	Sepia				
Search by Date	_	_	_	You can search your photos from date.	96
Print All Photos	_	_	See the print settings in the following table.	You can print all photos in your memory card or USB Flash memory drive.	97
Slide Show	_	_	_	The machine starts a slide show of your photos.	97
Trimming	_	_	_	You can trim your photo and print a part of the image.	98
	The factory settings	s are shown in Bold	with an asterisk.		•

Print Settings

Option1	Option2	Option3	Option4	Descriptions	Page
Print Quality	Normal	_	_	Choose the print quality.	100
(Does not appear when DPOF Print is chosen.)	Photo*				
Paper Type	Plain Paper	_	_	Choose the paper type.	100
	Inkjet Paper				
	Brother BP71				
	Other Glossy*				
Paper Size	4"x 6"*	(When A4 or	_	Choose the paper and print	100
	5"x 7"	Letter is chosen)		size.	
	Letter	3"x 4"			
	A4	3.5"x 5"			
		4"x 6"			
		5"x 7"			
		6"x 8"			
		Max. Size*			
Brightness	Light +2	_	_	Adjusts the brightness.	101
(Does not appear when Enhance Photos is chosen.)	+2 +1 +1 +1 +1 +1 +1 +1 +1 +1 +1 +1 +1 +1				
Contrast	+2	_	_	Adjusts the contrast.	101
(Does not appear when Enhance Photos is chosen.)	+1 · · · · · · · · · · · · · · · · · · ·				
True2Life	On	White Balance	+2	Adjusts the hue of the white	101
(Does not appear when Enhance Photos is chosen.)	Off*		+1	areas.	
		Sharpness	+2 ' · · · · · · · · · · · · · · · · · ·	Enhances the detail of the image.	
		Color Density	+2 · · · · · · · · · · · · · · · · · · ·	Adjusts the total amount of color in the image.	

Option1	Option2	Option3	Option4	Descriptions	Page
Cropping	On*	_	_	Crops the image around the margin to fit the paper size or print size. Turn this feature off if you want to print whole images or prevent unwanted cropping.	102
Borderless	On*	_	_	Expands the printable area to fit the edges of the paper.	102
Print Date (Does not appear when DPOF Print is chosen.)	On Off*	_	_	Prints the date on your photo.	102
Set New Default	_	_	Yes No	You can save your print settings.	103
Factory Reset	_	_	Yes No	You can restore all the settings to factory settings.	103
	The factory settings	s are shown in Bold	with an asterisk.		



Level1	Level2	Level3	Options	Descriptions	Page
Search	_	_	Alphabetical Order Numerical Order	You can set up dial by pressing only a few keys (and Start).	64
Set Speed Dial	_	_	_	You can set up Speed Dial numbers, so you can dial by pressing only a few keys (and Start).	66
Setup Groups	_	_	_	You can set up a Group number Broadcasting.	69
	The factory settings	s are shown in Bold	with an asterisk.		

Entering Text

When you are setting certain menu selections, such as the Station ID, you may need to enter text into the machine. Most dial pad keys have three or four letters printed on keys. The keys for **0**, **#** and * do not have printed letters because they are used for special characters.

By pressing the proper dial pad key repeatedly, you can access the character you want.

Press Key	one time	two times	three times	four times
2	Α	В	С	2
3	D	Е	F	3
4	G	Н	I	4
5	J	K	L	5
6	M	N	Ο	6
7	Р	Q	R	S
8	Т	U	V	8
9	W	Χ	Υ	Z

Inserting spaces

To enter a space in a fax number, press ▶ once between numbers. To enter a space in a name, press ▶ twice between characters.

Making corrections

If you entered an incorrect letter and want to change it, press ◀ to move the cursor under the incorrect character. Then press Clear/Back. Re-enter the correct character. You can also back up and insert letters.

Repeating letters

If you need to enter a letter that is on the same key as the letter before, press ▶ to move the cursor to the right before you press the key again.

Special characters and symbols

Press *, # or 0, repeatedly until you see the special character or symbol you want.

Press * for (space)!"#\$% &'()*+,-./€

Press # for :;<=>?@[]^_

Press 0 for USA: ÀÁÉÓÍÚÑÜ0

Canada: ÉÀÈÎÇËÖ0

D

Specifications

General

Printer Type Inkjet

Print Method Black: Piezo with 94 × 1 nozzle

Color: Piezo with 94×3 nozzles

Memory Capacity 40 MB


LCD (liquid crystal display) Wide 3.3 in. (83.8 mm) Color LCD ¹

Power Source AC 100 to 120 V 50/60 Hz

Power Consumption Off Mode: Average 0.7 W

Sleep Mode: Average 4 W
Standby: Average 5.5 W
Operating: Average 27 W

Dimensions

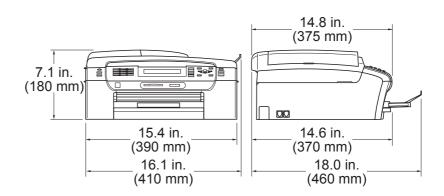

Measured diagonally

Weight 17.9 lb (8.1 kg)
Noise Operating: 50 dB or less ¹

Temperature Operating: 50° F to 95° F (10 to 35° C)

Best Print Quality: 68° F to 91° F (20 to 33° C)

Humidity Operating: 20 to 80% (without condensation)

Best Print Quality: 20 to 80% (without condensation)

ADF (automatic document

feeder)

For best results we recommend:

Up to 15 pages

Temperature: 68° F - 86° F (20° C - 30° C)

Humidity: 50% - 70%

Paper: 20 lb (80 g/m²) A4 or Letter size

Paper Tray 100 Sheets 20 lb (80 g/m²)

¹ This depends on printing conditions.

Print media

Paper Input

Paper Tray

■ Paper type:

Plain paper, inkjet paper (coated paper), glossy photo paper ², transparencies ^{1 2} and envelopes

■ Paper size:

Letter, Legal, Executive, A4, A5, A6, JIS B5, envelopes (commercial No.10, DL, C5, Monarch, JE4),

Photo 2L 5"×7", Index card and Post card ³.

Width: 3.5 in. (89 mm) - 8.5 in. (215.9 mm)

Length: 5.0 in. (127 mm) - 14 in. (355.6 mm)

For more details, see *Paper weight, thickness and capacity* on page 19.

Maximum paper tray capacity:

Approx. 100 sheets of 20 lb (80 g/m²) plain paper

Photo Bypass Tray (USA)

Photo Paper Tray (Canada)

■ Paper type:

Plain paper, inkjet paper (coated paper) and glossy paper ²

■ Paper size:

Photo 4×6 in. and Photo L 3.5×5 in.

Width: 3.5 in. (89 mm) - 4.0 in. (101.6 mm)

Height: 5.0 in. (127 mm) - 6.0 in. (152.4 mm)

Maximum paper tray capacity:

Up to 20 sheets

Paper Output

Up to 50 sheets of 20 lb (80 g/m 2) plain paper (face up print delivery to the output paper tray) 2

Use only transparencies recommended for inkjet printing.

For glossy photo paper or transparencies, we recommend removing printed pages from the output paper tray immediately after they exit the machine to avoid smudging.

³ See Paper type and size for each operation on page 18.

Fax

CompatibilityITU-T Super Group 3Coding SystemMH/MR/MMR/JPEGModem SpeedAutomatic Fallback

33600 bps

Document Size ADF Width: 5.8 in. to 8.5 in. (148 mm to 215.9 mm)

ADF Length: 5.8 in. to 14 in. (148 mm to 355.6 mm)

Scanner Glass Width: Max. 8.5 in. (215.9 mm)
Scanner Glass Length: Max. 11.7 in. (297 mm)

Scanning Width 8.2 in. (208 mm) (Letter)

Printing Width 8.03 in. (204 mm)

Gray Scale 256 levels

Polling Types Standard, Sequential: (Black only)

Contrast Control Automatic/Light/Dark

(manual setting)

Resolution ■ Horizontal 203 dot/in. (8 dot/mm)

■ Vertical

Standard

98 line/in. (3.85 line/mm) (Black) 196 line/in. (7.7 line/mm) (Color)

Fine

196 line/in. (7.7 line/mm) (Black/Color)

Photo

196 line/in. (7.7 line/mm) (Black)

Superfine

392 line/in. (15.4 line/mm) (Black)

Speed Dial 100 stations \times 2 numbers

Groups Up to 6

Broadcasting ³ 250 stations

Automatic Redial 1 time after 5 minutes

Ring Delay 0, 1, 2, 3 or 4 rings

Communication Source Public switched telephone network.

Memory Transmission Up to 480 ¹/400 ² pages
Out of Paper Reception Up to 480 ¹/400 ² pages

- ¹ 'Pages' refers to the 'Brother Standard Chart No. 1' (a typical business letter, Standard resolution, MMR code). Specifications and printed materials are subject to change without prior notice.
- ² 'Pages' refers to the 'ITU-T Test Chart #1' (a typical business letter, Standard resolution, MMR code). Specifications and printed materials are subject to change without prior notice.
- Black & White only

D

Copy

Enlarge/Reduce

Resolution

Color/Black Yes/Yes

Document Size ADF Width: 5.8 in. to 8.5 in. (148 mm to 215.9 mm)

ADF Length: 5.8 in. to 14 in. (148 mm to 355.6 mm)

Scanner Glass Width: Max. 8.5 in. (215.9 mm)
Scanner Glass Length: Max. 11.7 in. (297 mm)

Copy Width: Max. 8.26 in. (210 mm)

Multiple Copies Stacks/Sorts up to 99 pages

25% to 400% (in increments of 1%)

(Black)

■ Scans up to 1200×1200 dpi

■ Prints up to 1200×1200 dpi

(Color)

■ Scans up to 600×1200 dpi

■ Prints up to 600×1200 dpi

PhotoCapture Center®

Compatible Media ¹ CompactFlash[®]

(Type I only)

(Microdrive[™] is not compatible)

(Compact I/O cards such as Compact LAN card and

Compact Modem card are not supported.)

Memory Stick[®] Memory Stick Pro™

(Not available for music data with MagicGate™)

Memory Stick Duo™ with adapter Memory Stick Micro (M2) with adapter

SD² SDHC³

microSD with adapter miniSD™ with adapter xD-Picture Card™ ⁴

USB Flash memory drive 5

Resolution Up to $1200 \times 2400 \text{ dpi}$

File Extension

(Media Format) DPOF, EXIF, DCF (Image Format) Photo Print: JPEG ⁶

Scan to Media: JPEG, PDF (Color)

TIFF, PDF (Black)

Color Enhancement True2Life®

Photo Enhance Auto Correct, Enhance Skin-Tone, Enhance Scenery, Trimming,

Slide Show, Remove Red-Eye, Monochrome and Sepia

Number of Files Up to 999 files

(The folder inside memory cards or USB Flash memory drive

is also counted)

Folder File must be stored in the 4th folder level of the memory card

or USB Flash memory drive.

Borderless Letter, A4, Photo $4'' \times 6''$, Photo $2L 5'' \times 7''^{7}$

- Memory cards, adapters and USB Flash memory drive are not included.
- ² 16MB to 2GB
- 3 4GB to 8GB
- 4 xD-Picture Card™ Conventional Card from 16MB to 512MB

xD-Picture Card™ Type M from 256MB to 2GB xD-Picture Card™ Type M⁺ 1GB and 2GB xD-Picture Card™ Type H from 256MB to 2GB

5 USB 2.0 Standard

USB Mass Storage standard from 16 MB to 8 GB

Support format: FAT12/FAT16/FAT32

- 6 Progressive JPEG format is not supported.
- See Paper type and size for each operation on page 18.

PictBridge

Compatibility Supports the Camera & Imaging Products Association

PictBridge standard CIPA DC-001.

VIsit http://www.cipa.jp/pictbridge for more information.

Interface USB direct interface

Scanner

Color/Black Yes/Yes

TWAIN Compliant Yes (Windows® 2000 Professional/XP/XP Professional x64

Edition/Windows Vista®)

Mac OS® X 10.2.4 or greater

WIA Compliant

Yes (Windows® XP ¹/Windows Vista®)

Color Depth 36 bit color Processing (Input)

24 bit color Processing (Output)

(Actual Input: 30 bit color/Actual Output: 24 bit color)

Resolution Up to 19200×19200 dpi (interpolated) ²

Up to 1200 × 2400 dpi (optical) (Scanner Glass)

Up to 1200×600 dpi (optical) (ADF)

Document Size ADF Width: 5.8 in. to 8.5 in. (148 mm to 215.9 mm)

ADF Length: 5.8 in. to 14 in. (148 mm to 355.6 mm)

Scanner Glass Width: Max. 8.5 in. (215.9 mm)

Scanner Glass Length: Max. 11.7 in. (297 mm)

Scanning Width Up to 8.26 in. (210 mm)

Gray Scale 256 levels

Windows® XP in this User's Guide includes Windows® XP Home Edition, Windows® XP Professional, and Windows® XP Professional x64 Edition.

Maximum 1200×1200 dpi scanning when using the WIA Driver for Windows[®] XP and Windows Vista[®] (resolution up to 19200×19200 dpi can be selected by using the Brother scanner utility)

Printer

Printer Driver Windows® 2000 Professional/XP/XP Professional x64

Edition/Windows Vista® driver supporting Brother

Native Compression mode

Mac OS® X 10.2.4 or greater: Brother Ink Driver

Resolution Up to $1200 \times 6000 \text{ dpi}$

 $1200 \times 2400 \text{ dpi}$ $1200 \times 1200 \text{ dpi}$ $600 \times 1200 \text{ dpi}$ $600 \times 300 \text{ dpi}$

600 × 150 dpi (Color)

450 × 150 dpi (Black & White)

Printing Width 8.26 in. [8.5 in. (borderless) ¹] ³

Borderless Letter, A4, A6, Photo 4"×6", Index Card,

Photo L 3.5"×5", Photo 2L 5"×7", Post Card ²

When you set the Borderless feature to On.

² See Paper type and size for each operation on page 18.

When printing on letter size paper.

Interfaces

USB ^{1 2} A USB 2.0 interface cable that is no longer than 6 feet (2.0 m).

LAN cable ³ Ethernet UTP cable category 5 or greater.

Wireless LAN Your machine supports IEEE 802.11b/g wireless communication

with your wireless LAN using Infrastructure mode or a wireless

Peer-to-Peer connection in Ad-hoc Mode.

Your machine has a USB 2.0 Hi-speed interface. The machine can also be connected to a computer that has a USB 1.1 interface.

- Third party USB ports are not supported for Macintosh[®].
- ³ See Network (LAN) on page 187 and the Network User's Guide for detailed network specifications.

Computer requirements

	SUPPORT	TED OPER	ATING SY	STEMS AND	SOFTWA	RE FUNC	TIONS	
Compute	er Platform &	Supported	D(:		Minimum	Recommended	Hard Disk Sp	ace to install
-	ng System ersion	PC Software Functions	Interface	Minimum Speed	RAM	RAM	For Drivers	For Applications
Windows [®] Operating	2000 Professional ⁵	Printing, PC Fax ⁴ ,	USB, 10/100	Intel [®] Pentium [®] II	64 MB	256 MB	110 MB	340 MB
System ¹	XP Home ^{2 5} XP Professional ^{2 5}	Scanning, Removable Disk	BaseTx (Ethernet), Wireless 802.11b/g	or equivalent	128 MB		110 MB	340 MB
	XP Professional x64 Edition ²			64-bit (Intel [®] 64 or AMD64) supported CPU	256 MB	512 MB	110 MB	340 MB
	Windows Vista ^{® 2}			Intel [®] Pentium [®] 4 or equivalent	512 MB	1 GB	600 MB	530 MB
				64-bit (Intel [®] 64 or AMD64) supported CPU				
Macintosh [®] Operating	Mac OS [®] X 10.2.4 - 10.4.3	Printing, PC Fax Send ⁴ ,	USB ³ , 10/100	PowerPC G4/G5	128 MB	256 MB	80 MB	400 MB
System ⁶		Scanning, Removable Disk	BaseTx (Ethernet), Wireless 802.11b/g	PowerPC G3 350MHz				
	Mac OS [®] X 10.4.4 or	Printing, PC Fax Send ⁴ ,	USB ³ , 10/100	PowerPC G4/G5	512 MB	1 GB		
	greater	Scanning, Removable Disk	BaseTx (Ethernet), Wireless 802.11b/g	Intel [®] Core™ Processor				

Conditions:

- ¹ Microsoft[®] Internet Explorer 5.5 or greater.
- For WIA, 1200 x 1200 resolution. Brother Scanner Utility enables to enhance up to 19200 x 19200 dpi.
- Third party USB ports are not supported.
- PC Fax supports black and white only.
- PaperPort[™] 11SE supports Microsoft[®] SP4 or higher for Windows[®] 2000 and SP2 or higher for XP.
- Presto!® PageManager® on the CD-ROM supports Mac OS® X 10.3.9 or higher. For Mac OS® X 10.2.4-10.3.8 Presto!® PageManager® is available as a download from the Brother Solutions Center.

For the latest driver updates, visit <u>www.brother.com</u>. All trademarks, brand and product names are property of their respective companies.

Consumable items

Ink The machine uses individual Black, Yellow, Cyan and Magenta ink

cartridges that are separate from the print head assembly.

Service Life of Ink

Cartridge

Starter ink cartridges are in the box. The first time you install the ink cartridges the machine will use extra ink to fill the ink delivery tubes.

This is a one-time process that enables high quality printing. Afterward, replacement ink cartridges will print the specified number of pages. Starter cartridge yield is approx. 65% of the yield

of the LC61 replacement cartridge.

Replacement Consumables

<Black> LC61BK, <Cyan> LC61C, <Magenta> LC61M,

<Yellow> LC61Y

Black - Approximately 450 pages ¹

Cyan, Magenta, Yellow - Approximately 325 pages 1

For more information about the replacement consumables, visit us at www.brother.com/pageyield.

What is Innobella™?

Innobella™ is a range of genuine consumables offered by Brother. The name "Innobella™" derives from the words "Innovation" and "Bella" (meaning "Beautiful" in Italian) and is a representation of the "innovative" technology providing you with "beautiful" and "long lasting" print results.



When you print photo images, Brother recommends Innobella™ glossy photo paper (BP71 series) for high quality. Brilliant prints are made easier with Innobella™ Ink and paper.

Approx. cartridge yield is declared in accordance with ISO/IEC 24711

Network (LAN)

LAN You can connect your machine to a network for Network Printing,

Network Scanning, PC Fax Send, PC Fax Receive (Windows[®] only) and Remote Setup ¹. Also included is Brother BRAdmin Light ²

Network Management software.

Support for Windows[®] 2000 Professional/XP/XP Professional x64

Edition/Windows Vista®

Mac OS® X 10.2.4 or greater

Ethernet 10/100 BASE-TX Auto Negotiation (Wired LAN)

IEEE 802.11 b/g (Wireless LAN)

Protocols TCP/IP: ARP, RARP, BOOTP, DHCP, APIPA

(Auto IP), NetBIOS/WINS, LPR/LPD,

Custom Raw Port/Port9100, DNS Resolver, mDNS, FTP Server, TELNET, SNMPv1, TFTP, Scanner Port, LLTD responder,

Web Services

Network Security SSID/ESSID, 128 (104) / 64 (40) bit WEP, WPA/WPA2-PSK

(TKIP/AES)

Setup Support Utility SecureEasySetup™ Yes (simple setup with your

SecureEasySetup™-capable access

point/router)

AOSS™ Yes (simple setup with your AOSS™-capable

access point/router)

WPS Yes (simple setup with your Wi-Fi Protected

Setup™-capable access point/router)

¹ See the Computer Requirements chart on page 185.

² If you require more advanced printer management, use the latest Brother BRAdmin Professional utility version that is available as a download from http://solutions.brother.com.

Wireless one-push configuration

If your wireless access point supports either SecureEasySetup™, Wi-Fi Protected Setup™ (PBC ¹) or AOSS™, you can configure the machine easily without a computer. By pushing a button on the wireless LAN router / access point and the machine, you can set up the wireless network and security settings. See the users guide for your wireless LAN router / access point for instructions on how to access one-push mode.

Push Button Configuration



Routers or access points that support SecureEasySetup™, Wi-Fi Protected Setup™ or AOSS™ have the symbols shown below.







Glossary

This is a comprehensive list of features and terms that appear in Brother manuals. Availability of these features depends on the model you purchased.

ADF (automatic document feeder)

The document can be placed in the ADF and scanned one page at a time automatically.

Auto Reduction

Reduces the size of incoming faxes.

Automatic Redial

A feature that enables your machine to redial the last fax number after five minutes if the fax did not go through because the line was busy.

Backup Print

Your machine prints a copy of every fax that is received and stored in memory. This is a safety feature so you will not lose messages during a power failure.

Batch Transmission

(Black & white faxes only) As a cost saving feature, all delayed faxes to the same fax number can be sent as one transmission.

Beeper Volume

Volume setting for the beep when you press a key or make an error.

Brightness

Changing the Brightness makes the whole image lighter or darker.

Broadcasting

The ability to send the same fax message to more than one location.

Caller ID

A service purchased from the telephone company that lets you see the number (or name) of the party calling you.

CNG tones

The special tones (beeps) sent by fax machines during automatic transmission to tell the receiving machine that a fax machine is calling.

Coding method

Method of coding the information contained in the document. All fax machines must use a minimum standard of Modified Huffman (MH). Your machine is capable of greater compression methods, Modified Read (MR), Modified Modified Read (MMR) and JPEG, if the receiving machine has the same capability.

Communication error (Comm. Error)

An error during fax sending or receiving, usually caused by line noise or static.

Compatibility group

The ability of one fax unit to communicate with another. Compatibility is assured between ITU-T Groups.

Contrast

Setting to compensate for dark or light documents, by making faxes or copies of dark documents lighter and light documents darker.

Delayed Fax

Sends your fax at a specified time later.

Distinctive Ring

A subscriber service purchased from the telephone company that gives you another telephone number on an existing telephone line. The Brother machine uses the new number to simulate a dedicated fax line.

Dual Access

Your machine can scan outgoing faxes or scheduled jobs into memory at the same time it is sending a fax from memory or receiving or printing an incoming fax.

Easy Receive

Enables your machine to respond to CNG tones if you interrupt a fax call by answering it.

ECM (Error Correction Mode)

Detects errors during fax transmission and resends the pages of the fax that had an error.

Extension telephone

A telephone using the same line as your fax but plugged into a separate wall jack.

External telephone

A telephone that is plugged into the EXT jack of your machine.

F/T Ring Time

The length of time that the Brother machine rings (when the Receive Mode setting is Fax/Tel) to notify you to pick up a voice call that it answered.

Fax Forwarding

Sends a fax received into the memory to another pre-programmed fax number.

Fax Journal

Lists information about the last 200 incoming and outgoing faxes. TX means Transmit. RX means Receive.

Fax Receive Code

Press this code (* **5 1**) when you answer a fax call on an extension or external telephone.

Fax Storage

You can store received faxes in memory.

Fax tones

The signals sent by sending and receiving fax machines while communicating information.

Fax/Tel

You can receive faxes and telephone calls. Do not use this mode if you are using a telephone answering device (TAD).

Fine resolution

Resolution is 203×196 dpi. It is used for small print and graphs.

Gray Scale

The shades of gray available for copying, scanning and faxing photographs.

Group number

A combination of Speed Dial numbers that are stored in a Speed Dial location for Broadcasting.

Help list

A printout of the complete Menu table that you can use to program your machine when you do not have the User's Guide with you.

Innobella™

Innobella™ is a range of genuine consumables offered by Brother. For best quality results Brother recommends Innobella™ Ink and Paper.

Journal Period

The pre-programmed time period between automatically printed Fax Journal Reports. You can print the Fax Journal on demand without interrupting the cycle.

LCD (liquid crystal display)

The display screen on the machine that shows interactive messages during On-Screen Programming and shows the date and time when the machine is idle.

Manual fax

You can lift the handset of the external telephone or you can press **Hook** to hear the receiving fax machine answer before you press **Black Start** or **Color Start** to begin sending.

Memory Receive

Receives faxes into the machine's memory when the machine is out of paper.

Menu mode

Programming mode for changing your machine's settings.

OCR (optical character recognition)

The bundled ScanSoft[®] PaperPort[®] SE with OCR or Presto![®] PageManager[®] software application converts an image of text to text you can edit.

Overseas Mode

Makes temporary changes to the fax tones to accommodate noise and static on overseas telephone lines.

Paging

This feature enables your machine to call your pager when a fax is received into its memory. The machine will also page for voice messages.

Pause

Allows you to place a 3.5 second delay in the dialing sequence while you are dialing using the dial pad or while you are storing Speed Dial numbers. Press

Redial/Pause as many times as needed for longer pauses.

PhotoCapture Center®

Allows you to print digital photos from your digital camera at high resolution for photo quality printing.

Photo resolution (B&W only)

A resolution setting that uses varying shades of gray for the best representation of photographs.

PictBridge

Allows you to print photos directly from your digital camera at high resolution for photo quality printing.

Polling

The process of a fax machine calling another fax machine to retrieve waiting fax messages.

Pulse (Canada only)

A form of rotary dialing on a telephone line.

Quick Dial List

A listing of names and numbers stored in Speed Dial memory, in numerical order.

Real Time Transmission

When memory is full, you can send faxes in real time.

Remaining jobs

You can check which jobs are waiting in memory and cancel jobs individually.

Remote Access Code

Your own four-digit code (---*) that allows you to call and access your machine from a remote location.

Remote Retrieval Access

The ability to access your machine remotely from a touch tone telephone.

Resolution

The number of vertical and horizontal lines per inch. See: Standard, Fine, Super Fine and Photo.

Ring Delay

The number of rings before the machine answers in Fax Only and Fax/Tel modes.

Ring Volume

Volume setting for the machine's ring.

Scanning

The process of sending an electronic image of a paper document into your computer.

Scan to Media

You can scan a black & white or color document into a memory card or USB Flash memory drive. Black & white images can be in TIFF or PDF file format and color images can be in PDF or JPEG file format.

Search

An electronic, numerical or alphabetical listing of stored Speed Dial and Group numbers.

Speed Dial

A pre-programmed number for easy dialing. You must press (Speed Dial), the two digit code, and Black Start or Color Start to start the dialing process.

Standard resolution

 203×97 dpi. It is used for regular size text and quickest transmission.

Station ID

The stored information that appears on the top of faxed pages. It includes the sender's name and fax number.

Super Fine resolution (B&W)

 392×203 dpi. Best for very small print and line art.

TAD (telephone answering device)

You can connect an external device or answering machine to the EXT. jack of your machine.

Telephone Answer Code (For Fax/Tel mode only)

When the machine answers a voice call, it pseudo/double-rings. You can pick up at an extension telephone by pressing this code (# 5 1).

Temporary settings

You can choose certain options for each fax transmission and copy without changing the default settings.

Tone

A form of dialing on the telephone line used for Touch Tone telephones.

Transmission

The process of sending faxes over the phone lines from your machine to the receiving fax machine.

Transmission Verification Report

A listing for the last fax sent, that shows its date, time and number.

True2Life®

Adjusts the color in the image for better print quality by improving sharpness, white balance and color density.

User Settings

A printed report that shows the current settings of the machine.

Index

A
Access codes, storing and dialing
В
Broadcasting
warranties iii, iv, v
Caller ID
Fax Forwarding
paper pick-up roller

Connecting	
external TAD	
(answering machine)58,	59
external telephone	
two-line external TAD or telephone	
Consumable items1	
Control panel overview	
ControlCenter	
See Software User's Guide on the	
CD-ROM	
Сору	
book	83
brightness	
contrast	
enlarge/reduce	
enter Copy mode	
multiple	
out of memory	
page layout (N in 1)	
paper size	
paper type	
quality	
return to factory settings	
set new default	
single	78
sort (ADF only)	
using ADF20,	82
using scanner glass	
Watermark	84
using a media card	84
using a paper document	85
using a template	84
using a USB Flash memory drive	84
Cordless telephone (non-Brother)	63
Custom Ringing	
Custom telephone features on a single	
line 1	3

D

Data Ident-A-Call Dialing	55
a pause	66
access codes and credit card	
numbers	71
Caller ID history	
Groups	
manual	
Outgoing Call	
Speed Dial	64
Direct printing	
from a non-PictBridge camera	
from a PictBridge camera	
Distinctive Ring	55
setting ring pattern	56
turning off	57
Document	
loading2	20. 21
Dual Access	
E	
Easy Possivo	11
Easy Receive	
Envelopes11, 12, 1	8, 19
Envelopes 11, 12, 1 Error messages on LCD	8, 19 135
Envelopes	8, 19 135 135
Envelopes	8, 19 135 135 136
Envelopes	8, 19 135 135 136
Envelopes	8, 19 135 135 136 136
Envelopes	8, 19 135 136 136 136 137
Envelopes	8, 19 135 136 136 136 137
Envelopes	8, 19 135 136 136 136 137
Envelopes	8, 19 135 136 136 136 137 137
Envelopes	8, 19 135 136 136 136 137 137 138
Envelopes	8, 19 135 136 136 136 137 137 138 138
Envelopes	8, 19 135 136 136 136 137 137 138 138
Envelopes	8, 19 135 136 136 136 137 137 138 138 138
Envelopes	8, 19135136136137137138 ., 138138138
Envelopes	8, 19 135 136 136 136 137 137 138 138 138 139 139
Envelopes	8, 19135136136136137137138138138139139139
Envelopes	8, 19135136136137137138 ., 138138139139139

F

Fax codes	
changing50,	63
Fax Receive Code44, 62,	63
Remote Access Code	50
Telephone Answer Code62,	63
using	
Fax Forwarding	
changing remotely51,	52
programming a number	
Fax Storage	
printing from memory	
turning off	
turning on	
Fax, from PC	
See Software User's Guide on the	
CD-ROM	
Fax, stand-alone	
receiving	40
at end of conversation42,	
difficulties127,	
Easy Receive	
F/T Ring Time, setting	
Fax Forwarding	
from extension telephone62,	
from external telephone	
into PC	
into the memory	
out of paper reception	
Paging	
printing from memory	
reducing to fit on paper	
retrieving from a remote site51,	
Ring Delay, setting	
telephone line interference	
sending32,	
at end of conversation	
Broadcasting	
canceling from memory	
color fax	
contrast	
delayed batch transmission	
delayed faxdelayed fax	
enter Fax mode	
from ADF	
from memory (Dual Access)	
from scanner glass	
manual	
a.iaai	

overseas	37	L	
Real Time Transmission	37		
Resolution	36	LCD (liquid crystal display)	7, 155
return to factory setting	39	Brightness	
set new default		Contrast	
telephone line interference		Dim Timer	
Fax/Tel mode		Help List	
answering at extension		1.0.p =100	
telephones	62, 63	M	
Fax Receive Code		ivi	
Ring Delay		Macintosh [®]	
Telephone Answer Code		See Software User's Guide on	the
FCC notices		CD-ROM	
1 00 11011003	12 1	Maintenance, routine	
G		•	115
G		replacing ink cartridges	143
Gray scale	177 100	Manual	6.4
Gray scale		dialing	
Groups for Broadcasting	9	receive	
		transmission	
Н		Memory Storage	
		Menu Table	155
Help	, - -	Mode, entering	
LCD messages		Copy	
using Mode and menu keys		Fax	
Menu Table	-	PhotoCapture	6, 91
Hook key	6	Scan	
_		Multi-line connections (PBX)	61
		N	
ldent-A-Call	55		
Ident-A-Ring	55	Network	
lnk cartridges		Printing	
checking ink volume	152	See Network User's Guide or	n the
ink dot counter	145	CD-ROM	
replacing	145	Scanning	
Innobella™		See Software User's Guide o	n the
		CD-ROM	
J		02	
		0	
Jacks		<u> </u>	
Convert to RJ11 jack triplex adap	iter 60	On/Off key	23
EXT		On/Off setting	
External telephone	62		
TAD		Out of Area (Caller ID)	57
	0 1		
Jams	111		
document			
paper	142		

P	Scan to memory card103
	Scan to USB flash memory 103
Packing the machine152	SD88
Paging45	SDHC88
Paper 16, 176	Search by Date96
capacity19	Slide-Show97
loading9, 11	specifications180
loading envelopes and post card11	Trimming98
loading photo paper13	xD-Picture Card™88
printable area15	PictBridge
size25	DPOF Printing108
size of document20	Power failure155
type18, 24	Presto!® PageManager®
PaperPort™ 11SE with OCR	See Help in Presto!® PageManager®
See Software User's Guide on the	application
CD-ROM and Help in the PaperPort™	Print
11SE application to access	checking alignment 151
How-to-Guides.	checking quality150
Personalized Ring55	difficulties127, 129
Photo Bypass Tray (USA)13	drivers
Photo Paper Tray (Canada)13	fax from memory49
PhotoCapture Center®	printable area15
Borderless102	report
CompactFlash®88	resolution
Cropping102	specifications
DPOF printing98	Printing
from PC	on small paper14
See Software User's Guide on the	See Software User's Guide on the
CD-ROM	CD-ROM.
Memory Stick Pro™88	Programming your machine
Memory Stick [®] 88	
Photo Effects	Q
Auto Correct93	
Enhance Scenery94	Quick Dial
Enhance Skin-Tone94	Access codes and credit card
Monochrome95	numbers71
Remove Red-Eye95	Broadcasting34
Sepia96	using Groups34
Preview photos91	Group dial
Print settings	changing67, 68
Brightness101	setting up Groups for Broadcasting 69
Contrast101	Search
Paper type & size100	Speed Dial
Quality	changing67, 68
Return to factory setting103	setting up by 2-digit location
Set new default103	setting up from Caller ID history 67
Printing	setting up from outgoing calls 67
all photos97	using64
index92	45mg07

photos92

R Smart Ring 55 Speed Dial Receive Mode changing67, 68 External TAD40 setting up 66 Fax Only40 using 64 Fax/Tel40 Manual40 Redial/Pause65 Reducing TAD (telephone answering device), copies80 external40, 58, 61 incoming faxes49 Remote Retrieval50 connecting58, 59 receive mode40 access code50 recording OGM60 commands51 with two-line jack61 getting your faxes52 Teen Ring 55 Remote Setup Telephone line See Software User's Guide on the connections59 CD-ROM. Reports72 interference 134 Caller ID History Report73 multi-line (PBX)61 Fax Journal73 Journal Period72 two-line telephone system 60 Help List73 how to print74 special characters 173 Network Configuration73 Transferring your faxes or Fax Journal Quick Dial List73 report 140 User Settings73 Troubleshooting 127 Resolution checking ink volume 152 copy179 document jam 141 fax177 error messages on LCD 135 print183 if you are having difficulty scan182 copying 131 setting for next fax36 incoming calls131 Ring Delay, setting43 Network 133 RingMaster55 PhotoCapture Center® 132 S printing 127 printing received faxes 129 Safety Instructions 115, 120 receiving faxes 130 Scannable area22 scanning 132 Scanning See Software User's Guide on the software 132 paper jam142 CD-ROM. Two-line telephone system 60 Serial Number TX Lock how to find...... See inside front cover turning on/off30 Shipping the machine152 SimpleBiz Fax & Alternative Number Ringing55

V

Voice Mail	54
Volume, setting beeper	25
ring	
speaker	
W	
Warranties	iii
Canada	vi
Notice-Disclaimer	iii
USA	
Windows®	
See Software User's Guide on the CD-ROM.	
Wireless Network	
See Quick Setup Guide and Netwo	ork
User's Guide on the CD-ROM	
World Wide Web	i

EQUIPMENT ATTACHMENT LIMITATIONS (Canada only)

NOTICE

This product meets the applicable Industry Canada technical specifications.

NOTICE

The Ringer Equivalence Number is an indication of the maximum number of devices allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the RENs of all the devices does not exceed five.

Brother International Corporation 100 Somerset Corporate Boulevard P.O. Box 6911 Bridgewater, NJ 08807-0911 USA

Brother International Corporation (Canada) Ltd. 1 rue Hôtel de Ville, Dollard-des-Ormeaux, QC, Canada H9B 3H6



Visit us on the World Wide Web http://www.brother.com

These machines are made for use in the USA and Canada only. We cannot recommend using them overseas because it may violate the Telecommunications Regulations of that country and the power requirements of your multi-function center may not be compatible with the power available in foreign countries. **Using USA or Canada models overseas is at your own risk and may void your warranty**.