


# 2020 SENTRA

QUICK REFERENCE GUIDE




# COCKPIT OVERVIEW

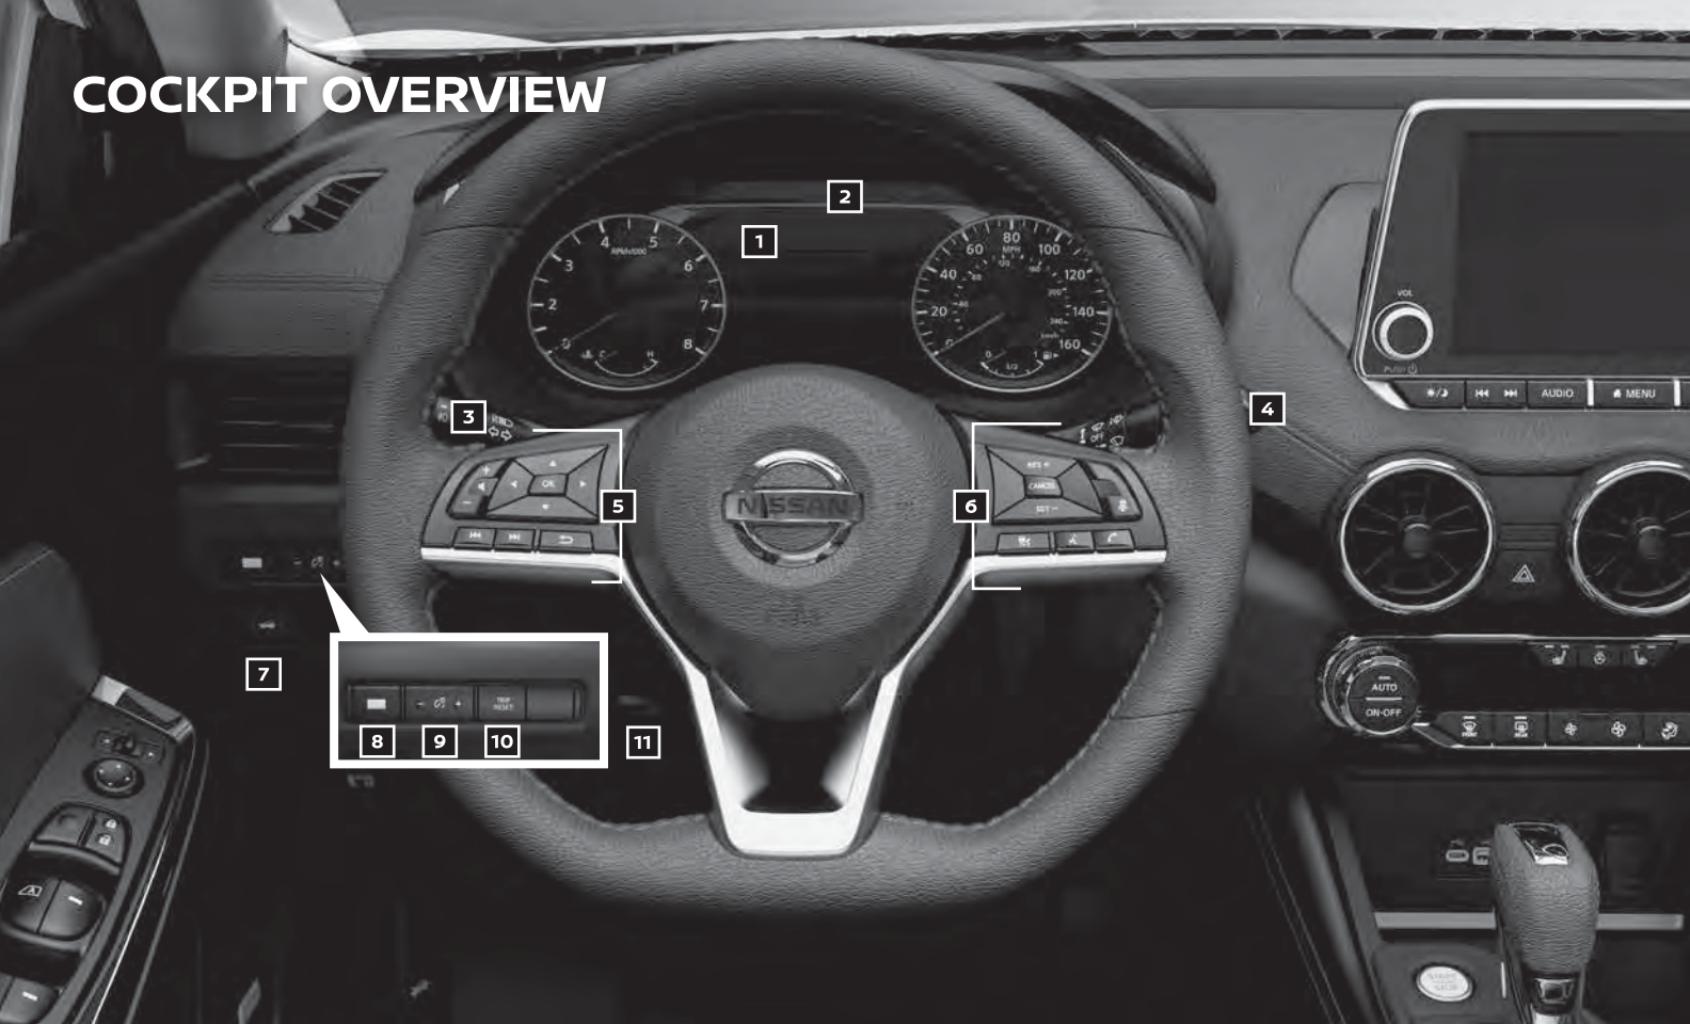

# COCKPIT OVERVIEW

- 1** Vehicle Information Display
- 2** Low Tire Pressure Warning Light (!
- 3** Headlight and Turn Signal Switch
- 4** Wiper and Washer Switch
- 5** Steering Wheel Switches for Audio/ Vehicle Information Display
- 6** Cruise Control and Bluetooth® Switches
- 7** Trunk Release Switch 
- 8** ECO Mode Switch
- 9** Instrument Brightness Control
- 10** Trip Computer Reset Switch
- 11** Tilt/Telescopic Steering Column

# INSTRUMENT PANEL

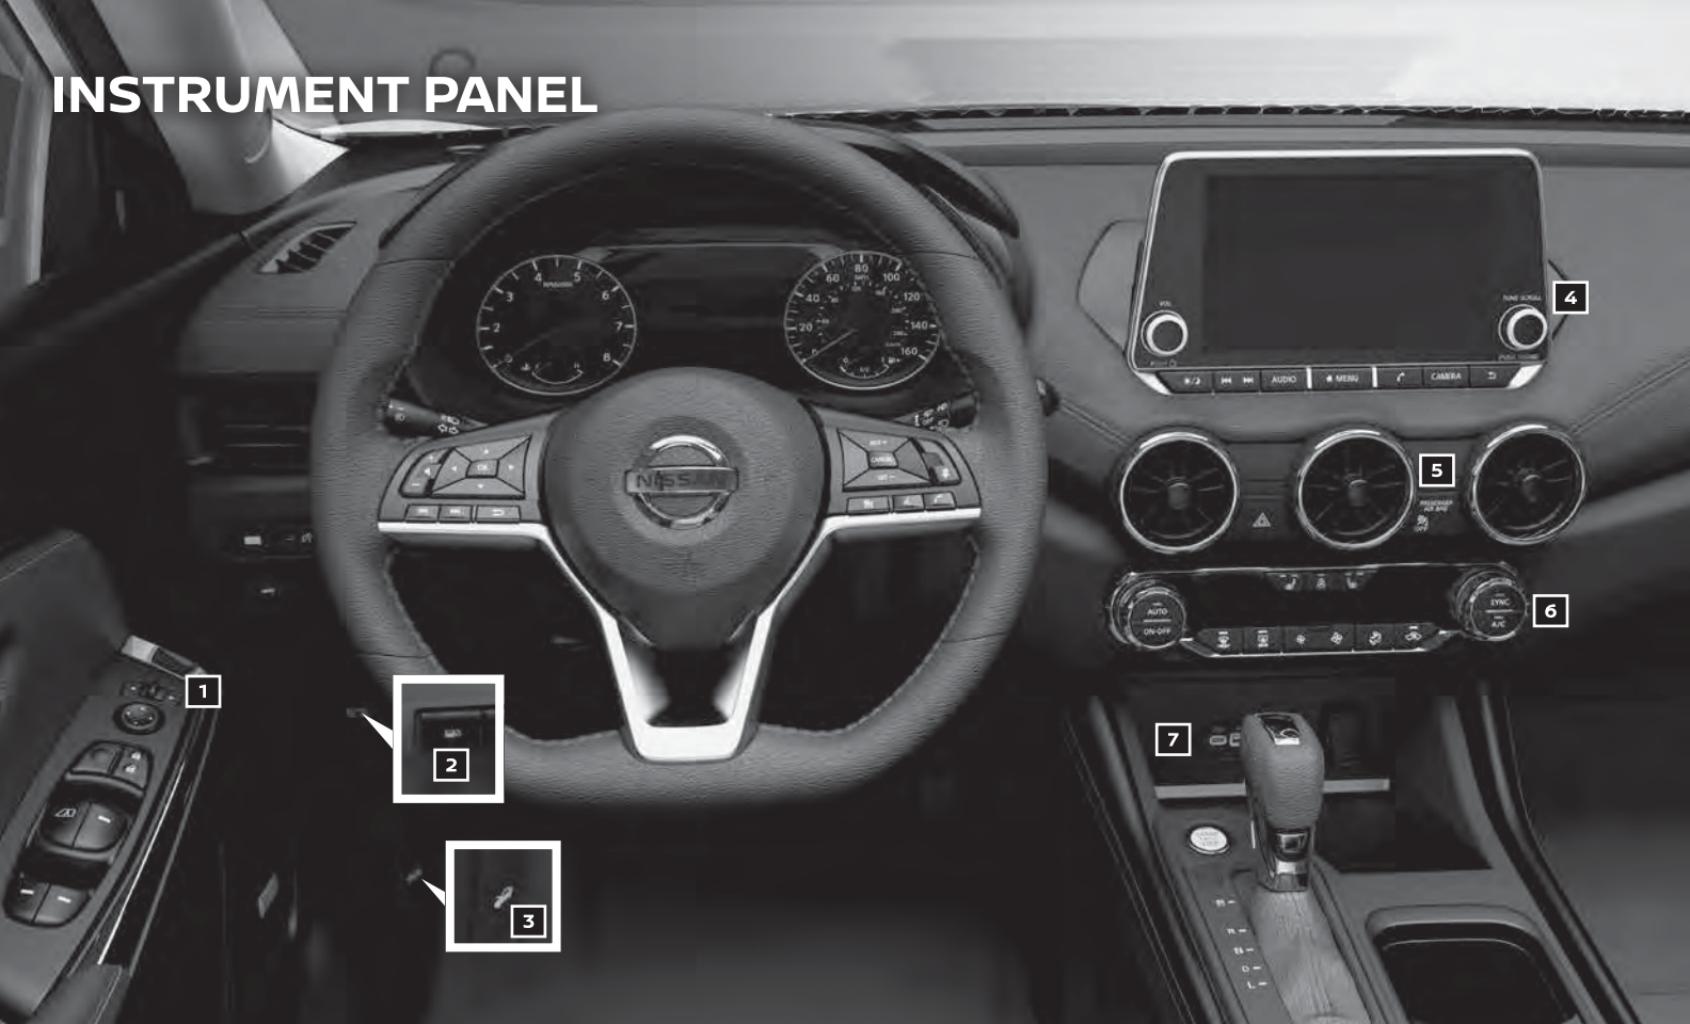

# INSTRUMENT PANEL

- 1** Power Mirror Switch
- 2** Fuel-filler Door Release
- 3** Hood Release
- 4** Audio System
- 5** Front Passenger Air Bag Status Light
- 6** Heater and Air Conditioner (automatic)
- 7** USB Port/AUX Jack

# TABLE OF CONTENTS

## GETTING STARTED

Nissan Intelligent Key® System .....	2
Front Power Seat Adjustments (if so equipped for driver's seat) .....	4
Starting/Stopping the Engine .....	4
Outside Mirror Control Switch .....	4
HomeLink® Universal Transceiver (if so equipped) .....	5
E-Call (SOS) Button (if so equipped) .....	6
Heater and Air Conditioner (automatic) (if so equipped) .....	6
Headlight Control Switch .....	7
Wiper and Washer Switch .....	8
Vehicle Information Display .....	9
Tire Pressure Monitoring System (TPMS) with Easy-Fill Tire Alert .....	10
Loose Fuel Cap .....	11
Fuel-filler Door .....	12
Trunk Lid Release Switch .....	12

## AUDIO AND BLUETOOTH® SYSTEMS

Clock Set/Adjustment .....	13
USB (Universal Serial Bus) Connection Port/AUX Jack and iPod® Interface .....	13
Bluetooth® Hands-free Phone System .....	13
• System Operating Tips .....	13
FM/AM/SiriusXM® Radio (if so equipped) .....	15
Apple CarPlay® (if so equipped) .....	16
Android Auto™ (if so equipped) .....	17
Hands-free Text Messaging Assistant .....	18
Bluetooth® Streaming Audio .....	19
Siri® Eyes Free (if so equipped) .....	19
NissanConnect® Services Powered by SiriusXM® (if so equipped) .....	20

## DRIVING FEATURES

Blind Spot Warning (BSW) with Rear Cross Traffic Alert (RCTA) .....	21
Intelligent Cruise Control (ICC) (if so equipped) .....	21
Cruise Control (if so equipped) .....	22
Automatic Emergency Braking (AEB) with Pedestrian Detection System .....	23
RearView Monitor .....	23
Drive Modes .....	24



Additional information about your vehicle is also available in your Owner's Manual, NissanConnect® Owner's Manual and at [www.NissanUSA.com](http://www.NissanUSA.com).



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)", the "Monitor, climate, audio, phone and voice recognition systems (section 4)" and the "Starting and driving (section 5)" of your Owner's Manual.

# GETTING STARTED

## NISSAN INTELLIGENT KEY® SYSTEM

The Nissan Intelligent Key® system allows you to lock or unlock your vehicle, open your trunk and remotely start the engine. It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

REMOTE ENGINE START WITH INTELLIGENT CLIMATE CONTROL\*  
(if so equipped)



- The Remote Engine Start operating range is approximately 200 ft (60 m) from the vehicle. The Remote Engine Start feature will not operate if the Intelligent Key is inside the vehicle. The effective operating range may be shorter if there are walls or other obstructions between the key and the vehicle.
- For Remote Engine Start to function, the vehicle must be in the **P (PARK)** position with the ignition off and all of the doors must be closed and locked. Please see your Owner's Manual for additional information.
- To start your vehicle remotely:
  1. Press the **lock** button **1**.
  2. Within 5 seconds, press and hold the engine start **Q** button **2** for at least 2 seconds.
- The engine will start, and the parking lights will turn on.
- Automatic climate control will begin heating or cooling the vehicle depending on the outside temperature.
- The engine will run for 10 minutes and then turn off.
  - You must wait at least 6 seconds before remotely starting the engine again.
- Repeat steps 1 and 2 to extend the time for an additional 10-minute period.
  - After two Remote Engine Starts, the ignition switch must be cycled before Remote Engine Start can be used again.
- To start driving, depress the brake pedal and push the ignition switch.

### LOCKING AND UNLOCKING THE VEHICLE

- The lock and unlock operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, push either door handle request switch **3** once or press the **lock** button **1** on the key fob.



- To unlock the vehicle, perform one of the following procedures:
  - Push either door handle request switch **3** once; the corresponding door will unlock. Push the door handle request switch **3** again within 60 seconds; all other doors will unlock, or
  - Press the **2** button **4** on the key fob to unlock the driver's side door. Press the **2** button **4** again; all other doors will unlock.

#### TRUNK LID RELEASE

- To open the trunk, press and hold the trunk lid release  button **5** for more than 1 second.
- The trunk lid release button will not operate when the ignition switch is in the ON position.

#### PANIC ALARM


- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the  button **6** for more than 0.5 seconds. Once activated, the panic alarm and headlights will stay on for a period of time.
- Press any button on the key fob to turn the panic alarm off, or press the door request switch if the key is in range.

#### INTELLIGENT KEY BATTERY DISCHARGE

- If the **Key Battery Low** indicator **7** appears in the vehicle information display, replace the battery as soon as possible.

- If the battery of the Intelligent Key is discharged and the indicator **8** appears in the vehicle information display, or if environmental conditions interfere with the Intelligent Key operation, start the engine according to the following procedure:

1. Move the shift lever to the **P (PARK)** position.
2. Firmly apply the foot brake.
3. Push the ignition switch with the Intelligent Key near, and a chime will sound.
4. Within 10 seconds after the chime sounds, push the ignition switch while depressing the brake pedal and the engine will start.

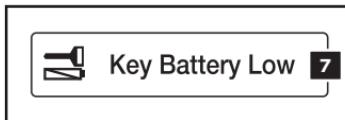

\*State laws may apply; review local laws before using.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Pre-driving checks and adjustments (section 3)"**, the **"Starting and driving (section 5)"** and the **"Do-it-yourself (section 8)"** of your Owner's Manual.

# GETTING STARTED

## FRONT POWER SEAT ADJUSTMENTS (if so equipped for driver's seat)

- To slide the seat forward or backward, push the switch **1** forward or backward.
- To adjust the angle of the seatback, push the switch **2** forward or backward.

### SEAT LIFTER

- Push the rear end of the switch **1** up or down to adjust the height of the seat cushion.



### POWER LUMBAR SUPPORT

- To adjust the lumbar area, push the front or back end of the switch **3**.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)" of your Owner's Manual.

---

## STARTING/STOPPING THE ENGINE

### TURNING THE ENGINE ON

- It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).
- Depress the brake pedal.
  - If the brake pedal is not depressed, pushing the ignition switch once enters the AUTO ACC mode.
  - If the ignition switch is pushed a second time, the vehicle will enter the ON mode.
- Move the shift lever to the **P (PARK)** position.
- Push the ignition switch to start the engine.



### TURNING THE ENGINE OFF

- Apply the brake pedal, move the shift lever to the **P (PARK)** position, apply the parking brake and push the ignition switch.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

---

## OUTSIDE MIRROR CONTROL SWITCH

- To select the right or left side mirror, move the control switch **1** right or left.
- To adjust the mirror angle, push the control switch **2** up, down, right or left.
- To prevent accidentally moving the mirror, set the control switch **1** to the center (neutral) position.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.



## **HOMELINK® UNIVERSAL TRANSCEIVER (if so equipped)**

- The HomeLink® Universal Transceiver can learn and consolidate the functions of up to three different hand-held transmitters, operating items such as garage doors, property gates, outdoor and indoor lights or alarm systems.
- Place the ignition switch in the ON position.
- To program the HomeLink Universal Transceiver:
  - Position the handheld transceiver 1-3 in (2-8 cm) away from the HomeLink surface, keeping the HomeLink indicator light in view.
  - Press and hold the desired HomeLink button and the handheld transmitter button simultaneously until the HomeLink indicator light flashes slowly and then rapidly.
  - Both buttons may be released when the indicator light flashes rapidly.
- To verify the programming is complete, press and hold the HomeLink button and observe the indicator light:
  - A solid, continuous light indicates the programming is complete and the HomeLink button will activate your device.
  - A blinking light that turns to a solid, continuous light after 2 seconds indicates additional steps are required to complete the programming.
- An additional person may make the remaining steps easier. To complete the programming process:
  - At the receiver of the device that you are programming to the HomeLink button, press and release the learn or smart button (the name may vary by manufacturer, but it is usually located near where the hanging antenna wire is attached to the unit). You have approximately 30 seconds to initiate the following step.
  - Press and hold the programmed HomeLink button for 2 seconds and release.
- You may have to repeat the previous two steps up to three times to complete the programming process. HomeLink should now activate your device.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Instruments and controls (section 2)"** of your Owner's Manual, the HomeLink website at [www.homelink.com](http://www.homelink.com) or call 1-800-355-3515.

# GETTING STARTED

## E-CALL (SOS) BUTTON (if so equipped)

- The E-call (SOS) feature requires a NissanConnect® Services subscription.
- With a paid subscription, it can be used to call for assistance in case of an emergency.
- To use this feature, press the **sos** button **1** on the overhead console.
- For additional information, or to enroll your vehicle, refer to [www.NissanUSA.com/connect](http://www.NissanUSA.com/connect) or call **855-426-6628**.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual or refer to the "Information (section 5)" of your NissanConnect® Owner's Manual.



## HEATER AND AIR CONDITIONER (automatic) (if so equipped)

### **1** AUTO BUTTON/DRIVER'S SIDE TEMPERATURE CONTROL DIAL

- The automatic mode may be used year-round. Press the **AUTO** button to turn the system on, and the system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.
- Turn the driver's side temperature control dial to the left for cooler air or to the right for warmer air.

### **2** SYNC BUTTON/PASSENGER'S SIDE TEMPERATURE CONTROL DIAL

- Press the **SYNC** button to turn the passenger's side temperature controls on or off. This will allow the passenger's side temperature to be adjusted independently from the driver's side by turning the passenger's side temperature control dial.
- Turn the passenger's side temperature control dial to the left for cooler air or to the right for warmer air.

### **3** DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the front defroster button  to turn on the system. This feature removes humidity from the air.
- To defrost the front and side windows, set the temperature control **1** and fan speed control **6** to their maximum settings.

#### **4 REAR WINDOW AND OUTSIDE MIRROR (if so equipped) DEFROSTER SWITCH**

- Push the rear window defroster switch  to turn the system on or off.
- This function automatically turns off after approximately 15 minutes.

#### **5 ON-OFF BUTTON**

- Press the **ON-OFF** button to turn the climate control system on or off.

#### **6 FAN SPEED CONTROL BUTTONS**

- Press the left  button to decrease fan speed or the right  button to increase fan speed.

#### **7 AIR FLOW CONTROL BUTTON**

- Press the air flow control button to cycle through the following air flow outlets:
  -  Air flows from the center and side vents.
  -  Air flows from the center, side and foot vents.
  -  Air flows mainly from the foot vents.
  -  Air flows from the front defroster and foot vents.

#### **8 A/C BUTTON**

- Press the **A/C** button to turn the air conditioner system on or off. This system helps cool and dehumidify the air inside the cabin and defog the windows.

#### **9 AIR RECIRCULATION BUTTON**

- Press the air recirculation button  to recirculate interior air inside the vehicle. This system is used to avoid certain outside odors and to help adjust the inside vehicle temperature more effectively.
- The air recirculation mode cannot be activated when the climate control system is in the front defroster mode  or foot and front defroster mode .

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.

---

## **HEADLIGHT CONTROL SWITCH**

### **HEADLIGHT CONTROL**

- Turn the headlight control switch to the  position **1** to turn on the front parking, side marker, tail, license plate and instrument panel lights. Turn the switch to the  position **2** to turn on the headlights.



### **AUTOLIGHT SYSTEM**

- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.

# GETTING STARTED

- To activate the autolight system, turn the headlight control switch to the **AUTO** position **3** then push the ignition switch ON. To deactivate the autolight system, turn the headlight control switch to the OFF position, **3** position **1** or **3** position **2**.

## HIGH BEAM SELECT

- With the headlights ON (either in the **AUTO** or **3** position), push the headlight control switch forward **4** to select the high beam function. The blue indicator light **3** will illuminate in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light will extinguish.
- Pull and release the headlight control switch **5** to flash the headlight high beams on and off.



## FOG LIGHT SWITCH (if so equipped)

- The headlights must be on and the low beams selected for the fog lights to operate.
- Turn the switch (inside collar) to the **3** position **6** to turn on the fog lights.
- Turn the switch (inside collar) to the OFF position to turn off the fog lights.



## LANE CHANGE SIGNAL

- Move the lever up or down until the turn signal begins to flash but the lever does not latch to signal a lane change. Hold the lever until the lane change is completed.
- Move the lever up or down until the turn signal begins to flash but the lever does not latch and release the lever. The turn signal will automatically flash three times.

Choose the appropriate method to signal a lane change based on the road and traffic conditions.


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

---

## WIPER AND WASHER SWITCH

- Move the lever to one of the following positions to operate the windshield wipers:
  - 1** Mist — One sweep operation of the front wipers.
  - 2** Intermittent — Wipers operate intermittently, and the speed can be adjusted by twisting the time control ring **3** to increase or decrease wiper speed.

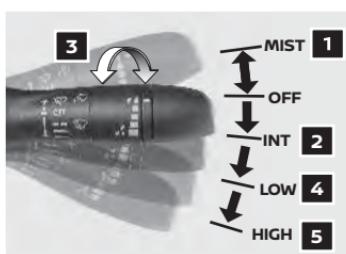

- 4 Low — Wipers operate at a continuous low-speed.
- 5 High — Wipers operate at a continuous high-speed.
- 6 Washer — Pull the lever toward you to activate the washer. The wipers will operate several times.



#### WIPER BLADE REPLACEMENT PROCEDURE

The windshield wipers must be in the service position in order to replace the wiper blades.

To move the wiper blades to the service position, follow this procedure:

- When the ignition switch is in the ON position or within 60 seconds of placing the ignition switch in the OFF position, lift the windshield wiper and washer lever upwards twice in less than 0.5 seconds. The windshield wipers will move to the service position automatically, and the wiper blades can now be replaced.

To move the wiper blades back to the original position:

- Place the wiper arm in the down position and lift the wiper and washer lever up for more than 1 second, or lower the lever down to operate at any wiper speed.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Do-it-yourself (section 8)" of your Owner's Manual..

## VEHICLE INFORMATION DISPLAY

The vehicle information display **1** displays items such as:

- Vehicle settings
- Drive computer information
- Drive system warnings and settings (if so equipped)
- Audio information
- Fuel Economy
- Nissan Intelligent Key® operation information
- Cruise control information (if so equipped)
- Indicators and warnings
- Tire pressure information



#### USING THE VEHICLE INFORMATION DISPLAY

The vehicle information display can be changed using the **OK** button **2**, the **▲** or **◀▶** buttons **3** and the **◀** button **4** located on the steering wheel.

#### RESETTING THE DRIVE COMPUTER

1. Press the **▲** and **◀▶** buttons **3** on the steering wheel until you reach the desired drive computer mode.

To view detailed instructional videos regarding these and other features, please go to [www.nissanownersinfo.mobi](http://www.nissanownersinfo.mobi).

# GETTING STARTED

2. Press and hold the **OK** button **2** to reset the selected mode.
- To reset **TRIP A** or **TRIP B**, go to the desired mode by pressing the **TRIP RESET** button **5** and press and hold the **TRIP RESET** button **5** for more than 1 second.



The Settings menu allows you to change the information displayed in the vehicle information display such as:

- |                    |                     |                    |               |
|--------------------|---------------------|--------------------|---------------|
| ■ VDC Setting      | ■ Driver Assistance | ■ Clock            | ■ Maintenance |
| ■ Unit/Language    | ■ TPMS Setting      | ■ Factory Reset    |               |
| ■ Vehicle Settings | ■ Customize Display | ■ ECO Mode Setting |               |

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.



## TIRE PRESSURE MONITORING SYSTEM (TPMS) WITH EASY-FILL TIRE ALERT

- The low tire pressure warning light **1** and a **Tire Pressure Low - Add Air** warning **2** will illuminate when one or more tires are low in pressure and air is needed.
- Current tire pressure of all tires (except the spare) **3** may be visible on the Tire Pressure screen within the vehicle information display when the vehicle is driven at speeds above 16 mph (25 km/h).
- Adjust the tire pressure to the recommended tire pressure shown on the Tire and Loading Information label located in the driver's door opening.
- When the low tire pressure warning light **1** flashes for approximately 1 minute and then remains on, the TPMS is not functioning properly. It is recommended that you have the system checked by a Nissan dealer.

### EASY-FILL TIRE ALERT

- When adding air to an under-inflated tire, the TPMS with Easy-Fill Tire Alert provides visual and audible signals to help you inflate the tire to the recommended tire pressure.

■ To use the Easy-Fill Tire Alert:

1. Move the shift lever to the **P (PARK)** position and apply the parking brake.
2. Place the ignition switch in the **ON** position. Do not start the engine.
3. Add air to the under-inflated tire, and within a few seconds, the hazard warning lights will start flashing.
4. When the designated tire pressure is reached, the horn will beep once and the hazard warning flashers will stop.
5. Repeat this procedure for any additional under-inflated tires.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**", the "**Starting and driving (section 5)**", the "**In case of emergency (section 6)**", the "**Do-it-yourself (section 8)**" and the "**Technical and consumer information (section 10)**" of your Owner's Manual.

---

## LOOSE FUEL CAP

- A **Loose Fuel Cap** warning message will appear in the vehicle information display **1** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The warning message will extinguish when the vehicle detects the fuel-filler cap is properly tightened and the **OK** button **2**, located on the steering wheel, is pressed.
- If the cap is not properly tightened, the Malfunction Indicator Light  may illuminate.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**" and the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.

# GETTING STARTED

## FUEL-FILLER DOOR

- The fuel-filler door release **1** is located to the left of the steering wheel below the instrument panel.
- To open the fuel-filler door, pull the fuel-filler door release **1**.
- The fuel-filler door is located on the passenger's side at the rear of the vehicle.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.



## TRUNK LID RELEASE SWITCH

Use one of the following methods to unlatch the trunk lid then raise the lid to open the trunk:

- Push the trunk opener request switch **1**, located under the trunk handle in the center, for more than 1 second. The doors must be unlocked or the Nissan Intelligent Key® must be with you (that is, in your pocket or purse).
- Press the **HOLD** button **2** on the key fob for more than 1 second.
- Push the trunk lid release switch **3** down. The trunk lid release switch **3** is located to the left of the steering wheel.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.



# AUDIO AND BLUETOOTH® SYSTEMS

## CLOCK SET/ADJUSTMENT

- To adjust the time and the appearance of the clock on the display:
  1. Press the  **MENU** button on the control panel.
  2. Touch the  **Settings** key on the Launch Bar.
  3. Touch the "Clock" key.
- Select "Set the clock manually" to manually adjust the time displayed.
- Touch the  key **1** to return to the previous screen.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started (section 2)" of your NissanConnect® Owner's Manual.

## USB (Universal Serial Bus) CONNECTION PORT/AUX JACK AND iPod® INTERFACE

- The USB port/AUX jack **1** is located inside the center console.
- When a compatible USB memory device, iPod® or auxiliary device is plugged into the USB port/AUX jack, compatible audio files stored on the device can be played through the vehicle's audio system.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

## BLUETOOTH® HANDS-FREE PHONE SYSTEM\*

### BLUETOOTH® HANDS-FREE PHONE SYSTEM\*

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.
- For information regarding connecting your cellular phone, refer to the connecting procedure within this guide.

### SYSTEM OPERATING TIPS

- Press the  button on the steering wheel to interrupt the voice prompts at any time and speak a command after the tone.



To view detailed instructional videos regarding these and other features, please go to [www.nissanownersinfo.mobi](http://www.nissanownersinfo.mobi).

# AUDIO AND BLUETOOTH® SYSTEMS

- To use the system faster, you may speak the second level commands with the main menu command on the main menu. For example, press the  button on the steering wheel, and after the tone, say "redial".
- The "Help" command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing the heater and air conditioner vents away from the ceiling.
- Speak naturally without long pauses and without raising your voice.
- To cancel a Nissan Voice Recognition session, press and hold the  or  button on the steering wheel, or  on the control panel.
- To decrease or increase the volume of the voice prompts, push the volume control switches  or  on the steering wheel or turn the **VOL** (volume) control knob on the control panel while the system is responding.
- Voice commands can be used to operate various Bluetooth® system features using the Nissan Voice Recognition System.  
See your NissanConnect® Owner's Manual for detailed information.
- For more detailed information and instructions, refer to your cellular phone's Owner's Manual and visit [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth).

## CONNECTING PROCEDURE

1. Select the  **1** on the Launch Bar.
2. Touch the "Connections" key **2**.
3. Touch the "Bluetooth" tab **3** and touch "Add New".
4. Follow the instructions on the screen. If a PIN appears on the screen, operate the Bluetooth® device to enter/confirm the PIN.


## VEHICLE PHONEBOOK

To access the vehicle phonebook:

1. Press the  button on the steering wheel or touch the  key on the launch bar.
2. Touch the "Phonebook" key **4**.
3. Choose the desired entry from the displayed list.

## MAKING A CALL

1. Press the  button on the Launch Bar. The "Phone" screen **5** will appear on the display.
2. Select one of the options to make a call.

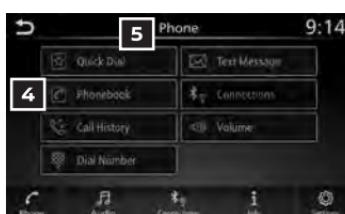

## RECEIVING/ENDING A CALL

- To accept the incoming call, either:
  - Press the  button on the steering wheel, or
  - Touch the  Answer key on the screen.
- To end or reject an incoming call, either:
  - Press and hold the  button on the steering wheel, or
  - Touch the  Decline key on the screen.



## SWITCH TO HANDSET

- Start the call using Bluetooth hands-free phone and touch "Use Handset" on the screen to use the handset (cellular phone).

\* Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Hands-free phone (section 4)" of your NissanConnect® Owner's Manual or please visit [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth).



## FM/AM/SiriusXM® RADIO (if so equipped)

Touch the  Audio key on the Launch Bar to display the current audio source, and then touch the "Source" key to access the source selection screen.

### 1 PUSH (ON-OFF) BUTTON/VOL (volume) CONTROL KNOB

- Press the  (ON-OFF) button to turn the audio system on or off.
- Turn the **VOL** (volume) control knob right or left to increase or decrease the volume.

### 2 PUSH SOUND BUTTON/TUNE-SCROLL KNOB

- Press the **PUSH SOUND** button to cycle through the audio settings individually and use the **TUNE-SCROLL** knob to adjust the current setting.
- Touch the  Settings key on the Launch Bar and then touch the "Sound" key to view all audio settings.

# AUDIO AND BLUETOOTH® SYSTEMS

- To manually tune the radio, turn the **TUNE-SCROLL** knob left or right.

## **3** AUDIO (SOURCE) BUTTON


- Pressing this button will give access to the AM, FM, SXM, USB1, USB2, BT Audio or AUX audio source.
- Twelve memory stations can be set for the FM band, six for the AM band and 18 for satellite radio. These appear at the bottom of the screen when one of these sources is selected.
- To store a station in a preset, you must first select a radio band by touching the "AM" key, "FM" key, or "SXM" key, then tune to the desired AM, FM or satellite radio station. Next, press and hold the desired station preset key until you hear a beep. The channel indicator will then display, and the sound will resume. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then press the corresponding station select key.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Audio system (section 3)" of your NissanConnect® Owner's Manual.

## APPLE CARPLAY® (if so equipped)

- Apple CarPlay® lets you use your compatible iPhone® to make calls, listen to music, send and receive messages, get directions and use iPhone apps directly from your vehicle display.
- Connect your compatible iPhone to the USB connection port located beneath the climate controls.
  - Depending on the setting, the startup information screen will appear on the center display.
  - Touch "OK" then "Yes" to use Apple CarPlay.
  - After the iPhone is connected, the Apple CarPlay home screen will appear, and the iPhone functions displayed on the screen can be operated by the in-vehicle system.
- While connected to Apple CarPlay, Siri® operation can be accessed.
- There are two ways to start a Siri session:
  1. Press and hold the  button on the steering wheel.
  2. Touch and hold the  key **1** on the lower left corner of the Apple CarPlay screen.
- Press the  button on the steering wheel or touch the  key **1** on the lower left corner of the Apple CarPlay screen to end Siri.
- Keep the interior of the vehicle as quiet as possible. Close the windows to eliminate the surrounding noises (traffic noises, vibration sounds, etc.), which may prevent the system from recognizing the voice commands correctly.

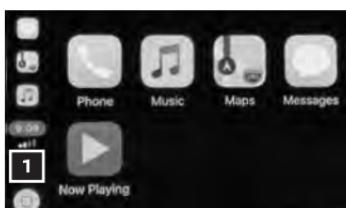

- Some Siri functions may not be available during driving.
- For functions that can be used with Siri, please refer to the Apple® website.
- To return to the Apple CarPlay home screen after operation, touch the  key **1** on the lower left corner of the Apple CarPlay screen.
- To exit the Apple CarPlay screen, press the  **MENU** button.
- To return to the Apple CarPlay screen from the main menu:
  - Touch the  **CarPlay** key **2**, or
  - Touch the  **Info** key **3** on the Launch Bar and touch the "Apps" key, and then touch the "Apple CarPlay" key.
- Nissan Phone menu and Nissan Voice Recognition cellular phone commands will not be available when Apple CarPlay is active.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started (section 2)" and the "Information (section 5)" of your NissanConnect® Owner's Manual.



## ANDROID AUTO™ (if so equipped)

- Android Auto™ connects with your compatible Android® phone to control your phone, apps and navigation directly from your vehicle display.

### INITIAL SETUP

- Download the Android Auto app from the Google Play™ store to your compatible Android phone.
- Launch the app from your Android phone and follow the directions for setting up the application. Several permissions will need to be given to the app for Android Auto to fully function on your in-vehicle system.

### USING ANDROID AUTO

- To connect your Android phone to the in-vehicle system, you must connect a USB cable to the USB connection port located beneath the climate controls.
  - Depending on the setting, the startup information screen will appear on the center display.
  - Touch "OK" to use Android Auto.
  - After the cellular phone is connected, the Android Auto home screen will appear and can be operated by the in-vehicle system.
- When connected to Android Auto, Google Assistant™ operation can be accessed. There are three ways to start Google Assistant™:
  1. Press and hold the  button on the steering wheel until a beep is heard.

# AUDIO AND BLUETOOTH® SYSTEMS

2. Touch the  key **1** on the upper right corner of the Android Auto screen.
  3. Say "OK Google" (requires appropriate permissions enabled via cellular phone).
- To return to the Android Auto home screen after operation, touch the  key **2** on the Launch Bar.
  - To exit the Android Auto screen, press the  MENU button or touch the  key **3**, and select the "Return To Nissan Connect" key on the Android Auto menu.
  - To return to the Android Auto home screen from the main menu:
    - Touch the  key **4** on the Launch Bar, or
    - Touch the  Info key **5** on the Launch Bar, touch the "Apps" key, and then select the "Android Auto" key.
  - Nissan Phone menu and Nissan Voice Recognition cellular phone commands will not be available when Android Auto is active.
  - If you have difficulties with connection or performance, try a different USB cable.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started (section 2)" and the "Information (section 5)" of your NissanConnect® Owner's Manual.



## HANDS-FREE TEXT MESSAGING ASSISTANT\*

- This system allows for sending and receiving text messages through the vehicle's interface.
- Using predefined or custom messages, send a text to an entry stored in your Bluetooth® Hands-free Phone System.
- Once enabled, the text message, sender and delivery time are shown on the control panel display when the vehicle speed is less than 5 mph (8 km/h).
- Text messages have the option of being read aloud at all vehicle speeds.
- Many cellular phones may require special permission to enable text messaging. Check the cellular phone's screen during Bluetooth® pairing. For some cellular phones, you need to enable "Notifications" in the cellular phone's Bluetooth® menu for text messages to appear on the touch-screen display. For more information and instructions, refer to your cellular phone's Owner's Manual.



- Text message integration requires that the cellular phone support Message Access Profile (MAP) for both receiving and sending text messages. Some cellular phones may not support all text messaging features. Please see [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth) for compatibility information as well as your device's Owner's Manual.

\*Laws in some jurisdictions may restrict the use of "Text-to-Speech". Some of the applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Hands-Free Phone (section 4)**" of your NissanConnect® Owner's Manual or please visit [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth).

## BLUETOOTH® STREAMING AUDIO

- If you have a compatible Bluetooth® device with streaming audio (A2DP profile), you can set up the wireless connection between your Bluetooth® device and your vehicle's audio system. This connection allows you to listen to audio from the Bluetooth® device using your vehicle's speakers.
- A cellular phone should not be used while driving so full attention may be given to vehicle operation.
- If the device needs to be connected, refer to the connecting procedure within this guide.
- To use Bluetooth® streaming audio:
  - Touch the  Audio key **1** on the Launch Bar, then touch the "BT Audio" key.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



For more information, refer to the "**Audio system (section 3)**" of your NissanConnect® Owner's Manual or please visit [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth).

## SIRI® EYES FREE (if so equipped)

- If you have a compatible iPhone® with Siri®, you can link your iPhone to the Siri Eyes Free function in your vehicle's Bluetooth® system.
- If you have a compatible iPhone connected to the system, press and hold the  button **1** on the steering wheel for a few seconds and Siri will be activated in Eyes Free mode.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual and visit [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth).

# AUDIO AND BLUETOOTH® SYSTEMS

## NISSANCONNECT® SERVICES POWERED by SiriusXM® (if so equipped)

NissanConnect® Services is a collection of security and convenience services that add innovation to your daily drive.

If equipped, your vehicle may include NissanConnect connected features and services such as Emergency SOS Calling, Automatic Collision Notification, Wi-Fi, Remote Services, Navigation, Bluetooth® and more. For complete information about your NissanConnect features and services, please consult your vehicle's NissanConnect Owner's Manual at <https://owners.nissanusa.com/nowners/navigation/manualsGuide>. For frequently asked questions, please visit [www.nissanusa.com/connect/faq](http://www.nissanusa.com/connect/faq).

- To enroll in NissanConnect Services, create an account or log into your Nissan Owner Portal with your Vehicle Identification Number or VIN. Under the NissanConnect Services tab, select the red button next to Manage Subscription. Follow the prompts to enroll in NissanConnect Services. Next, download the NissanConnect Services companion app and log into it using your Nissan Owner Portal ID and password.

For full details on NissanConnect Services or to enroll your vehicle, please visit [www.NissanUSA.com/connect](http://www.NissanUSA.com/connect).

Some of the available NissanConnect Services include:

- Automatic Collision Notification, a service that generates an automatic connection between the vehicle and the Emergency Response Center when the vehicle has been involved in an accident that was severe enough to deploy the air bags.
- Emergency Call, which connects you to a live response specialist who will assist in the dispatch of emergency services to the vehicle location. To use this feature, press the SOS button on the overhead console. The SOS button should only be used in emergency situations or in conjunction with the Roadside Assistance feature, if warranted.
- Wi-Fi Hotspot, enabling you to connect up to seven devices to the vehicle and access the Internet when a service provider's subscription is active.

To access these features in your vehicle.

- Press the  **MENU** button **1** on the control panel.
- Touch the  **Info** key **2**.
- Touch the "NissanConnect Services" key **3**.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Information (section 5)" of your NissanConnect® Owner's Manual.



# DRIVING FEATURES

## BLIND SPOT WARNING (BSW) WITH REAR CROSS TRAFFIC ALERT (RCTA)

- An indicator located near the outside mirrors **1** will illuminate if the radar sensors detect a vehicle in the detection zone.
- The BSW system helps to alert the driver when another vehicle moves into the vehicle's detection zone.
- If the turn signal is turned on with a vehicle in the detection zone the indicator light will flash.
- The indicator **2** will illuminate after the ignition switch is in the ON position and the BSW system is enabled. This indicates that the BSW system is operational.
- The RCTA system helps to alert the driver of an approaching vehicle when the driver is backing out of a parking space. The system operates when the shift lever is in the **R (Reverse)** position and the vehicle speed is less than approximately 5 mph (8 km/h).
- The radar sensors detect an approaching vehicle from up to 66 ft (20 m). The sensors are located on both sides near the rear bumper. The system gives visual and audible warnings if an approaching vehicle is detected.
- The BSW with RCTA system can be turned on or off through the Driver Assistance menu in the vehicle information display.




Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Starting and driving (section 5)" of your Owner's Manual.

## INTELLIGENT CRUISE CONTROL (ICC) (if so equipped)


### VEHICLE-TO-VEHICLE DISTANCE CONTROL MODE

- To set Vehicle-To-Vehicle Distance Control mode, push the ICC switch **1** on the steering wheel. The ICC indicators **2** will illuminate.
- Accelerate to the desired speed.
- Push down on the **SET-** switch **3** on the steering wheel and release it. ICC will be set to the desired speed.
- Push the  distance switch **4** on the steering wheel repeatedly to change the set distance between long, middle and short.
- This indicator **5** indicates the ICC system status depending on a color:

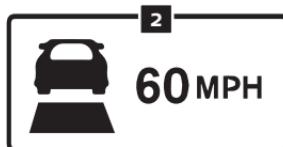

# DRIVING FEATURES

- ICC system ON indicator (gray): Indicates that the ICC switch is on.
- ICC system SET indicator (green): Indicates that the cruising speed is set.
- ICC system warning (yellow): Indicates that there is a malfunction in the ICC system.

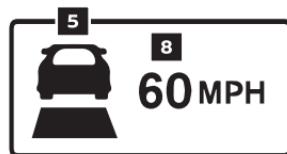

- To reset at a faster cruising speed, push and hold the **RES+** switch **6** on the steering wheel. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **SET-** switch **3** on the steering wheel. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, push the **CANCEL** switch **7** on the steering wheel or tap the brake pedal. The set vehicle speed indicator **8** will extinguish.
- To turn off ICC, push the ICC switch **1** on the steering wheel. The ICC indicators **2** in the instrument panel will extinguish.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Starting and driving (section 5)"** of your Owner's Manual.

## CRUISE CONTROL (if so equipped)

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 mph (40 km/h). The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn off the system.
- To activate the cruise control, push the  **Cruise ON/OFF switch** **1** on the steering wheel. The **CRUISE** indicator light will appear in the vehicle information display screen.
- To set a cruising speed, accelerate the vehicle to the desired speed, push the **SET -** switch **2** on the steering wheel and release. A  indicator light in the instrument panel will illuminate, and the set speed will display next to the indicator light. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **RES +** switch **3** on the steering wheel. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **SET -** switch **2** on the steering wheel. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, tap the brake pedal or push the **CANCEL** switch **4** on the steering wheel.
- To turn off cruise control, push the **CANCEL** switch **4** on the steering wheel. The  indicator light in the instrument panel will extinguish.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Starting and driving (section 5)"** of your Owner's Manual.

## AUTOMATIC EMERGENCY BRAKING (AEB) WITH PEDESTRIAN DETECTION SYSTEM

- The AEB with Pedestrian Detection system can assist the driver when there is a risk of a forward collision with a vehicle or pedestrian ahead in the traveling lane.
- The AEB system will function when your vehicle is driven at speeds above approximately 3 mph (5 km/h). For the pedestrian detection function, the AEB system operates at speeds between 6-37 mph (10-60 km/h).
- If a risk of a forward collision is detected, the AEB with Pedestrian Detection system will provide a warning to the driver by flashing the vehicle ahead detection indicator **1** in the vehicle information display and providing an audible alert.
- If the driver applies the brakes quickly and forcefully after the warning, and the AEB with Pedestrian Detection system detects that there is still the possibility of a forward collision, the system will automatically increase the braking force.
- If the driver does not take action, the AEB with Pedestrian Detection system issues the second visual (flashing) (red) **2** and audible warning. If the driver releases the accelerator pedal, then the system applies partial braking.
- If the risk of collision becomes imminent, the AEB with Pedestrian Detection system applies harder braking automatically.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Starting and driving (section 5)"** of your Owner's Manual.

## REARVIEW MONITOR

- When the shift lever is shifted into the **R (REVERSE)** position, the monitor display shows a rearward view from the vehicle.
- The colored guide lines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle body line.
  - Red 1.5 ft (0.5 m)
  - Yellow 3 ft (1 m)
  - Green 7 ft (2 m)



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.

# DRIVING FEATURES

## DRIVE MODES

### NORMAL

- Normal drive mode is recommended for normal, everyday driving and is the default mode of your vehicle.

### ECO

- ECO drive mode is recommended to help maximize fuel economy. Performance may be reduced.
  - Push the **ECO** mode switch **1** on the instrument panel to activate.
  - The ECO mode indicator light will illuminate in the vehicle information display.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Starting and driving (section 5)"** of your Owner's Manual.



**MEMO**

# MEMO



## Helpful Resources

Below is a list of helpful resources that can be used to learn more about the vehicle's systems and feature operations.

- **Vehicle Owner's Manual**
- **NissanConnect® Owner's Manual**  
(if so equipped)
- **Printed Quick Reference Guide (this document)**
- **[www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth)**
- **[www.NissanUSA.com/connect](http://www.NissanUSA.com/connect)**
- **[www.youtube.com/user/NissanUSA](http://www.youtube.com/user/NissanUSA)**
- **Nissan Consumer Affairs: 1-800-647-7261**
- **Electronic Quick Reference Guide**  
(Use Quick Response (QR) code or URL below.)
- **Nissan Quick Guide (available in the**  
iPhone App® Store or Google Play™ store  
for download to your smartphone)



To view detailed instructional videos,  
go to [www.nissanquickguide.com/2020/sentra](http://www.nissanquickguide.com/2020/sentra)  
or snap this barcode with an appropriate barcode reader.



This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. NISSAN reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, NISSAN may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain with this Quick Reference Guide all revision updates sent to you by NISSAN to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the NISSAN website at <https://owners.nissanusa.com/nowners/navigation/manualsGuide>. If you have questions concerning any information in your Owner's Manual, contact NISSAN Consumer Affairs. See the NISSAN CUSTOMER CARE PROGRAM page in the Owner's Manual for contact information.

