


OWNER'S MANUAL

OZARK TRAIL

GRAND GAZEBO

HKD Model : WT191515SH

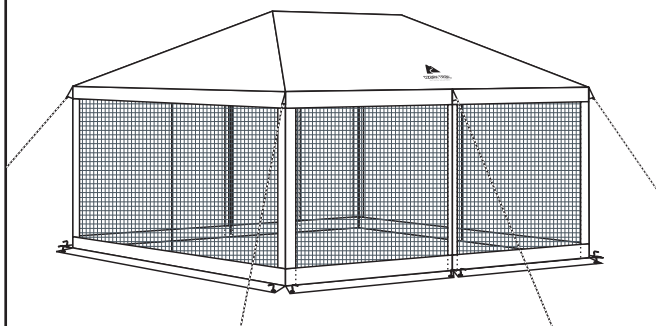

⚠ DANGER!

Stoves, lanterns, candles, grills, heaters and other fuel-burning devices produce carbon monoxide and will consume the available oxygen in a tent. Use of such devices in a tent may cause asphyxiation, carbon monoxide poisoning, and death or serious and permanent injuries. For this reason:

- DO NOT use fuel-burning devices inside or near this product.
- Your failure to follow this warning may cause death or serious and permanent injury to you or others.

⚠ WARNING!

- **KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS FABRIC.** This product is made with flame-resistant fabric, which meets CPAI-84 specifications. **IT IS NOT FIREPROOF!** The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the fabric may render the flame-resistant properties ineffective.
- Anchor properly at all times and carefully consider campsite choice. Be aware of possible falling rocks or tree limbs, lightning strikes, flash floods, strong winds and other hazards which may cause harm to this product or its occupants.
- Have a minimum of two adults for assembly. During assembly poles are under tension. If not held firmly in place during assembly, poles could break or flip up, possibly causing serious injury.
- Safety glasses may be worn throughout the assembly process as an additional precaution.
- Exercise care when using electric devices in and near tents.

ATTENTION: Intended for temporary day use and activities including camping, picnicking, and day tripping. This product is not intended as a semi-permanent shelter.

CLEANING:

Allow dirt to dry on the fabric after a rainfall before lightly sweeping it off with a brush. For tougher stains, spray the area with water and lightly wipe it off with a few strokes. Do not use washer or dryer. **DO NOT SCRUB THE FABRIC. ALWAYS MAKE SURE IT IS COMPLETELY DRY BEFORE REPACKING.**

6 MONTHS REPLACEMENT PARTS LIMITED WARRANTY

This product carries a replacement parts warranty against defects in materials and workmanship for a period of 6 months from date of purchase. At its discretion, the manufacturer may provide replacement parts. Original purchaser will be required to provide proof of purchase. The consumer will be responsible for shipping costs incurred outside of the U.S. or Canada.

Warranties **DO NOT** cover normal wear and tear, misuse, abuse, inclement weather conditions (i.e. wind, rain, hail, lightning, tornadoes or hurricanes) or other acts of God, mildew and rotting, damage or fading caused by prolonged exposure to UV rays. This warranty gives you specific legal rights. You may also have other rights which vary depending on locale.

Under no circumstances shall the manufacturer be liable for any incidental or consequential damages.

The tent is water-repellent. It is not waterproof. During heavy or continuous rain, some leakage may occur. Avoid contact between objects and the inside of the tent, as this may result in leakage at points of contact. In the event of seam leakage, apply a seam-sealer compound.

Although our products are manufactured according to rigorous specifications, periods of wind or rain may loosen the stakes and cause the frame to sink into the ground. This will weaken the structure's overall rigidity. Puddles may also form on the roof if the unit has not been assembled tightly. If pooling should occur, it is advisable to drain the fly to avoid possible damage to frame and fabric. Adjustment of guy lines may be necessary. In case of inclement weather, remove valuables and seek appropriate shelter. Intended for recreational use only.

For your tent, screen house or canopy DO NOT...

- Pitch near an open fire.
- Use candles or open flames of any kind inside or near it.
- Leave children unattended inside.
- Use fuel-burning, oxygen-consuming devices (heaters, lanterns, cooking stoves or other flame sources) inside.
- Refuel lamps, heaters or stoves inside.
- Smoke inside.
- Store flammable liquids inside.
- Use water-repellent compounds other than those recommended for use on outdoor equipment.
- Spray with insecticide.
- Store on concrete floor.

For your tent, screen house or canopy DO...

- Always extinguish campfire before sleeping or leaving the area.
- Exercise care when using electricity and lighting.
- Make certain it is properly ventilated in all weather conditions. In extreme weather conditions, snow could obstruct airflow and cause asphyxiation. Clear frequently.
- Anchor securely to provide additional security in changing climatic conditions. Snow pegs, skis and/or heavy rocks may be necessary to supplement stakes and guy lines.
- Take down and store properly after camping.

NOTICE!

Do Not Return to Store
for Warranty issue call

8 8 8 - 2 8 0 - 7 8 7 6

CAMPING TIPS

The key to an enjoyable camping experience is planning and preparation.

Before you go ...

Research the area where you intend to camp. Prepare for any possible weather condition. Be aware of hazards and emergency protocol. Know the rules and regulations.

Check out your equipment before your trip. Be sure your cook stove, lanterns, flashlights, air mattress, etc., are in good working order. Erect your tent to become familiar with setup. Once you've assembled your tent in a dry, well-ventilated area, apply seam-sealing compound to the stitching of the inside seams following manufacturer's directions. Allow to dry thoroughly before storage. Reapply annually.

Checklists are great planning tools. Here are some areas to consider.

Camp setup: Tent, chairs, table, ground cloth, entrance mat, tarp, poles, rope, stakes, bungee cords, duct tape, zip ties, hammer/tools, bedding.

Kitchen setup, food and beverages: Plan for transport, preparation, storage and disposal. Remember to pack fire-starting devices in waterproof containers, and bring pots, dishes, utensils, can opener, heavy-duty garbage bags and biodegradable soap. Store your food in lockers or out of sight in vehicles.

Clothing: Be prepared for all your activities. Include a hat, sunglasses and quality socks. Dress in layers.

Hygiene: Personal toiletries, rubber gloves, basic first aid items. Don't forget your medications.

Miscellaneous: Extra batteries, sewing kit, clothespins, dust pan/brush and insect-repellant.

Be considerate of others, humans and wildlife.
Remember to clean up and dispose of waste properly.
"Leave no trace behind."

WT191515SH


ASSEMBLY INSTRUCTIONS

IMPORTANT NOTES:

- * Assemble your screen house before camping to become familiar with the assembly.
- * Two people are recommended for setup.
- * Select a clean, level area for the campsite, free of debris and sharp objects, away from any natural watercourse.
- * To prevent damage to the zippers, unzip the doors and windows of the screen house prior to disassembly.

Step 1: Verify package contents

☐ Screen : 1 each

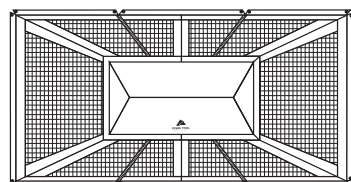

☐ Connectors : 11 each (total)
(Pre-attached)



4 way - 3 each



4 way - 4 each

 


3 way - 2 each



3 way - 2 each

☐ Deck Feet : 8 each



☐ Rope Lights : 3 each
(batteries not included)



 
☐ Steel Poles : 19 each (total)
() denotes color coding

(A) Leg (Red) - 8 each
(B) Middle Roof (Orange) - 2 each
(C) Corner Roof (Green) - 4 each
(D) Ridge (Blue) - 1 each
(E) Side Eave (Pink) - 2 each
(F) Front & Rear Eave (Yellow) - 2 each

☐ Hanging Shelf :
2 each



☐ Video Screen :
1 each



☐ Tent Stakes : 32 each (total)

8" - 32 each



Step 2: Assemble poles

- 1) Assemble steel poles by inserting the tapered ends into the adjacent sections. Organize frame poles by color and length.

8 each (A) Leg (Red)



2 each (B) Middle Roof (Orange)



4 each (C) Corner Roof (Green)



 
1 each (D) Ridge (Blue)



2 each (E) Side Eave (Pink)





2 each (F) Front & Rear Eave (Yellow)





Step 3: Assemble roof frame

- 1) Use the illustration below and on page 4 as a guide.
- 2) Locate blue ridge pole (D) with pre-attached color-coded connectors. Attach the green corner roof poles (C) and orange middle roof poles (B), matching color-coded poles to color-coded connector openings. Check that pole R-springs are snapped into connector slots.
- 3) Attach the yellow front and rear eave poles (F) and pink side eave poles (E) using the 4-way corner connectors.
- 4) Roof frame appears as shown.

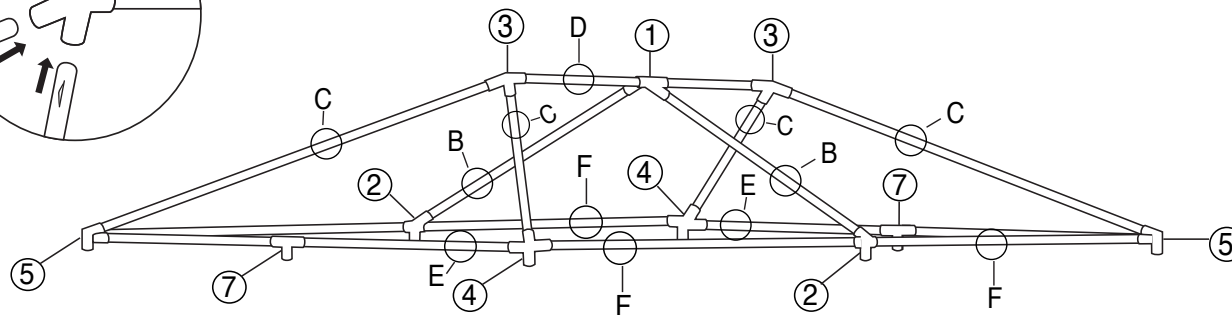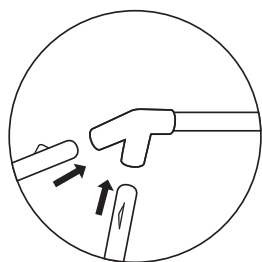


Step 4: Attach leg poles

- 1) On one side of the screen house attach red leg poles (A) snapping R-springs into connector slots.
- 2) Unseat the the bottom section of the leg poles. This will lower the roof frame to aid in attaching the body of the screen house.
- 3) Repeat the process for remaining leg poles (A) on opposite side of screen house.

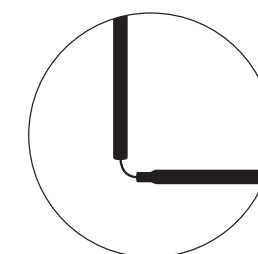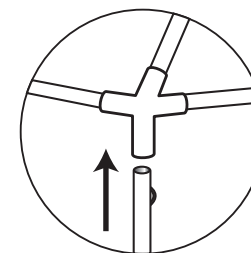


Step 5: Position and fasten the screen house

- 1) Place the screen house body over the roof frame positioning screen house corners over the corner connectors. Position logo over middle roof pole.
- 2) From the underside of the screen house, fasten ties to the frame.

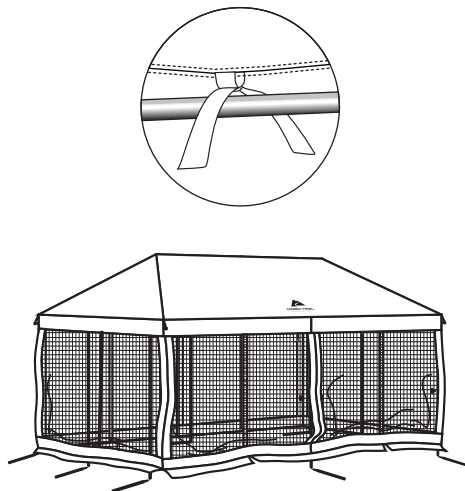


Step 6: Connect leg sections, attach deck feet, attach S-hooks

- 1) On one side of the screen house connect the bottom section of the leg poles and attach deck feet. This will raise the screen house.
- 2) Repeat the process for the remaining legs on the opposite side of the screen house.
- 3) Bring the side walls of the screen house down. All openings should be zipped.
- 4) Attach the S-hooks along the bottom perimeter of the screen house to the deck feet.

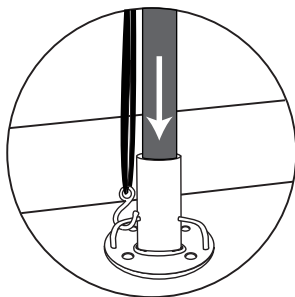

Step 7: Stake screen house


- 1) Position poles so the perimeter of the screen house is taut but remains on the sod. Make certain the perimeter is even and squared.
- 2) Stake down the screen house by inserting a stake through the fabric stake loops and metal grommets, located along the perimeter of the screen house.
- 3) Hammer the stakes into the ground at a 45° angle using a hammer or mallet.

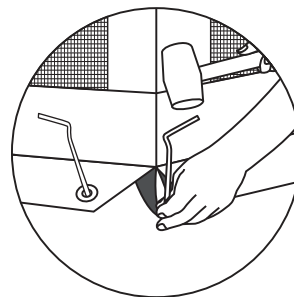

Step 8: Secure guy lines


- 1) Secure screen house using all guy lines and stakes.

Screen house must be secured for proper function.

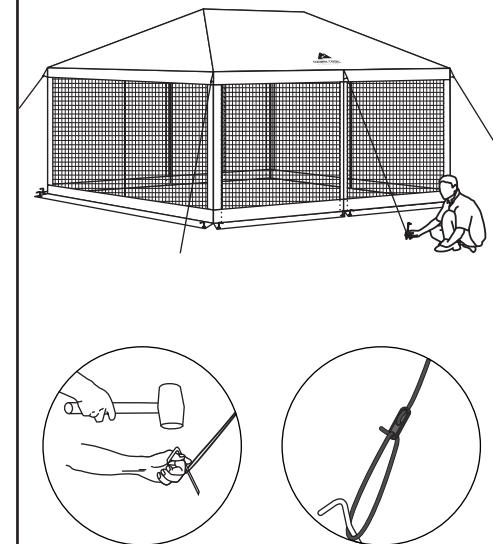


Step 9: Attach Lights

- 1) Insert battery pack (batteries not included) into pocket along the eave and close the flap.
- 2) Thread the light rope through the yellow loops along the eaves. Secure the end of the rope to the clip.

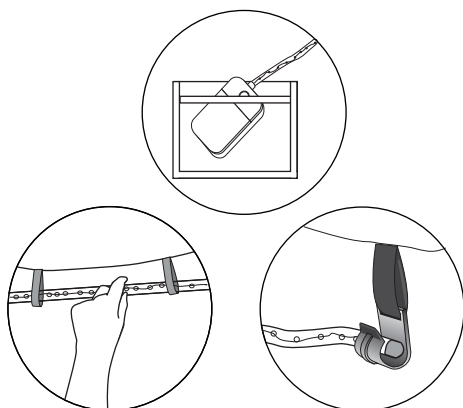

Step 10: Attach Video Screen

- 1) Unfold the video screen.
- 2) Locate (white) loops at side opposite from lights. Attach S-hooks at the top and bottom of the video screen to the loops at the eave and near the base of the screen house.

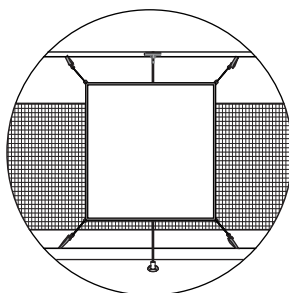


Disassembly


- 1) To take down the screen house, disassemble in reverse order.
- 2) Remove accessories.
- 3) Be sure to leave doors unzipped to avoid zipper damage.
- 4) Remove stakes with hammers or stake puller. DO NOT pull on screen house.
- 5) Keep poles and stakes together in bags provided.

Packing the screen house

 - 1) Spread screen house flat, distribute evenly.
- 2) Fold into quarters not to exceed the length of pole bag.



 - 3) Lay pole bag at opposite end from door. Tightly roll bag, skin and fly forcing air through unzipped door.




- 4) Secure with ties and place in carry bag with stakes and accessories.
- 5) Screen house must be clean and dry before storage. Do not store on concrete floor.

**Be certain campfires are extinguished.
Dispose of garbage appropriately.**

SPECIFICATIONS:**Floor size:****15 x 15' (4.6 x 4.6 m)****Center height:****8'6" (2.59 m)****Weight:****52.60 lb (23.86 kg)****REPLACEMENT PARTS**

KEY NO.	MODEL NO. WT191515SH		QTY. REQ.
	DESCRIPTION	PART NO.	
A	Steel Pole - Leg (Red)	HSP22-185r	8
B	Steel Pole - Roof middle (Orange)	HSP22-210r x 2	2
C	Steel Pole - Roof corner (Green)	HSP22-269r x 2	4
D	Steel Pole - Ridge (Blue)	HSP22-70r x 2,s	1
E	Steel Pole - Side eave (Pink)	HSP22-393r x 2,s	2
F	Steel Pole - Front & Rear Eave (Yellow)	HSP22-409r x 2,s	2
1,2	Hub - 4 way	HHHK15-166-1	3
3	Hub - 3 way	HHHK2012-03-1	2
4,5	Hub - 4 way	HHHK16-164-1	4
6	Deck feet	HHHK3-95-1	8
7	Hub - 3 way	HK2012-02-1	2
	Rope light	HRL12'	3
	Video screen	HVS60.5" x 56"	1
	Steel stakes	HMS5-8	32

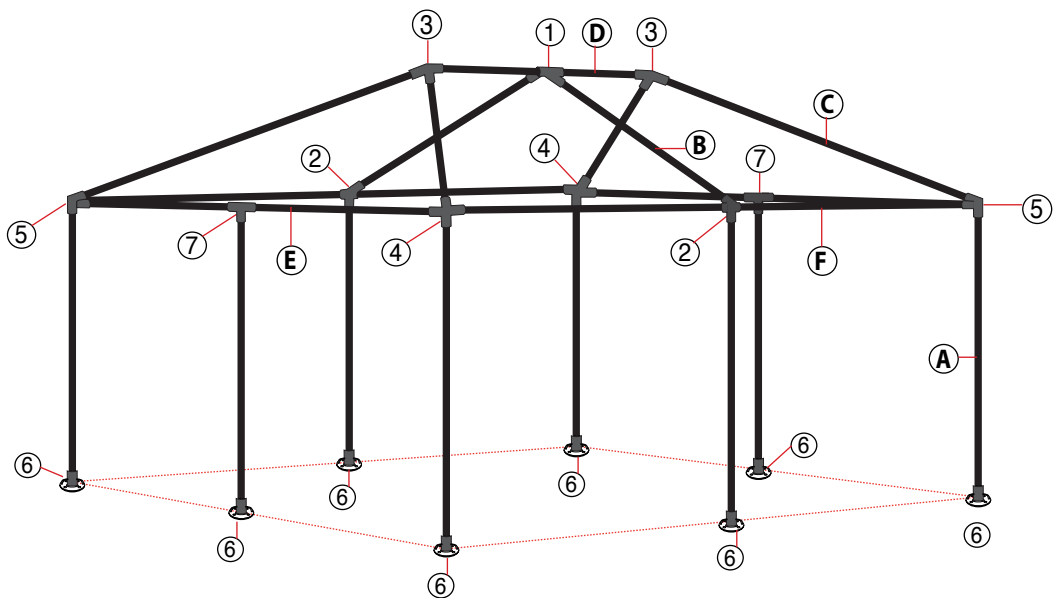**TROUBLESHOOTING GUIDE**

PROBLEM	SOLUTION
1. CONDENSATION	Condensation occurs when warm, moist air inside tent comes in contact with cooler outside air. Avoid touching walls to reduce contact leakage. Venting doors and windows will reduce condensation. Store wet clothing outside of tent. A battery-powered fan may be helpful. Not applicable to screen houses.
2. SEAM LEAKAGE	Apply a generous amount of seam-sealer on inside seams. Seam-sealer may be purchased at any local sporting goods store.
3. MILDEW	To avoid mildew, store tent/screen house ONLY when thoroughly dry. However, if mildew occurs use a soft-bristle brush or sponge with mild dishwashing soap or Fels Naptha soap to clean. Let dry thoroughly and a tent-approved water-repellent compound may be applied.
4. REPAIRING A TEAR	For small tears use a self-adhesive patch kit. We recommend a canvas or awning repair shop for larger tears.
5. FAULTY ZIPPER	Zippers are self-repairing. If the zipper separates, you can move the slider to the beginning of the zipper tape and rework the zipper.
6. FADING FABRIC	Do not leave up in direct sunlight longer than necessary. If left in sunlight for prolonged periods of time, fabric will fade and weaken.
7. FLOOR CONDENSATION	A ground cloth under the floor helps prolong its life, provides additional insulation and moisture protection. The cloth should be smaller than the floor to prevent rain from running under the tent. Not applicable to screen houses.
8. USE OF STAKES	Stakes should be installed at a 45° angle using a hammer or mallet. Stake loops should be kept taut without over-stretching fabric or webbing. This could cause tears or leakage. To remove safely, use a hammer or stake puller. Do not remove by pulling on the fabric.