

Media Server Application Guide


Contents

Overview	1
How to set up the media server	2
How to access the Media Server on PS3.....	6
How to access the Media Server on XBOX360	6
How to access the Media Server on Windows Media Player.....	7

Overview

The Media Server feature allows you to share music, videos and photos on your USB drive or a mobile hard drive connected to the modem router, for use on game consoles or media players.

Typical Topology

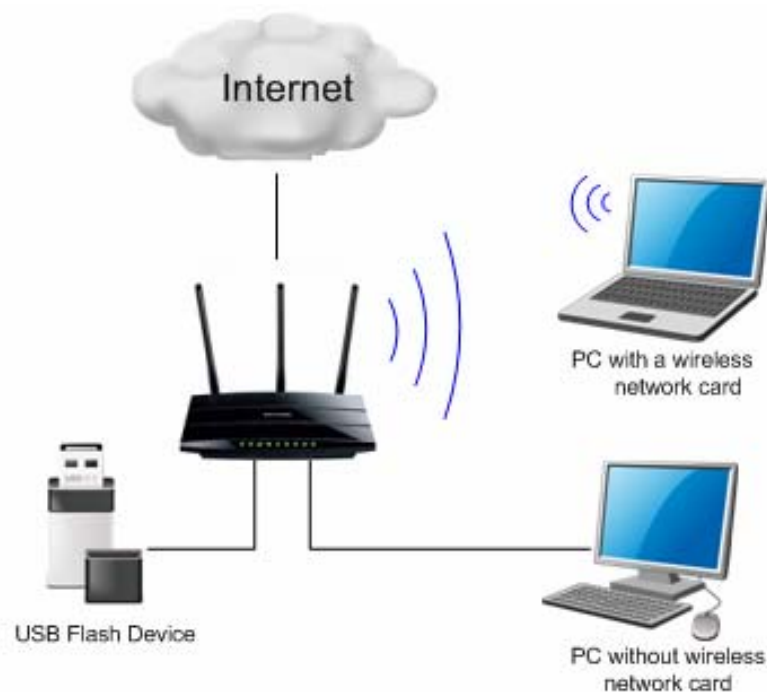

Note:

- (1) Some USB storage devices may require using the external power.
- (2) The USB storage device stands for media server in this topology.
- (3) Here in this guide, we take the configuration procedures of TD-W8990 for example.


How to set up the media server

Plug the USB storage device into the USB port of the modem router and wait until the USB LED is solid green.

You can set up the media server by the following steps:

Step 1: Open a web browser (IE/Chrome/Firefox/Safari), type **192.168.1.1** in the address bar, and then press **Enter**.

Step 2: A login window will appear. Enter **admin** for the User Name and Password (both in lower case letters), then click **OK** to log into the web-based management of the modem router. Click **USB Settings -> Media Server** on the left side menu.

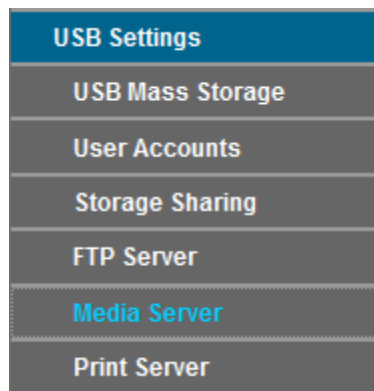

Step 3: Click **Enable** to make Media Server enabled, and then click **Save**.

Status	Media Server Settings Server Enable: ☐ Enable ☒ Disable Server Name: MediaShare Content Scan: Manual Scan: Scan Now ☐ Auto Scan: Every 1 hour(s) You have shared the following contents: <table border="1"><thead><tr><th>ID</th><th>Share Name</th><th>Folder Name</th><th>Edit</th></tr></thead><tbody><tr><td>1</td><td>photo</td><td>/photo</td><td>Edit Delete</td></tr></tbody></table> Add New Folder Save 2. Click Save	ID	Share Name	Folder Name	Edit	1	photo	/photo	Edit Delete
ID		Share Name	Folder Name	Edit					
1		photo	/photo	Edit Delete					
Quick Setup									
Operation Mode									
Network									
DHCP Server									
Wireless									
USB Settings									
USB Mass Storage									
User Accounts									
Storage Sharing									
FTP Server									
Media Server									
Print Server									
Route Settings									

Step 4: Click **Add New Folder** button. Choose the folders you want to share and click **Apply**.

Status	Media Server Settings			
Quick Setup				
Operation Mode				
Network				
DHCP Server				
Wireless				
USB Settings				
USB Mass Storage				
User Accounts				
Storage Sharing				
FTP Server				
Media Server				
Print Server				
Route Settings				

Server Enable: ☒ Enable ☐ Disable

Server Name:

Content Scan: Manual Scan:

☐ Auto Scan: Every hour(s)

You have shared the following contents:

ID	Share Name	Folder Name	Edit
1	photo	/photo	Edit Delete

← 1. Click this button

Folder Browse

This page allow you to set a scan folder for DLNA media service!

Share Name: **2. Enter a name**

Directory:

Select Volume: ▼

/sda1/

[music](#)

[tp-link](#)

[photo](#) **3. Choose the folders you want to share**

[video](#)

4. Click this button


Step 5: Your shared folders will be listed on the Media Server page.

You have shared the following contents:			
ID	Share Name	Folder Name	Edit
1	photo	/photo	Edit Delete

How to access the Media Server on PS3

Select  (Search for Media Servers) under  (Photo),  (Music) or  (Video).

The TP-LINK Media Servers that can be connected will be displayed.

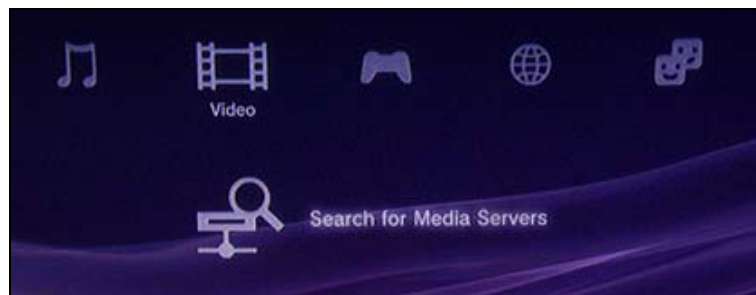


How to access the Media Server on XBOX360

The TP-LINK Media Servers that can be connected will be displayed in Video/Music/Picture Library.




How to access the Media Server on Windows Media Player

Step 1: Open Windows Media Player in Windows 7 for example. Click ***Go to Library***.

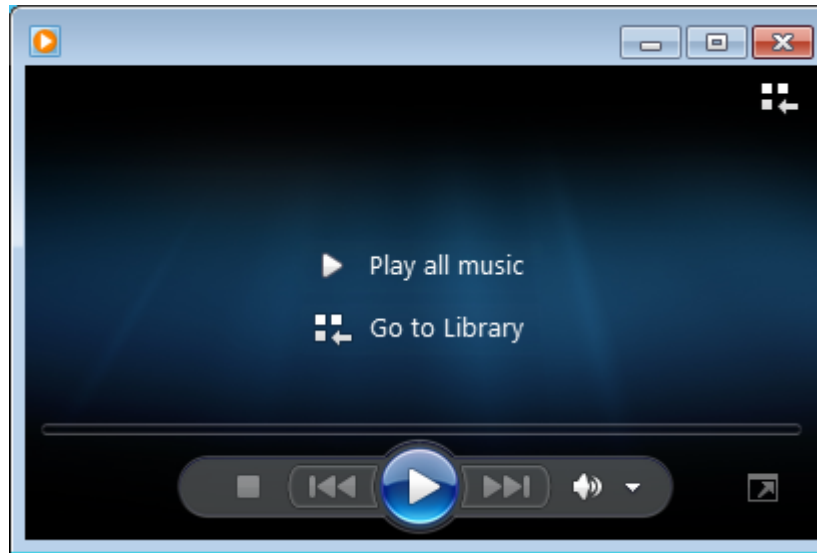

Step 2: Windows Media Server will automatically list the media servers in your LAN. Select the media server name you have configured on the web-management page.

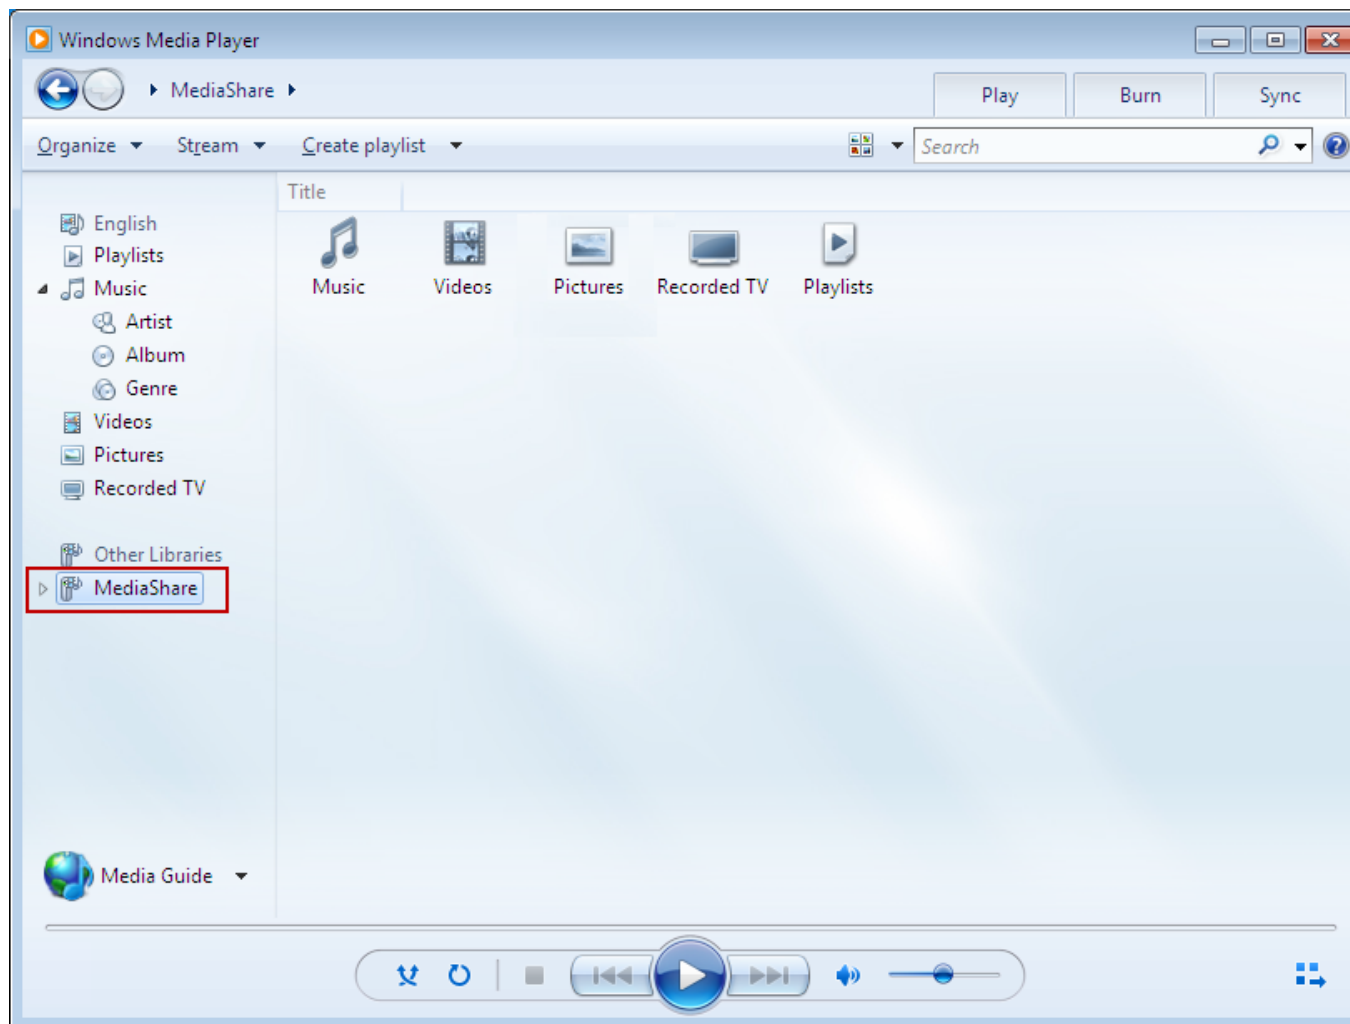

Note:

Media Server function is supported only by Windows Media Player 12.0 and above.