



# PowerManage user manual

---

Building Technologies & Solutions

[www.jci.com](http://www.jci.com)

2019-06

D-307338

Rev. 0

Version 4.4

---



D-307338



# Copyright

© 2019 Johnson Controls. All rights reserved. JOHNSON CONTROLS, TYCO and VISONIC are trademarks and/or registered trademarks. Unauthorized use is strictly prohibited.

# Table of Contents

---

|   |           |
|---|-----------|
| <b>GETTING STARTED</b>  | <b>4</b>  |
| Introduction to PowerManage   | 4         |
| Introduction to the PowerManage web help                                      | 4         |
| Compatible systems  | 4         |
| Regular tasks to perform  | 4         |
| Setting up PowerManage  | 4         |
| Server parameter configuration methods  | 4         |
| PowerManage architecture  | 5         |
| Navigating the user interface   | 6         |
| Navigating the MY PROCESSES pane  | 9         |
| Using the search filter   | 9         |
| Logging on to the PowerManage system  | 10        |
| Resetting a forgotten password  | 11        |
| Changing your logon password  | 11        |
| Configuring the server parameters by using the PowerManage web application    | 11        |
| Configuring the server parameters by using the PowerManage Management Console | 11        |
| <b>PANELS PAGE</b>  | <b>12</b> |
| Adding panels to the server   | 14        |
| Adding a panel to the server  | 15        |
| Servicing panels  | 15        |
| Refreshing a panel configuration  | 16        |
| Pushing a basic configuration to one or more panels                           | 16        |
| Assigning a panel to a different group  | 16        |
| Marking one or more panels for service on the Panels page                     | 16        |
| Reassigning one or more panels that are marked for service                    | 16        |
| Resolving faults in one or more panels  | 17        |
| Suspending faults in one or more panels                                       | 17        |
| Creating a new report on the Panels page                                      | 17        |
| <b>PANEL HUB</b>  | <b>18</b> |
| Viewing a panel in the panel hub  | 19        |
| Marking a panel for service in the panels hub                                 | 19        |
| Reassigning a panel for service in the panels hub                             | 19        |
| Resolving faults in a panel in the panels hub                                 | 20        |
| Suspending faults in a panel in the panels hub                                | 20        |
| Resuming faults in a panel in the panels hub                                  | 20        |
| <b>Devices tab</b>  | <b>21</b> |
| Adding a wireless device to a panel   | 23        |
| Refreshing the Received Signal Strength Indicator of a panel                  | 23        |
| Viewing all devices with troubles in a panel                                  | 23        |
| Performing a walktest on all eligible devices                                 | 23        |
| Bypassing, soak testing, and marking a device as rarely triggered             | 23        |
| Renaming or removing a device   | 24        |
| Editing the configuration of a device   | 24        |
| Using the VIDEO ON DEMAND tab   | 25        |

|   |           |
|---|-----------|
| Viewing device video footage .....  | 25        |
| Temperature and light readings on the METEO tab .....                     | 26        |
| Viewing device smart temperature or light readings .....                  | 27        |
| Using the PARENT and CHILDREN tabs .....                                  | 27        |
| <b>Info tab</b> .....   | <b>29</b> |
| Editing basic panel and customer information .....                        | 30        |
| <b>State tab</b> .....  | <b>31</b> |
| <b>Configuration tab</b> .....  | <b>33</b> |
| Current and previous panel configurations list .....                      | 34        |
| Creating a basic configuration from an existing panel configuration ..... | 35        |
| Synchronizing the configuration of an individual panel .....              | 35        |
| Editing the configuration settings of an individual panel .....           | 35        |
| <b>Locations tab</b> .....  | <b>36</b> |
| <b>Processes tab</b> .....  | <b>37</b> |
| <b>Reports tab</b> .....  | <b>38</b> |
| <b>Logs tab</b> .....   | <b>39</b> |
| Downloading a panel log file in the panels hub .....                      | 40        |
| <b>Remote inspections tab</b> .....                                       | <b>41</b> |
| Scheduling a remote inspection for an individual panel .....              | 42        |
| <b>Events tab</b> .....   | <b>43</b> |
| <b>Firmware tab</b> .....   | <b>45</b> |
| Upgrading the firmware of an individual panel in the panel hub .....      | 45        |
| <b>Keypad tab</b> .....   | <b>46</b> |
| <br>  |           |
| <b>REMOTE INSPECTION PAGE</b> .....                                       | <b>47</b> |
| Remote inspection tests .....   | 48        |
| Remote inspection values .....  | 49        |
| Creating a remote inspection for a batch of panels .....                  | 50        |
| Scheduling one or more remote inspections for a batch of panels .....     | 50        |
| Canceling a remote inspection .....                                       | 50        |
| Running a remote inspection manually .....                                | 51        |
| <br>  |           |
| <b>EVENTS PAGE</b> .....  | <b>52</b> |
| Examining event video on the Events page .....                            | 53        |
| Examining events on the Events page .....                                 | 54        |
| Viewing an event or multiple events on the Events page .....              | 55        |
| <br>  |           |
| <b>REPORTS PAGE</b> .....   | <b>56</b> |
| Creating new reports .....  | 57        |
| Creating a new report for all panels in the server .....                  | 58        |
| Stopping or removing a report from the Reports page .....                 | 58        |
| <br>  |           |
| <b>FIRMWARE PAGE</b> .....  | <b>59</b> |
| Mass upgrading the firmware of a device .....                             | 60        |
| <br>  |           |
| <b>SYSTEM DROP-DOWN MENU</b> .....  | <b>61</b> |
| Groups page .....   | 61        |
| Group parameters .....  | 62        |

|  |           |
|--|-----------|
| Adding a new group .....   | 64        |
| Group hub .....  | 64        |
| CS communicating tab in the group hub .....                              | 65        |
| Group central station communication settings .....                       | 66        |
| Configuring the central station communication settings for a group ..... | 67        |
| <b>Processes page .....</b>  | <b>68</b> |
| Processes page duration column .....                                     | 69        |
| Stopping a process .....   | 69        |
| <b>Users page .....</b>  | <b>70</b> |
| Default super admin .....  | 71        |
| Removing, suspending and enabling users .....                            | 71        |
| Adding or editing users .....  | 71        |
| Adding a new user .....  | 72        |
| Editing user information .....   | 72        |
| <b>Roles page .....</b>  | <b>73</b> |
| Role types .....   | 73        |
| Adding a new role .....  | 74        |
| Editing a role .....   | 74        |
| <b>Central stations page .....</b>                                       | <b>75</b> |
| Adding or editing central stations .....                                 | 76        |
| Adding a central station .....   | 76        |
| Editing a central station configuration .....                            | 77        |
| Removing a central station .....   | 77        |
| <b>Basic configurations page .....</b>                                   | <b>78</b> |
| Basic configuration parameters .....                                     | 79        |
| Editing a basic configuration .....                                      | 80        |
| Removing a basic configuration .....                                     | 80        |
| <b>Installers page .....</b>   | <b>81</b> |
| Accepting or rejecting installers .....                                  | 81        |
| <b>Interactive users page .....</b>                                      | <b>82</b> |
| Registering a user on the server with the mobile application .....       | 82        |
| <b>Dashboard page .....</b>  | <b>83</b> |

# Getting started

## Introduction to PowerManage

Use the PowerManage service management platform to manage panels remotely in real time from a central monitoring station (CMS) and with an internet protocol (IP) receiver.

Advantages of the PowerManage server:

- Receiver: PowerManage serves as an IP receiver for regular events and video events.
- Resolve: PowerManage enables home control and services such as reports, tests and panel configuration.
- Interactive: PowerManage enables users and installers to access the panel with the mobile application.

## Introduction to the PowerManage web help

The PowerManage documentation provides monitoring service provider operators and IT managers instruction on managing the following:

- The PowerManage service management platform
- Security alarm panels
- Panel configurations
- Groups of monitored panels
- Alarms and events
- System tasks

## Compatible systems

PowerManage supports the following security systems:

- Visonic PowerMaster panels
- Neo and PowerSeries Pro systems
- SIA-IP protocol communication based monitoring systems

## Regular tasks to perform

- View and handle security and maintenance events. For more information, see [Events page](#).
- Configure panels
- Diagnose and resolve panels
- Perform inspections, reports, and firmware upgrades. For more information about remote inspections, see [Remote inspections page](#). For more information about reports, see [Reports page](#). For more information about firmware upgrades, see [Firmware page](#).
- Enable and disable homeowner and installer access to panels by using the user and installer mobile applications. For more information, see user and installer apps in Table 7.
- Add new panels to the server. For more information, see [Adding a panel to the server](#).

## Setting up PowerManage

1. Plan the permission framework.
  - a. To group similar panels together and perform common actions to large groups of panels at once, create panel groups. For more information on adding groups see [Adding a new group](#).
  - b. Add server users. For more information, see [Adding a new user](#).
  - c. To define the permissions of the server users, create roles to connect to each server user. For more information on creating roles and defining permissions, see [Roles page](#).
2. To organize the user hierarchy of the server, define the administrator and the operator accounts on [Users page](#).

## Server parameter configuration methods

Configure the PowerManage server parameters with one of the following methods:

- The PowerManage application web site. For more information, see [Configuring the server parameters by using the web application](#).
- The PowerManage Management Console. For more information, see [Configuring the server parameters by using the console](#).

*Related topics*

[PowerManage architecture](#)

[Navigating the user interface](#)

[Navigating the MY PROCESSES pane](#)

## PowerManage architecture

Figure: PowerManage architecture

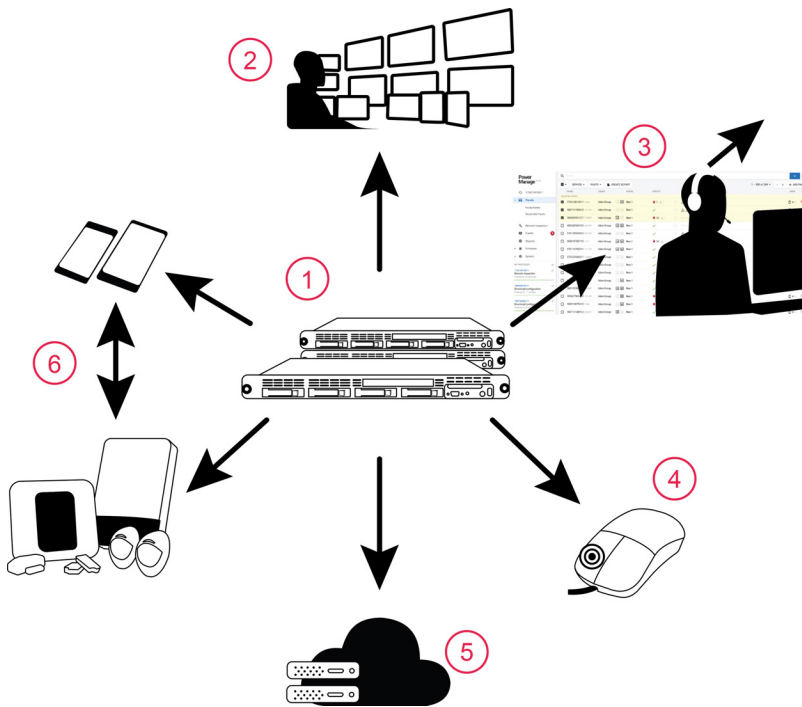


Table 1. PowerManage architecture components

| Callout | Name               | Description   |
|---------|--------------------|---|
| 1       | PowerManage server | The PowerManage server  |
| 2       | Receiver           | The PowerManage receives events from the panel by IP or GPRS communication and with the following protocols: <ul style="list-style-type: none"> <li>• Standard protocols, such as SIA and CID</li> <li>• Standard protocols, such as MLR-2 or FEP, to transfer events to automation receiver and control applications</li> <li>• Proprietary protocol, VISNAP, for communication, such as video verification</li> </ul> |
| 3       | Resolve            | Enables the server operator to control and view panel parameters, as well as run tests and create reports   |
| 4       | One-click          | Click to view recent events and any related images or video clips in PowerManage  |
| 5       | VDCP protocol      | Enables the operation of large numbers of panels simultaneously and enables PowerManage to connect to third party applications through a two-way interface. The two-way interface is a Python based program.  |
| 6       | Interactive app    | The user application enables homeowners to perform most operations that are permitted to a panel user. For example, homeowners can view the security system status, remotely arm or disarm the system, receive image verification and view historical logs on a mobile device or remote PC.   |
|         |                    | The installer mobile application enables the installer to view and configure the panel remotely without visiting the customer's residence.  |

# Navigating the user interface

Figure: Navigating the user interface



Table 2. User interface elements

| Callout | Name             | Description   |
|---------|------------------|---|
| 1       | PowerManage logo | Click to view the version, build number, local time and timezone of the server. The PowerManage software version displays beside the PowerManage logo.  |
|         |                  | To change the PowerManage logo to a custom logo, contact technical support.   |
| 2       | Navigation pane  | To view a page, click the page name in the navigation pane.   |
|         |                  | If a menu option does not display for a server user, it can be due to any of the following reasons: <ul style="list-style-type: none"> <li>The required privileges are not defined in the user's role. For more information on roles, see <a href="#">Roles page</a>.</li> <li>The PowerManage server has licensing logic that removes some of the server's functionality. If pages are missing and it is not due to undefined privileges, contact technical support.</li> </ul>  |
| 3       | Search bar       | Search a page by using by free typing or a number of search filter options. For more information, see <a href="#">Using the search filter</a> .   |
| 4       | User icon        | Click the user icon to open a list with the following options: <ul style="list-style-type: none"> <li><b>Settings:</b> To define the automatic log out time, alarm supervision settings, and language for the server user, from the user icon list, click <b>Settings</b>.</li> <li><b>Edit Profile:</b> To edit the phone number and country of the server user, from the user icon list, click <b>Edit Profile</b>.</li> <li><b>Change Password:</b> To change the password of the server user, from the user icon list, click <b>Change Password</b>.</li> <li><b>Help:</b> To view the PowerManage web help, from the user icon list, click <b>Help</b>.</li> <li><b>Logout:</b> To log out of the PowerManage web user interface, from the user icon list, click <b>Logout</b>.</li> </ul> |
|         |                  | The user icon displays the initial of the first name of the user that is logged on. The initials <b>DS</b> display for the default super admin user icon. For more information about users, see <a href="#">Users page</a> .  |



|   |                          |   |
|---|--------------------------|---|
| 5 | <b>MY PROCESSES</b> pane | The <b>MY PROCESSES</b> pane displays the processes that are currently running and the most recently finished processes that were initiated by the user's computer. For more information about the <b>MY PROCESSES</b> pane, see <a href="#">Navigating the MY PROCESSES pane</a> . |
|---|--------------------------|---|

Figure: Navigation pane

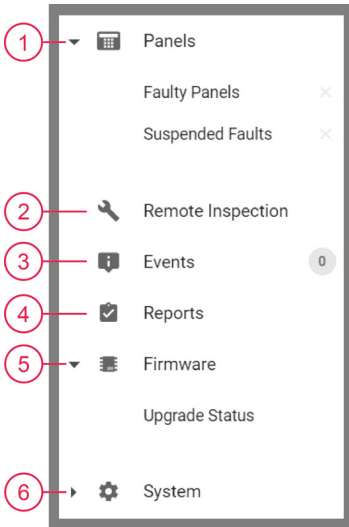


Table 3. Navigation pane pages and lists

| Callout | Name                          | Description   |
|---------|-------------------------------|---|
| 1       | <b>Panels</b> page            | <p>Manage the panels that are enrolled on the server. You can enroll panels manually or automatically. To enroll a new panel, see <a href="#">Adding a panel to the server</a>. For more information about <b>Panels</b> page, see <a href="#">Panels page</a>.</p> <p>To examine a panel in the panel hub, on the <b>Panels</b> page, click the panel name. For more information about the panel hub, see <a href="#">Panel hub</a>.</p> <p>The sub-menus <b>Faulty Panels</b> and <b>Suspended Faults</b> are examples of preset saved search filters that are related to the <b>Panels</b> page. Click <b>X</b> to delete the saved search filter.</p> |
| 2       | <b>Remote inspection</b> page | <p>Open the <b>Remote inspection</b> page to view, run, and schedule health tests for the panels that are enrolled in the server. For more information, see <a href="#">Remote inspections page</a>.</p> <p>To run or view a remote inspection for an individual panel, open the panel in the panel hub and go to the <b>REMOTE INSPECTIONS</b> tab. For more information, see <a href="#">Remote inspections tab</a>.</p>  |
| 3       | <b>Events</b> page            | The <b>Events</b> page displays all of the events that are received from all enrolled panels. For more information, see <a href="#">Events page</a> .   |
| 4       | <b>Reports</b> page           | <p>View, create, stop, and remove reports on the <b>Reports</b> page. Reports are in CSV or PDF format. For more information about reports, see <a href="#">Reports page</a>.</p> <p>If you create a report on the <b>Reports</b> page, the report runs on all panels that are enrolled on the server. To create a report for an individual panel, see <a href="#">Creating a new report on the Panels page</a>.</p>  |
| 5       | <b>Firmware</b> page          | Mass upgrade the firmware of a group of panels or devices on the <b>Firmware</b> page. For more information, see <a href="#">Firmware page</a> .  |
| 6       | <b>System</b> list            | To manage issues related to the server, select the required page from the <b>System</b> list. Manage server issues related to the following categories: groups, processes, users, roles, action log, central stations, basic configurations, installers, interactive users and dashboard. For more information, see Table 4.  |

Figure: Navigating the System list



Table 4. System list pages

| Callout | Name                             | Description   |
|---------|----------------------------------|---|
| 1       | <b>Groups</b> page               | Manage panel groups on the <b>Groups</b> page. A group is a collection of panels that share the same configuration settings. For more information, see <a href="#">Groups page</a> .  |
| 2       | <b>Processes</b> page            | View a list of all the processes that run on the server on the <b>Processes</b> page. For more information, see <a href="#">Processes page</a> .  |
| 3       | <b>Users</b> page                | Create, remove, suspend, or enable server users on the <b>Users</b> page. For more information, see <a href="#">Users page</a> .  |
| 4       | <b>Roles</b> page                | Manage the roles types that you can assign to users. For more information, see <a href="#">Roles page</a> .   |
| 5       | <b>Action log</b> page           | View all of the actions made by the user that is logged on. The <b>Actions log</b> page logs actions in chronological order. A <b>Success</b> or <b>Failure</b> status does not mean that an action finishes with success or failure, it indicates if the action started with success or failure. |
| 6       | <b>Central stations</b> page     | PowerManage can also function as a receiver that forwards events from security panels to automation servers or central stations. Manage the information panels communicate on the <b>Central stations</b> page. For more information, see <a href="#">Central stations page</a> .                 |
| 7       | <b>Basic configurations</b> page | Manage basic configurations that you can push to multiple panels at once in the <b>Basic Configurations</b> page. For more information, see <a href="#">Basic configurations page</a> .   |
| 8       | <b>Installers</b> page           | Manage installer access to the panel with the mobile application on the <b>Installers</b> page. For more information, see <a href="#">Installers page</a> .   |
| 9       | <b>Interactive users</b> page    | Manage user access to the panel with the mobile application on the <b>Interactive users</b> page. For more information, see <a href="#">Interactive users page</a> .  |
| 10      | <b>Dashboard</b> page            | View the overall statistical data from the server in a visual format on the <b>Dashboard</b> page. For more information, see <a href="#">Dashboard page</a> .   |

Related topics

[Navigating the MY PROCESSES pane](#)

[Using the search filter](#)

## Navigating the MY PROCESSES pane

The **MY PROCESSES** pane displays the most recent processes run by the user on the current computer. To view more information about a process, in the **MY PROCESSES** pane, click the process.

For more information about all processes on the server, see [Processes page](#). For more information about the processes of an individual panel, see [Processes tab](#).

Figure: Navigating the MY PROCESSES pane

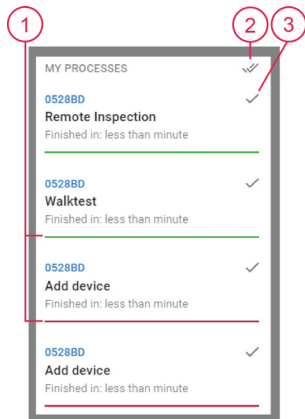


Table 5. MY PROCESS pane interface elements

| Callout | Name                 | Description   |
|---------|----------------------|---|
| 1       | Process status color | The colored line under each process signifies the following statuses: <ul style="list-style-type: none"> <li>• Gray: The process has not started.</li> <li>• Yellow: The process is in progress.</li> <li>• Green: The process finishes successfully.</li> <li>• Red: The process fails.</li> </ul> |
| 2       |                      | Click to remove all of the processes from the processes pane.   |
| 3       |                      | Click to remove a process from the processes pane.  |

### Related topics

[Navigating the user interface](#)


[Using the search filter](#)

## Using the search filter

Filter the search by one of the following methods:

- Type a search term in the **Search** bar and click **SEARCH**.
- Select one or more key-value pairs in the **Search** list.
- Begin to type key-value pairs and click the desired option in the auto-complete list.

Figure: Navigating the search filter selection

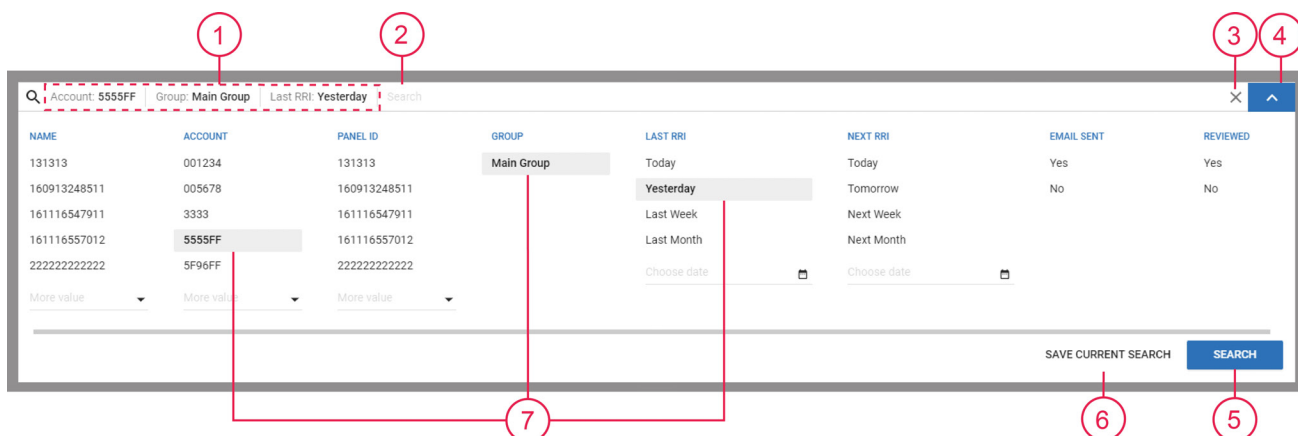

**Table 6. Search interface elements**

| Callout | Name                       | Description   |
|---------|----------------------------|---|
| 1       | Selected filters           | When you select a <b>Search</b> list key-value pair, the key-value pair saves in the <b>Search</b> bar as a filter. Filter the search to return a match of one or more key-value pairs that you set in the <b>Search</b> list.          |
|         |                            | Click a filter in the <b>Search</b> bar to remove it from the search.   |
| 2       | <b>Search</b> bar          | Enter a term or key-value pair in the <b>Search</b> bar to search the selected page.  |
|         |                            | Click the <b>Search</b> bar or start to enter a key or value in the <b>Search</b> bar and a list of options appears. Select a key and pair from the auto-complete list and the key-value pair saves in the <b>Search</b> bar.           |
| 3       | Cancel search              | Click to cancel a search.   |
| 4       | <b>Search</b> list button  | Click to filter the search with one or more key-value pairs.  |
|         |                            | Click the search bar to select a key and a related value, one at a time.  |
| 5       | <b>SEARCH</b>              | Click to search the selected page with a filter or search.  |
| 6       | <b>SAVE CURRENT SEARCH</b> | Click to save your key-value pairs as a preset search. The saved search appears in the navigation pane in a drop-down list under the related page name.   |
|         |                            | <b>Faulty Panels</b> and <b>Suspended Faults</b> are examples of preset saved searches that appear under the <b>Panels</b> page in the navigation pane. To delete a saved search on the navigation pane, click the <b>X</b> next to it. |
| 7       | Selected values            | Click a search value to add it to the selected filters in the search bar. You can only select one value per key. The key-value pairs change depending on the page that is selected.   |
|         |                            | Use the scroll bar to scroll horizontally through the search keys and values.   |

*Related topics*

[Navigating the user interface](#)


[Navigating the MY PROCESSES pane](#)

## Logging on to the PowerManage system

Access the PowerManage system with an email address and password. A user's email address and password identify the user and are set when the user is added to the server. For more information on adding a user to the server, see [Adding a new user](#). To change a user's email address, see [Editing user information](#).

For more information about logging in as the Default Super Admin, see [Default super admin](#).

*Figure: PowerManage logon*

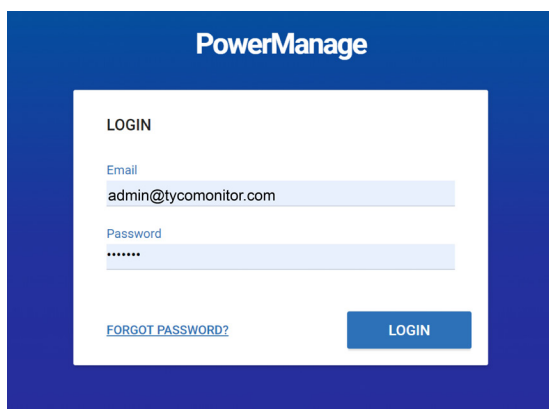

*Related topics*

[Resetting a forgotten password](#)

[Changing your logon password](#)

[Users page](#)

## Resetting a forgotten password

1. From the **LOGIN** dialog box, click **FORGOT PASSWORD** in the lower-left corner.
2. Enter your registered email address in the email field and click **REMIND**.
3. Log on to the email account of the address you provide and retrieve your new password.  
**Note:** If you cannot find the email with the password reset in your inbox, check your spam folder.
4. Log on with your email address and new password.

### Related topics

[Changing your logon password](#)

[Logging on to the PowerManage system](#)

## Changing your logon password

1. Click the user icon in the upper-right of any page.
2. From the **User** list, select **Change Password**.
3. Enter your current password in the **Current Password** field.
4. Enter your new password in the **New Password** and **Confirm Password** fields.
5. Click **SAVE**.

**Note:** To change the password of a server user with fewer permissions, navigate to the user on the **Users** page and click the edit user icon. For more information, see Edit user in Table 38.

### Related topics

[Resetting a forgotten password](#)

[Logging on to the PowerManage system](#)

## Configuring the server parameters by using the PowerManage web application

1. Open a web browser.  
**Note:** The PowerManage server does not support Internet Explorer or Opera.
2. Enter the IP address or the DNS name of your PowerManage server. For example, enter: `https://<server URL name>`.
3. To log on, enter the default username and password:
  - Username: `admin@tycomonitor.com`
  - Password: `Admin123`

**Important:** Change the default admin password as soon as possible. For more information, see [Changing your logon password](#).

## Configuring the server parameters by using the PowerManage Management Console

**Note:** Use the Management Console to configure the server in the initial stages of the panel installation. It is also mandatory to use the Management Console to configure the internet connection during the setup stages. The Management Console is also referred to as MMI.

1. To log on to the PowerManage server, use an SSH program such as PuTTY, or use the web browser URL: `<power-manage DNS name>:2200`.
2. Enter the default username, `root`.
3. Enter the default password, `visonic`.

**Note:** If you log on for the first time, you are prompted to enter a new password after this step.

# Panels page

You can view a list of all of the panels that are enrolled on the server on the **Panels** page.

Figure: Navigating the Panels page

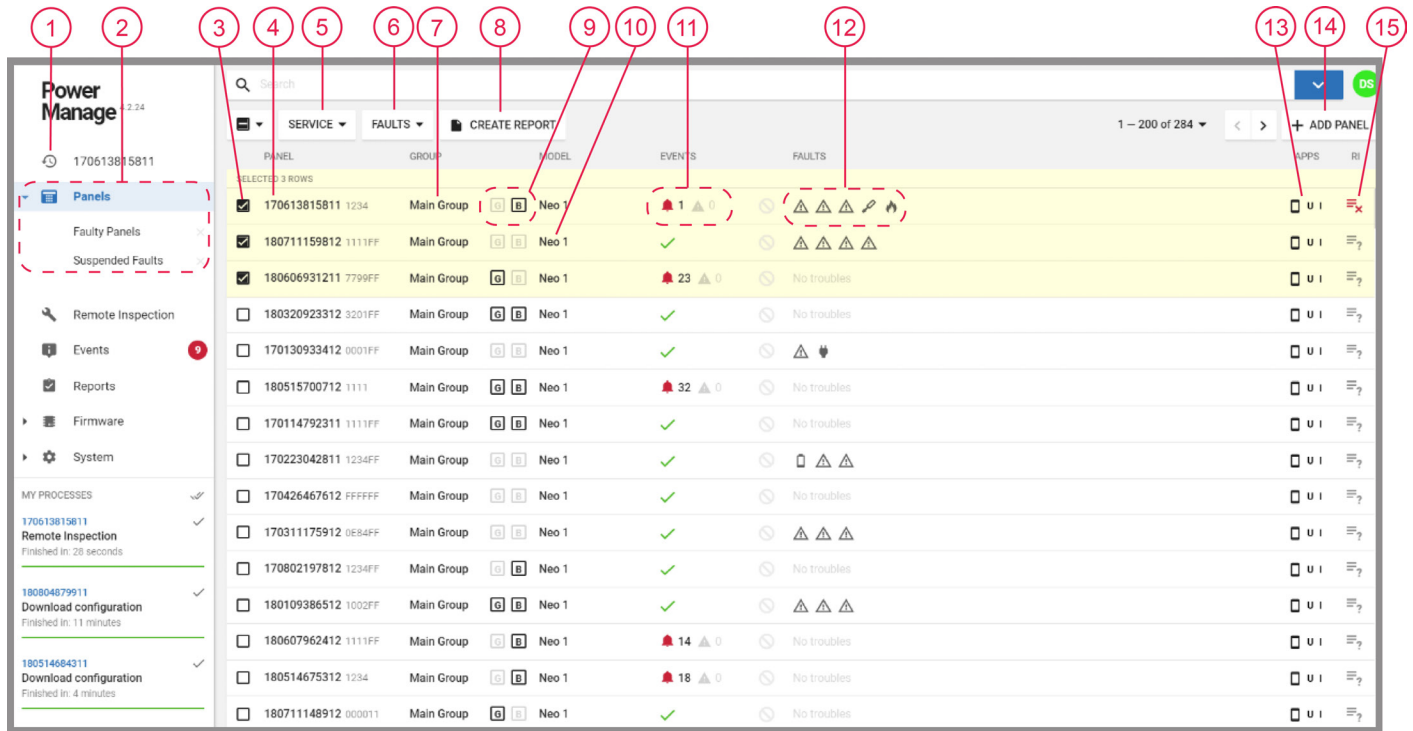


Table 7. Panels page interface elements

| Callout | Name                   | Description  |
|---------|------------------------|--|
| 1       | Last panel viewed      | Click to view the last panel viewed in the panel hub   |
| 2       | Panel filter           | <p>Customized search filters that you create for the <b>Panels</b> page appear here. For more information, see <a href="#">Using the search filter</a>.</p> <p>The preset <b>Faulty Panels</b> and <b>Suspended Faults</b> search filters appear by default. Click <b>Faulty Panels</b> to filter the panels page to only display panels with faults. Click <b>Suspended Faults</b> to filter the panels page to only display panels with suspended faults.</p>  |
| 3       | Check box              | Select the check box of one or more panels to enable <b>SERVICE</b> , <b>FAULTS</b> , and <b>CREATE REPORT</b> .   |
| 4       | Panel name and account | <p>Displays the panel name and panel ID. By default, the panel name is the panel ID. To change this to a custom name, edit the panel information in the panel hub. For more information, see <b>EDIT</b> in Table 10. For more information on changing the panel name or account, see <a href="#">Editing basic panel and customer information</a>.</p> <p><b>Note:</b> For Neo panels, the panel ID is the integration identification number. To find this number, enter [851] [422] in the panel keypad.</p> <p>Select the panel name to open the panel in the panel hub. For more information about the panel hub, see <a href="#">Panel hub</a>.</p> |
| 5       | <b>SERVICE</b>         | <p>To perform an action on one or more selected panels, from the <b>SERVICE</b> list, select one of the following options:</p> <ul style="list-style-type: none"> <li>• <b>Change Group</b></li> <li>• <b>Refresh State</b></li> <li>• <b>Refresh configuration</b></li> <li>• <b>Push Basic Configuration</b></li> <li>• <b>Remove</b></li> </ul> <p>For more information on servicing panels, see <a href="#">Servicing panels</a>.</p> <p>To enable <b>SERVICE</b>, select the check box of one or more panel rows.</p>   |

|    |                         |   |
|----|-------------------------|---|
| 6  | <b>FAULTS</b>           | <p>To perform an action on one or more selected panels, from the <b>FAULTS</b> list, select one of the following options:</p> <ul style="list-style-type: none"> <li>• <b>Mark for service</b></li> <li>• <b>Reassign</b></li> <li>• <b>Resolve faults</b></li> <li>• <b>Suspend faults</b></li> <li>• <b>Resume faults</b></li> </ul> <p>For more information on servicing panels, see <a href="#">Servicing panels</a>.</p>   |
|    |                         | To enable <b>FAULTS</b> , select the check box of one or more panel rows.   |
| 7  | <b>GROUP</b> column     | <p>The group that the panel connects to displays in the <b>GROUP</b> column. For more information about groups, see <a href="#">Groups page</a>.</p>  |
|    |                         | Click the group name to open the group hub. For more information about the group hub, see .   |
| 8  | <b>CREATE REPORT</b>    | <p>Click to create a new report for one or more selected panels. For more information about creating a report, see <a href="#">Creating new reports</a> and <a href="#">Creating a new report on the Panels page</a>.</p>   |
|    |                         | To enable <b>CREATE REPORT</b> , select the check box of one or more panel rows.  |
| 9  | Connection status       | <p>The <b>G</b> icon represents a GPRS or cellular connection and the <b>B</b> icon represents an Ethernet or broadband connection. The color of an icon represents the following information:</p> <ul style="list-style-type: none"> <li>• If an icon is gray, no communication channel is present.</li> <li>• If an icon is green, the communication channel is present and the server receives keepalive messages from the panel.</li> <li>• If an icon is blue, there is an open connection between the panel and the server.</li> <li>• If an icon is red, the communication channel is present but the server does not receive keepalive messages from the panel.</li> <li>• If an icon is black, keepalive messages are disabled in the panel's group.</li> </ul> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>• You can only disable keepalive messages for Neo panel groups.</li> <li>• The icon, <b>Bg</b>, indicates that the cellular connection is through an Ethernet board.</li> </ul> |
| 10 | Panel model             | The model of the panel  |
| 11 | <b>EVENTS</b> column    | <p>The <b>EVENTS</b> column contains a summary of alarm and alert events. The bell symbols indicates an alarm and the warning symbol indicates an alert. For more information on events, see Event severity in Table 28.</p>  |
|    |                         | Click the bell symbol to view a list of alarms from the panel and click the warning symbol to view a list of alerts from the panel.   |
|    |                         | If there are no events, or all events are resolved, a green check mark displays.  |
| 12 | <b>FAULTS</b> column    | <p>The <b>FAULTS</b> column displays any faults that affect the panel.</p>  |
|    |                         | Hover over a fault icon to see a detailed description of the fault. Click a fault to view a list of all faults from the panel.  |
|    |                         | If a panel is marked for service, a user icon appears to left of the <b>FAULTS</b> column with the initial of the user that is assigned to service the panel. For more information about marking or reassigning a panel for service, see <a href="#">Marking a panel for service in the Panels hub</a> and <a href="#">Reassigning one or more panels that are marked for service</a> .   |
| 13 | User and installer apps | <p>Click to open the user and installer apps dialog box and perform one of the following actions:</p> <ul style="list-style-type: none"> <li>• To allow a user to access the application by using the mobile application, turn on <b>User App</b>.</li> <li>• To disallow a user to access the application by using the mobile application, turn off <b>User App</b>.</li> <li>• To allow an installer to access the application by using the mobile application, turn on <b>Installer App</b>.</li> <li>• To disallow an installer to access the application by using the mobile application, turn off <b>Installer App</b>.</li> </ul>  |

|    |                  |  |
|----|------------------|--|
| 14 | <b>ADD PANEL</b> | Click to add a new panel to the server. For more information on adding a panel to the server, see <a href="#">Adding panels to the server</a> .  |
| 15 | <b>RI column</b> | The <b>RI</b> column displays the status of the last remote inspection.  |
|    |                  | Click the <b>RI</b> icon to open the panel on the <b>REMOTE INSPECTIONS</b> tab in the panel hub. For more information about <b>REMOTE INSPECTIONS</b> tab, see <a href="#">Remote inspections tab</a> . |

*Related topics*

[Servicing panels](#)

[Adding panels to the server](#)

[Adding a panel to the server](#)

[Assigning a panel to a different group](#)

[Creating a new report on the Panels page](#)

[Marking one or more panels for service on the Panels page](#)

[Pushing a basic configuration to one or more panels](#)

[Reassigning one or more panels that are marked for service](#)

[Refreshing a panel configuration](#)

[Resolving faults in one or more panels](#)

[Suspending faults in one or more panels](#)

**Adding panels to the server**

Add a panel to the server on the **Panels** page.

**Note:** By default, panels auto-enroll on the server. To disable auto-enroll, contact technical support.

*Figure: ADD PANEL dialog box*

To add a panel, click **ADD PANEL** on the **Panels** page. For more information, see **ADD PANEL** in Table 7.

The screenshot shows the 'ADD NEO PANEL' dialog box. It is divided into two main sections: 'Panel Info' on the left and 'Customer Info' on the right. The 'Panel Info' section contains fields for Panel type (Neo), Panel Id, Name, Account, Group, Client Type (Cellular/Ethernet), and Sim Number. The 'Customer Info' section contains fields for Name, Email, Phone, Address, and Remark. A red dashed box highlights the 'Customer Info' section, with callout 8 pointing to it. Callouts 1 through 7 point to the 'Panel Info' fields: 1 to Panel type, 2 to Panel Id, 3 to Name, 4 to Account, 5 to Group, 6 to Client Type, and 7 to Sim Number. At the bottom right, there are 'DISMISS' and 'SAVE' buttons.

In the **ADD PANEL** dialog box, enter the panel information. See the following definition list for descriptions of the dialog box fields:

**Table 8. ADD PANEL dialog box elements**

| Callout | Name              | Description  |
|---------|-------------------|--|
| 1       | <b>Panel type</b> | From the <b>Panel type</b> list, select the panel type.  |
| 2       | <b>Panel Id</b>   | In the <b>Panel ID</b> field, enter the panel identification number.<br><b>Note:</b> For Neo panels, enter the integration identification number in panel installer menu: [851] [422]. |
| 3       | <b>Name</b>       | In the <b>Name</b> field, enter a name for the panel.  |
|         |                   | The panel name identifies the panel to mobile application users. If no panel name is entered, the panel ID appears instead.  |
| 4       | <b>Account</b>    | To connect the panel to an automation or central station, enter the ID number of the automation or central station in the <b>Account</b> field.  |
| 5       | <b>Group</b>      | From the <b>Group</b> list, select the group that you want to associate the panel with.  |



|   |                      |  |
|---|----------------------|--|
| 6 | <b>Client Type</b>   | Select or clear the <b>Cellular</b> and <b>Ethernet</b> check boxes to define how the panel connects to the server. You can select <b>Cellular</b> , <b>Ethernet</b> , or both.  |
| 7 | <b>SIM number</b>    | In the <b>SIM number</b> field, enter the number of the SIM card in the panel. The number is used to send a wake-up SMS to the panel.<br><b>Note:</b> The SIM number is equivalent to a phone number.                      |
| 8 | <b>Customer Info</b> | Enter the customer's information in the <b>Name</b> , <b>Email</b> , <b>Phone</b> , <b>Address</b> , and <b>Remark</b> fields.<br><b>Note:</b> Apart from the <b>Email</b> field, this information is stored and not used. |

## Adding a panel to the server

1. In the navigation pane, select **Panels**.
2. On the **Panels** page, click **ADD PANEL**.
3. Enter the required information in the **ADD PANEL** dialog box fields. For more information on the **ADD PANEL** dialog box fields, see [Adding panels to the server](#).
4. Click **SAVE**.

### Related topics

[Servicing panels](#)

[Panels page](#)

## Servicing panels

You can service an individual panel in the panel hub, or multiple panels at once in the **Panels** page. When servicing a panel with the **SERVICE** or **FAULTS** lists, see the following definitions:

**Table 9. Panel servicing options**

| Action                          | Description  |
|---------------------------------|--|
| <b>Change Group</b>             | Move one or more panels from one group to another. For more information about groups, see <a href="#">Groups page</a>  |
| <b>Refresh State</b>            | Refresh the most up-to-date information for one or more panels, such as the faults and panel status  |
| <b>Refresh Configuration</b>    | Refresh the configuration parameters of one or more panels.  |
| <b>Push Basic Configuration</b> | Push a custom basic configuration to one or more panels. For more information about creating a basic configuration, see <a href="#">Creating a basic configuration from an existing panel configuration</a> .  |
| <b>Remove</b>                   | Remove one or more panels from the server<br><b>Note:</b> If the server is set to auto-enroll and the panel is still connected to the server, the panel enrolls again.   |
| <b>Mark for service</b>         | Mark one or more panels for service. If you mark a panel for service, the service icon and the user icon of the user that the task is assigned to appear in the <b>FAULTS</b> column on the <b>Panels</b> page. The user icon features the initials of the assigned server user. |
| <b>Reassign</b>                 | Assign the service task of one or more panels to a different server user   |
| <b>Resolve faults</b>           | Remove the service icon and user icon from one or more panels that are marked for service  |
| <b>Suspend faults</b>           | Suspend a fault on one or more panels until a specified date. The fault icons become gray in the <b>FAULTS</b> column on the <b>Panels</b> page.   |
| <b>Resume faults</b>            | Resume suspended faults on one or more panels  |

### Related topics

[Panels page](#)

[Panel hub](#)

[Adding panels to the server](#)

[Adding a panel to the server](#)

[Assigning a panel to a different group](#)

[Creating a new report on the Panels page](#)

[Enabling automatic panel enrollment](#)

[Marking one or more panels for service on the Panels page](#)

[Pushing a basic configuration to one or more panels](#)

[Reassigning one or more panels that are marked for service](#)

[Refreshing a panel configuration](#)

[Resolving faults in one or more panels](#)

[Suspending faults in one or more panels](#)

## Refreshing a panel configuration

1. In the navigation pane, select **Panels**.
2. Select the check box of one or more panels to refresh.
3. From the **SERVICE** list, select **Refresh configuration**.

A **Download configuration** process appears in the **MY PROCESSES** pane.

*Related topics*

[Servicing panels](#)

[Panels page](#)

## Pushing a basic configuration to one or more panels

1. In the navigation pane, click **Panels**.
2. Select the check box of one or more panels to configure.
3. From the **SERVICE** list, select **Push Basic Configuration**.
4. In the **PUSH BASIC CONFIG** dialog box, select a basic configuration.
5. Click **PUSH**.

*Related topics*

[Servicing panels](#)

[Panels page](#)

## Assigning a panel to a different group

1. From the navigation pane, select **Panels**.
2. Select the check box of one or more panels to reassign.
3. From the **SERVICE** list, select **Change group**.
4. In the **ASSIGN PANEL TO GROUP** dialog box, select a group from the **Group** list.
5. Click **SAVE**.

*Related topics*

[Servicing panels](#)

[Panels page](#)

## Marking one or more panels for service on the Panels page

1. In the navigation pane, click **Panels**.
2. Select the check box of one or more panels to mark for service.
3. From the **FAULTS** list, select **Mark for service**.
4. In the **MARK PANEL FOR SERVICE** dialog box, from the **To** field, select a user.
5. Enter a comment in the **Comment** field.
6. Click **SAVE**.

*Related topics*

[Servicing panels](#)

[Panels page](#)

## Reassigning one or more panels that are marked for service

1. In the navigation pane, click **Panels**.
2. Select the check box of one or more panels to reassign.
3. From the **FAULTS** list, select **Reassign**.
4. In the **REASSIGN PANEL FOR SERVICE** dialog box, from the **To** field, select a user.
5. Enter a comment in the **Comment** field.
6. Click **SAVE**.

*Related topics*

[Servicing panels](#)

[Panels page](#)

## Resolving faults in one or more panels

1. In the navigation pane, click **Panels**.
2. Select the check box of one or more panels.
3. From the **FAULTS** list, select **Resolve faults**.
4. In the **RESOLVE FAULTS** dialog box, select one or more faults to resolve.

**Note:** Only resolvable faults appear.

5. Click **SAVE**.

*Related topics*

[Servicing panels](#)

[Panels page](#)

## Suspending faults in one or more panels

1. In the navigation pane, click **Panels**.
2. Select the check box of one or more panels.
3. From the **FAULTS** list, select **Suspend faults**.
4. In the **SUSPEND FAULTS** dialog box, select one or more faults to resolve.
5. Enter a date in the **Suspend until** field manually or with the calendar.
6. Click **SAVE**.

*Related topics*

[Servicing panels](#)

[Panels page](#)

## Creating a new report on the Panels page

1. In the navigation pane, click **Panels**.
2. Select the check box of one or more panels.
3. Click **CREATE REPORT**.
4. Enter a report name in the **Report Name** field and configure the settings to define your report. For more information on report settings, see [Creating new reports](#).
5. Click **SAVE**.

The report now appears on the **Reports** page.

*Related topics*

[Servicing panels](#)

[Panels page](#)

# Panel hub

View and configure detailed information for an individual panel in the panel hub. For more information on viewing a panel in the panel hub, see [Viewing a panel in the panel hub](#).

The panel data is categorized by the following tabs. For more information, see Panel hub tabs in Table 10.

- **DEVICES:** Manage all devices that connect to the panel. For more information, see [Devices tab](#).
- **INFO:** View and edit general information about the panel and the customer, and leave comments about a panel. For more information, see [Info tab](#).
- **STATE:** Arm and disarm panels and partitions. For more information, see [State tab](#).
- **CONFIGURATION:** Configure an individual panel and its zones, outputs, communication, and user settings. For more information, see [Configuration tab](#).
- **PROCESSES:** View a list of all finished processes for a panel. For more information, see [Processes tab](#).
- **REPORTS:** View all reports that have occurred or are scheduled for a panel. For more information, see [Reports tab](#).
- **LOGS:** View a panel's log files. For more information, see [Logs tab](#).
- **REMOTE INSPECTIONS:** Manage the remote inspections for a panel. For more information, see [Remote Inspections tab](#).
- **EVENTS:** View events related to a panel. For more information, see [Events tab](#).
- **FIRMWARE:** Upgrade an individual panel's software and its connected devices. For more information, see [Firmware tab](#).
- **KEYPAD:** Use a virtual keypad interface. For more information, see [Keypad tab](#).

**Note:** A Neo panel requires activation the first time you open it in the panel hub. If the message **This panel has not been activated yet and cannot be correctly managed from PowerManager** appears below the panel hub tabs, click **ACTIVATE**. In the **ACTIVATE PANEL** dialog box, enter the panel's installer code in the **Installer Code** field and click **ACTIVATE**.

Figure: Panel hub

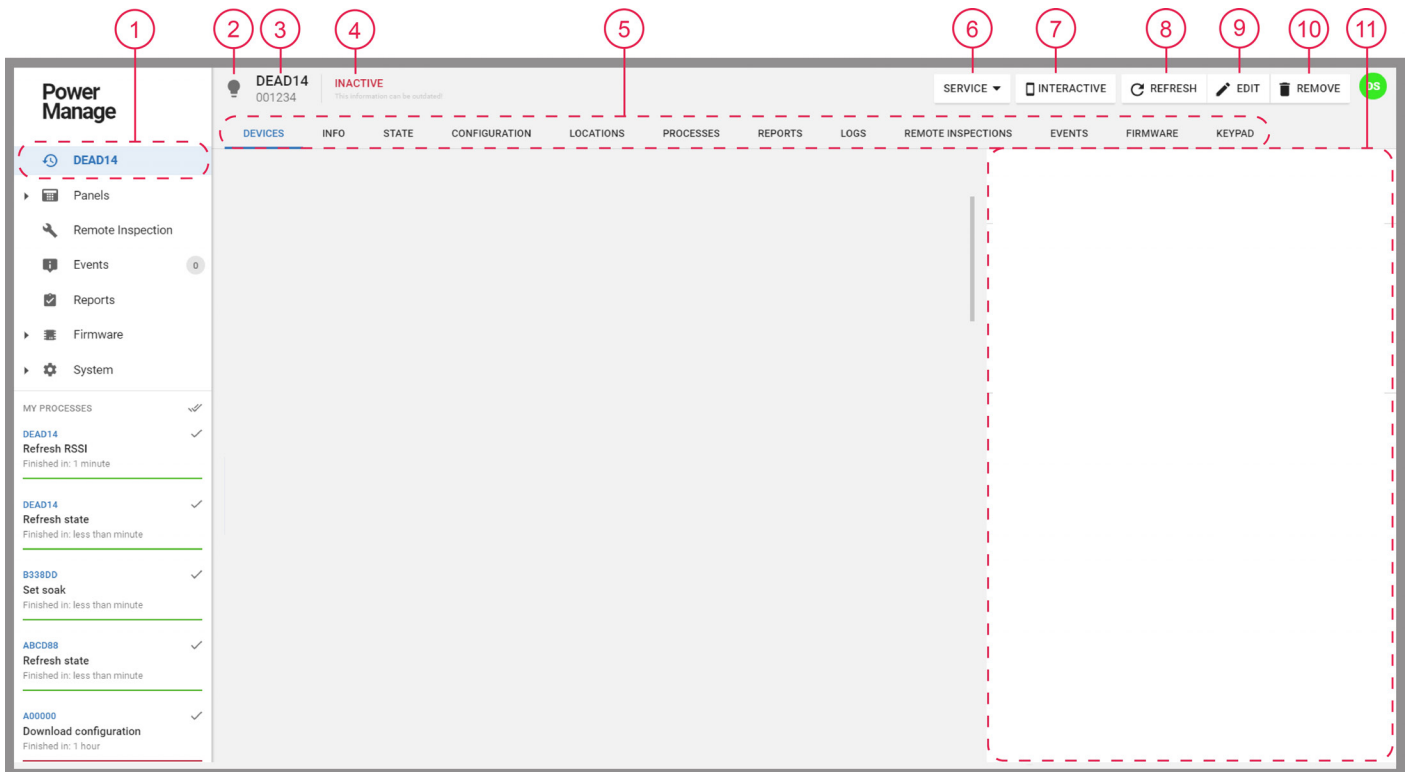




Table 10. Panel hub interface elements

| Callout | Name              | Description   |
|---------|-------------------|---|
| 1       | Last viewed panel | Click to view the last viewed panel in the panel hub.   |
| 2       | Online status     | <p>The bulb color signifies the status of the connection between the panel and the server. Hover over the bulb to see a text description of the connection status.</p> <ul style="list-style-type: none"> <li> If the bulb is blue, the panel has open connection to the server. Commands from the server execute immediately.</li> <li> If the bulb is gray, keepalive messages are disabled in the group that the panel associates with.</li> </ul> |

|    |                    |   |
|----|--------------------|---|
|    |                    |  If the bulb is white with a red outline, the panel is offline. There is no open connection and the server does not receive keepalive messages from the panel.<br> If the bulb is green, the panel is online. The the server receives keepalive messages from the panel.  |
| 3  | Panel name         | Displays the panel name and account number of the selected panel  |
| 4  | Status stream      | A stream of various statuses. The status stream may not be up-to-date if the online status bulb is not green.   |
| 5  | Panel hub tabs     | Click a tab title to view the tab in the panel hub.   |
| 6  | <b>SERVICE</b>     | <p>To perform an action on the panel, from the <b>SERVICE</b> list, select one of the following options:</p> <ul style="list-style-type: none"> <li>• <b>Mark for service:</b> Select to mark a panel for service</li> <li>• <b>Reassign a service task:</b> Select to assign the service task to a different server user</li> <li>• <b>Resolve faults:</b> Select to remove the service icon and user icon from a panel that is marked for service. The fault is now resolved</li> <li>• <b>Suspend faults:</b> Select to suspend a fault until a specified date. The fault icons become gray in the <b>FAULTS</b> column</li> <li>• <b>Resume faults:</b> Select to resume suspended faults.</li> </ul> |
| 7  | <b>INTERACTIVE</b> | Click to allow or disallow the user or installer access the to user or installer mobile application   |
| 8  | <b>REFRESH</b>     | Click to receive a reading of the latest status change in the panel   |
| 9  | <b>EDIT</b>        | Click to edit the panel information. You can edit the panel ID, name, account number, group, client type, and SIM number.   |
| 10 | <b>REMOVE</b>      | Click to remove the panel from the server.  |
| 11 | Examination pane   | In certain tabs, if you click an item in the tab, more information about the item appears in the examination pane.  |

#### Related topics

[Marking a panel for service in the panels hub](#)

[Reassigning a panel for service in the panels hub](#)

[Resolving faults in a panel in the panels hub](#)

[Resuming faults in a panel in the panels hub](#)

[Suspending faults in a panels in the panels hub](#)

[Viewing a panel in the panel hub](#)

#### Viewing a panel in the panel hub

1. In the navigation pane, click **Panels**.
2. On the **Panels** page, navigate to the panel to view and click the panel name in the **PANEL** column.

#### Related topics

[Panel hub](#)

#### Marking a panel for service in the panels hub

1. To open a panel in the panel hub, on the **Panels** page, click the panel name in the **PANEL** column.
2. From the **SERVICE** list, select **Mark for service**.
3. In the **MARK PANEL FOR SERVICE** dialog box, select a user from the **To** list.
4. Enter a comment in the **Comment** field.
5. Click **SAVE**.

#### Related topics

[Panel hub](#)

#### Reassigning a panel for service in the panels hub

1. To open a panel in the panel hub, on the **Panels** page, click the panel name in the **PANEL** column.
2. From the **SERVICE** list, select **Reassign**.
3. In the **REASSIGN PANEL FOR SERVICE** dialog box, select a user from the **To** list.

4. Enter a comment in the **Comment** field.
5. Click **SAVE**.

### Resolving faults in a panel in the panels hub

1. To open a panel in the panel hub, on the **Panels** page, click the panel name in the **PANEL** column.
2. From the **SERVICE** list, select **Resolve faults**.
3. In the **RESOLVE FAULTS** dialog box, click one or more faults to resolve.

**Note:** Only resolvable faults appear.

4. Click **SAVE**.

*Related topics*

[Panel hub](#)

### Suspending faults in a panel in the panels hub

1. To open a panel in the panel hub, on the **Panels** page, click the panel name in the **PANEL** column.
2. From the **SERVICE** list, select **Suspend Faults**.
3. In the **SUSPEND FAULTS** dialog box, click one or more faults to resolve, or select the **All** check box to select all of the faults.
4. Enter a date in the **Suspend until** field manually or with the calendar.
5. Click **SAVE**.

*Related topics*

[Panel hub](#)

### Resuming faults in a panel in the panels hub

1. To open a panel in the panel hub, on the **Panels** page, click the panel name in the **PANEL** column.
2. From the **SERVICE** list, select **Resume faults**.
3. In the **RESUME FAULTS** dialog box, click one or more faults to resume.
4. Click **SAVE**.

*Related topics*

[Panel hub](#)

# Devices tab

Manage all devices that connect to a panel on the **DEVICES** tab.

Figure: Navigating the **DEVICES** tab

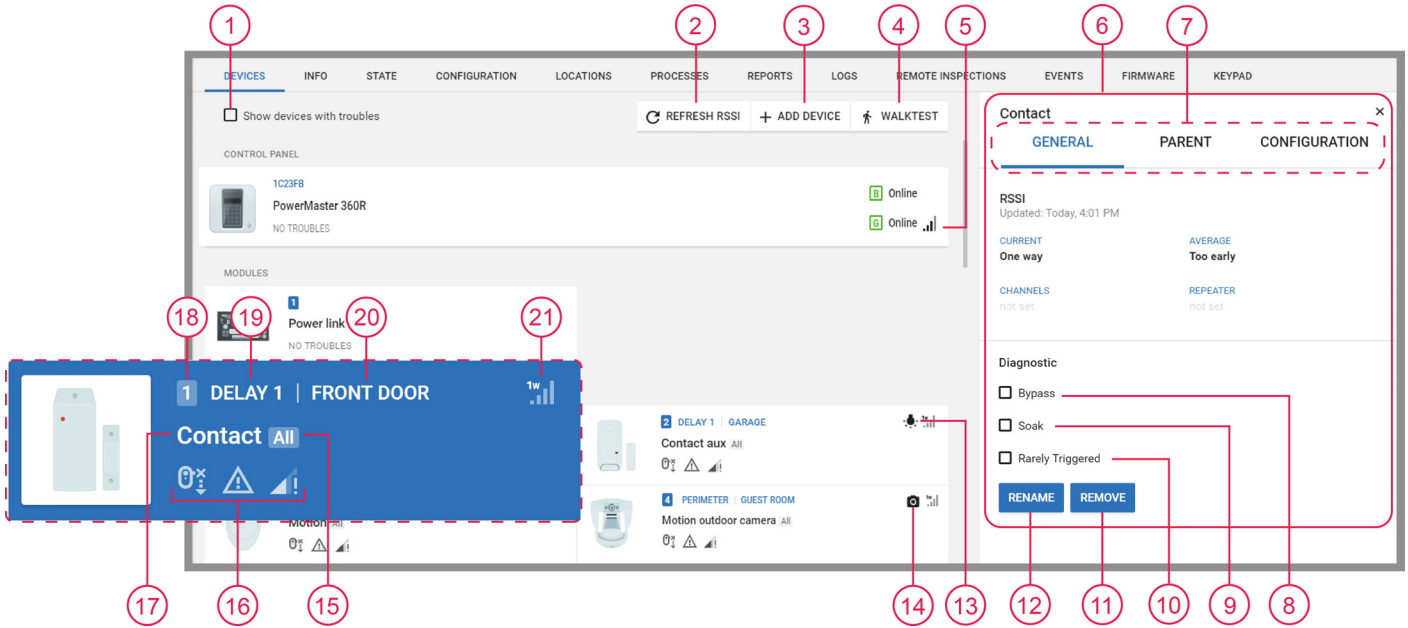


Table 11. **DEVICES** tab interface elements

| Callout | Name                  | Description  |
|---------|-----------------------|--|
| 1       | Troubles check box    | To only display devices with troubles, select the <b>Show devices with troubles</b> check box.   |
| 2       | <b>REFRESH RSSI</b>   | To refresh the Received Signal Strength Indication (RSSI) for the panel and its connected devices, click <b>REFRESH RSSI</b> .<br><br>There are two types of radio frequencies: GPRS connects the panel to the server with a cellular modem and PowerG connects wireless devices to the panel. For more information on the GPRS RSSI of the panel, see Panel RSSI. For more information on the RSSI of a device, see Device RSSI.  |
| 3       | <b>ADD DEVICE</b>     | Click to pre-enroll a new wireless device on the panel with the device enrollment ID and zone number   |
| 4       | <b>WALK TEST</b>      | Click to perform a walk test on all eligible devices. A walk test discovers if wireless stationary devices are operational and reporting event information to the panel. See <a href="#">Performing a walktest on all eligible devices</a> for more information.   |
| 5       | Panel RSSI            | Displays the Received Signal Strength Indication of the panel's cellular connection.<br><b>Note:</b> The ? icon indicates that no RSSI measurement exists.   |
| 6       | Examination pane      | The examination pane appears when you select a device on the <b>DEVICES</b> tab.   |
| 7       | Examination pane tabs | Depending on a device's features, the examination pane displays interactive tabs for the device.<br><br><b>GENERAL:</b> View general information about the device and perform general tasks on the <b>GENERAL</b> tab. On the <b>GENERAL</b> tab, you can view RSSI information, rename or remove a device, bypass or soak a device, and mark a device as rarely triggered.<br><br><b>CONFIGURATION:</b> On the <b>CONFIGURATION</b> tab, you can view and edit device configuration settings, such as the location, Rf-id number, enrollment method, zone type, chime and subtype. To ensure the information is up-to-date, click <b>REFRESH</b> . If no configuration is available, click <b>DOWNLOAD NOW</b> .<br><br><b>VIDEO ON DEMAND:</b> Appears if the device has video capturing capabilities. To view the video footage of video on demand device, click the <b>VIDEO ON DEMAND</b> tab. For more information, see <a href="#">Using the video on demand tab</a> .<br><br><b>PARENT:</b> Appears if an auxiliary device is wired to a parent device. To view the parent device, click the <b>PARENT</b> tab. For more information, see <a href="#">Using the PARENT and CHILDREN tabs</a> . |

|    |                         |  |
|----|-------------------------|--|
|    |                         | <p><b>CHILDREN:</b> Appears if a parent device connects to an auxiliary wired device. To view the child device or devices, click the <b>CHILDREN</b> tab. For more information, see <a href="#">Using the PARENT and CHILDREN tabs</a>.</p> <p><b>METEO:</b> Appears if a device has smart sensing features. To view the temperature and light data of a smart detector, click the <b>METEO</b> tab. To find the smart sensing icon, see Smart sensing. For more information on the <b>METEO</b> tab, see <a href="#">Temperature and light readings on the METEO tab</a>.</p> |
| 8  | <b>Bypass</b>           | To disable a device from triggering an alarm, select the <b>Bypass</b> check box. The device is not bypassed after the next arm or disarm state change.  |
| 9  | <b>Soak</b>             | To put a device in a soak state in order to monitor for false alarms, select the <b>Soak</b> check box. A device that is in a soak state does not create an alarm but a soak event.  |
| 10 | <b>Rarely triggered</b> | Device inactivity causes a remote inspection test to fail. If a device is not expected to trigger often, select the <b>Rarely Triggered</b> check box.<br><b>Note:</b> For more information on remote inspections, see <a href="#">Remote inspections tab</a> .  |
| 11 | <b>REMOVE</b>           | Click to remove a device from the panel  |
| 12 | <b>RENAME</b>           | Click to rename a device<br><b>Note:</b> For PowerMaster panels the name saves on the server. For Neo and PSP panels the name saves as a label in the panel.   |
| 13 | Smart sensing           | The smart sensing icon indicates that the device has smart temperature and light sensing features.<br>If a device has the smart sensing icon, you view temperature and light readings on the METEO tab. For more information, see <a href="#">Temperature and light readings on the METEO tab</a> .  |
| 14 | Camera                  | The camera icon indicates that the device has video capabilities and you can view the device's video footage in the examination pane.  |
| 15 | Partition               | Displays the partition that the device is in<br><b>All</b> indicates that the device is connected to all partitions.   |
| 16 | Trouble icons           | Displays all of the troubles that affect the device. Hover over an icon to see a description of the trouble.   |
| 17 | Device type             | Displays the device type. Examples of device types are contact, LCD keypad, and motion outdoor camera.   |
| 18 | Device number           | The device number refers to the zone number for a sensor and the index number for infrastructural devices, such as a keypad, siren, or repeater.   |
| 19 | Device zone type        | Displays the device's zone type. Examples of zone types are perimeter, home delay, interior follow, or fire.   |
| 20 | Location                | Displays the location of the device.<br><b>Note:</b> For PowerMaster panels, the location of zoned devices displays. For Neo/PSP panels, the label of the device displays.   |
| 21 | Device RSSI             | Displays the Received Signal Strength Indication of wireless devices or panels that have a cellular connection.<br><b>Note:</b> The ? icon indicates that no RSSI measurement exists.  |

#### Related topics

[Panel hub](#)

[Adding a wireless device to a panel](#)

[Bypassing, soak testing, and marking a device as rarely triggered](#)

[Editing the configuration of a device](#)

[Performing a walk test on all eligible devices](#)

[Putting a device in a soak test state](#)

[Refreshing the Received Signal Strength Indicator of a panel](#)

[Renaming or removing a device](#)

[Temperature and light readings on the METEO tab](#)

[Using the VIDEO ON DEMAND tab](#)



[Viewing device video footage](#)

[Viewing all devices with troubles in a panel](#)

[Viewing device smart temperature and light readings](#)

[Using the PARENT and CHILDREN tabs.](#)

## Adding a wireless device to a panel

1. To open a panel in the panel hub, on the **Panels** page, click the panel name in the **PANEL** column.
2. Click **ADD DEVICE**.
3. Enter the enrollment identification number in the **Enrollment ID** field.  
**Note:** The device ID is on the device's label, written in the following format: **ID: XXX-XXXX**. The first three digits of the identification number indicate the device type and the remaining four digits are unique to the device.
4. Enter the desired zone number or the device number.
5. Click **ADD**.

The device is now pre-enrolled. To complete the enrollment process, refer to the device manual.

*Related topics*

[Devices tab](#)

[Panel hub](#)

## Refreshing the Received Signal Strength Indicator of a panel

1. To open a panel in the panel hub, on the **Panels** page, click the panel name in the **PANEL** column.
2. Click **REFRESH RSSI**.

*Related topics*

[Devices tab](#)

[Panel hub](#)

## Viewing all devices with troubles in a panel

1. To open a panel in the panel hub, on the **Panels** page, click the panel name in the **PANEL** column.
2. Select the **Show devices with troubles** check box.

*Related topics*

[Devices tab](#)

[Panel hub](#)

## Performing a walktest on all eligible devices

1. To open a panel in the panel hub, on the **Panels** page, click the panel name in the **PANEL** column.
2. To view the devices that are eligible for a walk test, click **WALKTEST**.  
**Note:** To return to the **DEVICES** tab, click **DIAGNOSTICS**.
3. Click **START WALKTEST**.

**Note:** When you click **START WALKTEST**, the walktest begins and this button changes to **STOP WALKTEST**. To stop a walktest click **STOP WALKTEST**.

**Note:** The ? icon beside each device indicates the device has not yet passed the walktest. When the device triggers, the ? icon disappears to indicate that the device passes the test.

### Important:

- Neo panel walktests ends if you click **STOP WALKTEST** or the test times out.
- PowerMaster panel walktests ends if all sensors are activated or the test times out.

*Related topics*

[Devices tab](#)

[Panel hub](#)

## Bypassing, soak testing, and marking a device as rarely triggered

1. To open a panel in the panel hub, on the **Panels** page, click the panel name in the **PANEL** column.
2. On the **DEVICES** tab, select the device to bypass, soak test, or mark as rarely triggered.

3. On the **GENERAL** tab in the examination pane, select one of the following check boxes to perform the action:

- **Bypass**
- **Soak**
- **Rarely Triggered**

*Related topics*

[Devices tab](#)

[Panel hub](#)

### Renaming or removing a device

1. To open a panel in the panel hub, on the **Panels** page, click the panel name in the **PANEL** column.
2. On the **DEVICES** tab, click the device to rename or remove.
3. From the **GENERAL** tab in the examination pane, select one of the following options:
  - Click **RENAME** and enter a new device name in the **Name** field.
  - Click **REMOVE**.
4. To confirm, click **RENAME** or **REMOVE**.

*Related topics*

[Devices tab](#)

[Panel hub](#)

### Editing the configuration of a device

1. To open a panel in the panel hub, on the **Panels** page, click the panel name in the **PANEL** column.
2. On the **DEVICES** tab, select a device to configure.
3. To view the device configuration settings in the examination pane, click the **CONFIGURATION** tab. To ensure the configuration is up-to-date, click **REFRESH**. If there is no configuration information, click **DOWNLOAD NOW** to download the most recent configuration data from the device.
4. Edit the required settings. To undo a change, click the undo arrow to the left of the field.
5. To upload the configuration changes to the panel, click **UPLOAD**. **UPLOAD** appears above the configuration when you edit at least one field.

*Related topics*

[Devices tab](#)

[Panel hub](#)

## Using the VIDEO ON DEMAND tab

**Note:** Only PowerMaster panels have video on demand.

To view device video on demand in the **VIDEO ON DEMAND** tab, on the **DEVICES** tab, select a device with the camera icon. For more information, see .

The installer can define during which panel states you can request video on demand, if the video has audio, and many other settings. For more information on changing the video on demand settings for all devices with video, see **CONFIGURATION** tab. For more information on changing the video on demand settings for an individual device with video, see the **CONFIGURATION** tab of the device on the **DEVICES** tab.

Figure: Navigating the VIDEO ON DEMAND tab

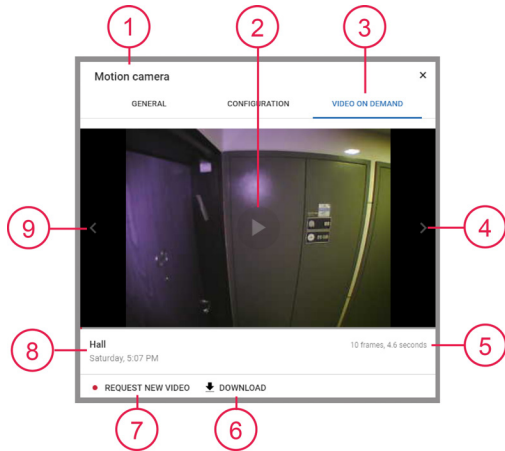


Table 12. VIDEO ON DEMAND tab interface elements

| Callout | Name                     | Description   |
|---------|--------------------------|---|
| 1       | Device type              | Displays the name of the device                                   |
| 2       | Play button              | Click to play the video and enlarge the screen.                   |
| 3       | <b>VIDEO ON DEMAND</b>   | Click to open the <b>VIDEO ON DEMAND</b> tab.                     |
| 4       | Forward skip arrow       | Click to skip forward one frame                                   |
| 5       | Frames and time          | Displays the number of frames and the total duration of the video |
| 6       | <b>DOWNLOAD</b>          | Click to download the video locally                               |
| 7       | <b>REQUEST NEW VIDEO</b> | Click to record new video footage                                 |
| 8       | Location and time        | Displays the time the event occurs and the location of the device |
| 9       | Back skip arrow          | Click to skip backwards one frame                                 |

### Related topics

#### [Devices tab](#)

#### [Panel hub](#)

### Viewing device video footage

For more information about the **VIDEO ON DEMAND** tab, see [Using the video on demand tab](#).

1. To open a panel in the panel hub, on the **Panels** page, click the panel name in the **PANEL** column.
2. On the **DEVICES** tab, select a device that contains the video footage to view. A camera icon indicates that a devices has video capabilities. For more information, see .
3. On the **VIDEO ON DEMAND** tab in the examination pane, click the play button in the center of the image to play the last recorded video.

**Note:** To view the footage frame by frame, click the left and right arrows on the video.

### Related topics

#### [Devices tab](#)

#### [Panel hub](#)

## Temperature and light readings on the METEO tab

View temperature and light readings from smart detectors on the **METEO** tab.

To find the **METEO** tab, in the **DEVICES** tab, select a smart detector and in the examination pane, click **METEO**. You can only open devices with the smart sensing icon in the **METEO** tab. For more information, see smart sensing in Table 11.

Figure: Navigating the METEO tab



Table 13. METEO tab interface elements

| Callout | Name                      | Description  |
|---------|---------------------------|--|
| 1       | <b>Brightness</b> graph   | View the brightness readings over a period of time. The x-axis represents the selected time period and the y-axis represents the brightness in lumens.   |
| 2       | <b>Temperature</b> graph  | View the temperature readings over a period of time. The x-axis represents the selected time period and the y-axis represents the temperature in degrees Celsius.  |
| 3       | <b>METEO</b> tab          | Click to open the <b>METEO</b> tab   |
| 4       | <b>SHOW</b>               | Click to view a more detailed graph.   |
| 5       | Detailed graph            | A more detailed version of the graph. Change the y-axis with a preset time period or manually change it to a custom time period. For more information, see Statistical period and Custom statistical period. |
| 6       | Custom statistical period | Click to enter custom time period dates that change the x-axis of the graph  |
| 7       | Graph line                | Each point on the graph has multiple readings. The gray lines represent the minimum and maximum readings and the blue line is the average reading.   |
| 8       | Statistical period        | To change the x-axis of the graph with a preset time, click <b>LAST DAY</b> , <b>LAST WEEK</b> , <b>LAST MONTH</b> , or <b>ALL</b> .   |

### Related topics

[Devices tab](#)

[Panel hub](#)

## Viewing device smart temperature or light readings

1. To open a panel in the panel hub, on the **Panels** page, click the panel name in the **PANEL** column.
2. On the devices tab, select a device that contains the smart temperature or light readings to view. A light bulb icon indicates that a device has smart temperature or light readings. For more information, see .
3. On the **METEO** tab in the examination pane, click **SHOW** to view either the **Temperature** or **Brightness** graph in detail.
4. Select the time period to view in the examination pane by using one of the following methods:
  - To view preset time periods in the examination pane, click **LAST DAY**, **LAST WEEK**, **LAST MONTH**, or **ALL**.
  - To manually enter a time period, click the date field.

**Note:** The blue line indicates the average light or temperature value and the gray lines indicate the maximum and minimum values.

### Related topics

#### [Devices tab](#)

#### [Panel hub](#)

## Using the PARENT and CHILDREN tabs

If a device has other devices connected to it, the connected device appears in the examination pane on the **PARENT** and **CHILDREN** tabs on the **DEVICES** tab in the panel hub. The **PARENT** tab appears in the examination pane if an auxiliary device is wired to a wireless parent device. Similarly, the **CHILDREN** tab appears if a wireless parent device connects to one or more auxiliary wired devices.

Figure: Using the PARENT tab

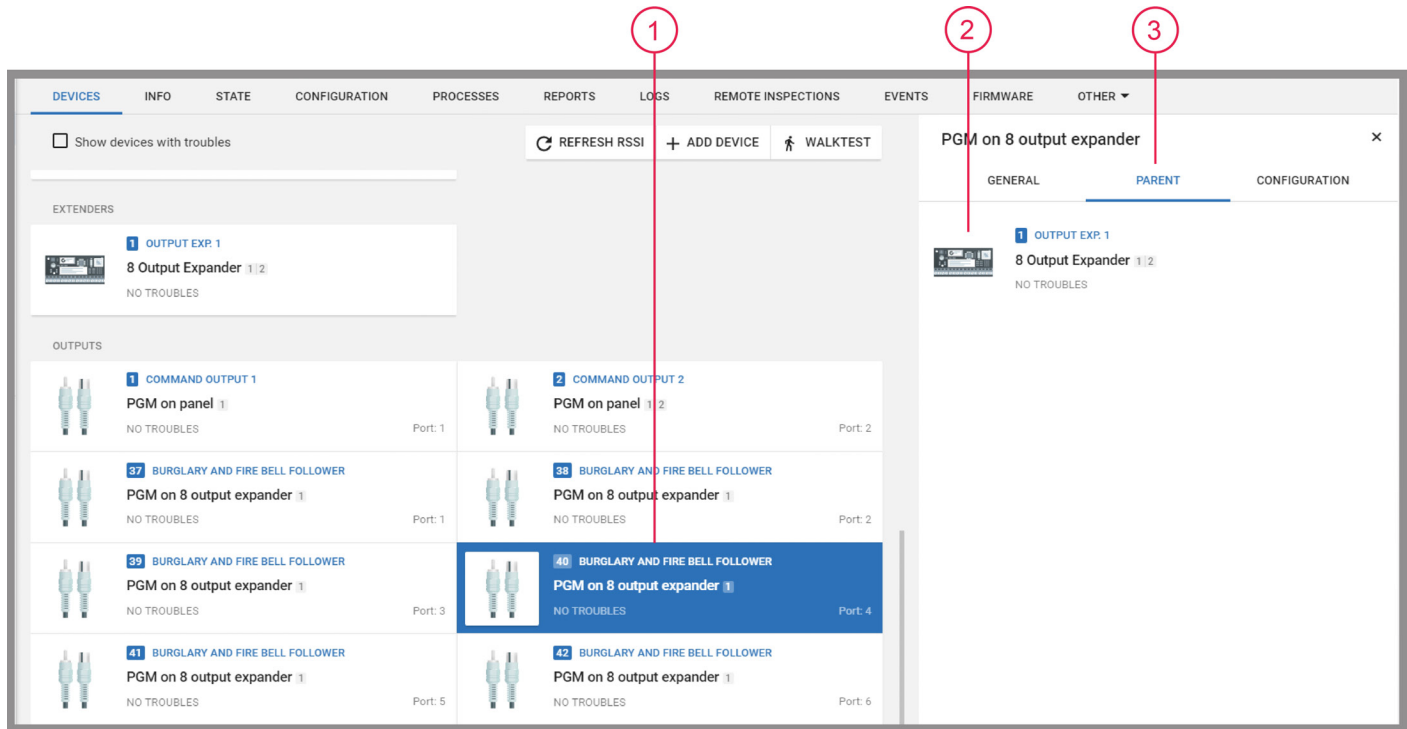


Table 14. PARENT tab interface elements

| Callout | Name              | Description   |
|---------|-------------------|---|
| 1       | Child device      | Click to open in the examination pane.  |
| 2       | Parent device     | The parent device of the selected device appears in the examination pane.<br>Click to open the parent device in the examination pane.                 |
| 3       | <b>PARENT</b> tab | Appears if an auxiliary device is wired to a wireless parent device. To view the parent device, in the examination pane, click the <b>PARENT</b> tab. |

Figure: Using the CHILDREN tab

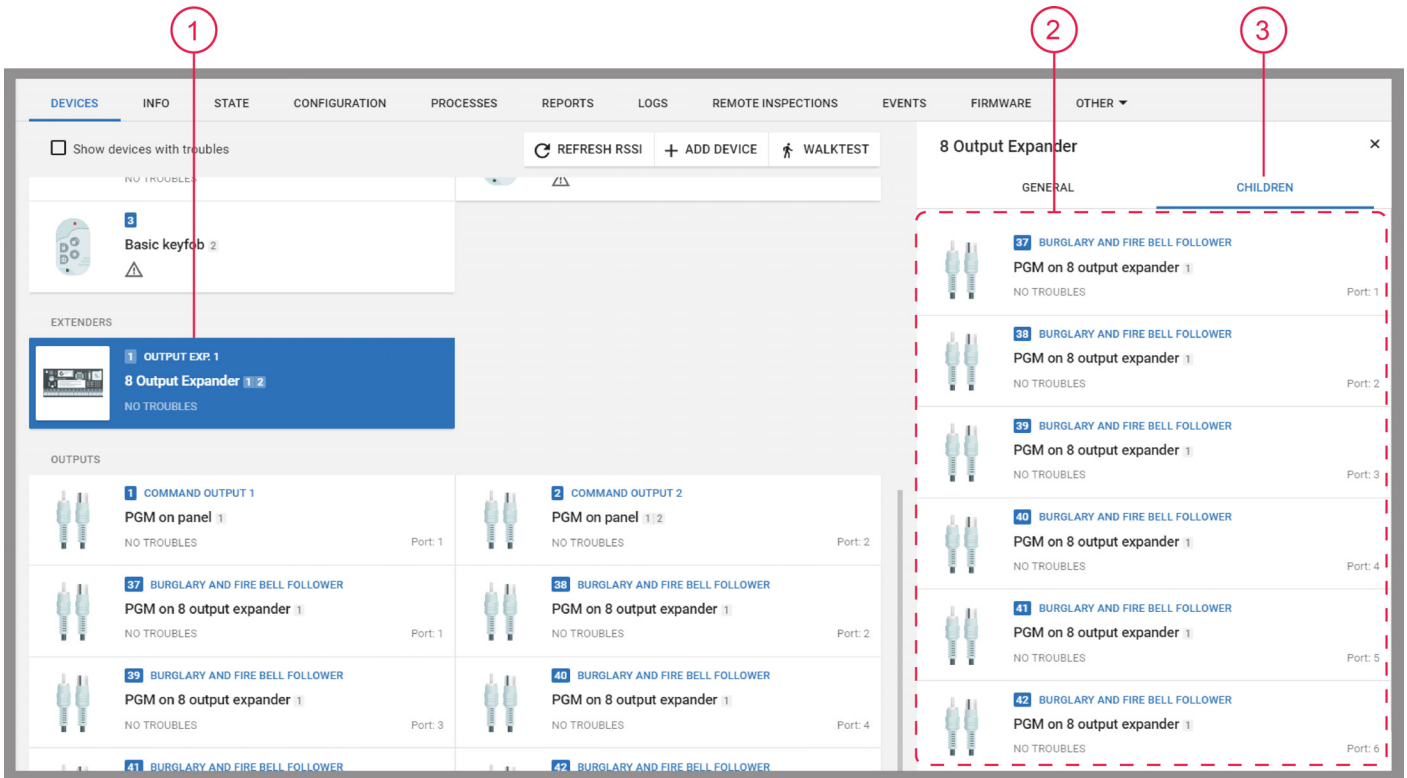


Table 15. CHILDREN tab interface elements

| Callout | Name                | Description   |
|---------|---------------------|---|
| 1       | Parent device       | Click to open in the examination pane.  |
| 2       | Child devices       | Any child devices of the selected parent device appear in the examination pane on the <b>CHILDREN</b> tab.  |
|         |                     | Click a child device to open it in the examination pane.  |
| 3       | <b>CHILDREN</b> tab | Appears if a wireless parent device connects to one or more auxiliary wired devices. To view the child device or devices, in the examination pane, click the <b>CHILDREN</b> tab. |

*Related topics*

[Devices tab](#)

[Panel hub](#)

[Editing the configuration of a device](#)

[Temperature and light readings on the METEO tab](#)

[Using the VIDEO ON DEMAND tab](#)

## Info tab

View and edit general information about the panel and the customer on the **INFO** tab.

Leave comments about the panel on the **INFO** tab. If a panel fault is reassigned to a different user, the comment appears on the **INFO** tab. Users can reply to these comments.

Figure: Navigating the INFO tab

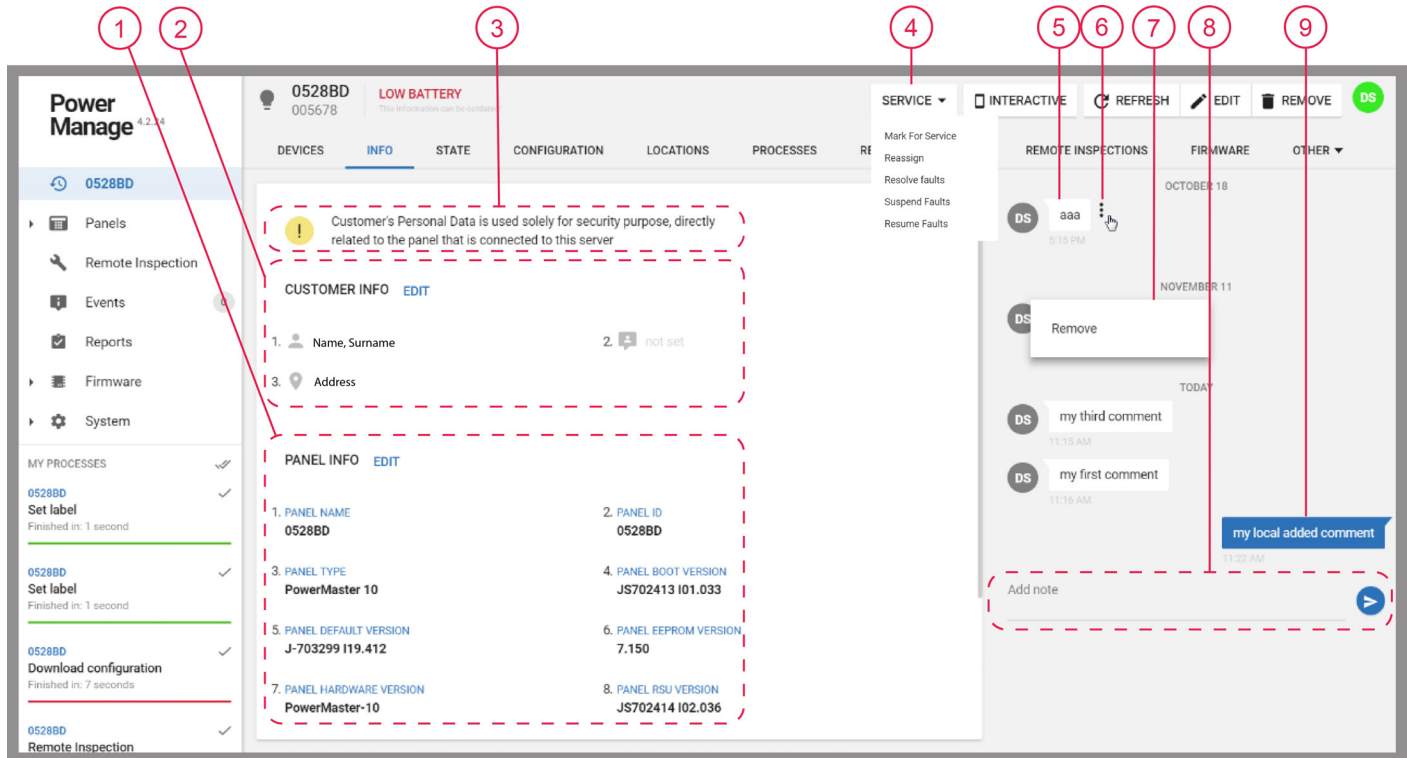


Table 16. INFO tab interface elements

| Callout | Name                     | Description   |
|---------|--------------------------|---|
| 1       | <b>PANEL INFO</b>        | The <b>PANEL INFO</b> section displays basic panel information such as <b>PANEL NAME</b> , <b>PANEL ID</b> and version information.   |
|         |                          | To change the panel information, click <b>EDIT</b> to open the <b>EDIT PANEL</b> dialog box.  |
| 2       | <b>CUSTOMER INFO</b>     | The <b>CUSTOMER INFO</b> section displays basic panel information such as the customer name and address.  |
|         |                          | To change this information, click <b>EDIT</b> to open the <b>EDIT PANEL CUSTOMER INFO</b> dialog box.   |
| 3       | Data use policy          | Personal customer data in the <b>CUSTOMER INFO</b> section is used for security purposes only.  |
| 4       | <b>SERVICE</b>           | To perform an action on one or more selected panels, from the <b>SERVICE</b> list, select one of the following options: <ul style="list-style-type: none"> <li>• <b>Mark for service</b></li> <li>• <b>Reassign</b></li> <li>• <b>Resolve faults</b></li> <li>• <b>Suspend faults</b></li> <li>• <b>Resume faults</b></li> </ul> For more information on servicing panels, see <a href="#">Servicing panels</a> . |
| 5       | Reassigned fault comment | If you reassign a fault, the information logs here with the initials of the person who reassigns the fault and any message the user leaves.<br><b>Note:</b> To reassign a fault, from the <b>SERVICE</b> list, click <b>Reassign</b> .  |
| 6       | Options                  | Click to open the options dialog box  |
| 7       | <b>REMOVE</b>            | To remove a reassigned fault comment, hover over the comment until three vertical dots appear. Click the dots and then click <b>Remove</b> .  |
| 8       | <b>Add note</b>          | To leave a comment, enter your comment in the <b>Add note</b> field and click the post button.  |
| 9       | Comment                  | Comments that users leave appear in blue on the right hand side. To remove a comment, hover over the comment until  |

|  |  |   |
|--|--|---|
|  |  | three vertical dots appear. Click the dots and then click <b>Remove</b> . |
|--|--|---|

*Related topics*

[Editing basic panel and customer information](#)

[Panel hub](#)

### Editing basic panel and customer information

To edit basic panel information, or customer information related to a panel, complete the following procedure:

**Note:** Examples of basic panel information include the following: panel name, panel group, panel account number, and SIM number. Examples of panel customer information include the following: customer name, email address, home address, and phone number.

1. To open a panel in the panel hub, on the **Panels** page, click the panel name in the **PANEL** column.
2. Click the **INFO** tab.
3. Perform one of the following options:
  - To edit customer information, click **EDIT** in the **CUSTOMER INFO** section.
  - To edit panel information, click **EDIT** in the **PANEL INFO** section. Alternatively, click **EDIT** on the panel hub. For more information, see Table 10.
4. Make the required changes.
5. Click **SAVE**.

*Related topics*

[Info tab](#)



# State tab

Arm and disarm panels and partitions on the **STATE** tab.

**Note:** The Neo panel's **STAY** arm feature and Visonic panel's **HOME** arm feature have the same function but different names. Visonic panels do not have the **NIGHT** arm feature.

Figure: Navigating the STATE tab

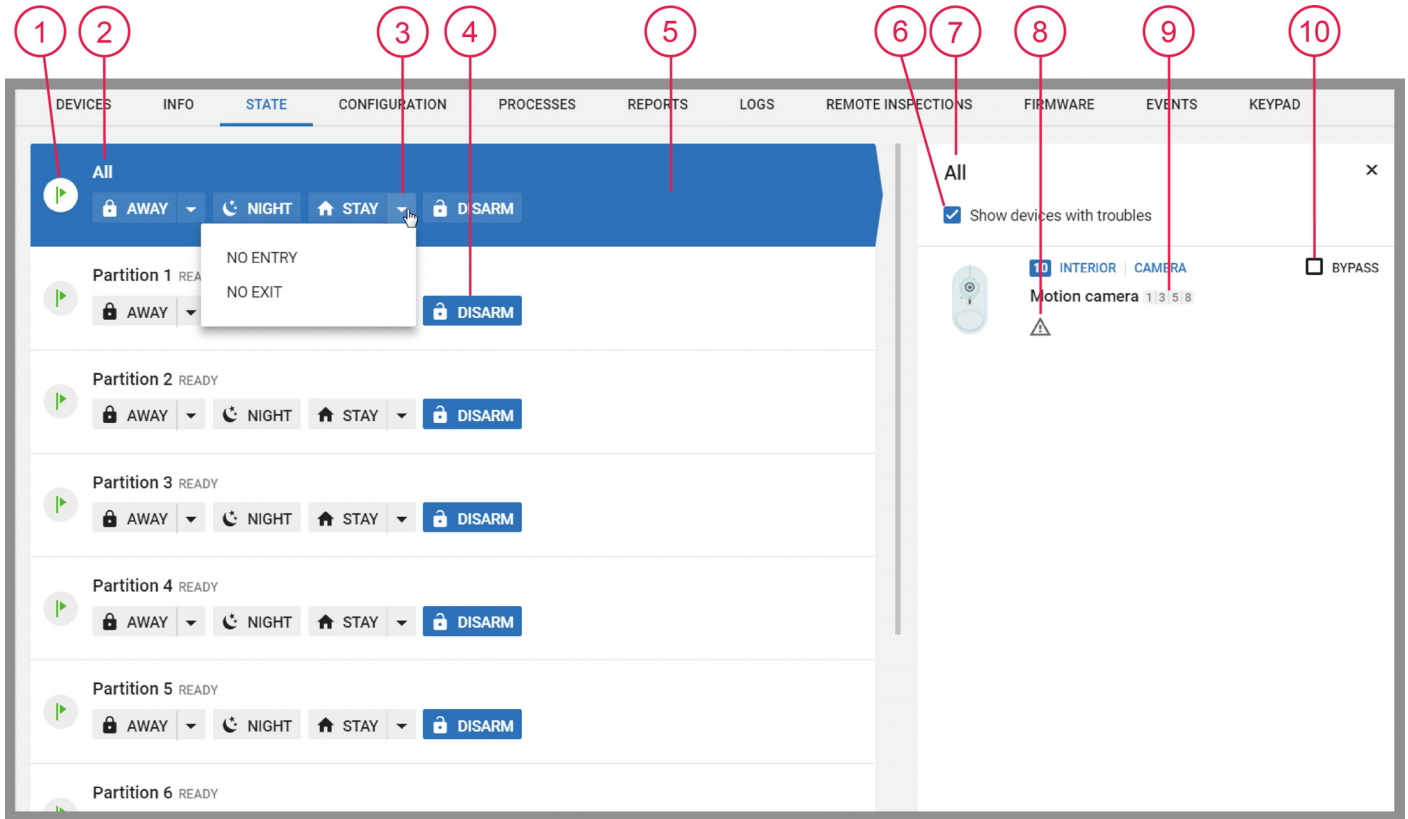





Table 17. STATE tab interface elements

| Callout | Name           | Description   |
|---------|----------------|---|
| 1       | States         |  Indicates a ready or armed state<br><hr/>  Displays when you change to a different panel menu or during an exit delay period. Examples of panels menus are the user menu, installer menu, and periodic test menu.<br><hr/>  Indicates a not ready state. You cannot arm the panel until the panel is in a ready state.<br><p>To return a panel to a ready state, ensure that all sensors are physically closed. Doors and windows are examples of zones that can physically close. If the issue is not physical, select the <b>Show devices with troubles</b> check box to see all of the devices with troubles in the examination pane and select the <b>BYPASS</b> check box to bypass devices with troubles.</p> |
| 2       | Partition      | <p>Displays the name of the partition. To change the arm or disarm state for a partition, click <b>AWAY</b>, <b>NIGHT</b>, <b>STAY</b>, or <b>DISARM</b>.</p> <p><b>Note:</b> The <b>All</b> row always appears first in the list. Use the <b>All</b> row to change the state of all partitions in the panel at once.</p>   |
| 3       | Arming options | <p>The <b>STAY/HOME</b> and <b>AWAY</b> buttons have arming sub-options. To view the sub-options list, click the drop-down arrow.</p> <p>You can select <b>NO ENTRY</b> and <b>NO EXIT</b> from the <b>STAY</b> list, and <b>NO ENTRY</b> from the <b>AWAY</b> list. For the system to alarm when someone enters the perimeter, select <b>NO ENTRY</b>. For the system to alarm when someone exits the perimeter, select <b>NO EXIT</b>.</p>  |
| 4       | Arm state      | The active state is blue.   |
| 5       | Selected       | Click the row of a partition to view it in the examination pane.  |

|    |                       |  |
|----|-----------------------|--|
|    | partition             | <b>Note:</b> Partitions appear on the <b>STATE</b> tab if they are enabled in the panel. To enable panel partitions, enable and configure <b>Partition set</b> on the <b>CONFIGURATION</b> tab.  |
| 6  | Troubles check box    | Select to view all of the devices with troubles in the partition   |
| 7  | Device partition      | Displays the name of the selected partition that features in the examination pane  |
| 8  | Trouble icons         | Displays the types of troubles that affect the device. Hover over an icon to see a description of the trouble.   |
| 9  | Associated partitions | A list of all of the partitions that associate with the device   |
| 10 | <b>BYPASS</b>         | Select to bypass a device. If a panel is in a not ready state, bypass any troubled devices to return it to a ready state. The system bypasses the device until the next arm or disarm state change. For more information about states, see States. |

*Related topics*

[Devices tab](#)

[Bypassing, soak testing, and marking a device as rarely triggered](#)

[Viewing all devices with troubles in a panel](#)

[Panel hub](#)

## Configuration tab

Configure an individual panel and its zones, outputs, communication, and user settings on the **CONFIGURATION** tab. You can also save a panel configuration as a basic configuration that you can push to multiple panels.

To view a configuration on the **Configuration** tab, select a configuration from the current and previous panel configurations list. For more information, see [Current and previous panel configurations list](#).

You can only edit a configuration if it is the current configuration. For information on changing the configuration settings, see [Editing the configuration settings of an individual panel](#).

You can only download a panel configuration if the panel is connected to the server. The blue bulb indicates if the panel is connected. For more information, see Online status in Table 10.

For information on pushing a basic configuration to one or more panels, see [Pushing a basic configuration to one or more panels](#).

Figure: Navigating the Configuration tab

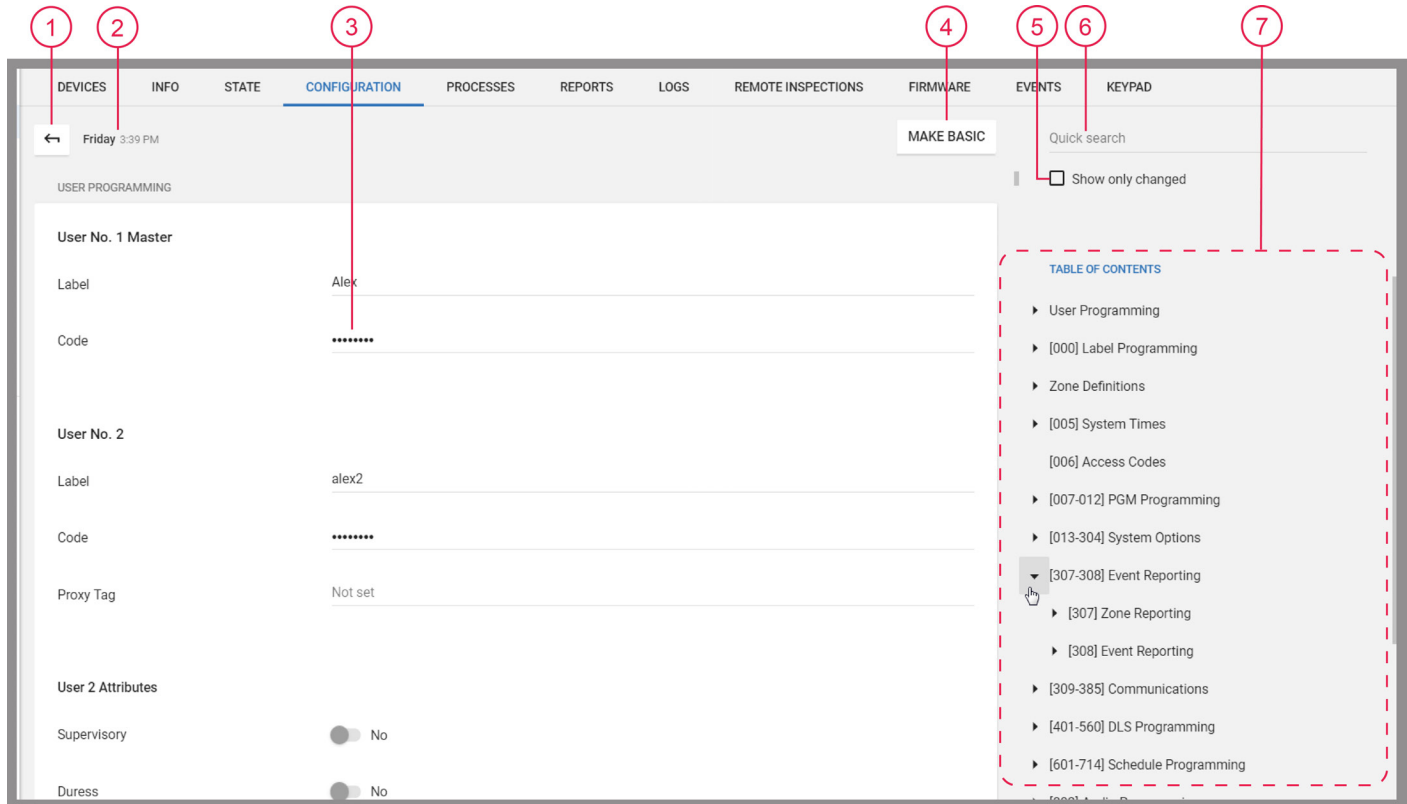


Table 18. CONFIGURATION tab interface elements

| Callout | Name                     | Description  |
|---------|--------------------------|--|
| 1       | Back                     | Click the arrow to return to the previous and current configurations list.   |
| 2       | Configuration date       | Each configuration download is distinguished by the date of download.  |
| 3       | Hidden characters        | Secure information such as pass codes are hidden.  |
| 4       | <b>MAKE BASIC</b>        | Click to make the configuration a basic configuration that you can push to other panels. Find the basic configurations on the <b>Basic configurations</b> page in the <b>System</b> drop-down list. For more information, see <a href="#">Basic configurations page</a> . For more information about making a basic configuration, see <a href="#">Creating a basic configuration from an existing panel configuration</a> . |
| 5       | <b>Show only changed</b> | Click to show only the configuration settings that you changed. You can only edit a configuration if it is the current configuration. For more information, see <a href="#">Current and previous panel configurations list</a> .   |
| 6       | <b>Quick search</b>      | Filter the configuration to return only values that contain the search term.   |
| 7       | <b>TABLE OF CONTENTS</b> | Use the table of contents to navigate the configuration quickly. The table of contents is categorized and expandable.  |

### Related topics

[Panel hub](#)

[Devices tab](#)

[Creating a basic configuration from an existing panel configuration](#)

[Current and previous panel configurations list](#)

[Editing the configuration settings of an individual panel](#)

[Synchronizing a the configuration of an individual panel](#)

### Current and previous panel configurations list

View and edit up to eight panel configurations for an individual panel in the configurations list. The configurations are ordered by the date of download. Select a configuration to view it in the **CONFIGURATION** tab. For more information, see [Configuration tab](#).

If a panel is newly registered on the server, click **DOWNLOAD NOW** to download the panel configuration to the server.

Figure: Navigating the panel configurations list

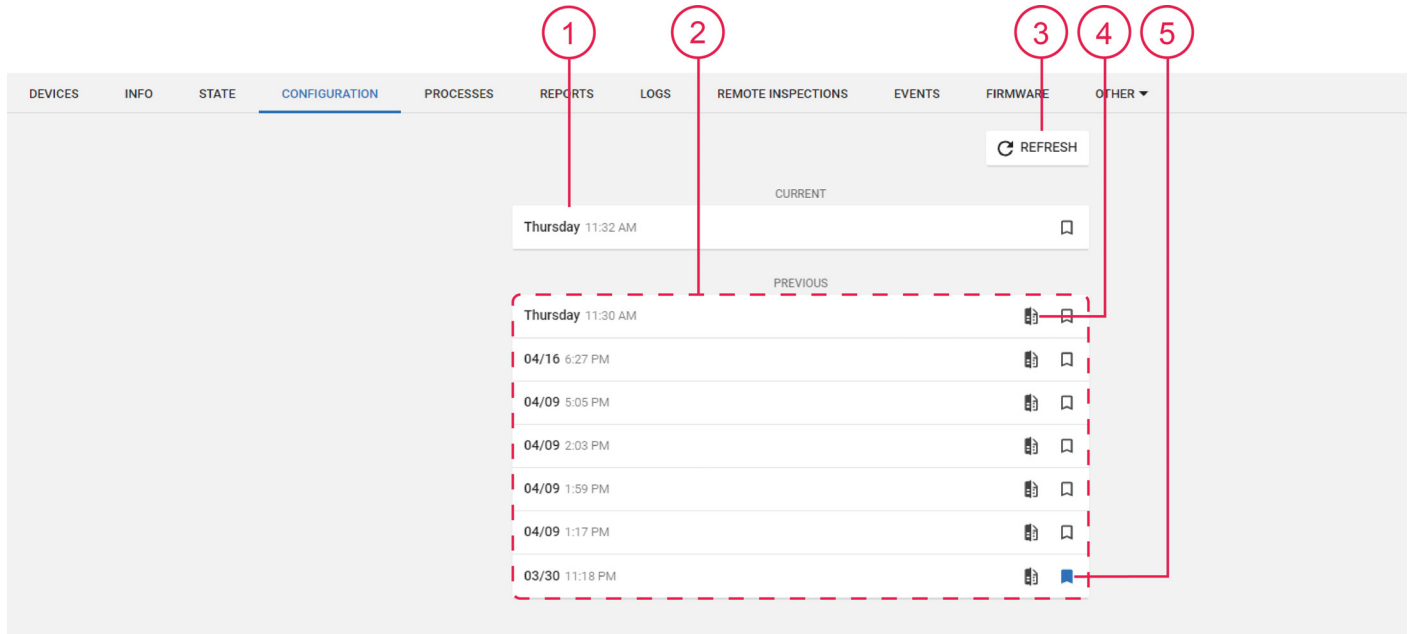


Table 19. Configuration list interface elements

| Callout | Name                    | Description  |
|---------|-------------------------|--|
| 1       | Current configuration   | You can edit the current configuration only. Click to view or edit.  |
| 2       | Previous configurations | View seven previous configurations in the <b>PREVIOUS</b> list.<br>If you download a new configuration, it overwrites the oldest configuration in the <b>PREVIOUS</b> list. To ensure a configuration is not overwritten, click the bookmark icon. |
| 3       | <b>REFRESH</b>          | Click to refresh the configurations list.  |
| 4       | Compare configuration   | Click to compare the configuration with the current configuration.   |
| 5       | Bookmark                | To ensure a configuration from the <b>PREVIOUS</b> list is not overwritten by new configurations, click the bookmark icon. You can only save seven previous configurations at a time from the <b>PREVIOUS</b> list.                                |

*Related topics*

[Configuration tab](#)

[Creating a basic configuration from an existing panel configuration](#)

[Editing the configuration settings of an individual panel](#)

[Synchronizing a the configuration of an individual panel](#)

[Devices tab](#)

## Creating a basic configuration from an existing panel configuration

1. To open a panel in the panel hub, on the **Panels** page, click the panel name in the **PANEL** column.
2. From the **CONFIGURATION** tab, click **REFRESH** to synchronize the panel and the server.  
**Important:** Click **REFRESH** in the **CONFIGURATION** tab, not **REFRESH** above the panel hub tabs.
3. From the **CURRENT** list, select the current panel configuration.
4. Click **MAKE BASIC**.
5. Select the check boxes of the settings to include in the basic configuration.
6. Click **CREATE**.
7. Enter a unique name in the **Basic configuration name** field.
8. Click **SAVE**.

### *Related topics*

#### [Configuration tab](#)

[Creating a basic configuration from an existing panel configuration](#)

[Current and previous panel configurations list](#)

[Editing the configuration settings of an individual panel](#)

[Synchronizing the configuration of an individual panel](#)

[Devices tab](#)

## Synchronizing the configuration of an individual panel

1. To open a panel in the panel hub, on the **Panels** page, click the panel name in the **PANEL** column.
2. From the **CONFIGURATION** tab, click **REFRESH**.

### *Related topics*

#### [Configuration tab](#)

[Creating a basic configuration from an existing panel configuration](#)

[Current and previous panel configurations list](#)

[Editing the configuration settings of an individual panel](#)

[Devices tab](#)

## Editing the configuration settings of an individual panel

1. To open a panel in the panel hub, on the **Panels** page, click the panel name in the **PANEL** column.
2. To synchronize the panel and the server, from the **CONFIGURATION** tab, click **REFRESH**.  
**Note:** If there is no refresh option, select **DOWNLOAD NOW**.
3. From the **CURRENT** list, select the current panel configuration.
4. Make the required changes and select the **Show only changed** check box to review your changes.
5. Click **UPLOAD**.

### *Related topics*

#### [Configuration tab](#)

[Creating a basic configuration from an existing panel configuration](#)

[Current and previous panel configurations list](#)

[Synchronizing the configuration of an individual panel](#)

[Devices tab](#)

## Locations tab

Provide custom location names to zones for ease of reference.

**Note:** The **LOCATIONS** tab only appears in the panel hub for PowerMaster panels.

Figure: Locations tab

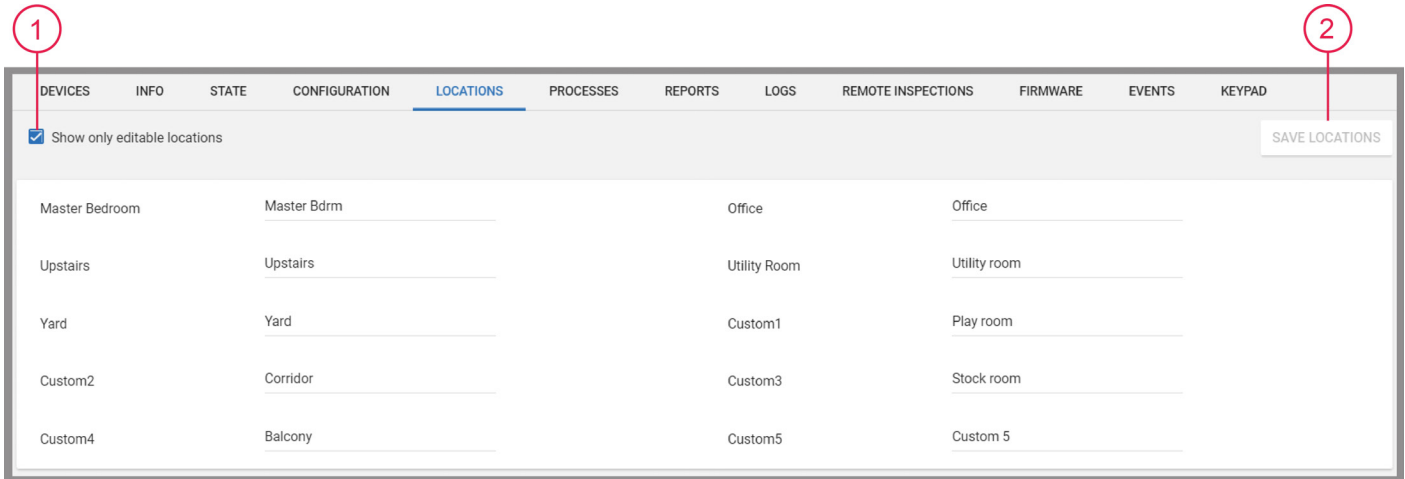


Table 20. LOCATIONS tab interface options

| Callout | Name                                | Description  |
|---------|-------------------------------------|--|
| 1       | <b>Show only editable locations</b> | To view only locations that you can rename, select the <b>Show only editable locations</b> check box.  |
| 2       | <b>SAVE LOCATIONS</b>               | To rename a location, type a new name in at least one field and click <b>SAVE LOCATIONS</b> .  |
|         |                                     | Enter a maximum of 15 characters in any field. Type only the following characters only in the location fields: A-Z, a-z, 0-9, !, @, #, %, ^, &, _, +, =, -, ', ", :, / |

Related topics

[Devices tab](#)

[Panel hub](#)

## Processes tab

View a list of all processes for the selected panel on the **PROCESSES** tab. Each row represents a single process. Each process displays with a start time, description, current status, process initiator name, and duration.

Click **X** to cancel a process.

To view a list of all recent processes for all of the panels that are enrolled in the server, in the navigation pane, from the **System** list, select **Processes**. For more information about the **Processes** page, see [Processes page](#).

Figure: Processes tab

| DEVICES    | INFO                   | STATE | CONFIGURATION | PROCESSES   | REPORTS | LOGS | REMOTE INSPECTIONS | FIRMWARE      | EVENTS | KEYPAD                                     |
|------------|------------------------|-------|---------------|-------------|---------|------|--------------------|---------------|--------|--|
| FRIDAY     |                        |       |               |             |         |      |                    |               |        |  |
| 9:56:54 AM | Set state              |       |               | ✓ Succeeded |         |      |                    | SYSTEM        |        | 2 seconds <input type="button" value="X"/> |
| WEDNESDAY  |                        |       |               |             |         |      |                    |               |        |  |
| 5:29:15 PM | Upload configuration   |       |               | ✓ Succeeded |         |      |                    | Shai Lifshitz |        | 1 second <input type="button" value="X"/>  |
| TUESDAY    |                        |       |               |             |         |      |                    |               |        |  |
| 7:31:20 PM | Backup configuration   |       |               | ✓ Succeeded |         |      |                    | SYSTEM        |        | 1 second <input type="button" value="X"/>  |
| 7:09:06 PM | Upload configuration   |       |               | ✓ Succeeded |         |      |                    | Shai Lifshitz |        | 2 seconds <input type="button" value="X"/> |
| 7:05:16 PM | Upload configuration   |       |               | ✓ Succeeded |         |      |                    | Shai Lifshitz |        | 1 second <input type="button" value="X"/>  |
| 7:01:21 PM | Download configuration |       |               | ✓ Succeeded |         |      |                    | Shai Lifshitz |        | 2 minutes <input type="button" value="X"/> |
| 6:59:57 PM | Upload configuration   |       |               | ✓ Succeeded |         |      |                    | Shai Lifshitz |        | 2 seconds <input type="button" value="X"/> |
| 6:48:09 PM | Download configuration |       |               | ✓ Succeeded |         |      |                    | Shai Lifshitz |        | 2 minutes <input type="button" value="X"/> |
| 5:29:19 PM | Download configuration |       |               | ✓ Succeeded |         |      |                    | Shai Lifshitz |        | 2 minutes <input type="button" value="X"/> |
| 9:39:27 AM | Set state              |       |               | ✓ Succeeded |         |      |                    | SYSTEM        |        | 2 seconds <input type="button" value="X"/> |
| 9:38:59 AM | Set state              |       |               | ✓ Succeeded |         |      |                    | SYSTEM        |        | 1 second <input type="button" value="X"/>  |

### Related topics

[Devices tab](#)

[Processes page](#)

[Panel hub](#)

# Reports tab

View reports that have occurred or are scheduled to occur for an individual panel on the **REPORTS** tab. The tab displays this information on a calendar.

Figure: Navigating the Reports tab

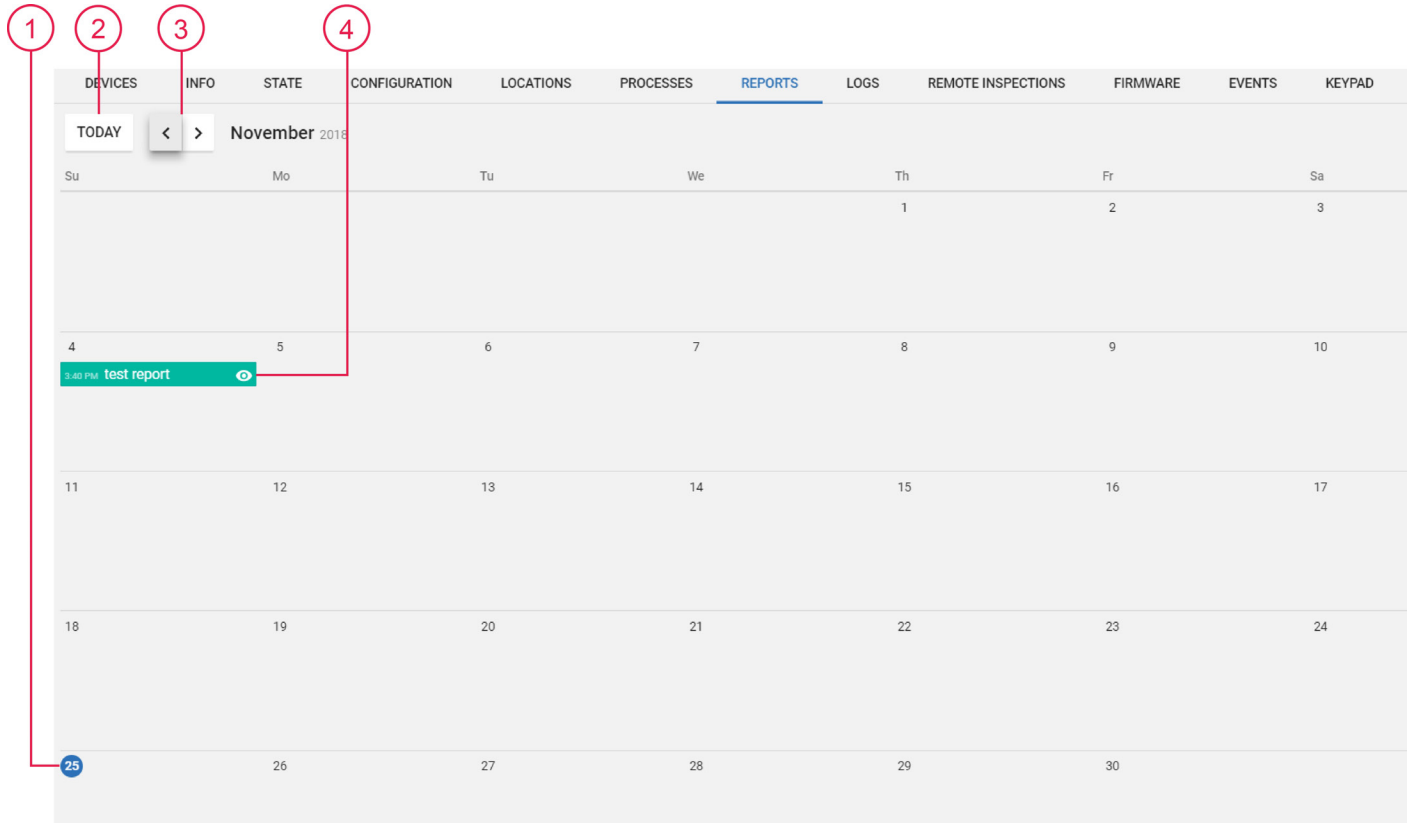


Table 21. REPORTS tab interface elements

| Callout | Name         | Description  |
|---------|--------------|--|
| 1       | Current date | A blue circle indicates the current day.   |
| 2       | Today        | Click <b>TODAY</b> to return to the current month.   |
| 3       | Change month | The calendar displays one month at a time. To change the month, click the arrows to the left of the month name.  |
| 4       | Report       | All reports appear in the calendar and each report is a different color.   |
|         |              | Select a report to display the file download options. Click <b>CSV</b> or <b>PDF</b> to download the report in the chosen format. PDF is a more readable file type than CSV. |

*Related topics*

[Reports page](#)

[Creating a new report on the Panels page](#)

[Creating a new report on the Reports page](#)

[Devices tab](#)

[Panel hub](#)



## Logs tab

View log files on the **LOGS** tab. Log files record all events that occur in the panel.

Figure: Navigating the LOGS tab

| DEVICES | INFO       | STATE      | CONFIGURATION   | LOCATIONS | PROCESSES | REPORTS | LOGS          | REMOTE INSPECTIONS | FIRMWARE     | EVENTS       | KEYPAD |
|---------|------------|------------|-----------------|-----------|-----------|---------|---------------|--------------------|--------------|--------------|--------|
|         |            |            |                 |           |           |         |               | REFRESH            | DOWNLOAD CSV | STANDARD LOG |        |
|         |            |            |                 |           |           |         |               | JANUARY 6, 2000    |              |              |        |
| 85      | 9:39:36 AM | 01/06/2000 | Disarm          |           |           |         | User 1 1      |                    |              |              |        |
| 27      | 9:39:36 AM | 01/06/2000 | Cancel Alarm    |           |           |         | User 1 1      |                    |              |              |        |
| 28      | 9:39:36 AM | 01/06/2000 | General Restore |           |           |         | Control Panel |                    |              |              |        |
| 85      | 9:39:36 AM | 01/06/2000 | Disarm          |           |           |         | User 1 2      |                    |              |              |        |
| 27      | 9:39:36 AM | 01/06/2000 | Cancel Alarm    |           |           |         | User 1 2      |                    |              |              |        |
| 85      | 9:39:36 AM | 01/06/2000 | Disarm          |           |           |         | User 1 3      |                    |              |              |        |
| 27      | 9:39:36 AM | 01/06/2000 | Cancel Alarm    |           |           |         | User 1 3      |                    |              |              |        |
| 3       | 9:39:16 AM | 01/06/2000 | Delay Alarm     |           |           |         | Zone 2 1      |                    |              |              |        |
| 2       | 9:39:16 AM | 01/06/2000 | Perimeter Alarm |           |           |         | Zone 5 1      |                    |              |              |        |
| 3       | 9:39:16 AM | 01/06/2000 | Delay Alarm     |           |           |         | Zone 2 2      |                    |              |              |        |
| 2       | 9:39:16 AM | 01/06/2000 | Perimeter Alarm |           |           |         | Zone 5 2      |                    |              |              |        |
| 3       | 9:39:16 AM | 01/06/2000 | Delay Alarm     |           |           |         | Zone 2 3      |                    |              |              |        |
| 2       | 9:39:16 AM | 01/06/2000 | Perimeter Alarm |           |           |         | Zone 5 3      |                    |              |              |        |
|         |            |            |                 |           |           |         |               | JANUARY 5, 2000    |              |              |        |
| 3       | 3:08:31 PM | 01/05/2000 | Delay Alarm     |           |           |         | Zone 3 1      |                    |              |              |        |
|         |            |            |                 |           |           |         |               | LEGACY LOG         |              |              |        |

Table 22. LOGS tab interface elements

| Callout | Name                     | Description   |
|---------|--------------------------|---|
| 1       | Event number             | Each event in the panel has a number that identifies the event type.  |
| 2       | Event time               | Displays the time that the server receives the event notification from the panel  |
| 3       | Event description        | A textual description of the event  |
| 4       | Date                     | Events are grouped by the day they occur.   |
| 5       | Event source ID          | Displays the ID of the source of the event. <ul style="list-style-type: none"> <li>The source ID for a sensor is its zone number.</li> <li>The source ID for an arm or disarm state change is the user number of the user who changed the arm state.</li> <li>The source ID for an action that the panel performs is the panel name.</li> </ul> <b>Note:</b> The source ID is followed by the number of the partition that the event occurs in. |
| 6       | <b>REFRESH</b>           | Click to download the most up-to-date log file on the <b>LOGS</b> tab   |
| 7       | <b>DOWNLOAD CSV</b>      | Download a CSV file of the events log   |
| 8       | Standard and legacy logs | Click <b>STANDARD LOG</b> or <b>LEGACY LOG</b> to display the log list on the <b>LOGS</b> tab.<br>Users can view and erase the standard log.<br>Security operators and systems use the legacy log. The legacy log appears for PowerMaster panels only.  |

### Related topics

[Downloading a panel log file in the Panels hub](#)

[Devices tab](#)

[Panel hub](#)

## Downloading a panel log file in the panels hub

1. To open a panel in the panels hub, click the panel name in the **PANEL** column of the **Panels** page.
2. From the **LOGS** tab, click **DOWNLOAD CSV**.

The file downloads in the browser.

### *Related topics*

[Logs tab](#)

[Devices tab](#)

[Panel hub](#)

## Remote inspections tab

Manage the remote inspections for a single panel on the **REMOTE INSPECTIONS** tab in the panel hub.

For more information on remote inspections, see [Remote inspections page](#).

Figure: Navigating the REMOTE INSPECTIONS tab

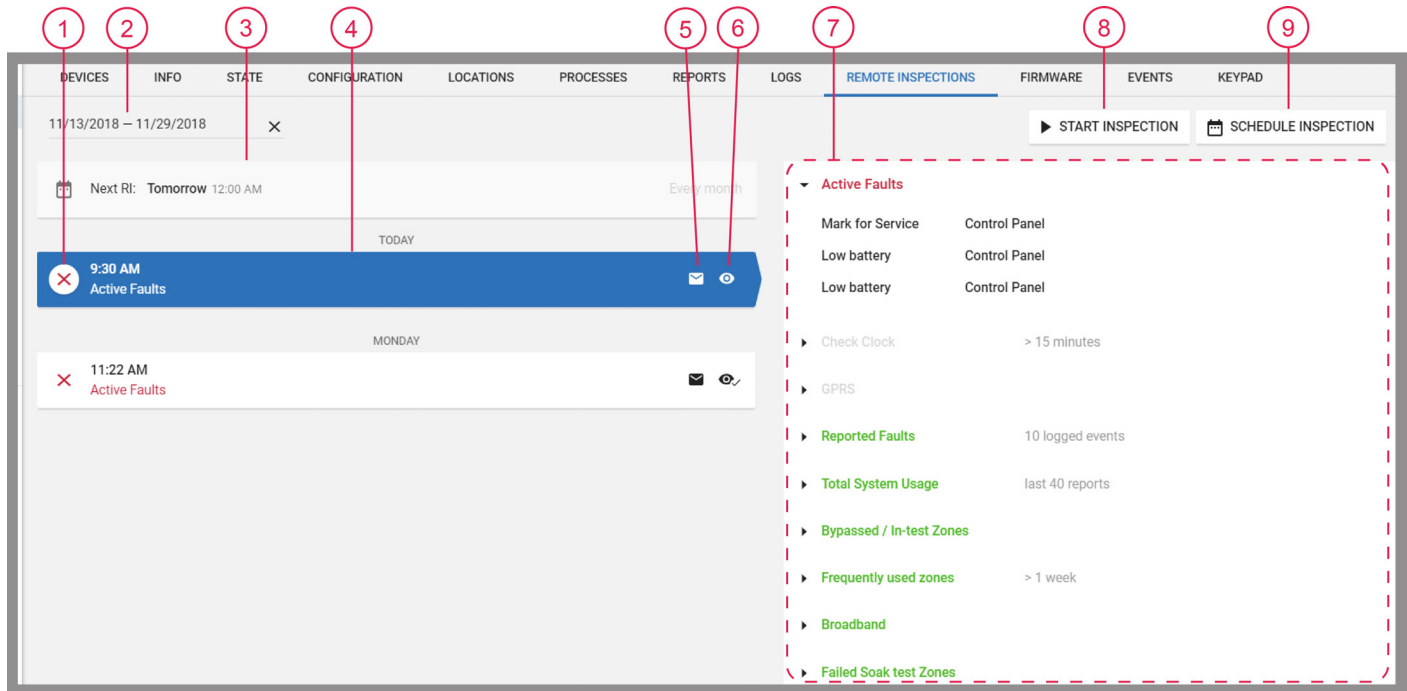






Table 23. REMOTE INSPECTIONS tab interface elements

| Callout | Name                       | Description   |
|---------|----------------------------|---|
| 1       | Fail or success status     |  The remote inspection fails.<br> The remote inspection succeeds.   |
| 2       | Date filter                | Filter the remote inspections by a period of time   |
| 3       | Next RI                    | Displays the next scheduled remote inspection (RI) for the panel  |
| 4       | Selected RI                | When you select an inspection, the results appear in the examination pane. For more information, see Examination pane.  |
| 5       | Send email                 | Click the email icon to send the results of the remote inspection to a predefined email address.<br><b>Note:</b> <ul style="list-style-type: none"> <li>Define the email address when you add a panel on the <b>Panels</b> page. For more information, see <a href="#">Adding a panel to the server</a>.</li> <li>Change the email address on the <b>INFO</b> tab. For more information, see <a href="#">Editing basic panel and customer information</a>.</li> </ul> |
| 6       | Viewing status             |  Click to mark the remote inspection as viewed.<br> The remote inspection is viewed. Only mark a remote inspection as viewed if your investigation is complete.   |
| 7       | Examination pane           | To examine the results of a remote inspection in the examination pane, click the remote inspections row. Select a section title to expand the test results. For more information on each test, see <a href="#">Remote inspection tests</a> .  |
| 8       | <b>START INSPECTION</b>    | Click to initiate the selected remote inspection  |
| 9       | <b>SCHEDULE INSPECTION</b> | Click to schedule the selected remote inspection to occur at a specific date and rate of recurrence. See <a href="#">Scheduling a remote inspection for an individual panel</a> for more information.   |

*Related topics*

[Remote inspection tests](#)

[Remote inspection page](#)

[Devices tab](#)

[Panel hub](#)

## Scheduling a remote inspection for an individual panel

**Note:** To schedule a remote inspection for a batch of panels, see [Scheduling one or more remote inspections for a batch of panels](#).

1. To open a panel in the panel hub, on the **Panels** page, click the panel name in the **PANEL** column.
2. On the **REMOTE INSPECTIONS** tab, click **SCHEDULE INSPECTION**.
3. In the dialog box, select **Enabled**.
4. Enter the required date in the **Next Inspection** field.
5. In the **Choose repetition** field, select how often you want the test to occur. You can select **Once**, **1 Month**, **3 Months**, **6 Months**, or **9 Months**.
6. Click **SAVE**.

*Related topics*

[Remote inspections tab](#)

[Scheduling one or more remote inspections for a batch of panels](#)

[Remote inspection tests](#)

[Remote inspection page](#)

[Devices tab](#)

[Panel hub](#)

# Events tab

View events related to a single panel on the **EVENTS** tab.

Figure: Navigating the **EVENTS** tab

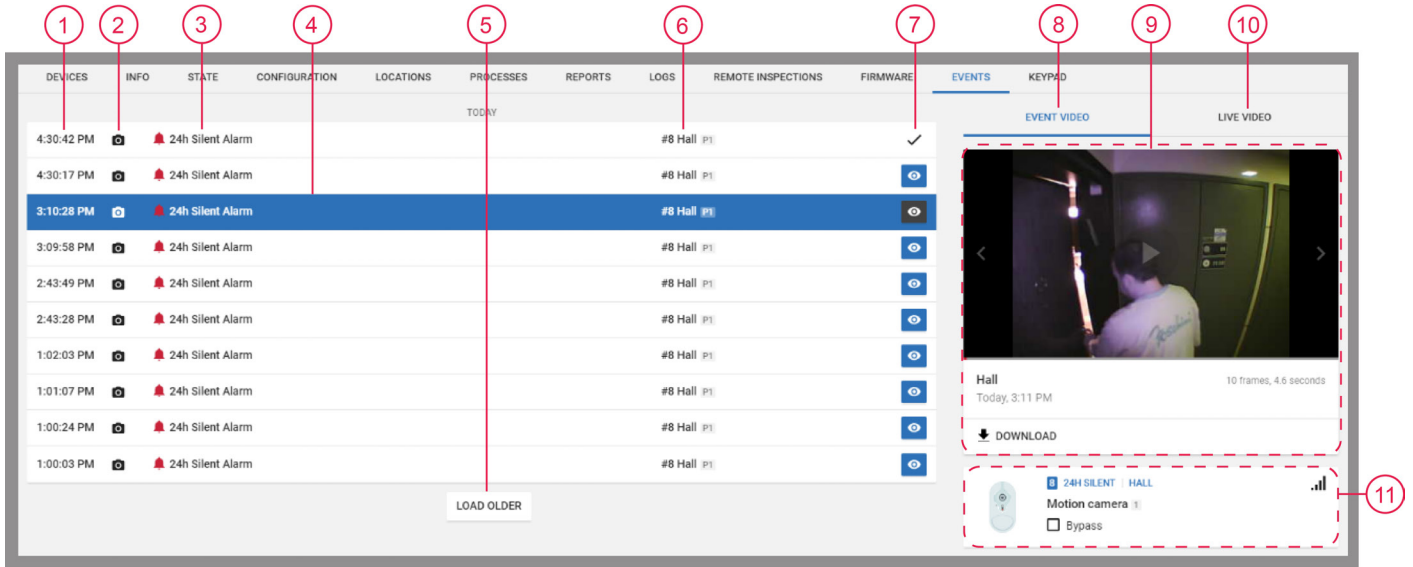




Table 24. **EVENTS** tab interface elements

| Callout | Name                        | Description  |
|---------|-----------------------------|--|
| 1       | Event time                  | The time the event occurs  |
| 2       | Video content               | The camera icon indicates that the event has video footage that you can view on the <b>EVENT VIDEO</b> tab.  |
| 3       | Event description           | A description of the alarm type. For more information, see Event severity in Table 28.   |
| 4       | Selected event              | Select an event row to view information about the related device in the examination pane.  |
| 5       | <b>LOAD OLDER</b>           | Click to load older events. By default, only 10 events display on the <b>EVENTS</b> tab.   |
| 6       | Device number and partition | Displays the device number and its partition   |
| 7       | Viewing status              |  Click the icon to mark the event as viewed.<br> The event is viewed. Only mark an event as viewed if your investigation is complete.  |
| 8       | <b>EVENT VIDEO</b> tab      | The <b>EVENT VIDEO</b> tab appears if the selected device has a camera. Select the <b>EVENT VIDEO</b> tab to view the video footage related to the event.  |
| 9       | Video footage               | If an event has video, view the video footage here. <ul style="list-style-type: none"> <li>Click play to view video footage.</li> <li>Click the arrows to view the footage frame by frame.</li> <li>Click <b>DOWNLOAD</b> to download the video file locally.</li> <li>For more information about viewing event video footage, see <a href="#">Viewing event video footage in the events tab</a>.</li> </ul>                             |
| 10      | <b>LIVE VIDEO</b> tab       | Click the <b>LIVE VIDEO</b> tab to view live video footage from the source device. The live video stream lasts five seconds.<br><br><b>Note:</b> The <b>LIVE VIDEO</b> tab appears for Visonic panels only. You can enable or disable live video on demand capabilities during specific states only, such as an armed state. Define the video demand settings in the <b>Video on demand</b> field on the panel <b>CONFIGURATION</b> tab. |
| 11      | Device                      | General information about the source of the event, such as a device.   |

|  |             |  |
|--|-------------|--|
|  | information |  |
|--|-------------|--|

*Related topics*

[Events page](#)

[Viewing event video footage in the events tab](#)

[Devices tab](#)

[Panelhub](#)

## Firmware tab

Upgrade an individual panel's software and its connected devices on the **FIRMWARE** tab.

For Visonic panels, you can only upgrade panels and the power link. For Neo panels, you can upgrade the panel, the communicator, and any wired devices and modules. For more information about upgrading panels, devices, and modules, see [Firmware page](#).

Figure: Navigating the FIRMWARE tab

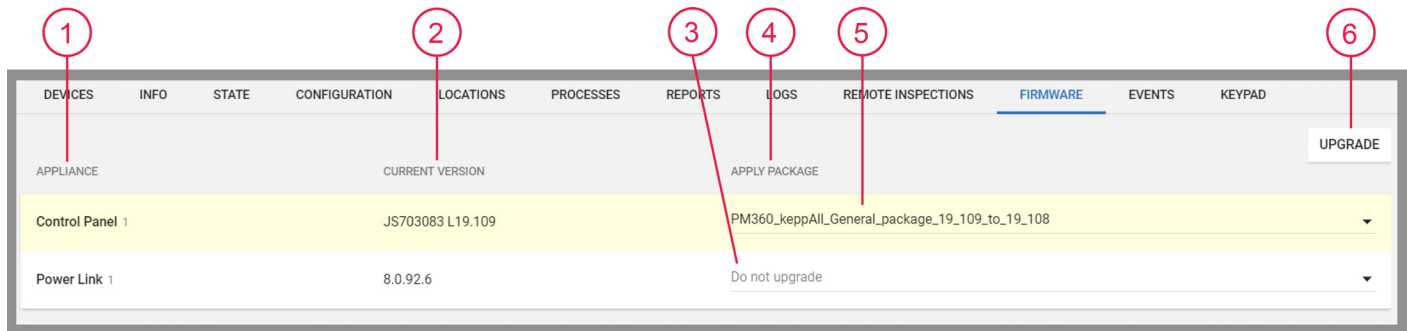


Table 25. FIRMWARE tab interface elements

| Callout | Name                           | Description  |
|---------|--------------------------------|--|
| 1       | <b>APPLIANCE</b>               | Displays the appliance   |
| 2       | <b>CURRENT VERSION</b>         | Displays the current software version of the appliance   |
| 3       | <b>Do not upgrade</b>          | By default, no package is selected from the <b>APPLY PACKAGE</b> list.   |
| 4       | <b>APPLY PACKAGE</b>           | Find packages that are available for upgrade in the <b>APPLY PACKAGE</b> column.<br><b>Note:</b> T.3 tech support loads upgrade packages to the repository server.                 |
| 5       | <b>APPLY PACKAGE</b> drop-down | Select an upgrade package from the <b>APPLY PACKAGE</b> list.  |
| 6       | <b>UPGRADE</b>                 | Click upgrade to upgrade an appliance to the selected package. For more information, see <a href="#">Upgrading the firmware related to an individual panel in the Panels hub</a> . |

### Related topics

[Firmware page](#)

[Upgrading the firmware related to an individual panel in the Panels hub](#)

[Devices tab](#)

[Panel hub](#)

### Upgrading the firmware of an individual panel in the panel hub

1. To open a panel in the panel hub, on the **Panels** page, select the panel name in the **PANEL** column.
2. On the **FIRMWARE** tab, select the device to upgrade.
3. From the **APPLY PACKAGE** list, select an upgrade package.
4. Click **UPGRADE**.

### Related topics

[Firmware tab](#)

[Firmware page](#)

[Devices tab](#)

[Panel hub](#)

## Keypad tab

Use a virtual keypad interface on the **KEYPAD** tab. To open a virtual keypad on the **KEYPAD** tab, click **CONNECT NOW** to connect to the physical keypad.

**Important:** Click **DISCONNECT** after you use the virtual keypad to disconnect from the physical keypad. If you do not disconnect, a communication backlog occurs and no other virtual keypad can connect. For more information, see Disconnect in Table 26.

**Note:** You can use the virtual and physical keypads simultaneously with Visonic panels. If you activate a Neo or PSP virtual keypad, the physical keypad deactivates.

Figure: Navigating the KEYPAD tab

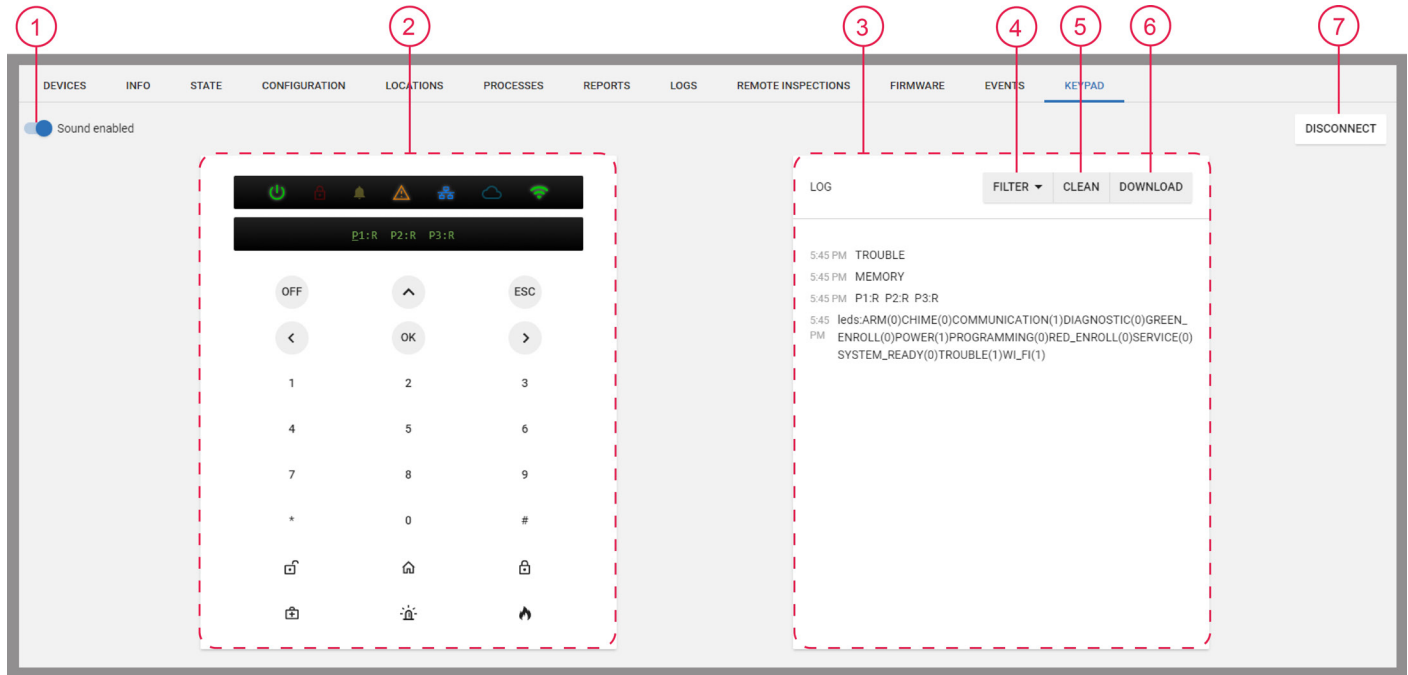


Table 26. KEYPAD tab interface elements

| Callout | Name                | Description   |
|---------|---------------------|---|
| 1       | <b>Sound toggle</b> | Turn on <b>Sound enabled</b> to enable the sound of keypad notifications.   |
| 2       | Virtual keypad      | The virtual keypad mirrors the keypad buttons and the live LED and LCD display of the physical keypad. The LED display features the power status, trouble status, WAN, and WiFi connectivity icons.   |
| 3       | Log                 | The log file records all messages between the keypad and the panel.   |
| 4       | <b>FILTER</b>       | To show only a specific category of message, from the <b>FILTER</b> list, select any of the following options: <ul style="list-style-type: none"> <li>• <b>Key:</b> Display messages related to key presses only</li> <li>• <b>Leds:</b> Display messages related to LED status only</li> <li>• <b>Text:</b> Display messages related to LED text only</li> </ul> |
| 5       | <b>CLEAN</b>        | Click to erase the log  |
| 6       | <b>DOWNLOAD</b>     | Click to download the log locally   |
| 7       | <b>DISCONNECT</b>   | Click when you finish using the virtual keypad. Some physical keypads cannot function when the virtual keypad is connected.   |

### Related topics

[Devices tab](#)

[Panel hub](#)



# Remote Inspection page

A remote inspection is a series of nine tests that check a panel remotely for any faults that affect the system and its functionality. If at least one of the nine tests fail, the inspection fails. For more information about each inspection test, see [Remote inspection tests](#).

Tests can be performed once or periodically. Finished remote inspections appear at the top of the page and uninitiated tests appear at the bottom of the page.

Filter your search of the **Remote Inspection** page by selecting one or more filter values from the **Search** list. From the **Search** list, select a filter value from one or more of the following keys: **NAME**, **ACCOUNT**, **PANEL ID**, **GROUP**, **LAST RRI**, **NEXT RRI**, **EMAIL SENT**, and **REVIEWED**. For more information, see [Using the search filter](#).

Figure: Navigating the Remote Inspection page

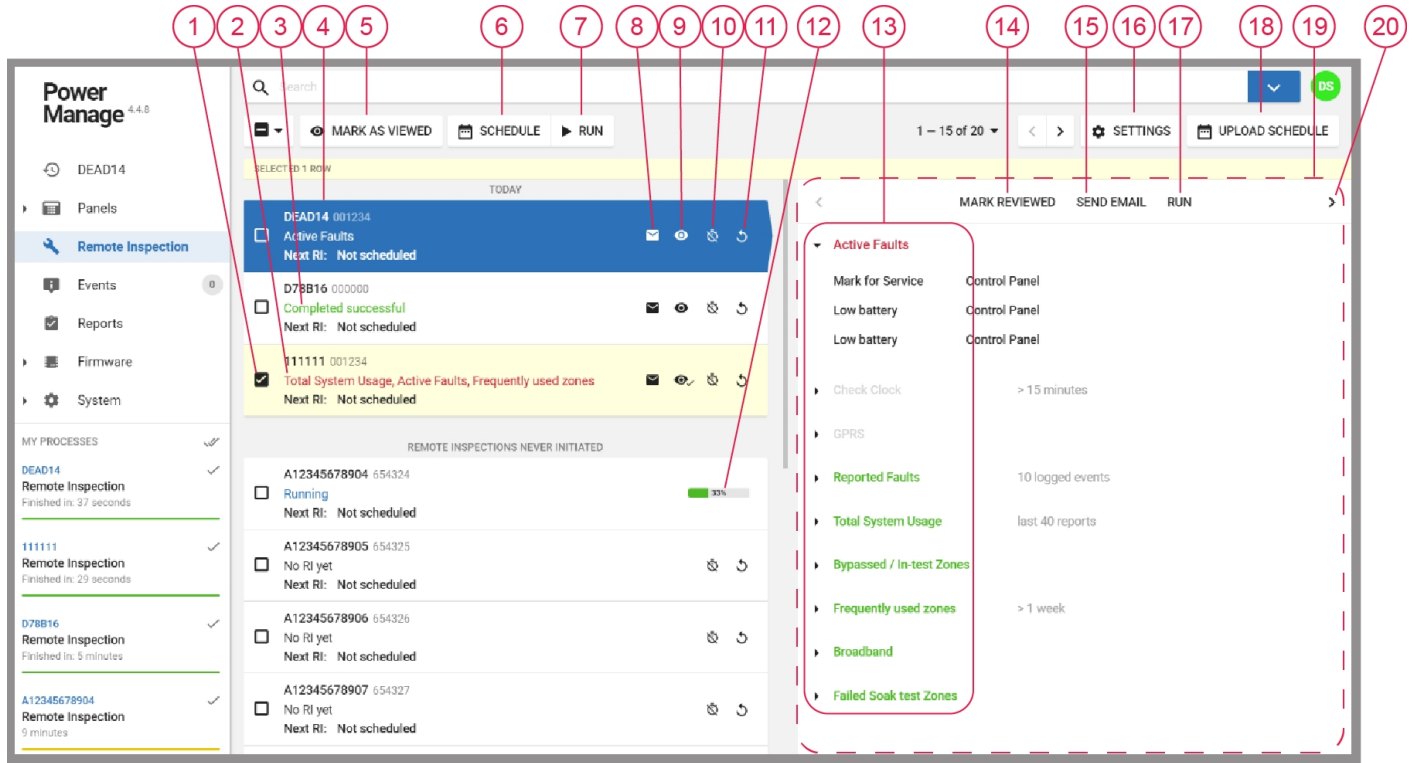


Table 27. Remote inspection page interface elements

| Callout | Name                  | Description  |
|---------|-----------------------|--|
| 1       | Check box             | Select one or more check boxes to perform an action.   |
|         |                       | Select a check box to enable <b>MARK AS VIEWED</b> , <b>SCHEDULE</b> , and <b>RUN</b> .  |
| 2       | Failed test           | Red text indicates that the test is complete and that there was at least one failure.  |
| 3       | Successful test       | Green text indicates that the test is complete and that no failure is found.   |
| 4       | Selected test         | Click a completed test to view it in the examination pane.   |
| 5       | <b>MARK AS VIEWED</b> | Click to mark one or more remote inspections as viewed. <b>MARK AS VIEWED</b> appears when you select a check box.   |
| 6       | <b>SCHEDULE</b>       | Click to schedule one or more reports. <b>SCHEDULE</b> appears when you select a check box.  |
| 7       | <b>RUN</b>            | Click to run one or more reports immediately. <b>RUN</b> appears when you select a check box.  |
| 8       | Email icon            | Email the results of the completed remote inspection to a user. This has the same function as <b>SEND EMAIL</b> .<br><br><b>Note:</b> For PowerMaster panels, the email address is defined in the private panel report. For Neo and PSP panels, the email address is defined on the <b>INFO</b> tab. For more information on the <b>INFO</b> tab, see <a href="#">Info tab</a> . |
| 9       | Mark as viewed icon   | Click to mark the completed remote inspection as viewed. This has the same function as <b>MARK AS VIEWED</b> .   |
|         |                       | If a remote inspection is viewed, hover over the icon to see who viewed the report and when.   |
| 10      | Schedule              | Click the schedule icon to schedule a remote inspection or stop a scheduled remote inspection. This  |

|    |                        |  |
|----|------------------------|--|
|    | icon                   | has the same function as <b>SCHEDULE</b> .   |
| 11 | Run icon               | Click to run a report immediately. This has the same function as <b>RUN</b> .  |
| 12 | Progress tracker       | Displays the completion percentage of a report that is in progress   |
| 13 | Result color           | When you view a report in the examination pane, the report title color indicates success or failure. <ul style="list-style-type: none"> <li>• If the report title is green, the test is successful</li> <li>• If the report title is red, the test is unsuccessful.</li> <li>• If the report title is gray, the test did not complete due to lack of information.</li> </ul> <b>Note:</b> To see a description of each test, see <a href="#">Remote inspection tests</a> . |
| 14 | <b>MARK REVIEWED</b>   | Click to mark a completed remote inspection as reviewed. This has the same function as <b>MARK AS VIEWED</b> .<br><b>Note:</b> If the report is already reviewed, this text is gray.   |
| 15 | <b>SEND EMAIL</b>      | Click to email the results of a completed remote inspection to a user that is defined in the private report in the panel. This has the same function as the email icon.  |
| 16 | <b>SETTINGS</b>        | Click to configure the general remote inspection settings. For more information, see <a href="#">Remote inspection values</a> .  |
| 17 | <b>RUN</b>             | Click to run a report again immediately. This has the same function as Run icon and <b>RUN</b> .   |
| 18 | <b>UPLOAD SCHEDULE</b> | Click to create a new remote inspection schedule. For more information, see <a href="#">Creating a remote inspection for a batch of panels</a> .   |
| 19 | Examination pane       | Click a report to review the results in the examination pane.<br><b>Note:</b> To see a description of each test, see <a href="#">Remote inspection tests</a> .   |
| 20 | Next report            | Click the arrow to review the next report in the test results window.<br><b>Note:</b> Click the arrow on the opposite side of the test results window to review the previous report.   |

#### Related topics

[Remote inspection tests](#)

[Remote inspection values](#)

[Creating a remote inspection for a batch of panels](#)

[Canceling a remote inspection](#)

[Running a remote inspection manually](#)

[Scheduling one or more remote inspections for a batch of panels](#)

## Remote inspection tests

When you view a completed remote inspection in the examination pane, see to the following definitions:

**Note:** For more information about the examination pane, see Examination pane in Table 27.

### Active faults

The **Active Faults** test is an inspection that checks the panel for faults that currently affect the operation of the panel.

### Check clock

The **Check Clock** test is an inspection that checks if the time difference between the panel clock and the server clock is greater than the value set in [Remote inspection values](#).

### GPRS

The **GPRS** test is an inspection that checks for a GPRS heartbeat. The GPRS test passes in one of the following cases:

- The GPRS module does not exist. The test title displays in the color gray.
- The GPRS module exists but the keepalive messages are disabled. To disable or enable keepalive messages, see the **GPRS Keep Alive Enabled** toggle in [Group parameters](#).
- The GPRS module exists and keepalive messages arrive on time.

### Reported faults

The **Reported Faults** test is an inspection that checks the panel log file for faults. The test fails if a fault is found.

To define the number of recent events that the test inspects for faults, see **Check for reported faults in last** in [Remote inspection values](#).

## Total system usage

The **Total System Usage** test is an inspection that checks the panel for any arm or disarm logs.

- If there is at least one arm or disarm log, the test passes.
- Define how many reports from the panel that the test inspects in [Remote inspection values](#).

## Bypassed/In-test zones

The **Bypassed/In-test Zones** test is an inspection that checks the panel for any log of a bypassed zone. If the test finds that a zone is bypassed, the test fails.

## Frequently used zones

The **Frequently used zones** test is an inspection that checks if zones have been activated in the time defined in the **Check frequently used zones not used over** value in [Remote inspection values](#). If the time of inactivity is greater than the defined time, the test fails.

**Note:** The test bypasses zones that are defined as rarely triggered. To mark a zone as rarely triggered, see [Bypassing, soak testing, and marking a device as rarely triggered](#).

## Broadband

The **Broadband** test is an inspection that checks for the presence of a broadband heartbeat.

- If the panel is not connected by broadband or there is no broadband module, the test title displays in the color gray.
- If there is a heartbeat, the test passes. If there is no heartbeat, the test fails.

## Failed soak test zones

The **Failed Soak test Zones** test is an inspection that checks for soak test zones that cause an alarm. If there are no sensors in soak test mode or no alarms from sensors in soak test mode, the test passes.

**Note:** To put a device in a soak test state, see [Putting a device in a soak test state](#).

# Remote inspection values

To change the remote inspection settings, on the **Remote Inspections** page, click **SETTINGS** and set your testing preferences. The definition list below defines each setting:

## Check for reported faults in last

Set the number of recent events that the test inspects for faults in the panel log file.

- The test fails if a fault is found.
- Select either 10, 20, or 30 events to inspect.

## Total system states in last

Set the number of reports that the test inspects for arm or disarm logs.

- The test fails if a system state change is not found in the panel log file.
- Select either 40, 60, or 120 reports to inspect.

## Check frequently used zones not used over

Set the period of time the test inspects frequently used zones for an activation log. By default, all zones are defined as frequently used.

If a zone is rarely used, mark it as rarely triggered. To mark a device as rarely triggered on the **DEVICES** tab, see [Bypassing, soak testing, and marking a device as rarely triggered](#).

**Note:** A zone is a sensor.

## Treat adjusted date/time as failure if adjustment is over

Set the maximum allowed time difference between the panel and server clocks. If the time difference is greater than the value, the test fails.

Figure: REMOTE INSPECTION VALUES dialog box

REMOTE INSPECTION VALUES

Check for reported faults in last  
10 faulted events

Total System States in last  
40 reports

Check frequently used zones not used over:  
1 week

Treat Adjusted Date / time as failure if adjustment is over  
15 minutes

DISMISS SAVE

## Related topics

[Remote inspection page](#)

## Creating a remote inspection for a batch of panels

**Note:** To create a remote inspection for a single panel, see [Scheduling a remote inspection for an individual panel](#).

1. Open a new spreadsheet using your chosen application.
2. In the first row, type the panel name in column A, type the inspection date in column B, and type the number of months between each repetition in column C. For more information, see Figure.

**Note:**

- Enter the date in the following format: YYYY-MM-DD.
  - The recognized inspection repetition values for column C are: 0, 1, 3, 6, 9. To perform the test once only, enter a value of 0.
3. **Optional:** To add an additional panel, type the relevant information in the row below the first entry and follow the same column format. You can add multiple panels.
  4. To save the file in a comma delimited format, save the spreadsheet as a CSV file.
  5. From the navigation pane in the PowerManage web application, click **Remote Inspection**.
  6. Click **UPLOAD SCHEDULE**.
  7. Click **CHOOSE FILE** and select the CSV file.

The remote inspection now appears on the **Reports** page.

*Figure: Spreadsheet example*

|   | A      | B          | C |
|---|--------|------------|---|
| 1 | A00000 | 2019-01-25 | 3 |
| 2 | A00001 | 2018-01-25 |   |

*Related topics*

[Remote inspection page](#)

[Scheduling a remote inspection for an individual panel](#)

## Scheduling one or more remote inspections for a batch of panels

**Note:** To schedule a remote inspection for a single panel, see [Scheduling a remote inspection for an individual panel](#).

1. In the navigation pane, click **Remote Inspection**.
2. Select the check box of the remote inspection to schedule.
3. Click **SCHEDULE** to open a dialog box.
4. In the **Next Inspection** field, enter a date manually or select a date in the calendar.
5. From the **Choose repetition** list, select how often you want the remote inspection to occur. You can select **Once**, **1 month**, **3 months**, **6 months**, or **9 months**.
6. Click **SAVE**.

*Related topics*

[Remote inspection page](#)

[Scheduling a remote inspection for an individual panel](#)

## Canceling a remote inspection

1. In the navigation pane, click **Remote Inspection**.
2. Select the check box of the remote inspection you want to cancel.  
**Note:** You can only cancel a report that is scheduled to run.
3. Click **CANCEL**.
4. In the dialog box, click **CANCEL**.

*Related topics*

[Remote inspection page](#)

## Running a remote inspection manually

1. In the navigation pane, click **Remote Inspection**.
2. Select the check box of one or more remote inspections to run manually.
3. Click **RUN**.
4. Click **BEGIN NOW**.

*Related topics*

[Remote inspection page](#)

# Events page

View a list of all panel events on the **Events** page.

Filter the **Users** page to return a match of specified criteria that you set in the search bar. Filter your search with one, or a combination of the following criteria: **SEVERITY**, **PANEL ID**, **PANEL NAME**, **ACCOUNT**, **HAS VIDEO**, **DATE** and **TYPE**. For more information about using the search filter, see [Using the search filter](#).

Figure: Navigating the Events page

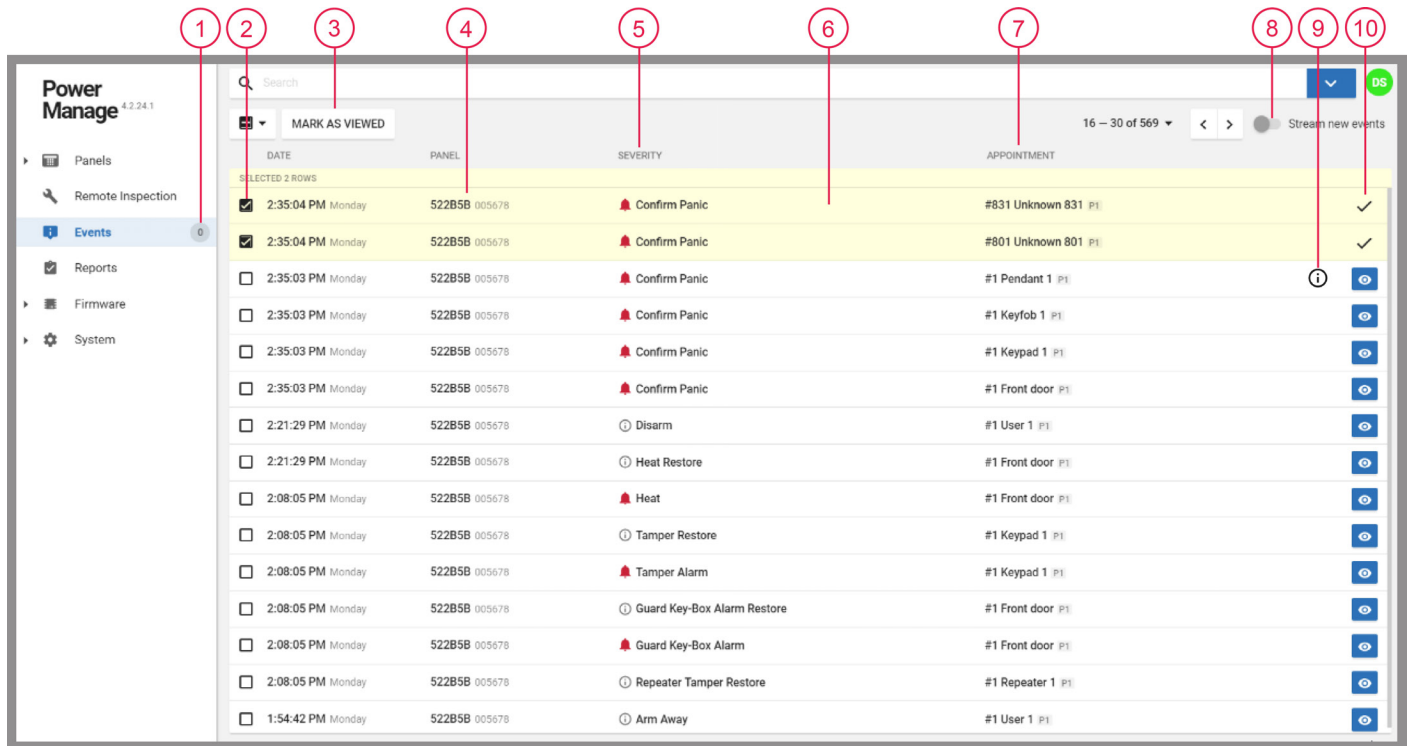


Table 28. Events page interface elements

| Callout | Name                    | Description  |
|---------|-------------------------|--|
| 1       | Events since last logon | Displays the number of unresolved events since the user last logged on. To enable the notification, from the user icon list, select <b>Settings</b> and turn on <b>Enable alarm supervision</b> . For more information on the user icon, see User icon in Table 2  |
| 2       | Check box               | Select the check box of one or more events to enable <b>MARK AS VIEWED</b> .   |
| 3       | <b>MARK AS VIEWED</b>   | Click <b>MARK AS VIEWED</b> to mark multiple events as viewed. This button has the same function as the <b>Viewed</b> icon, but it can be performed on more than one event.<br><b>Important:</b> Only mark an event as viewed if your investigation is complete.   |
| 4       | Panel name              | Click the panel name to open it in the panel hub on the <b>DEVICES</b> tab. For more information, see <a href="#">Panel hub</a> .  |
| 5       | Event severity          | <div style="display: flex; border-bottom: 1px solid black; padding-bottom: 5px;"> <div style="text-align: center; width: 30px;"></div> <div>The offline notification icon appears if the PowerManage server does not receive a keepalive message from the panel.<br/><b>Note:</b> Define the delay between the panel's last keepalive message and the offline notification in the <b>Groups</b> page. For more information, see <a href="#">Group parameters</a>.</div> </div> <div style="display: flex; border-bottom: 1px solid black; padding-bottom: 5px;"> <div style="text-align: center; width: 30px;"></div> <div>The online notification icon appears if the PowerManage server receives regular keep alive messages from a panel that was offline.</div> </div> <div style="display: flex; border-bottom: 1px solid black; padding-bottom: 5px;"> <div style="text-align: center; width: 30px;"></div> <div>The trouble icon appears next to the event in the <b>SEVERITY</b> column if there is a trouble event, such as a low battery, AC fail, gas or flood alert.</div> </div> <div style="display: flex; border-bottom: 1px solid black; padding-bottom: 5px;"> <div style="text-align: center; width: 30px;"></div> <div>The alarm icon appears if there is an event caused by a breach of security or safety. Panic alarms, burglar alarms and fire alarms are examples of alarms.</div> </div> <div style="display: flex; padding-bottom: 5px;"> <div style="text-align: center; width: 30px;"></div> <div>The information event icon appears when a panel signals information such as a device bypass, an auto test, or any other information messages.</div> </div> |
| 6       | View in examine         | Click the event row to open an event in examine mode. For more information on examining events, see <a href="#">Examining events on the Events page</a> .  |

|    |                          |   |
|----|--------------------------|---|
|    | mode                     |   |
| 7  | Appointment              | You can find the source of the event in the <b>APPOINTMENT</b> column. The source can be one of the following examples: <ul style="list-style-type: none"> <li>• Panel: Low battery, tamper, etc.</li> <li>• Device: The panic button on a key fob, a sensor triggering a burglar alarm</li> <li>• Server: Online and offline status reports</li> </ul> |
| 8  | <b>Stream new events</b> | Turn on the <b>Stream new events</b> toggle to update the <b>Events</b> page every time a new event occurs.<br><b>Note:</b> By default, the <b>Stream new events</b> toggle is turned off.  |
| 9  | Raw event number icon    | Hover over the icon to view the raw event number that was sent to the server.   |
| 10 | Viewed or unviewed icon  | The eye symbol indicates unviewed reports. If you click the eye icon, a check mark replaces it to indicate the report is viewed.<br><b>Note:</b> Only mark an event as viewed if your investigation is complete.  |

*Related topics*

[Examining event video on the Events page](#)

[Examining events on the Events page](#)

[Viewing events in the Events page](#)

[Viewing an event in the Events page](#)

## Examining event video on the Events page

1. In the navigation pane, select **Events**.
2. Select the event with video to examine. To filter the **Events** page to only display events with video footage, from the **Search** list, select **has video**. From the **Has Video** list, select **Yes**.
3. Play the video in the examination pane to view the recorded footage.
4. To view live footage, click **LIVE VIDEO**.
5. **Optional:** To download the footage, click **DOWNLOAD**.

*Related topics*

[Events page](#)

[Examining events on the Events page](#)

## Examining events on the Events page

On the **Events** page, select the line of an event to view it in examine mode. The event is highlighted and appears in context with other events from the panel that you can examine.

Figure: Examining events on the Events page

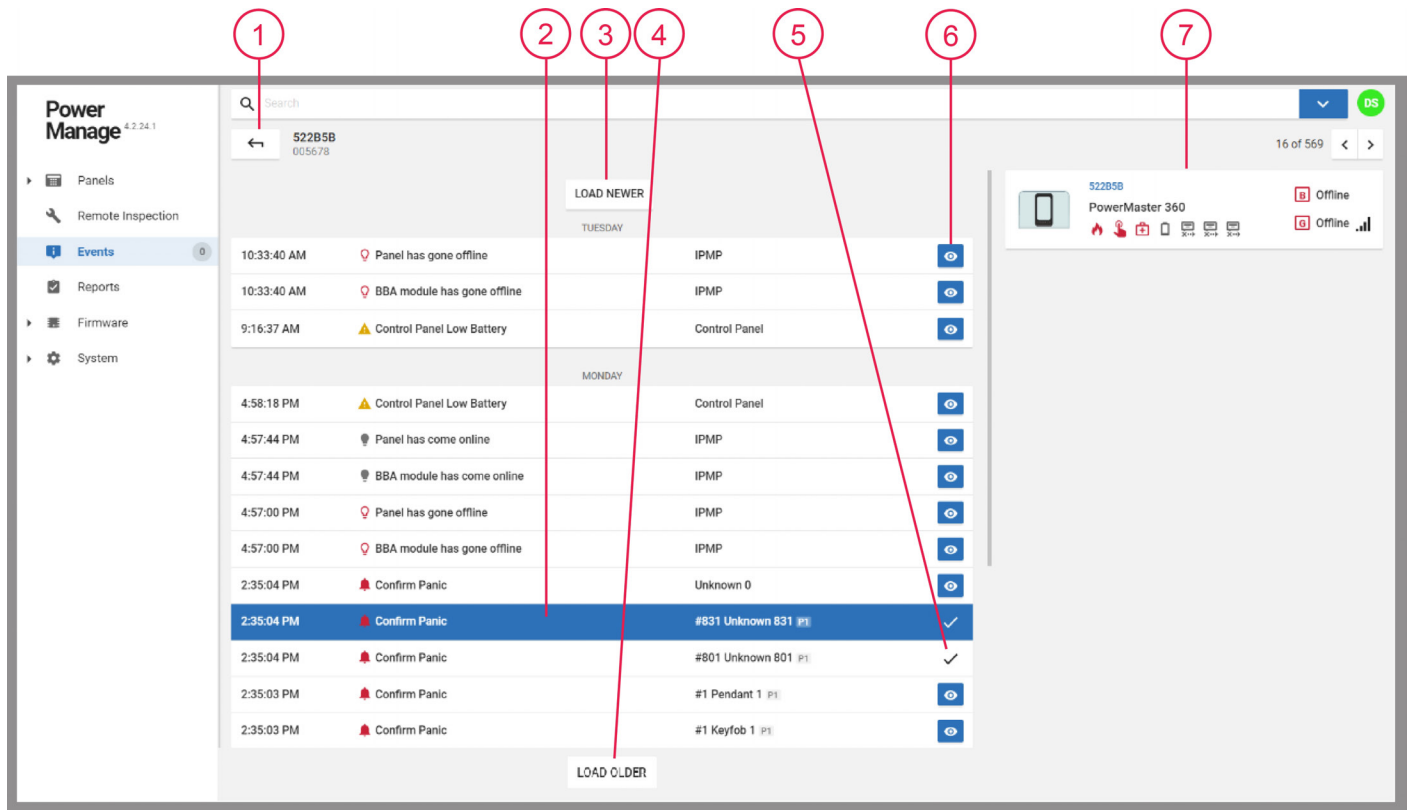


Table 29. Events page examination interface elements

| Callout | Name              | Description  |
|---------|-------------------|--|
| 1       | Exit              | Click the arrow to return to the Events page.  |
| 2       | Selected event    | The selected event is highlighted.   |
| 3       | <b>LOAD NEWER</b> | Click <b>LOAD NEWER</b> to load up to ten more recent events. The <b>LOAD NEWER</b> button only appears if more recent events exist.   |
| 4       | <b>LOAD OLDER</b> | Click <b>LOAD OLDER</b> to load up to ten more older events.   |
| 5       | Viewed event      | A check mark indicates that a user marked the event as viewed.   |
| 6       | Unviewed event    | The unviewed icon indicates that a report is not viewed. If you select the icon, a check mark replaces it to indicate that the report is viewed. Only mark an event as viewed if your investigation is complete. |
| 7       | Examination pane  | Click an event row to see more information in the examination pane about the source device that detects the event.   |
|         |                   | If the event has video footage, you can play the recorded footage in the examination pane. For more information, see <a href="#">Using the video on demand tab</a> .   |

### Related topics

[Events page](#)

[Examining event video on the Events page](#)

[Viewing events in the Events page](#)

[Viewing an event in the Events page](#)

[Using the video on demand tab](#)



## Viewing an event or multiple events on the Events page

1. From the navigation pane, select **Events**.
2. Navigate to the events you want to mark as viewed and select the check box at the start of each line.  
**Note:** You can select the eye symbol to quickly mark a single event as viewed. See Viewed or unviewed icon in Table 28.
3. Click **MARK AS VIEWED**.

# Reports page

View, create, stop and remove reports on the **Reports** page.

Filter your search of the **Reports** page by selecting one or more filter values from the **Search** list. From the **Search** list, select a filter value from one or more of the following keys: **IS ACTIVE**, **CREATED**, **LAST REPORT**, and **NEXT REPORT**. For more information, see [Using the search filter](#).

Figure: Navigating the Reports page

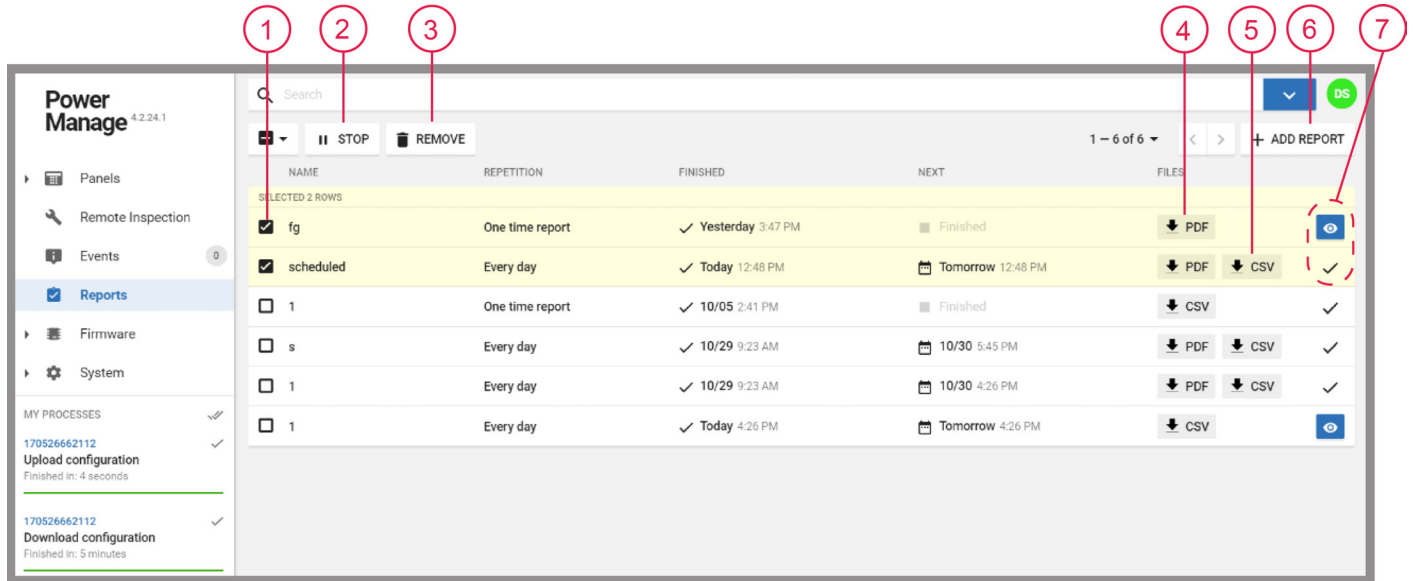


Table 30. Reports page interface elements

| Callout | Name                 | Description   |
|---------|----------------------|---|
| 1       | Check box            | Select the check box of one or more reports to enable use of <b>STOP</b> and <b>REMOVE</b> .  |
| 2       | <b>STOP</b>          | Click to stop a report that is currently running. If you stop a report, it will not run on scheduled dates in the future. <b>STOP</b> appears when you select a check box.  |
| 3       | <b>REMOVE</b>        | Click to remove a report from the list of reports and cancel any recurrences that are scheduled in the future. <b>REMOVE</b> appears when you select a check box.   |
| 4       | <b>PDF</b>           | Click to download the report locally as a PDF file. The .pdf format is more readable than a .csv file and contains more panel information.  |
| 5       | <b>CSV</b>           | Click to download the report locally as a CSV file.   |
| 6       | <b>ADD REPORT</b>    | Click to create a new report for all panels that are enrolled on the server. For more information, see <a href="#">Creating a new report for all panels on the server</a> .<br><b>Note:</b> To create a new report for one or more panels, see <a href="#">Creating a new report on the Panels page</a> . |
| 7       | Viewed/unviewed icon | The eye icon indicates unviewed reports. If you click the icon, a check mark replaces it to identify the report as viewed. Only mark an event as viewed if you conclude the event investigation.  |

## Related topics

[Creating a new report for all panels on the server](#)

[Creating new reports](#)

[Stopping or removing a report from the Reports page](#)

## Creating new reports

To create a new report for all of the panels that are enrolled in the server, see the definitions below and follow the procedure in [Creating a new report on the Reports page](#).

To create a new report for one or more panels, see the definitions below and follow the procedure in [Creating a new report on the Panels page](#).

Figure: CREATE REPORT FOR ALL PANELS dialog box

CREATE REPORT FOR ALL PANELS

Report Name

Report Options

Report Type  
One time

Schedule start

Start Right Now

Content Options

CSV

PDF It is not possible to use for all panels

Send email

Send to FTP Server

DISMISS SAVE

### Report Name

Name the report as descriptively as possible.

**Note:** The report name is mandatory.

### Report options:

#### Report type

- **One time:** The report runs once only.
- **Daily:** Set your report to run daily, or in a regular sequence of days. For example, you can set the report to run every day, every two days, every three days, or at any regular interval up to every 30 days. You can also configure the report to run every weekday only.
- **Weekly:** Set the report to run on a weekly basis. For example, you can set the report to run every week, every two weeks, every three weeks, or at any week based interval up to every 52 weeks. You can set the day of the week you want the report to run.
- **Monthly:** Set your report to run on a monthly basis. For example, you can set the report to run every month, every two months, every three months, or at any month based interval up to every 12 months. You can then select one of two options to set the day of the month that the report runs:
  1. Set the report to run on every first, second, third, fourth, or fifth day of the month.
  2. Set the report to run on one specified day of the week, based on its ordinal occurrence in a month. For example, you can set the report to run on the first Monday of every month, the second Friday of every month, or the fourth Wednesday of every month. The highest ordinal occurrence you can set is the fourth occurrence of a day in the month.

### Range of recurrence

Set the report to recur constantly, to end after a specified number of recurrences, or to end on a specified date.

**Note:** This option is not available if you set **Report Type** to **One time**.

### Schedule start

Set when the recurring report starts. The default setting is **Start Right Now**.

If you clear the **Start Right Now** check box, a date and time field appear. Click the date field to select a start date in the calendar interface and click the time field to select a start time.

**Note:** If you click **X** in the time field, a default time of **12:00 AM** is set.

### Content options

You can read reports on the **Reports** page. Alternatively, you can send a report to an email address or an FTP server site.

On the **Reports** page you can set the format of the report to a CSV file. The option to set the format of the report to a more readable PDF file is available only when you create a report on the **Panels** page. For more information, see [Creating a new report on the Panels page](#).

### Related topics

[Reports page](#)

[Creating a new report on the Panels page](#)

## Creating a new report for all panels in the server

1. In the navigation pane, click **Reports**.
2. Click **ADD REPORT**.
3. Enter a report name in the **Report Name** field and configure the settings to define your report.

**Note:** See [Creating new reports](#) for more information on report settings.

4. Click **SAVE**.

The report now appears on the **Reports** page.

*Related topics*

[Reports page](#)

## Stopping or removing a report from the Reports page

**Note:** If you remove a report, it is deleted from the page and you cannot reuse it.

1. In the navigation pane, click **Reports**.
2. Select the check box of the report to stop or remove.  
**Note:** You can select multiple reports to stop or remove at the same time, but you can only perform one function at a time.
3. Perform one of the following actions:
  - Click **STOP**
  - Click **REMOVE**
4. Click **OK**.

*Related topics*

[Reports page](#)

# Firmware page

Mass upgrade the firmware of a group of control panels, Ethernet Powerlinks, wired keypads, PGH outputs, and communication boards on the **Firmware** page. A device group only appears on the **Firmware** page if the server contains an upgrade package related to the device.

After selecting a device for upgrade, filter your search by selecting one or more filter values from the **Search** list. From the **Search** list, select a filter value from one or more of the following keys: **NAME**, **PANEL ID**, **ACCOUNT**, **GROUP**, **MODEL**, **CONTROL PANEL**, **WIRED KEYPAD**, **ZONE EXPANDER**, **OUTPUT EXPANDER**, **POWER SUPPLY**, **POWER SUPPLY WITH OUTPUTS**, **PGH**, **COMMUNICATOR**, **AUDIO VERIFICATION**. For more information, see [Using the search filter](#).

Figure: Navigating the Firmware page and the CHOOSE DEVICE FOR MASS UPGRADE list

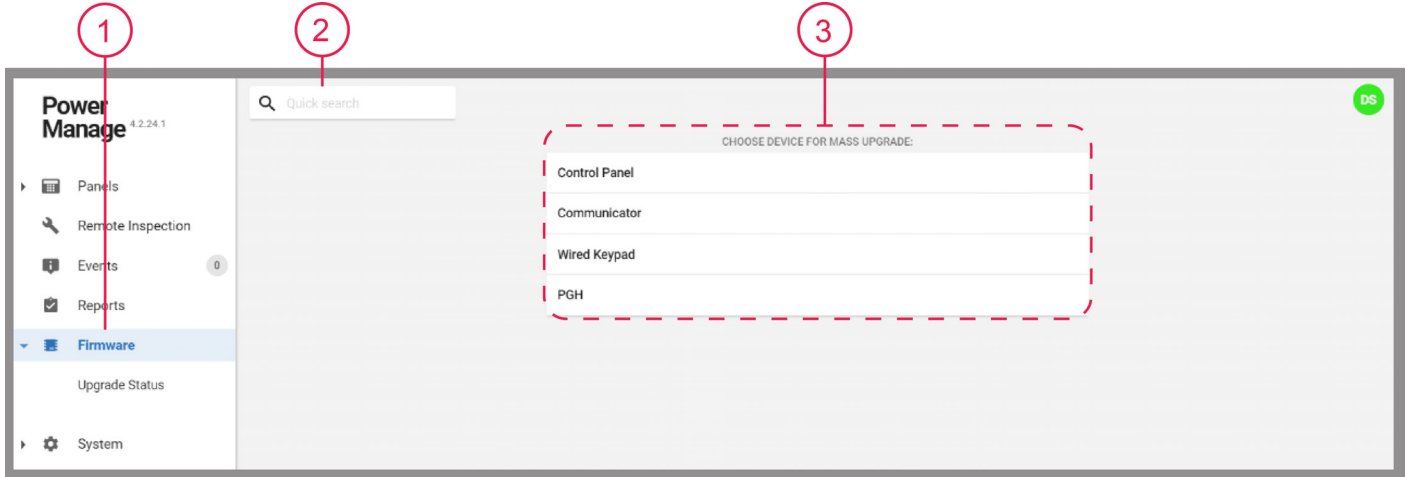


Table 31. Firmware page interface elements

| Callout | Name            | Description   |
|---------|-----------------|---|
| 1       | Upgrade status  | Click <b>Upgrade Status</b> to view the upgrade status of firmware upgrades.<br><br>You can stop a software upgrade on the <b>Processes</b> page if it has a <b>START</b> status. For more information, see <a href="#">Stopping a process</a> . To stop a process for an individual panel, see <a href="#">Processes tab</a> . |
| 2       | Quick search    | Enter a search term to search the devices that are available for upgrade.   |
| 3       | Firmware groups | The firmware packages that are available for mass upgrade   |

Figure: Selecting a group to upgrade on the Firmware page

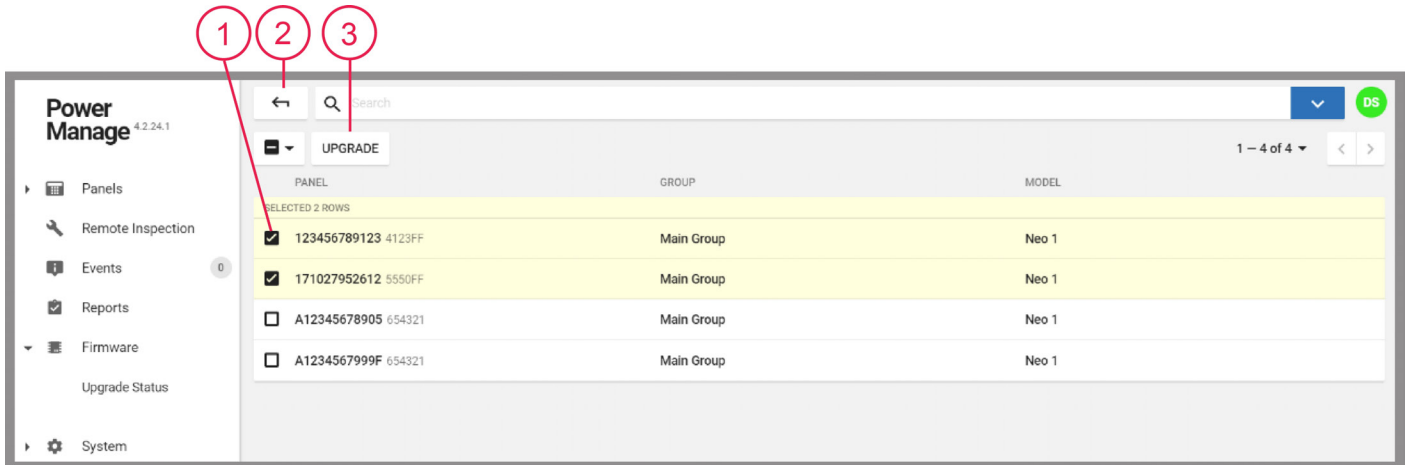


Table 32. Firmware page interface elements

| Callout | Name           | Description   |
|---------|----------------|---|
| 1       | Check box      | Select the check box of one or more groups to enable <b>UPGRADE</b> .   |
| 2       | Return         | Click to return to <b>Firmware</b> page   |
| 3       | <b>UPGRADE</b> | Click <b>UPGRADE</b> to apply the upgrade package to the selected groups. To upgrade the firmware of an individual panel, see <a href="#">Firmware tab</a> .<br><br>The firmware upgrade times out after a week if the process does not finish. If the panel is |

|  |  |  |
|--|--|--|
|  |  | offline, in an armed state, or experiencing troubles, the upgrade process pauses in a <b>START</b> state.<br><b>Note:</b> Power-link upgrades are an exception. Power-link upgrades time out after one hour. |
|--|--|--|

*Related topics*

[Firmware tab](#)

[Mass upgrading the firmware of a device](#)

## Mass upgrading the firmware of a device

1. In the navigation pane, click **Firmware**.
2. From the **CHOOSE DEVICE FOR MASS UPGRADE** list, click the device type that you want to upgrade. For more information, see .
3. From the **UPGRADE CONTROL PANEL TO VERSION** list, select the software version you want to upgrade the device to.
4. Select the check box of one or more panels to upgrade.
5. Click **UPGRADE**.
6. Click **OK**.

*Related topics*

[Firmware page](#)

[Upgrading the firmware related to an individual panel in the Panels hub](#)

# System drop-down menu

To manage issues related to the server, select from the **System** drop-down menu.

Manage server issues related to the following categories:

- Groups
- Processes
- Users
- Roles
- Action log
- Central stations
- Basic configurations
- Installers
- Interactive users
- Dashboard

## Groups page

Manage panel groups on the **Groups** page. A group is a collection of panels that share the same configuration settings.

**Note:** Any panel that connects by auto enroll automatically joins **Main Group**.

Figure: Navigating the Groups page

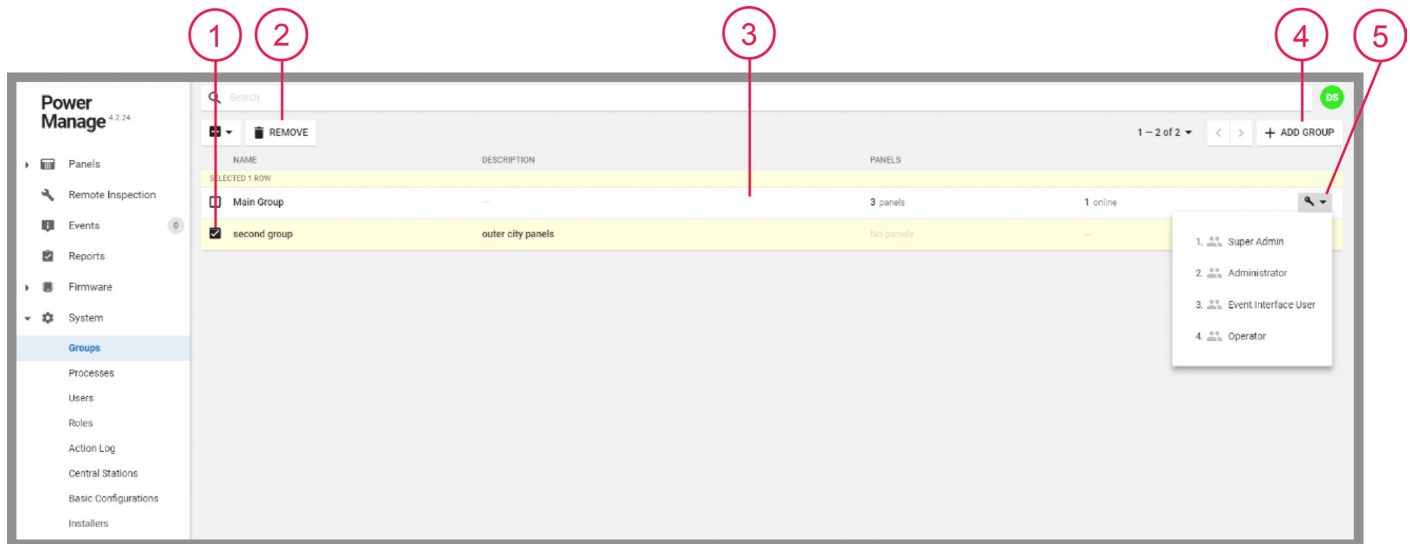


Table 33. Groups page interface elements

| Callout | Name             | Description   |
|---------|------------------|---|
| 1       | Check box        | Select the check box of one or more groups to enable <b>REMOVE</b> .  |
| 2       | <b>REMOVE</b>    | Click to remove one or more selected panels from the server. Select a check box to enable <b>REMOVE</b> .<br><b>Note:</b> You cannot remove <b>Main Group</b> .   |
| 3       | Group hub        | Click the row of the group to open it in the group hub. In the group hub, you can view general group and central station information in the <b>GENERAL</b> and <b>CS COMMUNICATING</b> tabs. For more information on the group hub, see <a href="#">Group hub</a> . |
| 4       | <b>ADD GROUP</b> | Click to add a new panel to the server. For more information about adding a group to the server, see <a href="#">Adding groups to the Groups page</a> and <a href="#">Adding a group to the Groups page</a> .   |
| 5       | Connected users  | Click the connected users icon to display a list of all of the server users that have privileges to view the panels of the group.   |

### Related topics

[Adding a new group](#)

[Group parameters](#)

[Configuring the central station communication settings for a group](#)

## Group parameters

If you add a new group to the server or edit an existing group, configure the parameters in the **ADD GROUP** or **EDIT GROUP** dialog boxes.

To make a new group in the server, see [Adding a group to the groups page](#).

To edit a group configuration, see **EDIT** in Table 36.

Figure: Groups parameters dialog box

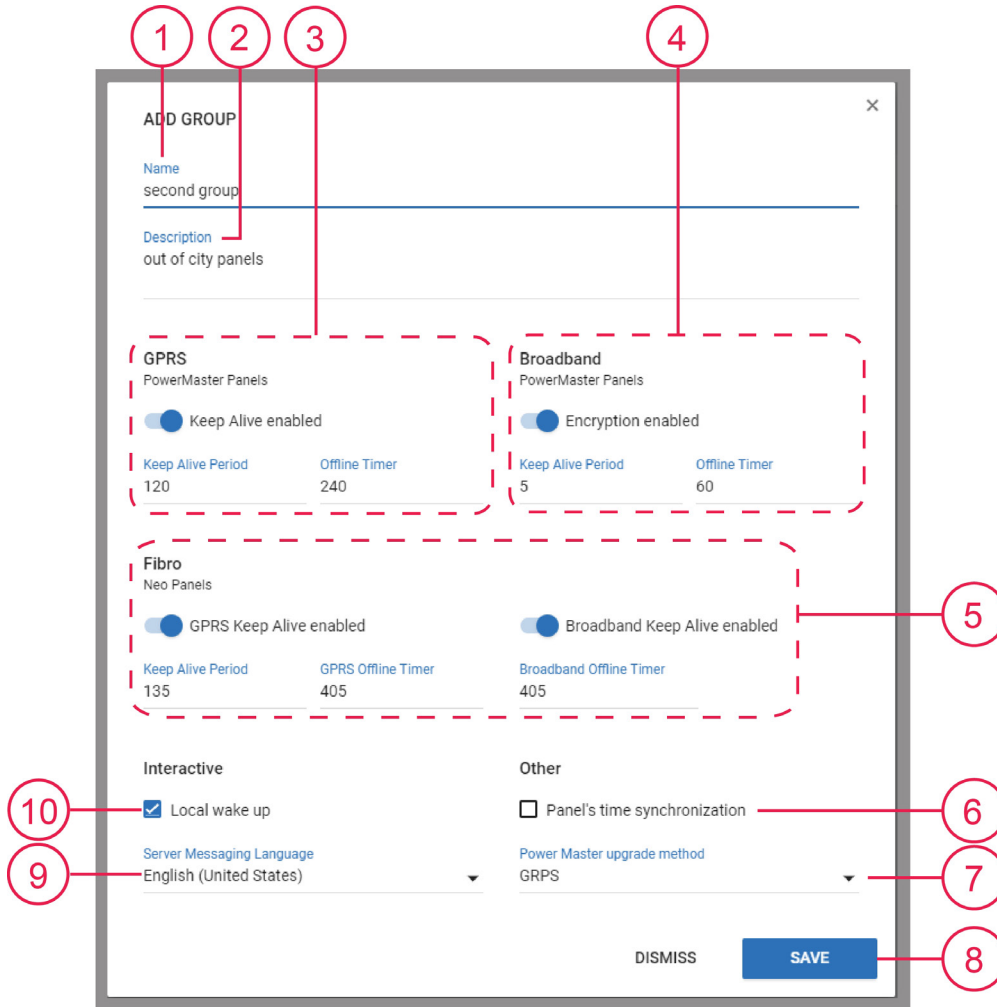


Table 34. Group parameters interface elements

| Callout | Name  | Description   |
|---------|---|---|
| 1       | <b>Name</b>                                     | Each group name must be unique and can only contain the characters: A-Z, a-z, and 0-9. Spaces are also accepted.  |
| 2       | <b>Description</b>                              | Enter an optional description of the group in the <b>Description</b> field.   |
| 3       | PowerMaster panel GPRS keep alive settings      | <ul style="list-style-type: none"> <li>• <b>Keep Alive enabled</b>: To disable the GPRS keep alive and reduce GPRS communication, turn off <b>Keep Alive enabled</b>. Turn on <b>Keep Alive enabled</b> to enable the keep alive.</li> <li>• <b>Keep Alive Period</b>: To determine how often the panel sends a keep alive message, enter a value in the <b>Keep Alive Period</b> field.</li> <li>• <b>Offline Timer</b>: If no keep alive message reaches the server, the panel's online status is set to <b>GPRS Offline</b> on the <b>Panels</b> page and a message is sent to the central station or automation. To delay the offline message by a specified time, enter a value that is greater than the <b>Keep Alive Period</b> value in the <b>GPRS Offline Timer</b> field.</li> </ul> |
| 4       | PowerMaster panel Broadband keep alive settings | <ul style="list-style-type: none"> <li>• <b>Encryption enabled</b>: Turn on <b>Encryption enabled</b> to encrypt messages that are sent from the panel with SSL encryption. To disable encryption, turn off <b>Encryption enabled</b>.</li> </ul>   |



|    |                                     |  |
|----|-------------------------------------|--|
|    |                                     | <p>Old power-link boards cannot encrypt messages. With newer power-link boards, you cannot disable encryption if the security level is set to medium or high in the administration console.</p> <ul style="list-style-type: none"> <li>• <b>Keep Alive Period:</b> To define how often the panel sends keep alive messages, enter a value in the <b>Keep Alive Period</b> field. The smallest value you can enter in the field is 5 seconds.</li> <li>• <b>Broadband Offline Timer:</b> If no keep alive message reaches the server by Ethernet, the panel's online status is set to <b>BBA Offline</b> on the <b>Panels</b> page and a message is sent to the central station or automation. To delay this message by a specified time, enter a value that is greater than the <b>Keep Alive Period</b> value in the <b>Broadband Offline Timer</b> field.</li> </ul> <p><b>Note:</b> You cannot disable broadband keep alive messages for PowerMaster panels.</p>  |
| 5  | FIBRO Neo panel keep alive settings | <ul style="list-style-type: none"> <li>• <b>GPRS Keep Alive enabled:</b> To disable the GPRS keep alive and reduce GPRS communication, turn off <b>Keep Alive enabled</b>. To enable the keep alive, turn on <b>Keep Alive enabled</b>.</li> </ul> <p><b>Note:</b> If you turn on <b>Keep Alive enabled</b>, ensure that the correct receiver channel directs to a PowerManage server that can support a GPRS heartbeat.</p> <ul style="list-style-type: none"> <li>• <b>Broadband Keep Alive enabled:</b> Turn on <b>Keep Alive enabled</b> to disable the Ethernet heartbeat.</li> </ul> <p><b>Note:</b> If you enable the broadband keep alive, ensure that the correct receiver channel directs to a PowerManage server that can support an Ethernet heartbeat.</p> <ul style="list-style-type: none"> <li>• <b>Keep Alive Period:</b> To determine how often the panel sends a keep alive message, enter a value in the <b>Keep Alive Period</b> field.</li> <li>• <b>GPRS Offline Timer:</b> If no keep alive message reaches the server, the panel's online status is set to <b>GPRS Offline</b> on the <b>Panels</b> page and a message sends to the central station or automation. To delay this message by a specified time, enter a value that is greater than the <b>Keep Alive Period</b> value in the <b>GPRS Offline Timer</b> field.</li> <li>• <b>Broadband Offline Timer:</b> If no keep alive message reaches the server by Ethernet, the panel's online status is set to <b>BBA Offline</b> in the <b>Panels</b> page and a message is sent to the central station or automation. To delay this message by a specified time, enter a value that is greater than the <b>Keep Alive Period</b> value in the <b>Broadband Offline Timer</b> field.</li> </ul> |
| 6  | <b>Panel time synchronization</b>   | To periodically synchronize the panel clock with the server clock, select the <b>Panel's Time Synchronization</b> check box.   |
| 7  | <b>PowerMaster upgrade method</b>   | From the <b>PowerMaster upgrade method</b> list, select either <b>GPRS</b> or <b>Broadband</b> as a connection type for upgrades.  |
| 8  | <b>SAVE</b>                         | Click to save the group configuration.   |
| 9  | <b>Server messaging Language</b>    | From the <b>Server Messaging Language</b> list, select a server messaging language.  |
| 10 | <b>Local wake up</b>                | Unlike Ethernet, GPRS does not provide an open session between the server and the panel. To send a wake-up SMS to the panel every time an open connection is required between the server and the panel, select the <b>Local wake-up</b> check box.   |

*Related topics*

[Adding a new group](#)

[Group hub](#)

[Configuring the central station communication settings for a group](#)

[CS communicating tab in the group hub](#)

[Group central station communication settings](#)

## Adding a new group

1. In the navigation pane, click **System**, then click **Groups**.
2. Click **ADD GROUP**.
3. Enter the information required in the **ADD GROUP** dialog box. For more information about the **ADD GROUP** dialog box settings, see [Adding groups to the Groups page](#).
4. Click **SAVE**.

The new group now appears on the **Groups** page.

To complete the setup, configure the central station communication settings. For more information, see [Configuring the central station communication settings for a group](#).

### Related topics

[Adding groups to the Groups page](#)

[Configuring the central station communication settings for a group](#)

[Groups page](#)

## Group hub

View and edit general group settings and central station communication settings in the group hub. To open a group in the group hub, on the group page, click the group row.

Figure: Navigating the Groups hub

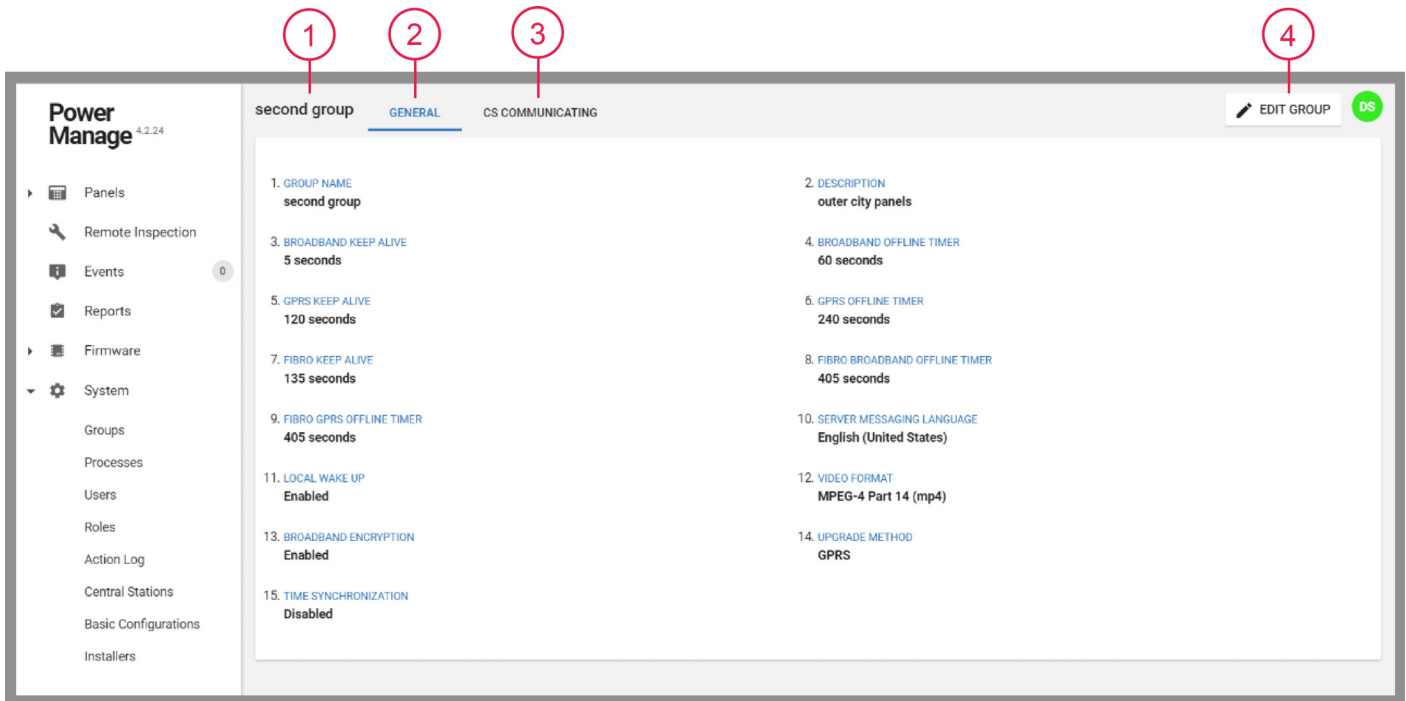


Table 35. Group hub interface elements

| Callout | Name                              | Description  |
|---------|-----------------------------------|--|
| 1       | Group name                        | The name of the group you open in the group hub  |
| 2       | Group <b>GENERAL</b> tab          | Displays general group information and parameters. For a description of the group information and parameter fields, see <a href="#">Groups page parameters</a> . To edit the group information and parameters, see Edit group. |
| 3       | Group <b>CS COMMUNICATING</b> tab | Click to manage the communication between the panel and the central station or automation. For more information, see <a href="#">CS communicating tab in the Groups hub</a> .  |
| 4       | <b>EDIT GROUP</b>                 | Click to edit the group page parameters. For more information, see <a href="#">Group page parameters</a> .   |

## CS communicating tab in the group hub

Define which event types are communicated to one or more central stations or automations on the **CS COMMUNICATING** tab.

Figure: CS COMMUNICATING tab in the group hub

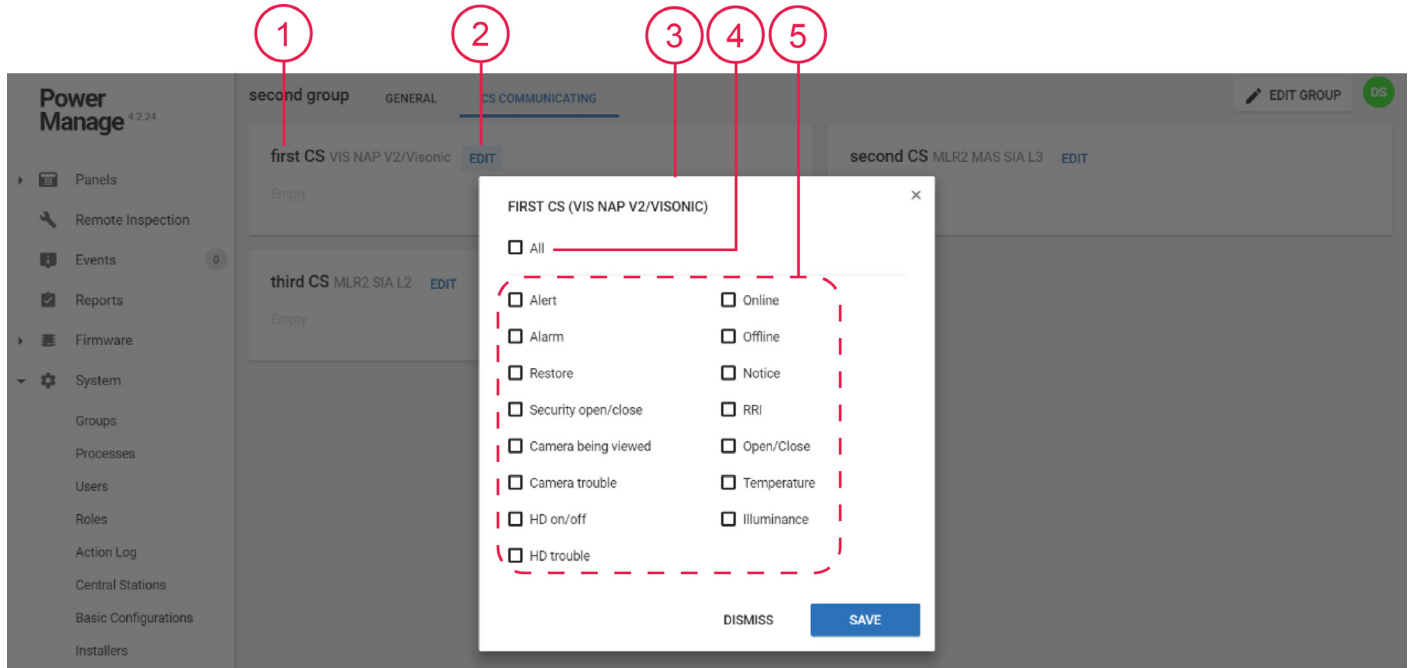


Table 36. CS communicating tab interface elements

| Callout | Name                   | Description  |
|---------|------------------------|--|
| 1       | Central station        | A central station or automation that is connected to the group. The central stations that appear here are added and defined on the <b>Central stations</b> page. For more information, see <a href="#">Central stations page</a> .   |
| 2       | <b>EDIT</b>            | To determine the event types that the panel group communicates to the central station, click <b>EDIT</b> to open the <b>Event types</b> dialog box.  |
| 3       | Event types dialog box | Determine the event types that the group of panels communicates to the central station. <ul style="list-style-type: none"> <li>The name of the central station is the title of the dialog box.</li> <li>To open the <b>Event types</b> dialog box, click <b>EDIT</b>.</li> </ul> |
| 4       | <b>All</b> check box   | Select or clear all of the event type check boxes with the <b>All</b> check box.   |
| 5       | Event type check boxes | Select a check box to enable the communication of that event type to the central station. By default, all of the check boxes are cleared. For more information about each event type check box, see <a href="#">Group central station communication settings</a> .               |

### Related topics

[Groups page](#)

[Configuring the central station communication settings for a group](#)

[Group hub](#)


[CS communicating tab in the group hub](#)

[Group central station communication settings](#)

## Group central station communication settings

Select a check box to enable or disable the communication of various event types to one or more central stations.

Figure: CS COMMUNICATING tab in the group hub

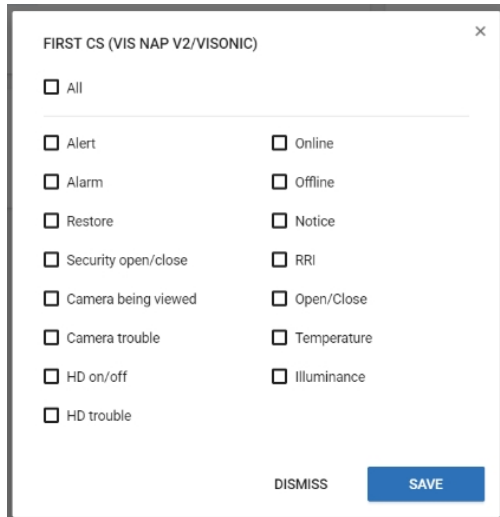

The screenshot shows a dialog box titled "FIRST CS (VIS NAP V2/VISONIC)" with a close button (X) in the top right corner. Below the title bar, there is a list of event types, each with an unchecked checkbox. The event types are: All, Alert, Alarm, Restore, Security open/close, Camera being viewed, Camera trouble, HD on/off, HD trouble, Online, Offline, Notice, RRI, Open/Close, Temperature, and Illuminance. At the bottom of the dialog, there are two buttons: "DISMISS" and "SAVE".

The following list defines the information each event type communicates to the central station when you select the relevant check box on the **CS COMMUNICATING** tab:

### Alarm

If there is a security or safety breach, an alarm notification is sent to the central station. Examples of security and safety breaches are burglary, fire, emergency, and panic alarms.

### Alert

If there is an event that requires attention, an alert notification is sent to the central station. Examples of alert events are low battery, AC failure, gas, and flood events.

### Restore

If a detector reading returns to its original state, a restore alert is sent to the central station.

### Security open/close

If the state of the panel changes, the central station is updated. Examples of panel states are away, home, and disarm.

**Note:** You can configure the panel to send detector open and close notifications even when the panel is in a disarm state.

### Camera being viewed

If a PIR CAM requests video on demand, a notification is sent to the central station.

### Camera trouble

Currently not supported.

### Home devices (HD) on/off

If a PGM turns on or off, a notification is sent to the central station.

### Home devices (HD) trouble

Currently not supported.

### Online

When the panel goes online, a notification is sent to the central station.

### Offline

When the panel goes offline, a notification is sent to the central station.

### Notice

If there is an info message, such as a device bypass or panel auto test, a notification is sent to the central station.

### Routine remote inspection (RRI)

After a routine remote inspection, a success or failure notification is sent to the central station.

### Open/close

If the state of a detector changes, a notification is sent to the central station.

### Illumination

If there is an alert related to light, a notification is sent to the central station.

### Temperature

If there is a temperature alert, a notification is sent to the central station.

*Related topics*

[Groups page](#)

[Configuring the central station communication settings for a group](#)

[Group hub](#)

[CS communicating tab in the group hub](#)

## Configuring the central station communication settings for a group

1. In the navigation pane, click **System**, then click **Groups**.
2. On the **Groups** page, click the group to configure.
3. Click the **CS COMMUNICATING** tab.
4. Navigate to the central station to configure and click **EDIT**.
5. Select the check boxes of the alert types to communicate to the central station. For more information, see [Configuring central station communication settings for groups](#).
6. Click **SAVE**.

*Related topics*

[Configuring the central station communication settings for a group](#)

[Groups page](#)

[Adding groups to the Groups page](#)

## Processes page

View a list of all processes on the **Processes** page. To view the processes for an individual panel, see [Processes tab](#).

Each row represents a single process and each row displays the following:

- Process start time
- Panel ID
- Process description
- Current status
- Process creator name
- Duration.

This information is contained in the column titles: **STARTED**, **PANEL**, **PROCESS**, **STATUS**, **USER**, and **DURATION**.

Filter your search of the **Processes** page by selecting one or more filter values from the **Search** list. From the **Search** list, select a filter value from one or more of the following keys: **PANEL ID**, **PANEL NAME**, **TYPE**, **USER**, **STATUS**, **STARTED AT**. For more information, see [Using the search filter](#).

Figure: Navigating the Processes page

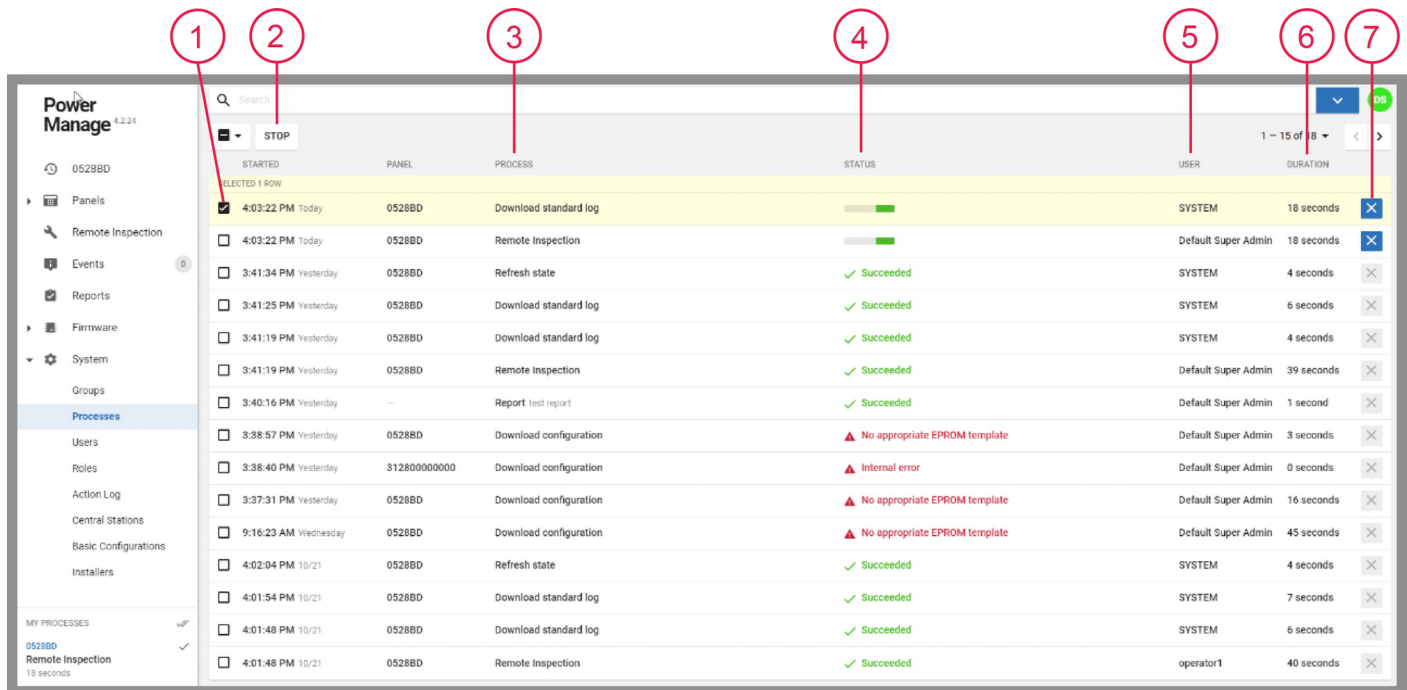


Table 37. Processes page interface elements

| Callout | Name            | Description   |
|---------|-----------------|---|
| 1       | Check box       | Select the check box of one or more processes to enable use of <b>STOP</b> .  |
| 2       | <b>STOP</b>     | Click to stop one or more selected processes that are running.  |
| 3       | <b>PROCESS</b>  | A description of the process  |
| 4       | <b>STATUS</b>   | A description of the of the process status. A progress bar indicates the process is running and the warning icon indicates the process stopped. The text after the warning icon indicates the reason the process stopped. |
| 5       | <b>USER</b>     | Displays the name of the user that initiates the process<br><b>Note:</b> If a process requires a subsequent task to complete the current process, the user name for subsequent process task is <b>SYSTEM</b> .            |
| 6       | <b>DURATION</b> | Displays the total or current run time of the process. For more information, see <a href="#">Process duration column</a> .  |
| 7       | Cancel process  | Click to stop a process that runs<br><b>Note:</b> This has the same function as <b>STOP</b> except that you can only stop one process at a time.  |

Related topics

[Process duration column](#)

## [Stopping a process](#)

### [Processes tab](#)

#### Processes page duration column

when a process runs, the **DURATION** column displays the run time of the process. If a process is complete, the **DURATION** column displays the total run time of the process.

If the process does not finish, it times out after one hour. In this case, the process terminates and a time-out error displays in the **STATUS** column. The following examples are exceptions to this rule:

- A software upgrade cannot start if the panel is in an armed state.
- A software upgrade process times out after one week.
- A walk test for Neo panels times out after 15 minutes.
- A walk test for a PowerMaster panel times out after 500 seconds, or 8 minutes and 20 seconds.
- A remote inspection for Neo panels times out after 10 minutes.
- A video on demand process for a PIR CAM times out 10 minutes after it receives the final image.
- The estimated time-out period for a remote inspection is the number of devices, multiplied by 50 seconds.

#### *Related topics*

### [Processes page](#)

#### Stopping a process

**Note:** To stop a single process while it is in operation, Click **X**. **X** does not appear if you cannot stop the process.

To stop multiple processes at one time, complete the following steps:

1. In the navigation pane, click **System**, then click **Processes**.
2. Select the check box of one or more processes to cancel.
3. Click **OK**.

#### *Related topics*

### [Processes page](#)

### [Process duration column](#)

# Users page

Add, suspend, remove, enable and edit server users on the **Users** page.

**Important:** You can manage all server users on the **Users** page, except the Default Super Admin. For more information on the Default Super Admin, see [Default super admin](#).

Each row in the list represents an individual user and displays the following information:

- Username and email address
- User phone number
- Latest log in time. If there is no date and time information in the **LAST LOGIN** column, the user has never logged in to the server.
- Role of the user. For more information about roles, see [Roles page](#).
- Title of the administrator who created the user account

This information is contained in the column titles: **NAME**, **PHONE**, **LAST LOGIN**, **ROLE**, and **CREATED BY**.

Filter your search of the **Users** page by selecting one or more filter values from the **Search** list. From the **Search** list, select a filter value from one or more of the following keys: **NAME**, **PHONE**, **ROLE NAME**, **ROLE CREATOR NAME**, and **LAST LOGIN**. For more information, see [Using the search filter](#).

Figure: Navigating the Users page

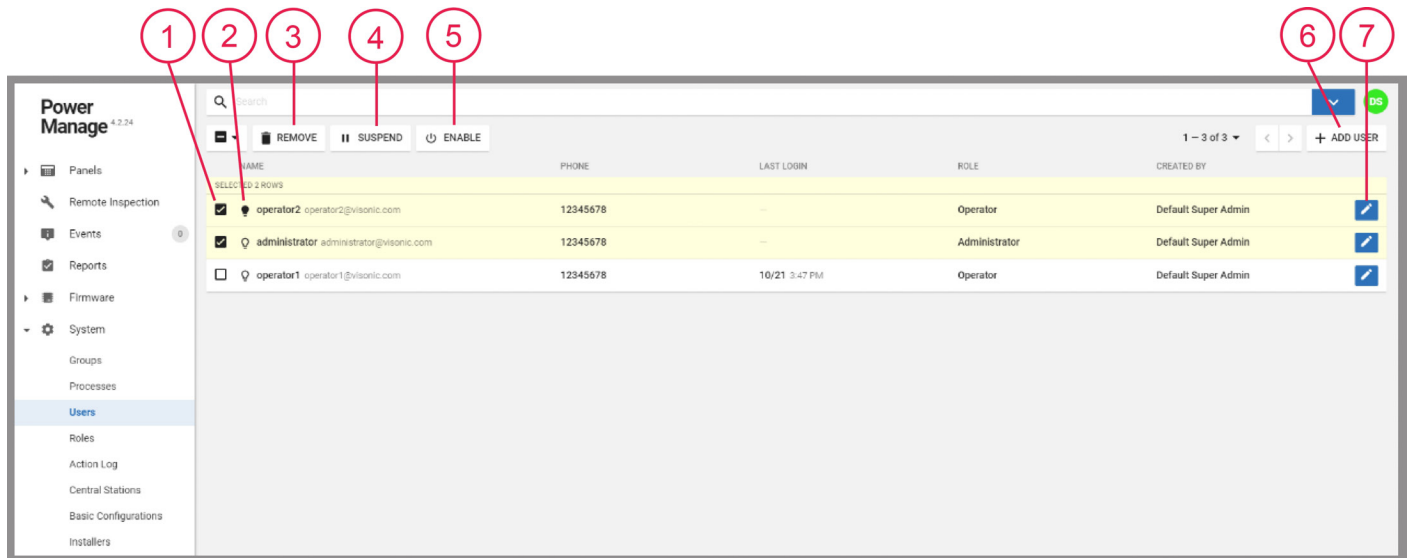





Table 38. Users page interface elements

| Callout | Name            | Description  |
|---------|-----------------|--|
| 1       | Check box       | Select the check box of one or more events to enable <b>REMOVE</b> , <b>SUSPEND</b> , and <b>ENABLE</b> .  |
| 2       | User status     |  The user is enabled.<br> The user is suspended.<br> The user is logged in to the server. |
| 3       | <b>REMOVE</b>   | Click to remove a user from the server   |
| 4       | <b>SUSPEND</b>  | Click to suspend a user. A suspended user cannot log on to the server.   |
| 5       | <b>ENABLE</b>   | Click to enable a user. Enabled users can log on to the server.  |
| 6       | <b>ADD USER</b> | Click to add a new user to the server  |
| 7       | Edit user       | Click to edit user information   |

### Related topics

[Adding a new user](#)

[Adding or editing users](#)

[Default super admin](#)

[Editing user information](#)

[Removing, suspending and enabling users](#)



## Default super admin

There is always at least one Default Super Admin for a PowerManage server. The Default Super Admin is a permanent role with full privileges.

The default username and default password are as follows:

- Username: admin@tycomonitor.com
- Password: Admin123

**Important:** Change the Default Super Admin password as soon as possible. For more information on changing a password, see [Changing your logon password](#).

*Related topics*

[Adding or editing users](#)

[Users page](#)

[Adding a new user](#)

[Editing user information](#)

[Removing, suspending and enabling users](#)

## Removing, suspending and enabling users

1. In the navigation pane, click **System**, then click **Users**.
2. Select the check box of the user to remove, suspend, or enable.

**Note:** You can select multiple users to remove, suspend or enable at the same time, but you can only use one of the functions at a time.

3. Perform one of the following actions:
  - Click **REMOVE**.
  - Click **SUSPEND**.
  - Click **ENABLE**.

4. Click **OK**.

*Related topics*

[Users page](#)

## Adding or editing users

Add a new user or edit the information of an existing user on the **Users** page.

When you add a new user or edit the information of an existing user, you can set the following information:

- **Full name**
- **Email address**
- **Phone number**
- **Country**
- **Belongs to role**
- **Password**

The user logs on to the system with the email address and password you define.

The **Belongs to role** list displays all roles available on the **Roles** page. For more information, see [Roles page](#).

*Related topics*

[Users page](#)

[Adding a new user](#)

[Editing user information](#)

[Default super admin](#)

## Adding a new user

1. In the navigation pane, click **System**, then click **Users**.
2. Click **ADD USER**.
3. Type the information required in the **Full name**, **Email Address**, **Phone**, **Country**, **Belongs to role**, and **Password** fields.
4. Click **SAVE**.

The new user now appears in the users list.

### *Related topics*

[Adding or editing users](#)

[Users page](#)

## Editing user information

1. In the navigation pane, click **System**, click **Users**.
2. Navigate to the user that to edit and click the edit user button.
3. Edit the information you want to change in the **Full name**, **Email Address**, **Phone**, **Country**, **Belongs to Role**, and **Password** fields.
4. Click **SAVE**.

### *Related topics*

[Adding a new user](#)

[Adding or editing users](#)

[Default super admin](#)

[Users page](#)

# Roles page

Assign roles to server users on the **Roles** page.

Each server user has one role type. The role type defines the following:

- The pages the user can access
- The functions the user can perform
- The groups the user can manage

**Note:** For more information about groups, see [Groups page](#). For more information about users, see [Users page](#).

Each row on the **Roles** page represents a role and displays the following information:

- The role name. Administrator, Operator, and Event interface user, are examples of role names. For more information, see [Role types](#).
- The role name of the user that created the role
- The username of the role creator
- The groups available to the role

This information is contained in the column titles: **NAME**, **PARENT ROLE**, **CREATED BY**, and **GROUPS**.

Filter your search of the **Roles** page by selecting one or more filter values from the **Search** list. From the **Search** list, select a filter value from one or more of the following keys: **NAME**, **PARENT ROLE**, and **CREATOR**. For more information, see [Using the search filter](#).

Figure: Navigating the roles page

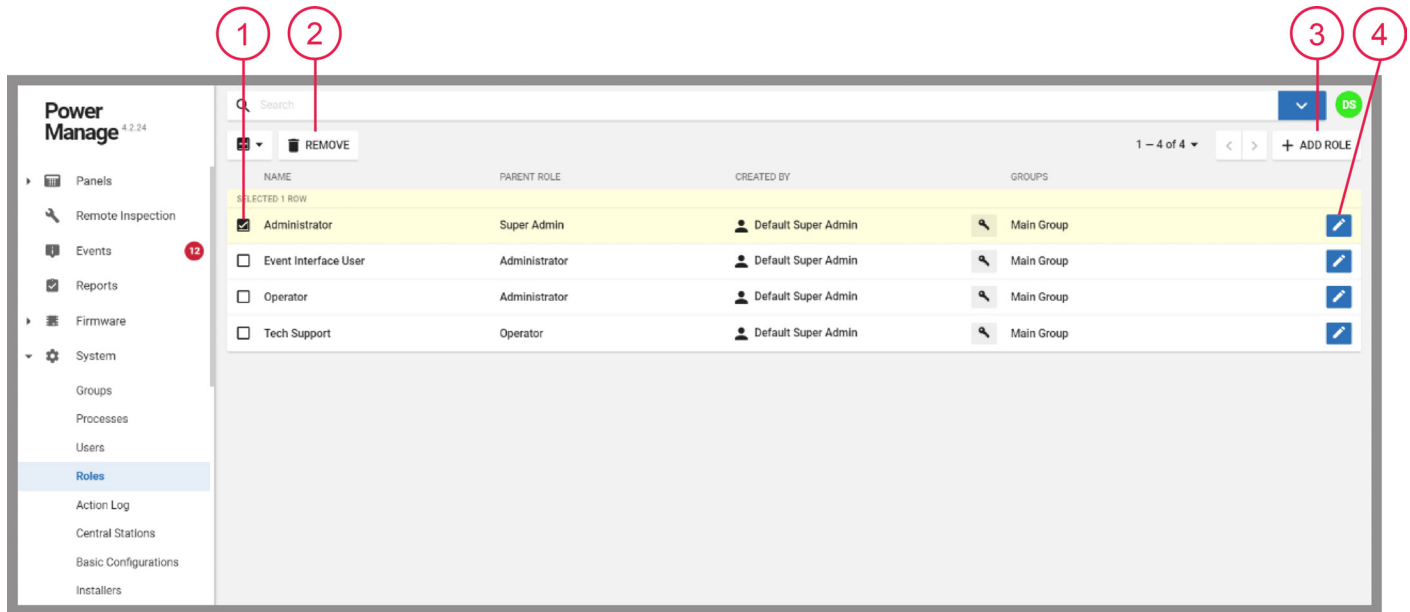


Table 39. Roles page interface elements

| Callout | Name            | Description  |
|---------|-----------------|--|
| 1       | Check box       | Select the check box of one or more roles to enable <b>REMOVE</b> .  |
| 2       | <b>REMOVE</b>   | Click to remove a user from the server. Do not remove all of the roles. If you remove all of the roles, you cannot create additional roles for new users.<br><br>If a role is assigned to a user, you cannot delete the role on the Roles page. See <a href="#">Users page</a> for more information. |
| 3       | <b>ADD ROLE</b> | Click to create a new role   |
| 4       | Edit role       | Click to edit a role   |

*Related topics*

[Role types](#)

[Editing a role](#)

[Adding a new role](#)

## Role types

There are three predefined role types in the server: Administrator, Operator, and Event interface user.

You can change or remove these roles but do not remove all of the roles. If you remove all of the roles, you cannot create additional roles for new users.

### Administrator

The administrator role can access all of the menus and pages. Managers use the administrator role.

### Operator

The operator role can access all of the menus except the **System** list. Users that control panels but do not have any server configuration permissions use the operator role.

### Event interface user

By default, the event interface user role does not have any permissions. The role is used by the automation software to retrieve alarm video scripts from the PowerManage server.

#### *Related topics*

[Roles page](#)

[Adding a new role](#)

[Editing a role](#)

### Adding a new role

1. In the navigation pane, from the **System** list, select **Roles**.
2. On the **Roles** page, click **ADD ROLE**.
3. Enter a role name in the **Name** field.
4. From the **Parent Role** list, select a parent role.
5. From the **Unit Groups** list, select one or more groups that the role manages.

**Note:** A group defines the panel types that the role manages. For more information about groups, see [Groups page](#).

6. Click **SAVE**.

#### *Related topics*

[Roles page](#)

[Editing a role](#)

[Role types](#)

### Editing a role

1. In the navigation pane, from the **System** list, select **Roles**.
2. Navigate to the role to edit and click the edit role button. For more information, see Edit role in Table 39.
3. Edit the role with one or more of the following actions:
  - Edit the information required in the **Name**, and **Unit groups** fields.
  - To delete a unit group, click **X**.
  - To add a unit group, click the **Unit groups** field and select one or more unit groups from the **Unit Groups** list.
4. Click **SAVE**.

#### *Related topics*

[Roles page](#)

[Role types](#)

[Adding a new role](#)

## Central stations page

Use the **Central stations** page to manage the central station applications that connect to the PowerManage server.

On the **Groups** page, connect groups to one or more of the central stations defined on this page. For more information about groups, see [Groups page](#).

Each row on the **Central stations** page represents a role and displays the following information:

- The Central station name
- The protocol used
- The communication parameters of the central station

This information is contained in the column titles: **NAME**, **PROTOCOL**, and **COMMUNICATION**.

Filter your search of the **Central stations** page by selecting one or more filter values from the **Search** list. From the **Search** list, select a filter value from one or more of the following keys: **NAME**, **PROTOCOL**, **HOST**, **PORT**, and **DEVICE**. For more information, see [Using the search filter](#).

### Note:

- The **Central stations** page is an automation application.
- Self-monitoring users do not need to use this page.

Figure: Navigating the Central Stations page

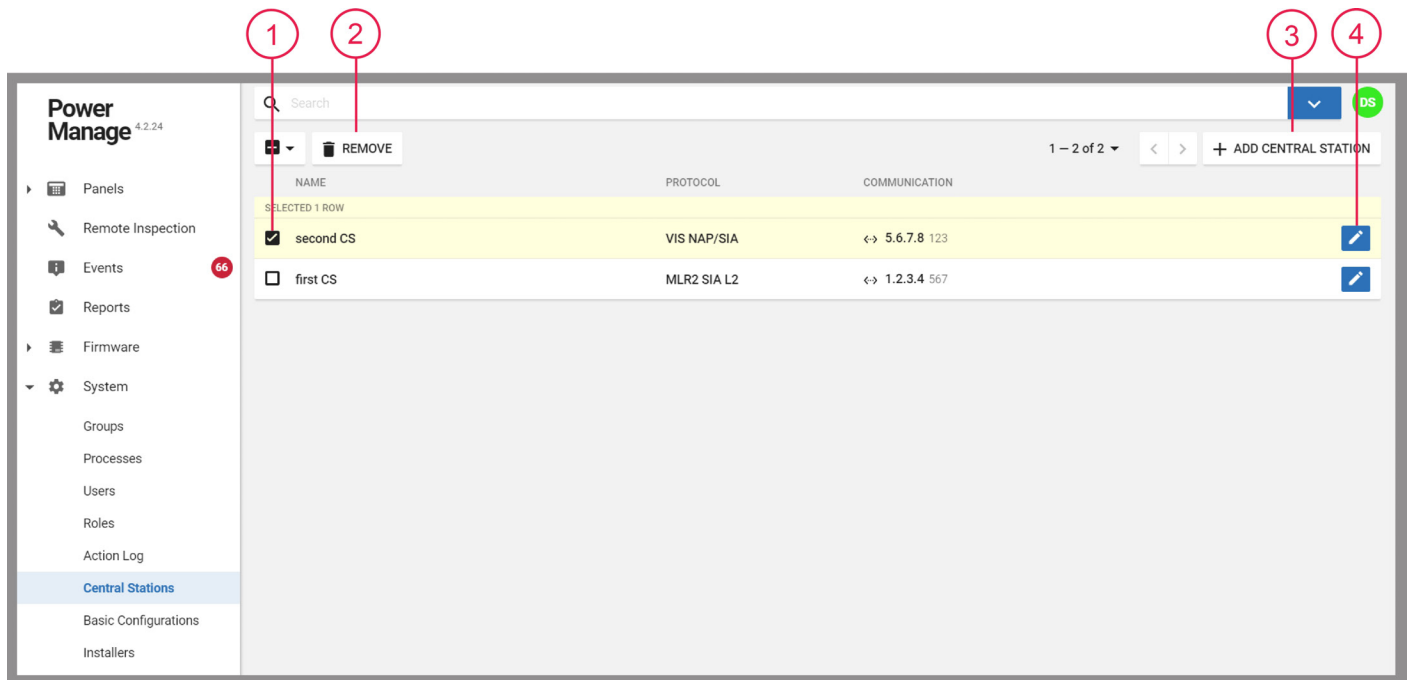


Table 40. Central stations page interface elements

| Callout | Name                       | Description   |
|---------|----------------------------|---|
| 1       | Check box                  | Select the check box of one or more central station applications to enable <b>REMOVE</b> .  |
| 2       | <b>REMOVE</b>              | Click to remove one or more central stations.   |
| 3       | <b>ADD CENTRAL STATION</b> | Click to add a new central station. For more information about adding a central station, see <a href="#">Adding a central station</a> and <a href="#">Adding or editing central stations</a> .                            |
| 4       | Edit central station       | Click to edit a central station configuration. For more information about editing a central station, see <a href="#">Editing a central station configuration</a> and <a href="#">Adding or editing central stations</a> . |

### Related topics

[Adding a central station](#)

[Adding or editing central stations](#)

[Editing a central station configuration](#)

[Removing a central station](#)


## Adding or editing central stations

Configure the central station settings when you add a new central station or edit an existing central station configuration.

For more information about adding a new central station, see [Adding a central station](#).

For more information about editing a central station configuration, see [Editing a central station configuration](#).

Figure: Central station settings dialog box

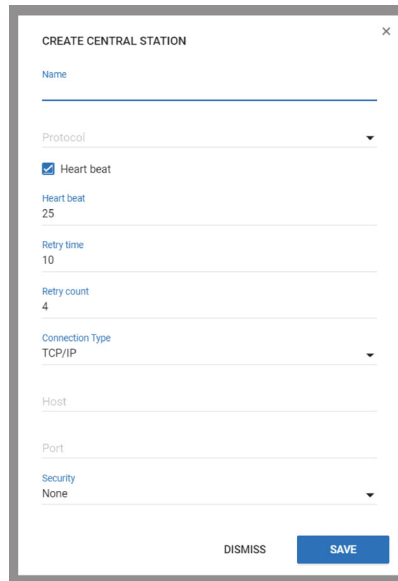

The following list defines the central station settings:

- **Name:** Enter a name that is local and identifiable to the server.  
**Note:** When adding a central station, the **Name** field is mandatory. When editing a central station, the **Name** field is read-only.
- **Protocol:** Select a protocol that is suitable for the central station or automation. For example, MasterMind or Patriot servers use NMLR2 protocols, and BOLD's Manitou server uses FEP protocol.
- **Heart beat:** Define how often the server checks the status of the connection. The heart beat is measured in seconds.
- **Retry time:** Define how often the server automatically tries to send a message to the central station in case of a failure.
- **Retry count:** Define how many times the server automatically tries to send a message to the central station in case of a failure.
- **Connection type:** From the Connection Type list, select one of the following options:
  - Transmission Control Protocol/Internet Protocol (TCP/IP). If you select TCP/IP, continue to enter the required information in the Host and Port fields.
  - Serial connection type. If you select Serial, enter a serial port in the Serial Port field.
- **Security:** If you select a **TCP/IP** connection, from the **Security** list, select one of the following options: **SSL 2/3**, **SSL 3**, **TLS 1**, or **None**.

## Adding a central station

1. In the navigation pane, click **System**, then click **Central Stations**.
2. Click **ADD CENTRAL STATION**.
3. Enter the information required in the **Name**, **Protocol**, **Heart beat**, **Retry time**, **Retry count**, and **Connection Type** fields. For more information, see [Adding or editing central stations](#).
4. Click **SAVE**.

### Related topics

[Central stations page](#)

[Adding or editing central stations](#)

[Editing a central station configuration](#)

[Removing a central station](#)

## Editing a central station configuration

1. In the navigation pane, click **System**, then click **Central Stations**.
2. Click the edit button of the central station to edit.
3. Enter the information that is required in the **Name**, **Protocol**, **Heart beat**, **Retry time**, **Retry count**, and **Connection Type** fields. See [Adding or editing central stations](#) for more information.
4. Click **SAVE**.

### *Related topics*

[Central stations page](#)

[Adding or editing central stations](#)

[Adding a central station](#)

[Removing a central station](#)

## Removing a central station

1. In the navigation pane, click **System**, then click **Central Stations**.
2. Select the check box of one or more central stations to remove.
3. Click **REMOVE**.
4. To confirm the function, click **OK**.

### *Related topics*

[Central stations page](#)

[Adding or editing central stations](#)

[Adding a central station](#)

[Editing a central station configuration](#)

## Basic configurations page

Manage created panel configurations on the **Basic Configurations** page. A basic configuration is a copy of one or more configuration parameters from an existing panel that you can use for multiple panels. To create a basic configuration from an existing panel configuration, see [Creating a basic configuration from an existing panel configuration](#).

To push a basic configuration to one or more panels, see [Pushing a basic configuration to one or more panels](#).

Each row on the page represents a basic configuration. A row displays the configuration name, panel model, creation date, and update time. This information is contained in the column titles: **NAME**, **PANEL MODEL**, **CREATED**, and **UPDATED**.

Filter your search of the **Basic Configurations** page by selecting one or more filter values from the **Search** list. From the **Search** list, select a filter value from one or more of the following keys: **NAME**, **VENDOR**, and **CREATED**. For more information, see [Using the search filter](#).

Figure: Navigating the basic configurations page

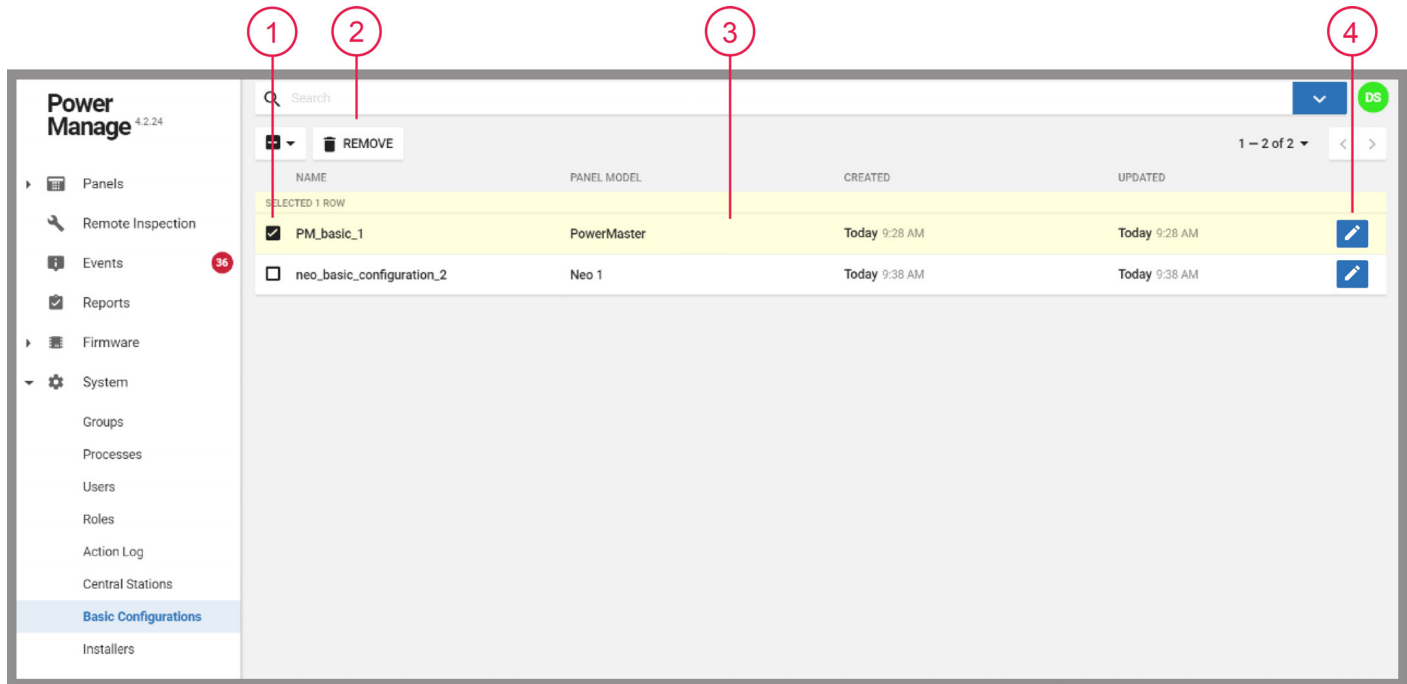


Table 41. Basic configurations page interface elements

| Callout | Name                 | Description   |
|---------|----------------------|---|
| 1       | Check box            | Select the check box of one or more basic configurations to enable <b>REMOVE</b> .  |
| 2       | <b>REMOVE</b>        | Click to remove one or more basic configurations  |
| 3       | Basic con-figuration | A basic configuration. Click the basic configuration row to view a list of panels that are eligible for the configuration. To push the basic configuration to one or more panels, see <a href="#">Pushing a basic configuration on the Basic Configuration page</a> . |
| 4       | Edit con-figuration  | Click to edit the basic configuration. For more information about basic configuration parameters, see <a href="#">Basic configuration parameters</a> .  |

### Related topics

[Basic configurations page](#)

[Basic configuration parameters](#)

[Editing a basic configuration](#)

[Pushing a basic configuration on the Basic configuration page](#)

[Removing a basic configuration](#)



## Basic configuration parameters

To configure the parameters of a basic configuration, on the **Basic Configuration** page, click the edit configuration button. For more information, see Edit configuration in Table 41.

Figure: Navigating the basic configuration parameters

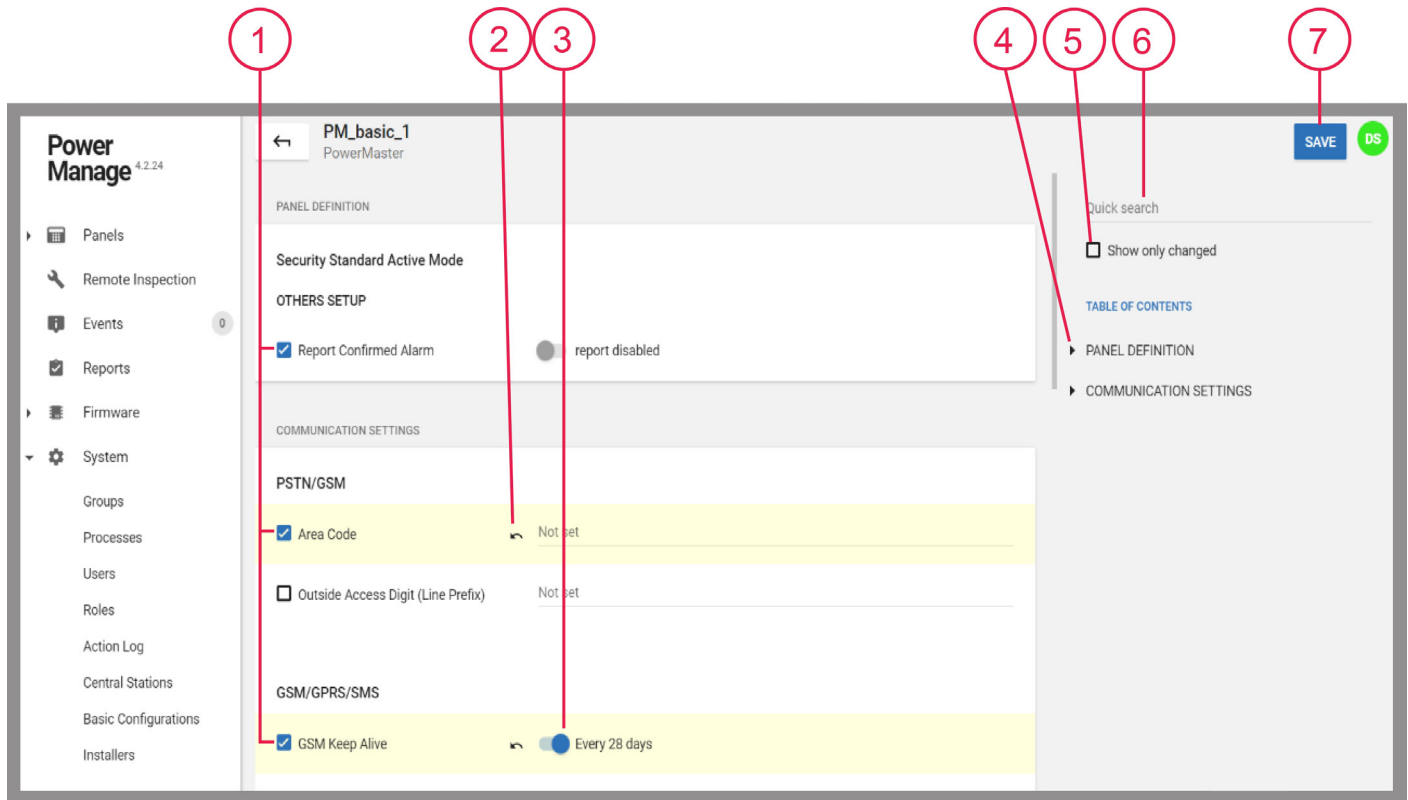


Table 42. Basic configuration editing interface elements

| Callout | Name                     | Description   |
|---------|--------------------------|---|
| 1       | Selected parameters      | When you push a basic configuration to one or more panels on the <b>Panels</b> page, only the selected fields are pushed to the panel configuration. You can select or clear other parameter check boxes to include or exclude the parameters from the basic configuration. |
| 2       | Undo                     | Click the undo arrow to undo a selection or change.   |
| 3       | Enable/disable           | Click to enable or disable functions  |
| 4       | Table of contents        | Expand the table of contents to navigate the configuration parameters quickly.  |
| 5       | <b>Show only changed</b> | Select the <b>Show only changed</b> check box to only view the parameters you edit.   |
| 6       | <b>Quick search</b>      | Enter a search term in the <b>Quick search</b> field to search the configuration parameters. You can search parameter names and the possible values of the parameters.  |
| 7       | <b>SAVE</b>              | Click to update the basic configuration. If you make any change, <b>SAVE</b> is enabled.  |

### Related topics

[Basic configurations page](#)

[Editing a basic configuration](#)

[Pushing a basic configuration on the Basic configuration page](#)

[Removing a basic configuration](#)

## Editing a basic configuration

1. In the navigation pane, from the **System** list, select **Basic Configurations**.
2. Click the edit button of the basic configuration that to edit.
3. Make the required changes. For more information about basic configuration parameters, see [Basic configuration parameters](#).
4. Select the **Show only changed** check box to review the changes made.

**Note:** Use the **Quick search** bar and expand the **TABLE OF CONTENTS** to navigate the basic configurations.

5. Click **SAVE**.

### *Related topics*

[Basic configurations page](#)

[Basic configuration parameters](#)

[Pushing a basic configuration on the Basic configuration page](#)

[Removing a basic configuration](#)

## Removing a basic configuration

1. In the navigation pane, from the **System** list, select **Basic Configurations**.
2. Select the check box of the basic configuration to remove.
3. Click **REMOVE**.

### *Related topics*

[Basic configurations page](#)

[Basic configuration parameters](#)

[Editing a basic configuration](#)

[Pushing a basic configuration on the Basic configuration page](#)

## Installers page

Accept or reject installers that are registered in the server on the **Installers** page. Use the search bar to filter the **Installers** page by status.

To connect remotely to a panel by using the installer mobile application, AlarmInstall, installers need to register on the server and receive an accepted status:

- **Registration:** Installers register the first time they use the mobile application.
- **Accepted status:** Either the user or the administrator then accepts or rejects access to the panel.
  - a. Turn on **Approve Installer Access by User** to grant the installer an **Accepted** status automatically. The user then approves the connection via the user mobile application, ConnectAlarm. This option is common for panels that are not monitored.
  - b. Turn off **Approve Installer Access by User** to grant the installer a **Pending** status automatically. A server operator then accepts the installer and the installer can access the panel remotely by using the installer mobile application. This option is common for panels that are monitored

For more information about the differences between monitored and self-monitored servers, see [Installer status](#).

Figure: Navigating the Installers page

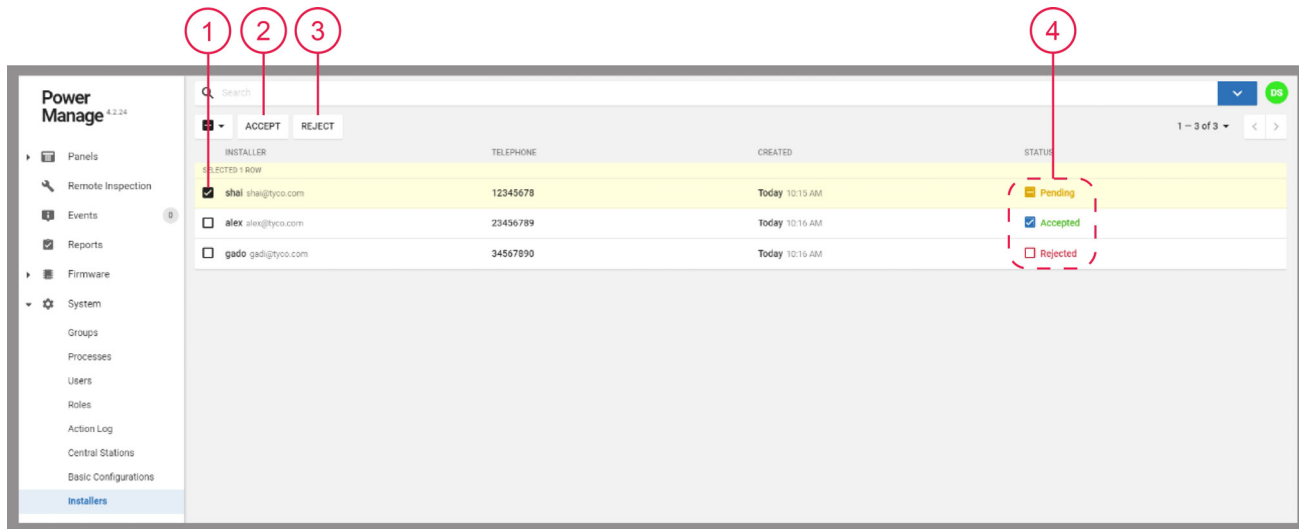


Table 43. Installers page interface elements

| Callout | Name                        | Description   |
|---------|-----------------------------|---|
| 1       | Check box                   | Select the check box of one or more basic configurations to enable use of <b>ACCEPT</b> and <b>REJECT</b> .                                       |
| 2       | <b>ACCEPT</b>               | Click to accept one or more users   |
| 3       | <b>REJECT</b>               | Click to reject one or more users   |
| 4       | <b>STATUS</b> column toggle | The current acceptance status of the user. To toggle between <b>Accept</b> and <b>Reject</b> statuses, select the <b>STATUS</b> column check box. |

### Related topics

[Accepting or rejecting installers](#)

### Accepting or rejecting installers

To accept or reject multiple installers, complete the following steps:

**Note:** To accept or reject one installer at a time, select the check box in the status column to toggle between an accept or reject status. For more information, see Status toggle in Accepting or rejecting installers.

1. In the navigation pane, click **System**, then click **Installers**.
2. Select the check box of one or more installers to accept or reject.
3. Perform one of the following actions:
  - Click **ACCEPT**.
  - Click **REJECT**.
4. Click **OK**.

### Related topics

[Installers page](#)

## Interactive users page

View and manage interactive users on the **Interactive users** page.

Users connecting to the server with the mobile application appear on the **Interactive users** page. For more information on accessing the server with the mobile application, see [Registering a user on the server with the mobile application](#).

Two factor authentication increases the security of the user mobile application, ConnectAlarm, with the following stages:

1. The user submits an email address and registration details to the mobile application.
2. The user receives a code by email and enters the code in the mobile application.

Click the **STATUS** toggle to toggle between **Active** and **Suspended** statuses.

A **Not verified** status indicates the user did not finish the registration process and cannot connect panels to the user mobile application.

Filter your search of the **Interactive users** page by selecting one or more filter values from the **Search** list. From the **Search** list, select a filter value from one or more of the following keys: **STATUS**, and **CREATED**. For more information, see [Using the search filter](#).

Figure: Navigating the Interactive Users page

| EMAIL                                       | CREATED         | PANELS    | STATUS                                     |
|---|-----------------|-----------|--|
| <input type="checkbox"/> example@email.com  | 03/11 1:45 PM   | 1 panel   | <input checked="" type="checkbox"/> Active |
| <input type="checkbox"/> example1@email.com | 03/12 10:53 AM  | No panels | <input type="checkbox"/> Not verified      |
| <input type="checkbox"/> example2@email.com | 03/12 2:50 PM   | No panels | <input checked="" type="checkbox"/> Active |
| <input type="checkbox"/> example3@email.com | 03/12 2:52 PM   | No panels | <input checked="" type="checkbox"/> Active |
| <input type="checkbox"/> example4@email.com | 03/14 1:01 PM   | No panels | <input type="checkbox"/> Not verified      |
| <input type="checkbox"/> example5@email.com | 03/18 2:04 PM   | No panels | <input checked="" type="checkbox"/> Active |
| <input type="checkbox"/> example6@email.com | 03/18 4:16 PM   | No panels | <input checked="" type="checkbox"/> Active |
| <input type="checkbox"/> example7@email.com | Tuesday 5:44 PM | 1 panel   | <input checked="" type="checkbox"/> Active |
| <input type="checkbox"/> example8@email.com | Tuesday 5:46 PM | 1 panel   | <input checked="" type="checkbox"/> Active |
| <input type="checkbox"/> example9@email.com | Tuesday 5:48 PM | 1 panel   | <input type="checkbox"/> Not verified      |

### Related topics

[Registering a user on the server with the mobile application](#)

## Registering a user on the server with the mobile application

1. To register to the server, the user opens the user mobile application for the first time and enters the following details:
  - Server URL
  - Name
  - Email address

**Note:** If successful, the user appears on the **Interactive users** page with a **Not verified** status and receives an automatic email with a verification code.

2. The user enters the code in the mobile application when prompted.

**Note:** If successful, the user's status changes from **Not verified** to **Active** after a short time-out period.

The user can now add one or more panels to the account via the mobile application.

**Note:** The **PANELS** column displays the number of panels connected to an account.


### Related topics

[Interactive users page](#)

# Dashboard page

The **Dashboard** page displays the overall statistical data from the server in a visual format.

Figure: Navigating the Dashboard page

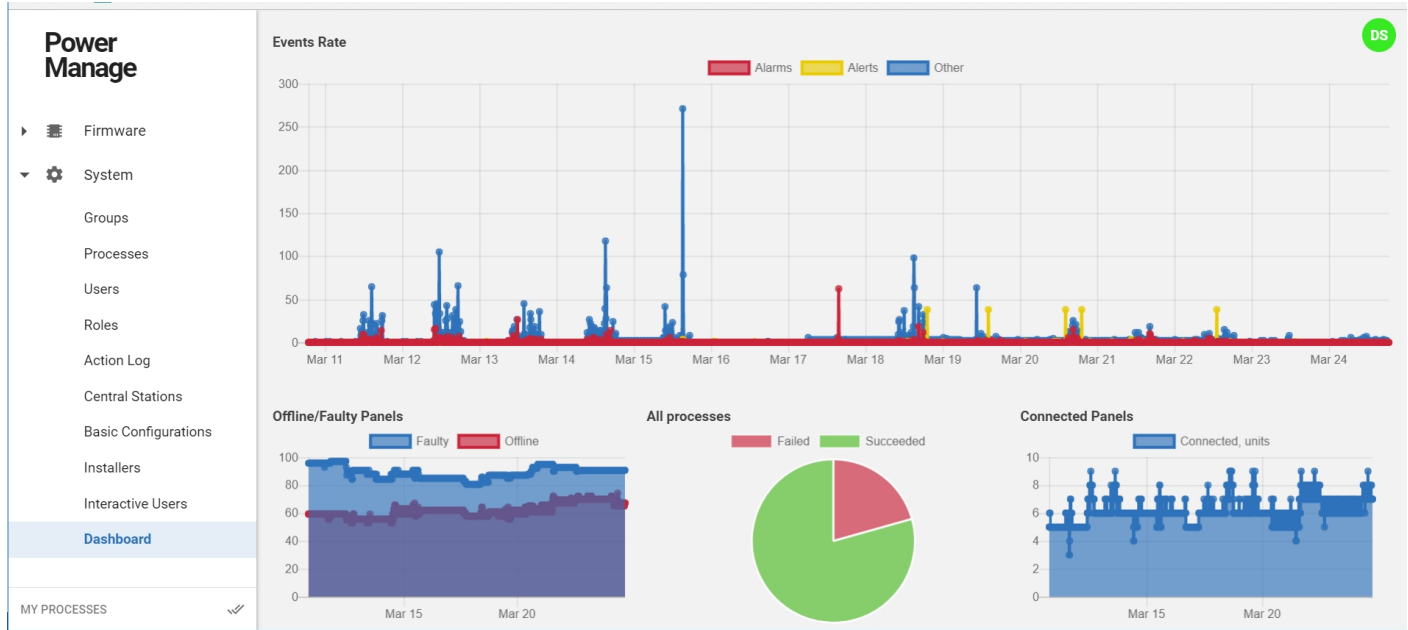

To see a description of the four types of graph on the **Dashboard** page, see the following definition list:

## Events rate

The **Events Rate** graph displays visual data of events in three categories: **Alarms**, **Alerts**, and **Other**.

- The Y-axis measures the number of events.
- The X-axis measures time by calendar date.
- Each point on the graph represents 10 minutes.

## Offline/faulty panels

The **Offline/Faulty Panels** graph displays visual data of the percentage of the total panels that are **Faulty** and **Offline**.

- The Y-axis measures from 0% to 100%. All of the panels comprise 100% and the position of the blue and red lines represents a percentage of the total number of panels.
- The blue line represents faulty panels. A faulty panel is a panel with at least one fault. For more information about the faults column, see **FAULTS** column in Table 7.
- The red line represents offline panels. If the server does not receive a keep alive message from a panel, the panel changes to an **Offline** status. For more information about the connection status, see Connection status Table 7.
- The X-axis measures time by calendar date.
- Hover over a particular part of either line to see to see the percentage. This percentage is a decimal of 1. For example, 0.7 represents 70%.

## All processes

The **All processes** pie chart displays visual data of the percentage of processes that fail and succeed.

## Connected panels

The **Connected Panels** graph displays visual data of the number of panels that are connected to the server over time.

**Note:** If a panel is connected, there is a live connection between the panel and the server. The term **Connected** does not mean **Online**. For more information about the connection status, see Connection status Table 7.

## Related topics

[Panels page](#)

[Processes page](#)

[Events page](#)

# End User License Agreement

IMPORTANT - READ THIS END-USER LICENSE AGREEMENT ("**EULA**") CAREFULLY BEFORE OPENING, DOWNLOADING, INSTALLING, ACCESSING, OR OTHERWISE USING THE SOFTWARE.

THIS EULA IS A LEGAL AGREEMENT BETWEEN YOU AND TYCO FIRE & SECURITY GMBH ("**TYCO**") AND GOVERNS YOUR USE OF THE SOFTWARE ACCOMPANYING THIS EULA, WHICH SOFTWARE INCLUDES COMPUTER SOFTWARE AND MAY INCLUDE MEDIA, PRINTED MATERIALS, AND "ON-LINE" OR ELECTRONIC DOCUMENTATION (COLLECTIVELY, THE "**SOFTWARE**"). BY BREAKING THE SEAL ON THIS PACKAGE, DOWNLOADING THE SOFTWARE OR INSTALLING, ACCESSING OR OTHERWISE USING THE SOFTWARE, YOU AGREE TO BE BOUND BY THE TERMS OF THIS EULA. IF YOU DO NOT AGREE TO ALL OF THE TERMS AND CONDITIONS OF THIS EULA, DO NOT DOWNLOAD, INSTALL, ACCESS, OR OTHERWISE USE THE SOFTWARE. If this EULA is being agreed to by a corporation or other legal entity, then the person agreeing to this EULA on behalf of that corporation or entity represents and warrants that he or she is authorized and lawfully able to bind that corporation or entity to this EULA. You should print and retain a copy of this EULA for Your records.

1. **SCOPE OF LICENSE.** The Software may include computer code, program files and any associated media, hardware or software keys, printed material and electronic documentation. The Software may be provided to You on a stand-alone basis or pre-installed on a storage device (the media) as part of a computer system or other hardware or device ("**System**"). The Software is protected by copyright laws and international copyright treaties, as well as other intellectual property laws and treaties. All title and intellectual property rights in and to the Software (including but not limited to any images, photographs, and text incorporated into the Software), the accompanying printed materials, and any copies of the Software, are owned by Tyco and/or its suppliers.
2. **GRANT OF LICENSE.** This EULA grants You the following rights on a non-exclusive basis:
  - a. **General.** During the term of this EULA, this EULA grants You and Your individual employees a revocable, non-transferable, non-sublicensable, nonexclusive license to use the object code version of the Software and any Documentation for Your internal use only, subject to all Scope Restrictions. The order document under which You have licensed the Software may contain additional terms limiting the scope of Your license, including, but not limited to, a specified number of users or specific systems, licensed facilities, geographic areas, etc. (collectively, "**Scope Restrictions**"). Once You have purchased licenses for the number of copies of the Software that You require, You may use the Software and accompanying material provided that You install and use no more than the licensed number of copies at one time. In the event the Software is furnished for use in connection with a particular Tyco (or a Tyco affiliate's) system or hardware product, it may only be used in conjunction with that Tyco (or Tyco affiliate's) system or hardware product. If the Software is furnished embedded in a Tyco (or a Tyco affiliate's) system or hardware product, the Software may not be extracted or used separately from that system or product. "**Documentation**" means Tyco's then-current generally available documentation for use and operation of the Software. Documentation is deemed included in the definition of Software for purposes of this EULA. The term "Software" will be deemed to include any updates, bug fixes, and new versions (collectively, "**Enhancements**") that Tyco may, in its discretion, make available to You. You are responsible for ensuring Your employees comply with all relevant terms of this EULA and any failure to comply will constitute a breach by You. The Software is licensed, not sold. Except for the limited license granted above, Tyco and its licensors retain all right, title and interest in the Software, all copies thereof, and all proprietary rights in the Software, including copyrights, patents, trademarks and trade secret rights.
  - b. **Locally Stored Components.** The Software may include a software code component that may be stored and operated locally on one or more devices. Once You have paid the required license fees for these devices (as determined by Tyco in its sole discretion), You may install and/or use one copy of such component of the Software on each of the devices as licensed by Tyco. You may then use, access, display, run or otherwise interact with ("use") such component of the Software in connection with operating the device on which it is installed solely in the manner set forth in any accompanying documentation or, in the absence of such, solely in the manner contemplated by the nature of the Software.
  - c. **Remotely Stored Components.** The Software may also include a software code component for operating one or more devices remotely. You may install and/or use one copy of such component of the Software on a remote storage device on an internal network with all of the devices and may operate such component with each device over the internal network solely in the manner set forth in any accompanying documentation or, in the absence of such, solely in the manner contemplated by the nature of the Software; provided however, You must still acquire the required number of licenses for each of the devices with which such component is to be operated.
  - d. **Embedded Software/Firmware.** The Software may also include a software code component that is resident in a device as provided by Tyco (or a Tyco affiliate) for operating that device. You may use such component of the Software solely in connection with the use of that device, but may not retrieve, copy or otherwise transfer that software component to any other media or device without Tyco's express prior written authorization.
  - e. **Backup Copy.** You may make a back-up copy of the Software (other than embedded software) solely for archival purposes, which copy may only be used to replace a component of the Software for which You have current valid license. Except as expressly provided in this EULA, You may not otherwise make copies of the Software, including the printed materials.
3. **OTHER RIGHTS AND LIMITATIONS.** Your use of the Software is subject to the following additional limitations. Failure to comply with any of these restrictions will result in automatic termination of this EULA and will make available to Tyco other legal remedies.
  - a. **Restrictions.** Your use of the Software must be in accordance with the Documentation. You will be solely responsible for ensuring Your use of the Software is in compliance with all applicable foreign, federal, state and local laws, rules and regulations. You may not (i) copy or distribute the Software except to the extent that copying is necessary to use the Software for purposes set forth herein; provided You may make a single copy of the Software for backup and archival purposes; (ii) modify or create derivative works of the Software; (iii) decompile, disassemble, reverse engineer, or otherwise attempt to derive the trade secrets embodied in the Software, except and only to the extent that such activity may be expressly permitted, notwithstanding this limitation or another limitation contained in this EULA, either by applicable law or, in the case of open source software, the applicable open source license; (iv) use the Software for purposes of developing a competing product or service; (v) remove any copyright, trademark, proprietary rights, disclaimer, or warning notice included on or embedded in any part of the Documentation and Software; (vi) assign, sublicense, rent, timeshare, loan, lease or otherwise transfer the Software, or directly or indirectly permit any third party to use or copy the Software. The Software may be subject to additional restrictions and conditions on use as specified in the documentation accompanying such Software, which additional restrictions and conditions are hereby incorporated into and made a part of this EULA. Under no circumstances will Tyco be liable or responsible for any use, or any results obtained by the use, of the services in conjunction with any services, software, or hardware that are not provided by Tyco. All such use will be at Your sole risk and liability.
  - b. **Copyright Notices.** You must maintain all copyright notices on all copies of the Software.
  - c. **Transfer.** You may only transfer Your rights under this EULA (i) as part of a permanent sale or transfer of all of the devices for which the Software is licensed as applicable; (ii) if You transfer all of the Software (including all component parts, the media and printed materials, any upgrades and this EULA); (iii) if You do not retain any copies of any portion of the Software; (iv) if the recipient agrees to the terms of this EULA; and (v) if the Software is an upgrade, such transfer must also include all prior versions of the Software. You agree that failure to meet all of these conditions renders such transfer null and void.
  - d. **Subsequent EULA.** Tyco may also supersede this EULA with a subsequent EULA pursuant to providing You with any future component, release, upgrade or other modification or addition to the Software. Similarly, to the extent that the terms of this EULA conflict with any prior EULA or other agreement between You and Tyco regarding the Software, the terms of this EULA shall prevail.
  - e. **Trademarks.** This EULA does not grant You any rights in connection with any trademarks or service marks of Tyco, its affiliates or its suppliers.

- f. **Software Keys.** The hardware/software key, where applicable, is Your proof of license to exercise the rights granted herein and must be retained by You. Lost or stolen keys will not be replaced.
- g. **Demonstration and Evaluation Copies.** A demonstration or evaluation copy of the Software is covered by this EULA; provided that the licenses contained herein shall expire at the end of the demonstration or evaluation period.
- h. **Registration of Software.** The Software may require registration with Tyco prior to use. If You do not register the Software, this EULA is automatically terminated and You may not use the Software.
- i. **Compliance with Laws.** The use of the Software may require your compliance with local and national laws and regulations,. You are solely responsible for compliance with all applicable laws and regulations relating to the use of the Software, including but not limited to those laws and regulations pertaining to personal data protection, privacy and security.
- j. **Enhancements.** To the extent Tyco makes them available to You, Software Enhancements may only be used to replace all or part of the original Software that You are licensed to use. Software Enhancements do not increase the number of copies licensed to You. If the Software is an upgrade of a component of a package of Software programs that You licensed as a single product, the Software may be used and transferred only as part of that single product package and may not be separated for use on more than one computer or System. Software Enhancements downloaded via a Tyco authorized World Wide Web or FTP site may be used to upgrade multiple Systems provided that You are licensed to use the original Software on those Systems.
- k. **Tools and Utilities.** Software distributed via a Tyco-authorized World Wide Web or FTP site (or similar Tyco-authorized distribution means) as a tool or utility may be copied and installed without limitation provided that the Software is not distributed or sold and the Software is only used for the intended purpose of the tool or utility and in conjunction with Tyco products. All other terms and conditions of this EULA continue to apply.

4. **THIRD PARTY SOFTWARE.** To the extent any software licensed from third parties, including open source software, (collectively, "**Third Party Software**") is provided with or incorporated into the Software, You will comply with the terms and conditions of the applicable third party licenses associated with the Third Party Software, in addition to the terms and restrictions contained in this EULA. All relevant licenses for the Third Party Software are provided in the Documentation or product files accompanying the Software. By using the Software You are also agreeing to be bound to the terms of such third party licenses. If provided for in the applicable third party license, You may have a right to reverse engineer such open source software or receive open source code for such open source software for use and distribution in any program that You create, so long as You in turn agree to be bound to the terms of the applicable third party license, and Your programs are distributed under the terms of that license. If applicable, a copy of such open source code may be obtained free of charge by contacting your Johnson Controls representative. TYCO MAKES NO WARRANTY OF ANY KIND, WHETHER EXPRESS OR IMPLIED, WITH REGARD TO ANY THIRD PARTY SOFTWARE. ALL THIRD PARTY SOFTWARE IS PROVIDED "AS-IS," WITHOUT WARRANTIES OF ANY KIND. IN NO EVENT WILL TYCO BE LIABLE TO YOU OR ANY THIRD PARTY FOR ANY DIRECT, INDIRECT, PUNITIVE, EXEMPLARY, INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE THIRD PARTY SOFTWARE, EVEN IF TYCO HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES OR LOSSES.

5. **METERING DEVICES.** The Software may contain technology based metering devices and passive restraints to regulate usage. For example, the Software may contain a license file limiting use to the licensed number of concurrent users/devices or named users/devices or may temporarily restrict usage until license and other fees have been paid in full. You acknowledge that such restraints and metering devices are a reasonable method to ensure compliance with the license and have been factored into the license and other fees and the EULA as a whole. You agree that You will not directly or indirectly circumvent, override, or otherwise bypass such metering devices and restraints that regulate the use of the Software.

6. **TERM AND TERMINATION.** Unless provided otherwise in an accompanying order document, this EULA will commence on the earlier of the date You first download, install, access or use the Software (the "**Effective Date**") and continue in effect for the term specified in the order document or, if no term is specified, until it is terminated (the "**Term**") as provided in this Section. Either party may terminate this EULA on written notice to the other party if the other party is in material breach of its obligations hereunder and fails to cure the breach within thirty (30) days of such written notice. In addition, either party may, in its sole discretion, elect to terminate this EULA on written notice to the other party upon the bankruptcy or insolvency of the other party or upon the bankruptcy or insolvency of the other party upon the commencement of any voluntary or involuntary winding up, or upon the filing of any petition seeking the winding up of the other party. In the event of any claim of intellectual property infringement relating to the Software, Tyco may terminate this EULA on written notice to You and, as Your sole and exclusive remedy, refund the license fees paid, if any, hereunder (less depreciation calculated on a three (3)-year straight-line basis commencing on the date of initial delivery to You). Sections 9 and 10 shall remain unaffected. Upon any termination or expiration of this EULA, the license granted in Section 2 will automatically terminate and You will have no further right to possess or use the Software. On Tyco's request, You will provide Tyco with a signed written statement confirming that the Software has been permanently removed from Your systems.

7. **FEES; TAXES.** You will pay the fees, if any, associated with the Software. All amounts due hereunder shall be paid within thirty (30) days of the date of the invoice. Payments not made within such time period shall be subject to late charges equal to the lesser of (i) one and one-half percent (1.5%) per month of the overdue amount or (ii) the maximum amount permitted under applicable law. All taxes, duties, fees and other governmental charges of any kind (including sales and use taxes, but excluding taxes based on the gross revenues or net income of Tyco) that are imposed by or under the authority of any government or any political subdivision thereof on the fees for the Software shall be borne solely by You, unless You can evidence tax exemption and shall not be considered a part of a deduction from or an offset against such fees. If You lose tax exempt status, You will pay any taxes due as part of any renewal or payment. You will promptly notify Tyco if Your tax status changes. You will pay all court costs, fees, expenses and reasonable attorneys' fees incurred by Tyco in collecting delinquent fees.

#### 8. **LIMITED WARRANTY.**

a. **Warranty.** Tyco warrants that (i) for a period of thirty (30) days from delivery initial delivery of the Software to you (the "**Warranty Period**"), the Software will operate in substantial conformity with its Documentation. If, during the Warranty Period, you notify Tyco of any non-compliance with the foregoing warranty, Tyco will, in its discretion: (a) use commercially reasonable efforts to provide the programming services necessary to correct any verifiable non-compliance with the foregoing warranties; or (b) replace any non-conforming Software; or if neither of foregoing options is reasonably available to Tyco, (c) terminate this Agreement in whole or in part, and refund to You the fees, if any, paid for the non-conforming Software (less depreciation calculated on a three (3)-year straight-line basis commencing on the date of initial delivery to you). Tyco shall not be liable for failures caused by third party hardware and software (including your own systems), misuse of the Software, or Your negligence or willful misconduct. EXCEPT AS PROVIDED IN THIS SECTION, THE SOFTWARE IS PROVIDED ON AN "AS AVAILABLE," "AS IS" BASIS. TO THE MAXIMUM EXTENT PERMITTED BY LAW, TYCO AND ITS AFFILIATES, AND THEIR RESPECTIVE SUPPLIERS AND VENDORS DISCLAIM ALL OTHER WARRANTIES WITH RESPECT TO THE SOFTWARE, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, TITLE, MERCHANTABILITY, QUIET ENJOYMENT, QUALITY OF INFORMATION, AND FITNESS FOR A PARTICULAR PURPOSE. TYCO AND ITS AFFILIATES AND THEIR RESPECTIVE SUPPLIERS AND VENDORS DO NOT WARRANT THAT THE SOFTWARE WILL MEET YOUR REQUIREMENTS, OR THAT THE OPERATION OF THE SOFTWARE WILL BE UNINTERRUPTED OR ERROR-FREE, OR THAT DEFECTS IN THE SOFTWARE WILL BE CORRECTED. NO ORAL OR WRITTEN INFORMATION OR ADVICE GIVEN BY TYCO OR ANY OF ITS PERSONNEL OR AGENTS SHALL CREATE ANY ADDITIONAL Tyco WARRANTIES OR IN ANY WAY INCREASE THE SCOPE OF Tyco'S OBLIGATIONS HEREUNDER.

b. **Exclusive Remedy.** Tyco's entire liability and Your exclusive remedy under the warranty set forth in this Section 8 will be, at Tyco's option, to (i) attempt to correct Software errors with efforts Tyco believes suitable to the problem, (ii) replace at no cost the recording medium, Software or documentation with functional equivalents as applicable, or (iii) refund a pro-rated portion of the license fee paid for such Software (less depreciation based on a five-year life expectancy) and terminate this EULA, provided, in each case, that Tyco is notified in writing of all warranty problems during the applicable warranty period. Any replacement item will be warranted for the remainder of the original warranty period. No

remedy is provided for failure of the Software if such failure is the result of accident, abuse, alteration or misapplication with respect to the Software or any hardware on which it is loaded. Warranty service or assistance is provided at the original point of purchase.

**9. LIMITATION OF LIABILITY.** TO THE MAXIMUM EXTENT PERMITTED BY LAW, IN NO EVENT SHALL TYCO AND ITS AFFILIATES AND THEIR RESPECTIVE SUPPLIERS AND VENDORS BE LIABLE TO YOU OR ANY THIRD PARTY FOR ANY SPECIAL, INCIDENTAL, CONSEQUENTIAL, PUNITIVE, OR INDIRECT DAMAGES, WHICH SHALL INCLUDE, WITHOUT LIMITATION, DAMAGES FOR PERSONAL INJURY, LOST PROFITS, LOST DATA AND BUSINESS INTERRUPTION, ARISING OUT OF THE USE OR INABILITY TO USE THE SOFTWARE, EVEN IF THEY HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN ANY CASE, THE ENTIRE AGGREGATE LIABILITY OF TYCO AND ITS AFFILIATES AND THEIR RESPECTIVE SUPPLIERS AND VENDORS UNDER THIS AGREEMENT FOR ALL DAMAGES, LOSSES, AND CAUSES OF ACTION (WHETHER IN CONTRACT, TORT (INCLUDING NEGLIGENCE), OR OTHERWISE) SHALL BE LIMITED TO FEES PAID BY YOU FOR THE SOFTWARE, IF ANY, DURING THE THREE (3) MONTHS IMMEDIATELY PRECEDING THE FIRST EVENT GIVING RISE TO LIABILITY. BECAUSE AND TO THE EXTENT THAT SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSIONS OR LIMITATIONS OF LIABILITY ABOVE, THESE MAY NOT APPLY TO YOU.

**10. CONFIDENTIALITY.** You acknowledge that the ideas, methods, techniques, and expressions thereof contained in the Software (collectively, "**Tyco Confidential Information**") constitute confidential and proprietary information of Tyco, the unauthorized use or disclosure of which would be damaging to Tyco. You agree to hold the Software and Tyco Confidential Information in strictest confidence, disclosing information only to permitted individual employees who are required to have access in order to perform under this Agreement and to use such information only for the purposes authorized by this Agreement. You are responsible for and agree to take all reasonable precautions, by instruction, agreement or otherwise, to ensure that Your employees who are required to have access to such information in order to perform under this Agreement, are informed that the Software and Tyco Confidential Information are confidential proprietary information belonging to Tyco and to ensure that they make no unauthorized use or disclosure of such information. You may disclose Tyco Confidential Information if You are required to do so pursuant to a governmental agency, a court of law or to any other competent authority so long as You provide Tyco with written notice of such request prior to such disclosure and cooperate with Tyco to obtain a protective order. Prior to disposing of any media reflecting or on which is stored or placed any Software, You will ensure any Software contained on the media has been securely erased or otherwise destroyed. You recognize and agree a remedy at law for damages will not be adequate to fully compensate Tyco for the breach of Sections 1, 2, or 10. Therefore, Tyco will be entitled to temporary injunctive relief against You without the necessity of proving actual damages and without posting bond or other security. Injunctive relief will in no way limit any other remedies Tyco may have as a result of breach by You of the foregoing Sections or any other provision of this Agreement.

**11. DATA COLLECTION AND USE.** You acknowledge and agree that the Software and/or hardware used in connection with the Software may collect data resulting from or otherwise relating to Your use of the Software and/or hardware ("**Data**") for purposes of providing You with service/product recommendations, benchmarking, energy monitoring, and maintenance and support. Tyco shall be the exclusive owner of all Data. Tyco shall have the right to de-identify Your Data so that it does not identify You directly or by inference (the "**De-Identified Data**"). Tyco shall have the right and ability to use the De-Identified Data for its business purposes, including improvement of the Software, research, product development, product improvement and provision of products and services to Tyco's other customers (collectively, "**Tyco's Business Purposes**"). In the event Tyco does not own or is unable to own the De-Identified Data as a result of applicable law, or contractual commitments or obligations, You grant Tyco a non-exclusive, perpetual, irrevocable, fully-paid-up, royalty free license to use, copy, distribute, and otherwise exploit statistical and other data derived from Your use of the De-Identified Data for Tyco's Business Purposes.

**12. FEEDBACK.** You may provide suggestions, comments, or other feedback (collectively, "**Feedback**") to Tyco and its affiliates with respect to their products and services, including the Software. Feedback is voluntary and Tyco is not required to hold it in confidence. Tyco may use Feedback for any purpose without obligation of any kind. To the extent a license is required under Your intellectual property rights to make use of the Feedback, You grant Tyco and its affiliates an irrevocable, non-exclusive, perpetual, world-wide, royalty-free license to use the Feedback in connection with Tyco's and its affiliates' businesses, including enhancement of the Software, and the provision of products and services to Tyco's customers.

**13. GOVERNING LAW AND JURISDICTION.**

a. This EULA is governed by and construed in accordance with the laws of the State of Wisconsin, as applied to agreements entered into and wholly performed within Wisconsin between Wisconsin residents. In the event the foregoing sentence is determined by a court of competent jurisdiction to not be enforceable or applicable to an action or proceeding brought by either party relating to or under this EULA, the parties agree to the application of the laws of the country in which You entered into this EULA to govern, interpret, and enforce all of Your and Tyco's respective rights, duties, and obligations arising from, or relating in any manner to, the subject matter of this EULA, without regard to conflict of law principles. The United Nations Convention on Contracts for the International Sale of Goods does not apply to any such action or proceeding.

b. Jurisdiction. Any action or proceeding brought by either party hereto shall be brought only in a state or federal court of competent jurisdiction located in Milwaukee, Wisconsin and the parties submit to the in personam jurisdiction of such courts for purposes of any action or proceeding. In the event the foregoing sentence is determined by a court of competent jurisdiction to not be enforceable or applicable to an action or proceeding brought by either party relating to or under this EULA, the parties agree all rights, duties, and obligations of the parties are subject to the courts of the country in which You entered into this EULA.

**14. GENERAL.** This EULA constitutes the entire understanding and agreement between the parties with respect to the transactions contemplated in this EULA and supersedes all prior or contemporaneous oral or written communications with respect to the subject matter of this EULA, all of which are merged in this EULA. This EULA shall not be modified, amended or in any way altered except by an instrument in writing signed by authorized representatives of both parties. In the event that any provision of this EULA is found invalid or unenforceable pursuant to judicial decree, the remainder of this EULA shall remain valid and enforceable according to its terms. Any failure by Tyco to strictly enforce any provision of this EULA will not operate as a waiver of that provision or any subsequent breach of that provision. The following provisions shall survive any termination or expiration of this EULA: Sections 3.a (Restrictions), 3.i (Compliance with laws), 4 (Third Party Software), 6 (Term and Termination), 7 (Fees and Taxes) (to the extent of any fees accrued prior to the date of termination), 9 (Limitation of Liability), 10 (Confidentiality), 11 (Data Collection and Use), 12 (Feedback), 13 (Governing Law and Jurisdiction), 14 (General), 15 (Export/Import), and 16 (U.S. Government Rights). Tyco may assign any of its rights or obligations hereunder as it deems appropriate. **IT IS EXPRESSLY UNDERSTOOD AND AGREED THAT IN THE EVENT ANY REMEDY HEREUNDER IS DETERMINED TO HAVE FAILED OF ITS ESSENTIAL PURPOSE, ALL LIMITATIONS OF LIABILITY AND EXCLUSIONS OF DAMAGES SET FORTH HEREIN SHALL REMAIN IN EFFECT.**

**15. EXPORT/IMPORT.** The Software is licensed for use in the specific country authorized by Tyco. You may not export or import the Software to another country without Tyco's written permission and payment of any applicable country specific surcharges. You agree to comply fully with all relevant and applicable export and import laws and regulations of the United States and foreign nations in which the Software will be used ("**Export/Import Laws**") to ensure that neither the Software nor any direct product thereof are (a) exported or imported, directly or indirectly, in violation of any Export/Import Laws; or (b) are intended to be used for any purposes prohibited by the Export/Import Laws. Without limiting the foregoing, You will not export or re-export or import the Software: (a) to any country to which the United States or European Union has embargoed or restricted the export of goods or services or to any national of any such country, wherever located, who intends to transmit or transport the Software back to such country; (b) to any user who You know or have reason to know will utilize the Software in the design, development or production of nuclear, chemical or biological weapons; or (c) to any user who has been prohibited from participating in export transactions by any federal or national agency of the U.S. government or European Union. You will defend, indemnify, and hold harmless Tyco and its affiliates and their respective licensors and suppliers from and against any and all damages, fines, penalties, assessments, liabilities, costs and expenses (including attorneys' fees and expenses) arising out of any Your breach of this Section.

**16. U.S. GOVERNMENT RIGHTS.** The Software is a "commercial item" as that term is defined at 48 CFR 2.101 (October 1995), consisting of "commercial computer software" and "commercial computer software documentation," as such terms are used in 48 CFR 12.212 (September 1995), and is provided to the U.S. Government only as a commercial end item. Consistent with 48 CFR 12.212 and 48 CFR 227.7202-1 through 227.7202-4 (June 1995), all U.S. Government End Users acquire the Software with only those rights set forth herein.



**17. SPECIAL PROVISIONS FOR POWERMANAGE SOFTWARE.** If the Software consists of or includes Tyco's PowerManage IP/GPRS-based Security Management Platform software, then the following additional provisions shall apply to Your use of the Software:

- a. Subject to purchasing the requisite number of licenses, You may use the Software to provide services to Your, and Your authorized dealer's end user customers ("**Customers**") to remotely access and use the end user functionality of the PowerManage Software, as installed on Your hardware, for the sole purpose of remotely configuring, managing and monitoring their intrusion systems, provided that You comply with all applicable privacy and other laws governing Your providing such services and access to Customers.
- b. You will not, and will not permit any dealer, Customer or other person reasonably within Your control to, rent, lease, sub-license, loan, copy, modify, adapt, merge, translate, reverse engineer, decompile, disassemble or create derivative works based on the whole or any part of the Software.
- c. You may establish terms and conditions for the engagement of Your dealers and the provision of services using the Software to Customers, provided that all such agreements are consistent with the terms of this EULA. You will be solely liable to Your dealers and Customers under the terms and conditions of such agreements. Tyco will not be bound by, and You will indemnify and hold harmless Tyco and its affiliates from any claims or demands of any third party arising out of or related to, the grant of any warranties, indemnities, or other terms and conditions greater in scope than those set forth in this EULA.
- d. You shall include statements in Your welcome kit and/or its agreement(s) with Customer's to remind them to keep secure their login and password details and comply with all applicable security policies.
- e. You shall be solely responsible for: (i) all services You offer and supply to Your dealers and Customers; (ii) all of Your, Your dealer and Customer content, posted, printed, stored, received, routed or created through the use of the Software, including both its content and accuracy; (iii) managing the provision of the service offered by You to Your Customers using the Software; and (iv) compliance with all privacy and other laws applicable to Your use of the Software and provision of services.
- f. You agree that You will comply with applicable all laws and regulations relating to the protection and privacy of the Personal Information of Customers and will utilize appropriate security, technical and organizational measures to protect against unauthorized or unlawful processing of Personal Information and against accidental loss or destruction of, or damage to, Personal Information, in connection with Your use of the Software. Personal Information means any information concerning an identifiable individual (including an End User), including information obtained from an End User through the use of Software, such as photos and video.
- g. You agree to indemnify Tyco and its affiliates for any claims, damages and expenses (including reasonable attorney's fees) related to Your or Your dealer's failure to comply with this Section 17.