


## V1000 User Manual V1.0

Thank you for choosing UNIWA V1000 4G senior phone, it mainly support American 4G bands, not support European 4G bands currently. But it supports 2G(GSM) /3G(WCDMA) global bands.

It is unlocked (SIM free) and take single Nano SIM card. If any question during use, please email us, we will try our best to help you.

 Our after-sales email: 2850699288@qq.com


### Safety instructions

This phone is not water-resistant, keep it dry.  
To prevent possible hearing damage, do not listen at high volume level for long time.  
Exercise caution when holding your device.

## Table of Contents

► External features.....	01
► Install SIM card .....	02
► Install the battery .....	02
► Turn on/off the phone.....	03
► Unlock keypad .....	03
► Charging .....	03
► Save contact .....	04
► Make call .....	04
► Answer call .....	05
► Send and receive SMS .....	05
► Multimedia Settings .....	06
► Bluetooth/Application.....	07
► Settings .....	07
► Speed Dial .....	10
► SOS Settings.....	10
► Torch Light.....	11
► Product specifications.....	11

### External features

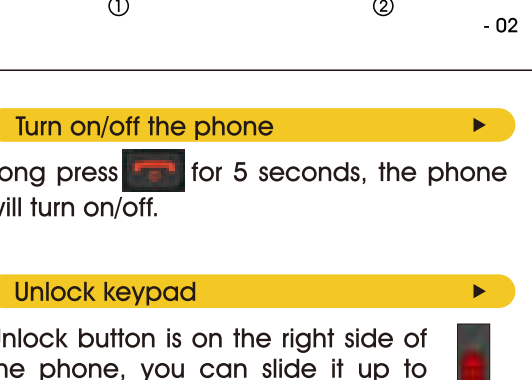


- |                      |                      |
|----------------------|----------------------|
| ① LED indicator      | ⑪ Charging dock      |
| ② Earpiece           | ⑫ Hang up key        |
| ③ Torch              | ⑬ Keypad back button |
| ④ Volume +/-         | ⑭ Return key         |
| ⑤ Torch button       | ⑮ SOS button         |
| ⑥ Menu key           | ⑯ Camera             |
| ⑦ Dial key           | ⑰ Speaker            |
| ⑧ OK key             | ⑱ Headphone port     |
| ⑨ Navigation key     | ⑲ Micro USB          |
| ⑩ Charging indicator | ⑳ Dock connector     |

- 01


### Install SIM card

Open the back cover from the bottom right corner of the phone (see figure1) and insert your SIM card (see figure 2).

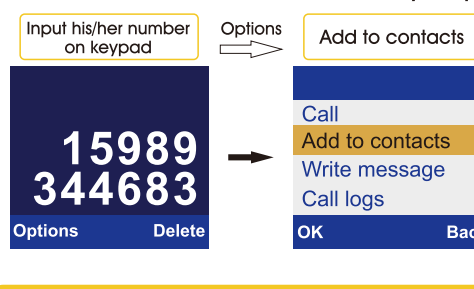


### Install the battery

Before starting up, please tear off the insulating sticker on the battery contacts, then install the battery and cover the back cover, please see the figure below:

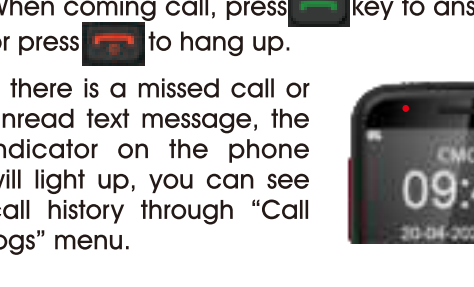

- 02

### Turn on/off the phone

Long press  for 5 seconds, the phone will turn on/off.


### Unlock keypad

Unlock button is on the right side of the phone, you can slide it up to unlock keypad. If the unlock button is already at unlocked state, you can slide it again to unlock.



### Charging

When the battery is low, please charge the phone in time. There are 2 ways for charging:

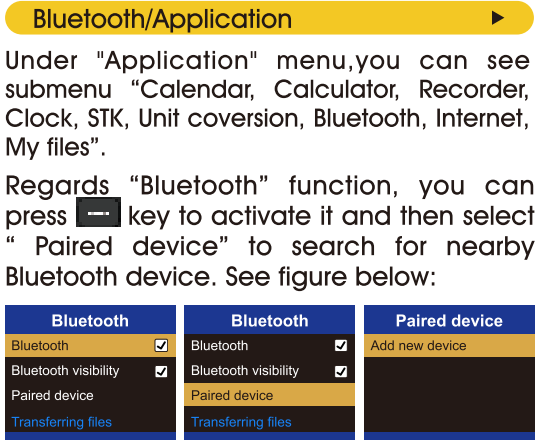


- 03


**When charging, the indicator on the dock will get red. If the phone is not placed properly with the dock, the indicator will display green. Please reposition the phone until it is well placed.**


### Save contact

For frequent contacts, you can save their phone number in the contact list by step:

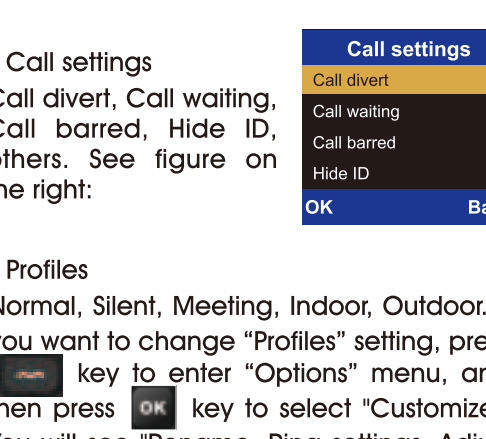


### Make call

Enter the phone number on keypad, and then press  to dial.



You can press  to turn on "handsfree" mode.

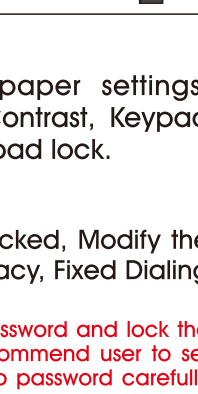See figure on the right:




- 04


### Answer call


When coming call, press  key to answer or press  to hang up.

If there is a missed call or unread text message, the indicator on the phone will light up, you can see call history through "Call logs" menu.

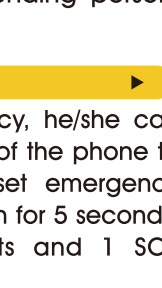

### Send and receive SMS


You can press  button to write SMS under "Message" menu. When you receive SMS, please view it in the "Inbox". Under "Message" menu, you can set "Broadcast message" and "Voice mail server". See figure below:

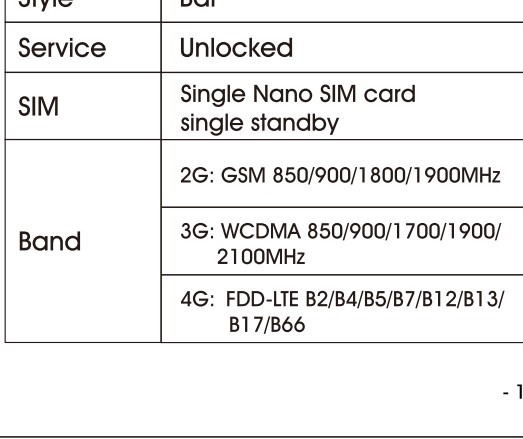


 


- 05


### Multimedia Settings (Radio and Camera)

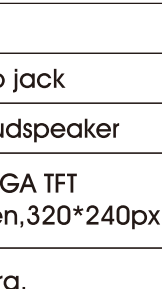In "Multimedia" menu, you can see submenu "Camera", DV, Audio, Video, FM radio, see figure on the right:



You can use   to move the cursor and press  key to enter photo mode. And then press  key to take photo. Using the same steps, you can use DV, Video, Audio functions.

Regarding FM radio, when you enter the menu, need use "auto search and save" in the Options menu to find out nearby radio stations. See figure below:

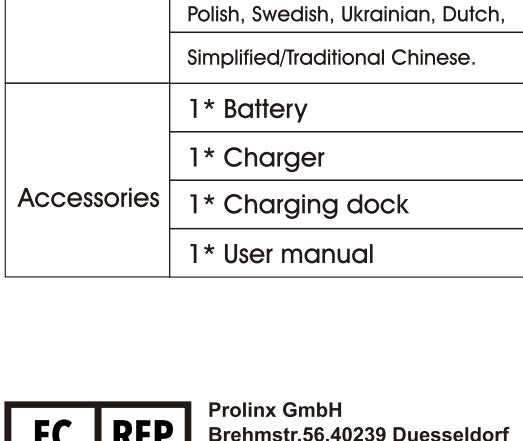

- 06

### Bluetooth/Application

Under "Application" menu, you can see submenu "Calendar, Calculator, Recorder, Clock, STK, Unit conversion, Bluetooth, Internet, My files".

Regards "Bluetooth" function, you can press  key to activate it and then select "Paired device" to search for nearby Bluetooth device. See figure below:



### Settings

In "Settings" menu, you can see submenu "Phone settings, Call settings, Profiles, Display, Security, Connections"



- 07

#### ► Phone settings

Time& date, language settings, shortcut settings, auto power on/off, restore factory settings".  
In "Phone settings" menu, you can restore the phone to factory settings. **Please backup your data before restore factory setting, the data will be lost after restore factory. The default restore factory password is "0000"**

#### ► Call settings

Call divert, Call waiting, Call barred, Hide ID, others. See figure on the right:



#### ► Profiles

Normal, Silent, Meeting, Indoor, Outdoor. If you want to change "Profiles" setting, press  key to enter "Options" menu, and then press  key to select "Customize". You will see "Rename, Ring settings, Adjust volume, Ring type, Other alert rings" See figure below:

- 08



You can also press the volume +/- keys on the left side of the phone to adjust volume.



#### ► Display

Animation effect, Wallpaper settings, Screen saver settings, Contrast, Keypad backlight time, Auto keypad lock.

#### ► Security

PIN Modify PIN2, Phone locked, Modify the cellphone passwords, Privacy, Fixed Dialing number, blacklist.  
**In order to avoid forgetting password and lock the phone forever, we do not recommend user to set password. Please set and keep password carefully if you use this function.**

#### ► Connections

Network account, Data service, Data Roaming, Network selection, Network type, VoLTE.

- 09

### Speed Dial

For some frequent contacts, "Speed dial" can dial them quickly. Key 2~9 can be set as speed dial keys. See figure below:



After the frequent contact is set, press the corresponding key for 5 seconds, the phone will call the corresponding person automatically.

### SOS Settings

When user is in an emergency, he/she can press  button on the back of the phone to call and send SMS to pre-set emergency contacts by pressing  button for 5 seconds. You can pre-set 5 contacts and 1 SOS message. See figure below:



- 10

### Torch light

You can slide up/down key on left side of the phone to turn on/off torch light.



### Product specifications

Model No.	UNIWA V1000
Dimensions	122.5*56.3*15.1mm
Weight	114g (include battery)
Material	Plastic
Style	Bar
Service	Unlocked
SIM	Single Nano SIM card single standby
Band	2G: GSM 850/900/1800/1900MHz
	3G: WCDMA 850/900/1700/1900/ 2100MHz
	4G: FDD-LTE B2/B4/B5/B7/B12/B13/ B17/B66

- 11

Phonebook Number	1000
LED Indicator	RGB
Message	SMS/MMS
USB Port	Micro USB
Earphone Port	3.5mm audio jack
Speaker	2030 BOX loudspeaker
Screen	2.31 inch QVGA TFT display screen,320*240px
Camera	Single camera, 0.3MP back camera
Audio formats	MP3
Video formats	MP4 etc.
Radio	Wireless radio
SOS Function	Support preset 5 SOS emergency contacts and 1 emergency SMS
Torch	One key to turn on/off torch

- 12

BT	V3.0
Battery	Removable 1700mAh li-ion battery
Languages	English, Arabic, French, Hindi, Indonesian, Malayu, Portuguese, Russian, Spanish, Thai,
	Vietnamese, Italian, Turkish, Deutsch, Greek, Hebrew, Czech, Polish, Swedish, Ukrainian, Dutch,
	Simplified/Traditional Chinese.
Accessories	1 * Battery
	1 * Charger
	1 * Charging dock
	1 * User manual

EC REP	Prolinx GmbH Brehmstr.56,40239 Duesseldorf Germany
--------	--



- 13