

**Coaxial Interseries Adapter Selection Matrix**

Use this handy chart to locate the desired interseries adapter. Simply locate the connector type and gender in the top row and repeat in the left hand column. Intersect the row and column to determine availability. Adapters shown in this matrix are listed on this and the opposite page. If a specific adapter type is not listed, please visit our website at [L-com.com](http://L-com.com) for the latest information or call our technical support group at **800-343-1455** for assistance. Adapters listed are generally intended for use in the RF band.

**Reversed Polarity Types**

INTERFACE SERIES	RP-BNC	RP-TNC PLUG	RP-TNC JACK	RP-SMA PLUG	RP-SMA JACK
N FEMALE	AXA-NFRBP	AXA-NFRTP, AXA-NFRTP2		AXA-NFRSP	AXA-NFRSJ AXA-RSINFB
N MALE		AXA-NMRTP	AXA-NMRTJ	AXA-NMRSP	AXA-NMRSJ
RP-TNC				AXA-RTJRSJ	AXA-RTPRSJ

INTERFACE SERIES	BNC FEMALE	BNC MALE	F FEMALE	F MALE	TNC MALE	TNC FEMALE	MINI UHF F	MINI UHF M	N MALE	N FEMALE	SMA F	SMA M	SMB J	SMB P	UHF F	UHF M	MCX P	MMCX F	NMO
BNC FEMALE			BA220	BA120, BA037	BA3001	BA70		BA883	AXA-NMBF	AXA-NFBF	BA588	BA29			BA230	BA50			
BNC MALE			BA125, BA017			BA71, BA3002	BA882		BN107	AXA-NFBM	BA38	BA28			BA60	BA270			
F FEMALE	BA220	BA125, BA017				BA127			AXA-NMFF						BA301	BA160			
F MALE	BA120, BA037			BA121											BA130				
FME MALE	BA8016	BA8005,																	
MINI UHF FEMALE		BA882			BA881							BA582							
MINI UHF MALE	BA883					BA886			AXA-NFMUM	BA591									
MCX										AXA-MPSF									
N FEMALE	AXA-NFBF	AXA-NFBM			AXA-NFTM			AXA-NFMUM			AXA-NFSF	BA25							AXA-AMNFB
N MALE	AXA-BFNM90 AXA-NMBF	BN107	AXA-NMFF			AXA-NMTF					AXA-NMSM								
RCA FEMALE	BA94	BA95, BA018	BA887																
RCA MALE	BA90		BA907																
SMA FEMALE	BA588	BA38			BA589	BA590		BA591	AXA-NMSF AXA-NMSM	AXA-NFSF			AXA-SMBJSF	AXA-SMBPSF					
SMA MALE	BA29	BA28			BA579	BA580	BA582			BA25					BA27	BA36	AXA-MPSF	BA3000	
SMB JACK																			
SMB PLUG											AXA-SMBJSF AXA-SMBPSF								
TNC FEMALE	BA70	BA71, BA3002	BA127					BA886	AXA-NMTF			BA580							
TNC MALE	BA3001			BA121			BA881			AXA-NFTM	BA589	BA579							
UHF FEMALE	BA230	BA60	BA301	BA130												BA27			
UHF MALE	BA50	BA270	BA160								BA36	BA26							
7/16 DIN MALE									AXA-NFDM										
7/16 DIN FEMALE									AXA-NMDF										
1.6/5.6 MALE	BA9201	BA9200																	



Item #	Description	1-9	10-24	25-99	100+
<b>BNC Interseries Coaxial Adapters - 50 Ohm</b>					
BA28	Coaxial Adapter, BNC Male/SMA Male	6.88	6.46	6.05	CALL
BA38	Coaxial Adapter, BNC Male/SMA Female	6.88	6.46	6.05	CALL
BA60	Coaxial Adapter, BNC Male/UHF Female	4.72	4.44	4.16	CALL
BA71	Coaxial Adapter, BNC Male/TNC Female	5.36	5.03	4.71	CALL
BA3002	Coaxial Adapter, BNC Male/TNC Female, Right Angle	7.82	7.35	6.88	CALL
BA29	Coaxial Adapter, BNC Female/SMA Male	6.88	6.46	6.05	CALL
BA50	Coaxial Adapter, BNC Female/UHF Male	4.72	4.44	4.16	CALL
BA70	Coaxial Adapter, BNC Female/TNC Female	5.36	5.03	4.71	CALL
BA3001	Coaxial Adapter, BNC Female/TNC Male	4.83	4.54	4.25	CALL
AXA-BFNM90	Coaxial Adapter, BNC Female/Type N Male, Right Angle	6.88	6.33	5.78	CALL
<b>BNC Interseries Coaxial Adapters - 75 Ohm</b>					
BA017	Coaxial Adapter, BNC Male/Type F Female	4.35	4.09	3.83	CALL
BA018	Coaxial Adapter, BNC Male/RCA Female	3.25	3.05	2.86	CALL
BA037	Coaxial Adapter, BNC Female/Type F Male	4.35	4.09	3.83	CALL
<b>SMA Interseries Coaxial Adapters - 50 Ohm</b>					
AXA-NMSM	Coaxial Adapter, SMA Male/Type N Male	4.83	4.44	4.06	CALL
BA25	Coaxial Adapter, SMA Male/Type N Female	6.88	6.46	6.05	CALL
BA26	Coaxial Adapter, SMA Male/UHF Male	6.88	6.46	6.05	CALL
BA27	Coaxial Adapter, SMA Male/UHF Female	6.88	6.46	6.05	CALL
BA579	Coaxial Adapter, SMA Male/TNC Male	6.88	6.46	6.05	CALL
BA580	Coaxial Adapter, SMA Male/TNC Female	6.88	6.46	6.05	CALL
BA582	Coaxial Adapter, SMA Male/Mini UHF Female	6.88	6.46	6.05	CALL
AXA-NMSF	Coaxial Adapter, SMA Female/Type N Male	4.83	4.44	4.06	CALL
AXA-NFSF	Coaxial Adapter, SMA Female/Type N Female	6.41	5.89	5.38	CALL
BA36	Coaxial Adapter, SMA Female/UHF Male	6.88	6.46	6.05	CALL
BA588	Coaxial Adapter, SMA Female/BNC Female	6.88	6.46	6.05	CALL
BA589	Coaxial Adapter, SMA Female/TNC Male	6.88	6.46	6.05	CALL
BA590	Coaxial Adapter, SMA Female/TNC Female	6.88	6.46	6.05	CALL
BA591	Coaxial Adapter, SMA Female/Mini UHF Male	6.88	6.46	6.05	CALL
AXA-MPSF	Coaxial Adapter, SMA Female/MCX Plug	6.88	6.33	5.78	CALL
BA3000	Coaxial Adapter, SMA Female/MMCX Female	7.14	6.71	6.28	CALL
<b>SMB Interseries Coaxial Adapters - 50 Ohm</b>					
AXA-SMBJSF	Coaxial Adapter, SMB Jack/SMA Female	5.67	5.22	4.76	CALL
AXA-SMBPSF	Coaxial Adapter, SMB Plug/SMA Female	6.88	6.33	5.78	CALL

