



E

# PICTIONARY 360™



**Reset** – Insert a blunt point and press. This button resets the game to its original settings.

**Select Button** – As you turn the unit to reveal a puzzle, you may press the SELECT BUTTON at any time. This will place you in SELECT MODE and prompt you to choose your answer from the four MULTIPLE CHOICES. SELECT BUTTON is also used to toggle through GAME MODES.



**Multiple Choices** – The four word choices that surround the picture.



**Score Indicator** – At the beginning of each game the high score for that GAME MODE will flash in the bottom SCORE SEGMENT. At the end of each game, the SCORE INDICATOR will display your score for that game.



## P6630 For 1 player / Ages 7 and up INSTRUCTION MANUAL P/N 823C9100 Rev.C

Pictionary®...The classic sketch, guess and score game has a new spin! Pictionary 360™ is the ultimate gravity game where you control how a picture is revealed. Virtual motion sensors allow you to rotate the handheld to reveal pictures and score points by quickly guessing! With over 1,000 pictures, Pictionary 360™ will have you spinning and guessing for hours!

**NOTE:** When you first purchase your game, it will be in demo mode. To exit demo mode, press the RESET button located next to the sound button.

### BUTTONS/FUNCTIONS:

**On/Start** – Pressing this button will turn the unit ON. Once you select a GAME MODE, begin the game by pressing the START button. To “pause” during game play, press the PAUSE button. Press this button again to return to the game in progress. Turn the game off by pressing and holding this button for 3 seconds.

**Sound** – Press this button to toggle between sound on and off.

### BASIC GAME RULES

In the classic game of Pictionary®, you try to identify pictures as quickly as possible to earn points.

In Pictionary 360™, the play is enhanced as you rotate the handheld to reveal the image. You will have four MULTIPLE CHOICE words on each side of the picture to select. Once you think you’ve solved the puzzle, rotate the handheld so that a selected word choice is readable or facing right side up and press select to see if you are correct.

Over 1000 pictures and different reveal techniques will keep Pictionary 360™ fresh and challenging for hours.

### GAME MODES

There are three game modes in Pictionary 360™ – Free Play, Image Count Down, and 10 Times.

**Free Play** – There is no time limit as you play. The game is over when you are incorrect three times. The score is tallied by the amount of pictures guessed correctly.

**Image Count Down** – Try and guess as many pictures as possible in 5 minutes. The game is over after 5 minutes and the score is tallied by the total number of pictures guessed correctly.

**10 Times** – Try to solve 10 pictures as quickly as possible. The game is over after the 10th sketch is solved correctly. Your score is tallied by how quickly you correctly solved 10 pictures.

### GAME LEVELS

**Easy** – As you rotate the unit to solve the puzzle, the four MULTIPLE CHOICES will always be visible.

**Hard** – The four MULTIPLE CHOICES will not be visible until you have squeezed the SELECT BUTTON to make a guess. The picture will be frozen and the four MULTIPLE CHOICES will be visible. You will have 8 seconds to rotate the unit to the correct word (right side up) and make your choice.

### SCORING

Players earn points based on how quickly they guess pictures. Each time the handheld is rotated another frame is revealed. With each revealed frame the value of a correct answer decreases.

Easy (Level 1) Scoring		Hard (Level 2) Scoring	
1 Frame	200 Points	1 Frame	400 Points
2 Frames	190 Points	2 Frames	380 Points
3 Frames	180 Points	3 Frames	360 Points
4 Frames	170 Points	4 Frames	340 Points
5 Frames	160 Points	5 Frames	320 Points
6 Frames	150 Points	6 Frames	300 Points
7 Frames	140 Points	7 Frames	280 Points
8 Frames	130 Points	8 Frames	260 Points
9 Frames	120 Points	9 Frames	240 Points
10 Frames	110 Points	10 Frames	220 Points
11 Frames	100 Points	11 Frames	200 Points
12 Frames	90 Points	12 Frames	180 Points
13 Frames	80 Points	13 Frames	160 Points
14 Frames	70 Points	14 Frames	140 Points
15 Frames	60 Points	15 Frames	120 Points
16 Frames	50 Points	16 Frames	100 Points
17 Frames	40 Points	17 Frames	80 Points
18 Frames	30 Points	18 Frames	60 Points
19+ Frames	20 Points	19+ Frames	40 Points
Wrong Answer	-100 Points	Wrong Answer	-200 Points

### HIGH SCORES

The high score for a GAME MODE will flash in the bottom SCORE SEGMENT prior to the start of a new game.

### GETTING STARTED

Press the START button to begin a new game. You will see the GAME MODE screen.

To toggle through the GAME MODES, squeeze the SELECT BUTTON until you have reached the desired game.

Once you’ve reached the desired game, press the START button to begin a new game.

At the end of each game, the SCORE INDICATOR will display your score for that game.

### SLEEP MODE

After 90 seconds of inactivity, Pictionary 360™ will go to sleep. To wake the unit, press the START BUTTON.

## BATTERY INSTALLATION / REPLACEMENT

This game is powered by two (2) AAA (LR03) batteries.

- Using a screwdriver (not included), loosen the screw until the battery compartment door can be removed.
- Insert two (2) AAA (LR03) batteries as indicated inside the battery compartment.
- Replace the battery compartment door and tighten the screw with a screwdriver. Do not over-tighten.
- Batteries included are for demonstration purposes only.
- For longer life use only alkaline batteries.
- Replace the batteries when the product does not function properly.
- Remove batteries and dispose of them safely.

### ADULT SUPERVISION IS RECOMMENDED WHEN CHANGING BATTERIES.

## BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage;

- Do not use rechargeable batteries.
- Non-rechargeable batteries are not to be recharged.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of batteries safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.

## CAUTION

- Sometimes, a build-up of static electricity (from carpets, etc) may cause the game to stop working. Just reset the game, and it will work again.
- In an environment with radio frequency interference, the product may malfunction and require user to reset the product.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

## For product sold in Canada • Pour les produits vendus au Canada

THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003.

CET APPAREIL NUMÉRIQUE DE LA CLASSE B EST CONFORME À LA NORME NMB-003 DU CANADA.

(VALID FOR CANADA ONLY • VALABLE AU CANADA SEULEMENT)

Operation is subject to the following two conditions :

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes :

- (1) Il ne doit pas produire de brouillage et
- (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.

Keep these instructions for future reference as they contain important information.



Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

Hereby, Mattel declares that this toy is in compliance with the essential requirements and other relevant provisions of Directives 2004/108/EC, 88/378/EEC. Suitable for use in all EU member states. A copy of the Declaration of Conformity may be obtained from Mattel UK Ltd.

DICTIONARY and associated trademarks and trade dress are owned by Pictionary Incorporated.



CONFORMS TO THE SAFETY REQUIREMENTS OF ASTM F963.

© 2009 Mattel, Inc. All Rights Reserved.

RADICA USA Ltd. [www.radicagames.com](http://www.radicagames.com) Helpline 1.800.803.9611 or [service.mattel.com](mailto:service.mattel.com)  
Consumer Relations – Mattel, Inc. 636 Girard Avenue, East Aurora, NY 14052, U.S.A.

Mattel Canada Inc., Mississauga, Ontario L5R 3W2.  
You may call us free at 1.800.803.9611.

Retain this address for future reference: [Mattel U.K.Ltd., Vanwall Business Park, Maidenhead SL6 4UB](mailto:Mattel.U.K.Ltd.,Vanwall.Business.Park.,Maidenhead.SL6.4UB), Helpline 01628 500303.

Mattel Australia Pty., Ltd., Richmond, Victoria. 3121.  
Consumer Advisory Service - 1300 135 312.

Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd.(993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ.  
Tel:03-78803817, Fax:03-78803867.

Mattel, Inc. 636 Girard Avenue, East Aurora, NY 14052, U.S.A.  
Consumer Relations 1.800.803.9611.

## CONSUMER INFORMATION

Need Assistance? Visit [service.mattel.com](http://service.mattel.com) or call 1.800.803.9611 (US and Canada only), M-F 9AM - 7PM & SAT 11AM - 5PM, Eastern.

[SERVICE.MATTEL.COM](http://SERVICE.MATTEL.COM)