

nickelodeon.



Scribble & Write Handy Dandy Notebook



Parents' Guide

 
This guide contains important information.
Please keep it for future reference.

91-003975-000 US/CA

INTRODUCTION

Thank you for purchasing the *Blue's Clues & You!*TM Scribble & Write Handy Dandy Notebook

For beginning learners, it teaches the names of letters and numbers. Experienced learners, can follow step-by-step instructions to draw shapes and write letters and numbers. Activities fostering creativity allow kids to make music, as well as draw and figure out Blue's Clues with Josh!

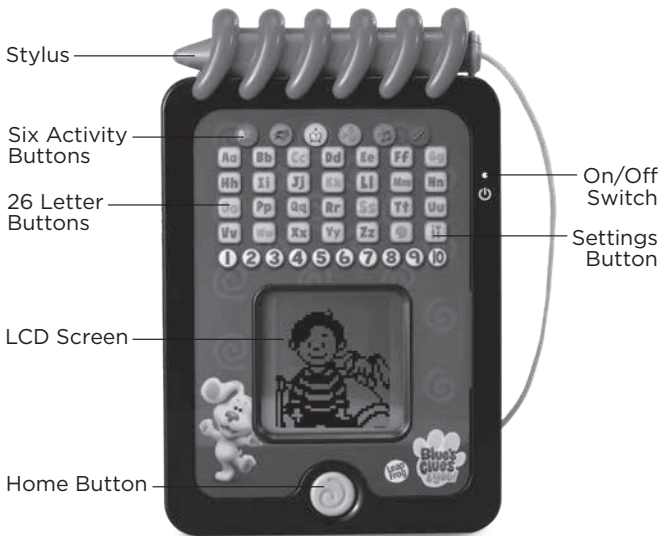

INCLUDED IN THIS PACKAGE

*Blue's Clues & You!*TM Scribble & Write Handy Dandy Notebook

- Parents' guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please keep this parents' guide as it contains important information.

ATTENTION

 
Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes et vis d'emballage. Ils ne font pas partie du jouet.

NOTE

Il est conseillé de conserver ce guide des parents car il comporte des informations importantes.

Unlock the Packaging Locks


- ① Rotate the packaging locks 90 degrees counterclockwise.
- ② Pull out the packaging lock and discard.

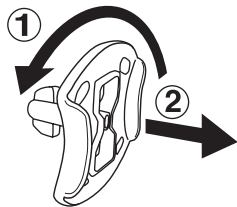

GETTING STARTED

Battery Removal and Installation

 1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery cover. (The use of new alkaline batteries is recommended for maximum performance.)
5. Replace the battery cover and tighten the screw to secure.

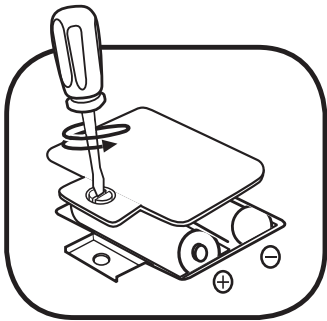



WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.



ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte. Tenir les piles ou accumulateurs hors de portée des enfants.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Low Battery Indicator

When the batteries run low, this icon will appear on the screen, flash twice and the unit will power off. Remove the old batteries and replace with a new set.



IMPORTANT NOTICE

Occasionally, the LCD touch screen may need to be recalibrated. If this happens, go to Settings Mode to adjust it before resuming play.

A small X will appear in each corner of the screen. Use the Stylus to touch each X exactly. Another X will appear after the previous one is touched correctly. The screen will show OK if the screen has been calibrated correctly. If an X isn't touched correctly, the calibration will restart.



PRODUCT FEATURES

1. On/Off Switch

Slide the **On/Off Switch** to turn the toy On.



2. Touch Sensitive LCD Screen

Touch the **LCD Screen** to play.



3. Stylus

Use the **Stylus** to tap and write on the screen.



4. Activity Buttons

Press one of the **Six Activity Buttons** to select an activity.



5. Settings Button

Press this button to adjust the volume (the default volume is in the highest level), turn the background music off and on, change the contrast of the **LCD Screen**, and calibrate the **LCD Screen**.



6. Letter Buttons

Press these buttons to hear letter names and sounds.



7. Number Buttons

Press these buttons to hear number names 1-10.



8. Automatic Shut Off

To preserve battery life, *Blue's Clues & You!*TM Scribble & Write Handy Dandy Notebook will automatically power down after one minute without input. The unit can be turned on again by pressing any button.

ACTIVITIES

1. Writing Time

Press a **Letter** or **Number Button** to learn how to write it. Follow the dotted lines. They will show you exactly how to draw perfect letters using the correct stroke order.



2. Play Blue's Clues

Play Blue's Clues to figure out what Blue is trying to tell Josh! Follow the dotted lines to draw the clues. Then think, think, think to figure out Blue's Clues!



3. Number Time

Count Tickety's bell chimes, help Blue find a missing number, and take a break with some slow, calming breaths.



4. Shape It Up

Help Josh remember the name of shapes, and follow the dotted lines to draw them.



5. Music Time


Jam along with Blue and Josh! Tap the screen to add percussion, guitar, piano, or sounds from Blue or Josh.




6. Let's Draw

Get creative! Tap or drag anywhere on the screen to draw. The following icons can help:

Pencil  - Tap to draw.

Eraser  - Tap to turn the tip of your stylus into an eraser. Only what you touch will be erased.

X  - Tap this to erase your entire drawing.

Check mark  - Tap this when you are finished.



CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to play again.
5. If the unit still does not work, install a new set of batteries.

IMPORTANT NOTE:

If the problem persists, please call our **Consumer Services Department** at **1-800-701-5327** in the U.S. and Canada, or email **support@leapfrog.com**. Creating and developing LeapFrog products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

Environmental Phenomena

The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power **Off** and back **On**, to remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Impact de l'environnement

Une défaillance de fonctionnement de l'appareil peut survenir s'il est sujet à des interférences avec les fréquences radioélectriques. Le fonctionnement normal de l'appareil devrait reprendre avec l'arrêt des interférences. Si ce n'est pas le cas, il peut s'avérer nécessaire d'éteindre et rallumer l'appareil ou de retirer et réinstaller les piles. Dans l'éventualité peu probable d'une décharge électrostatique, un mauvais fonctionnement et une perte de mémoire de l'appareil peuvent se produire. L'utilisateur doit alors retirer et réinstaller les piles pour réinitialiser l'appareil.

Supplier's Declaration of Conformity

47 CFR § 2.1077 Compliance Information

Trade Name: LeapFrog®
Model: 6140
Product Name: *Blue's Clues & You!*™ Scribble & Write
Handy Dandy Notebook
Responsible Party: LeapFrog Enterprises, Inc.
Address: 2200 Powell Street, Suite 500
Emeryville, California 94608
Website: leapfrog.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

CAN ICES-003 (B)/NMB-003(B)



***Visit our website for more
information about our products,
downloads, resources and more.***

***leapfrog.com
leapfrog.ca***

**Read our complete warranty policy online at
*leapfrog.com/legal***

© 2021 Viacom International Inc.
All Rights Reserved. Nickelodeon, Blue's
Clues & You! and all related titles,
logos and characters are trademarks
of Viacom International Inc.
LeapFrog Enterprises, Inc.,
A subsidiary of VTech Holdings Limited.
TM & © 2021 LeapFrog Enterprises, Inc.
All rights reserved.

Printed in China.
91-003974-000 The icons for the United States and Canada, each consisting of the letters "US" or "CA" inside a circle.