

Safety Notes

Before Using the Machine

When you use this machine, we recommend that you change the system administrator's passcode immediately after installing the machine.

Safety Notes

Please read the following instructions carefully before operating the machine and refer to them as needed to ensure the continued safe operation of your machine.

Your FUJIFILM product and supplies have been designed and tested to meet strict safety requirements. These include safety agency evaluation and certification, and compliance with electromagnetic regulations and established environmental standards.

The safety and environment testing and performance of this product have been verified using FUJIFILM materials only.

WARNING: Unauthorized alterations, which may include the addition of new functions or connection of external devices, may impact the product certification. Please contact your local dealer for more information.

This product and recommended supplies have been tested and found to comply with strict safety requirements including safety agency approvals and compliance with environmental standards. Follow the following instructions for safety use.

WARNING: Any unauthorized alteration including an addition of new functions or connection to external devices may not be covered by the product warranty. Contact your local dealer for more information.

Warning Markings

All warnings and instructions marked on or supplied with the product should be followed.



WARNING/
CAUTION

This symbol alerts users to areas of the equipment where there is the possibility of personal injury.



WARNING

This symbol alerts users to areas of the equipment where there are heated or hot surfaces, which should not be touched.



INSTRUCTION

This symbol alerts users to areas of the equipment which require special attention to avoid the possibility of personal injury or damage to the equipment.

Electrical Safety

This product shall be operated by the power source as indicated on the product's data plate. Consult your local power company to check if your power source meets the requirements.

- Electrical Supply



WARNING: Connect this product to a protective earth circuit.

This product is supplied with a plug that has a protective earth pin. The plug fits only into an earthed electrical outlet. This is a safety feature. If the plug doesn't fit to the outlet, contact an electrician to replace the outlet to avoid risk of electric shock. Never use an earthed adapter plug to connect the product to the electrical outlet that has no earth connection terminal. Improper connection of a grounding conductor may cause electric shock.

- Plug the power cord directly into a grounded electrical outlet. Do not use an extension cord. Consult your local dealer to check if an outlet is grounded.
- The power receptacle for the machine must meet the requirements stated on the data plate on the rear of the machine. If you are not sure that your electrical supply meets the requirements, please consult your local power company or a licensed electrician for advice.
- Never touch the power cord with wet hands.
- Do not put an object on the power cord.
- Always keep the plug connection free of dust.
- Only use the power cord supplied with the product or the ones designated by FUJIFILM.
- Cleaning Your Product



WARNING: Do not use aerosol cleaners. Aerosol cleaners can be explosive or flammable when used on electromechanical equipment.

Before cleaning this product, unplug the product from the electrical outlet. Always use materials specifically designated for this product. The use of other materials may result in poor performance and create a hazardous situation.

Always unplug this equipment from the electrical outlet before cleaning.

- Disconnect Device
The power cable is the disconnect device for this equipment. It is attached to the back of the machine as a plug-in device. To remove all electrical power from the equipment, disconnect the power cable from the electrical outlet.
- Hold the plug not the cord when unplugging this product.
- Always switch off and unplug the machine when it is not used over an extended period of time.
- Your FUJIFILM machine is equipped with an energy saving device to conserve power when the machine is not in use. The machine may be left on continuously.

Machine Installation

- Do not locate this product where people might step on or trip over the power cord.
Always locate the machine on a solid support surface (not on plush carpet) that has adequate strength to support the weight of the machine.
Always locate the machine in an area that has adequate ventilation and room for servicing.
This equipment should not be placed in a room unless proper ventilation is provided. Please contact your local Authorized dealer for further information.
- Never locate this product in the following places:
 - Near radiators or any other heat sources
 - Near volatile flammable materials such as curtains
 - In a hot, humid, dusty or poorly ventilated environment
 - In direct sunlight
 - Near ovens or humidifiers

- Keep away the packing materials of machine from small children. The thin film may cling to nose and mouth and prevent breathing.
- Always lock the wheels of this product after installation.
- Never place this equipment where people might step on or trip on the power cord.
This equipment should not be placed in a room unless proper ventilation is provided. Please contact your local Authorized dealer for further information.
Never locate the machine near a radiator or any other heat source.

Operational Safety

- The operator's product maintenance procedures are described in the customer documentation supplied with this product. Do not carry out any other maintenance procedures not described in the documentation.
- This product is designed to prohibit operator access to hazardous areas. The hazard areas are isolated from operators by covers or protectors which require a tool to remove. To prevent electric shock and injuries, never remove those covers and protectors.
- To avoid the risk of electric shock and a fire accident, switch off and unplug the product promptly in the following conditions, then contact your local dealer.
 - The product emits smoke or its surface is unusually hot.
 - The product emits unusual noise or odor.
 - The power cord is cracked or worn down.
 - A circuit breaker, fuse or any other safety device becomes activated.
 - Any liquid is spilled into the product.
 - The product is soaked in water.
 - Any part of the product is damaged.
- Do not insert any object into slots or openings of this product. Do not place any of the followings on the product:
 - Liquid container such as flower vases or coffee cups
 - Metal parts such as staples or clips
 - Heavy objects
- Do not use conductive paper, e.g. carbonic paper or coated paper.
- Cleaning Your Product
 - **WARNING: Do not use aerosol cleaners. Aerosol cleaners can be explosive or flammable when used on electromechanical equipment.**
- Always follow all warning instructions marked on or supplied with this product.
- Keep electrical and mechanical safety interlocks active. Keep the safety interlocks away from magnetic materials.
- Do not attempt to remove a paper deeply jammed inside the product, particularly a paper wrapped around the fusing unit or the heat roller. Switch off the product immediately and contact your local dealer.
- Ozone Information
This product produces ozone during normal operation. The ozone produced is heavier than air and is dependent on copy volume. Install the system in a well-ventilated room.

Consumable

- Store all consumables in accordance with the instructions given on its package or container.
- Use a broom or a wet cloth to wipe off spilled toner. Sweep slowly to minimize generation of dust during clean up. Avoid using a vacuum, however, if a vacuum must be used, the unit should be designed for combustible dusts (e.g. explosion rated motor and conductive hose).
If you spill a large volume of toner, contact your local dealer.
- Never throw a toner cartridge into an open flame. Remaining toner in the cartridge may catch fire and cause burn injuries or explosion.

The used toner cartridges are recycled for environmental conservation and effective utilization of materials. Dispose of the used toner cartridges properly. Dispose of consumables in accordance with your local laws and statutes, such as by entrusting them to an industrial waste disposal company. For disposal information, contact your local authorities.

- Never throw a used waste toner cartridge into an open flame. Toner in the cartridge may catch fire and cause burn injuries or explosion.
The used waste toner cartridges are recycled for environmental conservation and effective utilization of materials. Dispose of the used waste toner cartridges properly. Dispose of consumables in accordance with your local laws and statutes, such as by entrusting them to an industrial waste disposal company. For disposal information, contact your local authorities.
- Keep drum cartridges (or drum if not a cartridge type) and toner cartridges out of the reach of children. If a child accidentally swallows toner, spit it out, rinse mouth with water, drink water and consult a physician immediately.
- When replacing drum cartridges (or drum if not a cartridge type) and toner cartridges, be careful not to spill the toner. In case of any toner spills, avoid contact with clothes, skin, eyes and mouth as well as inhalation.
- If toner spills onto your skin or clothing, wash it off with soap and water.
If you get toner particles in the eyes, wash it out with plenty of water for at least 15 minutes until irritation is gone. Consult a physician if necessary.
If you inhale toner particles, move to a fresh air location and rinse your mouth with water.
If you swallow toner, spit it out, rinse your mouth with water, drink plenty of water and consult a physician immediately.

Radio Frequency Emissions

(Class A digital device) (European Union)

WARNING: In order to allow this equipment to operate in close proximity to Industrial, Scientific and Medical (ISM) equipment, the external radiation from ISM equipment may have to be limited or special mitigation measures taken.

Changes or modifications to this equipment not specifically approved by the FUJIFILM Corporation may void the user's authority to operate this equipment.

WARNING: This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Shielded cables must be used with this equipment to maintain compliance with Council Directive 2004/108/EC

Radio Frequency Emissions

(Class A digital device) (USA)

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Changes or modifications to this equipment not specifically approved by the FUJIFILM Corporation may void the user's authority to operate this equipment.



WARNING: Shielded cables must be used with this equipment to maintain compliance with FCC regulations in the United States.

This equipment is suitable for use only in premises having a service current capacity equal to or greater than 100 Amps per phase.

Certifications in Europe CE

The CE mark applied to this product, symbolizes FUJIFILM's declaration of conformity with the following applicable European Union Directives, as of the dates indicated:

December 12, 2006: Council Directive 2006/95/EC as amended. Approximation of the laws of the member states related to low voltage equipment.

December 15, 2004: Council Directive 2004/108/EC as amended. Approximation of the laws of the member states related to electromagnetic compatibility.

A full declaration of conformity, defining the relevant directives and referenced standards, can be obtained from your FUJIFILM representative.

Product Safety Certification

This product is certified by various NRTLs/NCBs to the safety standards listed below.



- UL60950-1/CSA22.2, No. 60950-1 (USA/Canada) Second Edition
- IEC60950-1:2005, (2nd Edition) and/or EN60950-1:2006+A11 (CB Scheme)

Warning and Caution Labels

Always follow all warning instructions marked on or supplied with this product.

To avoid the risk of burn injuries and electric shock, never touch the area with the "High Temperature" or "High Voltage" marks on.

Two-dimensional bar codes on these labels are used for control of quality, evaluation and inspection.

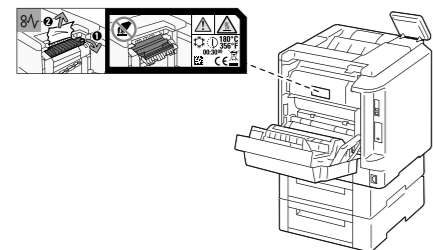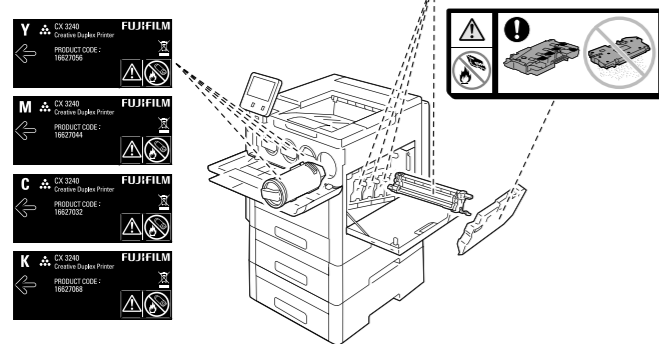

Recycling and Disposal

● All Countries

If you are managing the disposal of this product, please note that the product may contain perchlorate and other materials whose disposal may be regulated due to environmental considerations. The presence of these materials is fully consistent with global regulations applicable at the time that the product was placed on the market. For recycling and disposal information, contact your local authorities.

Perchlorate Material: This product may contain one or more Perchlorate-containing devices, such as batteries.

Special handling may apply. Please see www.dtsc.ca.gov/hazardouswaste/perchlorate.

● European Union

Some equipment may be used in both a domestic/household and a professional/business application.

• Domestic/Household Environment



Application of this symbol on your equipment is conformation that you should not dispose of the equipment in the normal household waste stream.

In accordance with European legislation, end of life electrical and electronic equipment subject to disposal must be segregated from household waste.

Private households within EU member states may return used electrical and electronic equipment to designated collection facilities free of charge. Please contact your local disposal authority for information.

In some member states, when you purchase new equipment, your local retailer may be required to take back your old equipment free of charge. Please ask your retailer for information.

• Professional/Business Environment



Application of this symbol on your equipment is conformation that you must dispose of this equipment in compliance with agreed national procedures.

In accordance with European legislation, end of life electrical and electronic equipment subject to disposal must be managed within agreed procedures.

Prior to disposal, please contact your local dealer for end of life take-back information.

• Collection and Disposal of Equipment and Batteries



These symbols on the products and/or accompanying documents mean that used electrical and electronic products and batteries should not be mixed with general household waste.

For proper treatment, recovery, and recycling of old products and used batteries, please take them to applicable collection points, in accordance with your national legislation and the Directive 2002/96/EC and 2006/66/EC.

By disposing of these products and batteries correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling.

For more information about collection and recycling of old products and batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items.

Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

Business Users in the European Union

If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.

Disposal Outside of the European Union

These symbols are only valid in the European Union. If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal.

• Battery Symbol Note



This wheeled bin symbol may be used in combination with a chemical symbol. This establishes compliance with the requirements set out by the Directive.

• Battery Removal

Batteries should only be replaced by a manufacturer-approved service facility.

• Other Countries

Please contact your local waste management authority to request disposal guidance.

• For Turkey

EEE Complies with Directive

Safety Data Sheet (SDS)

If you need SDS, contact your local dealer.

Legal Notice

Copying or printing certain documents may be illegal in your country. Penalties of fines or imprisonment may be imposed on those found guilty. The following are examples of items that may be illegal to copy or print in your country.

- Currency
- Banknotes and checks
- Bank and government bonds and securities
- Passports and identification cards
- Copyright material or trademarks without the consent of the owner
- Postage stamps and other negotiable instruments

This list is not inclusive and no liability is assumed for either its completeness or accuracy. In case of doubt, contact your legal counsel.