


MiniKeyboard Instructions

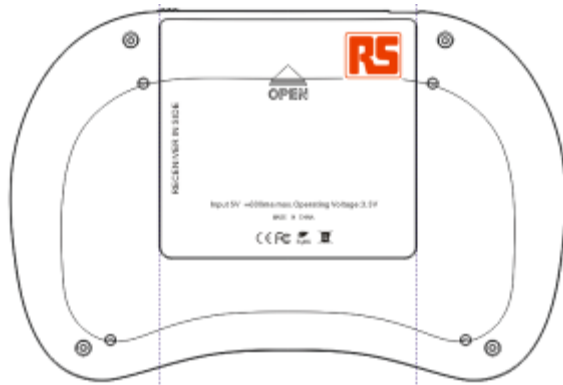

open players



open searching



open mail box



open my computer



mute



open the browser home page



mouse left



mouse right



FN+Lock Selection

Adjustable mouse speed two speed can be adjustable



FN+Touch the board the scrollbar

look through the web

Safety Precautions

Safety Matters

To avoid injury, death of personnel or damage to the equipment, the operator must refer to the explanations in this User's Manual

Battery: there is a lithium-ion rechargeable battery in this device.

Don't water this device, or put it in a humid environment for a long time, or the device will be damaged.

Attention to traffic safety

(CAR PC): Do not use the device while driving. When you want to use it, please park your car.

Turn off this device on planes

This Electronic wireless product can disturb the communications systems of planes. Please turn it off before boarding.

In vicinity of dangerous goods to be shut down

In gas station and close to fuel and chemical agents and other hazardous materials areas, please turn the device off.

Interference

All wireless devices may be subject to interference, thus affecting the performance of this product.

Turn off this device in hospital

Please turn the device off in areas with “no wireless device” indication. Wireless devices may interfere with implanted cardiac pacemakers, hearing aids and other medical implant devices.

Accessories

Only use factory specified parts. Please use the supplied travel Charging cable. The use of other charging devices may be dangerous.

Overview

This is a wonderful combo, 2.4GHz MiniWireless QWERTY keyboard, TouchPad combo, with USB interface Adapter For the lecturer, sales manager, presenter, from within a 30' radius make a presentation and operate PC wirelessly. Change slides and screen options, write on the screen, emphasize words and objects just by using this wireless Mini Keyboard and Mouse with Touch Pad. For people who want to watch internet TV play on their standard TV, via

broadband and a PC like NBC,ABC,FOX and IPTM Android TV Box, if use this wireless mini combo, who can sit in comfortable chair and select viewing pleasures without walking to computer to change channels or scroll through options.

Introduction

Product overview

Touchpad

This product was added to the innovative function Of the mouse wheel, when you press the Fn button with your fingers touch anywhere in the sliding region, can facilitate the realization of the mouse wheel functions. This is human design, it can be easier to browse the web better, edit documents.

Connecting the receiver

Slide the receiver out from the side of keyboard, and insert into the devices with a standard USB interface. Once connected, slide the power switch to the “On” position which located on the left side of the unit to establish the connection.

Auto sleep and wake feature

The keyboard also features an auto sleep and auto wake mode. If there is a long period of inactivity, the keyboard will automatically go into a sleep mode. During the sleep mode, the user can wake the unit up by pressing any key. The 2.4 GHz receiver and

keyboard's RF indicator will continue to flash and will not power down.

Interference

After finishing using the keyboard, push the switch to the off position to power off the keyboard. The USB receiver should be plugged out of the PC and placed back in the keyboard so it is being kept safely.

Charging the battery (Only for Configure A)

The device is built-in lithium-ion battery, please use only approved data lines and chargers. Fully charge the unit before operating for the first time. This device can be used when charging, but will extend the charging time; When the battery is low, the low-voltage light will flash to warn the user. The unit will automatically turn off the battery has been depleted.

Notes : This product has the configuration of A and B configuration can choose Configure A: lithium battery version, this version built in rechargeable lithium battery, additional charge USB line.

Configure B: Install AAA* 2 battery, this version dose not support the charging function.

Appendix

Technical parameters

Specification

Measurements (LxWxH): 146.8x97.5x19mm

Weight (grams): 110g

Operational Range: up to 10 meters

Transmit power: +5db Max

Operation voltage: 3.3V

Operation current: <50mA

Charging current: <300mA

Sleep current: <1mA

Computer system requirements

Windows 2000

Windows XP, Vista, Windows CE, Windows 7

Linux (Debian-3.1, Redhat-9.0 Ubuntu-8.10

Fedora-7.0 tested)

Android/Google/Smart TV

Maintenance

Do not attempt to disassemble the device or replace rechargeable battery. Doing so will void the warranty. The battery will discharge if stored for a long period of time without usage. Use the specified charger. Disconnect the device after the battery has been fully charged. Overcharging the battery. Do not expose the device in extreme heat or cold. Extreme temperatures will cause the life span of the battery to shorten. Use only a damp cloth with mild soap to

clean the device. Solvents and other cleaning agents may cause damage to the device.

Troubleshooting

Below are some basic troubleshooting scenarios for the device.

Please contact support from the place of purchase if you are unable

to resolve any issue with the device. Problem Possible issue

Solution

unit does not respond	<ol style="list-style-type: none">1. Low battery power.2. Unit is not turned on.	<ol style="list-style-type: none">1. Configure A: charge the device for at least 15 minutes. Configure B: Replacement of the AAA.2 battery2. Check if the switch selected to the "ON" position.
Keyboard can not establish a connection to the receiver.	<ol style="list-style-type: none">1. The receiver may not be inserted correctly	<ol style="list-style-type: none">1. Disconnect and reconnect the receiver to the USB port.

<p>The mouse pointer moves erratically and/or unresponsive.</p>	<p>1. Device may not be Within optimal range of the receiver 2.Low voltage 3.Dust or oil on the touching.</p>	<p>1. Bring the unit closer to the receiver. 2. Please recharge(for Configure A) or Replace the battery(for Configure B) 2. Clean the touchpad with a damp cloth.</p>
<p>The unit does not charge (only for Configure A)</p>	<p>1. Defective battery. 2. Check connections</p>	<p>1.Contact your local dealer for replacements. 3. Verify if the device is securely connected to the charger.</p>

Maintenance

In line with the policy of continued development The manufacturer reserves the right to amend the specifications without prior notification, The pictures and date in the stylebook are consult only, If there is fluctuation. According to the real object please. Since devices using 2.4G technology communicate using radio waves, your device and the other devices do not need to be in direct line-of-sight. The connection can be subject to interference from obstructions, such as walls, or other electronic devices