



brim[®]

since 1961

14 Cup Programmable
Coffee Maker { Instruction Manual



Table of Contents

Important Safeguards	2-4
Additional Important Safeguards	5-6
Notes on the Plug.....	6
Notes on the Cord	7
Plasticizer Warning.....	7
Electric Power	7
Carafe Safety Precautions.....	8
Coffee Yield	9
Gold Tone Coffee Filter Basket	9
Getting to Know Your brim 14 Cup Programmable Coffee Maker	10-12
Before Using for the First Time	13
Perfect the Art of Coffee Brewing.....	14
Programming Your Coffee Maker	14
24 Hour Clock.....	14-15
Programming Future Brew	15
Brew Strength Selection (REG / BOLD)	15
1 – 4 Cup Mode.....	16
Keep Warm Cycle	16
Auto Shut Off.....	16
Brew Cycle	17-18
Pause & Serve	18
Brewing a Second Carafe of Coffee.....	19-20
Hints for Great Tasting Coffee.....	20
User Maintenance Instructions	20
Care & Cleaning Instructions.....	20-21
Clean Cycle	21-22
Storing Instructions	22
Warranty	23-24
Tasting Notes.....	25-28

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. READ ALL INSTRUCTIONS.

2. Do not touch hot surfaces. Use handles or knobs only.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
4. Children should be supervised to ensure that they do not play with the appliance .
5. Close supervision is necessary when any appliance is used by or near children.
6. In order to minimize the risk of property damage, never place the Coffee Maker under cabinets. Make sure the area several feet above the Coffee Maker is clear from all furniture or cabinetry.
7. Do not open Coffee Maker lid while coffee is brewing. Scalding may occur if the lid is lifted during the brewing cycle.
8. Do not use outdoors.
9. Prior to unplugging, make sure that the Coffee Maker is not in brewing mode. Press the BREW/OFF button to turn the Coffee Maker OFF. Press the PROGRAM button if it is illuminated. To disconnect,. Immediately remove plug from wall outlet.

- 
- 
- 
10. Unplug appliance from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning.
 11. To protect against fire or electrical shock, do not immerse cord, plugs, or appliance in water or other liquids.
 12. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.

NOTE: DO NOT ATTEMPT TO REPAIR THE UNIT YOURSELF. THIS WILL VOID THE WARRANTY.

13. The use of accessory attachments is not recommended by the appliance manufacturer and may result in fire, electric shock or injury to persons.
14. Never move the appliance by pulling the cord. Do not let the cord hang over the edge of a table or counter or touch hot surfaces.
15. Stand the appliance on a table or flat surface.
16. Do not use a cracked glass carafe or a carafe that has a loose or weakened handle.
17. Only use the glass carafe with this appliance. Handle with care as the glass is very fragile.
18. Make sure the flavor infusion tube is in good condition before inserting into the carafe. Position the carafe lid over carafe handle, press down to make sure it is securely locked in place.
19. Never use your Coffee Maker without water in the water tank.

- 
- 
- 
- 20. Do not place appliance on or near a hot gas or electric burner or in a heated oven.
 - 21. The carafe is designed for use with this appliance. It must never be used on a range top.
 - 22. Do not set hot glass carafe on a wet or cold surface.
 - 23. Do not clean glass carafe or carafe lid with cleaners, steel wool pads, or other abrasive material.
 - 24. Unplug the power cord from the electrical outlet when the Coffee Maker is not in use, left unattended, or when the carafe is empty.
 - 25. Do not use this appliance for other than its intended use.
 - 26. Scalding may occur if the lid is removed during the brewing cycles.
 - 27. To reduce the risk of electric shock, do not mount Coffee Maker over a sink.
 - 28. To reduce the risk of fire, do not store anything directly on top of the Coffee Maker when the appliance is in operation.

FOR HOUSEHOLD USE ONLY

SAVE THESE INSTRUCTIONS

ADDITIONAL IMPORTANT SAFEGUARDS

WARNING: This appliance generates heat and escaping steam during use. Proper precautions must be taken to prevent the risk of burns, fires, or other injury to persons or damage to property.

1. All users of this appliance must read and understand this instruction manual before operating or cleaning this appliance.
2. The cord to this appliance should be plugged into a 120V AC electrical outlet only.
3. Use water only in this appliance! Do not put any other liquids or food products in this appliance. Do not mix or add anything to the water placed in this appliance, except as instructed in the User Maintenance Instructions to clean the appliance.
4. DO NOT attempt to move an appliance containing hot liquids. Allow appliance to cool completely before moving.
5. Keep appliance at least 4 inches away from walls or other objects during operation. Do not place any objects on top of appliance while it is operating. Place the appliance on a surface that is resistant to heat.
6. If this appliance begins to malfunction during use, immediately unplug the cord. Do not use or attempt to repair the malfunctioning appliance.

7. If this appliance falls or accidentally becomes immersed in water or any other liquid, unplug it immediately. Do not reach into the water! Do not use this appliance after it has fallen into or has become immersed in water.
8. The appliance must be left to cool down sufficiently before adding more water to avoid exposure to steam.
9. Always use fresh, cool water in your appliance. Warm water or other liquids, except as listed in cleaning section, may cause damage to the appliance.
10. DO NOT put carafe or carafe lid into a microwave oven.
11. DO NOT leave empty carafe on warming plate when appliance is turned ON, as the carafe may crack or become otherwise damaged.
12. The Pause & Serve flow valve is located on the bottom of the removable filter holder and is activated when the carafe is removed. This design makes it possible for you to remove the carafe and pour a cup of coffee before the entire carafe is brewed.

CAUTION: To prevent injury when utilizing the auto Pause & Serve feature, replace carafe within 30 seconds of removing during brewing process.

Notes on the Plug

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

Notes on the Cord

- a) A short power-supply cord (or detachable power-supply cord) is to be provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
- b) Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- c) If a long detachable power-supply cord or extension cord is used:
 - 1) The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance;
 - 2) If the appliance is of the grounded type, the extension cord should be a grounding- type 3-wire cord; and
 - 3) The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.

Plasticizer Warning

CAUTION: To prevent Plasticizers from migrating to the finish of the counter top or table top or other furniture, place NON-PLASTIC coasters or place mats between the appliance and the finish of the counter top or table top. Failure to do so may cause the finish to darken; permanent blemishes may occur, or stains can appear.

Electric Power

If the electrical circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a separate electrical circuit from other appliances.

CARAFE SAFETY PRECAUTIONS

1. Make sure the flavor infusion tube is in good condition before inserting into the carafe.
2. Do not use a cracked carafe or any carafe with a loose or weakened handle.
3. This carafe is designed to be used only on the warming plate of your Coffee Maker. Do not use in a conventional oven or on any stove top.
4. To avoid breakage, handle carafe with care. Avoid impact. Glass will break as a result of impact. Use care when filling with water to avoid hitting faucet.
5. Do not place hot carafe on cool or wet surface. Allow carafe to cool before washing or adding liquids.
6. Do not set empty carafe on a hot heating surface. Do not clean with steel wool pads, abrasive cleanser, or any other materials that may scratch.
7. Do not bump or scratch the carafe. Remove carafe from the warming plate to avoid burning or scorching. Never operate the Coffee Maker with a carafe that has boiled dry.
8. Discard carafe if it is cracked, scratched, or heated while empty for an extended period of time.
9. Press down on the top of the carafe handle to make sure the lid is securely locked in place before serving coffee.

Coffee Carafe Yield

14 Cup Coffee Maker: 14 (5 oz.) cups

NOTE: A 5 oz. cup is the American industry standard and is used by most Coffee Maker manufacturers. To fill your favorite over-sized mug(s), fill Coffee Maker tank with enough water for 3 to 4 cups (15 to 20 ounces) per mug.

WARNING: TO AVOID THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT UNSCREW THE UNDERSIDE COVER. THERE ARE NO USER-SERVICEABLE PARTS INSIDE. REPAIR SHOULD BE DONE BY AUTHORIZED SERVICE PERSONNEL ONLY.


Gold Tone Coffee Filter Basket

1. Your reusable gold tone coffee filter basket not only optimizes brewing infusion time, it eliminates the use of disposable paper filters altogether.
2. Simply place the gold tone coffee filter basket into the removable filter basket holder.
3. Unfold and use handle to lift basket of used coffee grounds up and out of the removable coffee filter; fold handle down to close the Coffee Maker lid.

Getting to Know Your **brim** 14 Cup Programmable Coffee Maker





Product may vary slightly
from illustration

1. Coffee Maker Lid with Side Tab
2. Shower Head
3. Stepped Water Tank
4. Water Level Indicator
5. Warming Plate
6. Polarized Plug (not shown)

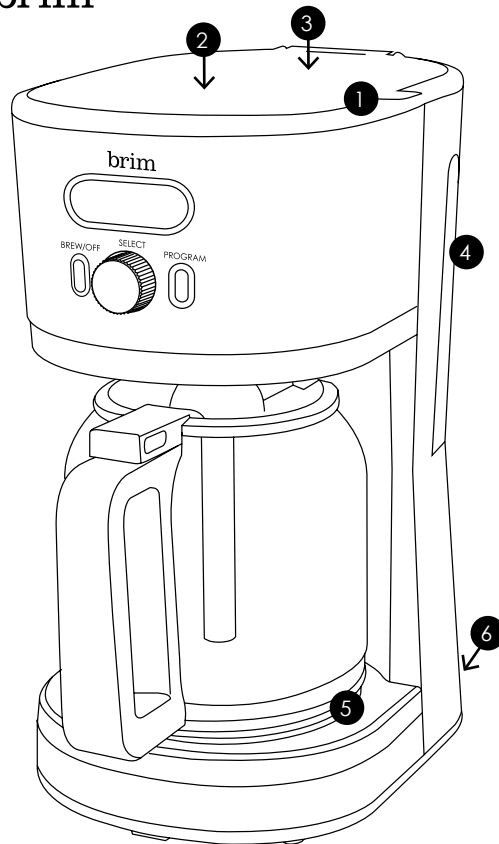

Accessories

- 7. Carafe
- 8. Flavor Infusion Carafe Lid
- 9. Carafe Handle
- 10. Gold Tone Coffee Filter with Folding Handle
- 11. Removable Filter Holder with Handle
- 12. Pause & Serve Flow Valve
- 13. Coffee Scoop

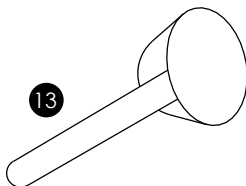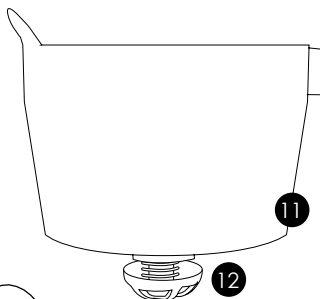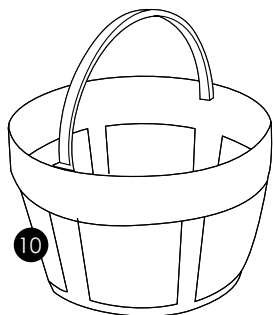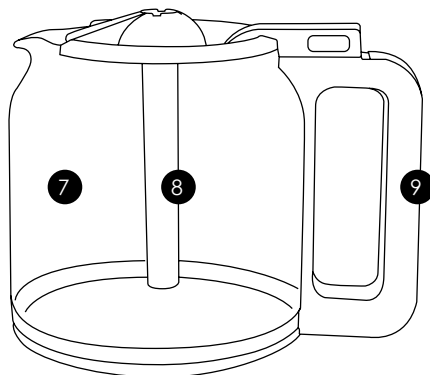

Control Panel



1. Backlighted Screen
2. White Illuminated BREW/OFF Button
3. SELECT Dial
4. White Illuminated PROGRAM Button

Before Using for the First Time

CAUTION: To protect against electrical shock, do not immerse the **brim** 14 Cup Programmable Coffee Maker or allow power cord to come into contact with water or other liquids.

1. Remove all packing material and labels from the inside and outside of the Coffee Maker. Place the unit on a flat, clean surface.
2. Before preparing coffee, thoroughly clean the glass carafe, flavor infusion carafe lid, coffee scoop, removable filter holder and gold tone coffee filter in hot, sudsy water. Rinse and dry. Replace disassembled parts.
3. Clean the inside of the Coffee Maker. Fill carafe with cold tap water and pour into water tank at the back of the unit. Center empty carafe on the warming plate. Do not add the gold tone coffee filter or ground coffee for this initial cleaning.
4. Plug the power cord into a 120V AC electrical outlet; the backlighted screen will illuminate, and "12:00 AM" will appear.
5. Press the BREW/OFF button. It will illuminate white, the backlighted screen will illuminate, the pump / heater will begin operation and water will flow into the carafe.
6. Upon completion of the brew cycle, 3 tones will sound. The screen will darken. The BREW/OFF button will remain illuminated as the Coffee Maker advances to KEEP WARM.

NOTE: At the end of the first clean water cycle, press the BREW/OFF button and allow 15 minutes for the unit to cool.

7. Brew a second carafe of fresh water.
8. Wait an additional 15 minutes to allow the Coffee Maker to cool before brewing your first carafe of coffee.

Perfect the Art of Coffee Brewing



Visit www.brim.coffee for easy to follow step-by-step video tutorials.

A fresh pot of coffee isn't just a part of your morning ritual, it is the ritual. With its large shower head for perfectly even coffee ground saturation and easy pour carafe with a flavor infusion lid for consistent brewing distribution, the **brim** 14 Cup Programmable Coffee Maker is meticulously designed to retain all the right natural flavors and aromas in your morning cup. Fully programmable up to 24 hours in advance with a freshness timer and a pause & serve function – this is how filter coffee should be.

Programming Your Coffee Maker

Your Coffee Maker is fully programmable.

- 24 hr. CLOCK enables you to program a future TIME to brew.
- PROGRAM automatically starts your Coffee Maker brewing at a future pre-programmed TIME.
- REG / BOLD adjusts brew strength.
- 1 – 4 assures perfectly brewed results for smaller quantities.
- KEEP WARM cycle is adjustable from 0 to 4 hours.
- CLEAN delivers highest temperatures and longer cleaning times.

24 Hour Clock

1. Plug the power cord into a 120V AC electrical outlet; the backlit screen will illuminate, and "12:00 AM" will appear.

NOTE: The screen will darken in 20 seconds if no further buttons are selected.

2. To set the current time, turn the SELECT dial until CLOCK appears in the left top corner of the display.
3. The default "12" or previously set HOURS will begin to flash. Rotate the SELECT dial until the current HOUR is displayed. (NOTE: Pay attention to AM and PM.)



4. In 5 seconds, the MINUTES will begin to flash. Rotate the SELECT dial until the current MINUTES are displayed.
5. In 5 seconds, if no buttons are pressed, the current TIME set will be displayed.

NOTE: The screen will darken in 20 seconds if no further buttons are selected.

Programming Future Brew

1. Press and hold the PROGRAM button. The button will illuminate white; PROGRAM appears on the left side of the display.
2. The default "12" or previously set HOURS will begin to flash. Rotate the SELECT dial until the current HOUR is displayed. (NOTE: Pay attention to AM and PM.)
3. In 5 seconds, the MINUTES will begin to flash. Rotate the SELECT dial until the current MINUTES are displayed.
4. In 5 seconds, if no buttons are pressed, the Future Brew TIME set will be displayed.

NOTE: The screen will darken in 20 seconds if no further buttons are selected. The white illuminated PROGRAM button indicates the Coffee Maker is set and ready to brew.

5. Once the current TIME reaches the pre-programmed Future Brew TIME, the Coffee Maker will begin the brew cycle. The white PROGRAM button will turn OFF. The BREW/OFF button will illuminate white, the backlit screen will illuminate, and any other pre-programmed choices will be displayed.
6. To cancel Future Brew, press either the white illuminated PROGRAM button or press the BREW/OFF button to begin brewing immediately.

Brew Strength Selection (Reg / Bold)

1. Brew Strength will automatically default to REG (regular).
2. To change, turn the SELECT dial until REG begins to flash.
3. Press the PROGRAM button and BOLD will flash. In 5 seconds, if no buttons are pressed, BOLD brew strength will be programmed, and the screen will darken.



1- 4 Cup Mode

IMPORTANT: The 1- 4 Cup Mode must be programmed immediately before brewing.

1. When brewing 1 to 4 (5 oz.) cups of coffee, the 1 - 4 Cup Mode automatically adjusts the brewing process for maximum flavor.
2. Turn the SELECT dial until "1 - 4" appears on the right side of the display.
3. Press the BREW/OFF button to begin brewing immediately.

NOTE: The Coffee Maker will not measure water quantity. When using the 1 - 4 Cup Mode, the entire water tank will brew.

Keep Warm Cycle

1. After brewing, the Coffee Maker will advance to a 2:00 hour KEEP WARM cycle. KEEP WARM may be pre-programmed from 0:00 to 4:00 hours in 30 minute increments.
2. To change, turn the SELECT dial until KEEP WARM appears on the lower right side of the display. After 5 seconds the last programmed KEEP WARM time will begin to flash on the display.
3. Turn the SELECT dial until the new desired KEEP WARM TIME is displayed.
4. In 5 seconds, if no buttons are pressed, KEEP WARM TIME will be programmed, and the screen will darken.

Auto Shut Off

The Coffee Maker will automatically shut OFF once the KEEP WARM TIME has elapsed after brewing.

Brew Cycle

IMPORTANT: For optimal brewed flavor, filtered water is preferred.

IMPORTANT: Before brewing, always check to make sure water level is past the MIN line and add water if needed. Never exceed the MAX fill line.

NOTE: The amount of brewed coffee will always be less than the amount of water placed into the water tank; as much as 10% is absorbed by coffee grounds and filter. The glass carafe markings indicate the amount of water needed in the water tank to produce the corresponding cups of brewed coffee.

1. Use the side tab to open the Coffee Maker lid.
2. Remove the flavor infusion carafe lid. Fill carafe with cold water and pour into the water tank at the back of the unit. The water level indicator can be easily viewed inside the unit.
3. Make sure the flavor infusion tube is in good condition before inserting into the carafe. Place carafe lid securely over carafe handle and press to make sure it is securely locked in position.
4. Center empty carafe on the warming plate.
5. Lower and rotate the filter holder until the filter holder handle drops down into the housing.
6. Place the gold tone coffee filter in the removable filter holder. Measure 2 level tablespoons or 1 scoop of drip or regular ground coffee for each cup of coffee desired. For stronger or milder coffee, adjust amount of coffee to suit your taste.
7. Close the Coffee Maker lid.
8. Plug the power cord into a 120V AC electrical outlet; the backlit screen will illuminate. The default REGULAR brew strength and "12:00 AM" will appear. The HOUR will flash as the Coffee Maker advances to CLOCK setting mode.

NOTE: It is not necessary to set the CLOCK to brew coffee.

NOTE: The screen will darken in 20 seconds if no further buttons are selected.

9. To begin brewing coffee immediately, press the BREW/OFF button. The button will illuminate white, the backlit screen will illuminate, default TIME and REG will be displayed.

- 
10. Perfectly tempered water will shower over the coffee bed. The flavor infusion carafe lid evenly distributes coffee throughout the brewing process to maximize the flavors and aromas of the grounds and ensure hotter, better-tasting brews.

NOTE: To interrupt the brew process at any time, press the white illuminated BREW/OFF button. The illuminated button, backlighted screen and Coffee Maker will turn OFF.

11. Upon completion of the brew cycle, 3 tones will sound. The display will darken. The BREW/OFF button will remain illuminated as the Coffee Maker advances to KEEP WARM, for 2 hours.

NOTE: To check the freshness of the brewed coffee while in the KEEP WARM cycle, press and hold the PROGRAM button to confirm how much TIME has elapsed since brewing.

12. The carafe lid should be kept in place to facilitate safe serving and help keep coffee at a proper serving temperature.

CAUTION: Press down on the top of the carafe handle to make sure the lid is securely locked in place before serving coffee.

- 
13. Press the white illuminated BREW/OFF button to turn the Coffee Maker OFF when the carafe is empty or when unit is not in use.

14. At the end of the KEEP WARM cycle, 2 tones will sound, and the Coffee Maker will turn OFF.
- 

Pause & Serve

1. To serve a cup of coffee before the brew cycle is complete, slowly remove carafe from the warming plate. Dripping will automatically cease. Return the carafe onto the warming plate; dripping will resume.

CAUTION: To prevent injury when utilizing the Pause & Serve feature, replace carafe within 30 seconds after removing during the brewing process.

2. The flow valve is located on the bottom of the filter holder and is activated when the carafe is removed. (See Figure 1.)

IMPORTANT: When replacing the filter holder, the flow valve must be properly inserted into the front cavity of the machine, so that it can be seen as it sits on the top of the carafe lid. (See Figure 1.)



Brewing a Second Carafe of Coffee

1. To brew another carafe of coffee, press the BREW/OFF button to turn the Coffee Maker OFF. Remove plug from wall outlet.

CAUTION: Failure to allow Coffee Maker to cool sufficiently could cause hot steam and spray when the water is added to the water tank. The hot steam can cause severe burns.

2. Use the side tab to lift the Coffee Maker lid.
3. Unfold the gold tone coffee filter handle to lift and remove. Discard used coffee grounds, rinse well.
4. Use the handle to lift the removable filter holder up and out of the Coffee Maker.
5. Rinse the glass carafe and removable filter holder in cool, clean water.

IMPORTANT: Before brewing a second carafe, always check to make sure water level is past the MIN line; add the desired amount of cold water into the water tank.

6. Following the detailed instructions previously described, press the BREW/OFF button to begin brewing.
- 



Hints for Great Tasting Coffee

- A clean Coffee Maker is essential for making great tasting coffee. Regular cleaning, as described in the Care & Cleaning Instructions and Descaling sections of this instruction manual is highly recommended.
- Always use fresh, cold water in your Coffee Maker.
- Finer grinds, such as drip coffee, promote fuller extraction and provide rich, full-bodied coffee. Regular grind will require slightly more coffee per cup to provide the strength of a finer grind.
- Store coffee in a cool, dry place. Once coffee has been opened, keep it tightly sealed in the refrigerator to maintain freshness.
- For optimum coffee flavor, buy whole beans and grind them finely just before brewing.

- The flavor infusion carafe lid evenly distributes coffee throughout the brewing process to maximize the flavors and aromas of the grounds and ensure hotter, better-tasting brews.
- Do not re-use coffee grounds since this will greatly impair coffee flavor.
- Reheating coffee is not recommended. Coffee is at its peak flavor immediately after brewing.
- Small oil droplets on the surface of brewed, black coffee is due to the extraction of oil from the coffee grounds. Oiliness may occur more frequently if heavily roasted coffees are used. Over extraction may also cause oiliness, indicating a need to clean your Coffee Maker.

User Maintenance Instructions

This appliance requires little maintenance. It contains no user-serviceable parts. Any servicing requiring disassembly other than cleaning must be performed by a qualified appliance repair technician.

Care & Cleaning Instructions

1. Always make sure Coffee Maker is unplugged and the warming plate is cool before attempting to clean.
2. After every use, remove the gold tone coffee filter, discard used coffee grounds, rinse thoroughly.
3. Wash the removable filter holder and glass carafe in hot, sudsy water. If necessary, scrub the inside of the carafe lid with a soaped kitchen brush.

NOTE: The carafe lid, coffee scoop, gold tone coffee filter and removable filter holder are top rack dishwasher-safe. **WARNING:** When cleaning the carafe in the dishwasher, special care must be taken to set carafe away from other items so that it can not touch anything during the dishwashing process.

WARNING: To avoid breakage, handle carafe with care. Avoid impact. Glass will break as a result of impact. Use care when filling with water to avoid hitting faucet.

- 
4. Wipe the exterior with a damp cloth to remove superficial stains. For stubborn stains, use a nylon or plastic pad with a non-abrasive cleanser. Do not use metal scouring pads or abrasive cleansers.
 5. Dry and replace disassembled parts. Make sure the removable filter holder drops down and is properly seated into the housing.
 6. Close the lid.

Clean Cycle

IMPORTANT! Special descaling of your Coffee Maker is recommended at least once a month, depending on frequency of use and quality of water used in the unit. If water in your area is especially hard, the following descaling procedure should be performed every 2 weeks, since minerals in water can detract from the flavor of the coffee and possibly lengthen brew time.

NOTE: During the CLEAN cycle, more steam will occur than during normal coffee brewing.

IMPORTANT: After 300 brews, CLEAN will automatically flash on the screen to alert you that CLEAN is necessary.



1. Fill carafe with 6 cups of white vinegar and 4 cups of cold water. Pour cleaning solution into water tank.
2. Insert the empty gold tone filter basket into the filter basket holder and close lid.
3. Make sure the lid of the carafe is in place and center the empty carafe on the warming plate.
4. Turn the SELECT dial until CLEAN appear in the right top corner of the display.
5. Press the BREW/OFF button. The button will illuminate white, the backlighted screen will illuminate, current TIME and CLEAN will be displayed.
6. When the cleaning cycle is complete, the illuminated BREW/OFF button will turn OFF and 3 tones will sound.

- 
7. Discard all water/vinegar solution from carafe and water tank.
 8. Allow Coffee Maker to cool for 15 minutes.
 9. Rinse thoroughly by brewing 2 - 3 carafes full of cold water with the gold tone coffee filter fitted into the removable filter holder.

Storing Instructions

1. Unplug unit and allow to cool.
2. Store Coffee Maker in its box or in a cool, dry place.
3. Never store unit while it is still plugged in.

Limited Two-Year Warranty

SENSIO Inc. hereby warrants that for a period of **TWO YEARS** from the date of purchase, this product will be free from mechanical defects in material and workmanship, and for 90 days in respect to non-mechanical parts. At its sole discretion, SENSIO Inc. will either repair or replace the product found to be defective, or issue a refund on the product during the warranty period.

The warranty is only valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt, as proof of purchase is required to obtain warranty validation. Retail stores selling this product do not have the right to alter, modify, or in any way revise the terms and conditions of the warranty.

Exclusions:

The warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use of the product, use of improper voltage or current, improper routine maintenance, use contrary to the operating instructions, disassembly, repair, or alteration by anyone other than qualified SENSIO Inc. personnel. Also, the warranty does not cover Acts of God such as fire, floods, hurricanes, or tornadoes.

SENSIO Inc. shall not be liable for any incidental or consequential damages caused by the breach of any express or implied warranty. Apart from the extent prohibited by applicable law, any implied warranty of merchantability or

fitness for a particular purpose is limited in time to the duration of the warranty. Some states, provinces or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, and therefore, the above exclusions or limitations may not apply to you. The warranty covers specific legal rights which may vary by state, province and/or jurisdiction.

How To Obtain Warranty Service:

You must contact Customer Service at our toll-free number: 1-866-832-4843. A Customer Service Representative will attempt to resolve warranty issues over the phone. If the Customer Service Representative is unable to resolve the problem, you will be provided with a case number and asked to return the product to SENSIO Inc. Attach a tag to the product that includes: your name, address, daytime contact telephone number, case number, and description of the problem.

Also, include a copy of the original sales receipt. Carefully package the tagged product with the sales receipt, and send it (with shipping and insurance prepaid) to SENSIO Inc.'s address. SENSIO Inc. shall bear no responsibility or liability for the returned product while in transit to SENSIO Inc.'s Customer Service Center.

brim[®]
since 1961

Perfect the art of coffee tasting.
For tips on how to use the **brim** tasting wheel visit www.brim.coffee

Coffee Origin/Name: _____

 
Roaster: _____ Roast Date: _____

Variety: _____

Price: _____ Brew Date: _____

Notes: _____

Tasting Wheel

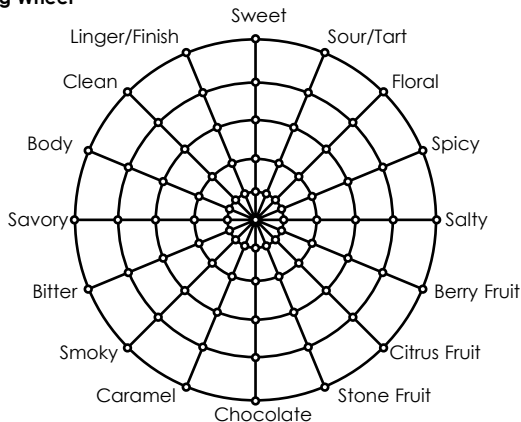

Rating



brim

Coffee Origin/Name: _____

 
Roaster: _____ Roast Date _____

Variety: _____

Price: _____ Brew Date: _____

Notes: _____

Tasting Wheel

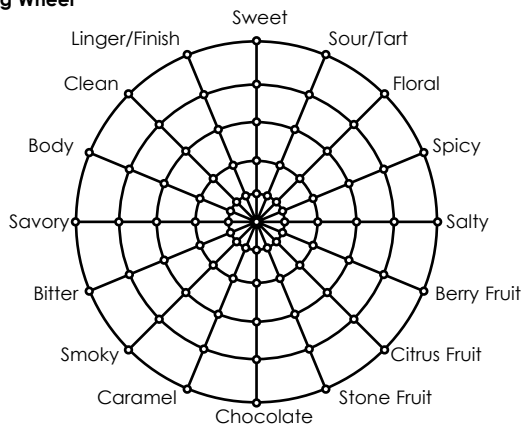

Rating



brim

Coffee Origin/Name: _____

 
Roaster: _____ Roast Date _____

Variety: _____

Price: _____ Brew Date: _____

Notes: _____

Tasting Wheel

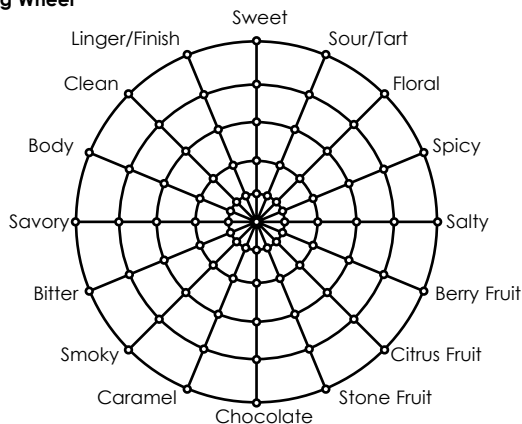

Rating



brim



Coffee Origin/Name: _____

 
Roaster: _____ Roast Date _____

Variety: _____

Price: _____ Brew Date: _____

Notes: _____

Tasting Wheel

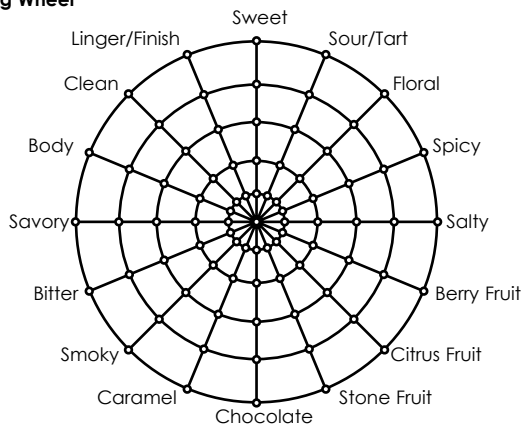

Rating



brim



Perfect the art of artisanal brewing
and discover great video tutorials, recipes,
tips & more by following us.

@brimcoffee      www.brim.coffee

Copyrights and Trademarks of BRIM Brands, LLC, including BRIM™ and BRIM®,
are used under license from BRIM Brands, LLC.

Sensio Inc., Montréal, Canada H3C 4S9
For customer service questions or comments 1-866-832-4843

SO-315938