



Heated Grip Kit

for Honda Motorcycles

Operation Manual

Thank you for purchasing a Honda Motorcycle Heated Grip Kit.


Read this Operation Manual carefully before use and store it in a safe and convenient place where you can refer to it easily whenever necessary.

- This heated grip kit is designed specifically for Honda motorcycles. Consult with your authorized dealer for the applicable models.
- Please note that American Honda Motor Co., Inc. does not assume any responsibilities for any damage (e.g. personal injury, machine failure, equipment damage, etc.) occurred by use of this accessory on a model that is not specified.
- Proper installation of this accessory on Honda motorcycles requires technical skill and experience. For safety, consult with your authorized Honda motorcycle dealer for installation and connecting the wires.
- This Operation Manual must be attached to this accessory when it is resold.

PARTS LIST

This heated grip kit consists of the following parts.

Check for missing or wrong parts by checking the parts against this list before installation.

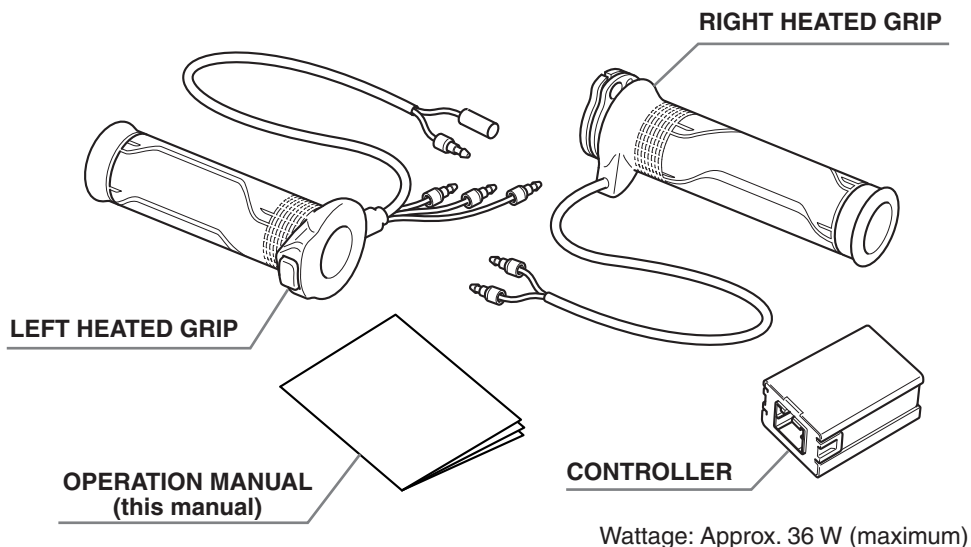

INSTALLATION

NOTE:

- The installation of this kit requires a model-specific adapter kit that includes detailed installation instructions. Consult with your authorized Honda motorcycle dealer and purchase the correct adapter that is sold separately.


OPERATION

- Wear gloves whenever operating the heated grips.
- Note that the heater temperature is proportional to the atmospheric temperature. Do not use a high temperature setting on hot days.
- When the heated grip rubber has become damaged, replace it with a new one.
- Do not wash the motorcycle with a high-pressure washer, as this can cause the heated grip to fail.

HEATED GRIP SWITCH

OPERATION

- The heated grip can be turned ON or OFF by pressing and holding the heated grip switch for at least 1 second.
- Changing the temperature: The heated grip turns ON at Level 3 (maximum), press and hold the heated grip switch for at least one second to select the next lower level. The heated grip turns OFF when switched from Level 1.
- The heated grip switch turns OFF by turning the motorcycle's ignition switch OFF.

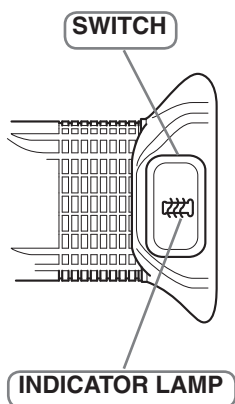


- The indicator lamp indicates the heated grip condition, set temperature, and the motorcycle's battery condition.

OFF Not lit or flashing constantly when the motorcycle's battery voltage is low.

Level 3 3 flashes, repeated 7 times, then stays lit

Level 2 2 flashes, repeated 7 times, then stays lit

Level 1 1 flash, repeated 7 times, then stays lit

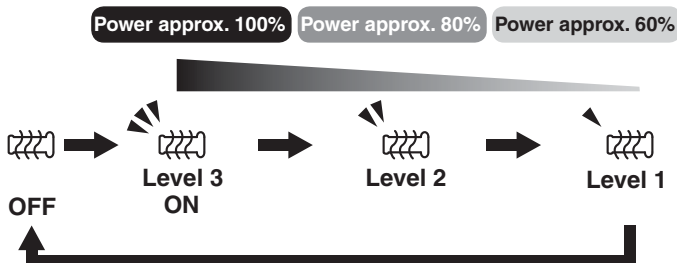

- When the ignition switch is ON and the motorcycle's battery voltage is low, the indicator flashes.

Charge the battery or troubleshoot the charging system.

If the flashing continues, replace the heated grip because it may be damaged.

- If the battery voltage becomes low during heated grip use, the heated grip will switch OFF and the indicator flashes. The indicator will continue to flash even when the battery voltage recovers after riding.

To re-activate the heated grip, press the switch once to turn the heated grip OFF, and then press it again. After the battery voltage has recovered, the heated grip can be used.

- Do not use the heated grip for a long time with the engine stopped or idling. This can discharge the battery.
- If the heated grip performs abnormally, please consult with your Honda motorcycle dealer.

