



Operating Instructions



Decentralized Drive and Positioning Controller **MOVIPRO[®] SDC**





Contents

1	General Information	5
1.1	How to use the operating instructions	5
1.2	Structure of the safety notes	5
1.3	Right to claim under limited warranty	6
1.4	Exclusion of liability	6
1.5	Copyright.....	6
2	Safety Notes	7
2.1	Preliminary information	7
2.2	General information	7
2.3	Target group	8
2.4	Designated use	8
2.5	Functional safety technology	8
2.6	Transport.....	9
2.7	Installation/assembly.....	9
2.8	Electrical connection	10
2.9	Safe disconnection.....	10
2.10	Startup/operation	11
2.11	Inspection/maintenance	11
3	Unit Structure	12
3.1	Unit designation	12
3.2	Short designations	13
3.3	Scope of delivery	13
3.4	Nameplates	14
3.5	Function units.....	15
3.6	Basic unit	18
3.7	Accessories.....	21
3.8	Unit components	26
4	Integrated Safety Technology.....	30
4.1	Standards.....	30
4.2	Safety functions	30
4.3	Safety concept	30
4.4	Additional information	30
5	Mechanical Installation.....	31
5.1	General information	31
5.2	Minimum clearance.....	31
5.3	Cooling.....	32
5.4	Mounting position.....	33
5.5	Assembly	34
6	Electrical Installation	42
6.1	General information	42
6.2	Electromagnetic compatibility (EMC).....	42
6.3	Cable installation.....	42
6.4	Information regarding UL	43



6.5	Shielding	45
6.6	Unit output.....	45
6.7	Installation altitudes higher than 1000 m asl.....	46
6.8	Protective measures against electrical hazards.....	47
6.9	Terminal strips	51
6.10	Electrical connections	56
6.11	Power distribution with network supply	105
7	Startup.....	106
7.1	General information	106
7.2	Requirements.....	107
7.3	Sequence.....	108
7.4	Setting the station address (PROFIBUS).....	109
7.5	Setting the station address (DeviceNet)	111
7.6	Connection to a PC/laptop	113
8	Operation	114
8.1	Duty types	115
8.2	Brake control operation.....	116
8.3	Status and error messages.....	117
8.4	Status LED	119
9	Service	122
9.1	Inspection/maintenance	122
9.2	Unit replacement.....	122
9.3	Encoder exchange	124
9.4	Fault information of the frequency inverter	124
9.5	MOVIPRO® SDC error list	126
9.6	SEW Electronics Service	136
9.7	Shutdown	136
9.8	Storage	137
9.9	Disposal	137
10	Technical Data.....	138
10.1	Standards and certification	138
10.2	Design with 400 V/50 Hz operating point.....	139
10.3	Brake control.....	140
10.4	Digital inputs	140
10.5	Digital outputs	140
10.6	General electronics	141
10.7	Communication and control unit	141
10.8	Dimension drawings.....	144
10.9	Hybrid cable type "D"	147
10.10	Hybrid cable type "E"	149
10.11	Additional documentation.....	150
11	Declaration of Conformity	151
12	Address List	152
	Index.....	162



1 General Information

1.1 How to use the operating instructions

The operating instructions are an integral part of the product and contain important information for operation and service. The operating instructions are written for all employees who assemble, install, startup, and service this product.

The operating instructions must be legible and accessible at all times. Make sure that staff responsible for the plant and its operation, as well as persons who work independently on the unit, have read the operating instructions carefully and understood them. If you are unclear about any of the information in this documentation, or if you require further information, contact SEW-EURODRIVE.

1.2 Structure of the safety notes

1.2.1 Meaning of the signal words

The following table shows the grading and meaning of the signal words for safety notes, notes on potential risks of damage to property, and other notes.

Signal word	Meaning	Consequences if disregarded
▲ DANGER	Imminent danger	Severe or fatal injuries
▲ WARNING	Possible dangerous situation	Severe or fatal injuries
▲ CAUTION	Possible dangerous situation	Minor injuries
NOTICE	Possible damage to property	Damage to the drive system or its environment
INFORMATION	Useful information or tip: Simplifies the handling of the drive system.	

1.2.2 Structure of the section-related safety notes

Section safety notes do not apply to a specific action, but to several actions pertaining to one subject. The used symbols indicate either a general or a specific hazard.

This is the formal structure of a section safety note:



▲ SIGNAL WORD

Type and source of danger.

Possible consequence(s) if disregarded.

- Measure(s) to prevent the danger.

1.2.3 Structure of the embedded safety notes

Embedded safety notes are directly integrated in the instructions just before the description of the dangerous action.

This is the formal structure of an embedded safety note:

- **▲ SIGNAL WORD** Nature and source of hazard.
Possible consequence(s) if disregarded.
 - Measure(s) to prevent the danger.



1.3 Right to claim under limited warranty

A requirement of fault-free operation and fulfillment of any rights to claim under limited warranty is that you adhere to the information in the operating instructions. Therefore, read the operating instructions before you start working with the unit.

1.4 Exclusion of liability

You must comply with the information contained in these operating instructions to ensure safe operation of the MOVIPRO® and to achieve the specified product characteristics and performance requirements. SEW-EURODRIVE does not assume liability for injury to persons or damage to equipment or property resulting from non-observance of these operating instructions. In such cases, any liability for defects is excluded.

1.5 Copyright

© 2010 – SEW-EURODRIVE. All rights reserved.

Unauthorized duplication, modification, distribution or any other use of the whole or any part of this documentation is strictly prohibited.



2 Safety Notes

The following basic safety notes must be read carefully to prevent injury to persons and damage to property. The operator must ensure that the basic safety notes are read and observed. Make sure that persons responsible for the system and its operation, as well as persons who work independently on the unit, have read through the operating instructions carefully and understood them. If you are unclear about any of the information in this documentation, please contact SEW-EURODRIVE.

2.1 Preliminary information

The following safety notes are primarily concerned with the use of MOVIPRO® units. If you use other SEW components, also refer to the safety notes for the respective components in the corresponding documentation.

Please also observe the supplementary safety notes in the individual sections of this documentation.

2.2 General information

WARNING

Depending on its enclosure, MOVIPRO® may have live, uninsulated as well as moving or rotating parts and hot surfaces during operation.

Severe or fatal injuries.

- All work related to transportation, storage, setup/mounting, connection, startup, maintenance and repair may only be carried out by qualified personnel, in strict observation of:
 - The relevant detailed documentation.
 - Warning and safety signs on the MOVIPRO®.
 - All other relevant project planning documents, operating instructions and wiring diagrams.
 - The specific regulations and requirements for the system.
 - The national/regional regulations governing safety and the prevention of accidents.
- Never install damaged products.
- Submit a complaint to the shipping company immediately in the event of damage.



Removing covers without authorization, improper use as well as incorrect installation or operation may result in severe injuries to persons or damage to property.

Refer to the documentation for more information.



2.3 Target group

Any mechanical work may only be performed by adequately qualified personnel. Qualified staff in the context of this documentation are persons familiar with design, mechanical installation, troubleshooting and servicing of the product who possess the following qualifications:

- Training in mechanical engineering, e.g. as a mechanic or mechatronics technician (final examinations must have been passed).
- They are familiar with this documentation.

Any electronic work may only be performed by adequately qualified electricians. Qualified electricians in the context of this documentation are persons familiar with electrical installation, startup, troubleshooting and servicing of the product who possess the following qualifications:

- Training in electrical engineering, e.g. as an electrician or mechatronics technician (final examinations must have been passed).
- They are familiar with this documentation.

In addition to that, they must be familiar with the relevant safety regulations and laws, especially with the requirements of the performance levels according to DIN EN ISO 13849-1 and all other standards, directives and laws specified in this documentation. The persons mentioned must have the authorization expressly issued by the company, to operate, program, configure, label and ground units, systems and circuits in accordance with the standards of safety technology.

All work in further areas of transportation, storage, operation and waste disposal may be carried out only by persons who are trained appropriately.

2.4 Designated use

MOVIPRO[®] is a component intended for installation in electrical systems or machines. MOVIPRO[®] is designed for mobile and stationary use in industrial and commercial systems for the operation of AC asynchronous motors with squirrel-cage rotors or permanent-field AC synchronous motors. The motors must be suitable for operation with inverters. Do not connect any other loads to MOVIPRO[®]. MOVIPRO[®] can take on control and communication tasks.

In case of installation in electrical systems or machines, startup of the MOVIPRO[®] units (i.e. start of designated operation) is prohibited until it is determined that the machine meets the requirements stipulated in the EC Directive 2006/42/EC (machine guideline). Observe EN 60204-1. Startup (i.e. the start of designated use) is only permitted under observance of the EMC (2004/108/EC) directive.

MOVIPRO[®] meets the requirements stipulated in the low voltage directive 2006/95/EC. The standards given in the declaration of conformity apply to the MOVIPRO[®] units.

Technical data and information on the connection conditions are provided on the nameplate and in the documentation. Always comply with the data and conditions.



2.5 Functional safety technology

MOVIPRO® may not perform safety functions without higher-level safety systems unless these functions are described and expressly permitted in the relevant documentation.

2.6 Transport

Inspect the shipment for any damage that may have occurred in transit as soon as you receive the delivery. Inform the shipping company immediately. It may be necessary to preclude startup.

Observe the following instructions when transporting MOVIPRO®:

- Cover the connections with the supplied protective caps before transportation.
- Only place the unit on the cooling fins or on the side without connectors during transportation.
- Make sure that the unit is not subject to mechanical impact during transport.

Use suitable, sufficiently rated handling equipment if necessary. Prior to startup, remove the securing devices used for transportation.

Observe the information on climatic conditions as stated in chapter "Technical Data".

2.7 Installation/assembly

Ensure that the units are installed and cooled according to the regulations in the related documentation.

Protect the MOVIPRO® unit from excessive strain. Ensure that components are not deformed and/or insulation spaces are maintained, particularly during transportation. Electric components must not be mechanically damaged or destroyed.

The following applications are prohibited unless the unit is explicitly designed for such use:

- Use in potentially explosive atmospheres.
- Use in areas exposed to harmful oils, acids, gases, vapors, dust, radiation, etc.
- Use in applications that are subject to mechanical vibration and shock loads in excess of the requirements in EN 61800-5-1.

Observe the notes in the "Mechanical Installation" section.



2.8 *Electrical connection*

Observe applicable national accident prevention regulations when working on a live MOVIPRO®.

Perform electrical installation according to the pertinent regulations (e.g. cable cross-sections, fusing, protective conductor connection). The documentation contains additional notes.

Preventive measures and protection devices must comply with applicable regulations (e.g. EN 60204-1 or EN 61800-5-1).

Necessary protective measures for MOVIPRO® are:

Type of power transmission	Protective measure
Direct power supply	• Protective grounding

2.9 *Safe disconnection*

MOVIPRO® meets all of the requirements for the safe disconnection of power and electronic connections in accordance with EN 61800-5-1. To ensure safe disconnection, all connected circuits must also satisfy the requirements for safe disconnection.



2.10 Startup/operation

Do not deactivate monitoring and protection devices even for a test run.

When in doubt, switch off the MOVIPRO® whenever changes occur in relation to normal mode (e.g. increased temperatures, noise, oscillation). Determine the cause of the fault and consult SEW-EURODRIVE, if necessary.

Where required, systems with integrated MOVIPRO® units must be equipped with additional monitoring and protection devices in accordance with the respective applicable safety regulations, e.g. the law governing technical equipment, accident prevention regulations, etc.

Additional protective measures may be necessary for applications with increased potential risk. You have to check the effectiveness of protection devices each time you change the configuration.

Connections which are not being used must be covered with the supplied protection caps during operation.

Do not touch live components or power connections immediately after disconnecting the MOVIPRO® from the voltage supply because some capacitors may still be charged. Adhere to a minimum switch-off time of 10 minutes. Observe the corresponding labels on the MOVIPRO® unit.

When the unit is switched on, dangerous voltages are present at all power connections as well as at any connected cables and motor terminals. This also applies even when the unit is inhibited and the motor is at standstill.

The fact that the status LED and other display elements are no longer illuminated does not indicate that the unit has been disconnected from the supply system and no longer carries any voltage.

Mechanical blocking or internal safety functions of the unit can cause a motor standstill. Eliminating the cause of the problem or performing a reset may result in the drive restarting automatically. If, for safety reasons, this is not permitted for the driven machine, disconnect the unit from the supply system before correcting the error.

Important – Danger of burns: During operation, the surface temperature of MOVIPRO® and of the external options (e.g. the braking resistor) can exceed 70 °C.

2.11 Inspection/maintenance



⚠ WARNING

Exposed, live parts inside the unit.

Severe or fatal injuries.

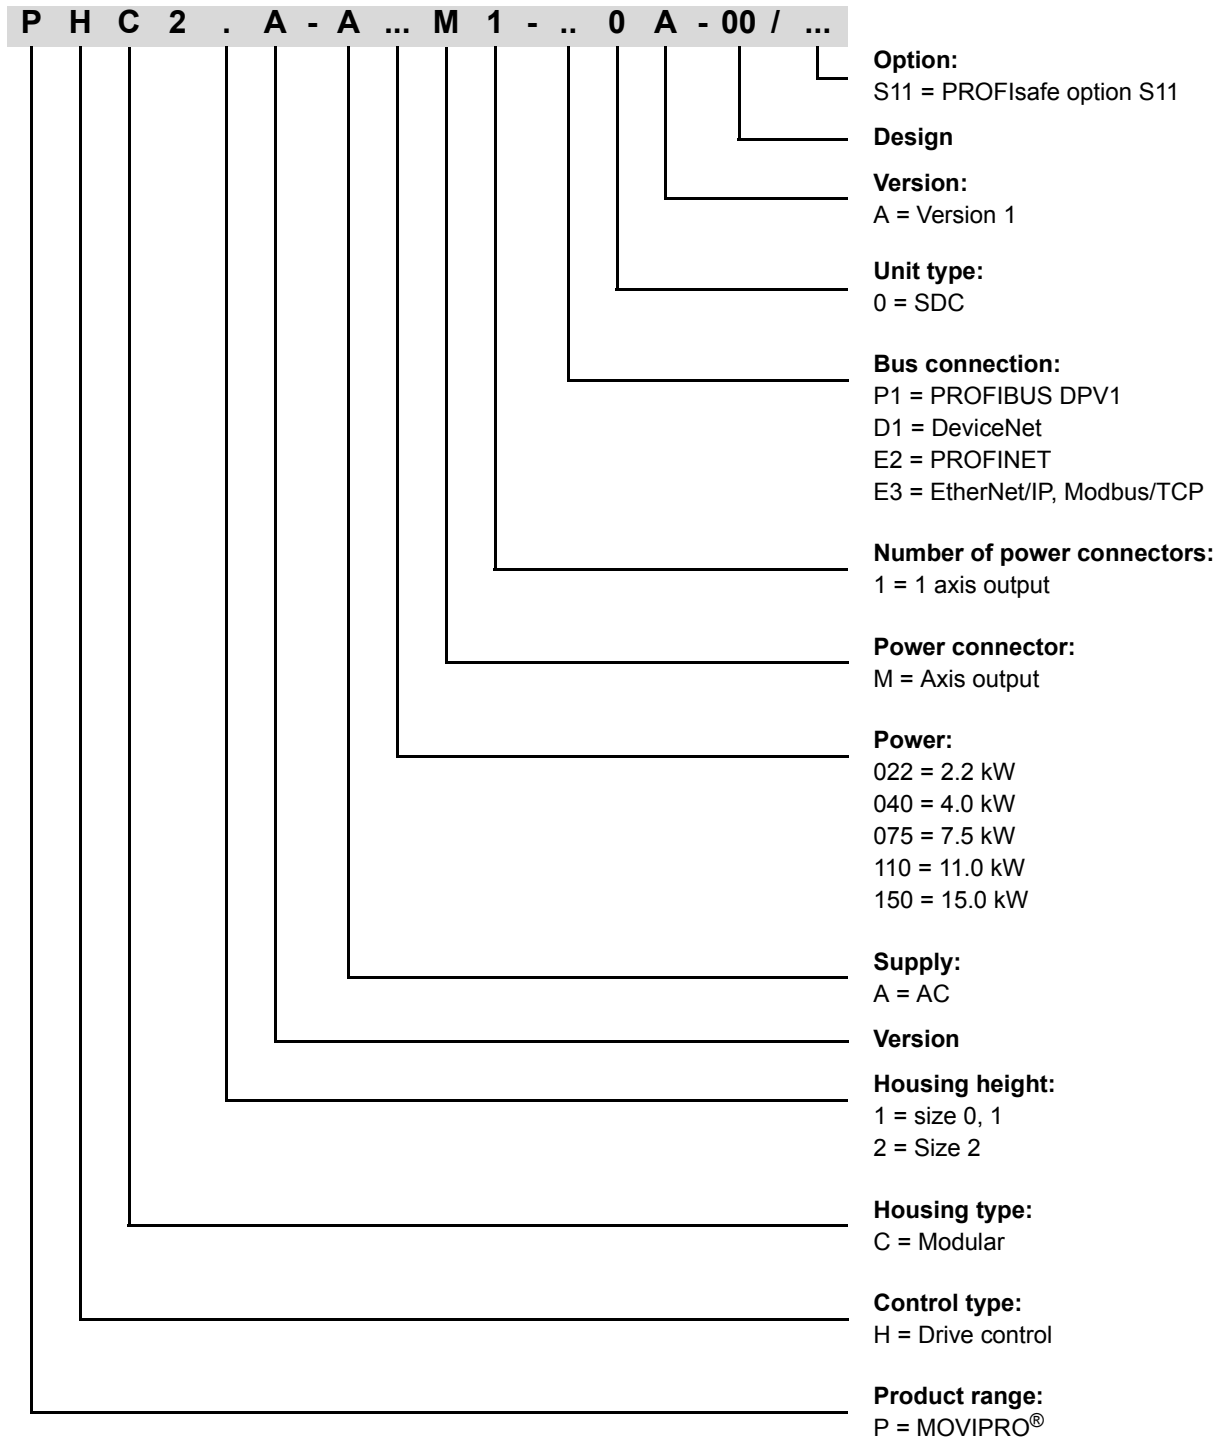
- Never open the unit.
- Only SEW-EURODRIVE is authorized to carry out repairs.



3 Unit Structure

3.1 Unit designation

The unit designation of the MOVIPRO[®] drive and positioning unit provides the following unit data:





3.2 Short designations

The following short designations are used:

Type designation	Short designation	Size	Power
MOVIPRO® PHC21A-A022M1-..0A-00/... drive and positioning controller	MOVIPRO®	Size 0	2.2 kW
MOVIPRO® PHC21A-A040M1-..0A-00/... drive and positioning controller		Size 1	4.0 kW
MOVIPRO® PHC21A-A075M1-..0A-00/... drive and positioning controller			7.5 kW
MOVIPRO® PHC22A-A110M1-..0A-00/... drive and positioning controller		Size 2	11.0 kW
MOVIPRO® PHC22A-A150M1-..0A-00/... drive and positioning controller			15.0 kW

3.3 Scope of delivery

The following components are included in the scope of delivery:

- MOVIPRO® PHC2.A-A...M1-..0A-00/... drive and positioning controller
- Grounding kit
- Jumper plug (**not** for units with PROFIsafe option S11)
- For MOVIPRO® size 2, 15.0 kW:
 - Mounted fan subassembly



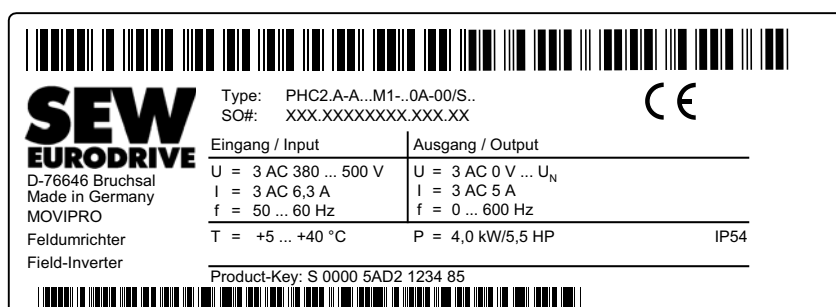
3.4 Nameplates

Each MOVIPRO® unit has 2 nameplates that provide important information:

- Main nameplate
- Function unit nameplate

3.4.1 Main nameplate

The main nameplate provides important information about the unit type. The following figure shows an example of a main nameplate:




1887940875

Type	Unit designation	f	Frequency
SO#	Production number	T	Ambient temperature
Product key	Product key	P	Output power
U	Voltage	IP	Degree of protection
I	Current	V _N	Rated voltage

3.4.2 Function unit nameplate

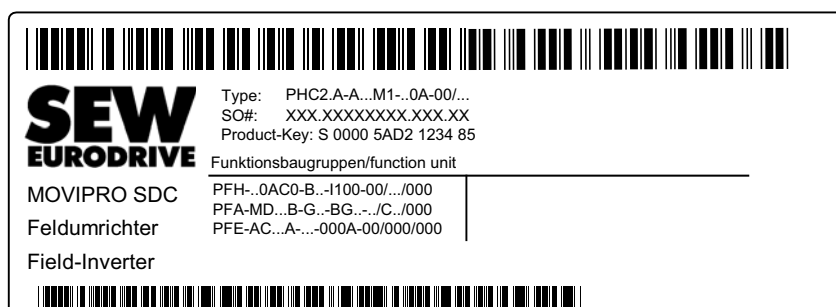This nameplate describes the internal function units of MOVIPRO®. The following figure shows an exemplary nameplate for the function units:



9007201143061771


PFH-..0AC0-B..-1100-00/.../000	Communication and control unit
PFA-MD...B-G..-BG..-./C../000	Power section
PFE-AC...A...-000A-00/000/000	Energy supply



3.5 Function units

3.5.1 Power section

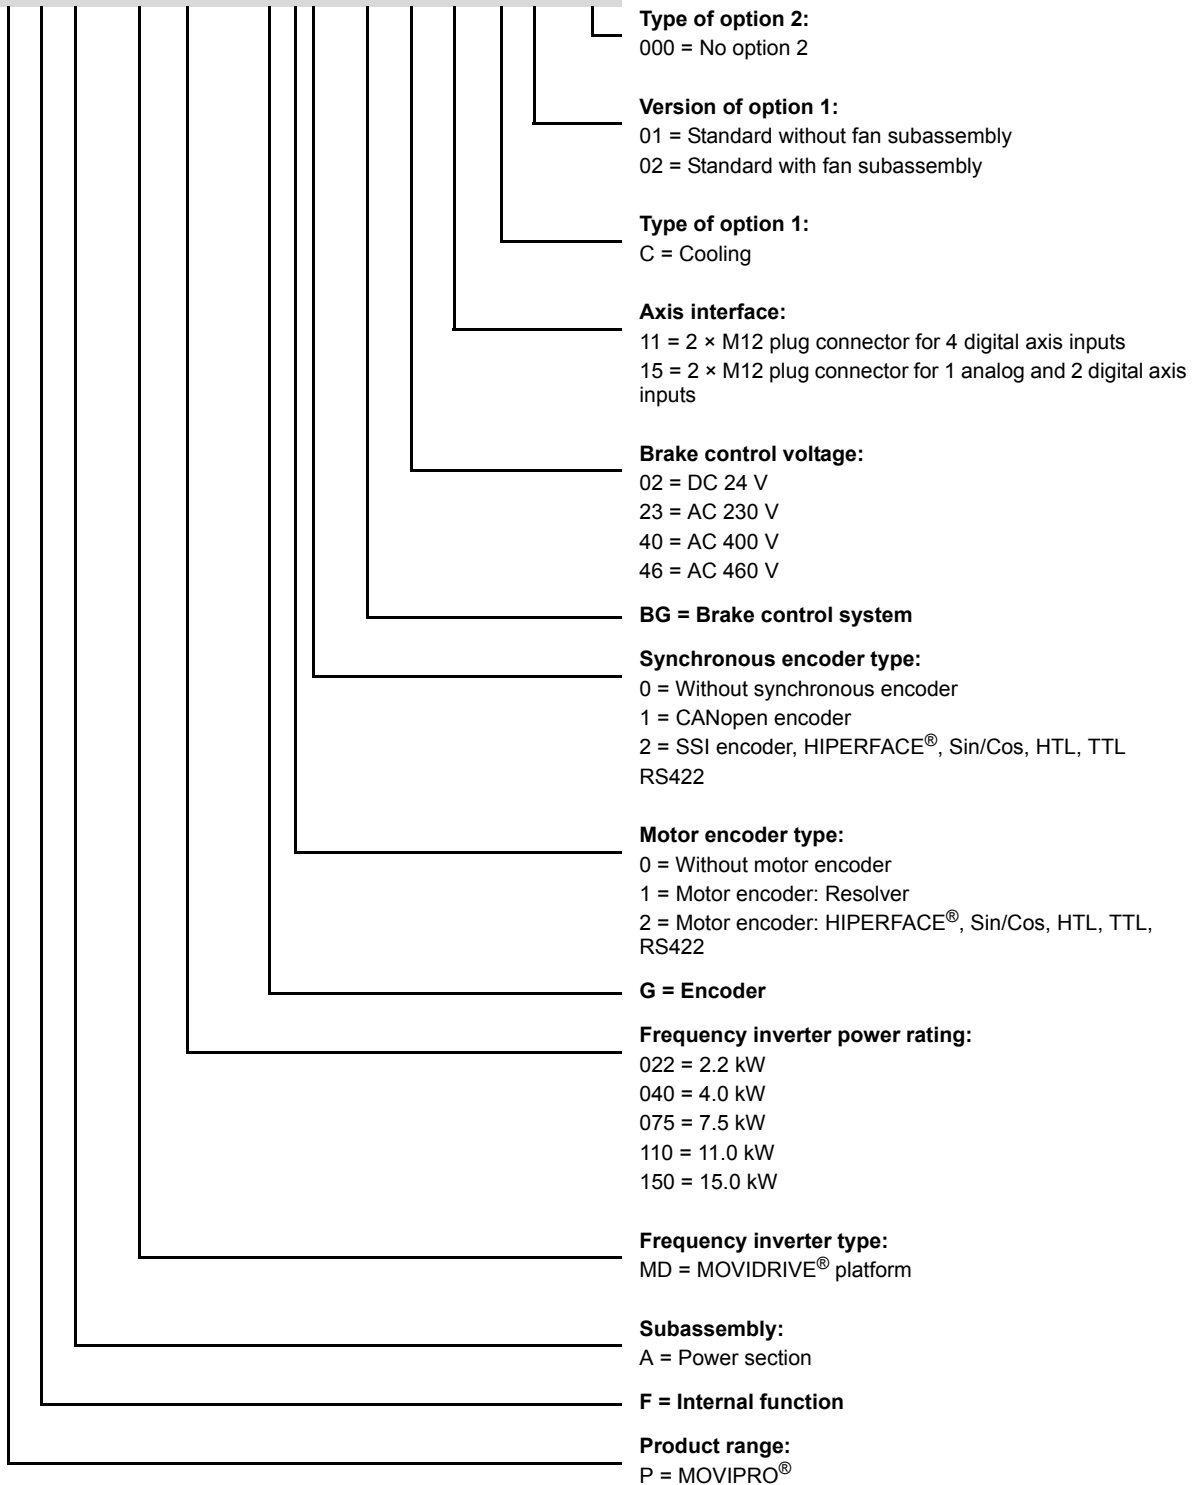
P F A - MD ... B - G ... - BG .. - .. / C .. / 000





3.5.2 Communication and control unit

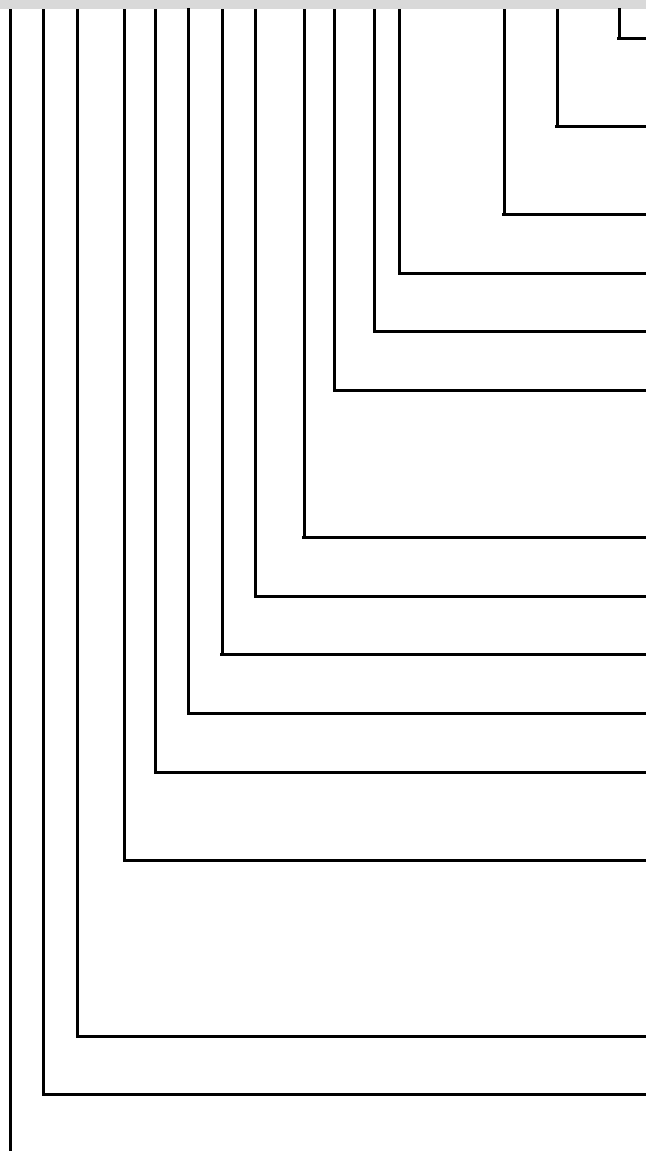P F H - .. 0 A C 0 - B .. - I 1 00 -00 / ... / 000



Option 2:

000 = No option 2

Option 1:

000 = No option 1

S11 = PROFIsafe option S11

Design

1 = 12 digital inputs and 4 digital inputs/outputs

I = Local interface

Bus connection type:

11 = DIP module PROFIBUS, 2 × M12

12 = DIP module DeviceNet, 2 × M12

53 = 2 × M12, D-coded, Ethernet, copper

63 = 2 × push-pull RJ45, Ethernet, copper

B = Fieldbus connection

0 = 1-axis function

C = Memory card for parameterizable functions

A = Version 1

Unit type:

0 = SDC

Communication type:

P1 = PROFIBUS DPV1

D1 = DeviceNet

E2 = PROFINET IO

E3 = EtherNet/IP / Modbus/TCP

Subassembly:

H = Control/communication

F = Internal function

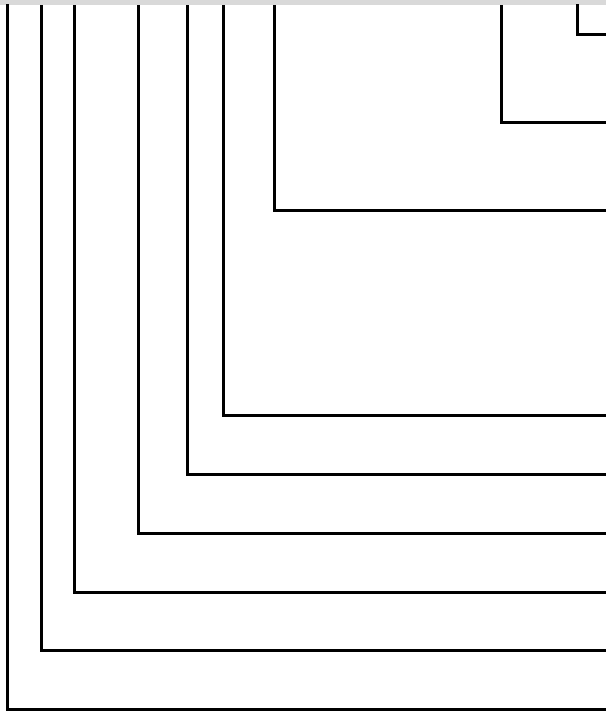
Product range:

P = MOVIPRO®



3.5.3 Energy supply

P F E - AC ... A - ... - 000 A - 00 / 000 / 000




- Type of option 2:**
000 = No option 2
- Type of option 1:**
000 = No option 1
- Supply system connection:**
001 = Connection for plug connectors, sizes 0 and 1
002 = Plug connectors, size 2
101 = Prepared for power interface, sizes 0 and 1
102 = Prepared for power interface, size 2
- A = Version A**
- Power rating of supply system rectifier**
- AC = Supply system**
- Subassembly:**
E = Energy
- F = Internal function**
- Product range:**
P = MOVIPRO®



3.6 Basic unit

3.6.1 Size 0

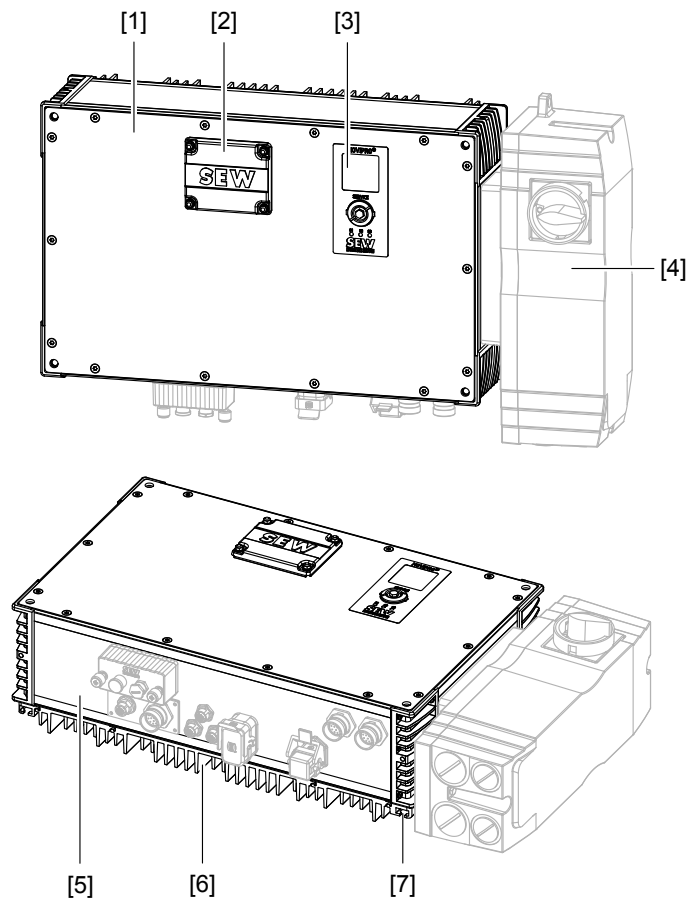The following figure shows the unit structure of size 0:




2658783755

- | | | | |
|-----|----------------------------|-----|---|
| [1] | Unit cover | [5] | Connecting block (connections depend on the unit variant) |
| [2] | Service cover plate | [6] | Cooling fins |
| [3] | Service unit | [7] | T-slot profile |
| [4] | Power interface (optional) | | |



3.6.2 Size 1

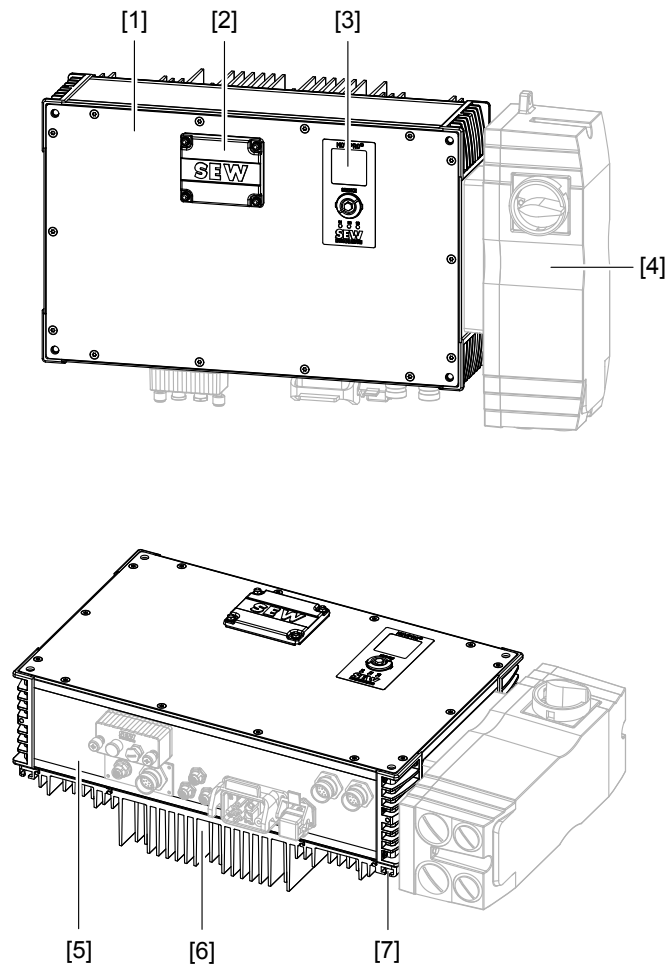The following figure shows the unit structure of size 1:




1730624267

- | | |
|--------------------------------|---|
| [1] Unit cover | [5] Connecting block (connections depend on the unit variant) |
| [2] Service cover plate | [6] Cooling fins |
| [3] Service unit | [7] T-slot profile |
| [4] Power interface (optional) | |



3.6.3 Size 2

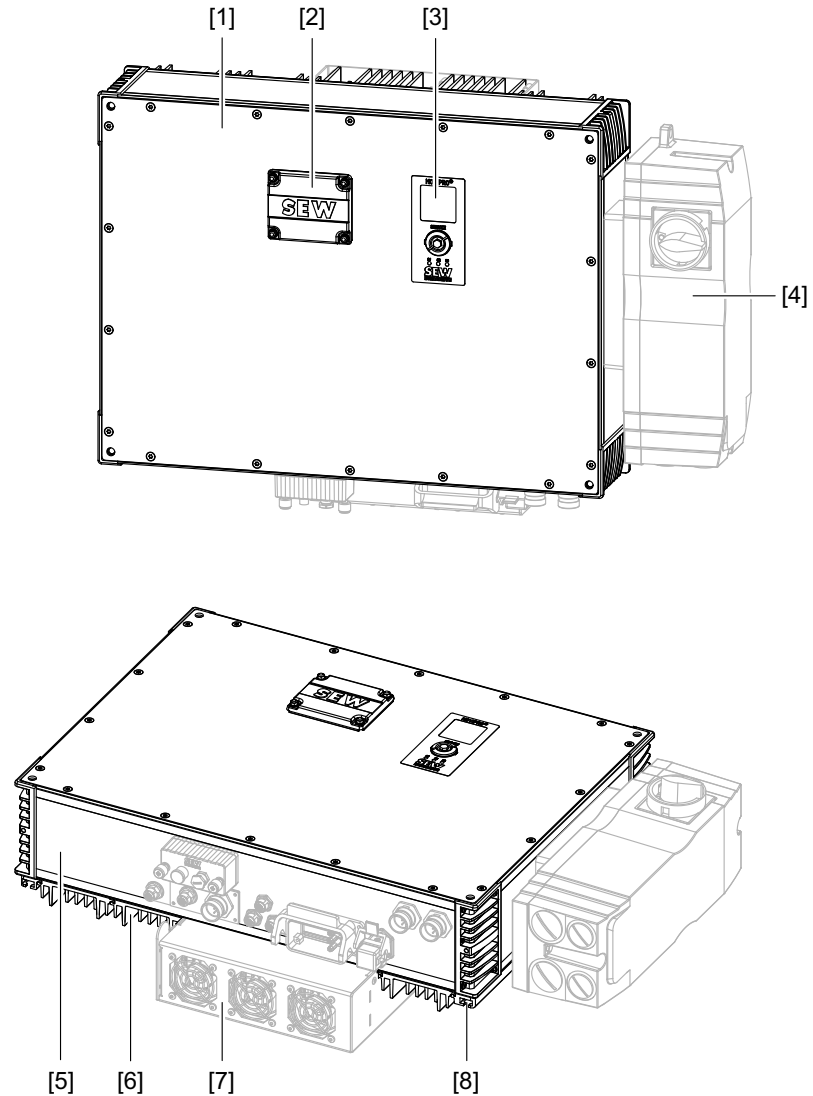The following figure shows the unit structure of size 2:



9007200277523467

- | | | | |
|-----|----------------------------|-----|---|
| [1] | Unit cover | [5] | Connecting block (connections depend on the unit variant) |
| [2] | Service cover plate | [6] | Cooling fins |
| [3] | Service unit | [7] | Fan subassembly (optional for 11.0 kW, mandatory for 15.0 kW) |
| [4] | Power interface (optional) | [8] | T-slot profile |

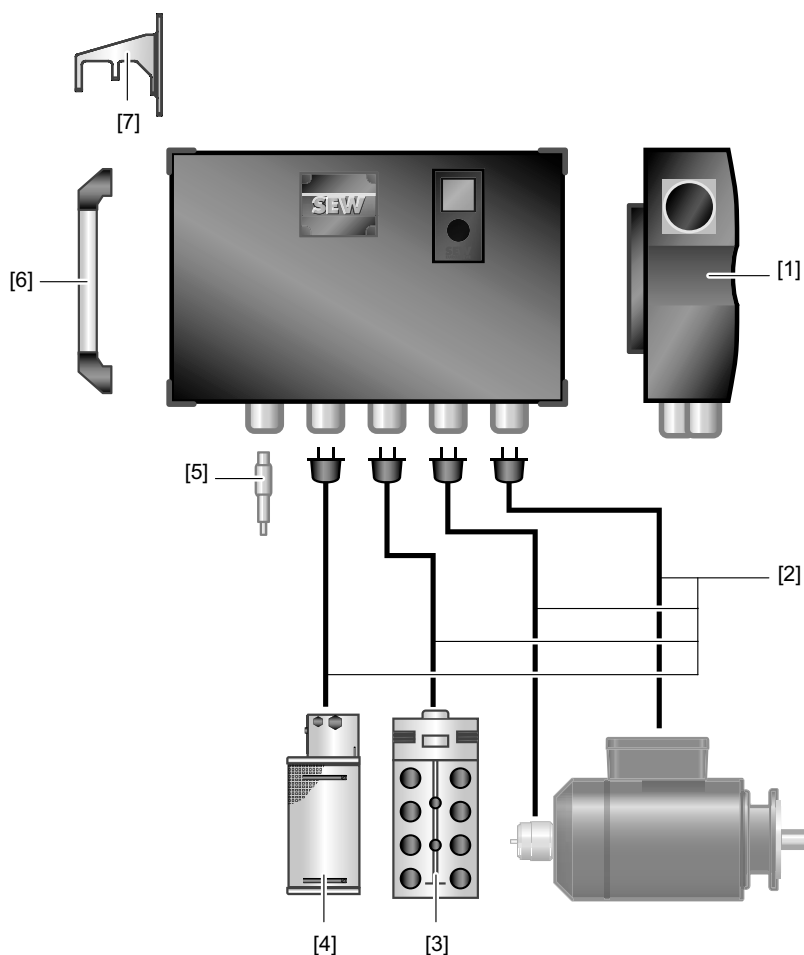


3.7 Accessories



INFORMATION

The scope of delivery does not include accessories such as installation or mounting equipment or connection cables.



9007200453648779

- [1] Power interface
- [2] Connection cable
- [3] Sensor/actuator box
- [4] Braking resistor

- [5] Jumper plug
- [6] Handles
- [7] Mounting bracket



The following accessories are available for MOVIPRO®.

Accessories	Part number	
[1] MOVIPRO® power interfaces For further information, refer to chapter "Electrical connections" (page 57) and to the "MOVIPRO® Accessories – Addendum to the Operating Instructions".		
PZM2XA-A075-D02-00	1 825 014 9	
PZM2XA-A150-D03-00	1 825 015 7	
PZM2XA-A022-M13-00	1 825 023 8	
PZM2XA-A040-M14-00	1 825 016 5	
PZM2XA-A075-M16-00	1 825 017 3	
[2] connection cable For more information, refer to chapter "Electrical connections" (page 56).		
Connection cables, e.g. for motor, encoder, braking resistor	See chapter "Electrical connections (page 56)".	
[3] Sensor/actuator box For further information, refer to chapter "Electrical connections" (page 97) and to the "MOVIPRO® Accessories – Addendum to the Operating Instructions".		
Sensor/actuator box 1.0 m	1 330 926 9	
Sensor/actuator box 2.0 m	1 330 927 7	
Sensor/actuator box 3.0 m	1 330 928 5	
Sensor/actuator box 5.0 m	1 330 929 3	
Sensor/actuator box 10.0 m	1 330 930 7	
[4] Braking resistors Further information on request.		
BW100-004-00 (including installed connection cable)	Size 0	1 796 218 8
BW050-008-01	Size 1	1 796 224 2
BW033-012-01	Size 1	1 796 219 6
BW017-024-02	Size 2	1 796 221 8
BW050-007	0 826 788 X	
BW036-007	0 827 121 6	
BW025-015	0 826 790 1	
BW018-016	0 826 791 X	
BW018-022	0 826 796 0	
Mounting accessories for brake resistors size 1 and 2 For further information, refer to the "MOVIPRO® Accessories – Addendum to the Operating Instructions".		
Mounting bracket kit, BW	1 822 968 9	
[5] Jumper plug For further information, refer to the "MOVIPRO® Accessories – Addendum to the Operating Instructions".		
Jumper plug	1 174 709 9	



Accessories	Part number
Mounting accessories for MOVIPRO®	
For further information, refer to section "Mechanical Installation (page 35)" and to the "MOVIPRO® Accessories – Addendum to the Operating Instructions"	
[6] Optional handle 270 (size 0, 1)	1 822 278 1
Optional handle 390 (size 2)	1 822 280 3
[7] Large bracket mounting kit	1 270 830 5
Fan subassembly	
For further information, refer to the "MOVIPRO® Accessories – Addendum to the Operating Instructions".	
Fan subassembly	1 270 970 0

For further information, refer to the following documentation:

Documentation
Addendum to the "MOVIPRO® Accessories" operating instructions

The following table shows the supported encoders:

Encoder	Manufacturer
Motor encoder	
Incremental encoders	
EI7S	Built-in encoder, Sin/Cos
EI7C / EI71 / EI72 / EI76	Built-in encoder, HTL
ES7S	Mount-on encoder, Sin/Cos
ES7R	Mount-on encoder, RS422
ES7C	Mount-on encoder, TTL to HTL
EG7S	Mount-on encoder, Sin/Cos
EG7R	Mount-on encoder, RS422
EG7C	Mount-on encoder, TTL to HTL
ES1S / ES2S	Mount-on encoder, Sin/Cos
ES1R / ES2R	Mount-on encoder, RS422
ES1C / ES2C	Mount-on encoder, HTL
EV1S	Mount-on encoder, Sin/Cos
EV1R:	Mount-on encoder, RS422
EV1C	Mount-on encoder, HTL
Absolute encoder for asynchronous motors	
AS3H / AS4H	Mount-on encoder, M-ASSI (HIPERFACE®, multi-turn), Sin/Cos
AV1H	Mount-on encoder, M-ASSI (HIPERFACE®, multi-turn), Sin/Cos
AS7W	Mount-on encoder, M-ASSI (multi-turn), Sin/Cos
AG7W	Mount-on encoder, M-ASSI (multi-turn), Sin/Cos
AS7Y	Mount-on encoder, M-SSI (multi-turn), Sin/Cos
AG7Y	Mount-on encoder, M-SSI (multi-turn), Sin/Cos



Encoder		Manufacturer
Absolute encoder for synchronous motors		
AK0H	Built-in encoder, M-ASSI (HIPERFACE [®] , multi-turn), Sin/Cos	SEW-EURODRIVE
AK1H	Built-in encoder, M-ASSI (HIPERFACE [®] , multi-turn), Sin/Cos	
EK1H	Built-in encoder, S-ASSI (HIPERFACE [®] , multi-turn), Sin/Cos	
Resolver		
RH1M	Built-in encoder, resolver	SEW-EURODRIVE
RH1L		
MOVIPRO [®] also supports incremental encoders with resolver, TTL, HTL, RS422 and Sin/Cos signals.		
Distance encoder		
SSI		
AH7Y	Rotary encoder	SEW-EURODRIVE
AG7Y		
AS7Y		
AV1Y		
AV2Y		
DME3000-x11	Laser distance measuring instrument	Sick/Stegmann
DME4000-x11 0.1 mm		
DME4000-x11 1 mm		
DME5000-x11 0.1 mm		
DME5000-x11 1 mm		
AG100 MSSI	Rotary encoder	Sick/Stegmann
AG626		
ARS60		
ATM60		
ATM90		
POMUX KH53	Linear distance sensor	Leuze-electronic
BPS37	Barcode measuring system	
OMS1 0.1 mm	Laser distance measuring instrument	
OMS1 1 mm		
OMS2 0.1 mm		
AMS200		
BTL5-S112-M1500-P-S32	Linear distance sensor	Balluff
BTL5-S112B-M1500-P-S32		
TR CE58M	Rotary encoder	TR-Electronic
TR CE65M		
TR LA41K	Linear distance sensor	
TR LE100 0.1 mm	Laser distance measuring instrument	
TR LE100 1 mm		
TR LE200 0.1 mm		



Encoder		Manufacturer
WCS2A-LS311	Barcode distance sensor	Pepperl & Fuchs
WCS3A-LS311		
WCS3B-LS311		
EDM	Laser distance measuring instrument	
VDM100-150 0.1 mm		
VDM100-150 1 mm		
GM 401	Rotary encoder	IVO
Kueb 9081xxx2003	Rotary encoder	Fritz Kübler
Kueb 9081xxx2004		
LIMAX2	Linear distance sensor	Elgo
RP 0.005 mm	Linear distance sensor	MTS Sensors
RH 0.005 mm		
RF 0.005 mm		
RD4 0.005 mm		
MSA1000	Linear distance sensor	SIKO
SSI combo		
A/M58X-1212	Rotary encoder	Pepperl & Fuchs
HMG161 S24 H2048	Rotary encoder	Hübner
AMG73 S24 S2048		
AMG83 S24 S2048		
ROQ424	Rotary encoder	Heidenhain
HIPERFACE®		
DME4000-x17	Laser distance measuring instrument	Sick/Stegmann
DME5000-x17		
SKM36	Rotary encoder	
SKS36		
SRM50		
SRM60		
SRM64		
SRS50		
SRS64		
LinCoder L230		
CANopen		
DME4000-x19 0.1 mm	Laser distance measuring instrument	Sick
DME4000-x19 1 mm		
TR CE58M	Rotary encoder	TR-Electronic
TR LE200	Laser distance measuring instrument	
WCS3B-LS410	Barcode distance sensor	Pepperl & Fuchs
EnDat		
ECN113	Rotary encoder	Heidenhain
ECN1313		
EQN1125		
EQN1325		
EQN425		
MOVIPRO® also supports incremental encoders with TTL, HTL, RS422 and Sin/Cos signals.		



3.8 Unit components

3.8.1 PFA-MD...B-G...BG.../C../000 power section

MOVIPRO®-based inverter

The inverter in its basic design is used to control asynchronous motors. Option cards enable the inverter to control different motor types.

The following power ratings are available:

Power	Function unit
2.2 kW	PFA-MD022B-G.-BG.-./C../000
4.0 kW	PFA-MD040B-G.-BG.-./C../000
7.5 kW	PFA-MD075B-G.-BG.-./C../000
11.0 kW	PFA-MD110B-G.-BG.-./C../000
15.0 kW	PFA-MD150B-G.-BG.-./C../000

Encoder evaluation option

The encoder evaluation option enables control of either asynchronous AC motors, asynchronous servomotors or synchronous servomotors.

You can use the following encoder combinations:

Motor	Encoder		Function unit
		Track	
Without		Without	PFA-MD...B-G00-BG.-./C../000
Resolver		Without	PFA-MD...B-G10-BG.-./C../000
HIPERFACE®, Sin/Cos, HTL, TTL, RS422		Without	PFA-MD...B-G20-BG.-./C../000
		CANopen	PFA-MD...B-G21-BG.-./C../000
		SSI, HIPERFACE®	PFA-MD...B-G22-BG.-./C../000

For an overview of the supported encoder types, refer to the chapter "Unit Structure" > "Accessories (page 21)".

Brake control

The brake control system is responsible for the power supply and control of the SEW disk brakes. Only approved SEW disk brakes with the following brake voltages must be connected to the the MOVIPRO® unit.

Unit power MOVIPRO®	Supported brake voltage			
	DC 24 V	AC 230 V	AC 400 V	AC 460 V
2.2 kW	•	•	•	•
4.0 kW	•	•	•	•
7.5 kW		•	•	•
11.0 kW		•	•	•
15.0 kW		•	•	•

Motor types

MOVIPRO® supports the following SEW motor types:

- DR motors
- CMP motors



3.8.2 PFH-..0AC0-B..I100-00/.../... communication and control unit

SDC

The engineering of the communication and control unit comprises the following activities:

- Configuration
- Parameterization

These activities are carried out using the MOVITOOLS® MotionStudio engineering software. The software has a number of useful features for startup and diagnostics of all SEW units. MOVIPRO® is connected to the engineering computer via the service interface.

Fieldbus connection

Depending on the unit variant, the MOVIPRO® unit offers one of the following fieldbus connection options:


Fieldbus	Function unit
PROFIBUS	PFH-P10AC0-B11-I100-00/.../000
EtherNet/IP, Modbus/TCP	PFH-E30AC0-B53-I100-00/.../000
	PFH-E30AC0-B63-I100-00/.../000
PROFINET	PFH-E20AC0-B53-I100-00/.../000
	PFH-E20AC0-B63-I100-00/.../000
DeviceNet	PFH-D10AC0-B12-I100-00/.../000

The fieldbus is connected via plug connectors as described in chapter "Electrical Installation" > "Electrical connections" (page 56).

SD memory card

The slot for the SD memory card is located under the memory card cover on the top of the MOVIPRO® unit. The cover ensures the degree of protection of the MOVIPRO® unit and allows for easy access in the event of a required replacement or any other maintenance procedures. In order to remove the memory card cover, loosen the nuts and remove the cover by lifting it upwards.

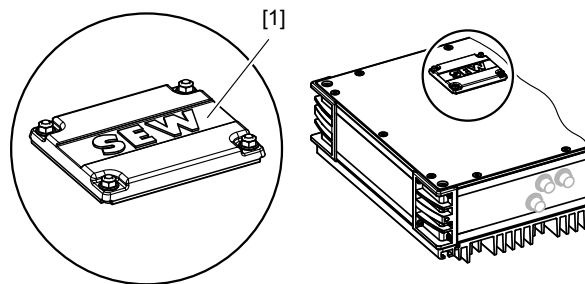The following figure shows the memory card cover:



[1] Memory card cover

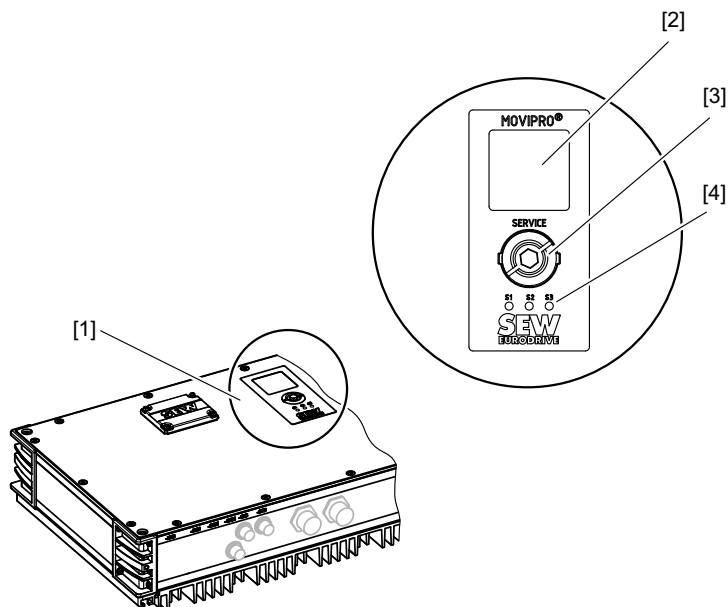
9007200455566859



Service unit

The service unit is used for startup, diagnostics, and maintenance of the MOVIPRO® unit. It is equipped with a status display and a service interface.

The following figure shows the service unit:



18014399568351371

[1] Service unit
[2] Status indication

[3] Ethernet service interface (Ethernet RJ45)
[4] LED



INFORMATION

SEW-EURODRIVE recommends using an Ethernet cable with extended locking device.

Status display and LED

The status display and the LED show status or error messages and allow for a quick evaluation of the current status of MOVIPRO®.

For further information, refer to sections "Operation" > "Status and error messages (page 117)" and "Operation" > "Status LED (page 119)" and the following documentation:

Documentation
"MOVIPRO® SDC with EtherNet/IP and Modbus/TCP Interface" manual
"MOVIPRO® SDC with PROFIBUS Interface" manual
"MOVIPRO® SDC with PROFINET Interface" manual
"MOVIPRO® SDC with DeviceNet Interface" manual

Ethernet service interface

For configuration and maintenance purposes, the unit is equipped with an Ethernet service interface that connects MOVIPRO® to an engineering PC.

Ethernet service interface	
Standard IP address	Subnetwork mask
192.168.10.4	255.255.255.0



3.8.3 PFE-AC...A-...-000A-../000/000 power supply



⚠ WARNING

Electric shock due to charged capacitors

Severe or fatal injuries.

- Observe a minimum switch-off time of 10 minutes after disconnecting the power supply.

The MOVIPRO[®] unit is connected to a three-phase alternating-current supply system.

The line filter on the supply system end complies with limit class C2 to EN 61800-3 without further measures.



4 Integrated Safety Technology

4.1 Standards

The safety technology of this MOVIPRO[®] unit described below has been developed and tested in accordance with the following safety requirements:

- EN 1037: 1995
- EN 61800-5-2: 2008
- EN ISO 13849-1: 2007

4.2 Safety functions

The following drive-related safety functions can be used:

- STO – Safe Torque Off according to EN 61800-5-2: 2008
- SS1(c) – Safe Stop 1, function variant c according to EN 61800-5-2: 2008

4.3 Safety concept

The following safety concepts can be realized with this MOVIPRO[®] unit:

- Axis module with safe torque off
- PROFIsafe option S11

4.4 Additional information

For additional information, refer to the following documentation

Documentation
"MOVIPRO [®] SDC Functional Safety" manual



⚠ WARNING

Failure of the safety components due to improper startup.

Severe or fatal injuries.

- Only use MOVIPRO[®] in combination with functional safety when you have the "MOVIPRO[®] Functional Safety" manual at hand and you ensure compliance with the requirements for operation.



5 Mechanical Installation

5.1 General information

Observe the following notes on mechanical installation:

- Observe the general safety notes.
- Strictly observe all instructions as to the technical data and the permissible conditions regarding the place of installation.
- Do only use provided attachment options when mounting the unit.

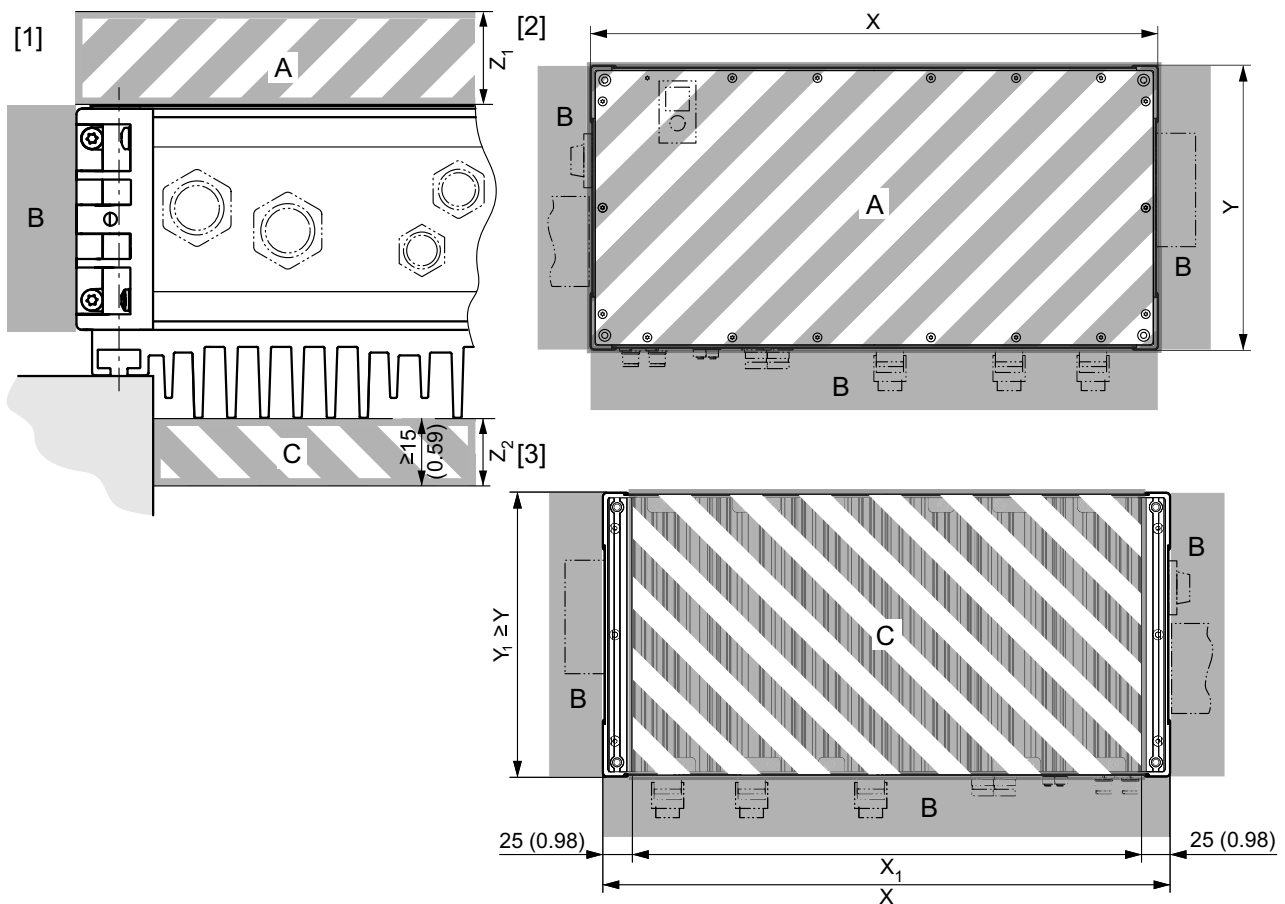
5.2 Minimum clearance



INFORMATION

- Observe the required minimum clearance for:
 - the connection of the cables and plug connectors (EN 61800-5-1)
 - the handling of the display, diagnostics and operating elements
 - heat convection below the cooling fins
- Refer to the dimension drawing for information on the required space.

The following figure shows the minimum distances and clearances at all sides of the unit:



27021598228327947



- [1] View from bottom
 [2] View from front
 [3] View from back

A	Clearance for cover	X, Y	Housing dimensions
B	Clearance on the side (optional)	X ₁ , Y ₁	Cut-out dimensions
C	Clearance below the cooling fins	Z ₁	Clearance height, housing cover
		Z ₂	Clearance height, cooling fins

The following table lists the minimum distances and clearances:

Clearance	Function	Size
A: Housing cover <ul style="list-style-type: none"> Width X Depth Y Height Z₁ 	Space for display elements, diagnostics elements and actuator elements, e.g. service unit	<ul style="list-style-type: none"> Z₁ = min. 150 mm (5.91 in)
B: On the side (optional)¹⁾	Room for connection cables, plug connectors, mounted elements and actuator elements, e.g. maintenance switch	(see dimension drawing)
C: Below the cooling fins <ul style="list-style-type: none"> Width X₁ Depth Y₁ Height Z₂ 	Space for optimum heat convection ²⁾	<ul style="list-style-type: none"> X₁ = housing dimension X - 50 mm (2.0 in) Y₁ ≥ housing dimension Y Z₂ ≥ 15 mm (0.59 in)

- 1) Clearance above or on the side of the MOVIPRO[®] unit is only needed if elements for display, diagnostics and operation or connections for signal and power cables are located there.
 2) The cooling fins must not be located in a closed hollow space.

5.3 Cooling

Ensure that the cooling fins can dissipate waste heat into the environment by free convection!

Observe the following notes to ensure an optimized heat convection:

- Use SEW mounting systems or suitable spacers, e.g. spacers, profiles, square pipes, mounting plates, T-beams, tracks, etc.
- Ensure that the cooling fins are not located in a closed hollow space.
- When using a mounting plate, ensure that there is an appropriate clearance between the mounting plate and the cooling fins of the unit for heat convection.
- It is essential that a minimum distance of 15 mm (0.59 in) between the highest cooling fin and the next surface is maintained.
- Avoid sources of heat, e.g. motors or braking resistors, in the immediate vicinity of the MOVIPRO[®] unit.



5.4 Mounting position



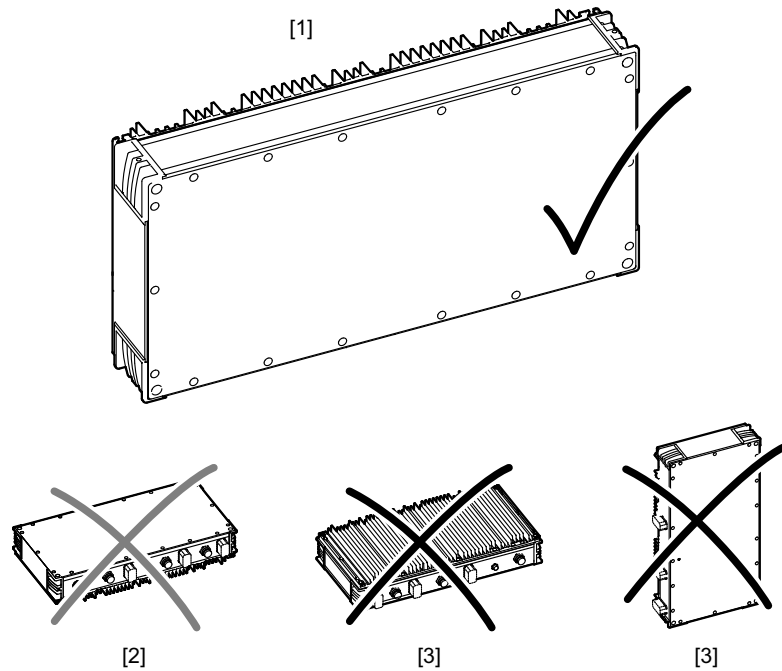
NOTICE

Danger of collision.

Damage to plant and unit components

- Always position the unit so that it will not collide with other components, design elements or persons along the travel distance.

The following figure shows permitted and not permitted mounting positions:



9007200455213451

- [1] Permitted vertical mounting position
[2] Conditionally permitted horizontal mounting positions

- [3] Mounting positions that are not permitted



INFORMATION

When using the horizontal mounting position [2], power is reduced by 50 % because of reduced convection.

Always install the unit so that display and actuator elements such as displays and diagnostics interfaces are visible and accessible after installation.



5.5 Assembly



⚠ WARNING

Risk of crushing if the load falls.

Severe or fatal injuries.

- Do not stand under the load.
- Secure the danger zone.



⚠ CAUTION

Risk of injury due to protruding parts.

Risk of cutting or crushing.

- Cover sharp and protruding parts.
 - The installation must only be carried out by qualified personnel.
-

Adhere to the following rules for installation:

- When selecting and dimensioning the mounting and safety elements, observe the applicable standards, the technical data of the unit, as well as local circumstances.
- Only use mounting and locking elements that fit into the existing bores, threads and countersinks.
- Observe the respective minimum distances and clearances, see section "Minimum clearance".
- When assembling on mounting plates, ensure that the section for heat convection is adequately dimensioned, see "Minimum clearance" section.
- Calculate the bore dimensions according to the respective type of fixture (see the following sections).

Use one of the following mechanical mounting options:

- Mounting with mounting brackets
- Mounting via through bores



5.5.1 Mounting with mounting brackets

Note the following points during assembly:

- Strictly observe the safety notes contained in this documentation.
- Observe the required minimum distances and clearances.

Use the following parts for assembly:

- The SEW-EURODRIVE "Large bracket mounting set" accessory, part number 1 270 830 5. It contains:
 - 4 x mounting brackets
 - 8 x studs M5 x 8 type in accordance with DIN EN ISO 4027
- Suitable mounting and retaining elements to attach the MOVIPRO[®] unit to the fixture:
 - e.g. M6 or M8 screws of an appropriate length with washers

Proceed as follows to attach the mounting brackets to the MOVIPRO[®] unit:

1. Insert the mounting brackets into the T-slots of the MOVIPRO[®] unit so that the upper edge of the bracket is flush with the upper end of the slot.
2. If necessary, fix the mounting brackets in position using M8 x 30 bolts in the through bores of the MOVIPRO[®] unit.
3. Fasten the mounting brackets in the T-slots with the studs included in the set.

Proceed as follows to prepare the fixture for the MOVIPRO[®] unit, e.g. square pipes or bars:

1. Refer to the following table for dimensions of the threaded holes in the holding fixture:

Bore dimension	Value
X ₂	Housing dimension X – 30 mm (1.2 in) (see dimension drawing)

2. Cut the threads at the appropriate points.
3. For the clearance dimensions of the fixture, refer to the following table:

Distance	Value
A	Housing dimension Y – 145 mm (5.71 in) (see dimension drawing)

4. Mount the holding fixture within the calculated clearance.

INFORMATION



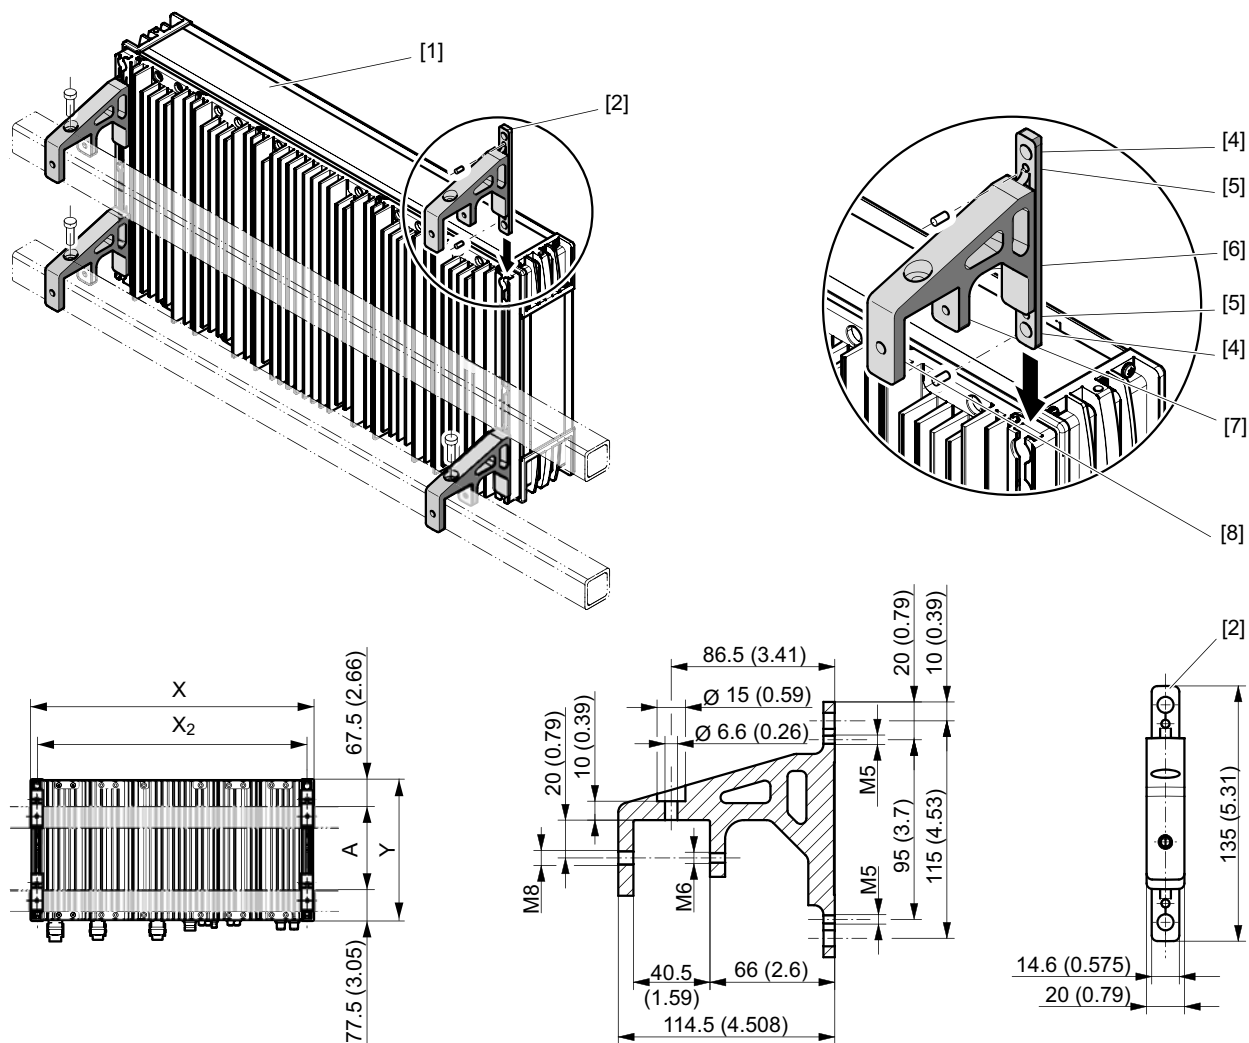
Use only square pipes with an edge length ≤ 35 mm for mounting the MOVIPRO[®] unit to avoid mechanical interference.

Proceed as follows to attach the MOVIPRO[®] unit to the fixture:

1. Hang the MOVIPRO[®] unit on a support structure installed by the customer using the mounting brackets.
2. Attach the MOVIPRO[®] unit to the fixture using the mounting brackets and suitable mounting and retaining elements according to one of the options displayed in the illustration.



The following figure shows the main mounting elements and dimensions in mm (in):



36028797434827531

- | | |
|--|--|
| [1] MOVIPRO® | Bore for |
| [2] Large mounting brackets | [4] M8 x 30 screw |
| [3] Holding fixture, e.g. square pipe or bar | [5] M5 x 8 stud |
| X, Y Housing dimensions | [6] M8 screw of an appropriate length with washer |
| X ₂ Bore dimension | [7] M6 screw of an appropriate length with washer through bore [7] and [8] |
| A Distance | [8] M8 screw of an appropriate length with washer |

Maximum permitted tightening torque: 3.2 Nm (28 in-lb)



5.5.2 Mounting via through bores

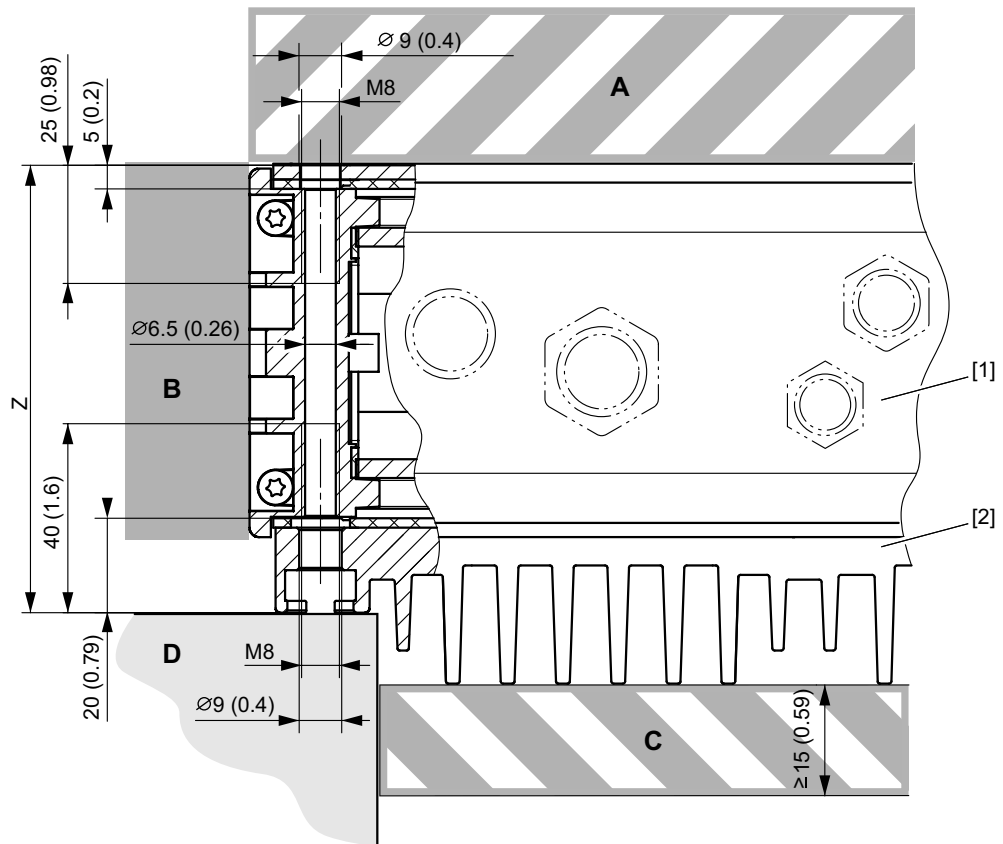


INFORMATION

This mounting variant is not possible when using the handles on MOVIPRO®.

For mechanical installation, the MOVIPRO® units are equipped with 4 through bores in the corner profiles with a diameter of 6.5 mm (0.26 in) and M8 threads on both sides, as well as with T-slots.

The following figure shows the design of the through bore and the minimum clearance in mm (in):



18014398973583627

- [1] MOVIPRO®
- [2] Cooling fins

- A Clearance above (optional)
- B Clearance on the side (optional)
- C Clearance below the cooling fins
- D Mounting surface, e.g. mounting plate
- Z Height of through bore + T-slot



Mounting from the front

Note the following points during assembly:

- Strictly observe the safety notes contained in this documentation.
- Observe the required minimum distances and clearances.

Use the following parts for assembly:

- To maintain the required minimum distances and clearances use one of the following mounting elements:
 - Suitable spacers
 - Mounting plate (with appropriate cut-out for long cooling fins)
- Suitable mounting and safety elements:
 - e.g. M6 screws of an appropriate length with washers
- Suitable locking devices:
 - e.g. lock washers

Proceed as follows to mount the braking resistors:


1. For the bore dimensions, refer to the following table:

Bore dimension	Value
X ₂	Housing dimension X – 30 mm (1.2 in) (see dimension drawing)
Y ₂	Housing dimension Y – 30 mm (1.2 in) (see dimension drawing)

2. Drill the holes in the appropriate places.
3. Mount the mounting and retaining elements through the fixture in the housing corners from the front.



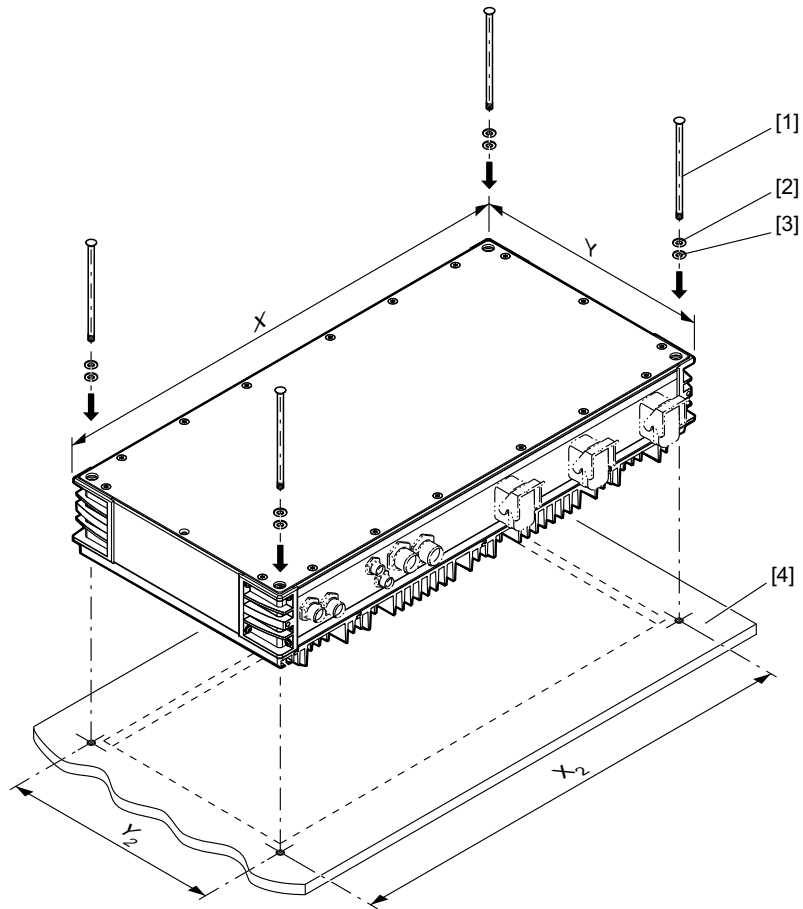The following figure shows the main mounting elements and dimensions:



9007199729553547

- [1] Mounting elements, e.g. M6 screws
- [2] Locking elements, e.g. lock washers
- [3] Mounting elements, e.g. washers
- [4] Mounting surface, e.g. mounting plate

X, Y Housing dimensions
X₂, Y₂ Bore dimensions

Maximum permitted tightening torque: 3.2 Nm (28 in-lb)



Mounting from behind

Note the following points during assembly:

- Strictly observe the safety notes contained in this documentation.
- Observe the required minimum distances and clearances.

Use the following parts for assembly:

- To maintain the required minimum distances and clearances use one of the following mounting elements:
 - Suitable spacers
 - Mounting plate (with appropriate cut-out for long cooling fins)
- Suitable mounting and safety elements:
 - e.g. M8 screws of an appropriate length with washers
- Suitable locking devices:
 - e.g. lock washers

Proceed as follows to mount the braking resistors:


1. For the bore dimensions, refer to the following table:

Bore dimension	Value
X ₂	Housing dimension X – 30 mm (1.2 in) (see dimension drawing)
Y ₂	Housing dimension Y – 30 mm (1.2 in) (see dimension drawing)

2. Drill the holes in the appropriate places.
3. Mount the mounting and retaining elements through the fixture in the housing corners from the back.



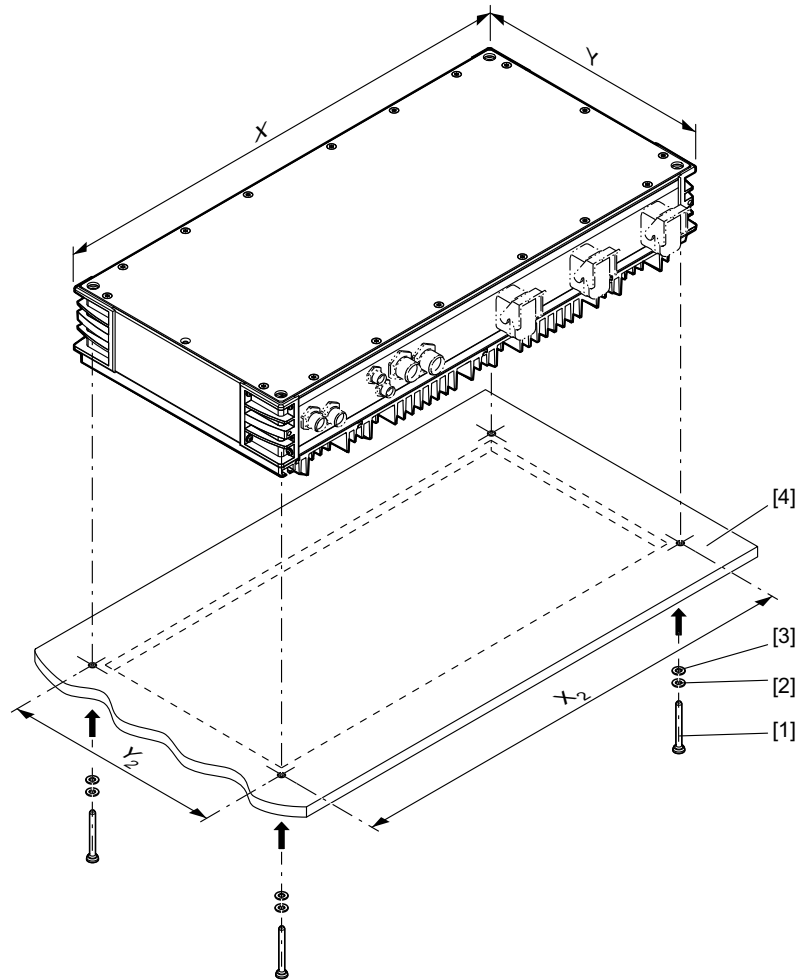The following figure shows the main mounting elements and dimensions:



9007199718852747

- | | |
|---|---|
| [1] Mounting elements, e.g. M8 screws | X, Y Housing dimensions |
| [2] Locking elements, e.g. lock washers | X ₂ , Y ₂ Bore dimensions |
| [3] Mounting elements, e.g. washers | |
| [4] Mounting surface, e.g. mounting plate | |

Maximum permitted tightening torque: 3.2 Nm (28 in-lb)



6 Electrical Installation

6.1 General information

Observe the following notes on electrical installation:

- Observe the general safety notes.
- Strictly observe all instructions as to the technical data and the permissible conditions regarding the place of installation.

6.2 Electromagnetic compatibility (EMC)



INFORMATION

MOVIPRO[®] units can cause EMC interference within the permitted limit range according to DIN EN 61800-3.

This MOVIPRO[®] unit is a drive system of the category C2 (see DIN EN 61800-3).

For detailed information on EMC-compliant installation, refer to the publication "Drive Engineering – Practical Implementation: EMC in Drive Engineering".

6.3 Cable installation

Comply with the following points when installing the cables:

- Use suitable cables to connect the power supply and the communication.
- Route power cables and signal cables in separate cable ducts.
- Maintain the greatest possible distance between power cables and signal cables.
- Avoid using long cables running parallel to one another.



6.4 Information regarding UL

Observe the following sections for UL-compliant installation.

6.4.1 Power terminals of the power interface

Only use copper lines with a rated thermal value of 75 °C.

6.4.2 Short circuit current rating

MOVIPRO® is suitable for use on circuits capable of delivering not more than 200,000 rms symmetrical amperes. The maximum voltage is limited to AC 500 V.

6.4.3 Branch circuit protection

Integral solid state short circuit protection does not provide branch circuit protection. Branch circuit protection must be provided in accordance with the National Electrical Code and any additional local codes.

Use one of the following methods to protect branch circuits:

- Fuse according to UL 248
(Non-semiconductor branch-circuit type fuse)
- Power switch to UL 489
(Inverse-time circuit breaker)
- Type E motor protection switch to UL 508
(Self-protected combination motor controller Type E)

The maximum permitted pre-fuse depends on the following data:

- Current carrying capacity of the connection cable
- Maximum permitted pre-fusing for the power interfaces

Power interfaces	Pre-fuse
PZM2xA-A075-D02-00	Max. 35 A ¹⁾
PZM2xA-A150-D03-00	Max. 50 A ¹⁾
PZM2xA-A022-M13-00	Max. 60 A
PZM2xA-A040-M14-00	Max. 60 A
PZM2xA-A075-M16-00	Max. 60 A

1) Also observe the permitted maximum pre-fusing for the connected MOVIPRO®. Always adhere to the smallest value.

6.4.4 Motor overload protection

The units are equipped with motor overload protection with a trip current adjusted to 150% of the rated motor current.



6.4.5 Ambient temperature

The units are suitable for an ambient temperature of 40 °C, max. 60 °C with derated output current. To determine the output current rating at temperatures higher than 40 °C, the output current should be derated by 3% per °C between 40 °C and 60 °C.

6.4.6 Requirements for line topologies with MOVIPRO® units

SEW-EURODRIVE recommends to always use power interfaces with **cable and unit protection** (PZM2xA-A...-M1.-00) when implementing line installations.

For the fusing of a line installation with MOVIPRO® units with power interfaces **with** cable and unit protection (PZM2xA-A...-M1.-00), you have to observe **the total nominal supply current** of the connected MOVIPRO® units. The following table lists examples of nominal supply current values of MOVIPRO® SDC:

MOVIPRO® power rating	Nominal line current 100% (for $V_{line} = 3 \text{ AC } 400 \text{ V}$) ¹⁾
2.2 kW	AC 5 A
4.0 kW	AC 8.6 A
7.5 kW	AC 14.4 A
11.0 kW	AC 21.6 A
15.0 kW	AC 28.8 A

1) The supply currents must be reduced by 20% compared with the nominal values for $V_{line} = 3 \times \text{AC } 500 \text{ V}$. Use linear interpolation to determine intermediate values.

6.4.7 Requirements for star topologies with MOVIPRO® units

For the fusing of MOVIPRO® units with power interfaces **without** cable and unit protection (PZM2xA-A...-D0.-00), you have to observe **the nominal supply current values** of the connected MOVIPRO® units. The following table lists examples of nominal supply current values of MOVIPRO® SDC:

MOVIPRO® power	Nominal line current 100% (for $V_{line} = 3 \text{ AC } 400 \text{ V}$) ¹⁾
2.2 kW	AC 5 A
4.0 kW	AC 8.6 A
7.5 kW	AC 14.4 A
11.0 kW	AC 21.6 A
15.0 kW	AC 28.8 A

1) The supply currents must be reduced by 20% compared with the nominal values for $V_{line} = 3 \times \text{AC } 500 \text{ V}$. Use linear interpolation to determine intermediate values.



6.5 Shielding

Note the following points regarding the shielding:

- Use shielded power and electronics cables.
- Connect the shield and make sure it is grounded over a wide area at both ends. When using cables with multiple shielding, you also have to ground the inner shields on both ends over a wide area.
- For external bus connections, refer to the bus-specific installation instructions.

6.6 Unit output



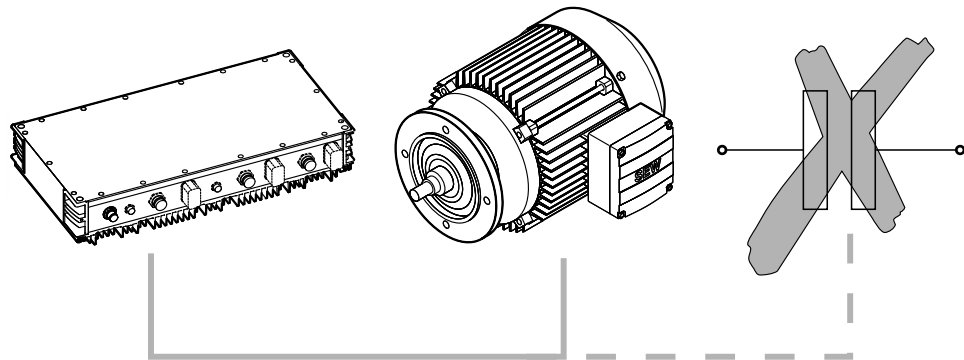
NOTICE

No capacitive loads must be connected to the output of the MOVIPRO® unit.

The unit can be destroyed by connecting capacitive loads.

- Only connect ohmic/inductive loads.
- Never connect capacitive loads.

The unit output of the MOVIPRO® unit may not be subjected to capacitive loads. A capacitive load occurs, for example, when very long cables are used to connect the motor.



413932683

The motor supply cable must not exceed a length of 30 m (98 ft).

**6.7 Installation altitudes higher than 1000 m asl**

MOVIPRO® units with supply voltages of 380 to 500 V can be used at altitudes above 1000 m asl up to 4000 m asl under the following conditions.

- The rated continuous power is reduced based on the reduced cooling above 1000 m (see section "Technical Data").
- Above 1000 m asl, the air and creeping distances are only sufficient for overvoltage class 2. If the installation calls for overvoltage class 3, you will have to install additional external overvoltage protection to limit overvoltage peaks to 2.5 kV phase-to-phase and phase-to-ground.
- If safe electrical disconnection is required, it must be implemented outside the device at altitudes of more than 2000 m (6,561 ft) above sea level (safe electrical disconnection in accordance with EN 61800-5-1 and EN 60204).
- Up to 2,000 m asl, the permitted nominal line voltage is 3 x 500 V. It is reduced by 6 V every 100 m to a maximum of 3 x 380 V at 4,000 m asl.



6.8 Protective measures against electrical hazards



⚠ WARNING

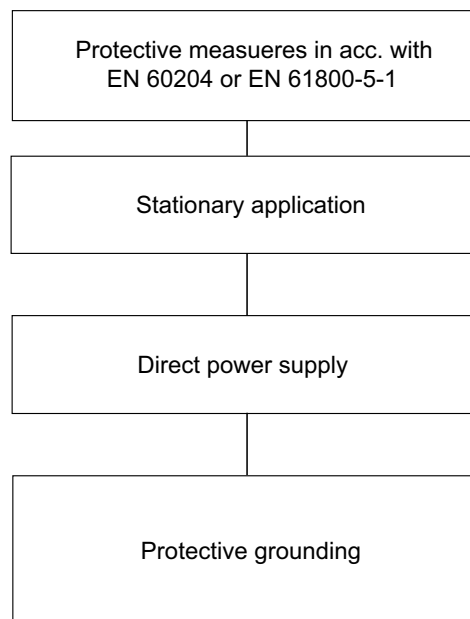
Electric shock due to missing or defective protection covers.

Severe or fatal injuries.

- Install the protective covers according to the regulations.
- The installation must only be carried out by qualified personnel.
- Never start the unit if the protective covers are not installed.

6.8.1 Overview

The following figure is an overview of the protective measures against electrical hazards:



9007200336028683

**6.8.2 PE connection****⚠ WARNING**

Electric shock due to incorrect connection of PE or equipotential bonding.

Severe or fatal injuries.

- Observe the installation instructions for stationary and mobile use.
-

It is mandatory to ground the units.

Adhere to the following rules for grounding the unit:

- Ground the unit using the shortest possible route.
- Use short, low-impedance, HF-compliant cables.

Earth-leakage currents \geq AC 3.5 mA/DC 10 mA may occur during normal operation. Observe the following to comply with EN 61800-5-1:

- **Supply system lead $< 10 \text{ mm}^2$:**

Route a **second PE conductor with the same cable cross section as the supply system lead** in parallel to the protective earth via separate terminals. Alternatively, use a **copper protective earth conductor with a cross section of 10 mm^2** .

- **Supply system lead 10 mm^2 :**

Route a **copper protective earth conductor with the cross section of the supply system lead**.



6.8.3 Connection points for grounding or equipotential bonding

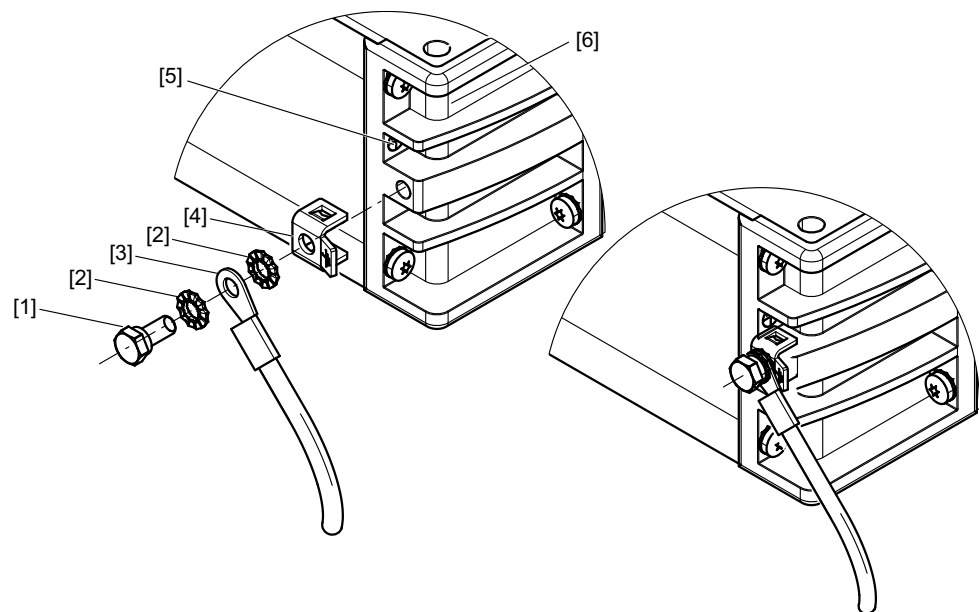
The connection points for grounding or equipotential bonding are marked on the housing corners of the units with the symbol \oplus .

The bores in the housing corners are prepared for M5 self-tapping screws, e.g. M5 x 12 to DIN ISO 3506 or equivalent.

Adhere to the following rules when you install the grounding of the equipotential bonding:

1. Secure the grounding or equipotential bonding cable using connection elements as shown in the figure below.
2. Use the grounding kit included in the scope of delivery.
3. Assemble the parts as shown in the diagram.

The following figure shows the positions of the connection points and the sequence in which to install the individual parts:



9007199514190859

- | | |
|----------------------------|----------------------------|
| [1] Screw, self-tapping | [4] Terminal clip |
| [2] Tooth lock washer | [5] Ground symbol \oplus |
| [3] Crimp cable lug for M5 | [6] Housing corner |

Maximum permitted tightening torque: 5 Nm (40 in-lb)



6.8.4 Fuses and earth-leakage circuit breaker



⚠ WARNING

Wrong type of earth-leakage circuit breaker installed.

Severe or fatal injuries.

MOVIPRO[®] can cause direct current in the protective earth conductor. When an earth-leakage circuit breaker is used for protection against direct or indirect contact, only install a type B earth-leakage circuit breaker on the power supply end of the MOVIPRO[®] unit.

SEW-EURODRIVE recommends that you do not use earth-leakage circuit breakers. However, if an earth-leakage circuit breaker is stipulated for direct or indirect protection against contact, observe the note above in accordance with EN 61800-5-1:

Install the fuses at the beginning of the supply system lead behind the supply bus junction.

Line fuse types

Line protection types in operation classes gL, gG:

- Rated fusing voltage \geq rated line voltage
- Depending on the inverter utilization, the rated fusing current must be dimensioned for 100 % of the inverter current.

Power circuit breaker with characteristics B, C:

- Power circuit breaker rated voltage \geq rated line voltage
- The rated voltage of the line protection circuit breaker must be 10 % above the inverter current.



6.9 Terminal strips

The design of the MOVIPRO® connection block depends on the unit variant.

The illustration on the front of MOVIPRO® shows the connection designations for your MOVIPRO® unit.



⚠ WARNING

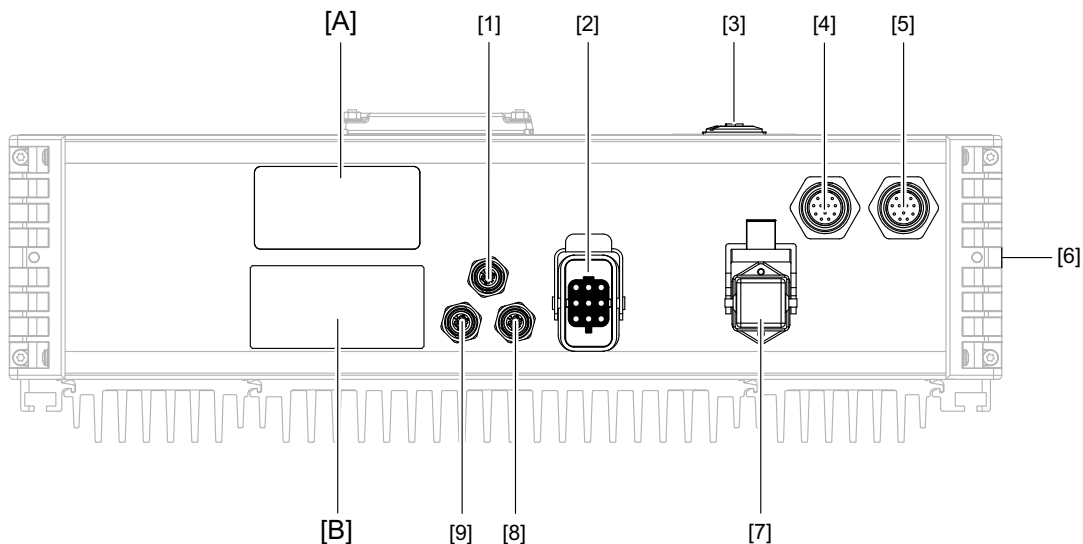
Electric shock when disconnecting or connecting voltage-carrying plug connectors.

Severe or fatal injuries.

- Switch off the DC 24 V power supply and the supply system voltage.
- Make sure that the inverter is de-energized.
- Do not disconnect or connect the plug connectors when voltage is applied.

6.9.1 Size 0

Depending on the unit variant, the MOVIPRO® connection block looks as follows:



2852387595

[A] Fieldbus

→ "Fieldbus connections" (page 54)

[B] Encoder option


→ "Encoder option connections" (page 55)

[1]	X5502	STO-IN
[2]	X2011	Motor with brake control
[3]	X4223	Ethernet service interface
[4]	X5001_1	Digital inputs/outputs – communication and control unit
[5]	X5001_2	Digital inputs – communication and control unit
[6]	X1213	AC 400 V input / 24 V supply (power interface)
	or	
	X1214	AC 400 V input / 24 V supply (power interface)
[7]	X2301	External braking resistor
[8]	X5102_1	Digital inputs – power section
[9]	X5102_2	Digital inputs – power section
	or	
	X5201	Analog input – power section



6.9.2 Size 1

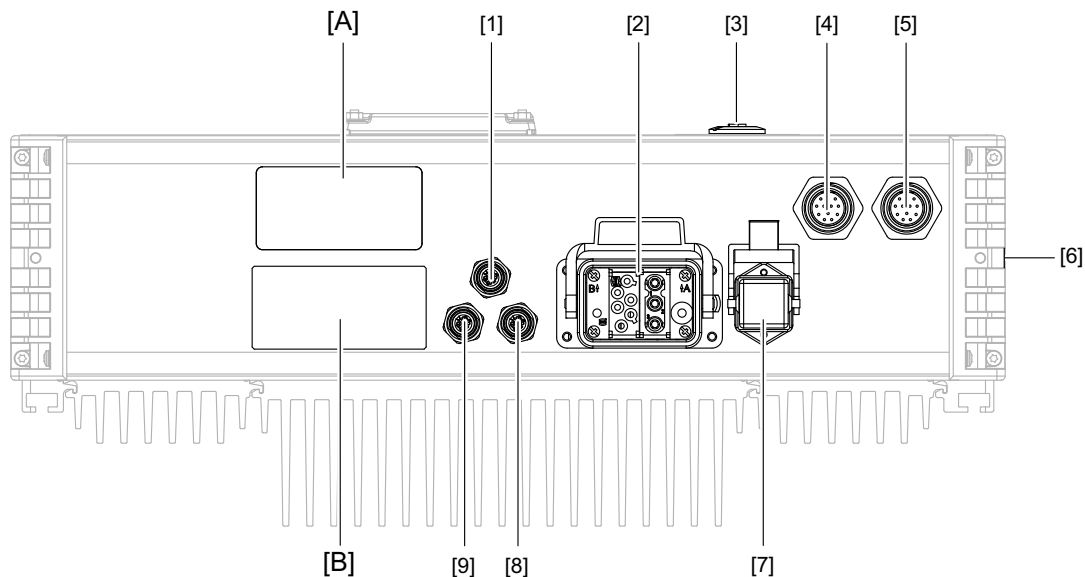Depending on the unit variant, the MOVIPRO® connection block looks as follows:



18014400338878603

[A] Fieldbus

→ "Fieldbus connections" (page 54)

[B] Encoder option


→ "Encoder option connections" (page 55)

[1]	X5502	STO-IN
[2]	X2012	Motor with brake control
[3]	X4223	Ethernet service interface
[4]	X5001_1	Digital inputs/outputs – communication and control unit
[5]	X5001_2	Digital inputs – communication and control unit
[6]	X1213	AC 400 V input / 24 V supply (power interface)
	or	
	X1214	AC 400 V input / 24 V supply (power interface)
[7]	X2301	External braking resistor
[8]	X5102_1	Digital inputs – power section
[9]	X5102_2	Digital inputs – power section
	or	
	X5201	Analog input – power section



6.9.3 Size 2

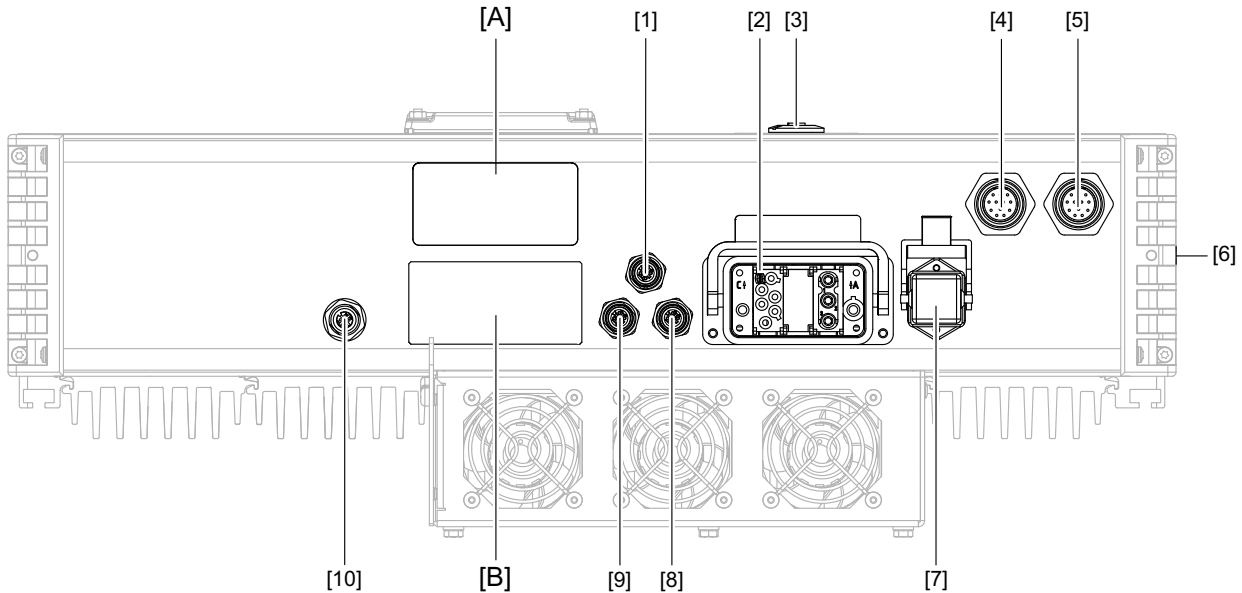Depending on the unit variant, the MOVIPRO® connection block looks as follows:



18014400341221003

[A] Fieldbus

→ "Fieldbus connections" (page 54)

[B] Encoder option

→ "Encoder option connections" (page 55)

- [1] X5502 STO-IN
- [2] X2016 Motor with brake control
- [3] X4223 Ethernet service interface
- [4] X5001_1 Digital inputs/outputs – communication and control unit
- [5] X5001_2 Digital inputs – communication and control unit
- [6] X1213 AC 400 V input / 24 V supply (power interface)
or
X1214 AC 400 V input / 24 V supply (power interface)
- [7] X2303 External braking resistor
- [8] X5102_1 Digital inputs – power section
- [9] X5102_2 Digital inputs – power section
or
X5201 Analog input – power section



6.9.4 Fieldbus connections

The following table shows the connection options for the different fieldbus types:

MOVIPRO® connections	Type code Function unit	Connections		
	PFH-P11A..-B11-I1..	[a]	X4201	PROFIBUS input, M12
		[b]	X4202	PROFIBUS output, M12
	PFH-D11A..-B12-I1..	[a]	X4241	DeviceNet input, M12
		[b]	X4242	DeviceNet output, M12
	PFH-E21A..-B63-I1..	[a]	X4232_11	Ethernet fieldbus, Push-pull RJ45
	PFH-E31A..-B63-I1..	[b]	X4232_12	
	PFH-E21A..-B63-I1..	[a]	X4233_11	Ethernet fieldbus, M12
	PFH-E31A..-B63-I1..	[b]	X4233_12	



6.9.5 Encoder option connections

The following table shows the connection options for encoders:

MOVIPRO® connections	Type code Function unit	Connections		
<div style="display: flex; justify-content: space-around;"> [a] [b] </div>	PFA-MD...B-G00-B...-/C../000	Without encoder		
<div style="display: flex; justify-content: space-around;"> [a] [b] </div>	PFA-MD...B-G10-B...-/C../000	[b]	X3001	Resolver motor encoder
	PFA-MD...B-G20-B...-/C../000	[b]	X3011	HIPERFACE®, Sin/Cos, TTL, HTL, RS422 motor encoders
<div style="display: flex; justify-content: space-around;"> [a] [b] </div>	PFA-MD...B-G21-B...-/C../000	[a]	X3211	CANopen synchronous encoder
		[b]	X3011	HIPERFACE®, Sin/Cos, TTL, HTL, RS422 motor encoders
<div style="display: flex; justify-content: space-around;"> [a] [b] </div>	PFA-MD...B-G22-B...-/C../000	[a]	X3222	Multi synchronous encoder (HIPERFACE®, SSI, Sin/Cos, HTL)
		[b]	X3011	HIPERFACE®, Sin/Cos, TTL, HTL, RS422 motor encoders




6.10 Electrical connections

6.10.1 Plug connectors

The wiring diagrams of the plug connectors display the contact end of the connection.

Designation key

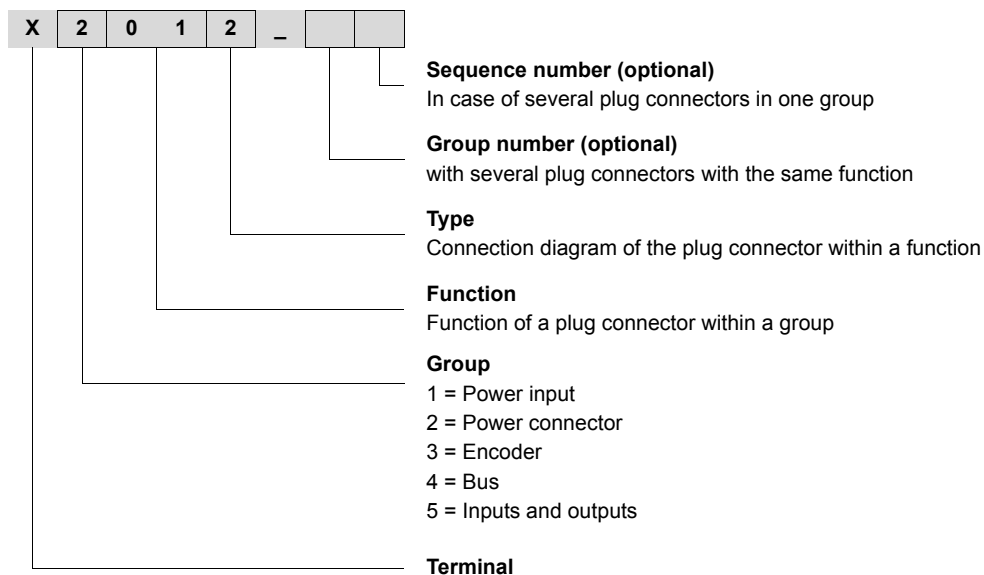The designation of the plug connectors is specified according to the following key:







6.10.2 Connection cables

Connection cables are not included in the scope of delivery.

Prefabricated cables for connection between SEW components can be ordered from SEW-EURODRIVE at any time. They are described in the following sections. Specify the part number and length of the required cable in your order.

The number and design of the required connection cables depend on the design of the units and the components to be connected. This is why not all cables that are listed are actually required.

  The following figures show the different cable designs:

Cable	Length	Installation type
	Fixed length	Suitable for cable carrier installation 
	Variable length	Not suitable for cable carrier installation 



INFORMATION

For more information about cable types, see section "Technical Data".



6.10.3 X1213: AC 400 V input / DC 24 V supply for a power interface (up to 15 kW – coded)

The following table provides information about this connection:

Function		
<ul style="list-style-type: none"> AC 400 V input to supply units up to 15.0 kW DC 24 V output and input With signal contact for external maintenance switch For connecting a power interface (PZM) 		
Connection type		
Han-Modular® 10 B, male		
Wiring diagram		
2442494347		
Assignment		
No.	Name	Function
[a] Han® C module, male		
1	L1	Supply system phase 1
2	L2	Supply system phase 2
3	L3	Supply system phase 3
[b] Han® EE module, male		
Coding of the unit power, see section coding (page 58)		
[c] Han® EE module, male		
1	+24V_C	DC 24 V input – backup voltage
2	SC	Signal contact for external maintenance switch
3	VO24	DC 24 V output
4	n.c.	Not connected
5	0V24_C	0V24 reference potential – backup voltage
6	n.c.	Not connected
7	GND	Reference potential
8	n.c.	Not connected
Hinged frame		
PE	PE	PE connection



Coding


The following table shows the assignment of the different coding to the respective unit power ratings and the corresponding power interfaces:

Unit power	Coding of connection X1213	Power interface
2.2 kW		PZM2xA-A075-D02-00 PZM2xA-A150-D03-00 PZM2xA-A022-M13-00
4.0 kW		PZM2xA-A075-D02-00 PZM2xA-A150-D03-00 PZM2xA-A040-M14-00
7.5 kW		PZM2xA-A075-D02-00 PZM2xA-A150-D03-00 PZM2xA-A075-M16-00
11.0 kW		PZM2xA-A150-D03-00
15.0 kW		PZM2xA-A150-D03-00



Power interface connections

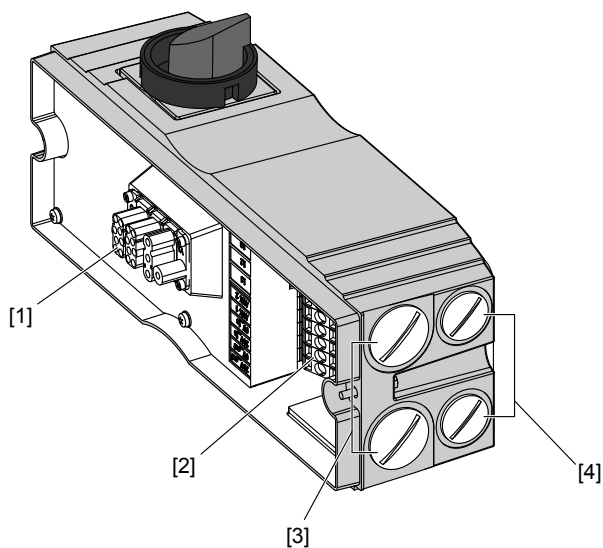The following table shows the connections of the power interface:




9007201209644939

- [1] Connection to the MOVIPRO® unit (Han® 10 B, female)
 - [2] Terminal strip, power input
 - [3] Covers of the screw fitting hole (M32 × 1.5)¹⁾
 - [4] Covers of the screw fitting hole (M25 × 1.5)¹⁾
- 1) The respective screw fittings are not included in the scope of delivery.



Terminal strip of power interface

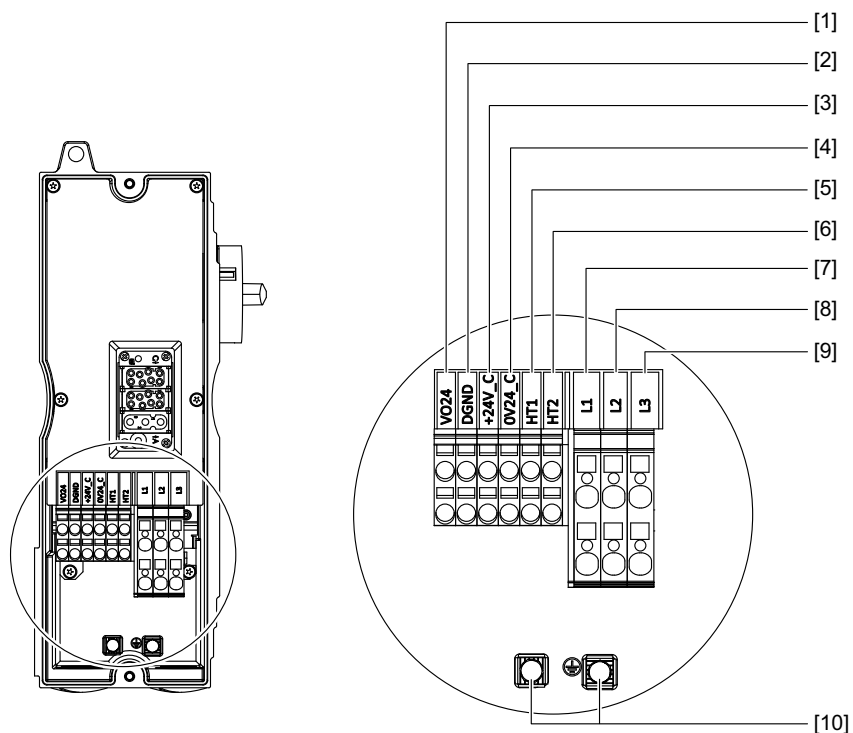The following table shows the connections of the power interface:



9007201210059403

Terminal strip (power input terminal strip)			Terminal cross section
No.	Name	Function	
1	VO24	DC 24 V output	6 mm ²
2	GND	Reference potential / DC 24 V output	
3	+24 V_C	DC 24 V input	
4	0V24_C	0V24 reference potential – input	
5	HT1	Auxiliary terminal for additional voltage levels (without internal function)	10 mm ²
6	HT2	Auxiliary terminal for additional voltage levels (without internal function)	
7	L1	Phase L1	
8	L2	Phase L2	
9	L3	Phase L3	
10	PE	Equipotential bonding/protective earth conductor	



6.10.4 X1214: AC 400 V input / DC 24 V supply for a supply cable (up to 15 kW – coded)

The following table provides information about this connection:

Function		
<ul style="list-style-type: none"> AC 400 V input to supply units up to 15.0 kW DC 24 V output and input 	<ul style="list-style-type: none"> With signal contact for external maintenance switch For connecting a supply cable 	
Connection type		
Han-Modular® 10 B, male, 1 single lever		
Wiring diagram		
2442494347		
Assignment		
No.	Name	Function
[a] Han® C module, male		
1	L1	Supply system phase 1
2	L2	Supply system phase 2
3	L3	Supply system phase 3
[b] Han® EE module, male		
Coding of the unit power, see section coding (page 63)		
[c] Han® EE module, male		
1	+24V_C	DC 24 V input – backup voltage
2	SC	Signal contact for external maintenance switch
3	VO24	DC 24 V output
4	n.c.	Not connected
5	0V24_C	0V24 reference potential – backup voltage
6	n.c.	Not connected
7	GND	Reference potential
8	n.c.	Not connected
Hinged frame		
PE	PE	PE connection



INFORMATION

The internal components can be supplied with DC 24 V either from the MOVIPRO® or via an external DC 24 V backup voltage.

To use the **internal** DC 24 V supply, you must jumper the following contacts:

- [c].1 and [c].3
- [c].5 and [c].7

To use an **external** DC 24 V backup voltage, connect it to the following contacts:

- [c].1
- [c].5

In this case, you **must not use contacts [c].3 and [c].7!**



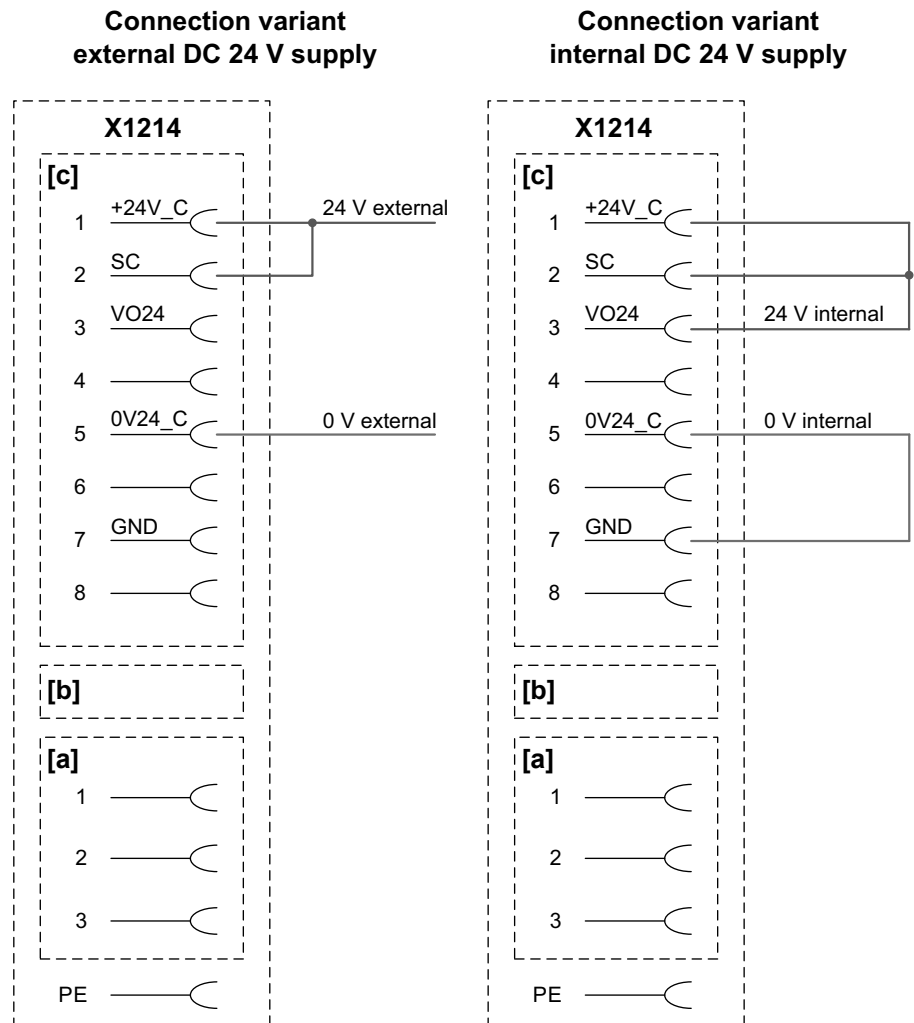
Signal contact for external maintenance switch

MOVIPRO® has a signal contact for an external maintenance switch.



INFORMATION

If you do not use an external maintenance switch, you must jumper the DC 24 V to the signal contact (SC).



3044224011



Coding

The following table shows the assignment of the individual coding to the respective unit power rating:

Unit power	Coding of connection X1214
2.2 kW	
4.0 kW	
7.5 kW	
11.0 kW	
15.0 kW	



6.10.5 X2011: Motor with brake control (MOVIPRO® size 0)



NOTICE

Damage or malfunction due to motors with built-in brake rectifiers.

Damage to the drive system or its environment.

- You **must not** use motors with built-in brake rectifiers in conjunction with MOVIPRO®.











The following table provides information about this connection:

Function		
Power connection for motor with brake up to 4.0 kW		
Connection type		
Han® Q 8/0, female		
Wiring diagram		
9007201696170251		
Assignment		
No.	Name	Function
1	U	Motor phase U output
2	14	SEW brake terminal 14 (white) ¹⁾
3	W	Motor phase W output
4	15	SEW brake terminal 15 (blue)
5	TF/TH/KTY+	Motor temperature sensor (+)
6	13	SEW brake terminal 13 (red)
7	V	Motor phase V output
8	TF/TH/KTY-	Motor temperature sensor (-)
PE	PE	PE connection

1) When using a DC 24 V brake: Reserved




   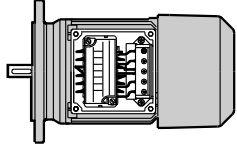 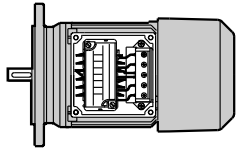    Connection cables The following table provides an overview of the cables available for this connection:

Connection cable and component				
MOVIPRO®	Hybrid cables	Length/ Installation type	Cable type	Drive
up to 2.2 kW (IEC / UL)	<p>Part number 1 812 579 4</p>  <p>Han® Q 8/0</p> <p>Open (M4 terminal box connection)</p>	Variable length	D/1.5	<p>DRS71 – 100 DRE80 – 100 DRP90 – 100</p> 
	<p>Part number 1 812 770 3 Δ</p>  <p>Han® Q 8/0</p> <p>IS</p>	Variable length		<p>DRS71 – 90 Δ DRE80 – 100M Δ DRP90 – 100 Δ</p> 
	<p>Part number 1 812 768 1 Δ</p>  <p>Han® Q 8/0</p> <p>IS</p>	Variable length		<p>DRS71 – 80M Δ DRE80 – 90M Δ DRP90 Δ</p> 
	<p>Part number 1 812 771 1</p>  <p>Han® Q 8/0</p> <p>ABB8</p>	Variable length		<p>DRS71 – 90 DRE80 – 100M DRP90 – 100</p> 
	<p>Part number 1 812 773 8</p>  <p>Han® Q 8/0</p> <p>ASB8</p>	Variable length		<p>DRS71 – 90 DRE80 – 100M DRP90 – 100</p> 



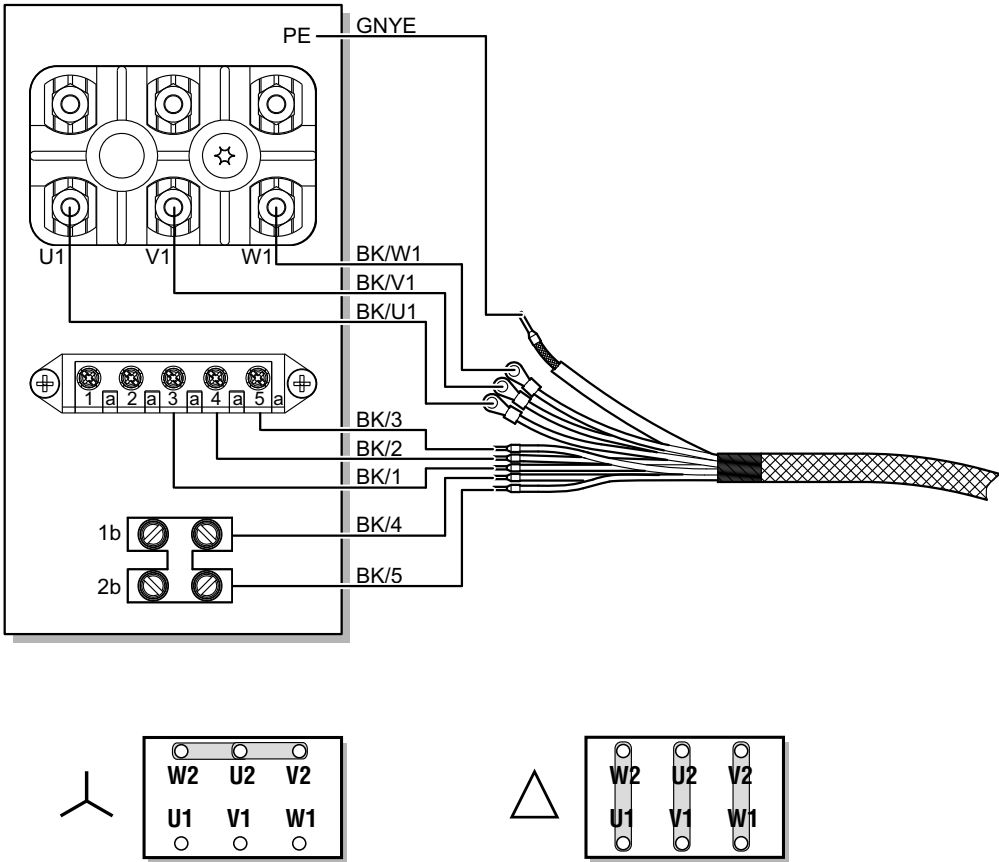The following figure shows the connection of the hybrid cable to the terminal box of the DR motor. However, also observe the wiring diagram of the respective motor.



2818704651



6.10.6 X2012: Motor with brake control (MOVIPRO® size 1)



NOTICE

Damage or malfunction due to motors with built-in brake rectifiers.

Damage to the drive system or its environment.

- You **must not** use motors with built-in brake rectifiers in conjunction with MOVIPRO®.

The following table provides information about this connection:

Function		
Power connection for motor with brake up to 7.5 kW		
Connection type		
Han-Modular® 6 B, female, 1 single lever		
Wiring diagram		
2441439499		
Assignment		
No.	Name	Function
[A] Han® C Module, female		
1	U	Motor phase U output
2	V	Motor phase V output
3	W	Motor phase W output
[B] Han® E Protected Module, female		
1	TF/TH/KTY+	Motor temperature sensor (+) ¹⁾
2	15	SEW brake terminal 15 (blue)
3	13	SEW brake terminal 13 (red)
4	14	SEW brake terminal 14 (white) ²⁾
5	n.c.	Not connected
6	TF/TH/KTY-	Motor temperature sensor (-) ¹⁾
Hinged frame		
PE	PE	PE connection

1) Not connected in conjunction with motor encoder/resolver (PFA-MD...B-G10-BG...)











2) When using a DC 24 V brake: Reserved



Connection cables The following table provides an overview of the cables available for this connection:

Connection cable and component				
MOVIPRO®	Hybrid cables	Length/ Installation type	Cable type	Drive
4.0 kW (IEC / UL)	<p>Part number 1 811 813 5</p> <p>Han® 6 B</p> <p>Open (M4 terminal box connection)</p>	Variable length	D/1.5	<p>DRS71 – 100 DRE80 – 100 DRP90 – 100</p>
	<p>Part number 1 811 814 3</p> <p>Han® 6 B</p> <p>Open (M5 terminal box connection)</p>	Variable length		<p>DRS112 DRE112 – 132 DRP112 – 132</p>
	<p>Part number 1 811 817 8 \blacktriangleleft</p> <p>Han® 6 B</p> <p>IS</p>	Variable length		<p>DRS71 – 112 \blacktriangleleft DRE80 – 132S \blacktriangleleft DRP90 – 132M \blacktriangleleft</p>
	<p>Part number 1 811 815 1 \blacktriangle</p> <p>Han® 6 B</p> <p>IS</p>	Variable length		<p>DRS71 – 90 \blacktriangle DRE80 – 100M \blacktriangle DRP90 – 100 \blacktriangle</p>
	<p>Part number 1 811 818 6</p> <p>Han® 6 B</p> <p>ABB8</p>	Variable length		<p>DRS71 – 112 DRE80 – 132 DRP90 – 132</p>

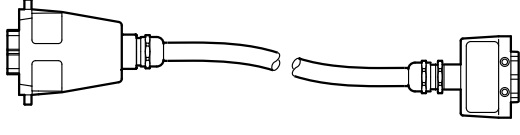      
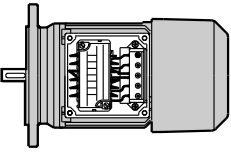
 
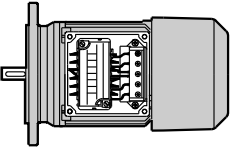








Connection cable and component				
MOVIPRO®	Hybrid cables	Length/ Installation type	Cable type	Drive
4.0 kW (IEC / UL)	Part number 1 811 819 4  Han® 6 B ASB8	Variable length	D/1.5	DRS71 – 112 DRE80 – 132 DRP90 – 132 
4.0 kW (IEC / UL) to 7.5 kW (IEC)	Part number 1 810 833 4  Han® 6 B Open (M4 terminal box connection)	Variable length	D/2.5	DRS71 – 100 DRE80 – 100 DRP90 – 100 
	Part number 1 810 834 2  Han® 6 B Open (M5 terminal box connection)	Variable length		DRS112 – 132M DRE112 – 132 DRP112 – 132 
	Part number 1 810 832 6 \blacktriangledown  Han® 6 B IS	Variable length		DRS71 – 132M \blacktriangledown DRE80 – 132 \blacktriangledown DRP90 – 132 \blacktriangledown 
	Part number 1 810 831 8 \triangle  Han® 6 B IS	Variable length		DRS71 – 112 \triangle DRE80 – 132S \triangle DRP90 – 132M \triangle 



Connection cable and component				
MOVIPRO®	Hybrid cables	Length/ Installation type	Cable type	Drive
4.0 kW (IEC / UL) to 7.5 kW (IEC)	Part number 1 810 824 5 Han® 6 B ABB8	Variable length 	D/2.5	DRS71 – 132M DRE80 – 160S DRP90 – 160M
	Part number 1 810 820 2 Han® 6 B ASB8	Variable length 		DRS71 – 132M DRE80 – 160S DRP90 – 160M
4.0 kW (IEC / UL) to 7.5 kW (IEC / UL)	Part number 1 812 060 1 Han® 6 B Open (M5 terminal box connection)	Variable length 	D/4.0	DRS112 – 132M DRE112 – 132 DRP112 – 132
	Part number 1 812 128 4 Han® 6 B IS	Variable length 		DRS71 – 132M DRE80 – 132 DRP90 – 132
	Part number 1 812 127 6 Han® 6 B IS	Variable length 		DRS71 – 112 DRE80 – 132S DRP90 – 132M

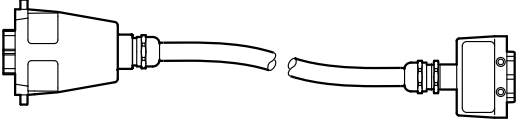 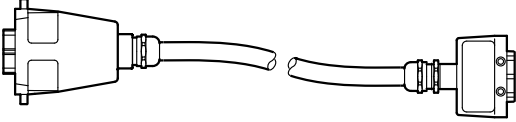 

Connection cable and component				
MOVIPRO®	Hybrid cables	Length/ Installation type	Cable type	Drive
4.0 kW (IEC / UL) to 7.5 kW (IEC / UL)	Part number 1 812 062 8  Han® 6 B ABB8	Variable length	D/4.0	DRS71 – 132M DRE80 – 160S DRP90 – 160M 
	Part number 1 812 063 6  Han® 6 B ASB8	Variable length		DRS71 – 132M DRE80 – 160S DRP90 – 160M 

 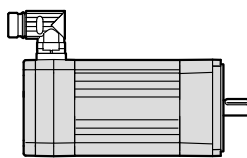   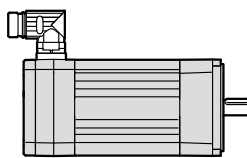Connection cable and component				
MOVIPRO®	Hybrid cables	Length/ Installation type	Cable type	Drive
4.0 kW (IEC / UL) to 7.5 kW (IEC / UL)	Part number 1 812 202 7  Han® 6 B SB11	Variable length	E/1.5	CMP63 – 80 
	Part number 1 811 052 5  Han® 6 B SB12	Variable length	E/2.5	
	Part number 1 812 203 5  Han® 6 B SB14	Variable length	E/4.0	CMP63 – 100 



Special cables

The following phase reversal cables are available for this connection

Connection cable			
MOVIPRO®	Phase reversal cables	Length/installation type	Cable type
4.0 kW (IEC / UL) to 7.5 kW (IEC)	<p>Part number 1 811 373 7</p> <p>Han® 6 B Han® 6 B</p>	<p>Fixed length</p>	D/2.5
4.0 kW (IEC / UL) to 7.5 kW (IEC / UL)	<p>Part number 1 812 200 0</p> <p>Han® 6 B Han® 6 B</p>	<p>Fixed length</p>	D/6.0




Connection of cables with open ends

The following tables shows the conductor assignment in cables with the following part numbers and the corresponding motor terminals of the DR motor:

- 1 811 813 5
- 1 811 814 3
- 1 810 833 4
- 1 810 834 2
- 1 812 060 1

DR motor terminal	Wire color/hybrid cable designation
U1	Black/U1
V1	Black/V1
W1	Black/W1
4a	Black / 1
3a	Black / 2
5a	Black / 3
1b	Black / 4
2b	Black / 5
PE connection	Green/yellow + shield end (inner shield)

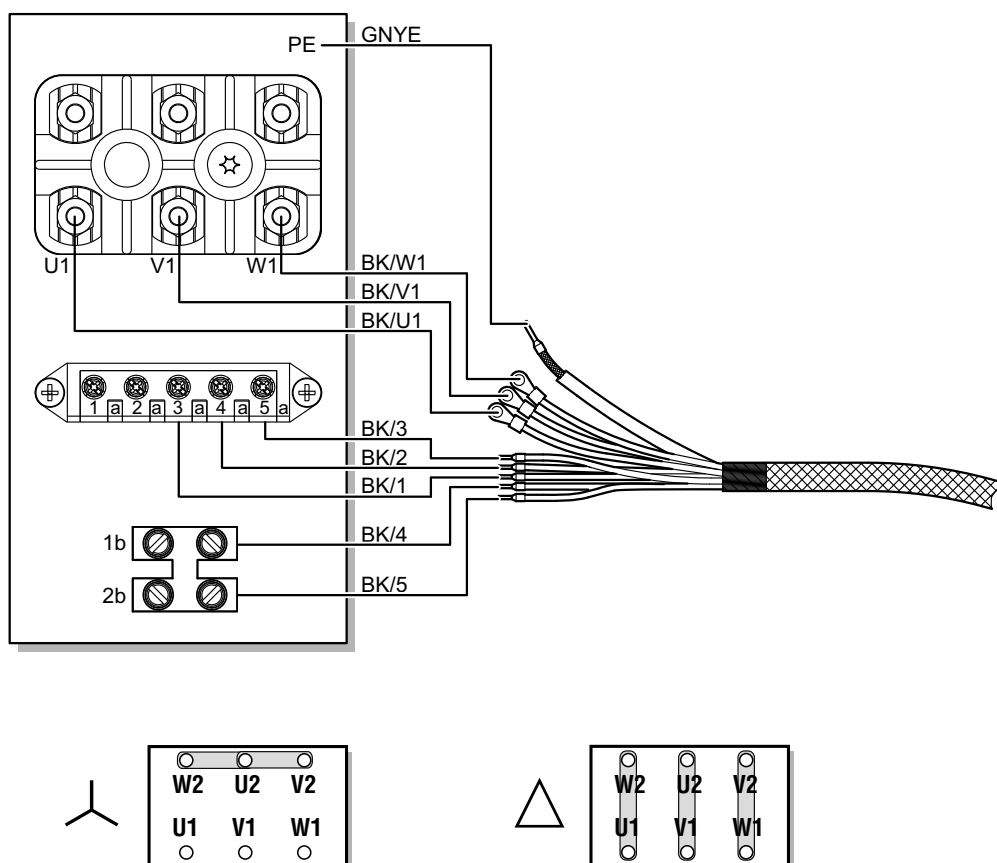The following figure shows the connection of the cable to the terminal box of the DR motor. However, also observe the wiring diagram of the respective motor.



2818704651



6.10.7 X2016: Motor with brake control (MOVIPRO® size 2)



NOTICE

Damage or malfunction due to motors with built-in brake rectifiers.

Damage to the drive system or its environment.

- You **must not** use motors with built-in brake rectifiers in conjunction with MOVIPRO®.

The following table provides information about this connection:

 

 
 
 
 

 




 

 








Function		
Power connection for motor with brake up to 15 kW		
Connection type		
Han-Modular® 10 B, female, 1 single lever		
Wiring diagram		
2442491787		
Assignment		
No.	Name	Function
[A] Han® C Module, female		
1	U	Motor phase U output
2	V	Motor phase V output
3	W	Motor phase W output
[C] Han® E Protected Module, female		
1	TF/TH/KTY+	Motor temperature sensor (+) ¹⁾
2	15	SEW brake terminal 15 (blue)
3	13	SEW brake terminal 13 (red)
4	14	SEW brake terminal 14 (white) ²⁾
5	n.c.	Not connected
6	TF/TH/KTY-	Motor temperature sensor (-) ¹⁾
Hinged frame		
PE	PE	PE connection

1) Not connected in conjunction with motor encoder/resolver (PFA-MD...B-G10-BG...)

2) When using a DC 24 V brake: Reserved



    Connection cables The following tables list the cables available for this connection:

Connection cable and component				
MOVIPRO®	Hybrid cables	Length/Installation type	Cable type	Drive
11.0 kW (IEC / UL) to 15.0 kW (IEC)	Part number 1 811 045 2  Han® 10 B Open (M5 terminal box connection)	Variable length 	D/6.0	DRS112 – 132 DRE112 – 132 DRP112 – 132 
	Part number 1 811 047 9  Han® 10 B Open (M6 terminal box connection)	Variable length 		DRS160 – 180S DRE160 – 180M DRP160 – 180L 
	Part number 1 812 356 2   Han® 10 B ADB2	Variable length 		DRS112 – 180S  DRE112 – 180M  DRP112 – 180L  
	Part number 1 812 357 0   Han® 10 B ADB2	Variable length 		DRS112 – 160S  DRE112 – 160M  DRP112 – 180S  
	Part number 1 811 043 6  Han® 10 B ABB8	Variable length 		DRS112 – 180S DRE112 – 180M DRP112 – 180L 







Connection cable and component				
MOVIPRO®	Hybrid cables	Length/ Installation type	Cable type	Drive
11.0 kW (IEC / UL) to 15.0 kW (IEC / UL)	<p>Part number 1 812 198 5</p> <p>Han® 10 B Open (M6 terminal box connection)</p>	Variable length	D/10.0	<p>DRS160 – 180S DRE160 – 180M DRP160 – 180L</p>
	<p>Part number 1 812 358 9</p> <p>Han® 10 B ADB2</p>	Variable length		<p>DRS112 – 180S DRE112 – 180M DRP112 – 180L</p>
	<p>Part number 1 811 820 8</p> <p>Han® 10 B ABB8</p>	Variable length		<p>DRS112 – 180S DRE112 – 180M DRP112 – 180L</p>

Connection cable and component				
MOVIPRO®	Hybrid cables	Length/ installa- tion type	Cable type	Drive
11.0 kW (IEC / UL) to 15.0 kW (IEC / UL)	<p>Part number 1 812 205 1</p> <p>Han® 10 B SB14</p>	Variable length	E/4.0	<p>CMP63 – 100</p>
	<p>Part number 1 811 053 3</p> <p>Han® 10 B SBB6</p>	Variable length	E/6.0	<p>CMP80 – 100</p>



Special cables

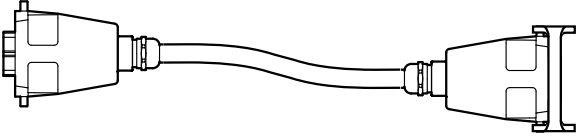 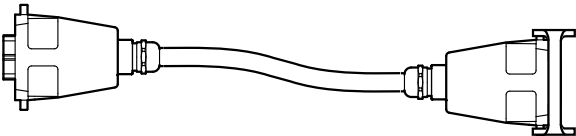 The following phase reversal cable is available for this connection:

Connection cable			
MOVIPRO®	Phase reversal cables	Length/installation type	Cable type
11.0 kW (IEC / UL) to 15.0 kW (IEC / UL)	Part number 1 811 963 8  Han® 10 B Han® 10 B	Fixed length 	D/6.0
	Part number 1 811 374 5  Han® 10 B Han® 10 B	Fixed length 	D/10.0






Connection of cables with open ends

The following tables shows the conductor assignment in cables with the following part numbers and the corresponding motor terminals of the DR motor:

- 1 811 045 2
- 1 811 047 9
- 1 812 198 5

DR motor terminal	Wire color/hybrid cable designation
U1	Black/U1
V1	Black/V1
W1	Black/W1
4a	Black / 1
3a	Black / 2
5a	Black / 3
1b	Black / 4
2b	Black / 5
PE connection	Green/yellow + shield end (inner shield)

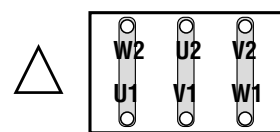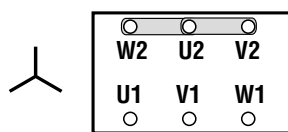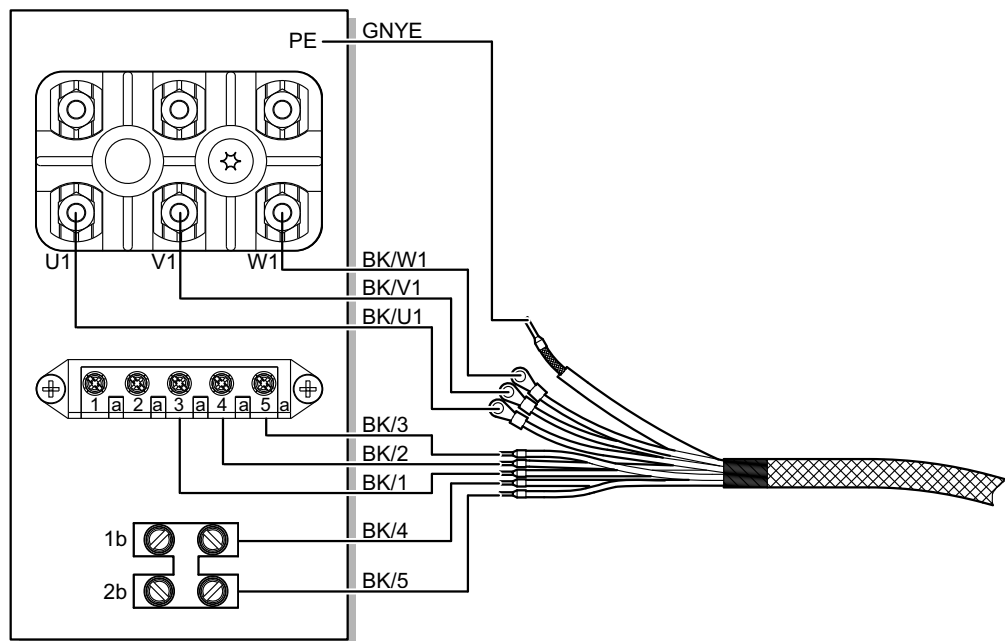The following figure shows the connection of the cable to the terminal box of the DR motor. However, also observe the wiring diagram of the respective motor.



2818704651



6.10.8 X2301: Braking resistor (MOVIPRO® size 0 and 1)

The following table provides information about this connection:

Function		
Power connection for external braking resistor		
Connection type		
Han® Q 5/0, female		
Wiring diagram		
2442587659		
Assignment		
No.	Name	Function
1	n.c.	Not connected
2	n.c.	Not connected
3	+R	Braking resistor (+)
4	n.c.	Not connected
5	-R	Braking resistor (-)
PE	PE	PE connection

Connection cables The following table provides an overview of the cables available for this connection:

Connection cable and component			
MOVIPRO®	Cable	Length/ Installation type	Component
2.2 to 7.5 kW	Part number: 1 172 291 6 Cable design: (3G2.5) Han® Q 5/0 Open (Conductor end sleeves)	Variable length 	External braking resistor¹⁾

1) Observe the individual terminal cross sections when you connect the braking resistors.

Connection of cables with open ends

The following table shows the conductor assignment of the cable with the following part number:

1 172 291 6

Signal name	Color coding
+R	Black / 1
-R	Black / 2
PE connection	Green/yellow



6.10.9 X2303: Braking resistor (MOVIPRO® size 2)

The following table provides information about this connection:

Function		
Power connection for external braking resistor		
Connection type		
Han® Q 2/0, female, I-coded		
Wiring diagram		
2442589963		
Assignment		
No.	Name	Function
1	+R	Braking resistor (+)
2	-R	Braking resistor (-)
PE	PE	PE connection

Connection cables The following table provides an overview of the cables available for this connection:

Connection cable and component			
MOVIPRO®	Hybrid cables	Length/ Installation type	Component
11.0 to 15.0 kW	Part number 1 812 196 9 Cable design: (3G2.5) Han® Q 2/0 Open (Conductor end sleeves)	Variable length 	External braking resistors:¹⁾
	Part number 1 812 197 7 Cable design: (3G6.0) Han® Q 2/0 Open (Conductor end sleeves)	Variable length 	

1) Observe the individual terminal cross sections when you connect the braking resistors.



Connection of cables with open ends

The following table shows the conductor assignment of the cables with the following part numbers:

- 1 812 196 9
- 1 812 197 7

Signal name	Color coding
+R	Black / 1
-R	Black / 2
PE connection	Green/yellow






6.10.10 X3001: Motor encoder (resolver)

The following table provides information about this connection:

Function		
Connection for resolver		
Connection type		
M23, P insert 12-pole, female, +20°-coded		
Wiring diagram		
2459939339		
Assignment		
No.	Name	Function
1	Ref+	Reference voltage (+)
2	Ref-	Reference voltage (-)
3	Cos+	Cosine track (+)
4	Cos-	Cosine track (-)
5	Sin+	Sine track (+)
6	Sin-	Sine track (-)
7	res.	Reserved
8	res.	Reserved
9	TF/TH/KTY+	Motor temperature sensor (+)
10	TF/TH/KTY-	Motor temperature sensor (-)
11	res.	Reserved
12	res.	Reserved



  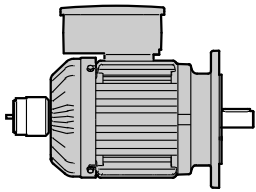  Connection cables The following table provides an overview of the cables available for this connection:

Connection cable and component		
Encoder cable	Length/ Installation type	Component
<p>Part number 1 172 492 7 Cable design: (4X2X0.25)</p>  <p>M23, 12-pole, 20°-coded</p> <p>M23, 12-pole, female, 0°-coded</p>	<p>Variable length</p> 	<p>Resolver RH1M, RH1L</p> 
<p>Part number 1 172 643 1 Cable design: (4X2X0.25)</p>  <p>M23, 12-pole, 20°-coded</p> <p>Open (Conductor end sleeves)</p>	<p>Variable length</p> 	

Connection of cables with open ends

The following table shows the conductor assignment of the cable with the following part number:

1 172 643 1

Signal name	Color coding
Ref+	Pink
Ref-	Gray
Cos+	Red
Cos-	Blue
Sin+	Yellow
Sin-	Green
TF/TH/KTY+	White
TF/TH/KTY-	Brown



6.10.11 X3011: Motor encoder (HIPERFACE®, sin/cos, TTL, HTL, RS422)





The following table provides information about this connection:

Function		
Connection for HIPERFACE®, sin/cos, TTL, HTL and RS422 encoders		
Connection type		
M23, P insert 12-pole, female, +20°-coded		
Wiring diagram		
2459939339		
Assignment		
No.	Name	Function
1	C	Signal track C (K0)
2	/C	Negated signal track C (/K0)
3	A	Signal track A (K1)
4	/A	Negated signal track A (/K1)
5	B	Signal track B (K2)
6	/B	Negated signal track B (/K2)
7	Data-	Data line (-)
8	Data+	Data line (+)
9	TF/TH/KTY+	Motor temperature sensor (+)
10	TF/TH/KTY-	Motor temperature sensor (-)
11	GND	Reference potential
12	+12V	DC 12 V output ¹⁾



1) Total current load of DC 12 V encoder supply \leq DC 650 mA.



    Connection cable The following table provides an overview of the cables available for this connection:


Connection cable and component		
Encoder cable	Length/ Installation type	Component
<p>Part number 1 812 145 4 (with temperature sensor) Cable design: (6X2X0.25)</p>  <p>M23, 12-pole, 20°-coded</p> <p>M23, 12-pole, female, 0°-coded</p>	Variable length	AK0H, AK1H, EK1H
<p>Part number 1 812 192 6 (without temperature sensor) Cable design: (6X2X0.25)</p>  <p>M23, 12-pole, 20°-coded</p> <p>M23, 12-pole, female, 0°-coded</p>	Variable length	AK0H, AK1H, EK1H
<p>Part number 1 812 143 8 (without temperature sensor) Cable design: (6X2X0.25)</p>  <p>M23, 12-pole, 20°-coded</p> <p>Open (Conductor end sleeves)</p>	Variable length	...S, ...R, ...C, ...W, AS3H, AS4H, AV1H, AS7Y, AG7Y
<p>Part number 1 812 144 6 (with temperature sensor) Cable design: (6X2X0.25)</p>  <p>M23, 12-pole, 20°-coded</p> <p>Open (Conductor end sleeves)</p>	Variable length	...S, ...R, ...C, ...W, AS3H, AS4H, AV1H, AS7Y, AG7Y

  

Connection cable and component		
Encoder cable	Length/ Installation type	Component
<p>Part number 1 811 099 1 (without temperature sensor) Cable design: (6X2X0.25)</p>  <p>M23, 12-pole, 20°-coded</p> <p>Encoder cover</p>	Variable length	...S, ...R, ...C, ...W, AS7W, AG7W
<p>Part number 1 812 195 0 (without temperature sensor) Cable design: (4X2X0.25)</p>  <p>M23, 12-pole, 20°-coded</p> <p>M12, 8-pole, female</p>	Variable length	E17.

Special cables

 The following encoder signal reversal cable is available for this connection:

Connection cable		
Encoder signal reversal cable	Length/ Installation type	Component
<p>Part number 1 811 480 6¹⁾ Cable design: (6X2X0.25)</p>  <p>M23, 12-pole, 20°-coded</p> <p>M23, 12-pole, female, 20°-coded</p>	Variable length	AK0H, AK1H, EK1H

1) Not suitable for HIPERFACE® encoders.



*Connection of
cables with open
ends*

The following table shows the conductor assignment of the cable with the following part number:

1 812 143 8

Signal name	Color coding
C	Brown
/C	White
A	Red
/A	Blue
B	Yellow
/B	Green
Data-	Violet
Data+	Black
GND	Gray pink + pink
+12V	Red blue + gray

The following table shows the conductor assignment of the cable with the following part number:

1 812 144 6

Signal name	Color coding
C	Pink
/C	Gray
A	Red
/A	Blue
B	Yellow
/B	Green
Data-	Violet
Data+	Black
TF/TH/KTY+	Brown
TF/TH/KTY-	White
GND	Gray pink
+12V	Red blue



6.10.12 X3211: Distance encoder (CANopen)

The following table provides information about this connection:


 
Function		
Connection for CANopen encoder		
Connection type		
M12, 5-pole, female, A-coded		
Wiring diagram		
2264816267		
Assignment		
No.	Name	Function
1	CAN_SHLD	Shield/equipotential bonding
2	+24V	DC 24 V output ¹⁾
3	GND	Reference potential
4	CAN_H	CAN data line (high)
5	CAN_L	CAN data line (low)

1) Total current load of DC 24 V encoder supply \leq 400 mA.

Connection cables The following table provides an overview of the cables available for this connection:

Connection cable and component		
Cable	Length/ Installation type	Component
Length 5 m: Part no. 1 328 633 1 Length 10 m: Part no. 1 328 635 8 Length 15 m: Part no. 1 328 636 6 Cable design: ((1X2X0.2)+(1X2X0.32)+1X0.32)	Fixed length	Sick DME4000, TR CE58M, TR LE200, WCS3(B)-LS410
 M12		M12, female



Connection cable and component		
Cable	Length/ Installation type	Component
<p>Length 5 m: Part no. 1 328 140 2 Length 10 m: Part no. 1 328 141 0 Length 15 m: Part no. 1 328 142 9 Cable design: ((1X2X0.2)+(1X2X0.32)+1X0.32)</p>  <p>M12</p> <p>Open (Conductor end sleeves)</p>	<p>Fixed length</p> 	<p>Sick DME4000, TR CE58M, TR LE200, WCS3(B)-LS410</p>

Connection of cables with open ends

The following table shows the conductor assignment of the cables with the following part numbers:

- 1 328 140 2
- 1 328 141 0
- 1 328 142 9

Signal name	Color coding
CAN_SHLD	Gray
+24V	Red
GND	Black
CAN_H	White
CAN_L	Blue



6.10.13 X3222: Multi distance encoder (HIPERFACE[®], SSI, sin/cos, TTL, HTL, RS422)

The following table provides information about this connection:

Function		
Connection for HIPERFACE [®] , SSI, sin/cos, TTL, HTL and RS422 encoders		
Connection type		
M23, P insert 12-pole, female, +20°-coded		
Wiring diagram		
2459939339		
Assignment		
No.	Name	Function
1	CLK (C)	Clock line (Signal track C (K0))
2	/CLK (/C)	Negated clock line (Negated signal track C (/K0))
3	A	Signal track A (K1)
4	/A	Negated signal track A (/K1)
5	B	Signal track B (K2)
6	/B	Negated signal track B (/K2)
7	Data-	Data line (-)
8	Data+	Data line (+)
9	GND	Reference potential
10	+24V	DC 24 V output ¹⁾
11	GND	Reference potential
12	+12V	DC 12 V output ²⁾

1) Total current load of DC 24 V encoder supply \leq 400 mA.



2) Total current load of DC 12 V encoder supply \leq 650 mA.

Connection cables

The following table provides an overview of the cables available for this connection:

Connection cable and component		
Encoder cable	Length/ Installation type	Component
<p>Part number 1 812 193 4 Cable design: (6X2X0.25)</p> <p>M23, 12-pole, 20°-coded</p> <p>Open (Conductor end sleeves)</p>	<p>Variable length</p>	<p>HIPERFACE[®] / SSI encoder (12 V)</p>

  

Connection cable and component		
Encoder cable	Length/ Installation type	Component
<p>Part number 1 812 194 2 Cable design: (6X2X0.25)</p>  <p>M23, 12-pole, 20°-coded</p> <p>Open (Conductor end sleeves)</p>	<p>Variable length</p> 	<p>HIPERFACE® / SSI encoder (24 V)</p>

*Connection of
cables with open
ends*

The following table shows the conductor assignment of the cable with the following part number:

1 812 193 4

Signal name	Color coding
CLK (C)	Brown
/CLK (/C)	White
A	Red
/A	Blue
B	Yellow
/B	Green
Data-	Violet
Data+	Black
GND	Gray pink + pink
+12V	Red blue + gray

The following table shows the conductor assignment of the cable with the following part number:


1 812 194 2

Signal name	Color coding
CLK (C)	Brown
/CLK (/C)	White
A	Red
/A	Blue
B	Yellow
/B	Green
Data-	Violet
Data+	Black
GND	Gray pink + pink
+24V	Red blue + gray




6.10.14 X4201: PROFIBUS input

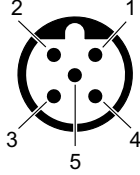The following table provides information about this connection:

Function		
PROFIBUS input		
Connection type		
M12, 5-pole, male, B-coded		
Wiring diagram		
		
2461813259		
Assignment		
No.	Name	Function
1	res.	Reserved
2	A	PROFIBUS data line A (green)
3	res.	Reserved
4	B	PROFIBUS data line B (red)
5	res.	Reserved

6.10.15 X4202: PROFIBUS output

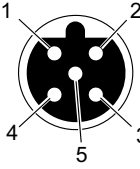The following table provides information about this connection:

Function		
PROFIBUS output		
Connection type		
M12, 5-pole, female, B-coded		
Wiring diagram		
		
2354431115		
Assignment		
No.	Name	Function
1	+5V	DC 5 V output
2	A	PROFIBUS data line A (green)
3	0V5	0V5 reference potential
4	B	PROFIBUS data line B (red)
5	res.	Reserved



6.10.16 X4241: DeviceNet input

The following table provides information about this connection:

Function		
DeviceNet input		
Connection type		
M12, 5-pole, male, A-coded		
Wiring diagram		
2264818187		
Assignment		
No.	Name	Function
1	Drain	Shield/equipotential bonding
2	V+	DC 24 V input
3	V-	Reference potential
4	CAN_H	CAN data line (high)
5	CAN_L	CAN data line (low)

6.10.17 X4242: DeviceNet output

The following table provides information about this connection:

Function		
DeviceNet output		
Connection type		
M12, 5-pole, female, A-coded		
Wiring diagram		
2264816267		
Assignment		
No.	Name	Function
1	Drain	Shield/equipotential bonding
2	V+	DC 24 V output
3	V-	Reference potential
4	CAN_H	CAN data line (high)
5	CAN_L	CAN data line (low)

Bus termination



INFORMATION

If the unit is the last station in the bus, you must provide for a bus termination by connecting an according resistor to plug connector X4242.



6.10.18 X4232_11 and X4232_12: Ethernet fieldbus

The following table provides information about this connection:

Function		
Ethernet fieldbus interface		
Connection type		
Push-pull RJ45		
Wiring diagram		
2354433675		
Assignment		
No.	Name	Function
1	TX+	Sending cable (+)
2	TX-	Sending cable (-)
3	RX+	Receiving cable (+)
4	res.	Reserved
5	res.	Reserved
6	RX-	Receiving cable (-)
7	res.	Reserved
8	res.	Reserved

NOTICE



RJ45 patch cable without push-pull connector housing not snapped into place.

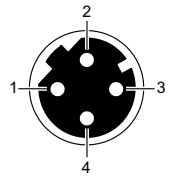
Damage to the push-pull RJ45 connection.

- Only use push-pull RJ45 mating connectors in accordance with IEC PAS 61076-3-117.



6.10.19 X4233_11 and X4233_12: Ethernet fieldbus

The following table provides information about this connection:

Function		
Ethernet fieldbus interface, 4-pole		
Connection type		
M12, 4-pole, female, D-coded		
Wiring diagram		
		
2464600971		
Assignment		
No.	Name	Function
1	TX+	Sending cable (+)
2	RX+	Receiving cable (+)
3	TX-	Sending cable (-)
4	RX-	Receiving cable (-)



6.10.20 X5001_1: Digital inputs/outputs – communication and control unit

The following table provides information about this connection:

Function		
Digital inputs/outputs of the communication and control unit		
Connection type		
M23, P insert 12-pole, female, 0°-coded		
Wiring diagram		
2264820107		
Assignment		
No.	Name	Function
1	DI00 / DO00	Binary input DI00 or binary output DO00
2	DI01 / DO01	Binary input DI01 or binary output DO01
3	DI02 / DO02	Binary input DI02 or binary output DO02
4	DI03 / DO03	Binary input DI03 or binary output DO03
5	DI04	Binary input DI04
6	DI05	Binary input DI05
7	DI06	Binary input DI06
8	DI07	Binary input DI07
9	0V24	0V24 reference potential
10	0V24	0V24 reference potential
11	+24V	DC 24 V output
12	FE	Equipotential bonding/functional ground



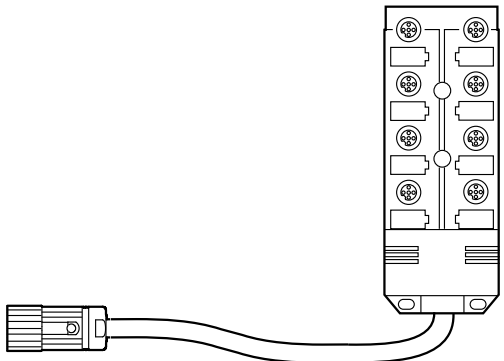
 

 
6.10.21 X5001_2: Digital inputs – communication and control unit

The following table provides information about this connection:

Function		
Digital inputs of the communication and control unit		
Connection type		
M23, P insert 12-pole, female, 0°-coded		
Wiring diagram		
2264820107		
Assignment		
No.	Name	Function
1	DI08	Binary input DI08
2	DI09	Binary input DI09
3	DI10	Binary input DI10
4	DI11	Binary input DI11
5	DI12	Binary input DI12
6	DI13	Binary input DI13
7	DI14	Binary input DI14
8	DI15	Binary input DI15
9	0V24	0V24 reference potential
10	0V24	0V24 reference potential
11	+24V	DC 24 V output
12	FE	Equipotential bonding/functional ground





Connection cables The following table shows the cables available for the connection X5001_1 and X5001_2:

Connection cable and component		Length/ Installation type
Cable		
<p>Length 1 m: Part no. 1 330 926 9 Length 2 m: Part no. 1 330 927 7 Length 3 m: Part no. 1 330 928 5 Length 5 m: Part no. 1 330 929 3 Length 10 m: Part no. 1 330 930 7 Cable design: (3X0.75+8X0.34)</p>	 <p>M23, 12-pole, male, 0°-coded</p> <p>Sensor/actuator box (8 M12 slots)</p>	<p>Fixed length</p> 
<p>Part number 1 174 145 7 Cable design: (6X2X0.25)</p>	 <p>M23, 12-pole, male, 0°-coded</p> <p>Open (Conductor end sleeves)</p>	<p>Variable length</p> 

Special cables

  The following extension cable is available for the sensor/actuator box:

Sensor/actuator box extension cables		Length/ Installation type
<p>Part number 1 812 346 5 Cable design: (6X2X0.25)</p>	 <p>M23, 12-pole, male, 0°-coded (1:1 assignment)</p> <p>M23, 12-pole, female, 0°-coded</p>	<p>Variable length</p> 



Connection of
cables with open
ends

The following table shows the conductor assignment of the cable with the following part number:

1 174 145 7

Core assignment X5001_1

Signal name	Color coding
DI00	Pink
DI01	Gray
DI02	Red
DI03	Blue
DI04	Yellow
DI05	Green
DI06	Violet
DI07	Black
0V24	Brown
0V24	White
+24V	Gray pink
FE	Red blue

Core assignment X5001_2

Signal name	Color coding
DI08	Pink
DI09	Gray
DI10	Red
DI11	Blue
DI12	Yellow
DI13	Green
DI14	Violet
DI15	Black
0V24	Brown
0V24	White
+24V	Gray pink
FE	Red blue



6.10.22 X5102_1: Digital inputs – power section

The following table provides information about this connection:

Function		
Digital inputs – power section		
Connection type		
M12, 5-pole, female, A-coded		
Wiring diagram		
2264816267		
Assignment		
No.	Name	Function
1	+24V	DC 24 V output
2	DI03	Binary input DI03
3	0V24	0V24 reference potential
4	DI02	Binary input DI02
5	FE	Equipotential bonding/functional ground

6.10.23 X5102_2: Digital inputs – power section

The following table provides information about this connection:


Function		
Digital inputs – power section		
Connection type		
M12, 5-pole, female, A-coded		
Wiring diagram		
2264816267		
Assignment		
No.	Name	Function
1	+24V	DC 24 V output
2	DI05	Binary input DI05
3	0V24	0V24 reference potential
4	DI04	Binary input DI04
5	FE	Equipotential bonding/functional ground



Y adapter


Use a Y adapter with extension for connecting 2 sensors/actuators to a M12 plug connector.

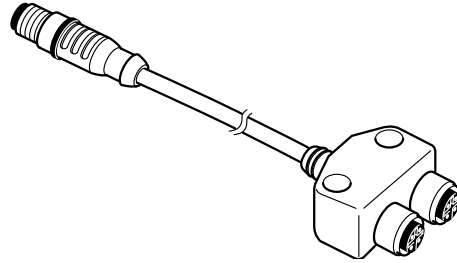The Y adapter is available from different manufacturers:




915294347

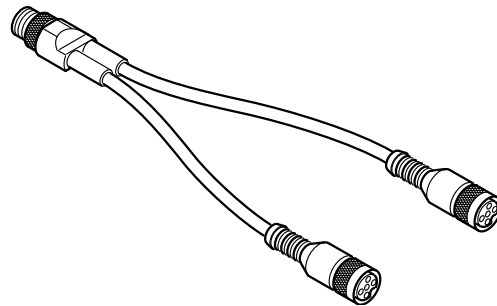Manufacturer: Escha
Type: WAS4-0,3-2FKM3/..




1180380683

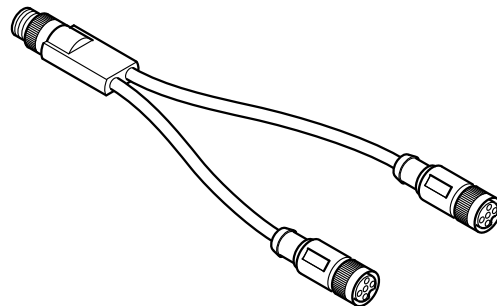Manufacturer: Binder
Type: 79 5200 ..



1180375179

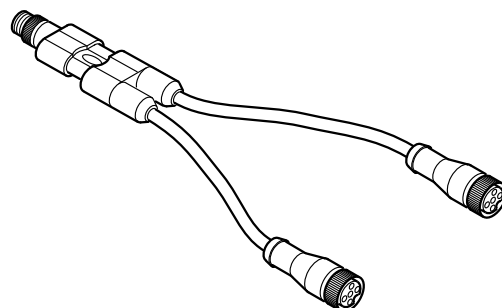Manufacturer: Phoenix Contact
Type: SAC-3P-Y-2XFS SCO/.../...
The sheath of the cables is made of PVC. Provide suitable UV protection.



1180386571

Manufacturer: Murr
Type: 7000-40721-..



6.10.24 X5201: Analog input – power section

The following table provides information about this connection:

Function		
Analog input of the power section		
Connection type		
M12, 5-pole, female, A-coded		
Wiring diagram		
2264816267		
Assignment		
No.	Name	Function
1	+24V	DC 24 V output
2	AI1+_FU	Analog input 1 (+) – power section
3	GND	Reference potential
4	AI1-_FU	Analog input 1 (-) – power section
5	FE	Equipotential bonding/functional ground



6.10.25 X5111: Fan subassembly (optional, only MOVIPRO® size 2)

The following table provides information about this connection:

Function		
Temperature-controlled DC 24 V output for additional external fan		
Connection type		
M12, 5-pole, female, A-coded		
Wiring diagram		
2264816267		
Assignment		
No.	Name	Function
1	res.	Reserved
2	res.	Reserved
3	0V24	0V24 reference potential
4	+24V_FAN	DC 24 V output – fan (control signal)
5	res.	Reserved

Connection component

The following table shows the available component for this connection:

Connection component
Fan subassembly
<p>Part number 1 270 970 0 Connection: M12</p>



6.10.26 X5502: STO-IN (safety relay)



⚠ WARNING

No safe disconnection of MOVIPRO® if the connection is bypassed.

Severe or fatal injuries.

- Bypass this connection only if MOVIPRO® will not perform any safety functions according to DIN EN ISO 13849-1.

This connection is marked by a yellow ring.

The following table provides information about this connection:

Function		
Input for safe torque off (STO)		
Connection type		
M12, 5-pole, female, A-coded		
Wiring diagram		
2264816267		
Assignment		
No.	Name	Function
1	+24V	DC 24 V output
2	STO-	0V24 reference potential for safe torque off (STO)
3	0V24	0V24 reference potential
4	STO+	DC 24 V input for safe torque off (STO)
5	res.	Reserved



INFORMATION

Use shielded cables only for this connection.

Connection component

The following table shows the available component for this connection:

Connection component
Jumper plug
<p>Part number 1 174 709 9 Structure: bridged 1+4 / 2+3 Connection: M12</p>



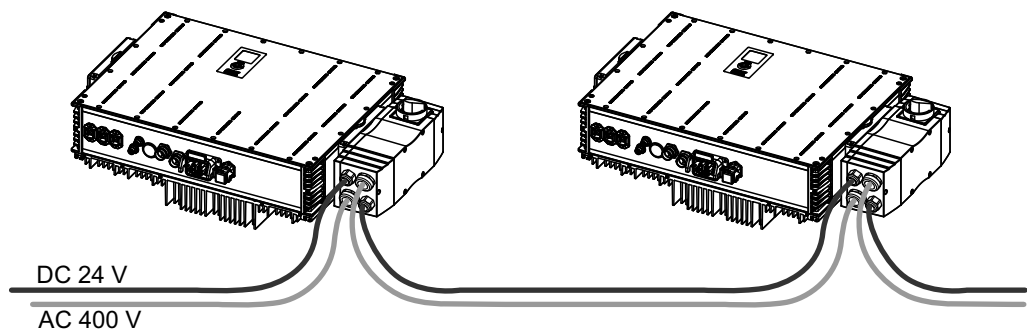
6.11 Power distribution with network supply

You can use a MOVIPRO® power interface to distribute energy from the supply system.

The MOVIPRO® power interface is equipped with the following inputs and outputs for power distribution:

- AC 400 V I_N: max. 10 mm²
- DC 24 V I_N: max. 6 mm²

The following figure shows the energy distribution for MOVIPRO® when the MOVIPRO® power interface is connected:



455787915



7 Startup

7.1 General information



INFORMATION

You must comply with the general safety instructions in section "Safety Notes / General information" during startup.



⚠ Warning

Uncontrolled unit behavior due to ineffective emergency stop circuit.

Severe or fatal injuries.

- Comply with the installation notes.
- The installation must only be carried out by qualified personnel.



⚠ Warning

Unit malfunction due to incorrect unit setting.

Severe or fatal injuries.

- Observe the startup instructions.
- The installation must only be carried out by qualified personnel.
- Check the parameters and data sets.
- Only use settings that are consistent with the function.



⚠ Warning

Risk of crushing if the motor starts up unintentionally.

Severe or fatal injuries.

- Observe the startup instructions.
- Activate "safe stop".
- Switch off the output stage.
- De-couple the drive.
- Deactivate auto-reset for drives that start-up automatically.



NOTICE

Danger due to arcing.

Damage to electrical components.

- Do not unplug the power connectors during operation. Do not plug in the power connectors during operation.



⚠ Warning

Electric shock due to missing or defective protection covers.

Severe or fatal injuries.

- Install the protective covers according to the regulations.
- The installation must only be carried out by qualified personnel.
- Never start the unit if the protective covers are not installed.

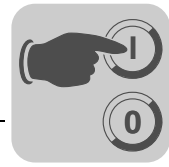


⚠ Warning

Electric shock due to open connections.

Severe or fatal injuries.

- The installation must only be carried out by qualified personnel.
- Never start the unit if the touch guard is not installed.

**INFORMATION**

To ensure fault-free operation, do not disconnect or connect the signal cables during operation.

7.2 Requirements**⚠ WARNING**

Risk of crushing if the motor starts up unintentionally.

Severe or fatal injuries.

- Observe the startup instructions.
- Activate "safe stop".
- Switch off the output stage.
- De-couple the drive.
- Deactivate auto-reset for drives that start-up automatically.

**⚠ WARNING**

Uncontrolled unit behavior due to ineffective emergency stop circuit.

Severe or fatal injuries.

- Comply with the installation notes.
- The installation must only be carried out by qualified personnel.

The following conditions apply to the startup:

- The MOVIPRO® unit must be installed correctly both mechanically and electrically.
- The system and connected drives must be configured correctly.
- Appropriate safety measures are taken to prevent the drives from starting up unintentionally.
- Appropriate safety measures must be taken to prevent risk of injury or damage to machine.

The following hardware is required for startup:

- PC or laptop with Ethernet interface
- Conventional Ethernet cable

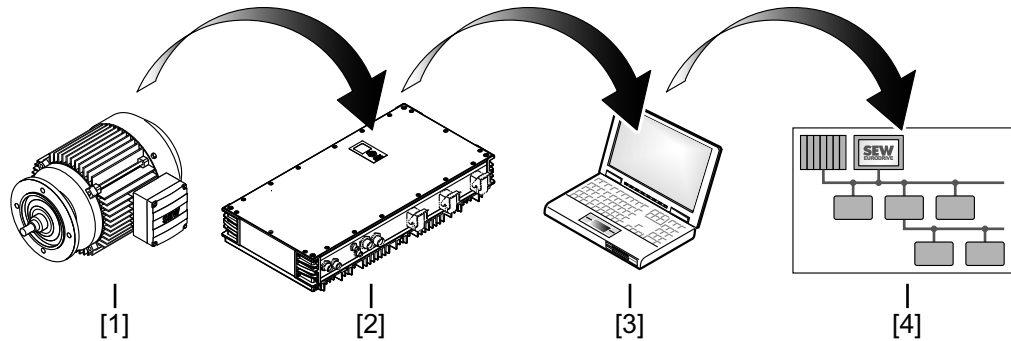
**INFORMATION**

SEW-EURODRIVE recommends using an Ethernet cable with extended locking device (e.g. from Harting).




7.3 Sequence

The following table gives an overview of the MOVIPRO® startup procedure and lists other applicable documentation:



900720045933259

Fieldbus interface	[1]	[2]	[3]	[4]
	Motor startup	MOVIPRO® startup	Parameterization	Fieldbus configuration
PROFINET	Operating instructions of the motor	<ul style="list-style-type: none"> These operating instructions "MOVIPRO® SDC with PROFINET Interface" manual 	Manual "MOVIPRO® SDC with PROFINET Interface"	Manual "MOVIPRO® SDC with PROFINET Interface"
PROFIBUS	Operating instructions of the motor	<ul style="list-style-type: none"> These operating instructions "MOVIPRO® SDC with PROFIBUS Interface" manual 	Manual "MOVIPRO® SDC with PROFIBUS Interface"	Manual "MOVIPRO® SDC with PROFIBUS Interface"
EtherNet/IP Modbus/TCP	Operating instructions of the motor	<ul style="list-style-type: none"> These operating instructions "MOVIPRO® SDC with EtherNet/IP and Modbus/TCP Interface" manual 	Manual "MOVIPRO® SDC with EtherNet/IP and Modbus/TCP Interface"	Manual "MOVIPRO® SDC with EtherNet/IP and Modbus/TCP Interface"
DeviceNet	Operating instructions of the motor	<ul style="list-style-type: none"> These operating instructions "MOVIPRO® SDC with DeviceNet Interface" manual 	Manual "MOVIPRO® SDC with DeviceNet Interface"	Manual "MOVIPRO® SDC with DeviceNet Interface"

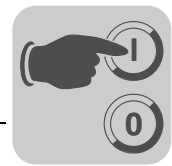


7.4 Setting the station address (PROFIBUS)



INFORMATION

Any changes to the station address during operation become effective after the power supply has been interrupted (DC 24 V reset).

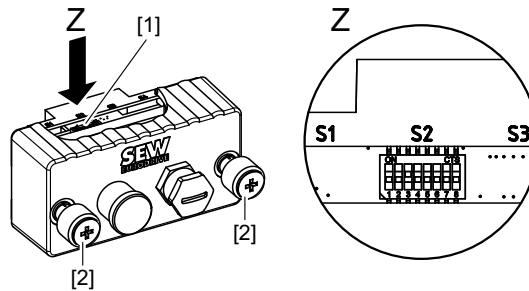Use the S2 DIP switch in the PROFIBUS[®] module to set the station address of the MOVIPRO. The default setting for the station address is 4. The following figure shows the DIP switch S2 and its position on the PROFIBUS module:




1642743307

- [1] DIP switch S2
- [2] Knurled screw

The DIP switch S2 is located on the top of the PROFIBUS module. You have to remove the PROFIBUS module to reach it. This does not interrupt the PROFIBUS network. Proceed as follows when removing the module:

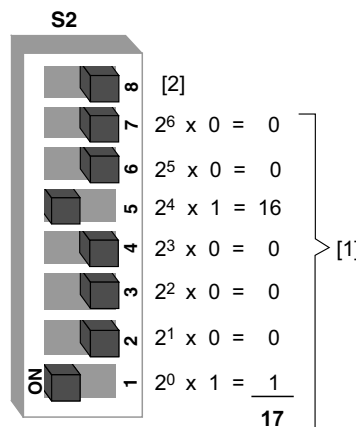1. Loosen the knurled screws.
2. Pull the PROFIBUS module from the MOVIPRO[®] unit to the front.
3. Use DIP switches 1 to 7 to set the PROFIBUS address. The following example shows the settings of the DIP switches for PROFIBUS address 17.



1946073995

- [1] Example: Address 17
- [2] Switch 8 = Reserved
- Addresses 1 to 125: valid addresses
- Addresses 0, 126, 127: are not supported




Startup

Setting the station address (PROFIBUS)

The following table uses PROFIBUS address 17 as an example to show how to determine the DIP switch settings for any bus address:

DIP switch setting	Significance
DIP 1 = ON	1
DIP 2 = OFF	2
DIP 3 = OFF	4
DIP 4 = OFF	8
DIP 5 = ON	16
DIP 6 = OFF	32
DIP 7 = OFF	64

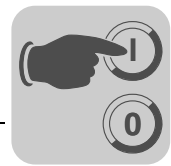4. Connect the bus terminating resistor to the MOVIPRO[®] at the last bus station.
 - If MOVIPRO[®] is located at the end of a PROFIBUS segment, the unit can only be connected to the PROFIBUS network via the incoming PROFIBUS line.
 - To prevent malfunctions in the bus system due to reflections, etc., the PROFIBUS segment must be terminated using bus terminating resistors at the first and last stations.
5. Once plugged-in, secure the PROFIBUS module with both knurled screws.




7.5 Setting the station address (DeviceNet)



INFORMATION

Any changes to the station address during operation become effective after the power supply has been interrupted (DC 24 V reset).

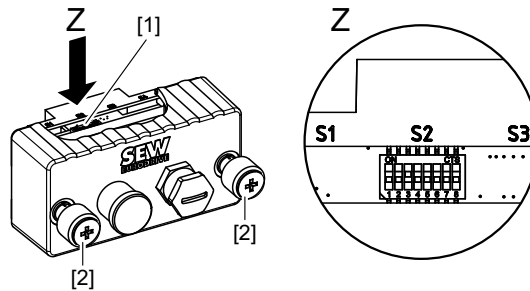Use the S2 DIP switch in the DeviceNet module to set the DeviceNet station address of the MOVIPRO®. The default setting for the station address is 4. The following figure shows the DIP switch S2 and its position on the DeviceNet module:




1642743307

- [1] DIP switch S2
- [2] Knurled screw

The DIP switch S2 is located on the top of the DeviceNet module. You have to remove the DeviceNet module to reach it. This does not interrupt the DeviceNet network. Proceed as follows when removing the module:

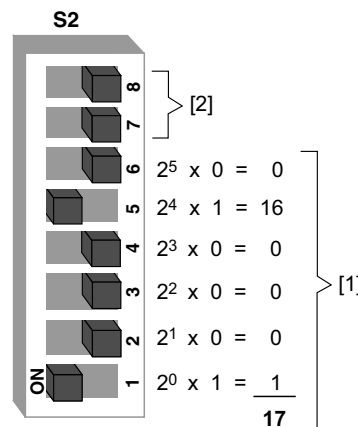1. Loosen the knurled screws.
2. Pull the DeviceNet module from the MOVIPRO® unit to the front.
3. Use DIP switches 1 to 6 to set the DeviceNet address. The following example shows the settings of the DIP switches for DeviceNet address 17.



1951510539

- [1] Example: Address 17
- [2] Switch 7, 8 = Switches for setting the baud rate
Addresses 0 to 63: valid addresses



Startup

Setting the station address (DeviceNet)

The following table uses DeviceNet address 17 as an example to show how to determine the DIP switch settings for any bus address:

DIP switch setting	Significance
DIP 1 = ON	1
DIP 2 = OFF	2
DIP 3 = OFF	4
DIP 4 = OFF	8
DIP 5 = ON	16
DIP 6 = OFF	32

4. Connect the bus terminating resistor to the MOVIPRO[®] at the last bus station.
 - If MOVIPRO[®] is located at the end of a DeviceNet segment, the unit can only be connected to the DeviceNet network via the incoming DeviceNet line.
 - To prevent malfunctions in the bus system due to reflections, etc, the DeviceNet segment must be terminated using bus terminating resistors at the first and last physical stations.
5. Once plugged-in, secure the DeviceNet module with both knurled screws.

7.5.1 Setting the baud rate




INFORMATION

Any changes to the baud rate during operation become effective after the power supply has been interrupted (DC 24 V reset).


Use DIP switches 7 to 8 to set the baud rate:

DIP switch		Baud rate
7	8	
OFF	OFF	125 kBaud
ON	OFF	250 kBaud
OFF	ON	500 kBaud
ON	ON	Reserved

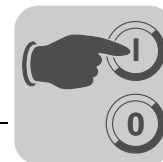

7.6 Connection to a PC/laptop

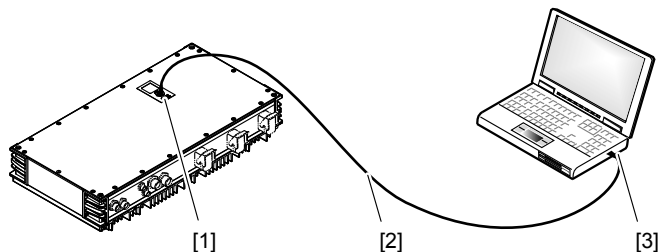The following figure shows the connection between a PC/laptop and the engineering interface of the MOVIPRO®:



1204936459

- [1] Service interface (Ethernet RJ45) of MOVIPRO®
- [2] Conventional Ethernet cable
- [3] Ethernet interface of the laptop

The following table shows the IP address and the subnet mask of the MOVIPRO®:

Ethernet service interface	
Standard IP address	Subnetwork mask
192.168.10.4	255.255.255.0



8 Operation



10 minutes

⚠ WARNING

When MOVIPRO[®] is switched on, dangerous voltages are present at the terminals as well as any connected cables and motor terminals. This also applies even when the MOVIPRO[®] unit is inhibited and the motor is at standstill.

Severe or fatal injuries from electric shock.

- Do not switch under load.
- Disconnect the MOVIPRO[®] unit from the power supply before you perform any work on the unit.
Dangerous voltages may still be present for up to 10 minutes after disconnection from the power supply source.
- The unit output may only be switched when the output stage of the inverter is inhibited.



⚠ Warning

Risk of crushing if the motor starts up unintentionally.

Severe or fatal injuries.

- Observe the startup instructions.
- Activate "safe stop".
- Switch off the output stage.
- De-couple the drive.
- Deactivate auto-reset for drives that start-up automatically.



⚠ CAUTION

Hot surfaces.

Injury.

- Cover hot surfaces.
- Install protection devices as stipulated.
- Check the protection device.



10 minutes

⚠ WARNING

Electric shock due to charged capacitors

Severe or fatal injuries.

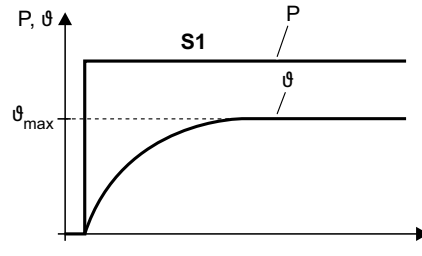
- Observe a minimum switch-off time of 10 minutes after disconnecting the power supply.



8.1 Duty types

8.1.1 Duty type S1


Continuous duty: Operation at a constant load; the motor reaches thermal equilibrium.



2325833867

8.1.2 Duty type S2

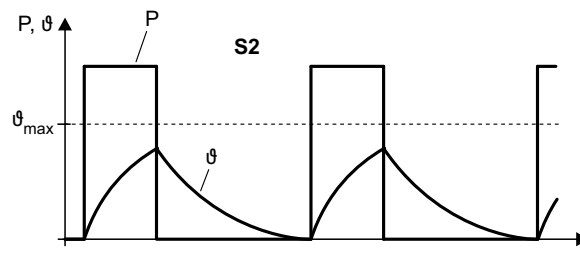
Short-time duty: Operation at constant load for a given time followed by a time at rest. The motor returns to ambient temperature during the rest period.



2325835787

8.1.3 Duty type S3

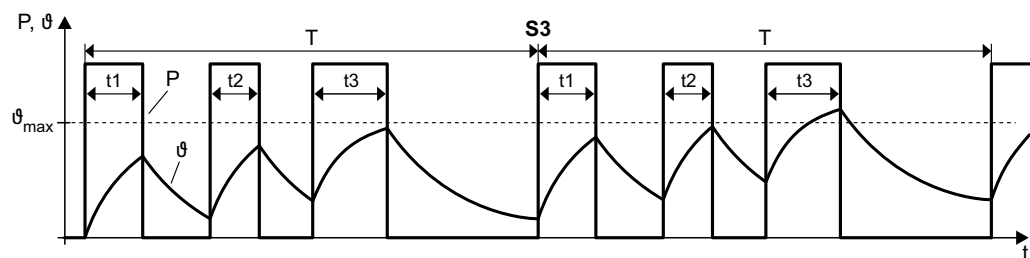Intermittent periodic duty: The starting current does not significantly affect the temperature rise. Characterized by a sequence of identical duty cycles, each including a time of operation at constant load and a time at rest. Described by the relative cyclic duration factor (cdf) in %.



2325831947

8.1.4 Duty types S4 – S10

Intermittent periodic duty: The switch-on sequence affecting the temperature rise. Characterized by a sequence of identical duty cycles, each including a time of operation at constant load and a time at rest. Described by the relative cyclic duration factor (cdf) in % and the number of cycles per hour.



8.2 Brake control operation



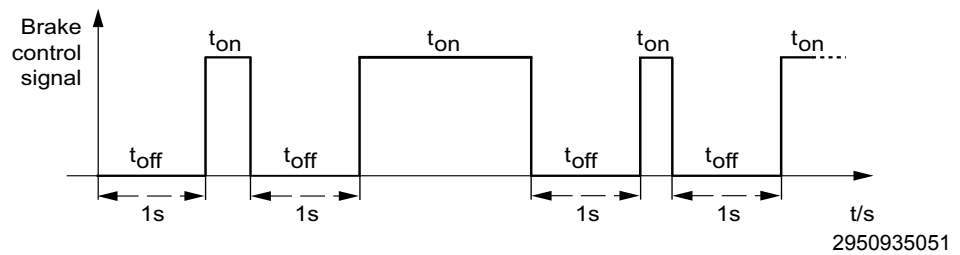
NOTICE

Damage to the brake controller if necessary timeout is not adhered to.
Damage to the drive system.

- Observe the required timeouts for the brake controller.


8.2.1 Brake control under normal operating conditions, e.g. automatic operation of the plant

With a brake coil power of $P \geq 70 \text{ W}$, you must ensure a timeout of at least 1 second for brake control:



8.2.2 Brake control under special operating conditions, e.g. teach or jog mode

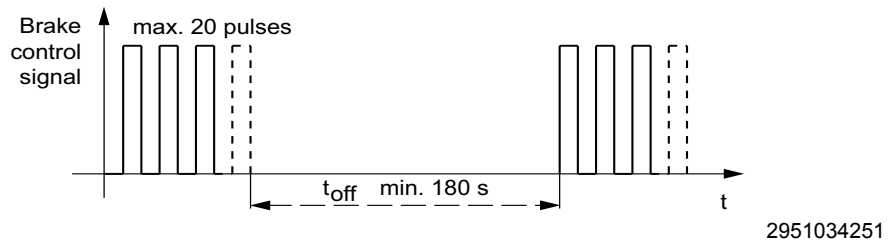For teach or jog mode, for example, timeouts shorter than 1 second are possible. After 20 control pulses, a timeout of minimum 3 min is mandatory in this case.





8.3 Status and error messages

The 7-segment display informs about the status of the MOVIPRO® unit. In case of repeated malfunctions, contact the SEW Service staff.

The display of the three-digit 7-segment display shows the current status of the unit. If several statuses or errors are active at the same time, the error with the highest priority is displayed.

8.3.1 Unit status

The following unit statuses are possible:

Display	Description
	Maintenance switch is switched off
	Initialization: Trying to establish a connection to all internal components. This can take several minutes after a unit replacement.
	The connection has been established. The statuses of the components or the application are displayed after 3 s.
	Flashing dot: Application module running
	Fieldbus error
	Unit waiting for DC 24 V reset
	Communication error with the power section
	Error in external periphery
	Non-enabled application module loaded
	Configuration with Application Configurator not completed
	Data backup on SD memory card failed, upload aborted
	Data backup on SD memory card failed, SD memory card is write-protected
	Data recovery in MOVIPRO® failed, download aborted
	Data recovery in MOVIPRO® failed, controller not inhibited
	Internal system error
	Actuator voltage overload
	Overload sensor voltage group 1



Operation Status and error messages

Display	Description
	Overload sensor voltage group 2
	Internal communication error

8.3.2 Inverter status

 
The inverter status is indicated by displaying the address/number of the axis and the corresponding status code in the form of A1.y.



INFORMATION

The unit status display takes priority over the inverter status display. If the maintenance switch is switched off or a fieldbus error occurs, no inverter status is displayed.

The following figure shows the display for the "Enable" status of axis 1:



1820269707

The following table shows the various status codes:

7-segment display	Unit status (high byte in status word 1)	Meaning
0	0 _{dec}	DC 24 V operation (inverter not ready)
1	1 _{dec}	Controller inhibit active
2	2 _{dec}	No enable
3	3 _{dec}	Standstill current
4	4 _{dec}	Enable
5	5 _{dec}	n-control (speed control)
6	6 _{dec}	M-control (torque control)
7	7 _{dec}	Hold control
8	8 _{dec}	Factory setting
9	9 _{dec}	Limit switch contacted
A	10 _{dec}	Technology option
c	12 _{dec}	IPOS ^{plus} ® reference travel
d	13 _{dec}	Flying start
E	14 _{dec}	Calibrate encoder
F	Error code (page 126)	Error indicator (flashing)
U	17 _{dec}	"Safe Stop" active
• (blinking dot)	–	Application module running

⚠ WARNING

Incorrect interpretation of display **U** = "Safe stop" active.

Severe or fatal injuries.

The display **U** = "Safe stop" active is not safety-related and must not be used as a safety function.

 




8.3.3 Inverter error

In case of an inverter error, the status display alternatively shows the address/number of the axis and 3 times the corresponding error code.

The following figure shows the display for an "Overtemperature" error of axis 1:




1806505867

For a list of error codes, refer to section "Service" (page 126).

8.4 Status LED

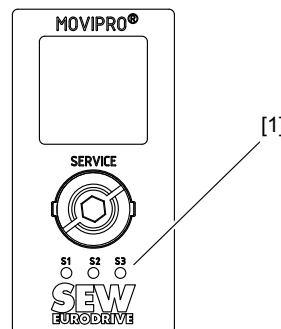The status LEDs are located on the service unit of MOVIPRO®. They show the fieldbus and unit status.



[1] Status LEDs S1, S2, S3

1954344587

8.4.1 Status LED S1 PROFINET IO

LED status	Status or cause of error	Remedy
Off	<ul style="list-style-type: none"> PROFINET IO device is currently exchanging data with the PROFINET IO controller (Data Exchange). 	–
Flashing green Flashing green/ red	<ul style="list-style-type: none"> The flashing function in the PROFINET IO controller configuration is activated to visually localize the stations. 	–
Lights up red	<ul style="list-style-type: none"> Connection to the PROFINET IO controller has failed. PROFINET IO device does not detect a link. Bus interruption PROFINET IO controller is not in operation. 	<ul style="list-style-type: none"> Check the PROFINET connection of the MOVIPRO®. Check the PROFINET IO controller. Check the cabling of your PROFINET network.
Flashing yellow Lights up yellow	<ul style="list-style-type: none"> The STEP 7 hardware configuration contains a module that is not permitted. 	<ul style="list-style-type: none"> Switch the STEP 7 hardware configuration to ONLINE and analyze the component status of the slots in the PROFINET IO device.


8.4.2 Status LED S1 PROFIBUS

LED status	Status or cause of error	Remedy
Off	<ul style="list-style-type: none"> Unit is currently exchanging data with the DP master (data exchange). 	–
Flashing	<ul style="list-style-type: none"> Unit has detected the baud rate, but is not addressed by DP master. Unit was not configured in DP master or configured incorrectly. 	<ul style="list-style-type: none"> Check the PROFIBUS address setting in MOVIPRO® and in the configuration software of the DP master. Check configuration of the DP master.
Lights up red	<ul style="list-style-type: none"> Connection to the DP master has failed. Unit does not detect PROFIBUS baud rate. Possible bus interruption. DP master not in operation 	<ul style="list-style-type: none"> Check the PROFIBUS-DP connection on the MOVIPRO® unit. Check the project planning of the DP master. Check the cabling of your PROFIBUS network.

8.4.3 Status LED S1 EtherNet/IP and Modbus/TCP

LED status	Meaning
Off	<ul style="list-style-type: none"> MOVIPRO® has no IP parameters yet.
Flashing green/red	<ul style="list-style-type: none"> MOVIPRO® is performing an LED test.
Flashing green	<ul style="list-style-type: none"> There is no controlling IO connection.
Lights up green	<ul style="list-style-type: none"> There is a controlling EtherNet/IP IO connection.
Lights up red	<ul style="list-style-type: none"> Conflict detected in the assigned IP addresses. Another station in the network uses the same IP address.
Flashing red	<ul style="list-style-type: none"> The previously established controlling IO connection is in timeout state. The state is reset by restarting communication.



8.4.4 Status LED S1 DeviceNet

LED status	Status	Meaning
Off	<ul style="list-style-type: none"> Not switched on / off-line 	<ul style="list-style-type: none"> Unit is offline. Unit is performing DUP MAC check. Unit is switched off.
Flashing green	<ul style="list-style-type: none"> Online and in operational mode 	<ul style="list-style-type: none"> The unit is online and no connection has been established. DUP-MAC check performed successfully. A connection has not yet been established with a master. Missing, incorrect or incomplete configuration.
Lights up green	<ul style="list-style-type: none"> Online, operational mode and connected 	<ul style="list-style-type: none"> Online Connection has been established with a master. Connection is active (established state).
Flashing red	<ul style="list-style-type: none"> Minor error or connection timeout 	<ul style="list-style-type: none"> A correctable fault has occurred. A unit error is active. Polled I/O and/or bit-strobe I/O connections are in timeout state.
Lights up red	<ul style="list-style-type: none"> Critical error or critical link failure 	<ul style="list-style-type: none"> A correctable fault has occurred. BusOff status DUP-MAC check has detected an error.

8.4.5 Status LED S2

LED status	Status or cause of error	Remedy
Flashing green	<ul style="list-style-type: none"> The firmware of the fieldbus gateway is running properly. 	–
Flashing green/orange	<ul style="list-style-type: none"> Data backup is created/restored. 	–
Lights up orange	<ul style="list-style-type: none"> Boot process is active. 	–
Flashing orange	<ul style="list-style-type: none"> Firmware is being updated 	–
Flashing red	<ul style="list-style-type: none"> No SD card plugged in. File system of the SD card corrupt. Boot process has failed. 	<ul style="list-style-type: none"> Switch the unit off and back on again. If the error occurs repeatedly, contact the SEW Service staff.

8.4.6 Status LED S3

LED status	Status or cause of error	Remedy
Lights up green	<ul style="list-style-type: none"> Program is running. 	–
Off	<ul style="list-style-type: none"> No program is loaded. 	<ul style="list-style-type: none"> Replace the SD card.



9 Service

9.1 Inspection/maintenance

The MOVIPRO® does not require any maintenance. SEW-EURODRIVE does not stipulate any regular inspection work. However, it is recommended that you check the following parts regularly:

- Connection cables:
Damaged or fatigue cables must be replaced immediately.
- Cooling fins:
Remove any residue. Otherwise, sufficient cooling is not ensured.
- Fan subassembly, if applicable:
The individual axial fans of the fan subassembly must be checked for operability.



INFORMATION

Repairs may only be carried out by SEW-EURODRIVE

9.2 Unit replacement

9.2.1 Notes on replacing units

The MOVIPRO® unit allows for a quick unit replacement. The MOVIPRO® unit is equipped with a replaceable memory card on which all unit data can be stored.

If a unit has to be replaced, the plant can be started up again quickly by simply re-plugging the memory card.

After the startup procedure, you have to download the unit data to the memory card.



INFORMATION

Observe the following notes when replacing a unit:

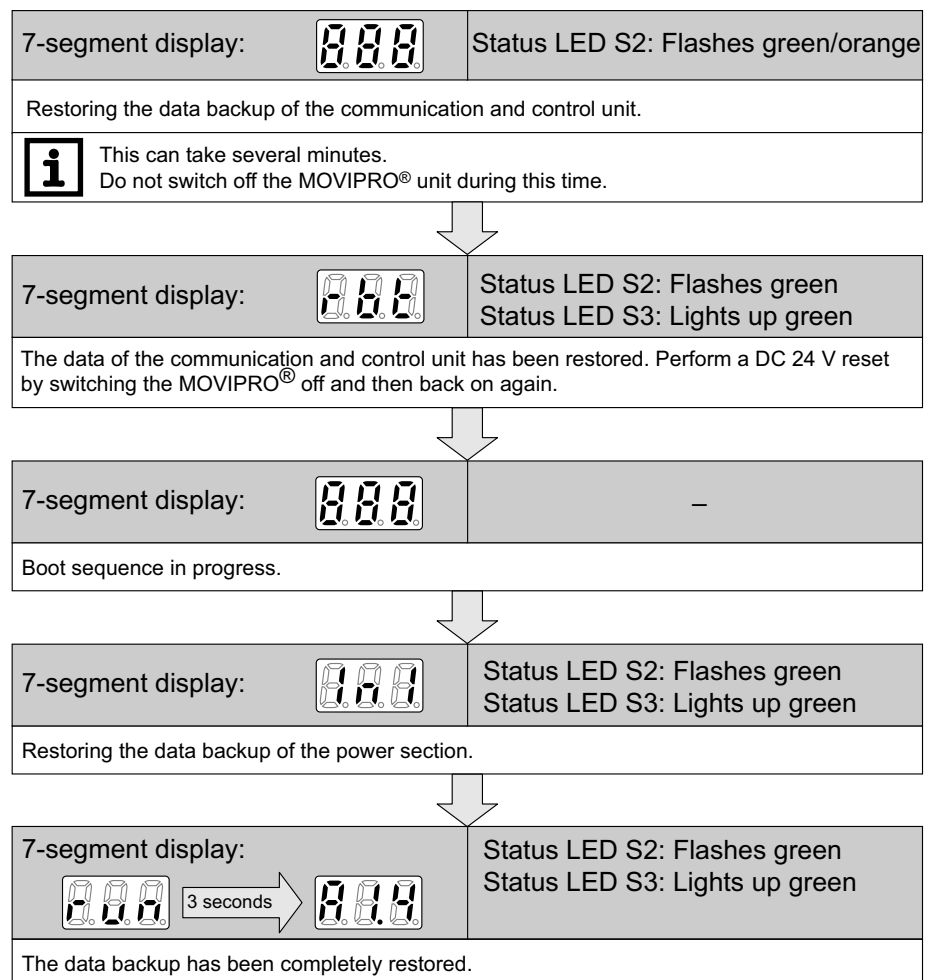
- Only insert the memory card when the MOVIPRO® unit is switched off.
- After the replacement, the parameters last saved on the SD card are used.
- If an absolute encoder is used as motor encoder or synchronous encoder, you have to perform a reference travel during initial startup or after a unit or encoder replacement.
- If you use an encoder with HIPERFACE® interface, a unit or encoder replacement is detected automatically and the "IPOS reference" is reset.
- If you use an encoder with SSI interface, you have to adapt the encoder position to the mechanical plant conditions via a reference travel.



9.2.2 Replacing units

Proceed as follows to replace the MOVIPRO®:

1. Perform a data backup now if you are not certain whether the current unit parameterization is stored on the SD card.
2. Disconnect the MOVIPRO® unit from the power supply and remove it from the system.
3. Remove the memory card of the unit via the service cover plate on the MOVIPRO® housing cover.
4. Insert the memory card into a new MOVIPRO® unit via the service cover plate.
5. Install the new MOVIPRO® unit in the system and connect it to the power supply.
6. Switch on the new MOVIPRO® unit.



1952918283

7. Now the parameters stored on the card are available. If you want the new MOVIPRO® unit to have a different parameter set, change the parameter set now, and save the changes on the memory card after startup.
8. For applications with motor encoder or synchronous encoder, you have to perform a reference travel.



9.3 Encoder exchange

9.3.1 Replacing incremental encoders

Incremental encoders for positioning always require a reference travel after startup. This is why there are no special measures required in the event of a unit or encoder (motor) replacement.

9.3.2 Replacing absolute encoders.

MOVIPRO® stores the position of absolute encoders with 32 bit. This allows for representing a larger absolute area than with an encoder with typical 12 bits in the single-turn range and 12 bits in the multi-turn range. However, this also means that you must reference the encoder in case of a unit or encoder (motor) replacement.

9.3.3 Replacing linear encoder systems

If you replace an absolute linear encoder system without encoder overflow in such a way that the encoder system provides the same values as before the replacement, a reference travel is not required.

9.3.4 Replacing HIPERFACE® encoders

With HIPERFACE® encoders, you can use parameter P948 to specify whether or not a reference travel is required after an encoder replacement.

9.4 Fault information of the frequency inverter

For information on the functionality of the inverter, refer to the following documentation:

Documentation
"MOVIPRO® SDC with EtherNet/IP and Modbus/TCP Interface" manual
"MOVIPRO® SDC with PROFIBUS Interface" manual
"MOVIPRO® SDC with PROFINET Interface" manual
"MOVIPRO® SDC with DeviceNet Interface" manual

9.4.1 Error memory

The error memory (P080) stores the last five error messages (errors t-0 to t-4) of the inverter. The oldest error message is deleted whenever more than 5 error messages have occurred.

The following information is stored when a malfunction occurs:

- Error occurred
- Status of binary inputs/outputs
- Operating status of the inverter
- Inverter status
- Heat sink temperature
- Speed
- Output current
- Active current
- Unit utilization
- DC link voltage
- Hours of operation
- Enable hours
- Parameter set
- Motor utilization



9.4.2 Switch-off responses

There are the following switch-off responses of the inverter depending on the error: In all cases, the inverter of the MOVIPRO® unit remains inhibited in error status.

Immediate switch-off The unit can no longer brake the drive. In the event of an error, the output stage goes to high-resistance and the brake is applied immediately.

Rapid stop The drive is decelerated with the stop ramp. The brake is applied when the stop speed is reached. The output stage goes to high resistance after the brake application time has elapsed.

Emergency stop The drive is decelerated with the emergency stop ramp. The brake is applied when the stop speed is reached. The output stage goes to high resistance after the brake application time has elapsed.

Safe stop A safe stop is triggered by a safety relay. The frequency inverter no longer supplies power to the motor for generating torque. At the same time, the brake is de-energized.

9.4.3 Reset



⚠ WARNING

Risk of crushing if the motor starts up unintentionally.

Severe or fatal injuries.

- Observe the startup instructions.
- Set the controller inhibit.
- Switch off the output stage.
- De-couple the drive.
- Deactivate auto-reset for drives that start-up automatically.

An error message can be acknowledged by:

- Switching the voltage supply off and then on
Always maintain a minimum switch-off time of 1 minute.
- Reset using the parameters of the frequency inverter
- Reset via the process data interface.

Auto reset performs up to 5 unit resets with an adjustable restart time.



9.5 MOVIPRO® SDC error list

The factory set error response is listed in the "Response (P)" column. "(P)" means that the response can be set with parameter *P83_error response*.

Error			Suberror		Possible cause	Measure
Code	Designation	Response (P)	Code	Designation		
00	No error					
01	Overcurrent	Immediate disconnection	0	Output stage	<ul style="list-style-type: none"> Short circuit at output Motor too large Faulty output stage Ramp limit is deactivated and set ramp time is too short Braking resistance value too low Short circuit in the braking resistor circuit 	<ul style="list-style-type: none"> Rectify the short circuit Connect a smaller motor Consult SEW Service if the output stage is defective. Extend the ramp time Check technical data of braking resistor Check the supply cable of the braking resistor
			1	V _{CE} monitoring or undervoltage monitoring of the unit driver		
			5	Inverter remains in hardware current limit		
03	Ground fault	Immediate disconnection	0			
04	Brake chopper	Immediate disconnection	0	DC link voltage too high in 4Q operation	<ul style="list-style-type: none"> Too much regenerative power Braking resistor circuit interrupted Short circuit in the braking resistor circuit Brake resistance too high Brake chopper defective 	<ul style="list-style-type: none"> Extend deceleration ramps Check supply cable to braking resistor Check technical data of braking resistor Replace MOVIPRO® if the brake chopper is defective
			1			
06	Line phase failure	Immediate disconnection	0	DC link voltage periodically too low	Phase failure	Check the line cable
07	DC link overvoltage	Immediate disconnection	0	DC link voltage too high in 2Q operation	DC link voltage too high	<ul style="list-style-type: none"> Extend deceleration ramps Check supply cable to the braking resistor Check technical data of braking resistor
			1			
08	Speed monitoring	Immediate disconnection (P)	0	Inverter in current limit or in slip limit	<ul style="list-style-type: none"> Speed/current controller (in VFC operating mode without encoder) operating at setting limit due to mechanical overload or phase fault in the power system or motor. Encoder not connected correctly or incorrect direction of rotation n_{max} is exceeded during torque control. In operating mode VFC: Output frequency > 150 Hz In operating mode V/f: Output frequency > 600 Hz 	<ul style="list-style-type: none"> Reduce load Increase delay time setting (<i>P501</i> or <i>P503</i>). Check encoder connection, swap A/A and B/B pairs if necessary Check encoder voltage supply Check current limitation Extend ramps if necessary Check motor cable and motor Check line phases
			3	"Actual speed" system limit exceeded. Speed difference between ramp set-point and actual value for 2 × ramp time higher than expected slip		
			4	Maximum rotating field speed exceeded Maximum rotating field frequency (with VFC max 150 Hz and V/f max 600 Hz) exceeded		
09	Startup	Immediate disconnection	0	Startup missing	Inverter has not been started up for the selected operating mode.	Perform startup for the required operating mode.
			1	Wrong operating mode selected		
			2	Wrong encoder type or defective encoder card		




Error			Suberror		Possible cause	Measure
Code	Designation	Response (P)	Code	Designation		
10	IPOS-ILLOP	Emergency stop	0	Invalid IPOS ^{plus} ® command	<ul style="list-style-type: none"> Incorrect command detected during execution of the IPOS^{plus}® program Incorrect conditions during command execution 	<ul style="list-style-type: none"> Check the content of the program memory and, if necessary, correct. Load the correct program into the program memory Reload the application module
11	Overtemperature	Emergency stop (P)	0	Heat sink temperature too high or defective temperature sensor	Thermal overload of inverter	Reduce load and/or ensure adequate cooling
			3	Overtemperature switched-mode power supply		
14	Encoder	Immediate disconnection	0	Encoder not connected, defective encoder, defective encoder cable	<ul style="list-style-type: none"> Encoder cable or shield not connected correctly Short circuit/broken encoder wire Encoder defective 	Check encoder cable and shield for correct connection, short circuit and broken wire.
			25	Motor encoder error – Speed range exceeded Encoder exceeds 6542 rpm		
			26	Motor encoder error – Card is defective. Error in the quadrant evaluation.		
			27	Encoder error – encoder connection or encoder is defective		
			28	Encoder error – Communication error RS485 channel.		
			29	External encoder error – Communication error RS485 channel		
			30	Unknown encoder type on the external encoder/motor encoder		
			31	Plausibility error of HIPERFACE® on the external encoder/motor encoder Increments have been lost.		
			32	HIPERFACE® motor encoder error HIPERFACE® encoder on motor encoder reports an error		
			33	HIPERFACE® external encoder error HIPERFACE® encoder on external encoder reports an error		
34	Revolver motor encoder error Encoder connection or encoder is defective.					



Service MOVIPRO® SDC error list

Error			Suberror		Possible cause	Measure
Code	Designation	Response (P)	Code	Designation		
17	System mal- function	Immediate dis- connection	0	"Stack overflow" error	Inverter electronics disrupted, possibly due to effect of EMC	<ul style="list-style-type: none"> • Check grounding and shielding and improve, if necessary • Consult SEW service if the error occurs again
18			0	"Stack underflow" error		
19			0	Fault "External NMI"		
20			0	Fault "Undefined opcode"		
21			0	"Protection fault" error		
22			0	"Illegal word operand access" error		
23			0	"Illegal instruction access" error		
24			0	"Illegal external bus access" error		
25	EEPROM	Rapid stop	0	Read or write error on EEPROM power section	Error while accessing EEPROM	<ul style="list-style-type: none"> • Restore factory settings, perform reset and reset parameters. • Consult SEW service if the error reoccurs
			11	NV memory read error Internal NVRAM		
			13	NV memory chip card System module defective		
			14	NV memory chip card Memory card defective		
			16	NV memory initialization error		
26	External terminal	Emergency stop (P)	0	External terminal	Read external error signal via programmable input	Eliminate respective cause; reprogram terminal if necessary
27	No limit switches	Emergency stop	0	Both limit switches missing or open circuit	<ul style="list-style-type: none"> • Open circuit/both limit switches missing • Limit switches are swapped over in relation to direction of rotation of motor 	<ul style="list-style-type: none"> • Check wiring of limit switches • Swap limit switch connections • Reprogram terminals
			2	Limit switch reversed		
			3	Both limit switches are active simultaneously		
29	Limit switch contacted	Emergency stop	0	Hardware limit switch approached	A limit switch has been reached in IPOS ^{plus} ® mode (only with application module).	<ul style="list-style-type: none"> • Check travel range • Correct operator program
30	Emergency stop Timeout	Immediate dis-connection	0	Emergency stop ramp time exceeded	<ul style="list-style-type: none"> • Drive overloaded • Emergency stop ramp too short 	<ul style="list-style-type: none"> • Check configuration • Extend emergency stop ramp
31	TF/TH sensor tripped	No response (P)	0	Thermal motor protection error	<ul style="list-style-type: none"> • Motor too hot, TF/TH has triggered • TF/TH of the motor not connected or connected incorrectly • MOVIDRIVE® connection and TF/TH connection on motor interrupted 	<ul style="list-style-type: none"> • Let motor cool off and reset error • Check connections/link between MOVIDRIVE® and TF/TH. • Set P835 to "No response"
32	IPOS index overflow	Emergency stop	0	IPOS ^{plus} ® program is faulty	Programming principles violated leading to system-internal stack overflow	Reload the application module
34	Ramp Timeout	Immediate dis-connection	0	Rapid stop ramp timeout	Downward ramps timeout, e.g. due to overload.	<ul style="list-style-type: none"> • Extend the downwards ramps • Eliminate overload
35	Operating mode	Immediate dis-connection	0	Operating mode not available	Operating mode not defined or defined incorrectly	Use P700/P701 to set correct operating mode
			1	Wrong assignment operating mode - hardware		
37	System watchdog	Immediate dis-connection	0	"System watchdog overflow" error	Error while executing system software	Consult SEW Service
38	System software	Immediate dis-connection	0	"System software" error	System malfunction	Consult SEW Service

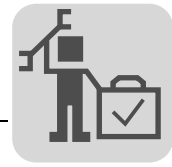

Error			Suberror		Possible cause	Measure
Code	Designation	Response (P)	Code	Designation		
39	Reference travel	Immediate disconnection (P)	0	"Reference travel" error	<ul style="list-style-type: none"> The reference cam is missing or does not switch Limit switches are connected incorrectly Reference travel type was changed during reference travel 	<ul style="list-style-type: none"> Check reference cam Check limit switch connection Check reference travel type setting and required parameters.
40	Boot synchronization	Immediate disconnection	0	Timeout during boot synchronization	Error during boot synchronization between inverter and option.	Consult SEW service if the error reoccurs
41	Watchdog option	Immediate disconnection	0	Error – Watchdog timer from/to option.	Error in communication between system software and option software	Consult SEW Service
42	Lag error	Immediate disconnection (P)	0	Positioning lag error	<ul style="list-style-type: none"> Encoder connected incorrectly Acceleration ramps too short P component of positioning controller too small Incorrect speed controller parameters Value of lag error tolerance too small 	<ul style="list-style-type: none"> Check encoder connection Extend ramps Set P component to higher value Reset speed controller parameters Increase lag error tolerance Check wiring of encoder, motor and line phase. Check whether mechanical system components can move freely or if they are blocked
44	Unit utilization	Immediate disconnection	0	Unit utilization error	Unit utilization (IxT value) > 125%	<ul style="list-style-type: none"> Decrease power output Extend ramps If suggested actions are not possible, use a larger inverter Reduce load
			8	U _L monitoring error		
45	Initialization	Immediate disconnection	0	General error during initialization	No parameters set for EEPROM in power section, or parameters set incorrectly	Restore factory settings (P802). Consult SEW service if the error cannot be reset.
			3	Data bus error during RAM check		
			6	CPU clock error		
			7	Error in the current evaluation		
			10	Error when setting flash protection		
			11	Data bus error during RAM check		
47	System bus 1 timeout	Rapid stop (P)	0	Timeout system bus CAN1	Error during communication via system bus 1.	Check system bus connection
57	TTL encoder	Immediate stop	1	TTL encoder: Broken wire		
			512	TTL encoder: Error in amplitude control		
			541	TTL encoder: Incorrectly set numerator/denominator values		Set the correct system numerator/denominator values.
			16385	TTL synchronous encoder: Broken wire		
			16896	TTL synchronous encoder: Error in amplitude control		
			16898	TTL synchronous encoder: Incorrectly set numerator/denominator values		Set the correct system numerator/denominator values.



Error			Suberror		Possible cause	Measure
Code	Designation	Response (P)	Code	Designation		
58	Sin/cos encoder	Immediate stop	1	Sin/cos encoder: Broken wire		
			512	Sin/cos encoder: Error in amplitude control		
			514	Sin/cos encoder: Track signal error		
			515	Sin/cos encoder: Incorrectly set numerator/denominator values		Set the correct system numerator/denominator values.
			16385	Sin/cos synchronous encoder: Broken wire		
			16896	Sin/cos synchronous encoder: Error in amplitude control		
			16898	Sin/cos synchronous encoder: Track signal error		
			16899	Sin/cos synchronous encoder: Incorrectly set numerator/denominator values		Set the correct system numerator/denominator values.
59	Encoder communication	Rapid stop	1	HIPERFACE® encoder: Track signal error		
			2	HIPERFACE® encoder: Calibration error	Incorrect calibration of encoder	<ul style="list-style-type: none"> Restore factory settings (P802) Repeat encoder startup
			16	HIPERFACE® encoder: Communication error	MOVIPRO® and HIPERFACE® encoder connection interrupted	Check wiring
			64			
			128			
			192			
			256			
			320			
			384			
			448			
			512	EnDat encoder: Communication error	MOVIPRO® and EnDat encoder connection interrupted	Check wiring
			576			
			1024			
			1088			
			1152			
			1216	HIPERFACE® synchronous encoder: Track signal error		
			1280			
1388	HIPERFACE® synchronous encoder:					
16385						
16386	HIPERFACE® synchronous encoder:	Incorrect calibration of encoder	<ul style="list-style-type: none"> Restore factory settings (P802) Repeat encoder startup 			



Error			Suberror		Possible cause	Measure					
Code	Designation	Response (P)	Code	Designation							
59	Encoder communication	Rapid stop	16400	HIPERFACE® synchronous encoder: Communication error	MOVIPRO® and HIPERFACE® synchronous encoder connection interrupted	Check wiring					
			16448								
			16512								
			16576								
			16640								
			16704								
			16768								
			16832								
								17408	EnDat synchronous encoder: Communication error	MOVIPRO® and EnDat synchronous encoder connection interrupted	Check wiring
								17472			
								17536			
								17600			
								17664			
								17772			
77	IPOS control word	No response (P)	0	Invalid control word IPOS ^{plus} ®	Only in IPOS^{plus}® mode: <ul style="list-style-type: none"> An attempt was made to set an invalid automatic mode (via external controller). "P916 = Bus ramp" is set. 	<ul style="list-style-type: none"> Check serial connection to external controller Check write values of external controller Set correct value for P916 					
78	IPOS SW limit switch	No response (P)	0	Software limit switch reached	Only in IPOS^{plus}® mode: Programmed target position is outside travel range delimited by software limit switches.	<ul style="list-style-type: none"> Check the user program Check position of software limit switches 					
80	RAM test	Immediate disconnection	0	"RAM test" error	Internal unit fault, RAM defective.	Consult SEW Service					
81	Start condition	Immediate disconnection	0	Start condition error with "VFC & hoist"	Only in "VFC & hoist" mode: The motor could not be supplied with the correct amount of current during the pre-magnetizing time: <ul style="list-style-type: none"> Rated motor power too small in relation to rated inverter power Motor cable cross section too small 	<ul style="list-style-type: none"> Check startup data and perform new startup, if necessary. Check connection between inverter and motor Check cross section of motor cable and increase if necessary 					
82	Open output	Immediate disconnection	0	Output open with "VFC & hoist"	Only in "VFC & hoist" mode: <ul style="list-style-type: none"> 2 or all output phases interrupted Rated motor power too small in relation to rated inverter power 	<ul style="list-style-type: none"> Check connection between inverter and motor Check startup data and perform new startup, if necessary. 					
84	Motor protection	Emergency stop (P)	0	"Motor temperature emulation" error	<ul style="list-style-type: none"> Motor utilization too high. I_N-U_L monitoring 1 triggered P530 set later to "KTY" 	<ul style="list-style-type: none"> Reduce load Extend ramps Observe longer pause times Check P345/P346 Select a larger motor 					
			2	Short circuit or open circuit in the temperature sensor							
			3	No thermal motor model available							
			4	U _L monitoring error							
			11	Temperature sensor short circuit							
88	Flying start	Immediate disconnection	0	"Flying start" error	Only in "VFC n control" mode: Actual speed > 6000 rpm when inverter enabled	Enable not unless current speed ≤ 6000 rpm					



Service MOVIPRO® SDC error list


Error			Suberror		Possible cause	Measure
Code	Designation	Response (P)	Code	Designation		
94	EEPROM checksum	Immediate disconnection	0	Power section parameters	Inverter electronics disrupted, possibly due to effect of EMC or a defect.	Send unit in for repair.
			5	Control unit data		
			6	Power section data		
			7	Invalid version of the configuration data set		
97	Copy error	Immediate disconnection	0	Parameter set upload is/was faulty	<ul style="list-style-type: none"> • Error during data transmission • Memory can neither be written nor read 	<ul style="list-style-type: none"> • Repeat copying process • Restore default setting (P802) and repeat copying process
			1	Parameter set download to unit cancelled		
			2	Not possible to adopt parameters		
98	CRC error	Immediate disconnection	0	"CRC via internal flash" error	Internal unit error Flash memory defective	Send unit in for repair
99	IPOS ramp calculation	Immediate disconnection	0	"Ramp calculation" error	Only in IPOS^{plus}® mode: Positioning ramp is sinusoidal or square and an attempt is made to change ramp times and traveling velocities with enabled inverter.	Rewrite the IPOS ^{plus} ® program so that ramp times and traveling velocities can only be altered when the inverter is inhibited.
100	Vibration warning	Display error (P)	0	Vibrations diagnostics warning	Vibration sensor warning (see "DUV10A" operating instructions)	<ul style="list-style-type: none"> • Determine cause of vibrations • Continue operation until F101 occurs
101	Vibration error	Rapid stop (P)	0	Vibration diagnostics error	Vibration sensor signals fault	SEW-EURODRIVE recommends that you remedy the cause of the vibrations immediately
102	Oil aging warning	Display error (P)	0	Oil aging warning	Error message from the oil aging sensor	Schedule oil change
103	Oil aging error	Display error (P)	0	Oil aging error	Error message from the oil aging sensor	SEW-EURODRIVE recommends that you change the gear unit oil immediately.
104	Oil aging overtemperature	Display error (P)	0	Oil aging overtemperature	Overtemperature signal from the oil aging sensor	<ul style="list-style-type: none"> • Let oil cool down • Check if the gear unit cools properly
105	Oil aging ready signal	Display error (P)	0	Oil aging ready signal	Oil aging sensor is not ready for operation	<ul style="list-style-type: none"> • Check voltage supply of oil aging sensor • Check and, if necessary, replace the oil aging sensor
106	Brake wear	Display error (P)	0	Brake wear error	Brake lining worn	Replace brake lining (see "Motors" operating instructions)
110	"Ex-e protection" error	Emergency stop	0	Duration of operation below 5 Hz exceeded	Duration of operation below 5 Hz exceeded	<ul style="list-style-type: none"> • Check configuration • Shorten duration of operation below 5 Hz
116	"Timeout" error	Rapid stop/warning	0	Internal communication timeout		<ul style="list-style-type: none"> • Check startup • Check wiring



Error			Suberror		Possible cause	Measure
Code	Designation	Response (P)	Code	Designation		
122	Absolute encoder	Immediate stop	1	Plausibility check		Check the cables of the sine tracks or replace the encoder
			2	HIPERFACE® encoder: Unknown encoder type		
			3	HIPERFACE® encoder: Corrupt encoder nameplate data		
			32	HIPERFACE® encoder: Internal encoder error		Replace the encoder
			33	HIPERFACE® encoder: Analog voltages not within toler.		
			34	HIPERFACE® encoder: Internal encoder error		Replace the encoder
			35			
			36			
			37			
			38			
			39			
			40			
			41	HIPERFACE® encoder: Communication error	MOVIPRO® and HIPERFACE® encoder connection interrupted	Check wiring
			42			
			43			
			44			
			45			
			46	HIPERFACE® encoder: Internal encoder error		Replace the encoder
			47			
			48			
			49			
			50			
			60	HIPERFACE® encoder: Analog voltages not within toler.		
			61	HIPERFACE® encoder: Critical transmitter current	<ul style="list-style-type: none"> • Dirt • Transmitter broken 	Replace the encoder
			62	HIPERFACE® encoder: Critical encoder temperature		Replace the encoder
			63	HIPERFACE® encoder: Position error	Speed too high, position cannot be created	set slower speed
			64	HIPERFACE® encoder: Internal encoder error		Replace the encoder
			65			
66						
67						
256	SSI enc.: Voltage dip	12 V voltage supply broken in	Check SSI enc. voltage supply			
257	SSI encoder: Clocking or data line interrupted		Check connection to SSI encoder			
258	SSI encoder: Change of position					



Error			Suberror		Possible cause	Measure	
Code	Designation	Response (P)	Code	Designation			
122	Absolute encoder	Immediate stop	259	SSI encoder: Insufficient clock frequency		Set a higher cycle frequency	
			260	SSI enc.: Encoder signals programm. error		Check encoder parameterization	
			261	SSI encoder: No high level present		<ul style="list-style-type: none"> Replace the encoder Consult SEW Service 	
			513	EnDat encoder: Plausibility check			
			514	EnDat encoder: Internal encoder error			Replace the encoder
			515				
			516				
			544				
			576	EnDat encoder: Internal encoder warning			Check encoder parameterization
			768	CANopen encoder: PDO timeout		No PDO data from CANopen encoder	<ul style="list-style-type: none"> Check interface Check the configuration
			769	CANopen encoder: Encoder signals programmable error			Check encoder parameterization
			770	CANopen encoder: Change of position			
			771	CANopen encoder: Emergency signal			Check encoder
			772	CANopen encoder: Internal encoder error			Replace the encoder
			773				
			774				
			16385	HIPERFACE® synchronous encoder: Plausibility check			
			16386	HIPERFACE® synchronous encoder: Unknown encoder type			
			16387	HIPERFACE® synchr. encoder: Corrupt enc. nameplate data			
			16417	HIPERFACE® synchronous encoder: Analog voltages not within tolerance			
			16418	HIPERFACE® synchronous encoder: Internal encoder error			Replace the encoder
			16419				
			16420				
			16421				
			16422				
			16423				
			16424				
			16425	HIPERFACE® synchronous encoder: Communication error			MOVIPRO® and HIPERFACE® encoder connection interrupted
			16426				
			16427				
16428							
16429							

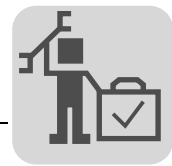

Error			Suberror		Possible cause	Measure			
Code	Designation	Response (P)	Code	Designation					
122	Absolute encoder	Immediate stop	16430	HIPERFACE® synchr. encoder: Internal encoder error		Replace the encoder			
			16431						
			16432						
			16433						
			16434						
			16444	HIPERFACE® synchr. encoder: Analog voltages not within tolerance	<ul style="list-style-type: none"> Dirt Transmitter broken 	Replace the encoder			
			16445	HIPERFACE® synchr. encoder: Critical transmitter current					
			16446	HIPERFACE® synchr. encoder: Critical encoder temperature			Replace the encoder		
			16447	HIPERFACE® synchr. encoder: Position error					
			16448	HIPERFACE® synchr. encoder: Internal encoder error			Speed too high, position cannot be created	set slower speed	
			16449						
			16450						
			16451						
			16640	SSI synchr. encoder: Voltage dip			12 V voltage supply broken in	Check SSI encoder voltage supply	
			16641	SSI synchr. encoder: Clocking or data line interrupted					Check connection to SSI encoder
			16642	SSI synchr. encoder: Change of position					
			16643	SSI synchr. encoder: Insufficient clock frequency	Set a higher cycle frequency				
			16644	SSI synchr. encoder: Encoder signals programmable error					
			16645	SSI synchr. encoder: No high level present		<ul style="list-style-type: none"> Replace the encoder Consult SEW Service 			
			16897	EnDat synchr. encoder: Plausibility check					
			16898	EnDat synchr. encoder: Internal encoder error		Replace the encoder			
			16899						
			16900						
			16928						
			16960	EnDat synchr. encoder: Internal encoder warning		No PDO data from CANopen synchronous encoder			
			17152	CANopen synchr. encoder: PDO timeout					
			17153	CANopen synchr. encoder: Encoder signals programmable error			Check encoder parameterization		
			17154	CANopen synchr. encoder: Change of position					
17155	CANopen synchr. encoder: Emergency signal	Check encoder							
17156	CANopen synchr. encoder: Internal encoder error								
17157									
17158									

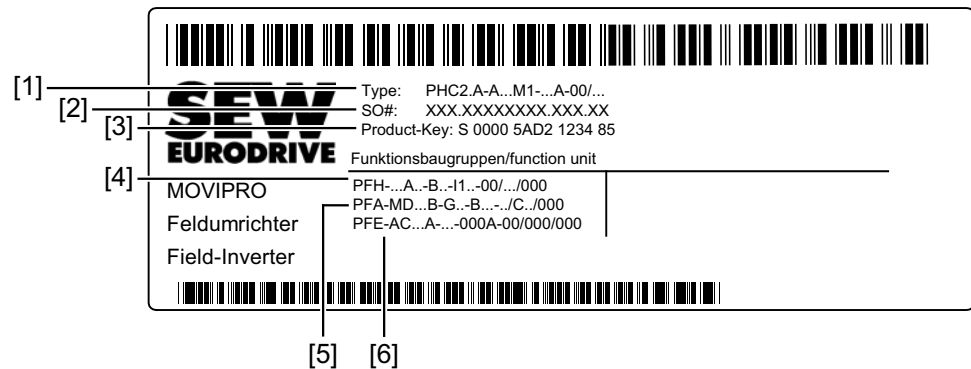


9.6 SEW Electronics Service

If a fault cannot be solved, please contact the SEW-EURODRIVE Service (see the section "Address List").

Please have the following information at hand when you consult the SEW Service:

- Unit designation [1]
- Serial number [2]
- Product key [3]
- Function units [4], [5], [6]
- Brief description of the application
- Nature of the fault
- Accompanying circumstances (e.g. initial startup)
- Your own assumptions
- Any unusual events preceding the problem, etc.



9007201147321227

- | | |
|----------------------|------------------------------------|
| [1] Type designation | [4] Communication and control unit |
| [2] Serial number | [5] Power section |
| [3] Product key | [6] Energy supply |

9.7 Shutdown

To shut down the MOVIPRO[®] unit, disconnect the unit using appropriate measures.



⚠ WARNING

Electric shock due to charged capacitors

Severe or fatal injuries.

- Observe a minimum switch-off time of 10 minutes after disconnecting the power supply.



9.8 Storage

Observe the following instructions when shutting down or storing MOVIPRO®:

- If you shut down and store the unit for a longer period, you must cover the connections with the protective caps supplied.
- Only store the unit on the cooling fins or on the side without connectors.
- Make sure that the unit is not subject to mechanical impact during storage.
- Connect the unit to the power supply for at least 5 minutes every 2 years.

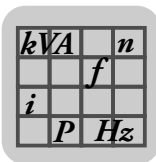
Observe the notes on storage temperature in the "Technical Data" chapter.

9.9 Disposal

Observe the applicable national regulations.

Dispose of materials separately in accordance with the regulations in force, for example:

- Electronics scrap (circuit boards)
- Plastic
- Sheet metal
- Copper
- Aluminum



10 Technical Data

10.1 Standards and certification

10.1.1 Applicable standards and directives

MOVIPRO[®] was developed and tested in accordance with the following standards:

- EN 13849-1:2007
- EN 61800-3:2007
- EN 61800-5-1:2007
- EN 61800-5-2:2007

10.1.2 CE marking

- Low Voltage Directive

MOVIPRO[®] meets the requirements stipulated in the Low Voltage Directive 2006/95/EC.

- Electromagnetic compatibility (EMC)

MOVIPRO[®] is a component intended for installation in machines or systems. It complies with the EMC product standard EN 61800-3 "Variable-speed electrical drives". If the installation instructions are adhered to, the relevant requirements for the CE marking for the entire machine/system in which the units are installed are fulfilled on the basis of the EMC Directive 2004/108/EC.

Compliance with limit class C2 has been tested on a specified test setup. SEW-EURODRIVE can provide detailed information on request.

The CE mark on the nameplate indicates conformity with the Low Voltage Directive 2006/95/EC and the EMC Directive 2004/108/EC.



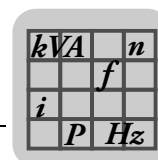
17673867

10.1.3 UL / cUL

UL and cUL approvals (USA and Canada) have been granted for this MOVIPRO[®] unit type. cUL is equivalent to the CSA approval.




9007200976629899



10.2 Design with 400 V/50 Hz operating point

Size Performance class	MOVIPRO®					
	Size 0 2.2 kW	Size 1 4.0 kW 7.5 kW		Size 2 11.0 kW 15.0 kW		
Input						
Power supply	3-phase AC connection					
Supply voltage Permitted range	V_{line}	3 AC 380 V – 3 AC 500 V ($V_{supply} = AC\ 380\ V\ -10\% - AC\ 500\ V\ +10\%$)				
Line frequency	f_{line}	50 – 60 Hz $\pm 5\%$				
Nominal line current 100% (at $V_{line} = 3\ AC\ 400\ V$) ¹⁾	I_{line}	AC 5.0 A	AC 8.6 A	AC 14.4 A	AC 21.6 A	AC 28.8 A
Output						
Apparent output power (at $V_{line} = 3\ AC\ 380 - 500\ V$)	S_N	3.8 kVA	6.6 kVA	11.2 kVA	16.8 kVA	22.2 kVA
Motor power S1	P_{Mot}	2.2 kW (3.0 HP)	4.0 kW (5.4 HP)	7.5 kW (10 HP)	11.0 kW (15 HP)	15.0 kW (20 HP)
Nominal output current	I_N	AC 5.5 A	AC 9.5 A	AC 16 A	AC 24 A	AC 32 A
Current limitation	I_{max}	Motor and regenerative 150 % I_N , duration depending on capacity utilization				
Internal current limitation	I_{max}	0 – 150% adjustable				
External braking resistor	R_{min}	68 Ω	33 Ω		15 Ω	
Output voltage	V_O	0 – V_{line}				
PWM frequency	f_{PWM}	Adjustable: 4/8/12/16 kHz (factory setting: 4 kHz)				
Speed range / resolution	$n_R / \Delta n_R$	-6000 - +6000 rpm / 0.2 rpm over the entire range				
Power loss at P_N	P_{Vmax}	60 W	100 W	200 W	400 W	550 W
Motor cable length		Max. 30 m (98 ft)				
Motor protection		TF, TH or KTY				
Operating mode		S1 (EN 60034-1)				
Permitted length of the braking resistor cable		Max. 15 m (49 ft)				
General information						
Degree of protection		IP54				
Interference immunity		Meets EN 61800-3				
Interference emission		Limit value class C2 to EN 61800-3				
Ambient temperature	ϑ_A	+5 – +40 °C (+41 – +104 °F), Non-condensing, no moisture condensation; Unit is intrinsically safe with respect to temperature. (P_N reduction: 3% per K up to max. 60 °C)				
Climate class		EN 60721-3-3, class 3K3				
Storage temperature	ϑ_L	-25 – +70 °C (-13 – 158 °F) EN 60721-3-3, class 3K3				
Permissible oscillation and impact load		Complies with EN 50178				
Overvoltage category		III according to IEC 60664-1 (VDE 0110-1)				
Pollution class		2 according to IEC 60664-1 (VDE 0110-1) within the housing				

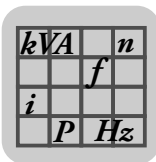

Size	MOVIPRO®				
	Size 0	Size 1		Size 2	
Performance class	2.2 kW	4.0 kW	7.5 kW	11.0 kW	15.0 kW
Installation altitude	<ul style="list-style-type: none"> Up to $h < 1000$ m (3281 ft) without restrictions The following restrictions apply at $h \geq 1000$ m (3284 ft): <ul style="list-style-type: none"> from 1000 m (3281 ft) to max. 4000 m (13120 ft): I_N reduction by 1% per 100 m (328 ft) from 2000 m (6562 ft) to max. 4000 m (13120 ft): U_N reduction by AC 6 V per 100 m (328 ft) Above 2000 m (6562 ft) for overvoltage class 2 only. External measures are required for overvoltage class 3. Overvoltage classes according to DIN VDE 0110-1. 				
Weight	15.9 kg (35.1 lb)	18.5 kg (40.8 lb)		29.5 kg (65 lb) With fan: 31 kg (68 lb)	
Dimensions W x H x D	480 mm x 190 mm x 300 mm (18.9 in x 5.91 in x 11.8 in)			570 mm x 190 mm x 420 mm (22.4 in x 7.48 in x 16.5 in)	

1) The line and output currents must be reduced by 20% from the nominal values for $V_{line} = 3$ AC 500 V.

10.3 Brake control


Brake control		230 V	400 V	460 V
Brake voltage	U_B	DC 96 V	DC 167 V	DC 190 V
AC brake coil voltage		AC 230 V	AC 400 V	AC 460 V
Nominal output current	I_N	DC 1.2 A	DC 0.7 A	DC 0.6 A
Acceleration current	I_B	4 – 8.5 times the holding current depending on the brake type		
Max. output power	P_O	$P_O \leq 120$ W		
Brake output		The data refers to the SEW standard brake coils (two-coil system)		

10.4 Digital inputs

Digital inputs	
Number of inputs	12 – 16
Input type	PLC-compatible according to EN 61131-2 (digital inputs type 3) Signal level +15 – +30 V "1" = contact closed Signal level -3 – +5 V "0" = contact open
Potential reference	0V24_C
The overall current consumption of the I/O periphery (including the encoder) should not exceed DC 2.5 A.	

10.5 Digital outputs

Digital outputs	
Number of outputs	0 – 4
Output type Rated current	PLC-compatible according to to EN 61131-2, interference-voltage proof and short-circuit proof (up to 30 V) 500 mA
Potential reference	0V24_C
The overall current consumption of the I/O periphery (including the encoder) should not exceed DC 2.5 A.	

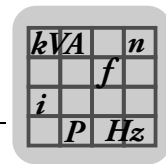


10.6 General electronics

General electronics data	
Power supply to control electronics 24V_C(ontinous)	$V_{IN} = DC\ 24\ V\ -15\% / +20\%$ according to EN 61131-2 $I_E \leq 700\ mA$, typically 500 mA (for MOVIPRO [®] electronics; with external DC 24 V supply without connected 400 V)
Sensor/actuator supply 24V_C(ontinous)	$V_{IN} = DC\ 24\ V\ -15\% / +20\%$ according to EN 61131-2 $I_E \leq 2000\ mA$ for sensor/actuator supply (depending on the number and type of the connected sensors/actuators) 4 outputs with 500 mA each
Electrical isolation	Separate potentials for: <ul style="list-style-type: none"> Floating fieldbus connection 24V_C for MOVIPRO[®] electronics and sensor/actuator supply
Analog input A11	Operating mode: DC 0 – +10 V or DC -10 V – +10 V Resolution: 12 bit Sampling time: 1 ms Internal resistance: 40 k Ω

10.7 Communication and control unit

10.7.1 DeviceNet interface

DeviceNet interface							
Protocol variant	Master/slave connection set according to DeviceNet specification version 2.0						
Supported baud rates	<ul style="list-style-type: none"> 125 kBd 250 kBd 500 kBd 						
Maximum line length	See DeviceNet specification version 2.0 <table style="margin-left: 20px;"> <tr> <td>125 kBd</td> <td>500 m</td> </tr> <tr> <td>250 kBd</td> <td>250 m</td> </tr> <tr> <td>500 kBd</td> <td>100 m</td> </tr> </table>	125 kBd	500 m	250 kBd	250 m	500 kBd	100 m
125 kBd	500 m						
250 kBd	250 m						
500 kBd	100 m						
Bus termination	120 Ω (switch on externally)						
Process data configuration	"MOVIPRO [®] SDC with DeviceNet Interface" manual						
Address setting	Address (MAC-ID) 0 – 63 can be set via DIP switches 2 ⁰ to 2 ⁵ in the DIP module						
DP ID number	600Ehex (24590dec)						
Supported services	<ul style="list-style-type: none"> Polled I/O: 1 – 10 words Bit-strobe I/O: 1 – 4 words Explicit messages: <ul style="list-style-type: none"> Get_Attribute_Single Set_Attribute_Single Reset Allocate_MS_Connection_Set Release_MS_Connection_Set 						
EDS file name	SEW_MOVIPRO.EDS						
Name of icon file	SEW_MOVIPRO.ICO						

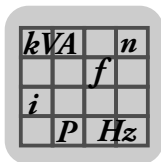

10.7.2 EtherNet/IP interface


EtherNet/IP interface	
Supported baud rates	10 / 100 Mbit/s (full duplex, with automatic detection)
Connection technology	M12 (D-coded)
Integrated switch	Supports auto-crossing, auto-negotiation
Maximum line length (from switch to switch)	100 m according to IEEE 802.3
Addressing	<ul style="list-style-type: none"> 4-byte IP address or MAC ID (00-0F-69-xx-xx-xx) configurable via DHCP server or MOVITOOLS® MotionStudio as of version 5.6 Default address: 192.168.10.4
Manufacturer ID	013Bhex
EDS file name	SEW_MOVIPRO.EDS
Name of icon file	SEW_MOVIPRO.ICO

10.7.3 Modbus/TCP interface

Modbus/TCP interface	
Supported baud rates	10 / 100 Mbit/s (full duplex, with automatic detection)
Connection technology	M12 (D-coded) / RJ45 (push-pull)
Integrated switch	Supports auto-crossing, auto-negotiation
Maximum line length (from switch to switch)	100 m according to IEEE 802.3
Addressing	<ul style="list-style-type: none"> 4-byte IP address or MAC ID (00-0F-69-xx-xx-xx) configurable via DHCP server or MOVITOOLS® MotionStudio as of version 5.6 Default address: 192.168.10.4
Supported services	<ul style="list-style-type: none"> FC3 FC16 FC23 FC43


10.7.4 PROFIBUS interface

PROFIBUS interface															
Protocol options	PROFIBUS DP and DP-V1 to IEC 61158														
Supported baud rates	9.6 kBaud - 1.5 MBaud / 3-12 MBaud (with automatic detection)														
Bus termination	Not integrated. Activate bus termination with suitable PROFIBUS connector with switchable terminating resistors.														
Maximum line length	<table> <tbody> <tr> <td>9.6 kBd</td> <td>1200 m</td> </tr> <tr> <td>19.2 kBd</td> <td>1200 m</td> </tr> <tr> <td>93.75 kBd</td> <td>1200 m</td> </tr> <tr> <td>187.5 kBd</td> <td>1000 m</td> </tr> <tr> <td>500 kBd</td> <td>400 m</td> </tr> <tr> <td>1.5 MBaud</td> <td>200 m</td> </tr> <tr> <td>12 MBaud</td> <td>100 m</td> </tr> </tbody> </table> <p>To extend the length, several segments can be coupled via repeater. For information regarding the maximum expansion/cascading depth, refer to the documentation of the DP Master or the repeater modules.</p>	9.6 kBd	1200 m	19.2 kBd	1200 m	93.75 kBd	1200 m	187.5 kBd	1000 m	500 kBd	400 m	1.5 MBaud	200 m	12 MBaud	100 m
9.6 kBd	1200 m														
19.2 kBd	1200 m														
93.75 kBd	1200 m														
187.5 kBd	1000 m														
500 kBd	400 m														
1.5 MBaud	200 m														
12 MBaud	100 m														
Address setting	Address 1 – 125 can be set via DIP switches 2 ⁰ to 2 ⁷ in the PROFIBUS module														
DP ID number	600Ehex (24590dec)														
GSD file name	SEW_600E.GSD														
Bitmap file name	<ul style="list-style-type: none"> SEW600EN.bmp SEW600ES.bmp 														

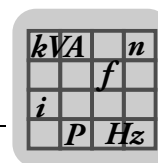

10.7.5 PROFINET interface


PROFINET interface	
PROFINET protocol option	PROFINET IO RT
Supported baud rate	100 Mbit/s (full duplex)
SEW ID number	010Ahex
Devices ID number	4
Connection technology	M12 (D-coded) / RJ45 (push-pull)
Integrated switch	Supports auto-crossing, auto-negotiation
Permitted cable types	Category 5 and higher, class D according to IEC 11801
Maximum cable length (from switch to switch)	100 m according to IEEE 802.3
GSD file name	GSDML-V2.1-SEW-MOVIPRO-YYYYMMDD.xml
Bitmap file name	SEWMOVIPRO1.bmp

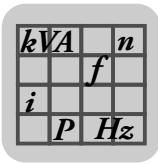

10.8 Dimension drawings

10.8.1 Size 0

The dimension drawing shows the mechanical dimensions of the MOVIPRO® unit in mm (in):

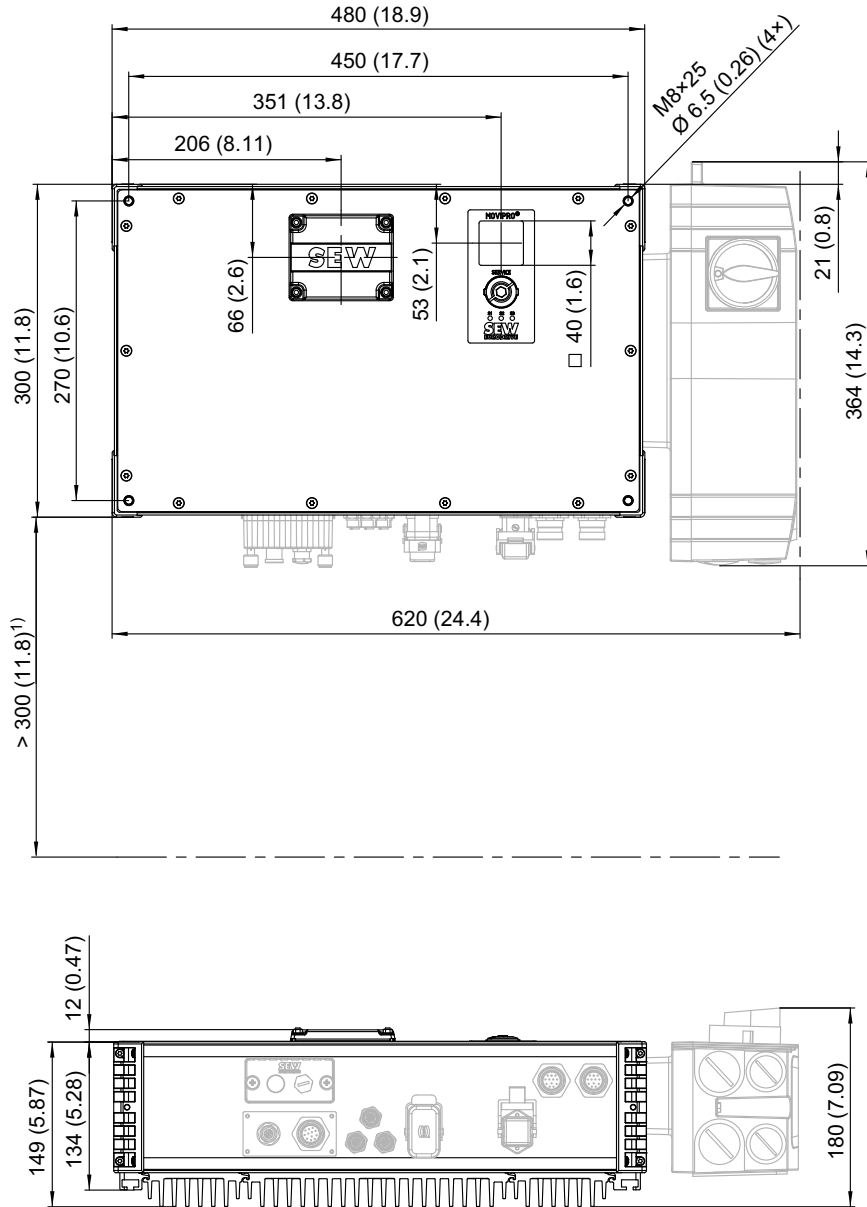



2859268107

¹⁾ Recommended clearance for connection cables (can vary depending on the cables used)

kVA	n
f	
i	
P	H_z

10.8.2 Size 1

The dimension drawing shows the mechanical dimensions of the MOVIPRO® unit in mm (in):

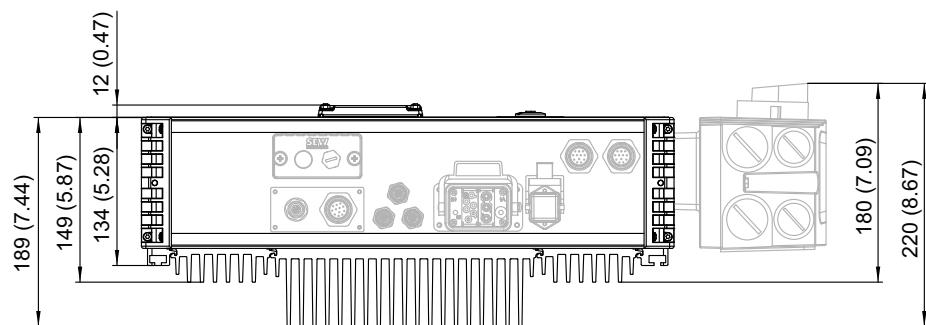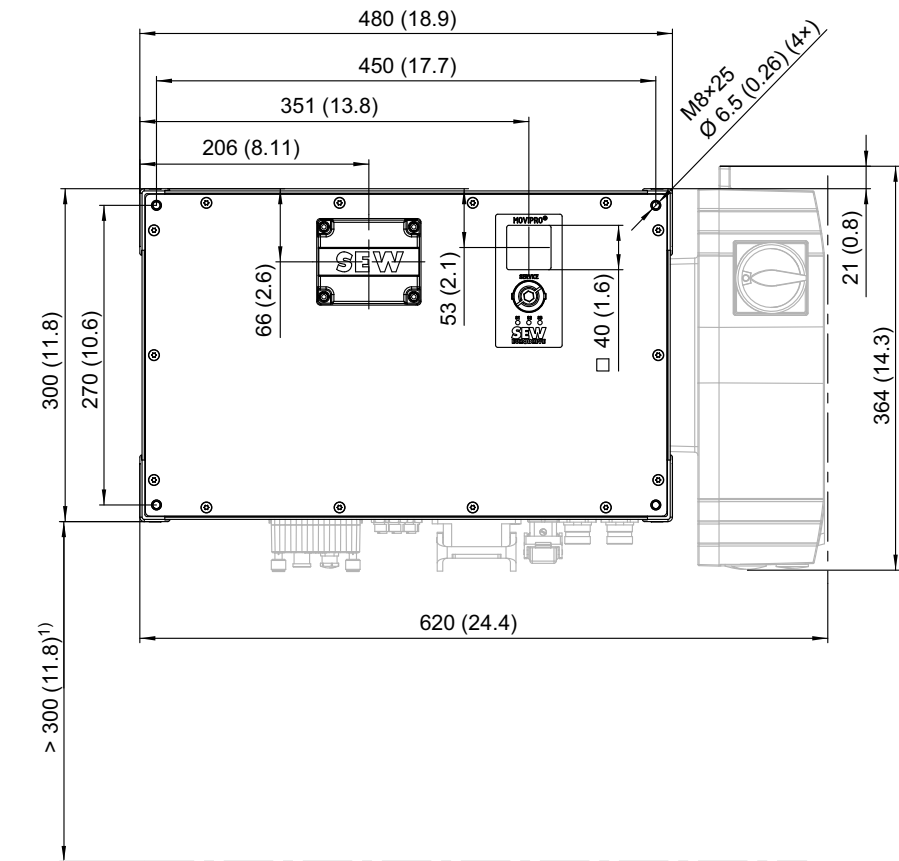

2859273355


¹) Recommended clearance for connection cables (can vary depending on the cables used)

<i>kVA</i>	<i>n</i>
<i>f</i>	
<i>i</i>	
<i>P</i>	<i>H_Z</i>


Technical Data
Dimension drawings

10.8.3 Size 2

The dimension drawing shows the mechanical dimensions of the MOVIPRO® unit in mm (in):

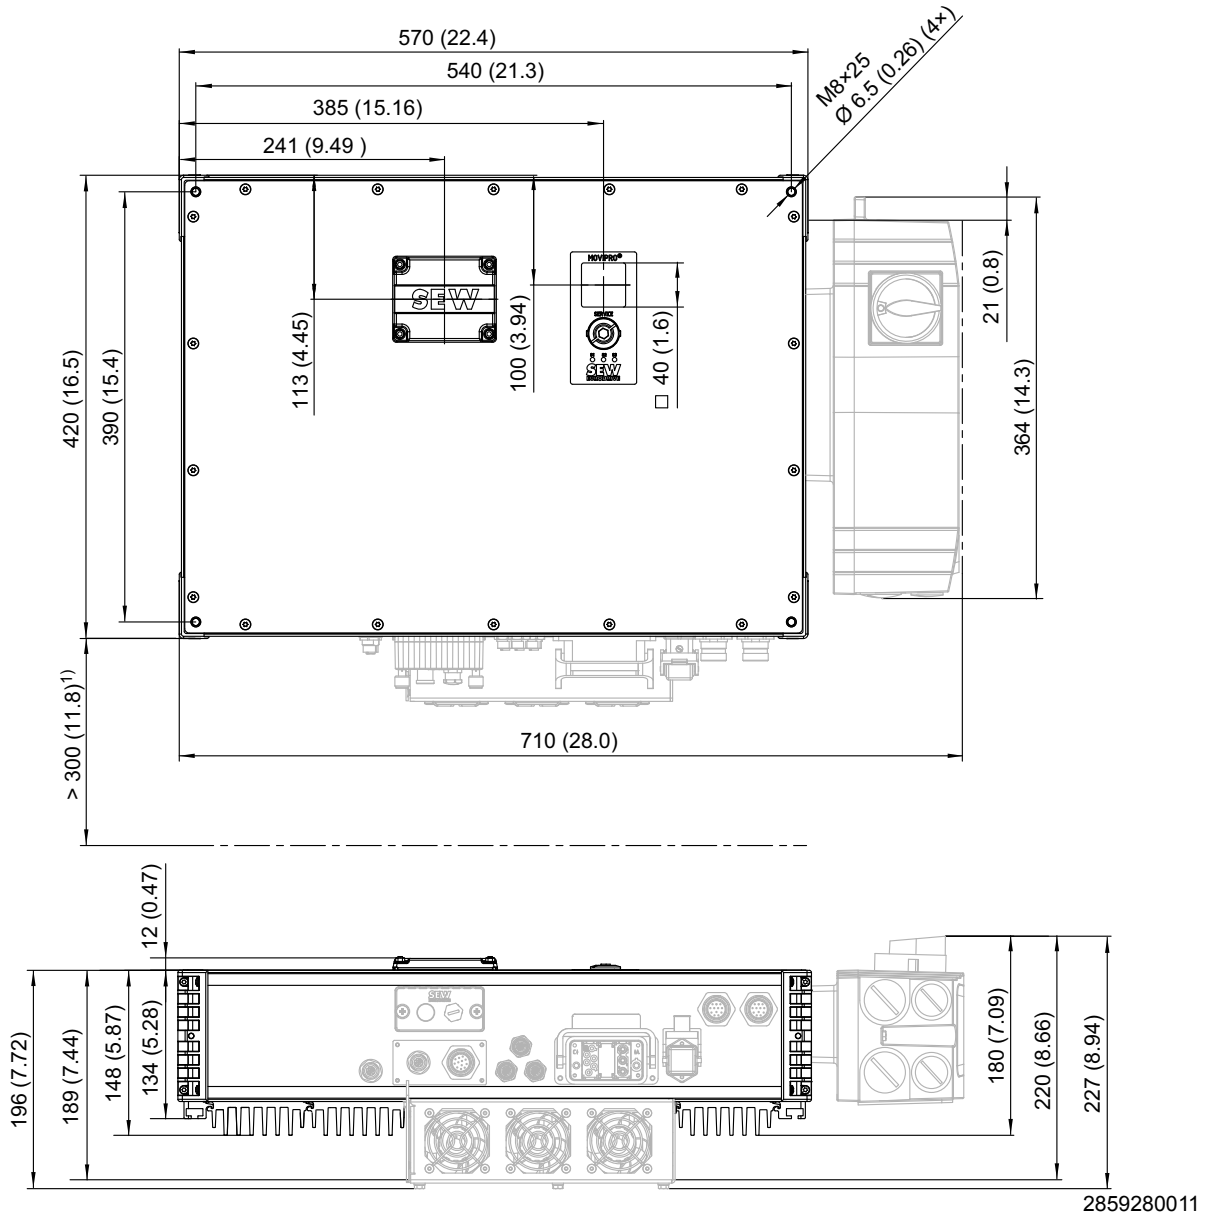


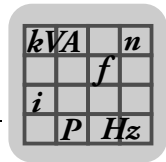¹) Recommended clearance for connection cables (can vary depending on the cables used)



10.9 Hybrid cable type "D"

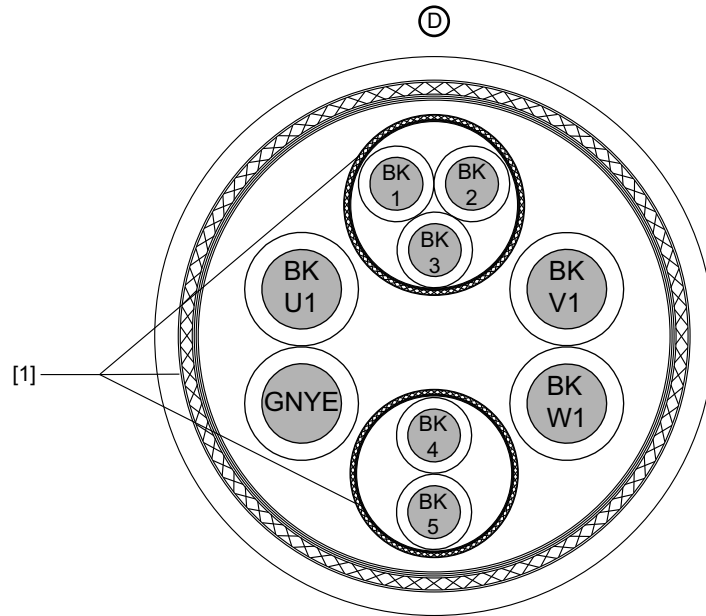
10.9.1 Mechanical design



[1] Shield

9007201213477771

Cable type	D/1.5	D/2.5	D/4.0	D/6.0	D/10.0
Supply cores:	4 x 1.5 mm ²	4 x 2.5 mm ²	4 x 4.0 mm ²	4 x 6.0 mm ²	4 x 10.0 mm ²
Control core pair	2 x 0.75 mm ²	2 x 0.75 mm ²	2 x 0.75 mm ²	2 x 0.75 mm ²	2 x 0.75 mm ²
Brake control	3 x 1.0 mm ²	3 x 1.0 mm ²	3 x 1.5 mm ²	3 x 1.5 mm ²	3 x 1.5 mm ²
Conductor insulation	PP (polypropylene)				
Conductor	Bare E-Cu strand, extra fine wires with individual wire 0.15 mm				
Shielding	Made of tinned E-Cu wire				
Overall diameter	13.9 mm	17.2 mm	19.0 mm	21.5 mm	25.3 mm
Color of outer cable sheath	Orange				
Cable sheath insulation	TPE-U (polyurethane)				

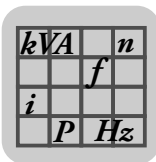

10.9.2 Electrical properties

The cables are approved according to European and American standards.

Cable type	D/1.5	D/2.5	D/4.0	D/6.0	D/10.0
Operating voltage for all cores	Max. 600 V				

10.9.3 Mechanical properties

- Suitable for cable carriers
 - Bending cycles > 5 million
 - Traveling velocity \leq 3 m/s
- Bending radius

in the cable carrier:	10 x diameter
for fixed routing:	5 x diameter

10.9.4 Thermal properties

- Processing and operation:


Fixed installation:	–40 °C – +90 °C (load capacity according to DIN VDE 0298-4)
	–30 °C – +80 °C according to UL758
Cable carrier installation:	–5 °C – +90 °C (load capacity according to DIN VDE 0298-4)
	–5 °C – +80 °C according to UL758
- Transport and storage:

	–40 °C – +90 °C (load capacity according to DIN VDE 0298-4)
	–30 °C – +80 °C according to UL758
- Flame-retardant according to VDE 0472 part 804 (method B IEC 60 332-1)

10.9.5 Chemical properties


Cable type	D/1.5	D/2.5	D/4.0	D/6.0	D/10.0
Oil-resistant	In accordance with VDE 0250 Part 407				

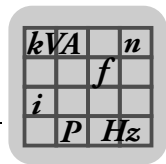- General resistance to acids, alkalis, cleaning agents
- General resistance against dusts (e.g. bauxite, magnesite)
- Insulation and sheath material halogen-free
- Within the specified temperature range, free from substances interfering with wetting agents (silicone-free)



10.10 Hybrid cable type "E"

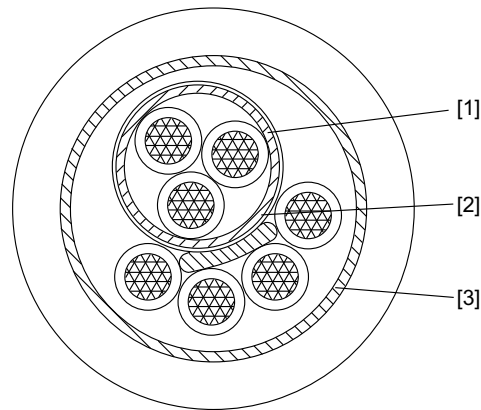10.10.1 Mechanical design



2111423499

- [1] Shielded "three-conductor" cable
- [2] EMC shielding, "three-conductor" cable
- [3] Plaiting for complete EMC shielding

Cable type	E/1.5	E/2.5	E/4.0	E/6.0
Supply cores:	4 x 1.5 mm ²	4 x 2.5 mm ²	4 x 4.0 mm ²	4 x 6.0 mm ²
Brake control	3 x 1.0 mm ²	3 x 1.0 mm ²	3 x 1.0 mm ²	3 x 1.5 mm ²
Conductor insulation	TPM			
Conductor	Blank CU litz wire			
Shielding	Made of tinned Cu wire			
Overall diameter	15.0 mm	16.3 mm	15.3 mm	17.4 mm
Color of outer cable sheath	Orange			
Cable sheath insulation	PUR (polyurethane)			

10.10.2 Electrical properties


The cables are approved according to European and American standards.

Cable type	E/1.5	E/2.5	E/4.0	E/6.0
Operating voltage for all cores	Max. 600 V			

10.10.3 Mechanical properties

- Suitable for cable carriers
 - Bending cycles > 5 million
 - Traveling velocity ≤ 3 m/s
- Bending radius

in the cable carrier:	10 x diameter
for fixed routing:	5 x diameter

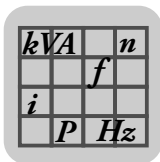

10.10.4 Thermal properties

- Processing and operation: Fixed installation:
–50 °C – +80 °C
Cable carrier installation:
–20 °C – +60 °C
- Flame-retardant according to VDE 0472 part 804 (method B IEC 60 332-1)

10.10.5 Chemical properties

Cable type	E/1.5	E/2.5	E/4.0	E/6.0
Oil-resistant	In accordance with VDE 0250 Part 407			

- General resistance to acids, alkalis, cleaning agents
- General resistance against dusts (e.g. bauxite, magnesite)
- Insulation and sheath material halogen-free
- Within the specified temperature range, free from substances interfering with wetting agents (silicone-free)

10.11 Additional documentation

For additional information, refer to the following documentation:

Documentation
Addendum to the "MOVIPRO® Accessories" operating instructions
"MOVIPRO® SDC – Functional Safety" manual
"MOVIPRO® SDC with DeviceNet Interface" manual
"MOVIPRO® SDC with EtherNet/IP and Modbus/TCP Interface" manual
"MOVIPRO® SDC with PROFIBUS Interface" manual
"MOVIPRO® SDC with PROFINET Interface" manual
"MOVITOOLS® MotionStudio" manual
"MOVIDRIVE® MDX60B/61B" system manual



11 Declaration of Conformity

EC Declaration of Conformity

**SEW
EURODRIVE**

900130010

**SEW-EURODRIVE GmbH & Co KG**
Ernst-Blickle-Straße 42, D-76646 Bruchsal

declares under sole responsibility that the

drive systems of the series	MOVIPRO® SDC	
are in conformity with		
Machinery Directive	2006/42/EC	1)
Low Voltage Directive	2006/95/EC	
EMC Directive	2004/108/EC	4)
applied harmonized standards	EN 13849-1:2008 EN 61800-5-2: 2007 EN 61800-5-1:2007 EN 61800-3:2007	5)

- 1) These products are intended for installation in machines. Startup is prohibited until it has been established that the machinery into which these products are to be incorporated complies with the provisions of the aforementioned Machinery Directive.
- 4) According to the EMC Directive, the listed products are not independently operable products. EMC assessment is only possible after these products have been integrated in an overall system. The assessment was verified for a typical system constellation, but not for the individual product.
- 5) All safety-relevant requirements of the product-specific documentation (operating instructions, manual, etc.) must be met over the entire product life cycle.

Bruchsal 11.12.09

Place

Date

Johann Soder
Managing Director Technology

a) b)

- a) Authorized representative for issuing this declaration on behalf of the manufacturer
b) Authorized representative for compiling the technical documents

2855504395



12 Address List

Germany				
Headquarters Production Sales	Bruchsal	SEW-EURODRIVE GmbH & Co KG Ernst-Blickle-Straße 42 D-76646 Bruchsal P.O. Box Postfach 3023 • D-76642 Bruchsal	Tel. +49 7251 75-0 Fax +49 7251 75-1970 http://www.sew-eurodrive.de sew@sew-eurodrive.de	
Service Competence Center	Central	SEW-EURODRIVE GmbH & Co KG Ernst-Blickle-Straße 1 D-76676 Graben-Neudorf	Tel. +49 7251 75-1710 Fax +49 7251 75-1711 sc-mitte@sew-eurodrive.de	
	North	SEW-EURODRIVE GmbH & Co KG Alte Ricklinger Straße 40-42 D-30823 Garbsen (near Hannover)	Tel. +49 5137 8798-30 Fax +49 5137 8798-55 sc-nord@sew-eurodrive.de	
	East	SEW-EURODRIVE GmbH & Co KG Dänkritzer Weg 1 D-08393 Meerane (near Zwickau)	Tel. +49 3764 7606-0 Fax +49 3764 7606-30 sc-ost@sew-eurodrive.de	
	South	SEW-EURODRIVE GmbH & Co KG Domagkstraße 5 D-85551 Kirchheim (near München)	Tel. +49 89 909552-10 Fax +49 89 909552-50 sc-sued@sew-eurodrive.de	
	West	SEW-EURODRIVE GmbH & Co KG Siemensstraße 1 D-40764 Langenfeld (near Düsseldorf)	Tel. +49 2173 8507-30 Fax +49 2173 8507-55 sc-west@sew-eurodrive.de	
	Electronics	SEW-EURODRIVE GmbH & Co KG Ernst-Blickle-Straße 42 D-76646 Bruchsal	Tel. +49 7251 75-1780 Fax +49 7251 75-1769 sc-elektronik@sew-eurodrive.de	
	Drive Service Hotline / 24 Hour Service			+49 180 5 SEWHELP +49 180 5 7394357
	Additional addresses for service in Germany provided on request!			
France				
Production Sales Service	Hagenau	SEW-USOCOME 48-54 route de Soufflenheim B. P. 20185 F-67506 Hagenau Cedex	Tel. +33 3 88 73 67 00 Fax +33 3 88 73 66 00 http://www.usocome.com sew@usocome.com	
Production	Forbach	SEW-USOCOME Zone industrielle Technopôle Forbach Sud B. P. 30269 F-57604 Forbach Cedex	Tel. +33 3 87 29 38 00	
Assembly Sales Service	Bordeaux	SEW-USOCOME Parc d'activités de Magellan 62 avenue de Magellan - B. P. 182 F-33607 Pessac Cedex	Tel. +33 5 57 26 39 00 Fax +33 5 57 26 39 09	
	Lyon	SEW-USOCOME Parc d'affaires Roosevelt Rue Jacques Tati F-69120 Vaulx en Velin	Tel. +33 4 72 15 37 00 Fax +33 4 72 15 37 15	
	Nantes	SEW-USOCOME Parc d'activités de la forêt 4 rue des Fontenelles F-44140 Le Bignon	Tel. +33 2 40 78 42 00 Fax +33 2 40 78 42 20	
	Paris	SEW-USOCOME Zone industrielle 2 rue Denis Papin F-77390 Verneuil l'Etang	Tel. +33 1 64 42 40 80 Fax +33 1 64 42 40 88	
Additional addresses for service in France provided on request!				



Algeria			
Sales	Alger	REDUCOM Sarl 16, rue des Frères Zaghounne Bellevue 16200 El Harrach Alger	Tel. +213 21 8214-91 Fax +213 21 8222-84 sew-algeria@reducom-dz.com http://www.reducom-dz.com
Argentina			
Assembly Sales Service	Buenos Aires	SEW EURODRIVE ARGENTINA S.A. Centro Industrial Garin, Lote 35 Ruta Panamericana Km 37,5 1619 Garin	Tel. +54 3327 4572-84 Fax +54 3327 4572-21 sewar@sew-eurodrive.com.ar http://www.sew-eurodrive.com.ar
Australia			
Assembly Sales Service	Melbourne	SEW-EURODRIVE PTY. LTD. 27 Beverage Drive Tullamarine, Victoria 3043	Tel. +61 3 9933-1000 Fax +61 3 9933-1003 http://www.sew-eurodrive.com.au enquires@sew-eurodrive.com.au
	Sydney	SEW-EURODRIVE PTY. LTD. 9, Sleigh Place, Wetherill Park New South Wales, 2164	Tel. +61 2 9725-9900 Fax +61 2 9725-9905 enquires@sew-eurodrive.com.au
Austria			
Assembly Sales Service	Wien	SEW-EURODRIVE Ges.m.b.H. Richard-Strauss-Strasse 24 A-1230 Wien	Tel. +43 1 617 55 00-0 Fax +43 1 617 55 00-30 http://www.sew-eurodrive.at sew@sew-eurodrive.at
Belarus			
Sales	Minsk	SEW-EURODRIVE BY RybalkoStr. 26 BY-220033 Minsk	Tel.+375 (17) 298 38 50 Fax +375 (17) 29838 50 sales@sew.by
Belgium			
Assembly Sales Service	Brussels	SEW Caron-Vector Research park Haasrode Evenementenlaan 7 BE-3001 Leuven	Tel. +32 16 386-311 Fax +32 16 386-336 http://www.sew-eurodrive.be info@sew-eurodrive.be
Service Compe- tence Center	Industrial Gears	SEW Caron-Vector Rue de Parc Industriel, 31 BE-6900 Marche-en-Famenne	Tel. +32 84 219-878 Fax +32 84 219-879 http://www.sew-eurodrive.be service-wallonie@sew-eurodrive.be
	Antwerp	SEW Caron-Vector Glasstraat, 19 BE-2170 Merksem	Tel. +32 3 64 19 333 Fax +32 3 64 19 336 http://www.sew-eurodrive.be service-antwerpen@sew-eurodrive.be
Brazil			
Production Sales Service	Sao Paulo	SEW-EURODRIVE Brasil Ltda. Avenida Amâncio Gaiolli, 152 - Rodovia Presi- dente Dutra Km 208 Guarulhos - 07251-250 - SP SAT - SEW ATENDE - 0800 7700496	Tel. +55 11 2489-9133 Fax +55 11 2480-3328 http://www.sew-eurodrive.com.br sew@sew.com.br
Bulgaria			
Sales	Sofia	BEVER-DRIVE GmbH Bogdanovetz Str. 1 BG-1606 Sofia	Tel. +359 2 9151160 Fax +359 2 9151166 bever@mail.bg



Cameroon			
Sales	Douala	Electro-Services Rue Drouot Akwa B.P. 2024 Douala	Tel. +237 33 431137 Fax +237 33 431137 electrojemba@yahoo.fr
Canada			
Assembly Sales Service	Toronto	SEW-EURODRIVE CO. OF CANADA LTD. 210 Walker Drive Bramalea, ON L6T 3W1	Tel. +1 905 791-1553 Fax +1 905 791-2999 http://www.sew-eurodrive.ca l.watson@sew-eurodrive.ca
	Vancouver	SEW-EURODRIVE CO. OF CANADA LTD. Tilbury Industrial Park 7188 Honeyman Street Delta, BC V4G 1G1	Tel. +1 604 946-5535 Fax +1 604 946-2513 b.wake@sew-eurodrive.ca
	Montreal	SEW-EURODRIVE CO. OF CANADA LTD. 2555 Rue Leger Lasalle, PQ H8N 2V9	Tel. +1 514 367-1124 Fax +1 514 367-3677 a.peluso@sew-eurodrive.ca
Additional addresses for service in Canada provided on request!			
Chile			
Assembly Sales Service	Santiago de Chile	SEW-EURODRIVE CHILE LTDA. Las Encinas 1295 Parque Industrial Valle Grande LAMPA RCH-Santiago de Chile P.O. Box Casilla 23 Correo Quilicura - Santiago - Chile	Tel. +56 2 75770-00 Fax +56 2 75770-01 http://www.sew-eurodrive.cl ventas@sew-eurodrive.cl
China			
Production Assembly Sales Service	Tianjin	SEW-EURODRIVE (Tianjin) Co., Ltd. No. 46, 7th Avenue, TEDA Tianjin 300457	Tel. +86 22 25322612 Fax +86 22 25323273 info@sew-eurodrive.cn http://www.sew-eurodrive.com.cn
Assembly Sales Service	Suzhou	SEW-EURODRIVE (Suzhou) Co., Ltd. 333, Suhong Middle Road Suzhou Industrial Park Jiangsu Province, 215021	Tel. +86 512 62581781 Fax +86 512 62581783 suzhou@sew-eurodrive.cn
	Guangzhou	SEW-EURODRIVE (Guangzhou) Co., Ltd. No. 9, JunDa Road East Section of GETDD Guangzhou 510530	Tel. +86 20 82267890 Fax +86 20 82267922 guangzhou@sew-eurodrive.cn
	Shenyang	SEW-EURODRIVE (Shenyang) Co., Ltd. 10A-2, 6th Road Shenyang Economic Technological Development Area Shenyang, 110141	Tel. +86 24 25382538 Fax +86 24 25382580 shenyang@sew-eurodrive.cn
	Wuhan	SEW-EURODRIVE (Wuhan) Co., Ltd. 10A-2, 6th Road No. 59, the 4th Quanli Road, WEDA 430056 Wuhan	Tel. +86 27 84478388 Fax +86 27 84478389 wuhan@sew-eurodrive.cn
	Xi'An	SEW-EURODRIVE (Xi'An) Co., Ltd. No. 12 Jinye 2nd Road Xi'An High-Technology Industrial Development Zone Xi'An 710065	Tel. +86 29 68686262 Fax +86 29 68686311 xian@sew-eurodrive.cn
Additional addresses for service in China provided on request!			



Colombia			
Assembly Sales Service	Bogotá	SEW-EURODRIVE COLOMBIA LTDA. Calle 22 No. 132-60 Bodega 6, Manzana B Santafé de Bogotá	Tel. +57 1 54750-50 Fax +57 1 54750-44 http://www.sew-eurodrive.com.co sewcol@sew-eurodrive.com.co
Croatia			
Sales Service	Zagreb	KOMPEKS d. o. o. Zeleni dol 10 HR 10 000 Zagreb	Tel. +385 1 4613-158 Fax +385 1 4613-158 kompeks@inet.hr
Czech Republic			
Sales	Prague	SEW-EURODRIVE CZ S.R.O. Business Centrum Praha Lužná 591 CZ-16000 Praha 6 - Vokovice	Tel. +420 255 709 601 Fax +420 220 121 237 http://www.sew-eurodrive.cz sew@sew-eurodrive.cz
Denmark			
Assembly Sales Service	Copenhagen	SEW-EURODRIVEA/S Geminivej 28-30 DK-2670 Greve	Tel. +45 43 9585-00 Fax +45 43 9585-09 http://www.sew-eurodrive.dk sew@sew-eurodrive.dk
Egypt			
Sales Service	Cairo	Copam Egypt for Engineering & Agencies 33 El Hegaz ST, Heliopolis, Cairo	Tel. +20 2 22566-299 + 1 23143088 Fax +20 2 22594-757 http://www.copam-egypt.com/ copam@datum.com.eg
Estonia			
Sales	Tallin	ALAS-KUUL AS Reti tee 4 EE-75301 Peetri küla, Rae vald, Harjumaa	Tel. +372 6593230 Fax +372 6593231 veiko.soots@alas-kuul.ee
Finland			
Assembly Sales Service	Lahti	SEW-EURODRIVE OY Vesimäentie 4 FIN-15860 Hollola 2	Tel. +358 201 589-300 Fax +358 3 780-6211 sew@sew.fi http://www.sew-eurodrive.fi
Production Assembly	Karkkila	SEW Industrial Gears Oy Valurinkatu 6, PL 8 FI-03600 Karkkila, 03601 Karkkila	Tel. +358 201 589-300 Fax +358 201 589-310 sew@sew.fi http://www.sew-eurodrive.fi
Gabon			
Sales	Libreville	ESG Electro Services Gabun Feu Rouge Lalala 1889 Libreville Gabun	Tel. +241 741059 Fax +241 741059 esg_services@yahoo.fr
Great Britain			
Assembly Sales Service	Normanton	SEW-EURODRIVE Ltd. Beckbridge Industrial Estate P.O. Box No.1 Normanton, West-Yorkshire WF6 1QR	Tel. +44 1924 893-855 Fax +44 1924 893-702 http://www.sew-eurodrive.co.uk info@sew-eurodrive.co.uk



Greece			
Sales Service	Athens	Christ. Boznos & Son S.A. 12, K. Mavromichali Street P.O. Box 80136 GR-18545 Piraeus	Tel. +30 2 1042 251-34 Fax +30 2 1042 251-59 http://www.boznos.gr info@boznos.gr
Hong Kong			
Assembly Sales Service	Hong Kong	SEW-EURODRIVE LTD. Unit No. 801-806, 8th Floor Hong Leong Industrial Complex No. 4, Wang Kwong Road Kowloon, Hong Kong	Tel. +852 36902200 Fax +852 36902211 contact@sew-eurodrive.hk
Hungary			
Sales Service	Budapest	SEW-EURODRIVE Kft. H-1037 Budapest Kunigunda u. 18	Tel. +36 1 437 06-58 Fax +36 1 437 06-50 office@sew-eurodrive.hu
India			
Registered Office Assembly Sales Service	Vadodara	SEW-EURODRIVE India Private Limited Plot No. 4, GIDC POR Ramangamdi • Vadodara - 391 243 Gujarat	Tel. +91 265 3045200, +91 265 2831086 Fax +91 265 3045300, +91 265 2831087 http://www.seweurodriveindia.com sales@seweurodriveindia.com subodh.ladwa@seweurodriveindia.com
Assembly Sales Service	Chennai	SEW-EURODRIVE India Private Limited Plot No. K3/1, Sipcot Industrial Park Phase II Mambakkam Village Sriperumbudur - 602105 Kancheepuram Dist, Tamil Nadu	Tel. +91 44 37188888 Fax +91 44 37188811 c.v.shivkumar@seweurodriveindia.com
Ireland			
Sales Service	Dublin	Alperton Engineering Ltd. 48 Moyle Road Dublin Industrial Estate Glasnevin, Dublin 11	Tel. +353 1 830-6277 Fax +353 1 830-6458 info@alperton.ie http://www.alperton.ie
Israel			
Sales	Tel-Aviv	Liraz Handasa Ltd. Ahofer Str 34B / 228 58858 Holon	Tel. +972 3 5599511 Fax +972 3 5599512 http://www.liraz-handasa.co.il office@liraz-handasa.co.il
Italy			
Assembly Sales Service	Solaro	SEW-EURODRIVE di R. Blicke & Co.s.a.s. Via Bernini, 14 I-20020 Solaro (Milano)	Tel. +39 02 96 9801 Fax +39 02 96 799781 http://www.sew-eurodrive.it sewit@sew-eurodrive.it
Ivory Coast			
Sales	Abidjan	SICA Société industrielle & commerciale pour l'Afrique 165, Boulevard de Marseille 26 BP 1115 Abidjan 26	Tel. +225 21 25 79 44 Fax +225 21 25 88 28 sicamot@aviso.ci



Japan			
Assembly Sales Service	Iwata	SEW-EURODRIVE JAPAN CO., LTD 250-1, Shimoman-no, Iwata Shizuoka 438-0818	Tel. +81 538 373811 Fax +81 538 373855 http://www.sew-eurodrive.co.jp sewjapan@sew-eurodrive.co.jp
Kazakhstan			
Sales	Almaty	TOO "СЕВ-ЕВРОДРАЙВ" 050061, Республика Казахстан г.Алматы, пр.Райымбека, 348	Тел. +7 (727) 334 1880 Факс +7 (727) 334 1881 http://www.sew-eurodrive.kz sew@sew-eurodrive.kz
Latvia			
Sales	Riga	SIA Alas-Kuul Katlakalna 11C LV-1073 Riga	Tel. +371 6 7139253 Fax +371 6 7139386 http://www.alas-kuul.com info@alas-kuul.com
Lebanon			
Sales	Beirut	Gabriel Acar & Fils sarl B. P. 80484 Bourj Hammoud, Beirut	Tel. +961 1 510 532 Fax +961 1 494 971 ssacar@info.com.lb
Jordan Kuwait Saudi Arabia Syria	Beirut	Middle East Drives S.A.L. (offshore) Sin El Fil. B. P. 55-378 Beirut	Tel. +961 1 494 786 Fax +961 1 494 971 info@medrives.com http://www.medrives.com
Lithuania			
Sales	Alytus	UAB Irseva Statybininku 106C LT-63431 Alytus	Tel. +370 315 79204 Fax +370 315 56175 info@irseva.lt http://www.sew-eurodrive.lt
Luxembourg			
Assembly Sales Service	Brüssel	CARON-VECTOR S.A. Avenue Eiffel 5 B-1300 Wavre	Tel. +32 10 231-311 Fax +32 10 231-336 http://www.sew-eurodrive.lu info@caron-vector.be
Malaysia			
Assembly Sales Service	Johore	SEW-EURODRIVE SDN BHD No. 95, Jalan Seroja 39, Taman Johor Jaya 81000 Johor Bahru, Johor West Malaysia	Tel. +60 7 3549409 Fax +60 7 3541404 sales@sew-eurodrive.com.my
Mexico			
Assembly Sales Service	Quéretaro	SEW-EURODRIVE MEXICO SA DE CV SEM-981118-M93 Tequisquiapan No. 102 Parque Industrial Quéretaro C.P. 76220 Quéretaro, México	Tel. +52 442 1030-300 Fax +52 442 1030-301 http://www.sew-eurodrive.com.mx scmexico@seweurodrive.com.mx
Morocco			
Sales	Casablanca	Afit Route D'El Jadida KM 14 RP8 Province de Nouaceur Commune Rurale de Bouskoura MA 20300 Casablanca	Tel. +212 522633700 Fax +212 522621588 fatima.hauiq@premium.net http://www.groupe-premium.com



Netherlands			
Assembly Sales Service	Rotterdam	VECTOR Aandrijftechniek B.V. Industrieweg 175 NL-3044 AS Rotterdam Postbus 10085 NL-3004 AB Rotterdam	Tel. +31 10 4463-700 Fax +31 10 4155-552 http://www.vector.nu info@vector.nu
New Zealand			
Assembly Sales Service	Auckland	SEW-EURODRIVE NEW ZEALAND LTD. P.O. Box 58-428 82 Greenmount drive East Tamaki Auckland	Tel. +64 9 2745627 Fax +64 9 2740165 http://www.sew-eurodrive.co.nz sales@sew-eurodrive.co.nz
	Christchurch	SEW-EURODRIVE NEW ZEALAND LTD. 10 Settlers Crescent, Ferrymead Christchurch	Tel. +64 3 384-6251 Fax +64 3 384-6455 sales@sew-eurodrive.co.nz
Norway			
Assembly Sales Service	Moss	SEW-EURODRIVE A/S Solgaard skog 71 N-1599 Moss	Tel. +47 69 24 10 20 Fax +47 69 24 10 40 http://www.sew-eurodrive.no sew@sew-eurodrive.no
Pakistan			
Sales	Karachi	Industrial Power Drives Al-Fatah Chamber A/3, 1st Floor Central Com- mercial Area, Sultan Ahmed Shah Road, Block 7/8, Karachi	Tel. +92 21 452 9369 Fax +92-21-454 7365 seweurodrive@cyber.net.pk
Peru			
Assembly Sales Service	Lima	SEW DEL PERU MOTORES REDUCTORES S.A.C. Los Calderos, 120-124 Urbanizacion Industrial Vulcano, ATE, Lima	Tel. +51 1 3495280 Fax +51 1 3493002 http://www.sew-eurodrive.com.pe sewperu@sew-eurodrive.com.pe
Poland			
Assembly Sales Service	Lodz	SEW-EURODRIVE Polska Sp.z.o.o. ul. Techniczna 5 PL-92-518 Łódź	Tel. +48 42 676 53 00 Fax +48 42 676 53 45 http://www.sew-eurodrive.pl sew@sew-eurodrive.pl
	24 Hour Service		Tel. +48 602 739 739 (+48 602 SEW SEW) serwis@sew-eurodrive.pl
Portugal			
Assembly Sales Service	Coimbra	SEW-EURODRIVE, LDA. Apartado 15 P-3050-901 Mealhada	Tel. +351 231 20 9670 Fax +351 231 20 3685 http://www.sew-eurodrive.pt infosew@sew-eurodrive.pt
Romania			
Sales Service	Bucharest	Sialco Trading SRL str. Madrid nr.4 011785 Bucuresti	Tel. +40 21 230-1328 Fax +40 21 230-7170 sialco@sialco.ro
Russia			
Assembly Sales Service	St. Petersburg	ZAO SEW-EURODRIVE P.O. Box 36 195220 St. Petersburg Russia	Tel. +7 812 3332522 +7 812 5357142 Fax +7 812 3332523 http://www.sew-eurodrive.ru sew@sew-eurodrive.ru



Senegal			
Sales	Dakar	SEMECEA Mécanique Générale Km 8, Route de Rufisque B.P. 3251, Dakar	Tel. +221 338 494 770 Fax +221 338 494 771 senemeca@sentoo.sn http://www.senemeca.com
Serbia			
Sales	Beograd	DIPAR d.o.o. Ustanicka 128a PC Košum, IV floor SCG-11000 Beograd	Tel. +381 11 347 3244 / +381 11 288 0393 Fax +381 11 347 1337 office@dipar.rs
Singapore			
Assembly Sales Service	Singapore	SEW-EURODRIVE PTE. LTD. No 9, Tuas Drive 2 Jurong Industrial Estate Singapore 638644	Tel. +65 68621701 Fax +65 68612827 http://www.sew-eurodrive.com.sg sewsingapore@sew-eurodrive.com
Slovakia			
Sales	Bratislava	SEW-Eurodrive SK s.r.o. Rybničná 40 SK-831 06 Bratislava	Tel. +421 2 33595 202 Fax +421 2 33595 200 sew@sew-eurodrive.sk http://www.sew-eurodrive.sk
	Žilina	SEW-Eurodrive SK s.r.o. Industry Park - PChZ ulica M.R.Štefánika 71 SK-010 01 Žilina	Tel. +421 41 700 2513 Fax +421 41 700 2514 sew@sew-eurodrive.sk
	Banská Bystrica	SEW-Eurodrive SK s.r.o. Rudlovska cesta 85 SK-974 11 Banská Bystrica	Tel. +421 48 414 6564 Fax +421 48 414 6566 sew@sew-eurodrive.sk
	Košice	SEW-Eurodrive SK s.r.o. Slovenská ulica 26 SK-040 01 Košice	Tel. +421 55 671 2245 Fax +421 55 671 2254 sew@sew-eurodrive.sk
Slovenia			
Sales Service	Celje	Pakman - Pogonska Tehnika d.o.o. Ul. XIV. divizije 14 SLO - 3000 Celje	Tel. +386 3 490 83-20 Fax +386 3 490 83-21 pakman@siol.net
South Africa			
Assembly Sales Service	Johannesburg	SEW-EURODRIVE (PROPRIETARY) LIMITED Eurodrive House Cnr. Adcock Ingram and Aerodrome Roads Aeroton Ext. 2 Johannesburg 2013 P.O.Box 90004 Bertsham 2013	Tel. +27 11 248-7000 Fax +27 11 494-3104 http://www.sew.co.za info@sew.co.za
	Cape Town	SEW-EURODRIVE (PROPRIETARY) LIMITED Rainbow Park Cnr. Racecourse & Omuramba Road Montague Gardens Cape Town P.O.Box 36556 Chempet 7442 Cape Town	Tel. +27 21 552-9820 Fax +27 21 552-9830 Telex 576 062 cfoster@sew.co.za



South Africa			
	Durban	SEW-EURODRIVE (PROPRIETARY) LIMITED 2 Monaco Place Pinetown Durban P.O. Box 10433, Ashwood 3605	Tel. +27 31 700-3451 Fax +27 31 700-3847 cdejager@sew.co.za
	Nelspruit	SEW-EURODRIVE (PTY) LTD. 7 Christie Crescent Vintonia P.O.Box 1942 Nelspruit 1200	Tel. +27 13 752-8007 Fax +27 13 752-8008 robermeyer@sew.co.za
South Korea			
Assembly Sales Service	Ansan-City	SEW-EURODRIVE KOREA CO., LTD. B 601-4, Banweol Industrial Estate 1048-4, Shingil-Dong Ansan 425-120	Tel. +82 31 492-8051 Fax +82 31 492-8056 http://www.sew-korea.co.kr master.korea@sew-eurodrive.com
	Busan	SEW-EURODRIVE KOREA Co., Ltd. No. 1720 - 11, Songjeong - dong Gangseo-ku Busan 618-270	Tel. +82 51 832-0204 Fax +82 51 832-0230 master@sew-korea.co.kr
Spain			
Assembly Sales Service	Bilbao	SEW-EURODRIVE ESPAÑA, S.L. Parque Tecnológico, Edificio, 302 E-48170 Zamudio (Vizcaya)	Tel. +34 94 43184-70 Fax +34 94 43184-71 http://www.sew-eurodrive.es sew.spain@sew-eurodrive.es
Sweden			
Assembly Sales Service	Jönköping	SEW-EURODRIVE AB Gnejsvägen 6-8 S-55303 Jönköping Box 3100 S-55003 Jönköping	Tel. +46 36 3442 00 Fax +46 36 3442 80 http://www.sew-eurodrive.se jonkoping@sew.se
Switzerland			
Assembly Sales Service	Basel	Alfred Imhof A.G. Jurastrasse 10 CH-4142 Münchenstein bei Basel	Tel. +41 61 417 1717 Fax +41 61 417 1700 http://www.imhof-sew.ch info@imhof-sew.ch
Thailand			
Assembly Sales Service	Chonburi	SEW-EURODRIVE (Thailand) Ltd. 700/456, Moo.7, Donhuaroh Muang Chonburi 20000	Tel. +66 38 454281 Fax +66 38 454288 sewthailand@sew-eurodrive.com
Tunisia			
Sales	Tunis	T. M.S. Technic Marketing Service Zone Industrielle Mghira 2 Lot No. 39 2082 Fouchana	Tel. +216 79 40 88 77 Fax +216 79 40 88 66 tms@tms.com.tn
Turkey			
Assembly Sales Service	Istanbul	SEW-EURODRIVE Hareket Sistemleri San. ve Tic. Ltd. Sti. Bagdat Cad. Koruma Cikmazi No. 3 TR-34846 Maltepe ISTANBUL	Tel. +90 216 4419163 / 4419164 Fax +90 216 3055867 http://www.sew-eurodrive.com.tr sew@sew-eurodrive.com.tr



Ukraine			
Sales Service	Dnepropetrovsk	SEW-EURODRIVE Str. Rabochaja 23-B, Office 409 49008 Dnepropetrovsk	Tel. +380 56 370 3211 Fax +380 56 372 2078 http://www.sew-eurodrive.ua sew@sew-eurodrive.ua
United Arab Emirates			
Sales Service	Sharjah	Copam Middle East (FZC) Sharjah Airport International Free Zone P.O. Box 120709 Sharjah	Tel. +971 6 5578-488 Fax +971 6 5578-499 copam_me@eim.ae
USA			
Production Assembly Sales Service Corporate Offices	Southeast Region	SEW-EURODRIVE INC. 1295 Old Spartanburg Highway P.O. Box 518 Lyman, S.C. 29365	Tel. +1 864 439-7537 Fax Sales +1 864 439-7830 Fax Manufacturing +1 864 439-9948 Fax Assembly +1 864 439-0566 Fax Confidential/HR +1 864 949-5557 http://www.seweurodrive.com cslyman@seweurodrive.com
Assembly Sales Service	Northeast Region	SEW-EURODRIVE INC. Pureland Ind. Complex 2107 High Hill Road, P.O. Box 481 Bridgeport, New Jersey 08014	Tel. +1 856 467-2277 Fax +1 856 845-3179 csbridgeport@seweurodrive.com
	Midwest Region	SEW-EURODRIVE INC. 2001 West Main Street Troy, Ohio 45373	Tel. +1 937 335-0036 Fax +1 937 332-0038 cstroy@seweurodrive.com
	Southwest Region	SEW-EURODRIVE INC. 3950 Platinum Way Dallas, Texas 75237	Tel. +1 214 330-4824 Fax +1 214 330-4724 csdallas@seweurodrive.com
	Western Region	SEW-EURODRIVE INC. 30599 San Antonio St. Hayward, CA 94544	Tel. +1 510 487-3560 Fax +1 510 487-6433 cshayward@seweurodrive.com
Additional addresses for service in the USA provided on request!			
Venezuela			
Assembly Sales Service	Valencia	SEW-EURODRIVE Venezuela S.A. Av. Norte Sur No. 3, Galpon 84-319 Zona Industrial Municipal Norte Valencia, Estado Carabobo	Tel. +58 241 832-9804 Fax +58 241 838-6275 http://www.sew-eurodrive.com.ve ventas@sew-eurodrive.com.ve sewfinanzas@cantv.net
Vietnam			
Sales	Ho Chi Minh City	Nam Trung Co., Ltd 91 - 93 Tran Minh Quyen Street, District 10, HCMC	Tel. +84 8 8301026 Fax +84 8 8392223 namtrungco@hcm.vnn.vn



Index

A

Absolute encoder	23
AC 400 V input	
Connection	57, 61
Accessories	
Braking resistor	22
Cables	56
Fan subassembly	23
Handles	22, 23
Motor encoder	23
Mounting accessories	22, 23
Mounting brackets	22, 23
Overview	21
Power interface	22
Sensor/actuator box	22
Synchronous encoder	24, 25
Assembly	
General information	34
Safety notes	9

B

Brake control	26
Brake voltage	26
Brake, see Motor with brake	68, 75
Brake, see motor with brake	64
Braking resistor	
Cables	80, 81
Connection	80, 81
Part numbers	22

C

Cable	
Also see Connection	65, 69, 90, 103, 104
Cable cross section	48
Cable installation	42
Cable type "D"	147
Cable type "E"	149
Cables	
Also see Connection	80, 81, 88
Cross sections	48
Also see Hybrid cables	
CAN bus	
Also see Distance encoder	
Cables	88

CANopen distance encoder	25
CANopen synchronous encoder	25
CE marking	138
Certification	
CE	138
cUL	138
UL	138
Classic, function level	27
Communication and control unit	
Component description	27
Technical data	141, 142, 143
Components	
Brake control	26
Communication and control unit	27
Encoder evaluation	26
Energy supply	29
Inverter	26
PFA-MD...B-G...BG.../C.../000	26
PFE-AC...A-...-000A-.../000/000	29
PFH-...0AC0-B-...I100-00/.../...	27
Power section	26
SD memory card	27
Service unit	28
Connection	
AC 400 V input	57, 61
Braking resistor	80, 81
DeviceNet	93
Digital inputs/outputs	96, 97, 100
Distance encoder	90
EtherNet/IP	95
Frequency inverter	102
Motor encoder	82, 84
Motor with brake	64, 68, 75, 76
PROFIBUS	92
PROFINET	94
Safety notes	10
Safety relay	104
Connection cables	56
Connections	59, 60
Control unit, see Communication and control unit	
Cooling	32
Copyright	6
Cover of memory card, see Memory card cover	27
cUL approval	138



D	
DC 24 V input for backup voltage	
Cable.....	103, 104
Derating	46
Designated use	8
Designation	
Plug connectors	56
Short designation of the unit	13
DeviceNet	
Connection.....	93
Setting the address.....	111, 112
Setting the baud rate.....	112
Digital inputs	
Technical data.....	140
Digital inputs/outputs	
Cables.....	98
Connection.....	96, 97, 100
Digital outputs	
Technical data.....	140, 141
Dimension drawings size 0	144
Dimension drawings size 1	145
Dimension drawings size 2	146
DIP switch, see switch S2.....	111, 112
Directives, applicable	138
Disconnection	
Safe.....	10
Disposal	137
Distance encoder	
CANopen	88
Connection.....	90
HIPERFACE®	90
SSI	90
Documentation, additional	150
Drive inverter, see inverter.....	26
Duty types	115
E	
Earth-leakage circuit breaker	50
Electrical connection	10
Electrical hazards.....	47
Electrical installation.....	42
Embedded safety notes	5
EMC (electromagnetic compatibility).....	42
Emergency stop	125
EN ISO 13849-1.....	30
EN 1037	30
EN 1525	106, 125
EN 1526	106, 125
EN 1726	106, 125
EN 61800-5-1	48, 50
EN 61800-5-2	30
Encoder	
Distance encoder.....	88
Motor encoder.....	82
Encoder combinations	26
Encoder evaluation	26
Encoder, see Motor encoder	
EnDat synchronous encoder	25
Energy supply	29
Engineering	
Options	27
Equipotential bonding	49
Error codes	126
Error memory	124
Error messages	117, 119
Error responses	126
Ethernet interface	28
EtherNet/IP	
Connection.....	95
Exclusion of liability.....	6
F	
Fan subassembly	
Part numbers	23
Fault information	124
Fieldbus	27
Connection.....	27
DeviceNet	27
EtherNet/IP.....	27
Modbus/TCP	27
PROFIBUS	27
PROFINET.....	27
Frequency inverter	124
Connection.....	102
Function levels.....	27
Function unit	
Designation.....	15
Functional safety	
Applied standards	30
Functional safety technology	
Safety note.....	8
G	
Ground fault circuit interrupter, see earth-leakage circuit breaker	
Grounding	49




H	
HIPERFACE [®] , see Motor encoder	
HTL, see Motor encoder	
Hybrid cables	
Cable structure.....	147, 149
Cable type "D".....	147
Cable type "E".....	149
I	
IEC 61800-5-2.....	30
Immediate switch-off.....	125
Incremental encoders.....	23
Installation	
electrical.....	42
Installation altitudes.....	46
Installation instructions	
Derating.....	46
Information regarding UL.....	43
Installation altitudes.....	46
Installation, mechanical.....	31
Installing the fuses.....	50
Interface	
Ethernet.....	28
Service.....	28
Inverter	
Component description.....	26
Performance classes.....	26
Safety functions.....	30
Inverter status.....	118
Inverter statuses.....	119
I/O, see Digital inputs/outputs	
J	
Jumper plug, STO.....	22
Part number.....	22
L	
Laptop, connection to.....	113
M	
Mechanical installation.....	31, 34
Memory card	
Position.....	27
Replacing units.....	123
Memory card cover.....	27
Memory card, see SD memory card.....	27
Minimum clearance.....	31
Minimum distance.....	31
Motor encoder.....	23
Cable.....	83
Connection.....	82, 84
Motor terminal assignment.....	66, 74, 79
Motor with brake	
Cable.....	65, 69
Connection.....	64, 68, 76
Mounting	
From behind.....	40
From the front.....	38
Mounting accessories, part numbers.....	22, 23
Via through bores.....	37
Mounting bracket	
Use.....	35
Mounting position.....	33
Mounting with mounting brackets.....	35
MOVIDRIVE [®] , see inverter.....	26
N	
Nameplate.....	14
Function unit nameplate.....	14
Main nameplate.....	14
Nomenclature.....	12, 15
Notes	
Designation in the documentation.....	5
O	
Operation	
Brake control.....	116
Duty types.....	115
Safety notes.....	11
Options	
Encoder evaluation.....	26
S11 PROFIsafe option.....	30
P	
Part numbers	
Braking resistor.....	22
Fan subassembly.....	23
Jumper plug, STO.....	22
Mounting accessories.....	22, 23
Power interface.....	22
Sensor/actuator box.....	22
STO jumper plug.....	22
PC, Connection to.....	113
PE connection.....	48
Performance classes, see inverter.....	26
PFA-MD...B-G...BG.../C.../000.....	26



PFE-AC...A...-000A-../000/000.....	29	Scope of delivery	13
PFH-..0AC0-B...-1100-00/.../.....	27	SD card	
Plug connectors	56	Replacing units	123
Power distribution		Section-related safety notes	5
Line topology.....	105	Sensor/actuator box	
Network supply	105	Part numbers	22
Power input, see AC 400 V input.....	57, 61	Service	
Power interface	105	Inverter status	118
Part numbers	22	Inverter statuses	119
Power section	26	Replacing units	123
Power supply, see AC 400 V input.....	57, 61	SEW Electronics Service	136
PROFIBUS		Unit replacement.....	122
Bus termination	93	Unit status.....	117, 119, 120, 121
Connection.....	92	Service cover, see memory card cover	27
Setting the address	109	Service interface	28
PROFINET		Service unit.....	28
Connection.....	94	SEW Electronics Service	136
PROFINET interface		Shielding	45
Technical data.....	143	Short designation.....	13
Protective earth.....	47	Shutting down the unit	136
Publications, additional	150	Signal words in the safety notes	5
		Sin/Cos, see Motor encoder	
R		SSI synchronous encoder.....	24
Rapid stop.....	125	Standards	138
Repair	117, 122	Startup	
Reset.....	125	Information.....	106
Resolver, see motor encoder		Safety notes.....	11
Right to claim under limited warranty	6	Status display	
		Component description.....	28
S		Status LED.....	119
Safe disconnection.....	10	Status messages	117, 119
Safe Torque Off	30	STO jumper plug.....	22
Safety concepts	30	Part number	22
Safety functions	8, 30	Storage	137
Safety notes		STO, see Safety relay.....	104
Assembly	9	Structure	
Designation in the documentation.....	5	MOVIPRO®	18 bis 20
General information	7	Switch S2.....	109, 111, 112
Preliminary information	7	Switch-off responses	125
Structure of the embedded safety notes	5	Synchronous encoder.....	24
Structure of the section-related safety notes	5	Cable	90
Safety relay		S11 PROFIsafe option.....	30
Connection.....	104		
Safety technology	30		
Detailed information	30		
Safe Torque Off	30		
S11 PROFIsafe option	30		



T		
Target group	8	
Technical data		
Basic unit	139	
Brake control	140	
Cable type "D"	147	
Cable type "E"	149	
Communication and control unit	141, 142, 143	
DeviceNet interface	141	
Digital inputs	140	
Digital outputs	140, 141	
Dimension drawings	144	
Dimension drawings, size 0	144	
Dimension drawings, size 1	145	
Dimension drawings, size 2	146	
EtherNet/IP interface	142	
Hybrid cables	147, 149	
Modbus/TCP interface	142	
PROFIBUS interface	142	
PROFINET interface	143	
Standards and certification	138	
Transport	9	
TTL, see Motor encoder		
Type code	12	
U		
UL approval	138	
UL information	43	
Unit		
Error codes	126	
Unit components	26	
Unit designation	12, 15	
Communication and control unit	16	
Energy supply	17	
Function units	15	
Power section	15	
Unit output	45	
Unit replacement	122	
Unit status	117, 119, 120, 121	
Use	8	
W		
Wiring diagrams	56	
X		
X1213	57	
X1214	61	
X2011	64	
X2012	68	
X2016	75	
X2301	80	
X2303	81	
X3001	82	
X3011	84	
X3211	88	
X3222	90	
X4201	92, 93	
X4202	92, 93	
X4232	94	
X4233	95	
X4241	93	
X4242	93	
X5001_1	96	
X5001_2	97	
X5102_1	100	
X5102_2	100	
X5111	103	
X5502	104	
Y		
Y adapter	101	
0 ... 9		
400 V input, see AC 400 V input	57, 61	
7-segment display	28, 117	

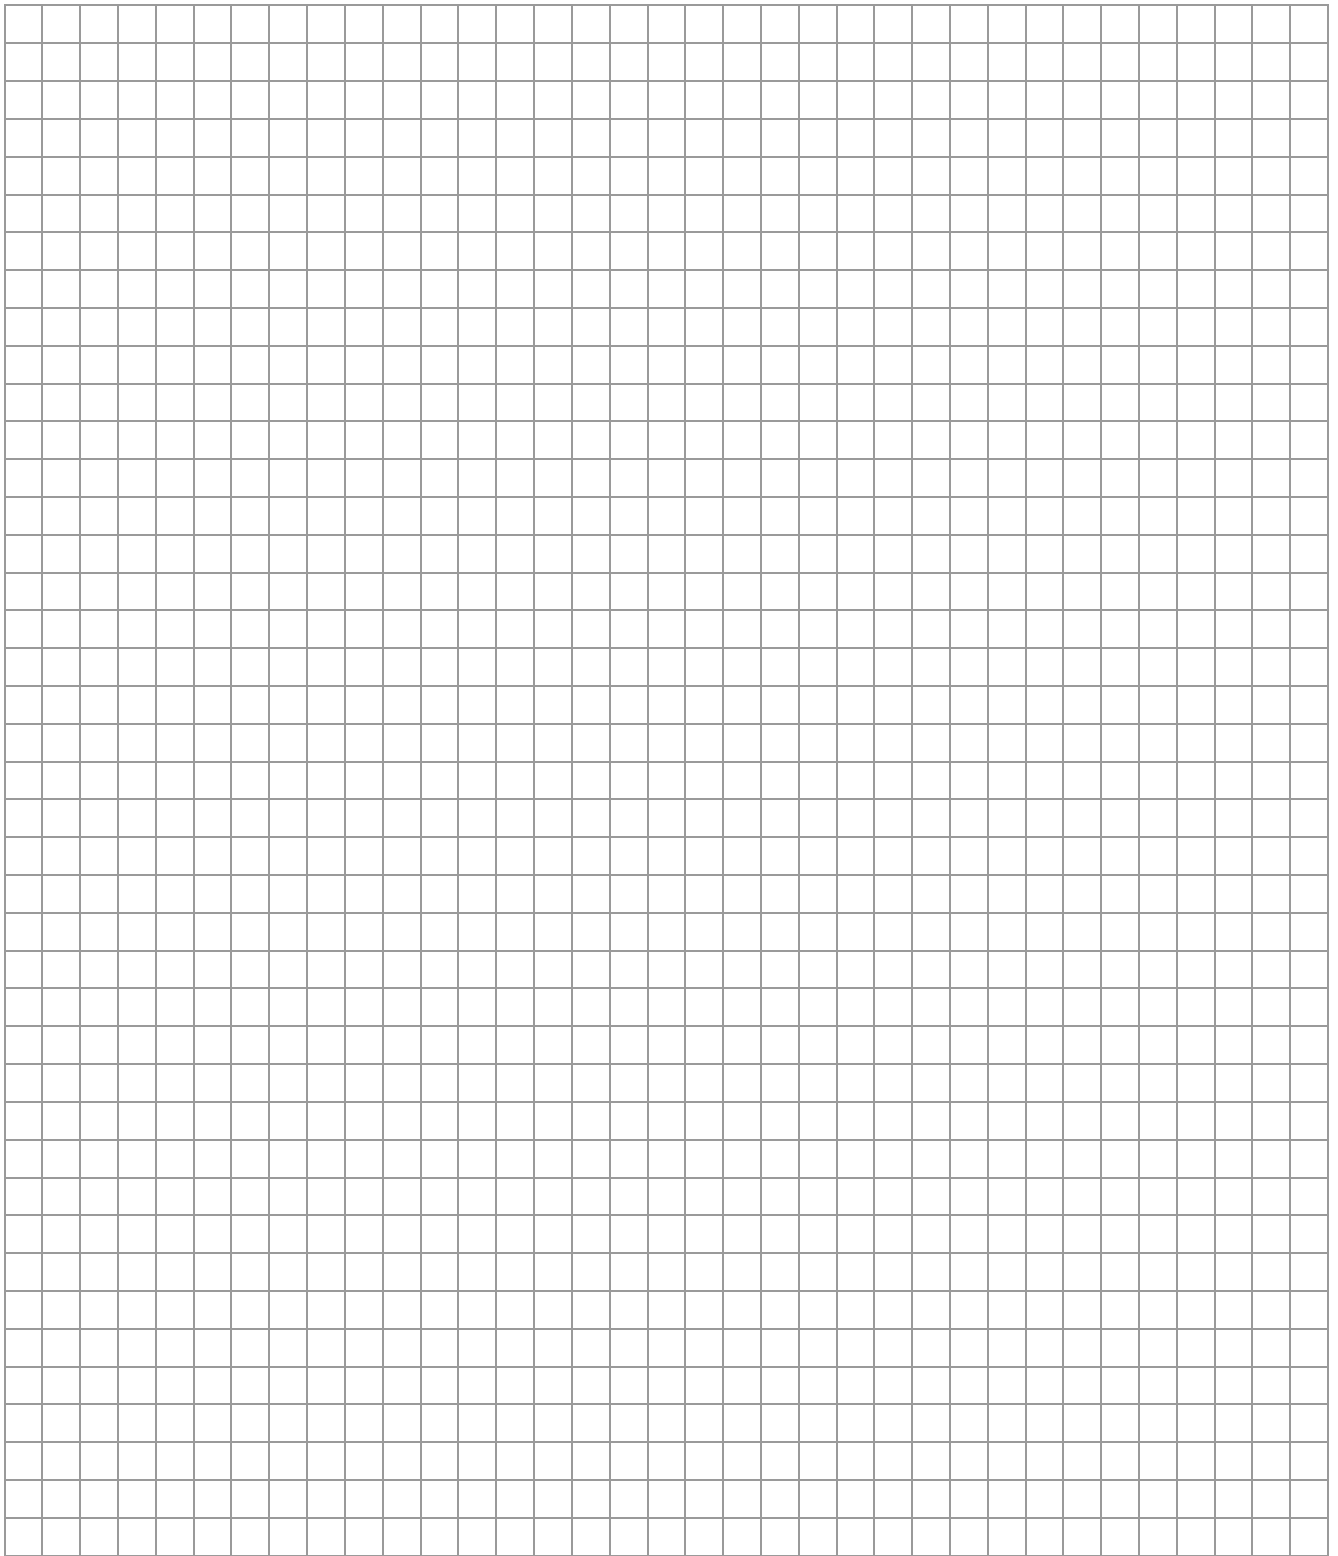



SEW-EURODRIVE
Driving the world

SEW
EURODRIVE

SEW-EURODRIVE GmbH & Co KG
P.O. Box 3023
D-76642 Bruchsal/Germany
Phone +49 7251 75-0
Fax +49 7251 75-1970
sew@sew-eurodrive.com

→ www.sew-eurodrive.com