





















 

















# Xerox® Phaser® 3260/3052







 
 






## Printer Symbols






Symbol	Description
	Warning: Indicates a hazard that can cause serious injury or death if not avoided.
	Hot Warning: Hot surface on or in the printer. Use caution to avoid personal injury.
	Pinch Hazard: This warning symbol alerts users to areas where there is the possibility of personal injury.
	Caution: Indicates a mandatory action to take to avoid damage to the property.
	Do not touch the part or area of the printer.
	Do not touch the part or area of the printer.
	Do not expose the drum cartridges to direct sunlight.
	Do not burn the item.
	Do not burn the toner cartridges.
	Do not burn the drum cartridges.
	Pinch Hazard: To avoid personal injury, use caution in this area.
	Do not expose the imaging unit to direct sunlight.

Symbol	Description
	Do not expose the imaging unit to light for more than 10 minutes.
	Hot surface. Wait for the indicated time before handling.
	On
	Off
	Do not use paper attached with staples or any form of binding clip.
	Do not use folded, creased, curled, or wrinkled paper.
	Do not load or use inkjet paper.
	Do not reload paper previously printed on or used.
	Do not use postcards.
	Do not use envelopes.
	Do not copy money.
	Add paper or media.
	Paper Level Indicator

Symbol	Description
	Paper Jam
	Do not load paper in the tray above the <b>MAX</b> line.
	Load paper/media in the direction indicated.
	Load paper/media in the bypass tray as indicated.
	Push to open.
	Lock
	Unlock
	Paper Clip
	Cooling
	Elapsed Time
	Direction Indicator
	Supply Paper
	1-Sided Original

Symbol	Description
	Hole-punched Paper
	Transparency
	Load letterhead face up.
	Load letterhead face down.
	Load labels face down.
	USB Universal Serial Bus
	LAN Local Area Network
	Ethernet Port
	Wireless
	Weight
	Power/Wake Button
	Stop Button
	Toner Indicator/LED
	ECO Button Enters Earth Smart mode to reduce toner consumption and paper usage.

Symbol	Description
 The symbol consists of two curved arrows forming a circle, one pointing clockwise and the other counter-clockwise.	WPS Button (Wi-Fi Protected Setup)
 A solid black exclamation mark.	Status Indicator
 The universal recycling symbol, a triangle of three chasing arrows forming a circle.	This item can be recycled.

