

CHEFMAN

RJ49

DIE-CAST ELECTRIC
DELI SLICER



CUSTOMER SERVICE: 888.315.6553 | customerservice@chefman.com



READ ALL INSTRUCTIONS BEFORE USE

For your safety and continued enjoyment of this product, always read the instruction manual before using.

CONTENTS

- 1** Introduction
- 2** Safety Instructions
- 5** Features
- 6** Operating Instructions
- 7** Cleaning and Maintenance
- 8** Notes
- 11** Terms and Conditions
- 12** Warranty Card

INTRODUCTION

Congratulations on your purchase!

Every Chefman product is manufactured to the highest standards of performance and safety, and we are confident that you will be so satisfied with your purchase that Chefman will be your go-to company for appliances in the future.

Customer satisfaction is a key element of our company's philosophy. The Chefman brand exists to fill a void on retail shelves and in consumer kitchens for a truly value-focused kitchen appliance. By questioning and adding value and innovation at every touch point in the manufacturer to end user journey, Chefman provides home chefs with the tools they need to achieve picture-perfect results with maximum efficiency. In addition to manufacturing appliances that are dependable, affordable, and built with intuitive features to enhance your kitchen experience, we pride ourselves on providing top-of-the line post purchase support, which includes complimentary access to ClubChefman.com for product tutorials, delicious recipes & how-to videos, and access to our team of dedicated Chefs.

Should a problem arise, each product is backed by a comprehensive manufacturer's 1-year warranty as well as outstanding after-sales service support through our dedicated customer service team. In the unlikely event that your product does not operate as described in the manual please feel free to call or email our helpline for assistance. We understand that sometimes products can malfunction, so if you feel that your appliance is not operating as it should, warranty claims can be made within one year from the date of purchase when accompanied by a dated receipt.

This guarantee is in addition to your statutory rights; your statutory rights are not affected. This limited warranty does not apply in cases of damage caused by accident, improper use, abuse or force majeure.

This warranty gives you specific legal rights. Rights may vary depending on your state or province of residence. Some locations do not allow limitations on implied warranties or special incidental, or consequential damages, so the limitations may not apply to you. This limited warranty will be invalidated if the appliance is tampered with in any way whatsoever.

Our telephone helpline (888) 315-6553 is available for questions or technical assistance- Monday-Friday 9am to 5 pm EST.

Customers can also receive support via email: customerservice@chefman.com.

SAFETY INSTRUCTIONS

IMPORTANT SAFEGUARDS

**THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY.
SAVE THESE INSTRUCTIONS.**

WARNING: When using electrical appliances especially when children are present, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. READ ALL INSTRUCTIONS BEFORE USING AND STORE THE MANUAL FOR FUTURE REFERENCE.
2. Take a minute to unwrap your appliance. Check your appliance carefully and thoroughly to remove all packing materials.
3. This appliance is intended for indoor home use only.
4. Never use any accessories or parts from other manufacturers. Your warranty will become invalid if such accessories or parts have been used.
5. Do not use this appliance outdoors.
6. Wash all removable parts with a mild cleanser before the first use. This product has a removable blade. Extreme care should be taken when removing and inserting the slicing blade. We recommend that you use a protective glove.
7. Do not use the Deli Slicer if your hands are wet or if you are standing on a wet floor.
8. Only use the Deli Slicer after you have dried the appliance.
9. Check that your home power supply corresponds with this appliance's intended voltage.
10. Place this appliance on a stable heat resistant surface. Make sure not to place near or on a heat source such as a gas or electric burner or oven.
11. Short power cords are attached to this item to prevent entanglement and tripping hazards. Extension cords with corresponding voltage, electrical rating and grounding wires can be used. Care should be taken so that any exposed cord is not hanging down from a counter or table where it can be pulled on or tripped over by any child or adult.
12. Before using this appliance, inspect the plug and cord line for cuts and/or abrasion marks. If there are any Do not use this appliance and contact our authorized customer service representative.
13. Insert the plug by grasping it firmly and guiding it into your home's grounded electric outlet. Disconnect by grasping the plug and removing it from your home's grounded electric outlet. Never wrap the cord tightly around the appliance during use or storage as this can cause the wire to fray and break. Do not plug or unplug the appliance with a damp or wet hand as this can cause an electric shock.

SAFETY INSTRUCTIONS

14. During initial use, you may notice some smoke and/or a slight odor. This is normal and should quickly dissipate. It should not reoccur after the appliance has been used a few more times.
15. This appliance should be used only by persons who are capable of understanding the user manual or are supervised by those who have adequate understanding of the appliance's features, their use and the operating instructions. Do not leave this appliance within reach of children.
16. During use, appliances should not be left unattended.
17. Care should be taken not to move appliances that are in use.
18. Any part that is designed to be handled, should be handled with care.
19. Pay careful attention to any warning labels on this appliance.
20. Never slice food without the Safety Food Holder protective guide in place on the Feed Table.
21. Do not use the Deli Slicer near an open flame or flammable materials.
22. Do not use the Deli Slicer for more than 10 minutes continuously.
23. The cutting blade may continue to rotate after the slicer has been switched off.
24. The slice thickness adjustment dial should be set to "O" after each use.
25. Unplug the appliance when you have finished slicing.
26. Before cleaning, make sure that the appliance is turned off, unplugged, and cooled to room temperature.
27. Do not immerse complete appliance in water or in a dishwasher for cleaning.
28. Clean the housing of this appliance with a non-abrasive cleaner and a soft pad or cloth.
29. This product can be used to slice a variety of foods that can include fruits, vegetables, meat, poultry or fish. These foods can leave residue on your slicer that can grow mold or bacteria. It is important that you clean all the parts of the product that come in contact with your ingredients.
30. Store unit in a cool, dry location.
31. In case of any electric emergency such as a fire, call 911.

SAVE THESE INSTRUCTIONS
THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY.

SAFETY INSTRUCTIONS

SHORT CORD INSTRUCTIONS

A short power supply cord is provided to reduce the hazards of entanglement or tripping. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If a longer detachable power-supply extension cord is used:

1. The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
2. The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

LINE CORD SAFETY TIPS

1. Never pull or yank on cord or the appliance.
2. To insert plug, grasp it firmly and guide it into outlet.
3. To disconnect appliance, grasp plug and remove it from outlet.
4. Before each use, inspect the line cord for cuts and/or abrasion marks. If any are found, this indicates that the appliance should be serviced and the line cord replaced. Please contact Chefman Customer Service if damage is found.
5. Never wrap the cord tightly around the appliance, as this could place undue stress on the cord where it enters the appliance and cause it to fray and break.


DO NOT OPERATE APPLIANCE IF THE LINE CORD SHOWS ANY DAMAGE OR IF APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.

CAUTION: To ensure continued protection against risk of electric shock, connect to properly grounded outlets only.

IMPORTANT: During the first few minutes of initial use, you may notice smoke and/or a slight odor. This is normal and should quickly disappear. It will not recur after appliance has been used a few more times.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

FEATURES

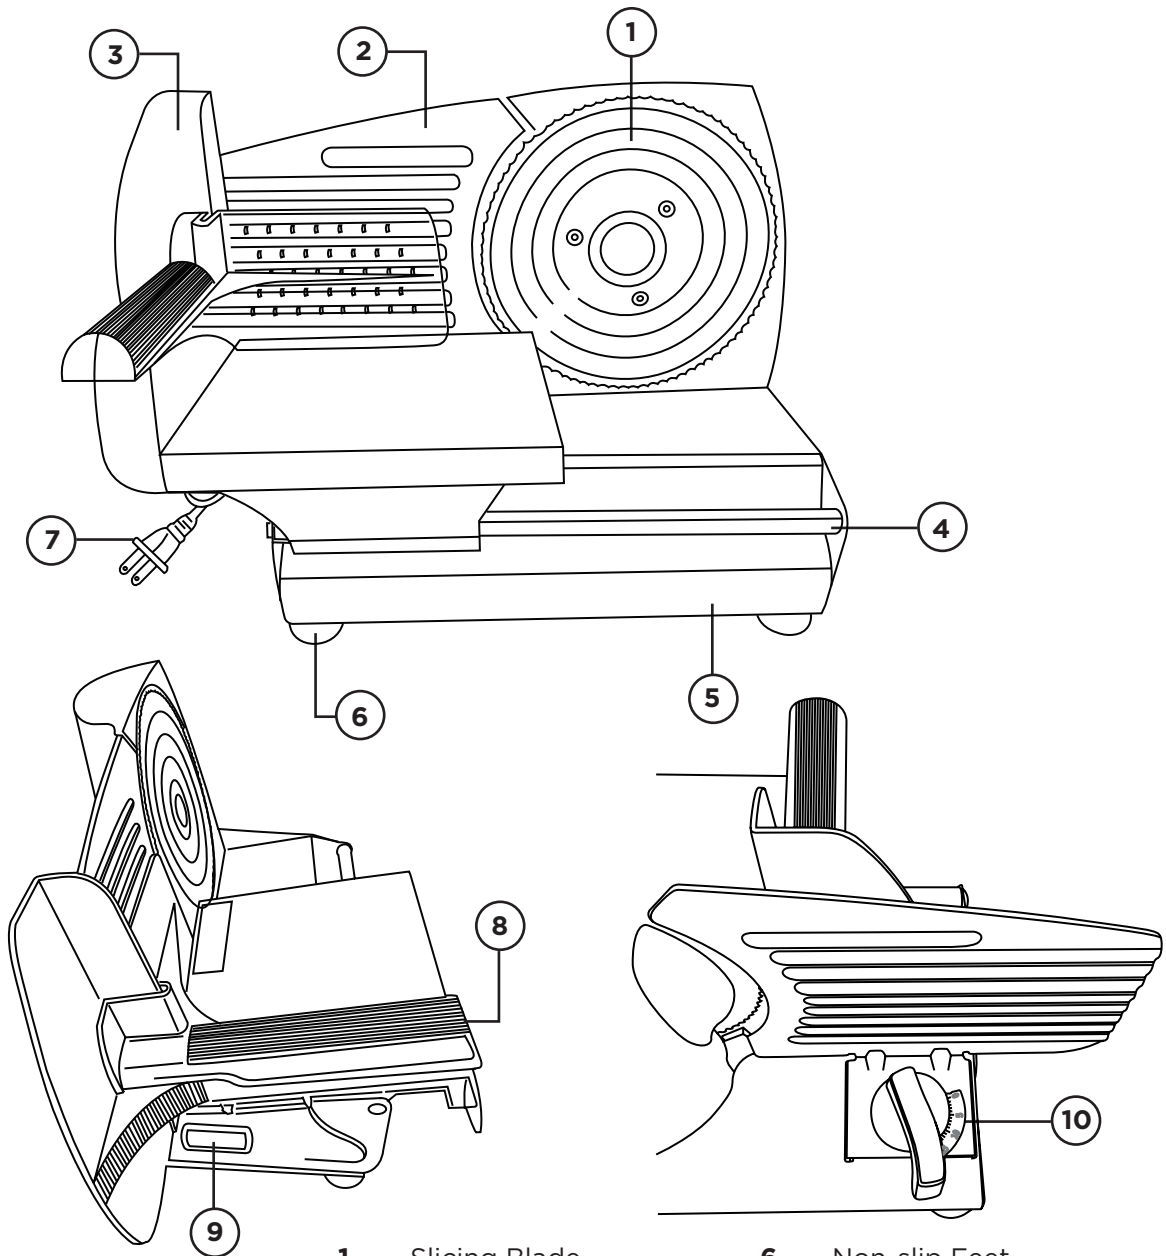

- | | | | |
|---|--------------------|----|----------------------|
| 1 | Slicing Blade | 6 | Non-slip Feet |
| 2 | Back Support Plate | 7 | Power Plug |
| 3 | Sliding Feed Table | 8 | Safety Food Holder |
| 4 | Sliding Carriage | 9 | On/Off Switch |
| 5 | Electric Base | 10 | Slice Thickness Dial |

OPERATING INSTRUCTIONS

Safely Using the Deli Slicer

1. After reading through the safety instructions, you are ready to plug in your appliance.
2. Insert the plug in an electric outlet making sure that it is the right voltage for your appliance.
3. Never touch the slicing surface of your blade.
4. The blade is removable for cleaning.
5. Should you need to hold the blade, only do so using a safety glove.
6. A lubricant is spread on the back surface of the blade and appliance housing. This ensures the smooth rotation of the blade and even consistent cutting.
7. Never touch the blade when the slicer is operating! This can cause serious injury.
8. Always use the Safety Food Holder to keep you safe while slicing food.
9. Do not slice hard or frozen food or food with bones.
10. Never use the slicer for more than 10 minutes continuously.
11. The cutting blade continues to rotate after the slicer has been switched off.
12. Return the slice thickness knob to the "0" setting after use.

How to Use the Deli Slicer

1. Turning the ON switch will cause the cutting blade to run. To stop the slicer, turn the power switch to OFF.
2. The Thickness Adjustment Dial can be set to your desired slicing thickness. The slice thickness range is 0-15 mm; paper thin to about half an inch.
3. Turn the Thickness Dial to your desired setting.
4. Place the food to be sliced on the Sliding Feed Table. Always use the Safety Food Holder. The plastic Safety Food Holder should be placed on the Feed Table arm to hold the food safely against the blade when the blade is running.
5. Press the food to be sliced with the safety guide lightly against the blade.
6. Slide the Feed Table so that the food contacts the Slicing Blade.
7. The slices will fall to the back of the appliance. You can place or hold a piece of foil or parchment paper to catch the slices as they fall.
8. When you are done, turn the power switch to OFF and wait for the blade to come to a complete stop.

CLEANING AND MAINTENANCE

Safely Cleaning the Slicer

1. Before starting to clean the slicer, switch it off.
2. Disconnect the power cord from the electrical outlet.
3. Never immerse the appliance in water.
4. Remove and install this blade with caution, using a safety glove. To remove the blade, rotate the locking mechanism clockwise, then pull out the blade. Always handle the blade by the center. Use two fingers to hold it by the turn mechanism of the lock.
To install the blade, insert it back in the slicer housing and turn it counter-clockwise.
5. Clean the Deli Slicer after each use. Perishable food scraps and residue accumulate on the Blade, Feed Table, and all surfaces of the appliance. Remove the Safety Food Guide and wipe the Base and Sliding Feed Table using a damp cloth with a non-abrasive cleaning product.



THIS SLICER HAS A SHARP BLADE-PLEASE USE WITH CAUTION

NOTES

[illegible]

NOTES

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

NOTES

[illegible]

Terms & Conditions

Limited Warranty

CHEFMAN® LLC warrants, subject to the conditions stated below, that from the date of purchase, this product will be free from mechanical defects for a period of ONE (1) year. CHEFMAN® LLC, at its option, will repair or replace this product found to be defective during the warranty period. Should this product become defective by reason of improper workmanship or material defect during the specified warranty period, CHEFMAN® LLC will repair or replace the same effecting all necessary parts replacements for a period of one year from the date of purchase. If product is no longer available we will replace it with a product of equal value. Transportation charges on parts, or products in whole, submitted for repair or replacement, under this warranty, must be borne by the purchaser. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as specified on the rating label (e.g., 120V ~ 60 Hz).

This warranty is available to consumers only. You are a consumer if you own a CHEFMAN® product that was purchased at retail for personal, family or household use. Except as otherwise required under applicable law, this warranty is not available to retailers or other commercial purchasers or owners.

CONDITIONS: This warranty is valid for the original USA and Canada retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty service or replacement. Dealers, service centers, or retail stores do not have the right to alter, modify or in any way, change the terms and conditions of this warranty. Warranty registration is not necessary to obtain warranty on CHEFMAN® LLC Products. Save your proof of purchase receipt.

ABOUT YOUR PRODUCT WARRANTY: Most warranty repairs are handled routinely, but sometimes requests for warranty service may not be appropriate. For example, warranty service would NOT apply if the product damage occurred because of misuse, lack of routine maintenance, shipping, handling, 3rd party warehousing or improper installation. Similarly, the warranty is void if the manufacturing date or the serial number on the product has been removed or the equipment has been altered or modified. During the warranty period, the authorized service dealer, at its option, will repair or replace any part that, upon examination, is found to be defective under normal use and service.

NORMAL WEAR: This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product; improper voltage or current; use contrary to the operation instructions; deviation from instructions regarding storage and transportation; repair or alteration by anyone other than CHEFMAN® LLC or an authorized service center. Further, the warranty does not cover Acts of God, such as fire, flood, hurricanes and tornadoes. CHEFMAN® LLC shall not be liable for any incidental or consequential damages caused by the breach of any express or implied warranty. Except to the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty. Some states, provinces or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or province to province.

HOW TO OBTAIN WARRANTY SERVICE: If your CHEFMAN® product should prove to be defective within the warranty period, we will repair it, or if we think necessary, replace it. To obtain warranty service, simply email customerservice@chefman.com or call our toll-free number 1-888-315-6553 for additional information from our Customer Service Representatives, or send the defective product to Customer Service at Chefman, 1 Sharp Plaza, Mahwah, NJ 07495.

This warranty is effective for the time periods listed above and subject to the conditions provided for within this policy.

CALIFORNIA RESIDENTS ONLY:

California law provides that for In-Warranty Service, California residents have the option of returning a nonconforming product (A) to the store where it was purchased or (B) to another retail store which sells CHEFMAN® products of the same type. The retail store shall then, at its discretion, either repair the product, refer the consumer to an independent repair facility, replace the product, or refund the purchase price less the amount directly attributable to the consumer's prior usage of the product. If the above two options do not result in the appropriate relief to the consumer, the consumer may then take the product to an independent repair facility if service or repair can be economically accomplished. CHEFMAN® and not the consumer will be responsible for the reasonable cost of such service, repair, replacement, or refund for nonconforming products under warranty.

CHEFMAN® is a registered trademark of RJ BRANDS, LLC.

Warranty



DIE-CAST ELECTRIC
DELI SLICER

CHEFMAN®

All data fields are required in order for us to process your request:

Model Number: _____

Full Name: _____

Address: _____

Phone: _____ Email: (if applicable) _____

Date of Purchase*: _____

*We recommend you keep the receipt with this warranty card

Retail Store of Purchase: _____

Description of Malfunction:

Return your completed warranty card to:

**RJ Brands
200 Performance Drive
Suite 207
Mahwah, NJ
07495**

DIE-CAST ELECTRIC
DELI SLICER

**MODEL:
RJ49**

888.315.6553

customerservice@chefman.com

Phone lines available Monday to Friday, 9am-5pm EST
1-YEAR LIMITED WARRANTY

MODEL: RJ49

12



To log-in to ClubChefman.com follow the below steps:

1. Enter www.clubchefman.com into your web browser.
2. Click on "Sign Up Now".
3. Fill in the required information as prompted.
NOTE: "Place of Purchase" refers to the store at which you purchased your product.
4. Sign in using your User Name and Password.

CLUB CHEFMAN ACCESS CODE: 2131745

CHEFMAN



RJBRANDS.COM | CLUBCHEFMAN.COM | CHEFMAN.COM