

# RadioRA®-SR

## Wall Mount Template

**Please Read Before Installing**

**Pico™ wireless control**

SRD-P3BRL-L, SRD-P3BRL-S

The *Pico* wireless control can be mounted to a wall in three ways. Choose the appropriate template and installation procedure listed below for your application.



- A—No Wallplate Template
- B—Single Gang Template
- C—Multiple Gang Template

**A**



### No Wallplate Template

- Carefully cut out the template below along the dashed line and temporarily attach it to the wall at the desired mounting location.
- Mark and drill the 3/16 in (5 mm) screw hole locations indicated within the Wall Mount Plate on the template.
- Remove template and insert one Screw Anchor into each of the holes drilled in step 2, making sure they are flush with the wall.
- Loosely mount the Wall Mount Plate to the wall with the Mounting Screws. Check to make sure the Wall Mount Plate is level. Once the Wall Mount Plate is level, tighten the screws.
- Slide the *Pico* control down onto the Wall Mount Plate.

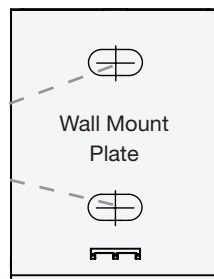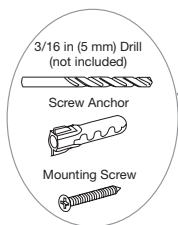


2.7 in (68.6 mm)  
when printed to  
correct size

**B**




 
### Single Gang Template

- Carefully cut out the template below along the dashed line and temporarily attach it to the wall at the desired mounting location.
- Mark and drill the 3/16 in (5 mm) screw hole locations indicated within the Wall Mount Plate and Wallplate Adapter on the template.
- Remove template and insert one Screw Anchor into each of the holes drilled in step 2, making sure they are flush with the wall.



- Loosely mount the Wall Mount Plate to the wall with the Mounting Screws. Check to make sure the Wall Mount Plate is level. Once the Wall Mount Plate is level, tighten the screws.
- Slide the *Pico* control down onto the Wall Mount Plate.
- Mount the Wallplate Adapter with the mounting screws provided with the *Pico* control and snap the Wallplate onto the Wallplate Adapter. DO NOT use the screws that came with the Wallplate Adapter.

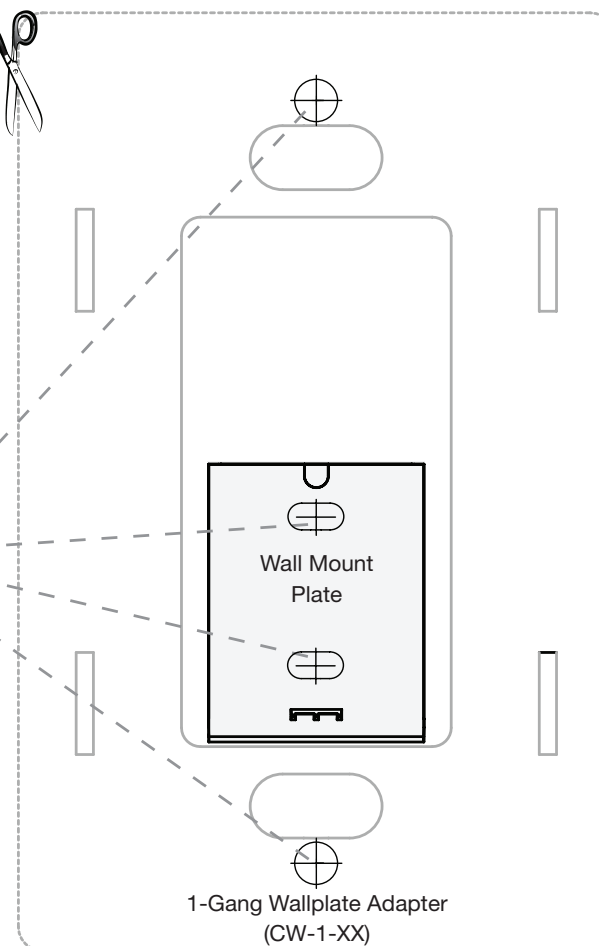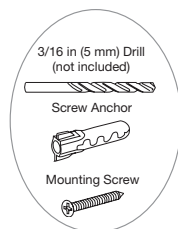

4.7 in (119.4 mm)  
when printed to  
correct size

**PRINTING INSTRUCTIONS: PAGE SIZE: 8.5 X 11 PAGE SCALING: NONE**

## C Multiple Gang Template



1. Carefully cut out the template below along the dashed line that represents the appropriate multiple gang application. Cut along the solid line to provide clearance for any existing controls. Temporarily attach the template to the wall at the desired mounting location.
2. Mark and drill **only** the 3/16 in (5 mm) screw hole locations, indicated within the Wall Mount Plate(s) and Wallplate Adapter on the template, that will have a *Pico* control installed.




3. Remove the template and insert one Screw Anchor into each of the holes drilled in step 2, making sure they are flush with the wall.

4. Loosely mount the Wall Mount Plate to the wall with the Mounting Screws. Check to make sure the Wall Mount Plate is level. Once the Wall Mount Plate is level, tighten the screws.
5. Slide the *Pico* control down onto the Wall Mount Plate.



6. Mount the Wallplate Adapter with the mounting screws provided with the *Pico* control and snap the Wallplate onto the Wallplate Adapter. DO NOT use the screws that came with the Wallplate Adapter with openings where a *Pico* control will be installed.

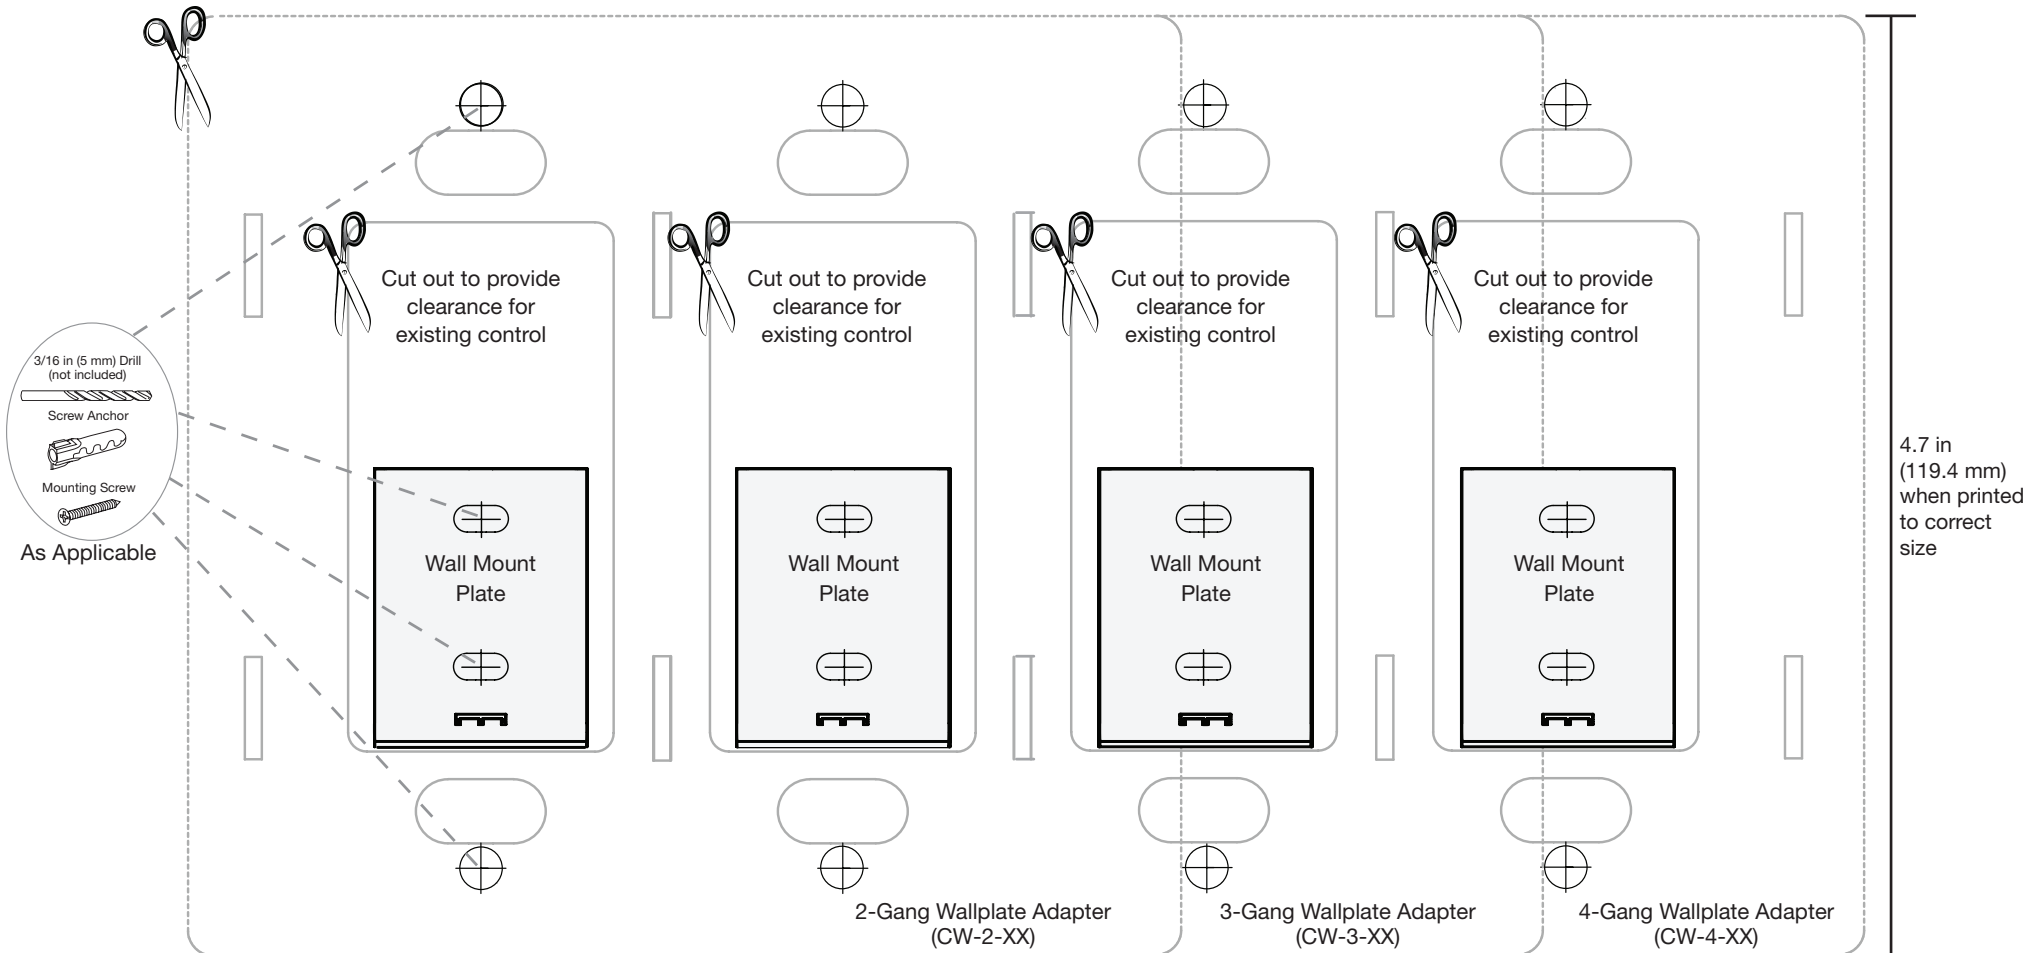

PRINTING INSTRUCTIONS: PAGE SIZE: 8.5 X 11 PAGE SCALING: NONE