





# **DHBC**


#### **DESK HIGH BOOKCASE**

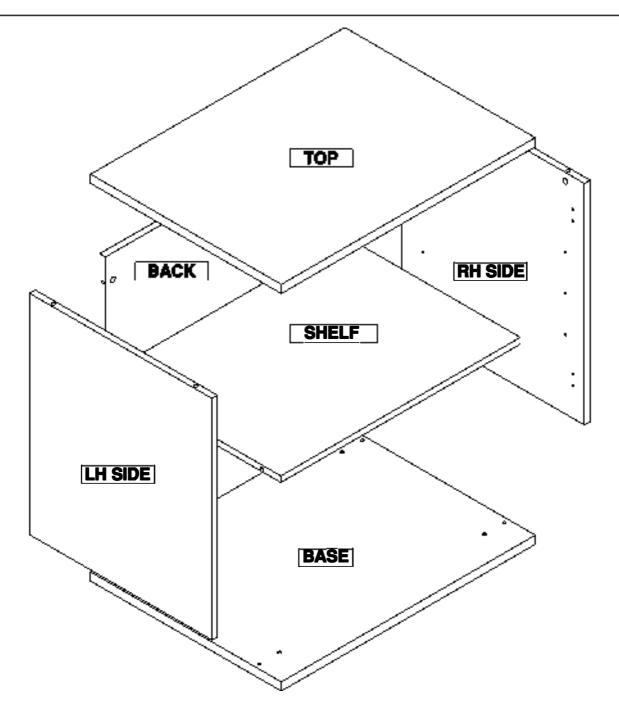


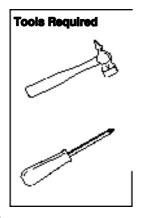

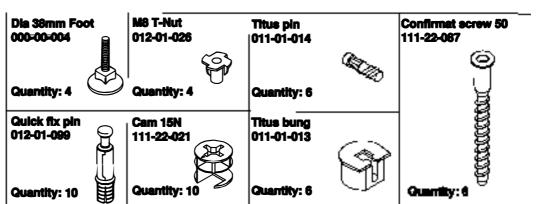

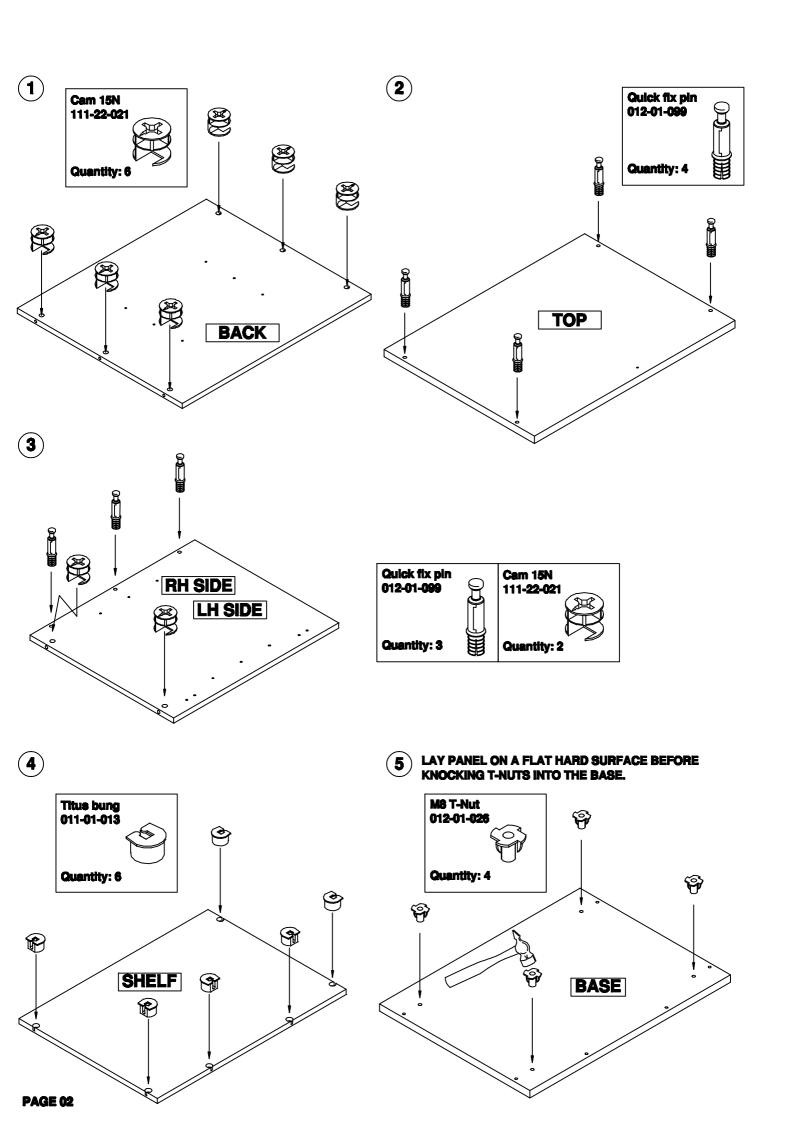

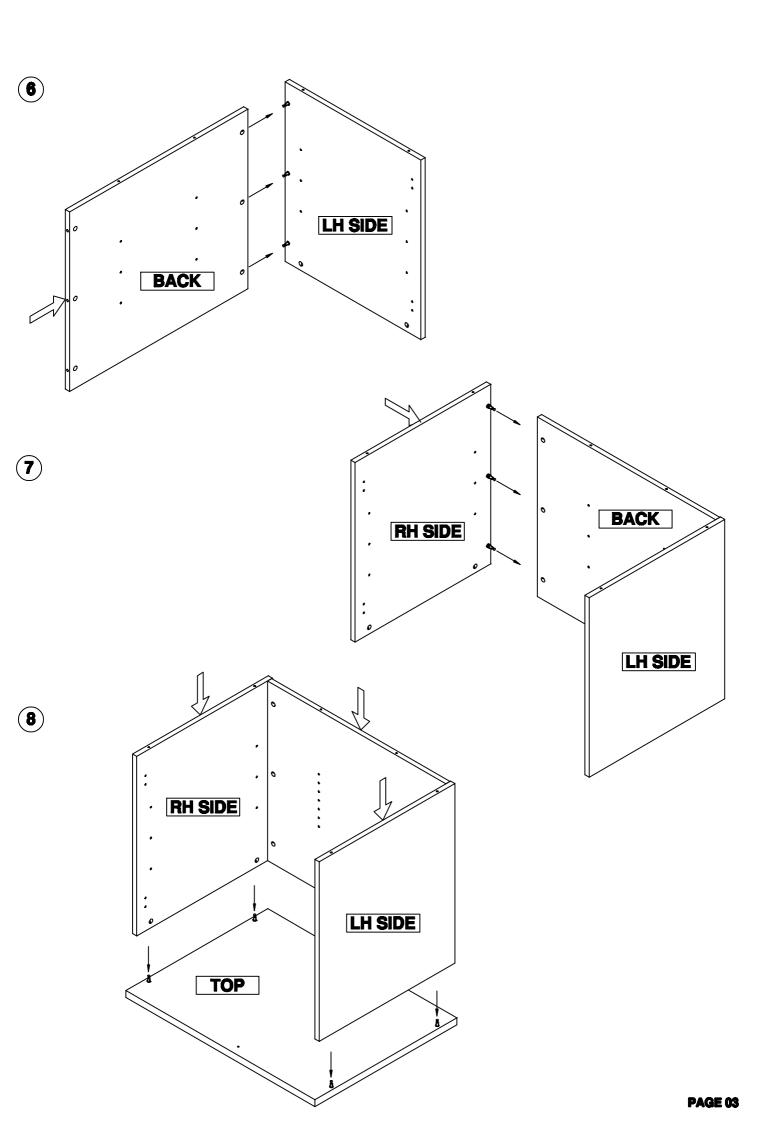


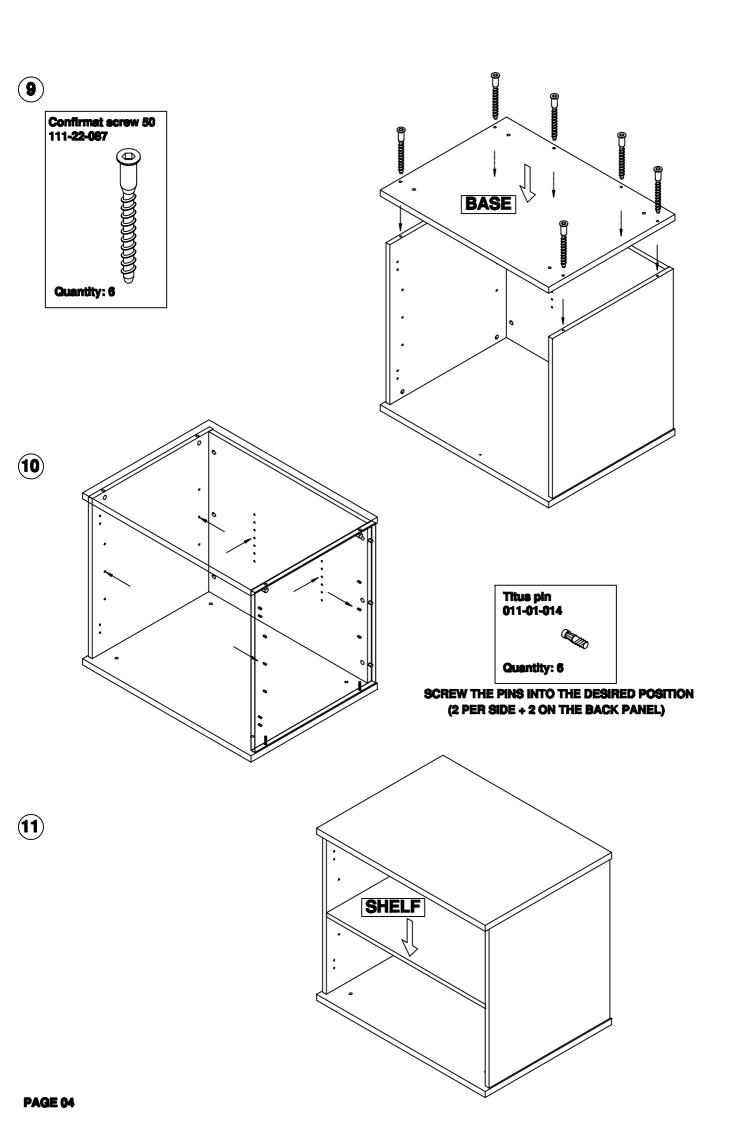



# **DPDHD**

# **Desk High Door Pack**

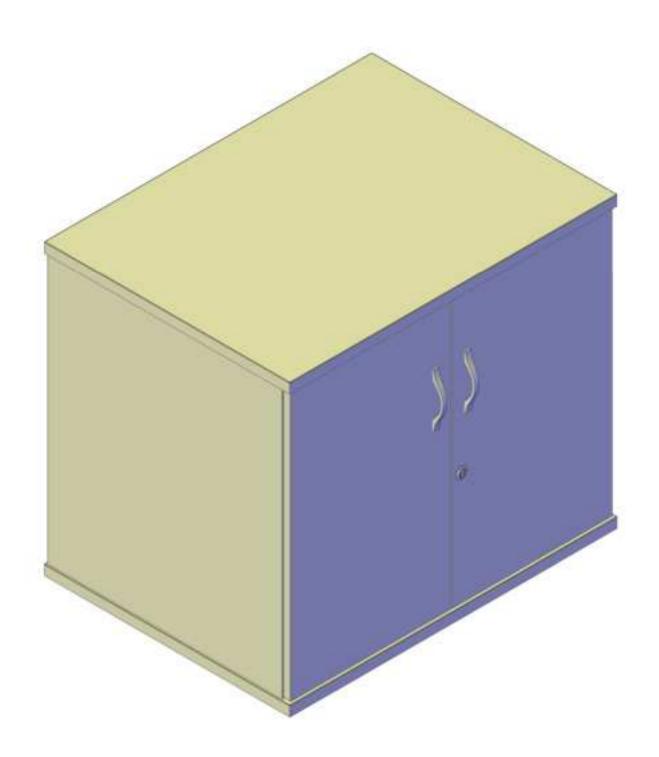



#### **KEEP FITTINGS AWAY** FROM CHILDREN





 


 


















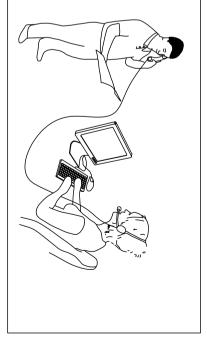

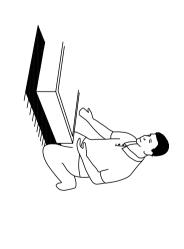

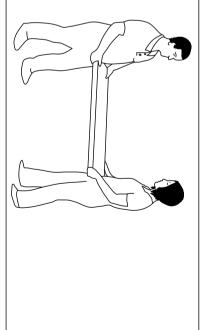


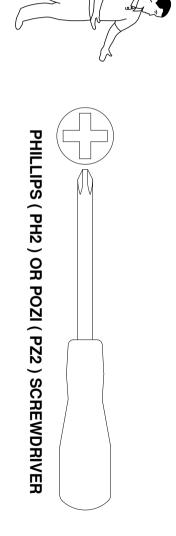




# Please check that you have all the panels!



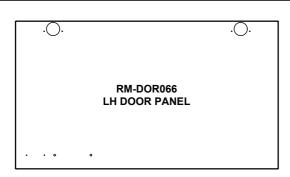


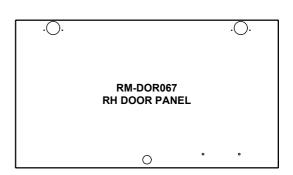




# Please check that you have all the fittings!




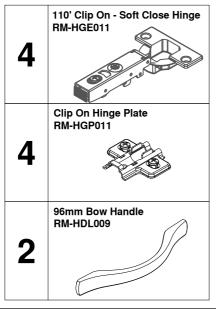

1	Door Lock RM-LOK11	
1	Door Latch RM-LOK13	0
1	Door Clip RM-LOK12	

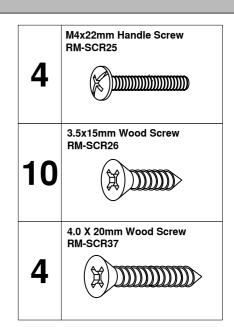


Step 1
Place the hinges into the pre drilled holes on the inside face of each door panel.

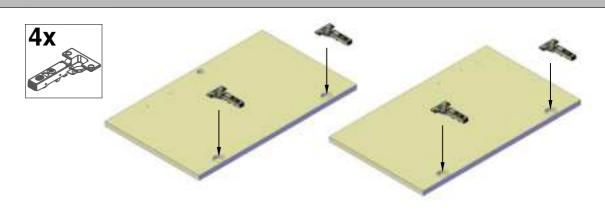

2

Step 2
Attach the hinges
using the 3.5 x 15mm
wood screws, 2
screws per hinge.

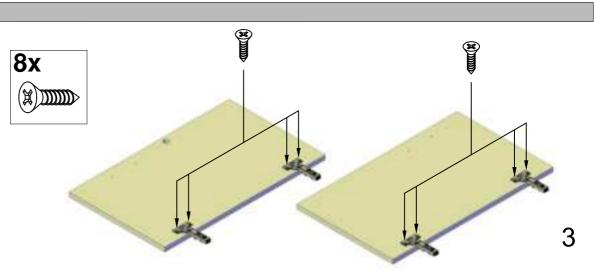

#### Step 3

Attach the hinge plates to the pre drilled holes on the inside face of the bookcase side panels, these plates are fitted with pre attached screws.

Ensure the plate is fitted as per diagram 1.





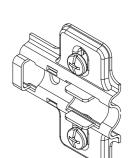



Diagram 1


EDGE OF BOOKCASE


### Step 4

Attach both doors to the bookcase. Diagrams 2 & 3 show how to lock the hinge to the plate.

Always lock the top hinge into place first before repeating for all hinges.

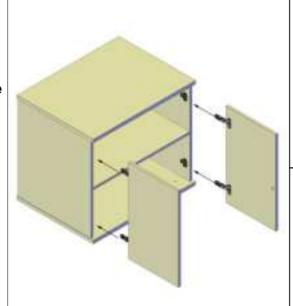

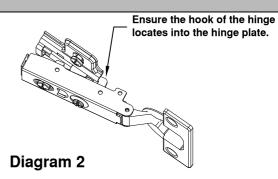

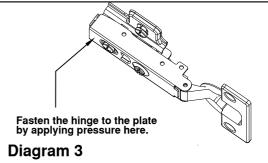


# Step 5

Attach handles to both doors using the M4x22 screws.







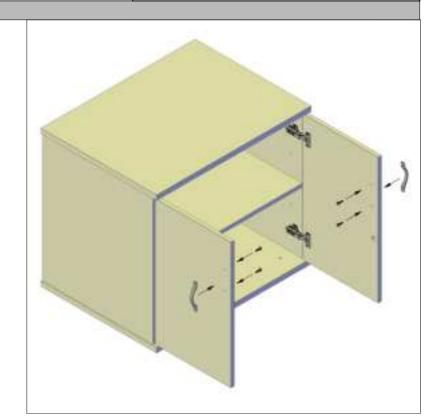

# 6

#### Step 6


Insert the lock into the back face of the RH door, the rosette should be place over the exposed lock barrel on the front face of the door.

Align the lock with the edge of the door as shown in diagram 4.

Fix the lock in place using two of the 4x20mm wood screws.





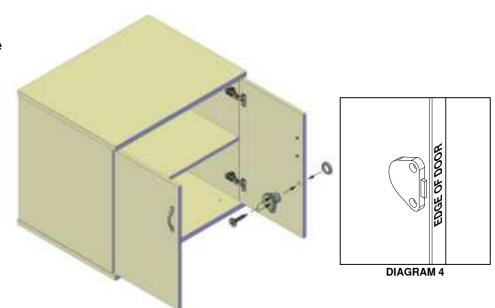



#### Step 7


Attach the door latch to the rear face of the LH door.

See diagram 5 for fixing position to be used for both standard double door or combination units.

Fix the lock in place using the remaining x 4x20mm wood screws.





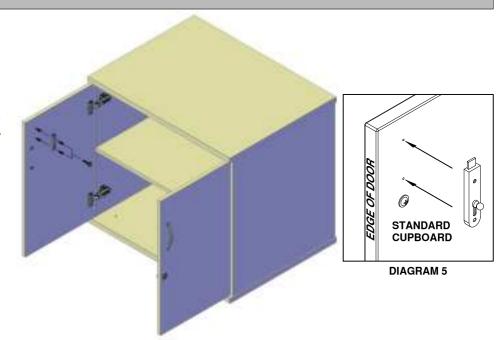




#### Step 8

Attach the latch strike plate to the underside of the bookcase top.


This should be fitted to the 2 pre drilled holes and aligned with the front edge of the bookcase top as shown in diagram 6.





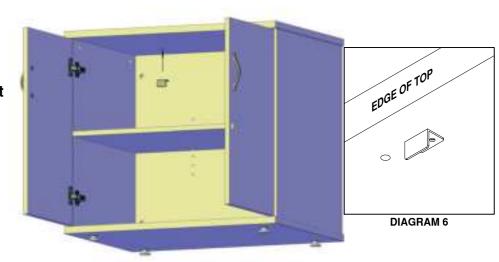

#### DOOR ADJUSMENT AND ALIGNMENT

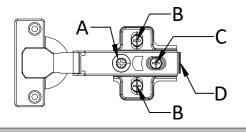


A - SIDE ADJUSTMENT

B - HEIGHT ADJUSTMENT

C - DEPTH ADJUSTMENT

D - DOOR RELEASE BUTTON

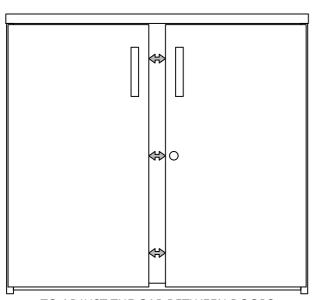


TO ADJUST THE GAP BETWEEN DOORS
Apply equal adjustment to point A on all hinges.
Tighten to make the gap smaller.
Loosen to make the gap larger.




Adjust point A on individual hinges to re align accordingly.

Tightening the top hinges will rotate the door clockwise.

Tightening the bottom hinges will rotate the door anti-clockwise.

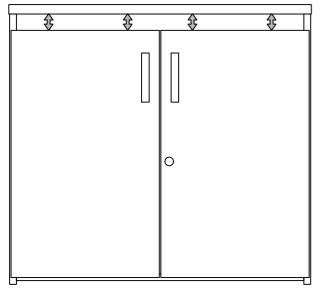

TO ADJUST THE GAP BETWEEN DOOR AND TOP Loosen all point B screws without removing them.
Once loose lift the door to close any gap.
Whilst the door is held in its preferred position re tighten all point B screws again.

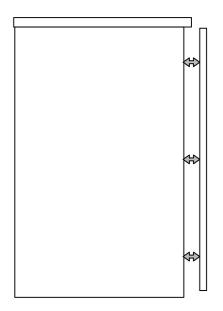

TO ADJUST THE GAP BETWEEN DOOR AND SIDE PANEL Loosen point C screws on all hinges.

Slide the hinge to your preferred position and re tighten point C screws.