




ND8312 - wired

ND8212W - wireless Network Video Recorder

User's Manual

8- or 4-CH • Wired or Wi-Fi • 1 HDD • Auto Setup • Auto Adaptive Stream •
Hardware Decoding • HDMI

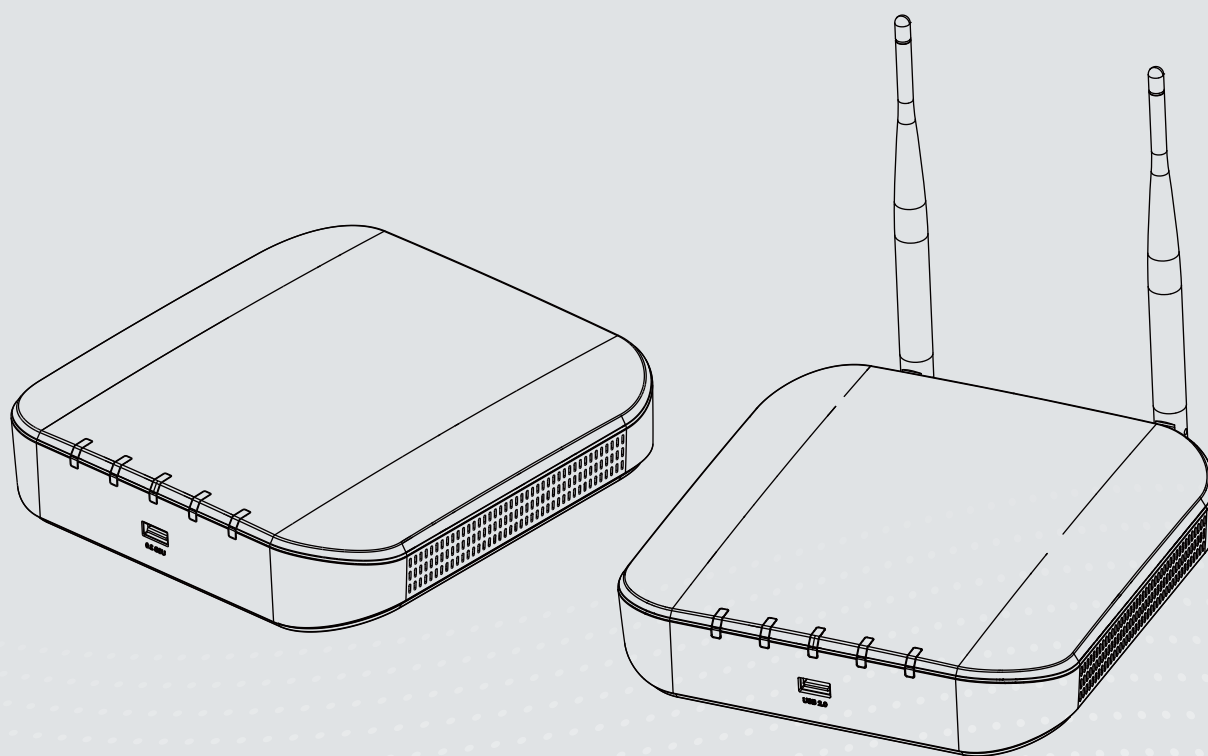

Rev. 1.0

Table of Contents

Chapter One Hardware Installation and Initial Configuration	7
Introducing the Network Video Recorder	7
Special Features	7
Safety	8
Chassis Dimensions	9
Physical Description	10
Hardware Installation	11
Interface Connections	15
Initial Configuration - via a Local Console	16
Initial Configuration - Wireless Connection (ND8212W)	23
Initial Configuration - via a Web Console (Optional)	25
LED Indicators	27
Power Up and Power Down	29
Section One Management over a Local Console	30
Chapter Two Introduction to the Local Console Interface.....	30
2-1. How to Begin.....	32
2-2. Operation on a Camera View Cell.....	38
2-2-1. PTZ Panel.....	38
2-2-2. Digital Zoom Panel	42
2-2-3. Play Recording Clips Panel	43
2-2-4. DI/DO	44
2-2-5. Others	44
2-2-6. Right-click Commands.....	45
Chapter Three Configuration Using the Local Console	46
The Main Control Portal	46
3-1. Layout	46
3-2. Search recording clips	47
3-2-1. Time Search.....	47
3-2-2. Alarm Search	51
3-2-3. POS Search.....	54
3-2-4. Storyboard	57
3-3. Export recordings.....	61
3-4. Settings	63
3-4-1. Settings - Overview.....	63
3-4-2. Settings - Camera - Management.....	64
3-4-3. Settings - Camera - Recording	70
3-4-4. Settings - Camera - Media.....	73
3-4-5. Settings - Camera - Image.....	79
3-4-6. Settings - Camera - Motion Detection.....	81
3-4-7. Settings - Camera - PTZ settings	82

3-4-8. Settings - Alarm - Alarm	84
3-4-9. Settings - Alarm - Email	93
3-4-10. Settings - System - Information	94
3-4-11. Settings - System - Maintenance	95
3-4-12. Settings - System - Display	96
3-4-13. Settings - System - UPS	97
3-4-14. Settings - System - Log	98
3-4-15. Settings - System - VIVOCLOUD service	100
3-4-16. Settings - User	101
3-4-17. Settings - Storage	103
3-4-18. Settings - Storage - Scheduled backup	108
3-4-19. Settings - Network	111
Settings - Network - Connection mode	111
Settings - Network - IP	113
Settings - DDNS	114
Settings - Service	115
3-5. POS	116
3-6. Information	118
Section Two Management over a Web Console	119
Chapter Four Login and Getting Started	120
4-1. Login	120
4-2. Graphical Layout and Screen Elements - Liveview	124
4-2-1. Camera List Panel	125
4-2-2. Layout	127
4-2-3. Layout contents	128
4-2-4. Logo & Menu	128
4-2-5. View Cell panel	129
Adding Cameras to View Cells	129
4-2-6. PTZ panel	138
4-2-7. Alarm panel	140
4-3. Graphical Layout and Screen Elements - Search recording clips	144
4-3-1. Camera List Panel	145
4-3-2. Search Recording Clips Layout	146
4-3-3. Logo & Menu	146
4-3-4. View Cells in Search Recording Clips	147
Search Recording Clips Control Panel	148
4-3-5. Alarm Panel	150
4-3-6. Calendar Panel	151
Chapter Five System Settings	152
Chapter Six Operation	154
6-1. Liveview	154
6-1-1. Placing Cameras into the Layout	154
6-1-2. PTZ and Other Screen Controls	158

- 6-1-3. Audio 161
- 6-1-4. Camera Properties and Controls 162
- 6-1-5. Alarm Panel 163
- 6-1-6. Layout view Control Buttons 164
- 6-2. Search Recording Clips 165
 - 6-2-1. Begin Playback and Search for Past Recordings 165
 - 6-2-2. Past Alarms and Bookmarks 166
 - 6-2-3. Synchronous Playback 167
 - 6-2-4. Export media 168
 - 6-2-5. Time Search 170
- Technical Specifications 172
- Safety and Compatibility 174

Revision History

* Rev. 1.0: Initial release.

IMPORTANT:

The latest VIVOTEK 9xxx series supports H.265 encoding. If the H.265 cameras are attached to the NVR, you need to manually configure its video streaming codec to H.264 in order to properly stream video.

IMPORTANT:

In a complicated wireless network environment where many WiFi APs reside, transmission latency can occur due to the interference of wireless signals or overlapped channels.

Read Before Use

The use of surveillance devices may be prohibited by law in your country. The Network Video Recorder is not only a high-performance web-ready camera but can also be part of a flexible surveillance system. It is the user's responsibility to ensure that the operation of such devices is legal before installing this unit for its intended use.

It is important to first verify that all contents received are complete according to the Package Contents listed below. Take note of the warnings in the Quick Installation Guide before the Network Video Recorder is installed; then carefully read and follow the instructions in the Installation chapter to avoid damage due to faulty assembly and installation. This also ensures the product is used properly as intended.

The Network Video Recorder is a network device and its use should be straightforward for those who have basic networking knowledge. It is designed for various applications including video sharing, video recording, general security/surveillance, etc. The Configuration chapter suggests ways to best utilize the Network Video Recorder and ensure proper operations. For creative and professional developers, the URL Commands of the Network Video Recorder section serves as a helpful reference to customizing existing homepages or integrating with the current web server.



NOTE:

The operating system and management software are installed on a flash memory mounted on the main board. Except for the plug-ins for the onscreen control, there is no need to install software.

Package Contents

<ul style="list-style-type: none"> ■ ND8212W (wireless) or ND8312 (wired version) ■ Power adapter ■ Quick Installation Guide ■ 2x wireless antennas 	<ul style="list-style-type: none"> ■ a Mouse ■ Screws and HDD brackets
---	--

Symbols and Statements in this Document



INFORMATION: provides important messages or advices that might help prevent inconvenient or problem situations.



NOTE: Notices provide guidance or advices that are related to the functional integrity of the machine.



Tips: Tips are useful information that helps enhance or facilitate an installation, function, or process.



WARNING! or IMPORTANT: These statements indicate situations that can be dangerous or hazardous to the machine or you.



Electrical Hazard: This statement appears when high voltage electrical hazards might occur to an operator.

Chapter One Hardware Installation and Initial Configuration

Introducing the Network Video Recorder

VIVOTEK ND8312 and ND8212W series is a compact Linux embedded 8-CH or 4-CH stand-alone desktop NVR designed for any small-scale video surveillance installation. The series features ease of installation, and facilitates “One Button Setup” with its plug & play and auto setup functionality. With a wireless 2.4Ghz/5Ghz connectivity, wireless cameras can easily connect and record to the ND8212W NVR.

The ND8312 is the wired version.

Supporting the HDMI local video output, users can control the GUI OSD interface via mouse & keyboard, eliminating the need for a separate PC to search video or to playback from the NVR. The new local display design - Auto Adaptive Stream will dynamically modify Stream 2 resolution of a camera to best fit the display resolution according to the layout type, resulting in an efficient display, while maintaining superb image quality.

Together with the VAST CMS software, users can set up an easy-to-use IP surveillance system with ease. VIVOTEK also provides the mobile application, iViewer or VIVOCLOUD, for both iOS and Android handheld devices, enabling users to monitor live video anytime, anywhere.

Special Features


- Runs on embedded Linux
- 1 x HDMI for local display up to 4K resolution
- 1 x HDD bay, for a max. capacity of 6TB
- 1 x Gigabit RJ45 uplink Ethernet port;
- 2 x USB Port (1 in Front / 1 in Back)
- Size: 198 mm (W) x 200 mm (D) x 47 mm (H)
- 8-CH (ND8312) or 4-CH (ND8212W) Live View & 4-CH Synchronous Playback [max. frame rate: 3840x2160@30fps(1 CH), 1920x1080@120fps (4 CH)].
- H.264 / MJPEG
- PTZ and joystick support
- Snapshot / Export Media
- PiP Video Control
- Configuration Backup / Restore
- Compatible with VIVOTEK VAST Central Management Software*
- Integration with VIVOTEK Network Cameras
- VIVOTEK iViewer and VIVOCLOUD Support (iOS/Android)

* The VIVOTEK VAST Central Management Software is not included in the package.


Safety

- Connect the system to an earthed main power outlet.
- Never open the housing of the power supply unit.
- Install and operate the system only in a dry, weather-proof location.
- Observe the following safety factors:
 - Is there visible damage to the system or power cord?
 - Is the system operating correctly?
 - Has the system been exposed to rain or moisture?
 - Has the system been in a long storage under harsh conditions or exposed to unconfirming stress?
- The relevant electrical engineering regulations must be complied with at all times during the installation.
- Ensure that all maintenance and repair work is handled by qualified personnel such as electrical engineers or network specialists.
- Read this manual before installing or operating the system. The documentation contains important safety instructions about permitted uses.
- The rated AC input is: **100-240V~ 1.5A, 60-50Hz**; the max. consumption: **15.6W** (DC12V, 3A)
- If a fault occurs, disconnect the power cord from the power supply.
- Do not install the system close to heaters or other heat sources. Avoid locations with direct sunlight.
- All ventilation openings must not be blocked.
- Use only the cables shipped with system or use appropriate cables that can withstand electromagnetic interference.

Chassis Dimensions

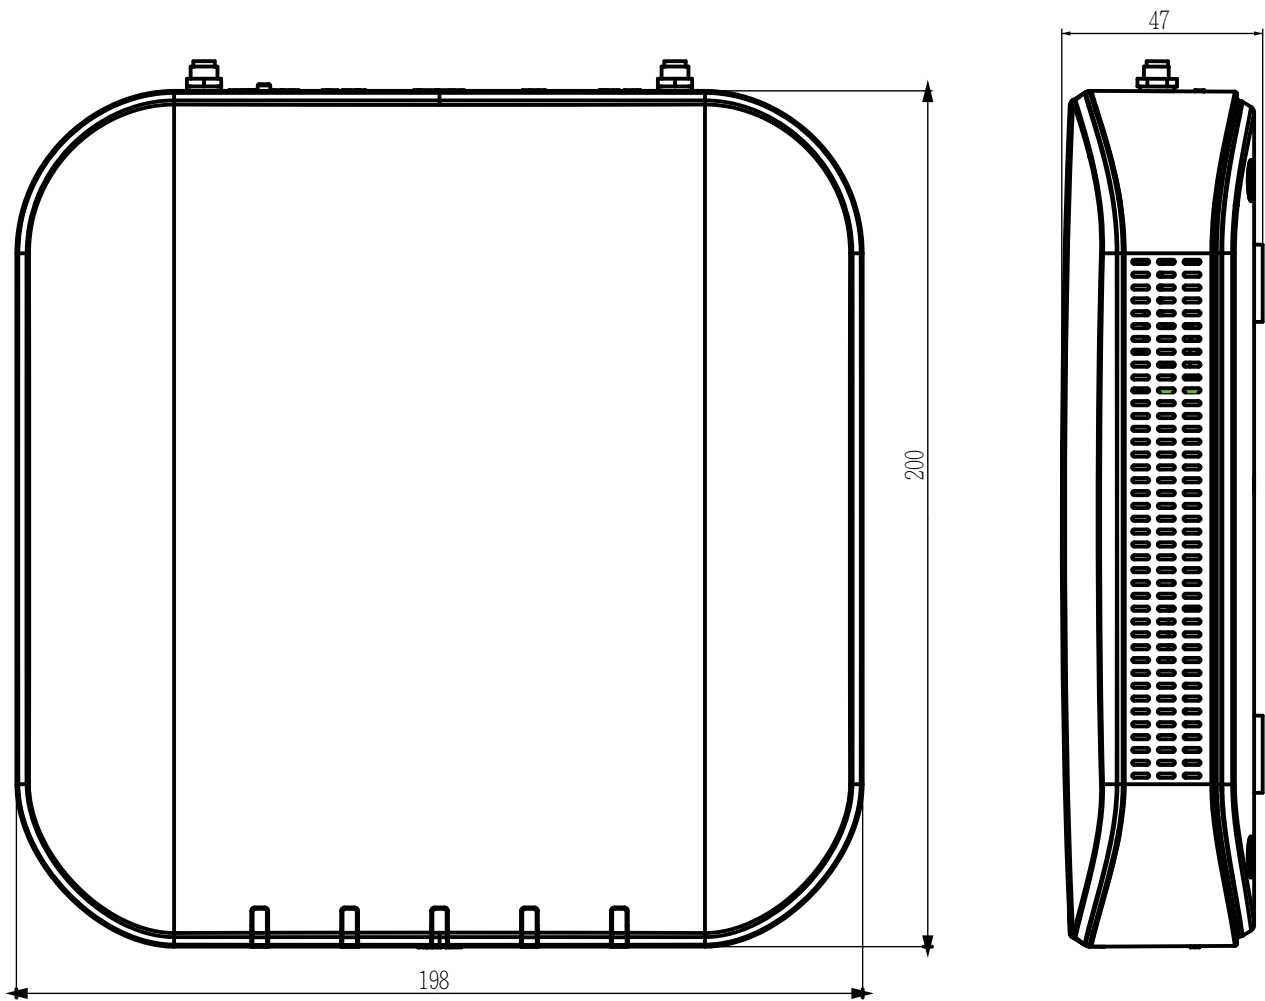


Screw Dimensions

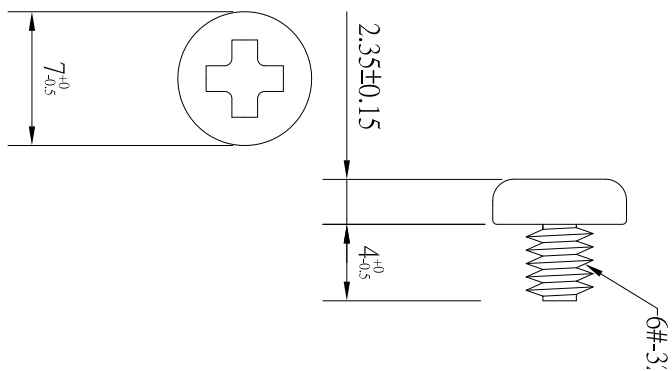

1 Physical Description


● Front View

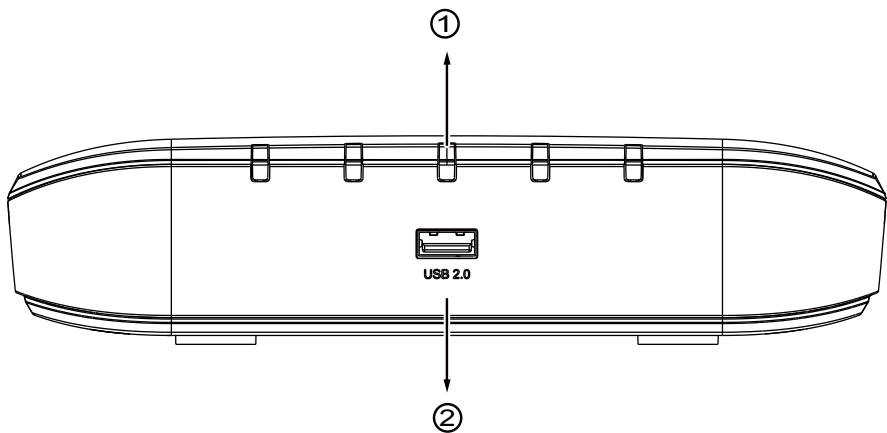

1	LAN and PoE activity LED: Please refer to page 28 for LED definitions.
2	USB 2.0 port

● Rear View

The difference between the ND8212W and ND8312 is the antenna. The ND8312 comes without the antenna.

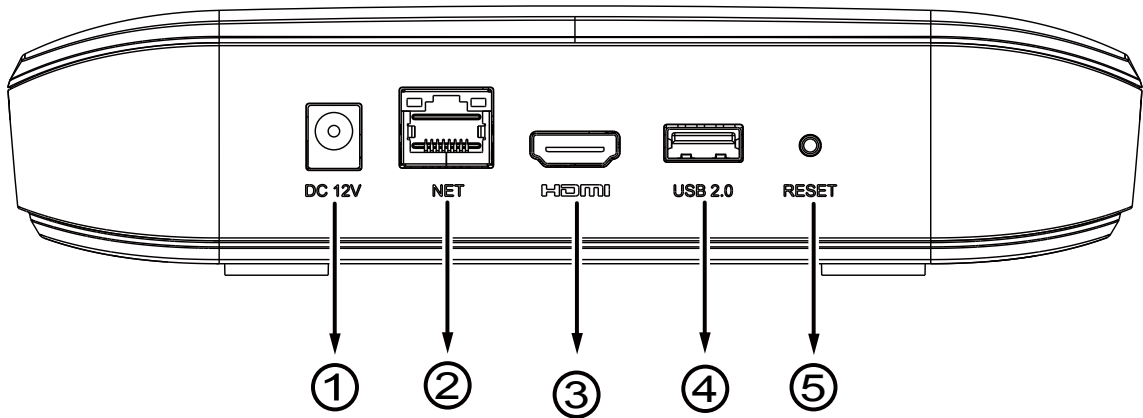

1	Antenna connector	5	USB port
2	Power socket (DC12V, 3A)	6	WPS/Reset button
3	10/100Mbps uplink port	7	Antenna connector
4	HDMI		

⚠ IMPORTANT:


It is important to leave a clearance of 10cm around the chassis. The clearance is required to ensure an adequate airflow through the chassis to ventilate heat.

To ensure normal operation, maintain ambient airflow. Do not block the airflow around chassis such as placing the system in a closed cabinet.


2 Hardware Installation

SATA hard disk(s) are user-supplied. The network video recorder can readily accommodate most of the off-the-shelf SATA hard drives.


1. Use a Phillips screwdriver to loosen the retention screws from the bottom of the chassis. Remove the top cover.

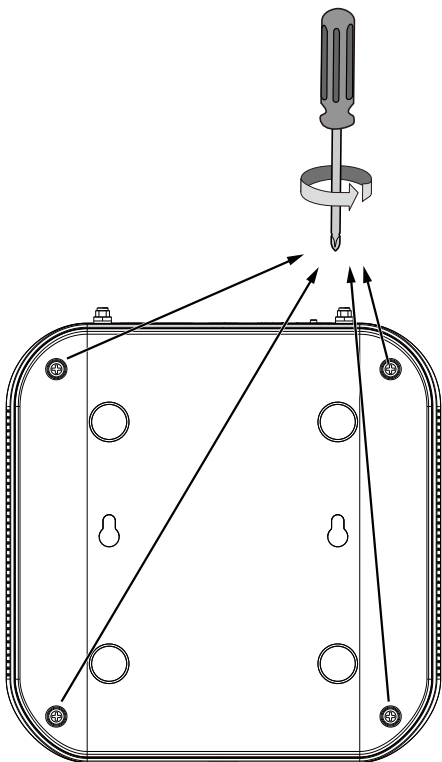


2. Secure the HDD brackets to the hard drive.

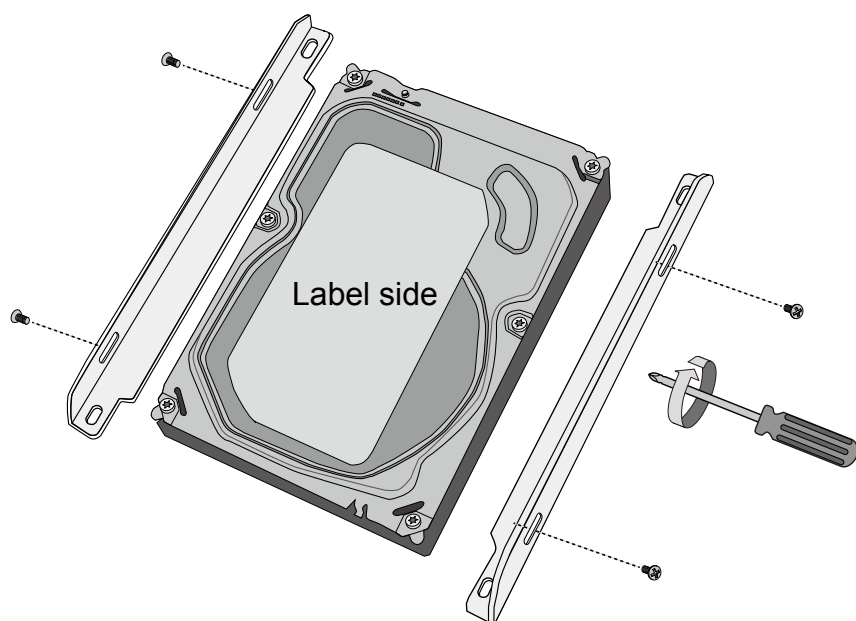


3. Connect SATA data and the SATA power cables to the hard drive.

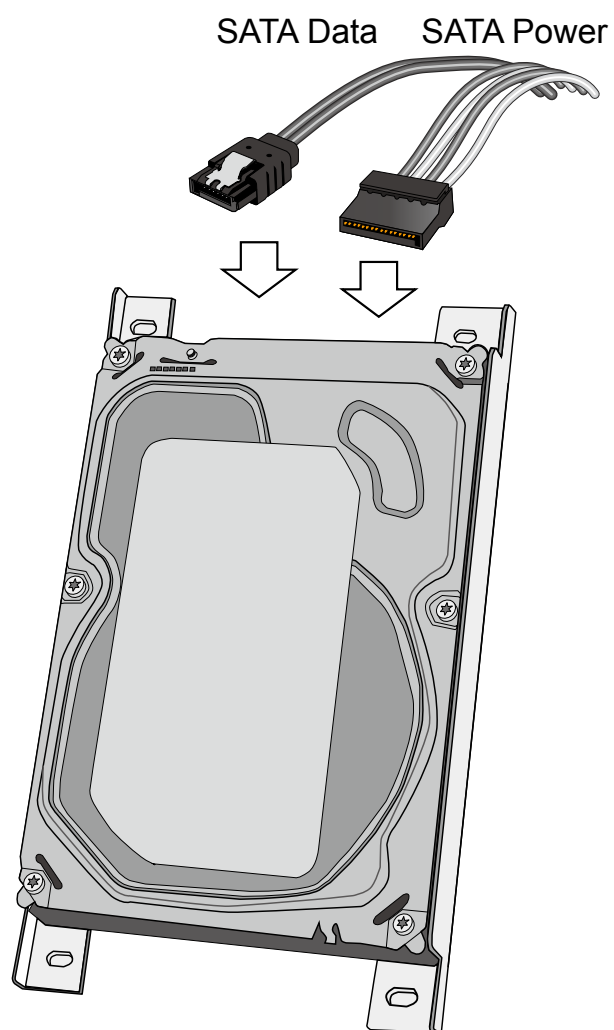


- Secure the hard drive to the mounting positions in the chassis with its label side facing up, and the connectors facing the right hand side of the chassis.

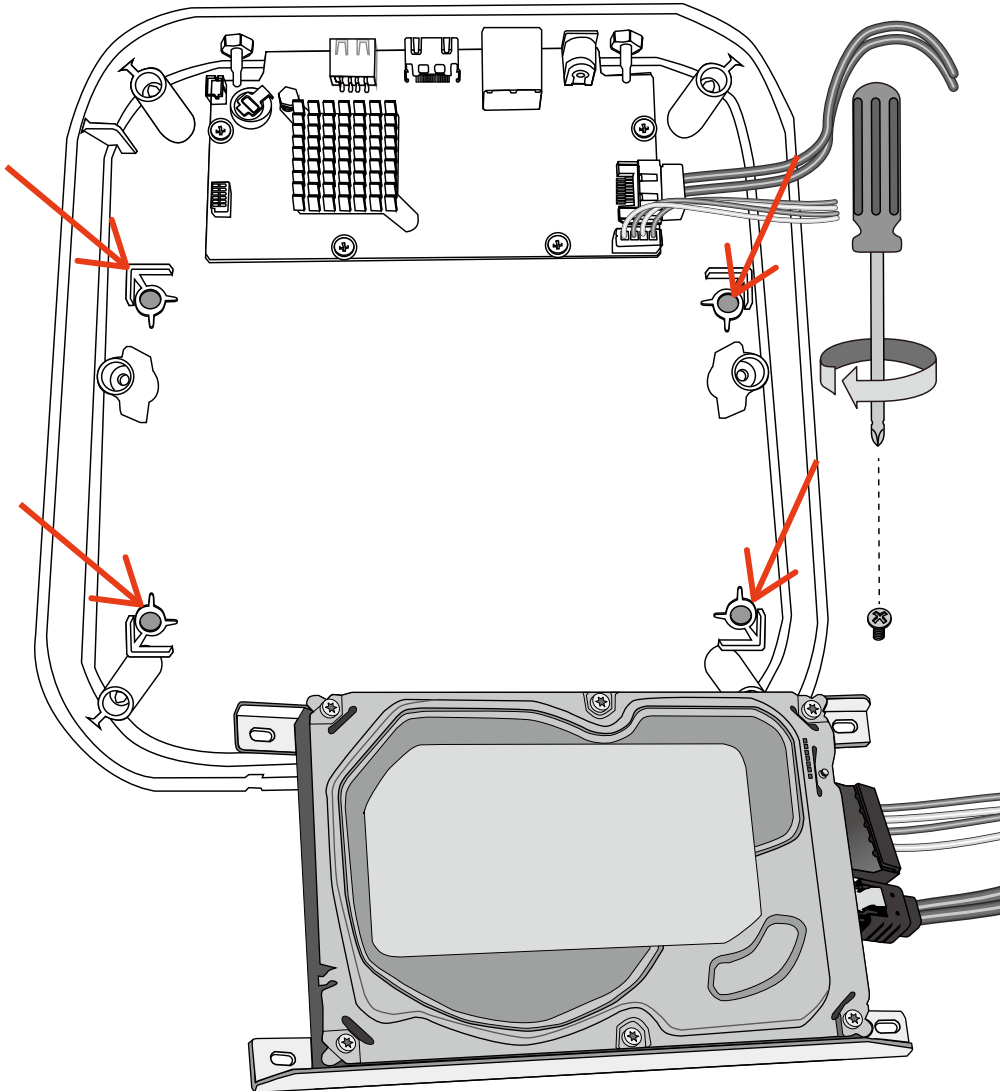


- When done, install the top cover.

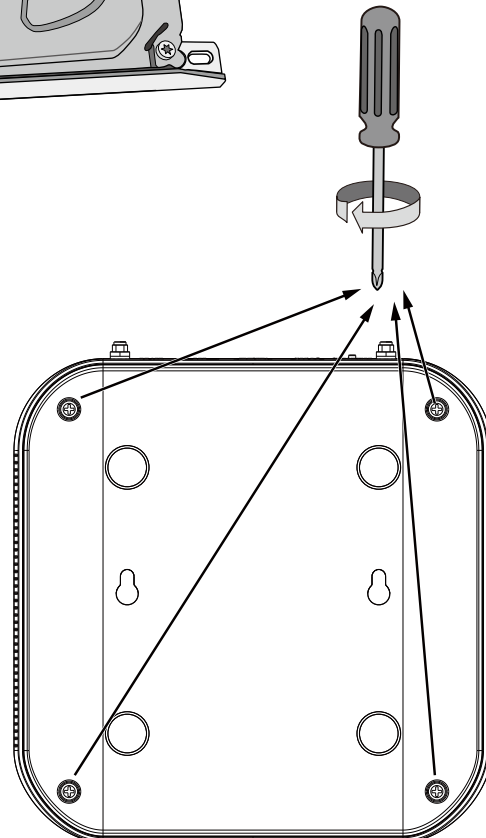



6. Install the included wireless antennas. (ND8212W)

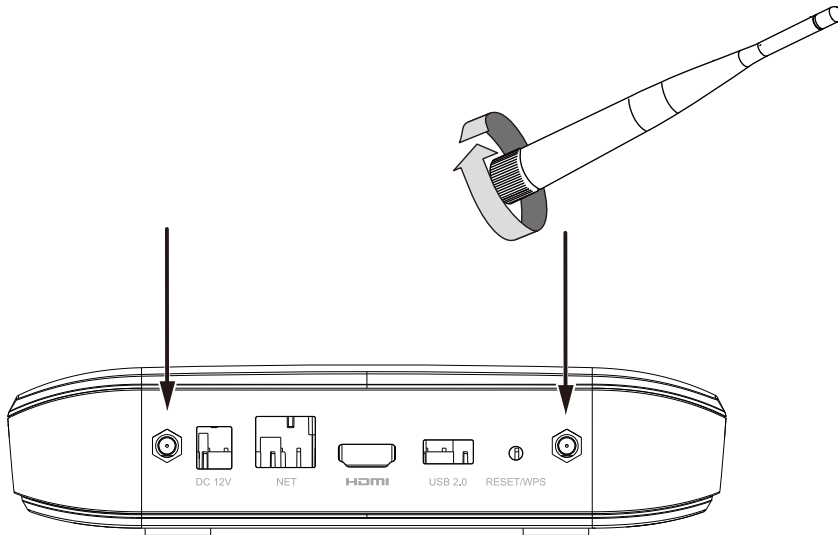


7. Connect a mouse and/or keyboard to the USB connectors.

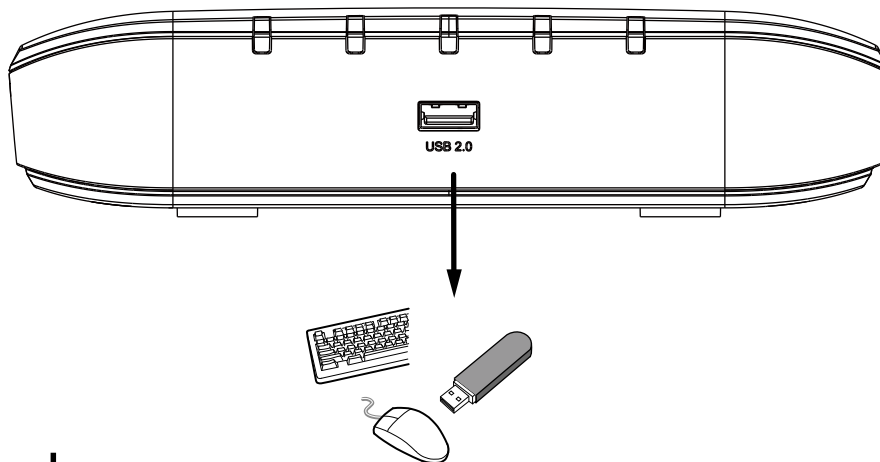

If you prefer to hang the NVR on wall, drill and install two screws 104mm apart.

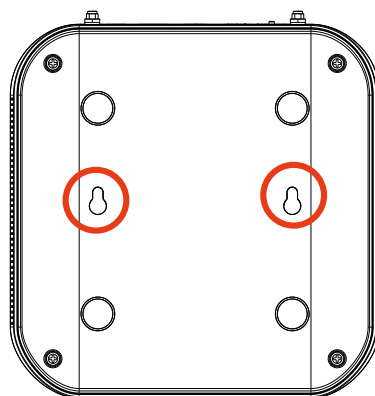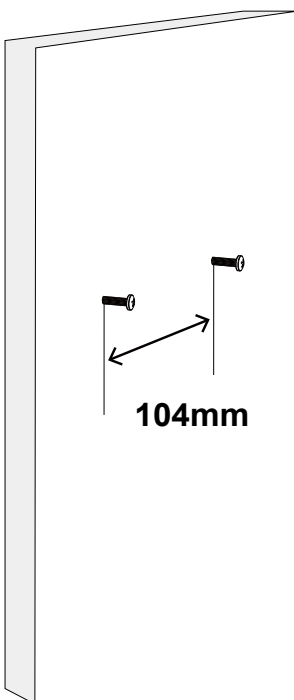

Refer to the screw dimensions below when wall-mounting.

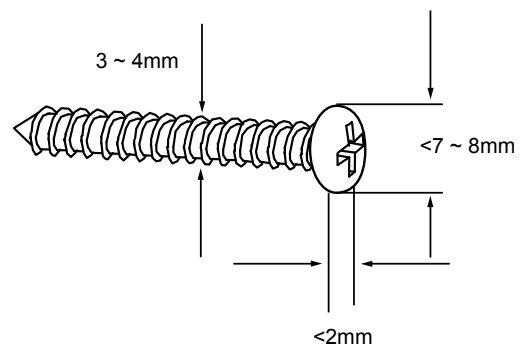


3 Interface Connections

1. Connect to a monitor using an HDMI cable.
2. Connect CAT5e or better-quality Ethernet cable to the network.
3. Connect USB devices such as mouse, keyboard, or USB thumb drive (formatted in FAT format), or UPS.
4. Connect the power adaptor to the power mains and the system.

The NVR works with both wired and wireless cameras.

The ND8312 comes without the wireless connectivity.

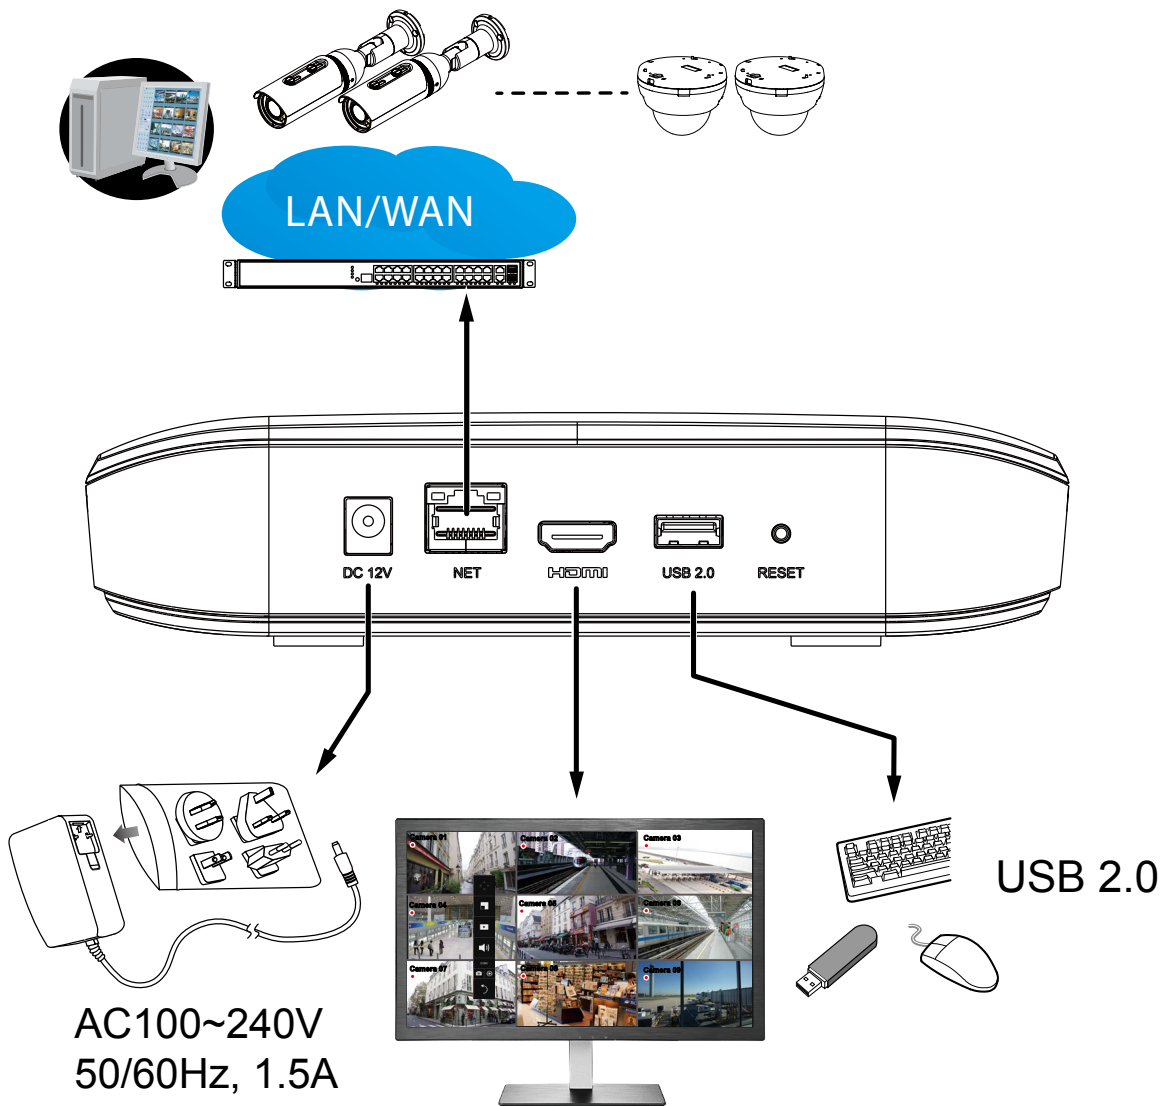

Pressing the Reset button for longer than 10 seconds will restore the factory defaults.

4 Initial Configuration - via a Local Console

A local console requires the following:

1. A monitor is connected via an HDMI cable.
2. A mouse and/or a keyboard are connected to the system.
3. It is presumed that the system has not been configured yet. The Installation wizard only appears for an unconfigured machine or one that was restored to its default.

Follow the onscreen messages to complete the initial configuration:

1. When started for the first time, the system will prompt for the forceful configuration of a password. This ensures security from malicious network attack.

The applicable alpha-numeric characters are [0-9][a-z][A-Z][!][\$][%][-][.][@][^][_][~], with a max. length of 64 characters.

Hello, Administrator

Set up password before launching NVR.

At least 8 characters with no space, 1 alphabet character (uppercase or lowercase), and 1 numeric character.

Username: admin

New password: [masked]

Confirm password: [masked]

[Apply]

[Virtual Keyboard]

Click the **Apply** button when the new password is accepted.

2. Select the UI language, Time zone, and current date and time. Click on the **Continue** button to proceed.

Start Insert cameras Create Volumes Finish

Language: English

Time zone: Asia/Taipei (CST, GM...)

July 12, 2017 13 : 42 : 43

[Skip setup] [Continue]


⚠ Camera list will be cleared and disk(s) will be formatted after auto setup

VIVOTEK

**IMPORTANT:**


Except in the initial setup, changing system time can produce disruptions to the existing recordings. Turning the current system time back to a time when video recording was taking place can generate duplicate files. And those files may not be playable.

3. The system will then start to scan the local subnet for connected cameras.

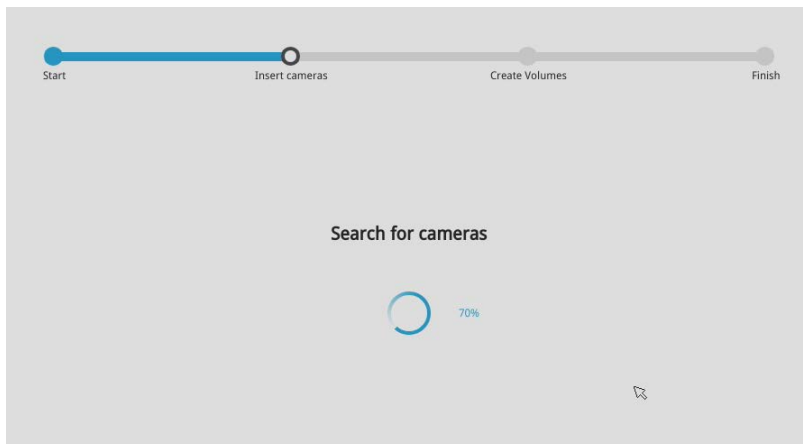

4. All cameras detected on the network will be automatically selected. If necessary, deselect the cameras you want to exclude from the configuration. Click **Continue** to proceed.

Cameras properly installed in the same subnet should all be listed. If you cannot find a camera, examine its network connections.

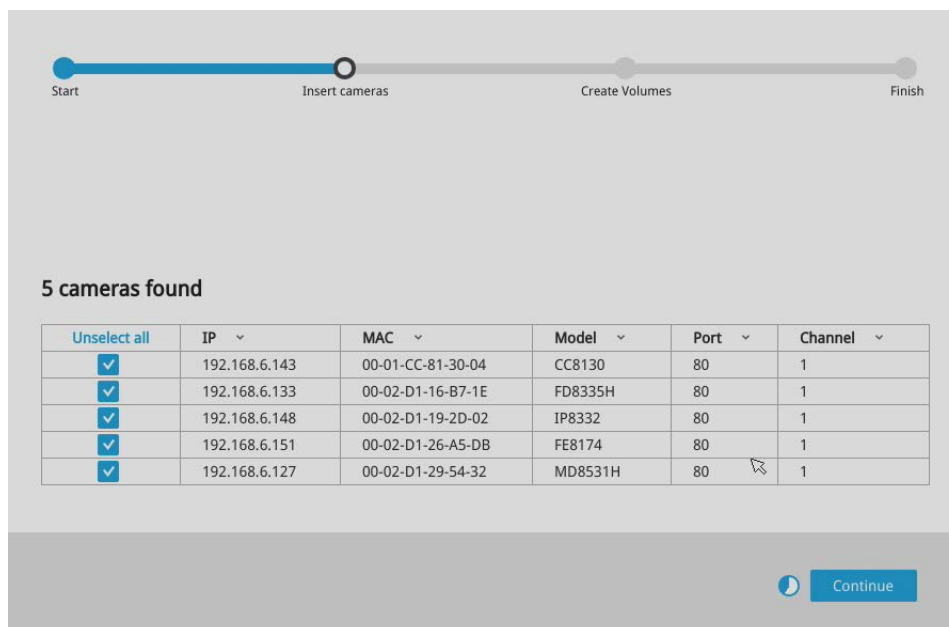


NOTE:

1. The maximum recording bandwidth is 24Mbps. When cameras are recruited into the configuration, their stream #1 is used as the recording stream.

The resolution and fps (frame rate per second) of stream 1 may vary depending on the specifications of different cameras.

2. If there are less than 8 cameras, the Auto Setup will automatically move to the next configuration step.
3. Up to two clients viewing 2x 720P streams is acceptable. If more clients are simultaneously viewing more video streams, the machine can be stressed.

5. The system will automatically create a volume from the installed disk drive. The process may take several minutes.

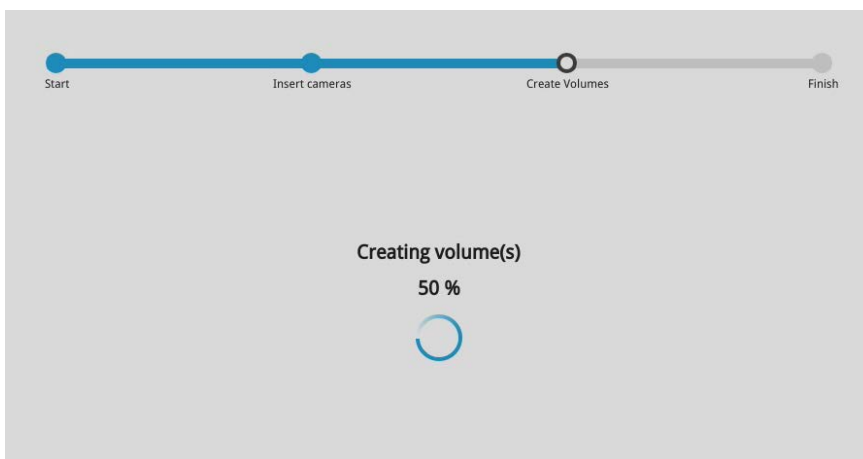


6. An optional utility, **VIVOCLOUD**, is available through the Apple and Android App Stores. The VIVOCLOUD works with a server hosted by VIVOTEK for bridging and tunneling video requests between client devices and network cameras/CMS/NVR. The utility simplifies and facilitates network configuration for access across the Internet.

The prerequisites for using the VIVOCLOUD are as follows:


1. Download and install the VIVOCLOUD utility to your cell phone.
2. Both the NVR and your cell phone have access to the Internet.

With this utility, you do not need to configure IP port forwarding on router or set up a DDNS address for the NVR. You do not even need to know the IP address of the NVR. The VIVOCLOUD utility automatically manages the network parameters required for making the connection. The VIVOCLOUD comes with viewing and playback interfaces very similar to those in the iViewer utility.

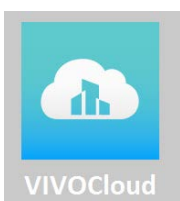



To connect the NVR from a cell phone using the VIVOCloud:

6-1. Click on the **VIVOCloud** button on the wizard.

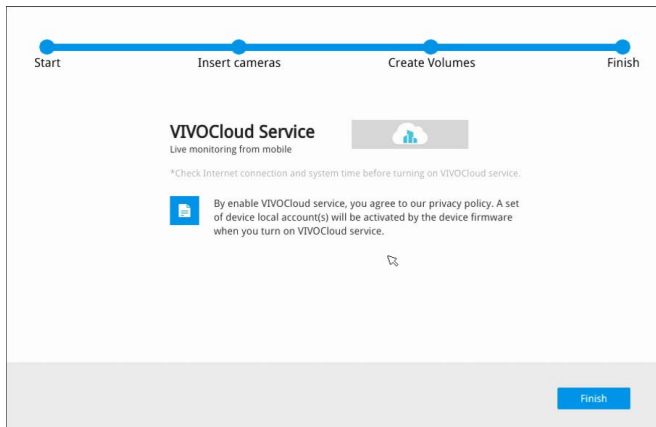


6-2. The QR code will be generated.


6-3. Open the utility from your cell phone. If you already registered an account, tap **LOG IN**. If not, tap **SIGN UP** to register an account from a VIVOTEK server.

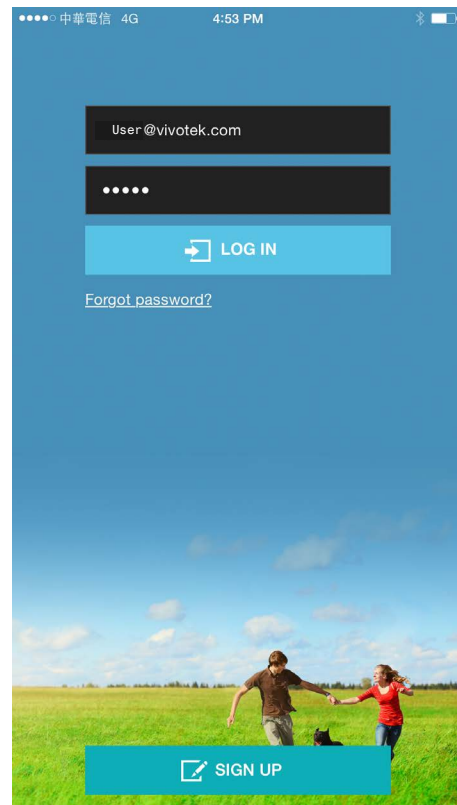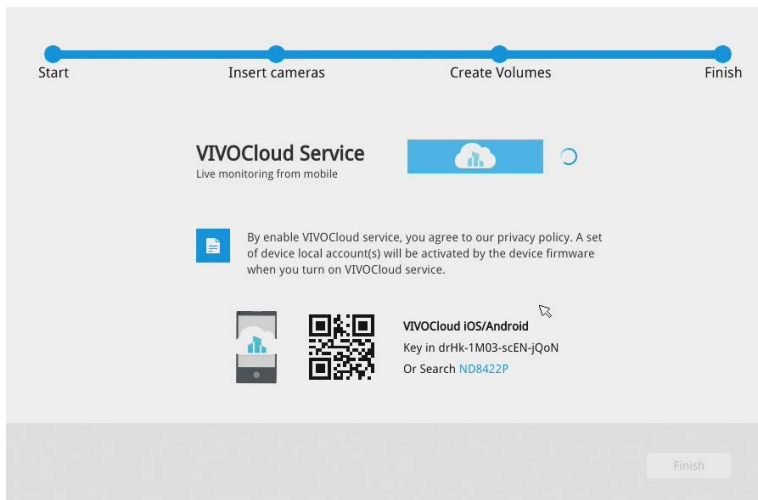


6-4. You can be defaulted to the Live view page. Tap the Add button below to add devices.

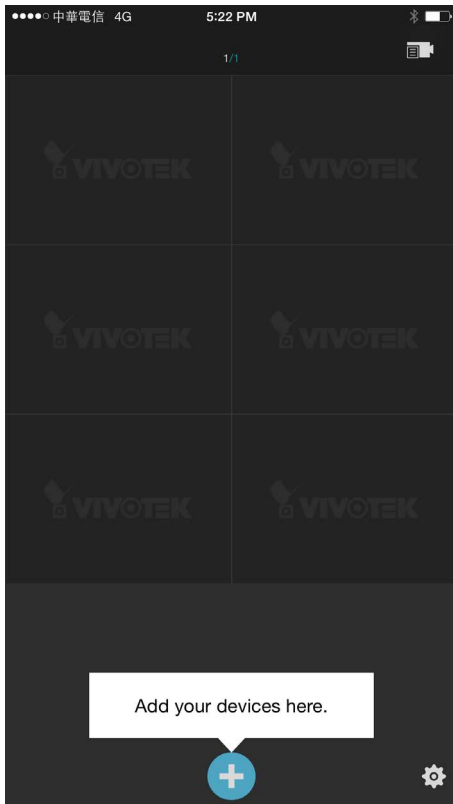


6-5. Tap the **ADD DEVICES MANUALLY** button.

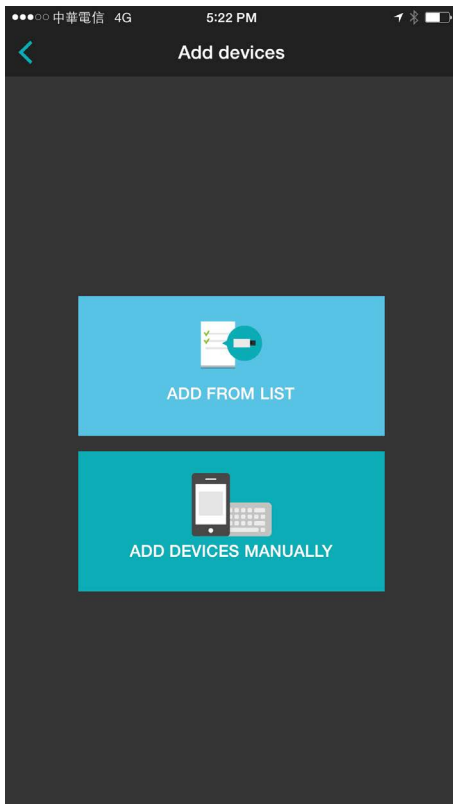


6-6. You can then point your cell phone lens at the NVR screen (Step 5-3.) and use the **SCAN QR CODES** function to establish the connection. You may also manually enter the device ID.

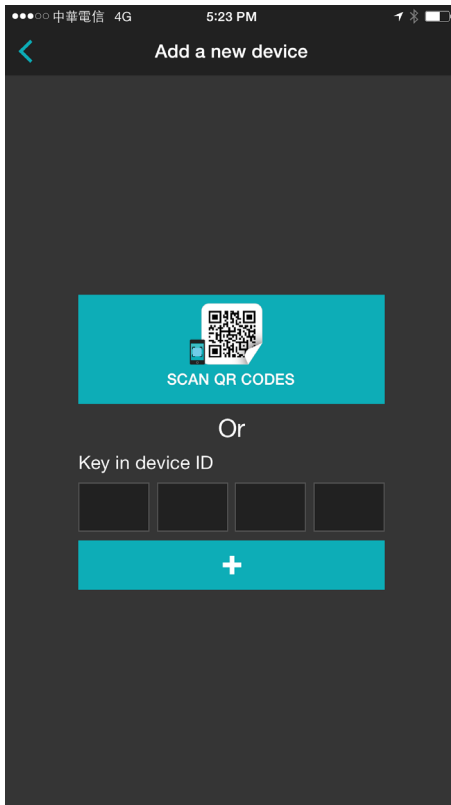

6-7. The process will take several seconds to complete.

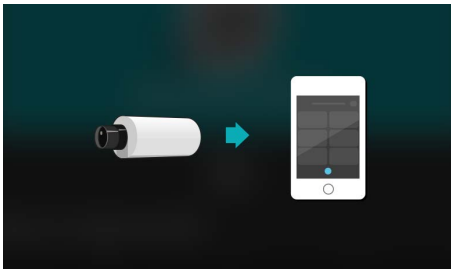

6-8. The NVR and the cameras under it will be ready for access.

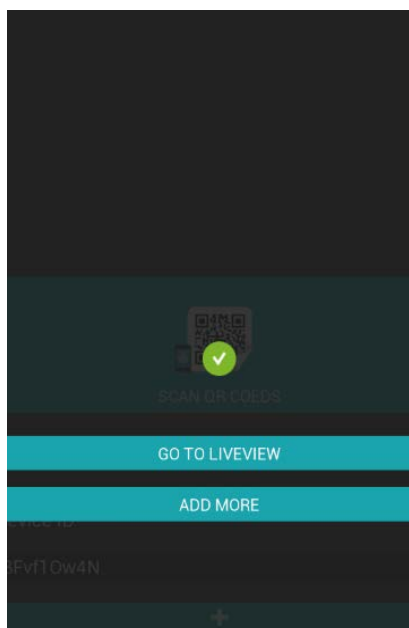


7. Click the Done button. The **LiveClient** screen will display, and, by default, the recording from the selected cameras will immediately take place.


5

Initial Configuration - Wireless Connection (ND8212W)

1. Press the WPS button on wireless camera for 3 to 5 seconds. Refer to VIVOTEK cameras' Installation Guide for wireless connection details.
2. Press the WPS button on the NVR for less than 10 seconds. Wait for the system status LED to change to green.

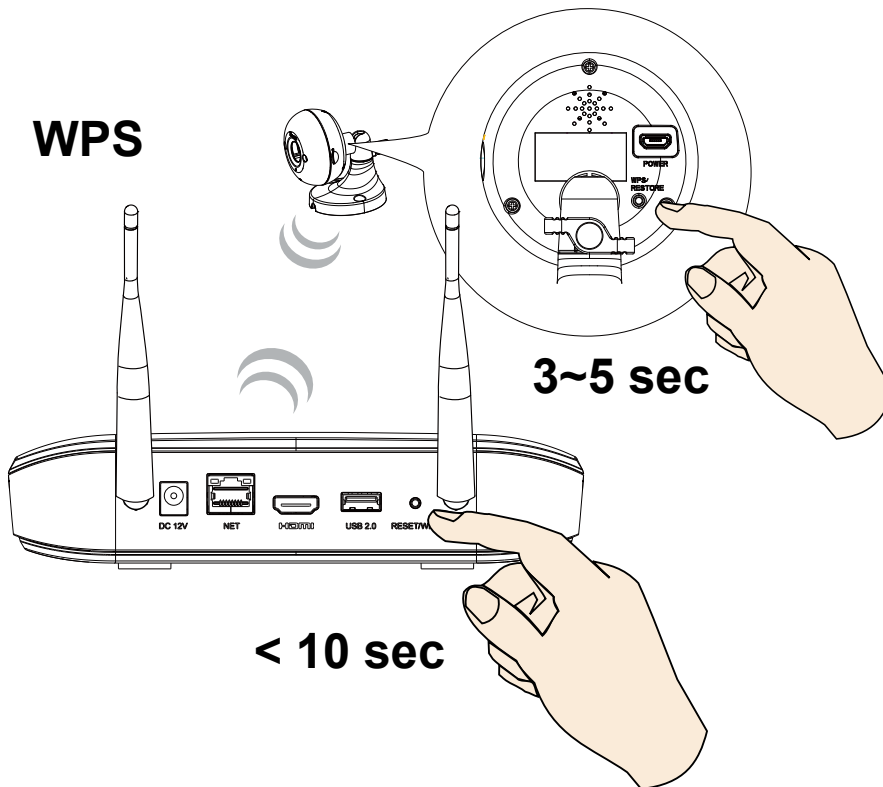

3. Open the system **Settings > Camera Management** page. When successfully connected, the wireless camera will be listed. If the camera is accessed for the first time, you should enter a new password to access the camera.

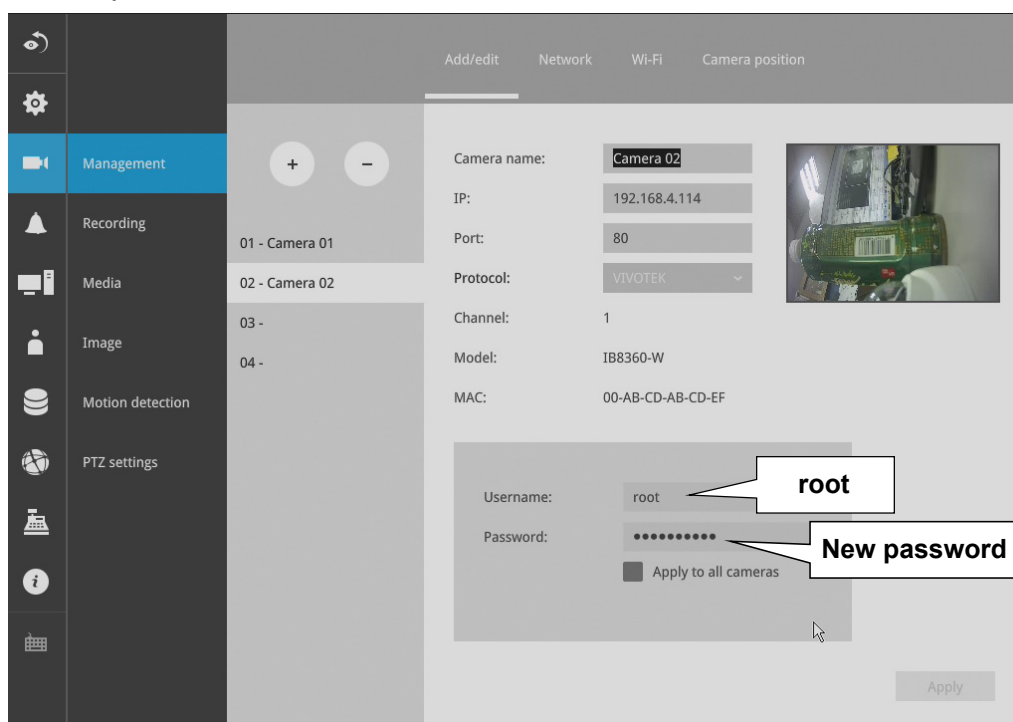



IMPORTANT:

If you are not connecting your wireless cameras using the WPS function, ready the following:



When the wireless NVR is operating in the AP mode, the default SSID and password is VVTK-XXXXXX/VVTK-XXXXXX. The six digits are the the last six digits of the MAC address on the NVR's product label.

For example,

MAC: 00:02:D1:60:4B:BF; SSID/PASSWORD: VVTK-604BBF/VVTK-604BBF

It is highly recommended to change the default password to that of your preference. See **Settings - Network - Connection mode** for wireless network configuration.

6

 
Initial Configuration - via a Web Console (Optional)




IMPORTANT:

If you already configured the system using an Ethernet web console, please skip the Auto Setup steps when you connect the HDMI cable. **You may accidentally format your storage volumes!**


1. Connect the power cord to start the NVR. Wait for the system status LED to light green.
2. From a management computer, download and execute the **Shepherd** utility software. Follow the onscreen instructions to complete the installation.




3. Start the Shepherd utility. The Shepherd utility will discover the NVR located in the same subnet.

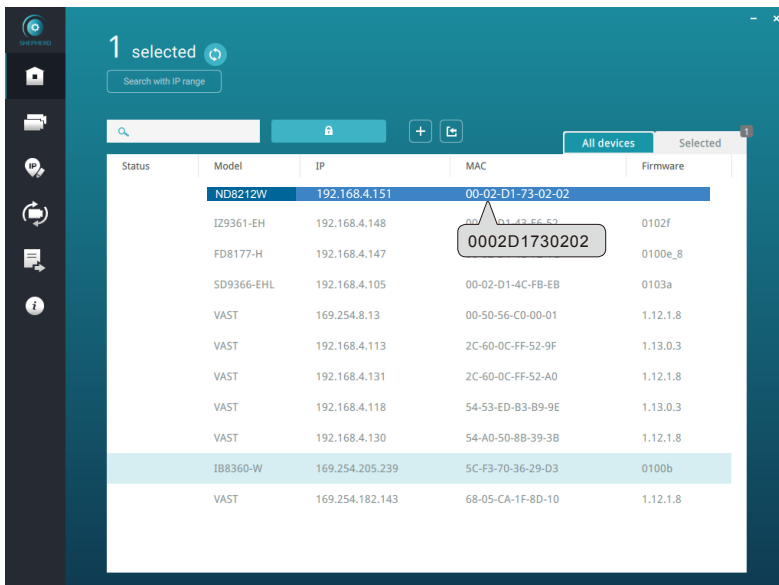


4. Double-click on the ND8312 or ND8212W entry to start a web session with the NVR system.
5. If you have configured a user name and password on the local console, use them to log in. Ideally, the initial configuration is performed via the local console. Expand the menu on the right of the Login button. Select and click on the **Settings** button to begin your configuration.

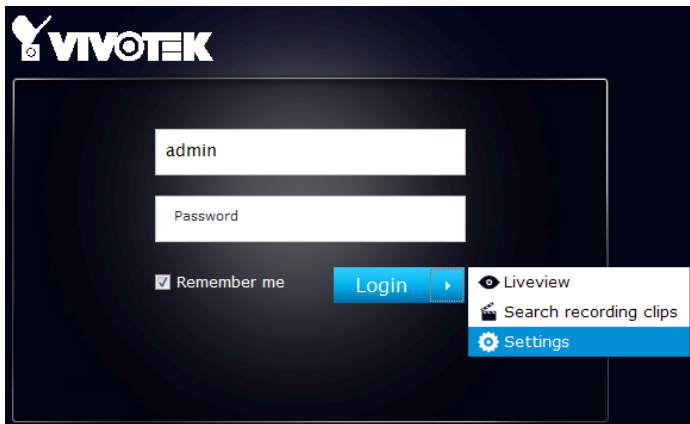


You can select the display language from the lower left corner of the screen.

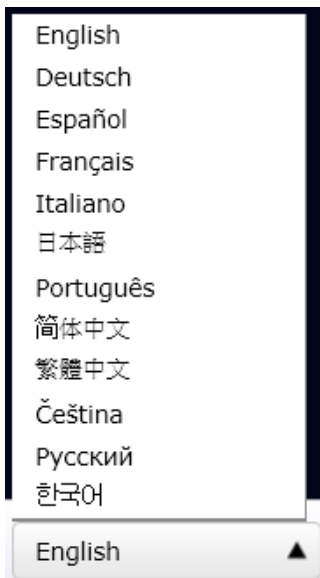


6. On the **Settings** page, click on **Storage > Volume** to access your storage volume configuration.

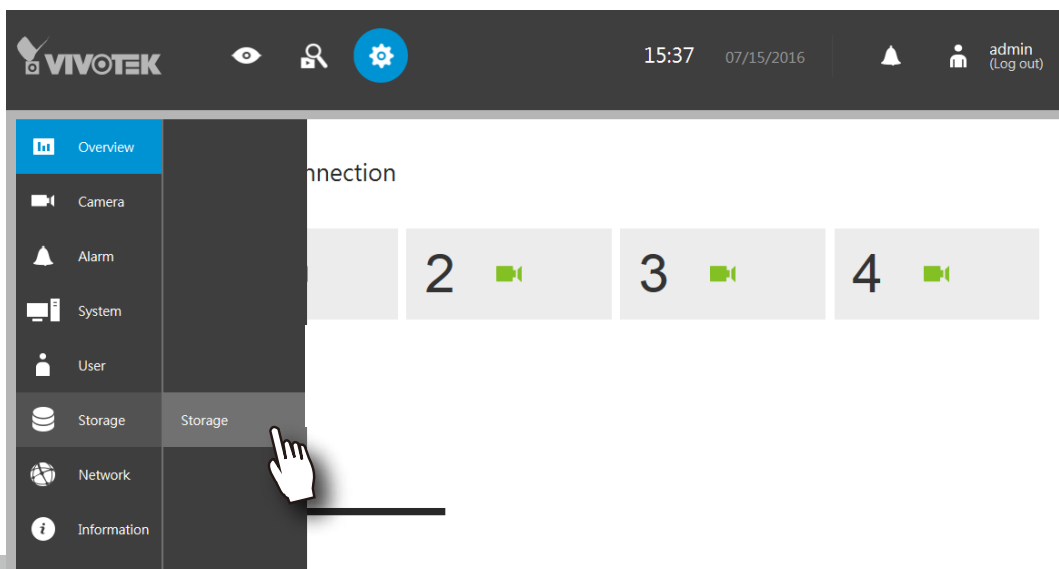

7. On the **Storage** settings page, check if your hard drive is present and identified by your system. Click on the **Add Volume**  button.

If you have let the setup wizard create single a disk volume, you can manually delete them and then create new volumes. Note that previous recordings will be erased.

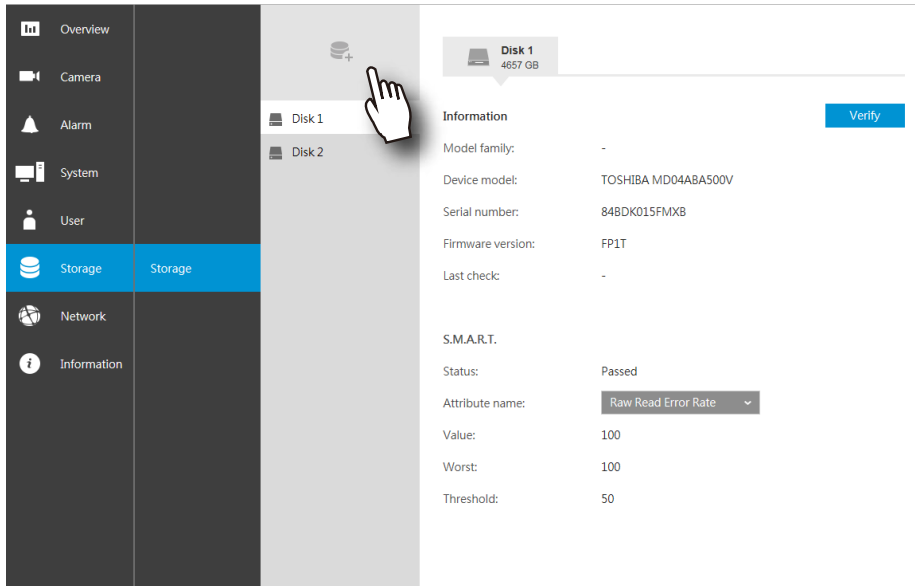


8. Refer to the later discussions for the rest of the configuration procedure.




LED Indicators

ND8312

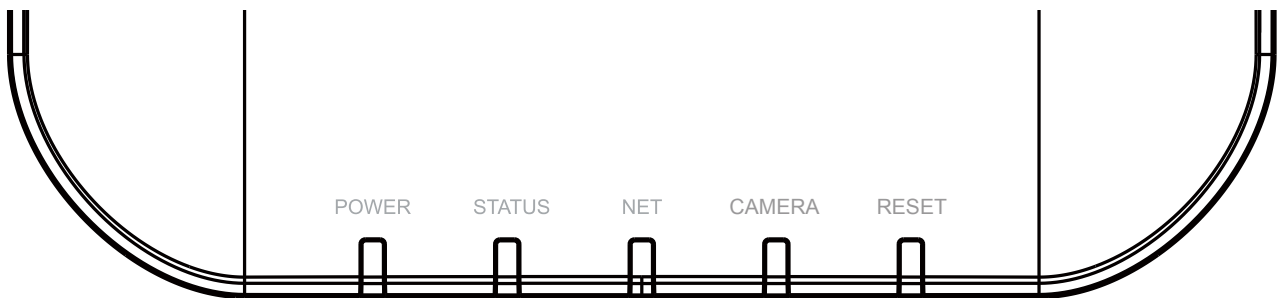

ND8212W

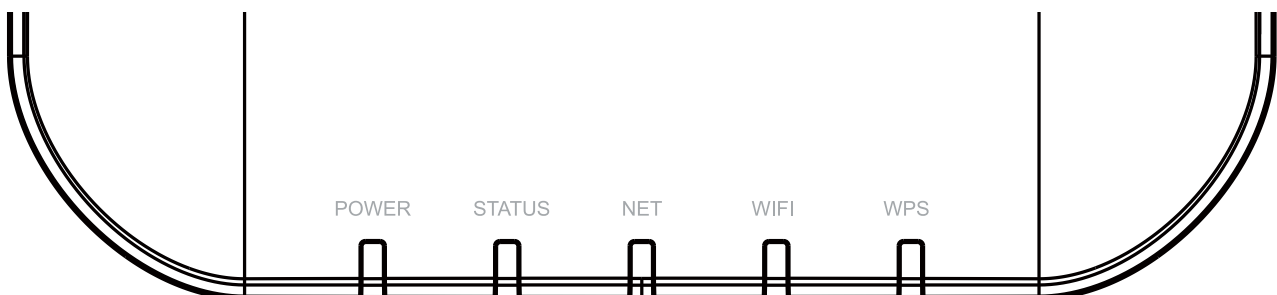

ND8312

Name	Behavior		Definitions
1. Power	1	OFF	Powered down.
	2	Solid Green	Device is up and running.
2. Status	1	Green solid	System is ready.
	2	Blinking Red every 1 second	Firmware or device pack is being updated.
	3	Solid Red	* Disk errors detected via S.M.A.R.T. * Hard disk is full. * Configured disk drive is missing (the buzzer will be sounded until it is manually disabled.)
3. NET	1	OFF	The Ethernet port is disconnected.
	2	Orange blinking	Data is being transmitted and received.
4. Camera	1	Solid Green	All configured cameras have been connected.
	2	Solid Red	One or more configured cameras is missing.
	3	OFF	No camera is connected.
5. Reset	1	Blinking Blue	Reset is taking place.
	2	OFF	Normal status.

ND8212W

Name	Behavior		Definitions
1. Power	1	OFF	Powered down.
	2	Solid Green	Device is up and running.
2. Status	1	Green solid	System is ready.
	2	Blinking Red every 1 second	Firmware or device pack is being updated.
	3	Solid Red	* Disk errors detected via S.M.A.R.T. * Hard disk is full. * Configured disk drive is missing (the buzzer will be sounded until it is manually disabled.)
3. NET	1	OFF	The Ethernet port is disconnected.
	2	Orange blinking	Data is being transmitted and received.
4. Wi-Fi	1	Solid Green	Working in the AP mode.
	2	Solid Orange	Working in the Station mode, and is connected to an AP.
	3	Blinking Orange every 0.2 second	Working in the Station mode, and failed to connect to an AP.
	4	OFF	Wi-Fi is off.
5. WPS	1	Blinking Blue	WPS is searching for nearby devices.
	2	OFF	WPS is not functioning.

8 Power Up and Power Down


To power up and power down,

On the initial configuration:

Connect the power adapter between the system and power outlet. To power up after a power-down, re-connect the DC connector.

After the initial connection,

Press the software power down button on the management session to power down. the system should start flushing the cached contents in system memory and gracefully shut down.

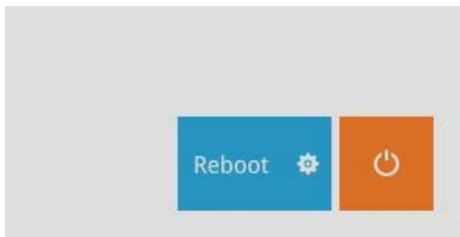


WARNING:

1. No storage system is completely fail-safe. Damage to data might occur due to file system corruption, operating system malfunction, virus infection, HDD component failures, and so on. Therefore, it is highly recommended to regularly back up your data, and VIVOTEK disclaims responsibilities of data loss or recovery.
2. Always power off the system using the software power button. Do not disconnect the power cord while the system is still operating. Doing so will result in data inconsistencies. The normal power-off procedure allows cached data to be written to disks.

NOTE:

If system buzzer is sounded, move your mouse cursor to reveal the main screen portal, and then click on the **Stop buzzer** button.

Serious system faults, such as a missing volume, can trigger the system buzzer. Verify the cause of system fault and turn off the buzzer.

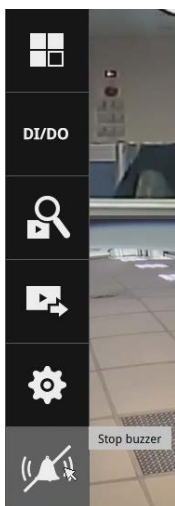


Section One


Management over a Local Console

Chapter Two

Introduction to the Local Console Interface

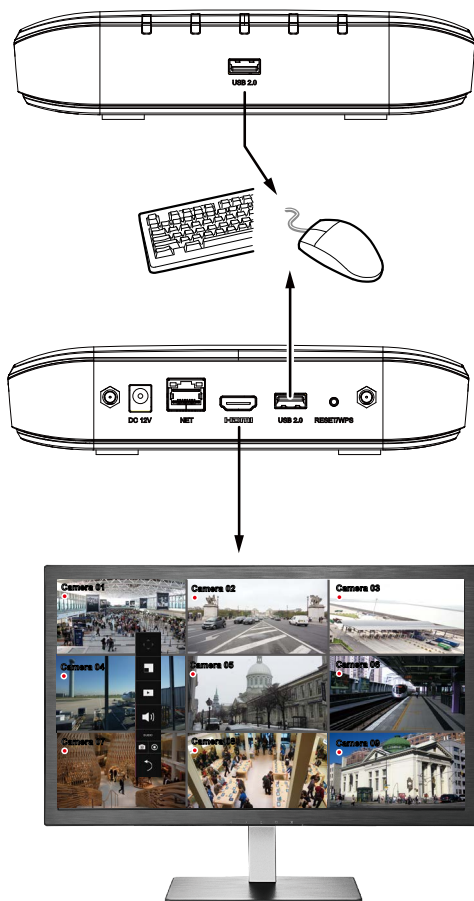

By default, a live view appears on an HDMI monitor. The interface architecture of the local console is illustrated as follows:

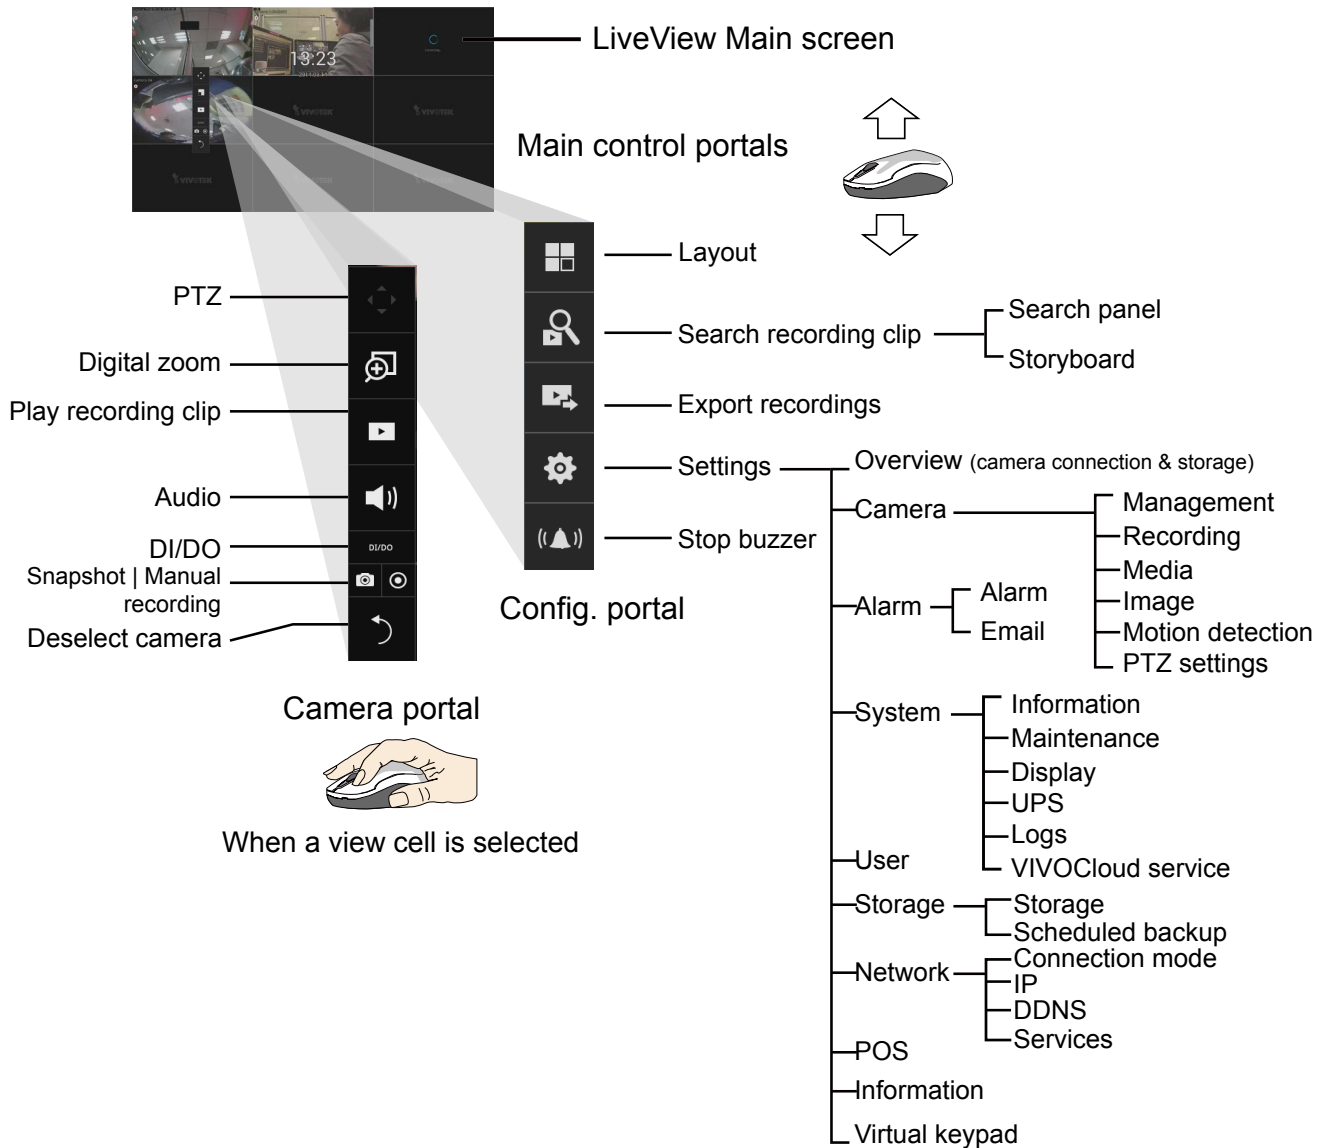

⚠ IMPORTANT:

Due to the limitation of system resources, the fisheye dewarp (1R & 1P modes) can only take place on one view cell, for one fisheye camera.

For the Export recordings function, refer to page 61.


2-1. How to Begin

1. How to access the Configuration Portal?

Make sure a mouse is attached to your NVR. Move your mouse cursor, and the Configuration Portal will appear on screen. For all the configurable options available through this portal, please refer to Chapter 3 on page 46.



You can also hide these portal toolbar. Right-click on the LiveView screen to display the option.

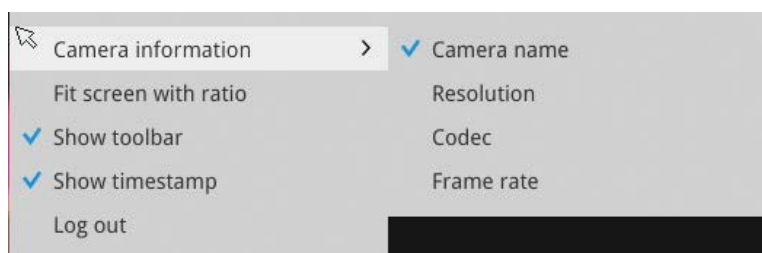

2. How to access the Camera Portal?

Single click to select a view cell, the Camera Portal will appear. The system automatically detects the characteristics of an individual camera when you select a view cell.



This portal appears with a camera that supports mechanical PTZ.



This portal appears with a camera that does not support mechanical PTZ.




Tips:

Here are some operation steps using the tool bar:

1. Single-click to select a view cell and bring out the tool bar.
2. Double-click to expand a view cell to the full view.
3. Double-click again to shrink the view cell to the original size.

PTZ control panel for ordinary PTZ type

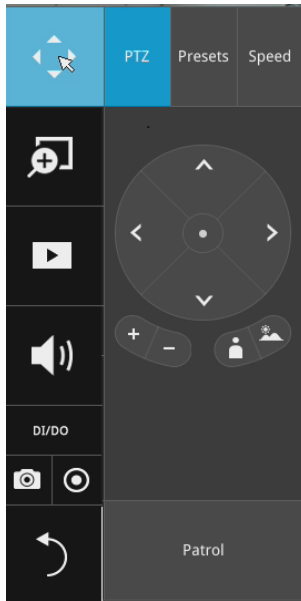


PTZ control panel for joystick type PTZ




3. How to retrieve and access recorded videos?

 
3-1. One is to access the video clips taken within 1 hour. Left-click to select a view cell, and then click on the Recording clips button.




Select a time value by a single click. You will be prompted for User name and Password, enter **admin** and **admin** (the default user name and password), and then click **Login**.

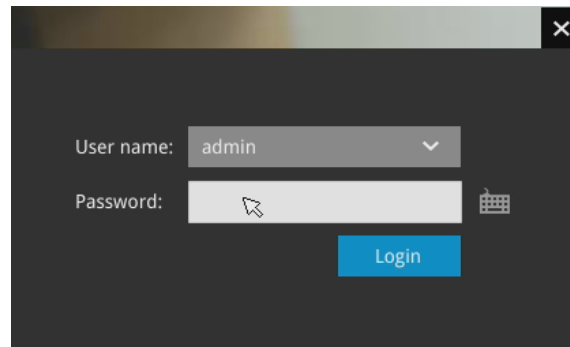

The **Playback** window will prompt, and a playback begins from the point in time you selected, e.g., 30 seconds ago. This function allows you to quickly review what has just happened.

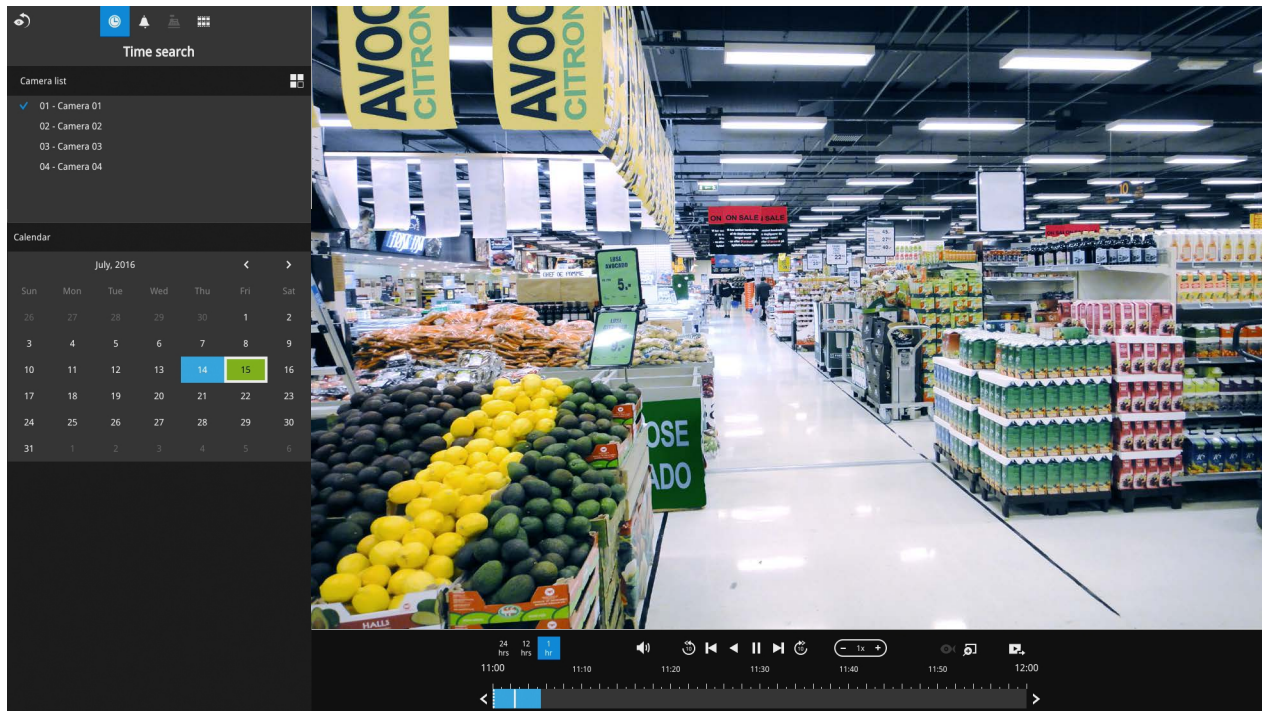


3-2. Another way to access past recorded videos is to open the **Search recording clips** window. Move your mouse cursor to display the **Configuration Portal** (without selecting any view cell). Click on the Search recording clips button. Please refer to page 47 for more information about the search functions.

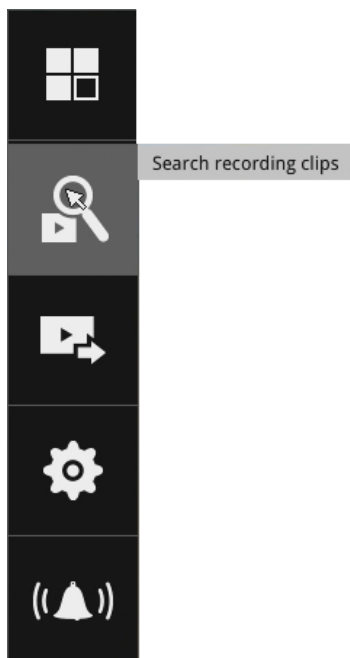

You will be prompted for User name and Password, enter **admin** and **admin** (the default user name and password) and click Login.


It is highly recommended to change the password after you log in.

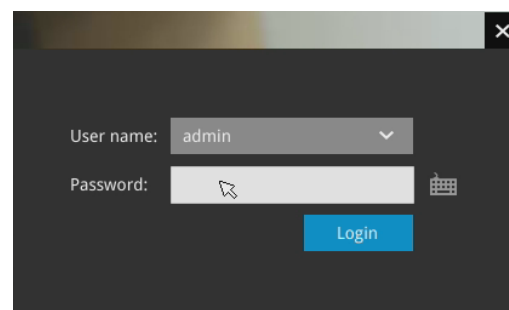

4. How to retrieve system alarm?

Please refer to page 84 for how to configure system alarm triggers. When the alarm is triggered, e.g., by digital inputs or motion detection, an alarm message will prompt on the screen.

Use the > arrow button to browse through the alarm messages.

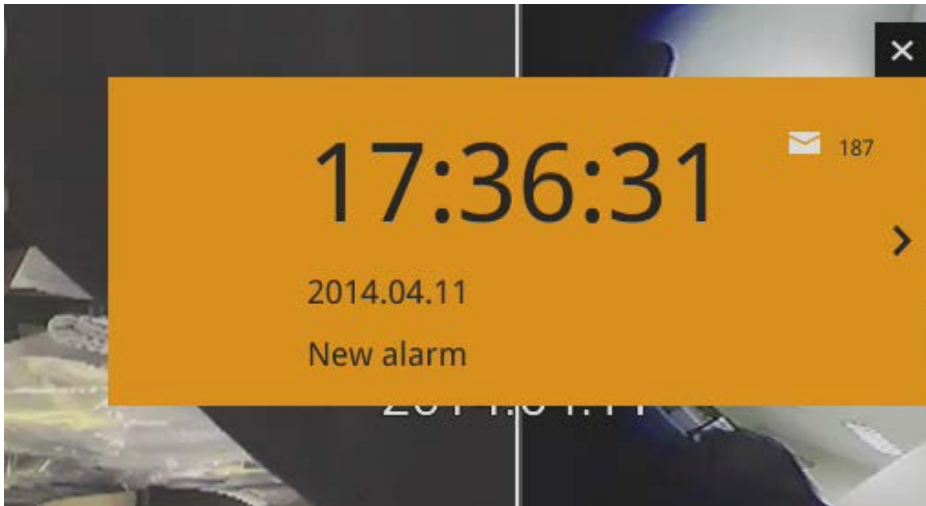

If the alarm is configured with video recording as the responding action, you can click on the alarm entry. The **Playback** window will appear, allowing an instant playback of the alarm-related footage. You will enter the "Search alarm results" page even if the alarm does not trigger a recording action.

Alarm search

Camera list

All

From: February 15, 2017 To: February 16, 2017

09 : 09

Alarm: All alarms Trigger: DI



13 result(s)

Alarm name	Trigger	Time
Fisheye_DI_trigg...	Camera 04 Camera DI	2017.02.16 09:05:48
Fisheye_DI_trigg...	Camera 04 Camera DI	2017.02.16 08:49:08
FD8135H_DI_tri...	Camera 07 Camera DI	2017.02.16 08:48:40
Fisheye_DI_trigg...	Camera 04 Camera DI	2017.02.15 17:26:33
FD8135H_DI_tri...	Camera 07 Camera DI	2017.02.15 17:26:19
FD8135H_DI_tri...	Camera 07 Camera DI	2017.02.15 17:24:49
Fisheye_DI_trigg...	Camera 04 Camera DI	2017.02.15 17:23:18
FD8135H_DI_tri...	Camera 07 Camera DI	2017.02.15 17:23:11
FD8135H_DI_tri...	Camera 07 Camera DI	2017.02.15 17:22:55
Fisheye_DI_trigg...	Camera 04 Camera DI	2017.02.15 17:00:23
Fisheye_DI_trigg...	Camera 04 Camera DI	2017.02.15 16:54:03
Fisheye_DI_trigg...	Camera 04 Camera DI	2017.02.15 16:46:58
Fisheye_DI_trigg...	Camera 04 Camera DI	2017.02.15 16:42:41

5. Why live view is unavailable?

The default live view receives a camera's stream #1. If a camera's stream #1 is configured using MPEG-4 as the video codec, the following message will prompt.


You can go to the **Settings > Camera > Media > Video** window to configure the video codec of stream #1 into H.264. The same will occur if you connect some newer VIVOTEK 9xxx series H.265 models. You will then need to change the CH1 and CH2 video streams to H.264.

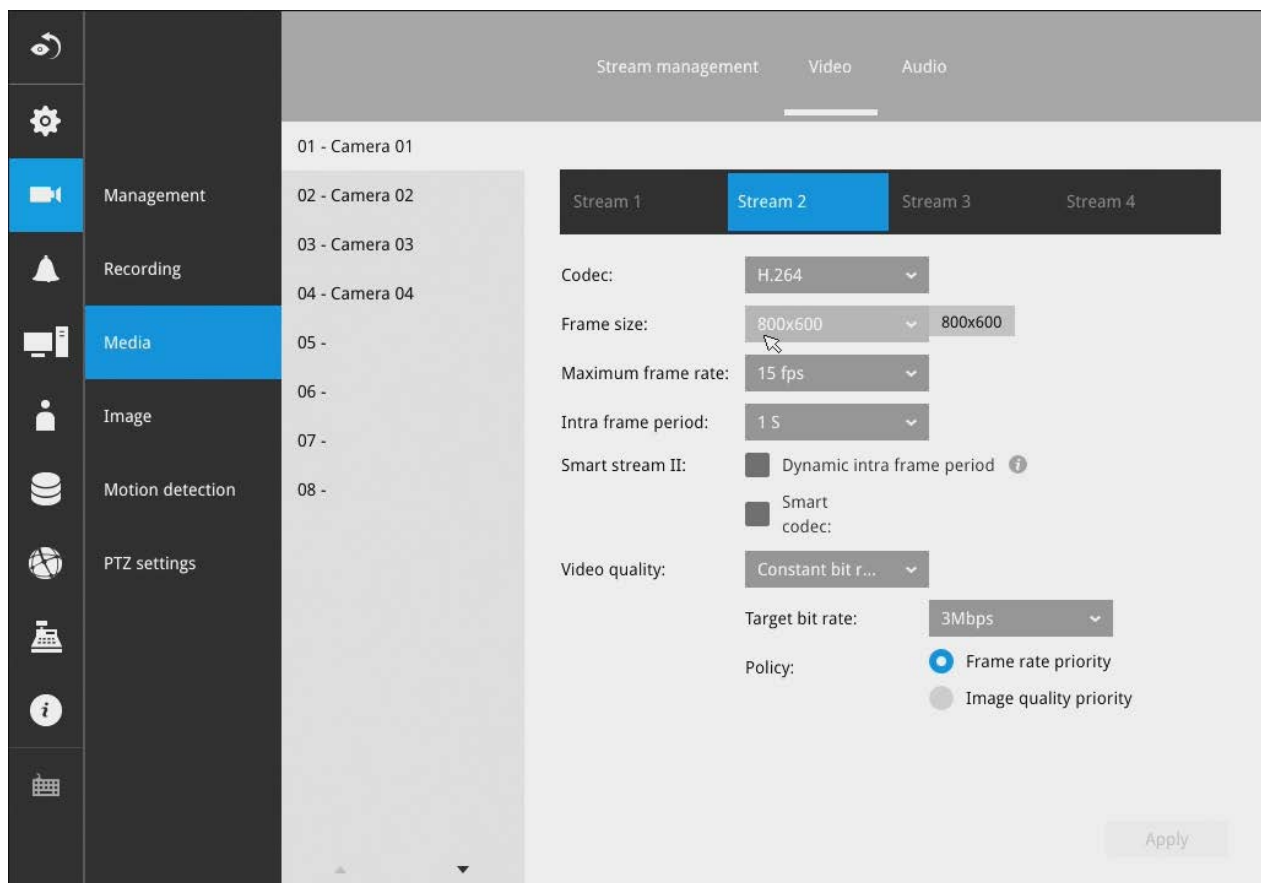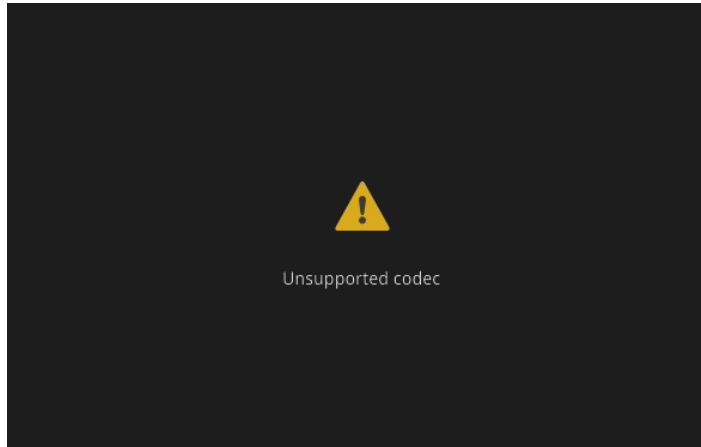

6. How do I move to another layout page?

Move your cursor to the right hand side of your screen. The page turner buttons will appear as shown below.

For example, if you have 8 cameras placed on 2 2x2 layout pages, use these buttons to visit different pages.

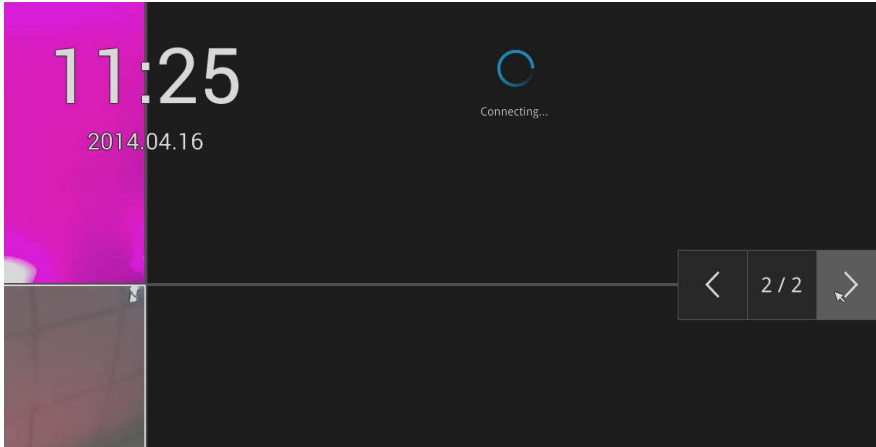

7. Why the onscreen tool bars disappear after some time?

 
The system comes with idle modes. Below are the applicable conditions:

1. **Live view**: if no management activities occur for 5 seconds, the tool bars disappear from screen. When in the idle mode, mouse cursor and tool bars will disappear. Moving the mouse cursor will re-activate the screen.
2. **Settings** page: If left unattended for 10 minutes, system will automatically log out. The system will prompt for user credentials if a user tries to access the Settings page again.
3. **Search recording clips** window: If currently there is a video playback, the system will not enter the idle mode.

2-2. Operation on a Camera View Cell


The following apply when a camera view cell is selected.

2-2-1. PTZ Panel



Once you selected a camera, click on the PTZ button on a camera portal.


The PTZ panel will prompt. Below are the description of its functions:

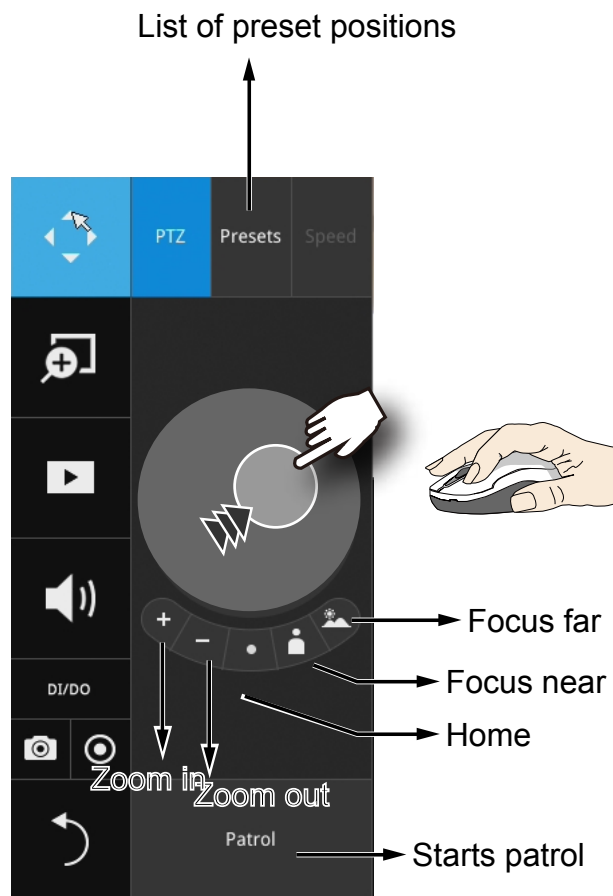


1. **PTZ** control: Click and drag the nudget in the center towards the direction you wish to move to.
2. **Focus**: Click on the Focus near and Focus far buttons to adjust camera focus.
3. **Home**: Click to move the camera lens towards the default home position.
4. **Zoom**: Use the Zoom in and Zoom out buttons to adjust the camera's zoom ratio.
5. **Presets**: If you configured preset positions, a list of preset positions will appear.
6. **Patrol**: If you configured preset positions into a patrolling tour, click on this button and the camera will proceed with patrolling through preset points.

Note that on a speed dome camera, the farther you pull the nugget away from the center, the faster the lens moves. This works like speed control.

Below is the PTZ panel that appears with ordinary PTZ cameras.

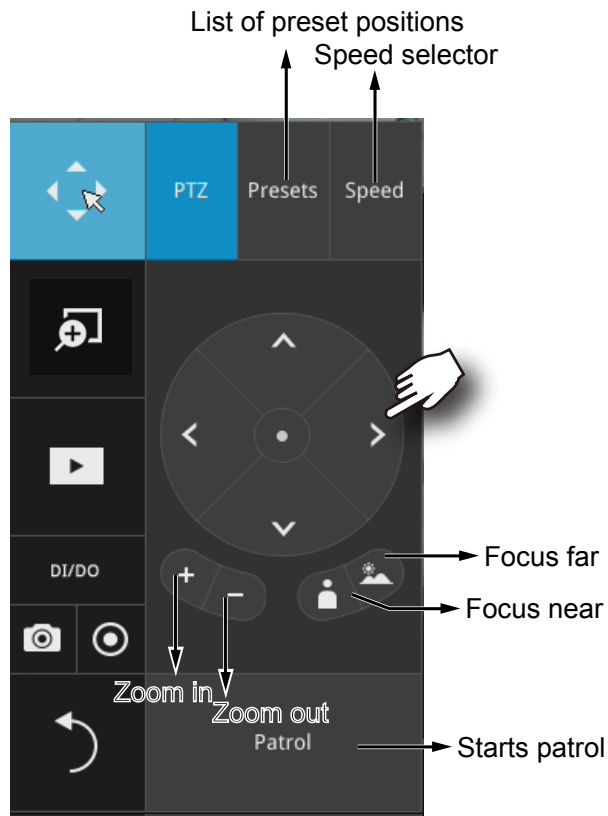

 1. **PTZ** control: Click on the arrow buttons to move towards the direction you wish to move to.
2. **Focus**: Click on the Focus near and Focus far buttons to adjust camera focus.
3. **Zoom**: Use the Zoom in and Zoom out buttons to adjust the camera's zoom ratio.
4. **Presets**: If you configured preset positions, a list of preset positions will appear.
5. **Speed**: Adjusts the speed when moving across the field of view.
6. **Patrol**: If you configured preset positions into a patrolling tour, click on this button and the camera will proceed with patrolling through the preset points.



This portal appears with a fisheye camera. The PiP and PTZ buttons will then be disabled for a fisheye camera.



IMPORTANT:

Due to the limitation of system resources, the fisheye dewarp (1R & 1P) can only take place on one view cell, for one fisheye camera.

Joystick support



The joystick related operations are listed below:

1. **Pan**: Continuous move is supported. (joystick X-axis movement)
2. **Tilt**: Continuous move is supported. (joystick Y-axis movement)
3. **Zoom**: Continuous move is supported. To zoom in, move joystick Z-axis clockwise. To zoom out, move joystick Z-axis counter-clockwise.

The NVR supports VIVOTEK's IPD-USB(3-axis, 12 buttons), AJ-001(3-axis, 8 buttons), and AJ-002 (3-axis , 29 buttons) joysticks.

The default button functionality are described below:


Button	Function	Note	Live	Setting	Playback
1	Pan		V	V	-
2	Patrol	Supports the first patrol	V	V	-
3	Stop		V	V	-
4	Home		V	V	-
5	Focus Near		V	V	-
6	Focus Far		V	V	-
7	Snapshot		V		V
8	Preset		V	V (PTZ setting/ Motion only)	-
9 ~ 17,19	Number 0~9		V	V (PTZ setting/ Motion only)	V
18	ESC		V	V	V
20	Enter		V	V (PTZ setting/ Motion only)	
21	Full screen	When a view cell is selected, also applies in the Playback. Press the second time to return to previous state.	V	-	V

22	Manual Recording	Press once to start manual recording. Press the second time to stop.	V	-	-
23	Change Layout	Consecutively changes layout	V	-	V
24	Rewind		-	-	V
25	Pause		-	-	V
26	Play		-	-	V
27	Speed Up		-	-	V
28	Slow down		-	-	V
29	Change focus view	In live view/playback layout, will move from top left to lower right, from view cell to view cell.	V	-	V

Multi-key Combinations


Button	Function	NOTE	Live	Setting	Playback
Number+ Enter	Turns a channel into full view (AJ002 only)	None responsive if unconfigured channel number is entered; e.g., 9+Enter on an 8-CH NVR.	V	-	V
Preset+ Number + Enter	On a PTZ camera view cell, moves to a preset position (AJ002 only)	None responsive if unconfigured position number is entered	V	V (PTZ setting/ Motion only)	-
Preset + Number	On a PTZ camera view cell, moves to a preset position (AJ001)	None responsive if unconfigured position number is entered	V	V (PTZ setting/ Motion only)	-

 2-2-2. Digital Zoom Panel



Digital zoom is a function that allows an operator to zoom in or zoom out on a live video.

When activated, a **Global view** window will appear at the lower right of the view cell as shown below. You can display only a portion of the complete video frame as an area of your interest. Using a click and drag on the **ROI** window, you can instantly move to other areas within the video frame. Use the zoom ratio pull bar at the bottom to change the zoom ratio. You may also move the ROI around by clicks and drags.

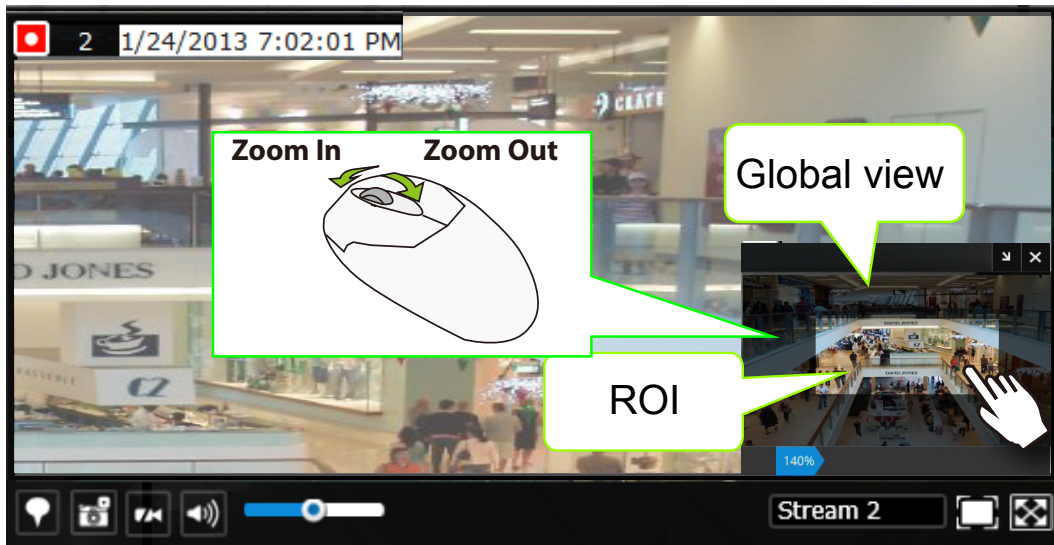


Note that not every camera supports the PiP function.




NOTE:

Please refer to page 136 for the description of fisheye display modes. The working theory on fisheye modes is identical for use on both local and web consoles. The fisheye mount type setting is found in the **Settings** window.


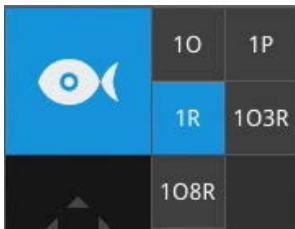


2-2-3. Play Recording Clips Panel

 


The **Play Recording Clips** function provides a shortcut to the latest recordings on the system. You can select 30 secs, 1 min, 3 mins, 10 mins, and 60 mins for an immediate playback.

For security reasons, using this function requires users to enter his/her credentials.

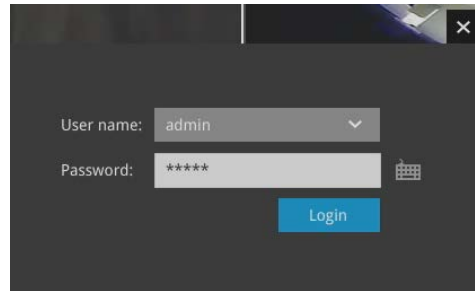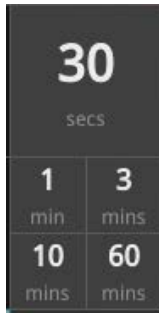

The **Playback** window will prompt, and a playback begins from the point in time you selected, e.g., 30 seconds ago. This function allows you to quickly review what has just happened.

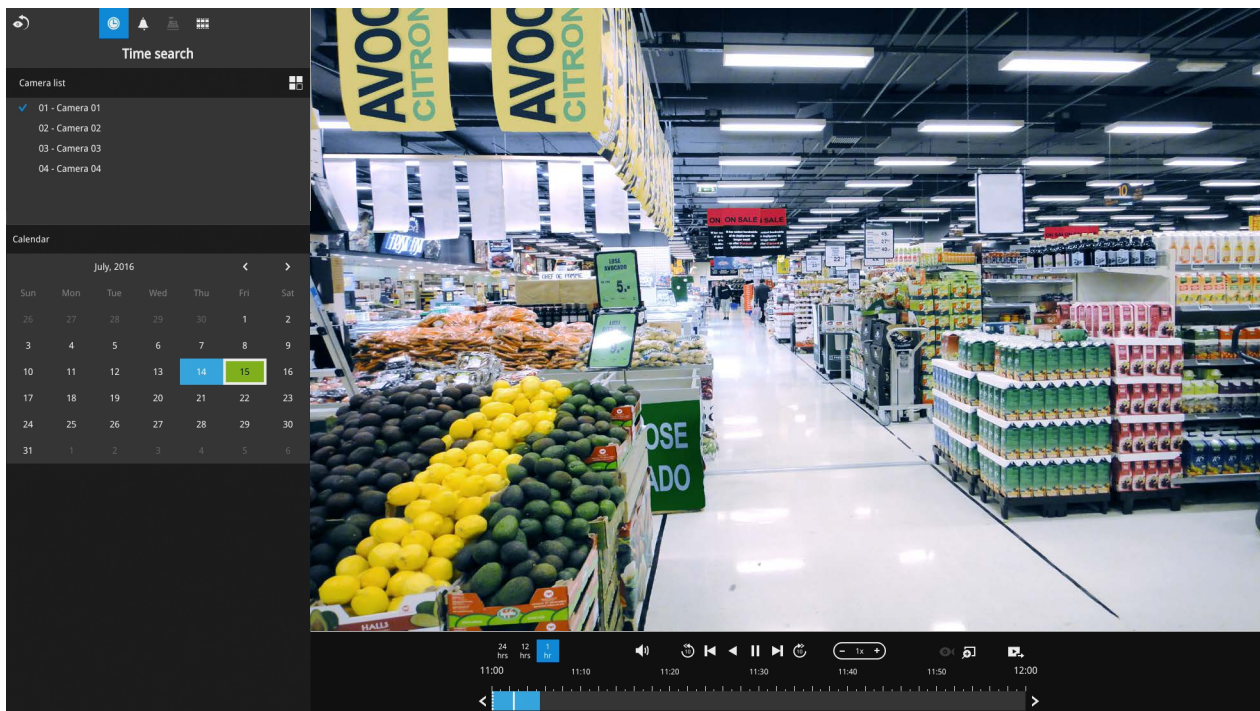

2-2-4. DI/DO




The DI/DO panel provides a glimpse of all DI and DO signal statuses from the connected cameras. You can manually trigger a digital output by clicking on its indicators.

When a digital input is triggered, its status will also be indicated on the panel.

WARNING:



Please note that DO is triggered by one click. You should then click again to disable the DO. Otherwise, the DO signal will be continuously triggered. As the result, if the DO is configured as an alarm trigger, many alarm messages will be generated.


2-2-5. Others

1. **Snapshot** : is used to take a snapshot from the camera currently selected. Note that this function only saves the snapshot (in JPEG) to a USB thumb drive.

IMPORTANT:

The USB thumb drive has to be one that is formatted in FAT format.

2. **Manual Recording** : Press the button to start a manual recording from a selected camera. Click again to stop the recording.
3. **Return** button : Click to return to the LiveView window.

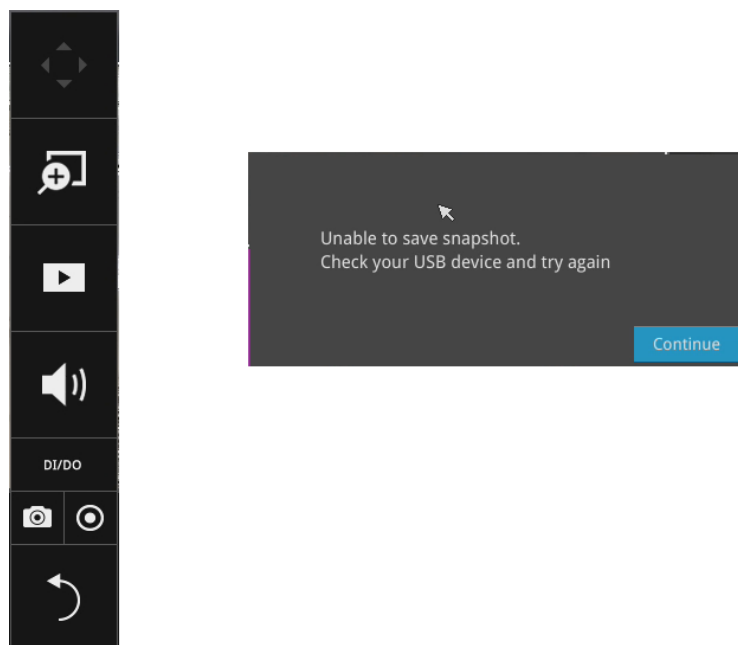


2-2-6. Right-click Commands

Left-click to select a camera. Right-click to display the selection menu.

1. **Camera information:** Click to display camera name, resolution, codec, or frame rate on the view cell. The information will display on the upper left corner of a view cell.
2. **Auto adaptive stream:** Default is enabled. The Auto adaptive stream automatically polls a video stream of a smaller resolution in order to reduce the streaming efforts. For example, when a view cell is placed in a 3x3 monitor layout, it may not be necessary to stream the video in its full resolution. In a full view, the system displays a video in its full resolution. Due to the size of view cells on your monitor, when in a multi-cell layout, the system automatically polls the camera for a smaller resolution stream.

The Auto adaptive stream feature can be disabled if you prefer consistent display resolution.

3. **Fit screen with ratio:** The NVR server automatically optimizes the display camera view cells. However, you can still select this option to display the camera's original aspect ratio: for example, the original video feed can be 4:3. Without the fit screen, every camera's image will be expanded to fill the view cell.
4. **Show tool bar:** You can hide the tool bars by deselecting this option.
5. **Show timestamp:** You can hide the time stamp bars by deselecting this option.
6. **Log in:** Log in to enable system configuration.

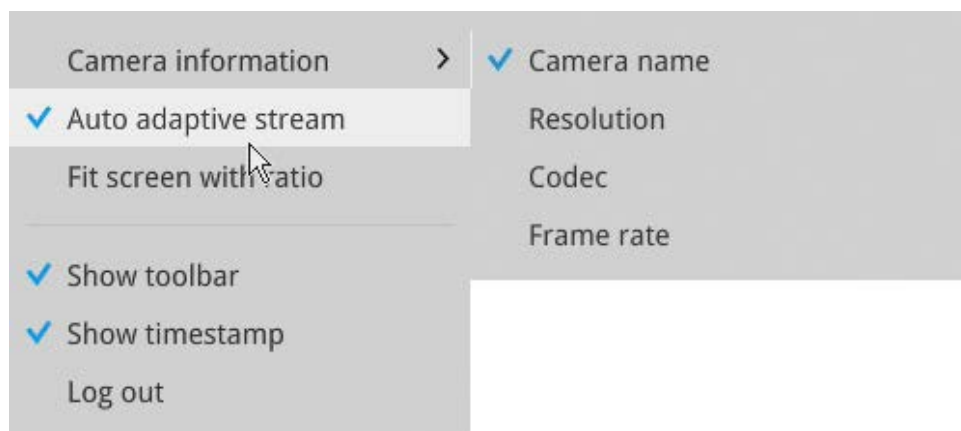


Chapter Three

Configuration Using the Local Console


The Main Control Portal

3-1. Layout

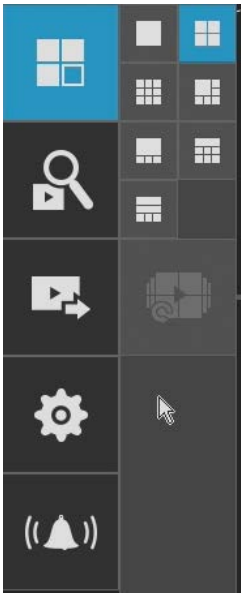

Move your mouse cursor across the screen to display the portal.

 
Since the ND8212W supports 4 CH, some of the layouts will not be available for it.

The first functional button is Layout. You can select the 1x1, 2x2, 3x3, 1+5, 1+3, 1P+6, 2P+3 layout as the screen display. If you select the single view layout, the rotation button  will appear. Click the rotation button below to let the system swap the display of different cameras by every 10 seconds.

The rotation speed is configurable via Settings > System > Display.

3-2. Search recording clips

3-2-1. Time Search



Search recording clips

Click the button to start searching for recorded clips. A confirm box will prompt. Enter User name and Password to proceed.

User name:


Password:

Login


The search and calendar view will appear. Select a day on the calendar when the recordings took place (the days with recorded clips will be highlighted in blue and green). Single-click on a day to begin playback and search.

The date highlighted in green indicates today, and the green indicator does not necessarily mean that there are recorded videos today.

The interface displays the 'Time search' section. On the left, a 'Camera list' shows six cameras (01 to 06) with checkboxes. Below it is a 'Calendar' for February 2017. The calendar shows dates from 29 to 11. Dates 2, 3, 4, 5, 6, 7, 8, 9, 10, and 11 are highlighted in blue, indicating recorded clips. Date 15 is highlighted in green, indicating today. On the right, two video playback windows are shown. The top window is labeled '03 - Camera 03' and shows a timestamp of '2016.05.16 17:15:41'. The bottom window is labeled '01 - Camera 01' and shows a timestamp of '2016.05.16 17:15:41'. Both windows show a 1x zoom level. The bottom of the interface features a playback control bar with a timeline from 0:00 to 20:00, a play button, and other controls.

Use the layout button  to adjust view cell arrangement on screen. You can retrieve the recorded videos from a max. of 4 cameras at the same time.


The timeline bar enables quick skimming through the recording. Its functions are described as follows:

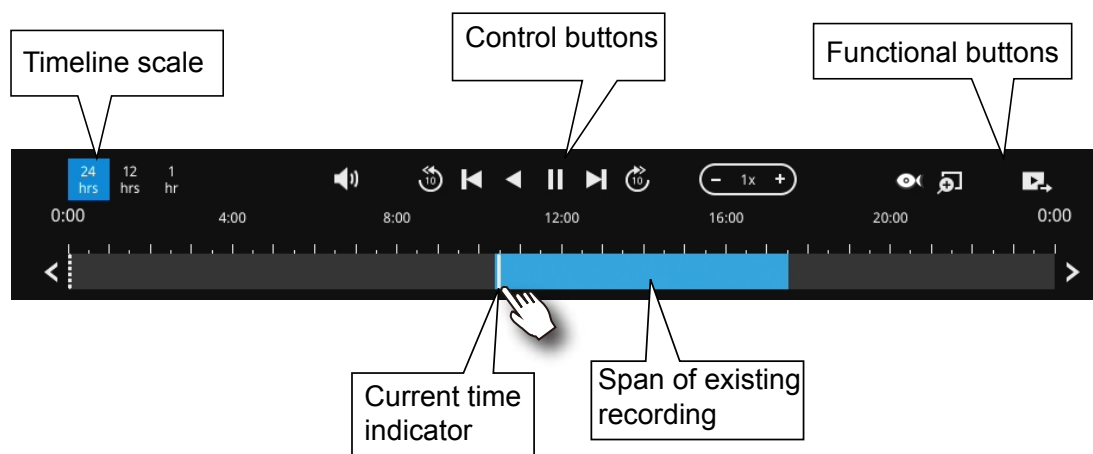


Buttons	Description
	Time scale selector. Use the buttons to select the span of time displayed on the tool bar.
	Audio volume tuner.
	Plays back from 10 seconds ago.
	Previous frame. (I-frame only)
	Next frame. (I-frame only) After you paused a playback, use this button to browse video frame by frame.
	Play backwards.
	Play. This button is available after you paused a playback.
	Pause, available when playing a recorded video.
	Each click on it speeds down by 1/2. The slowest speed is 1/16.
	Each click on it speeds up by 2x. The fastest speed is 16 times. The current playback status is indicated on the screen.
	This button appears when you select to playback a fisheye camera's recording. This avails the selection of dewarp modes usable during the playback.
	Digital zoom. This applies when a camera is displaying the full of its field of view. You can use the Digital zoom function to zoom in on the field of view.
	Export clips. Use this function to select a span of time you want to export to other medias.

By default, the playback starts from the beginning of a day's recording. While playing the recorded video, click on the timeline to replay a point in time in the video.

	Snapshot. Takes a snapshot of the current FOV. The Snapshot button has been moved to the right-hand side of each view cell.
	Click to expand the playback to full screen. This button is located on the upper right corner of the screen.

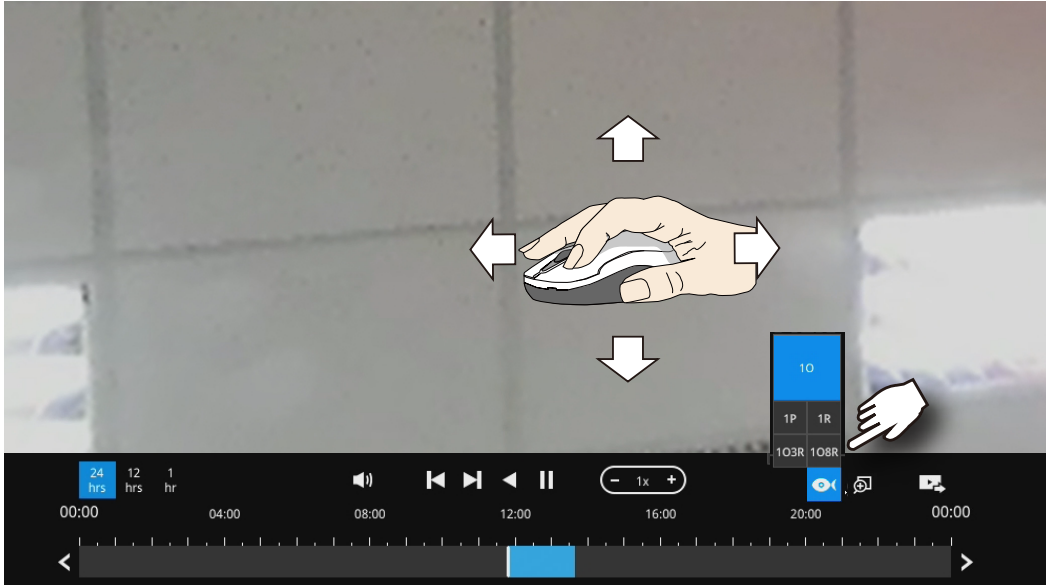

When playing the video recorded by a fisheye camera, the fisheye display options  will be available on screen. You can click to select the 1O, 1P (Panoramic), 1R (Regional), 1O3R (1 Original and 3 Regional), 1P3R, or 1O8R modes. If the 1P, 1R, 1O3R, 1P3R, or 1O8R mode is selected, you can exert the mouse control on screen, such as swiping the view, or hold down the mouse button and swipe the field of view.




Please refer to the User Manuals that came with the fisheye cameras, or page 136 for description of fisheye display modes.


Note that by default, audio is not recorded with the video recording. You can enable audio recording in Settings > Camera Management > Recording page. If ONVIF cameras' audio configuration is set to AMR or AAC, audio control will be unavailable.

Note that to export a video segment from the playback timeline,


1. Click on the **Export** button ,
2. Insert a USB drive formatted in the FAT format.
3. Select the "From time" by clicking on the timeline. Click on the Edit  button to change the From and To time. You can also manually enter the "From time" and the "To time."
4. Click on the "From time" tab using a single click.
5. Repeat steps 3 and 4 to configure the To time.
6. Click on the Export button.

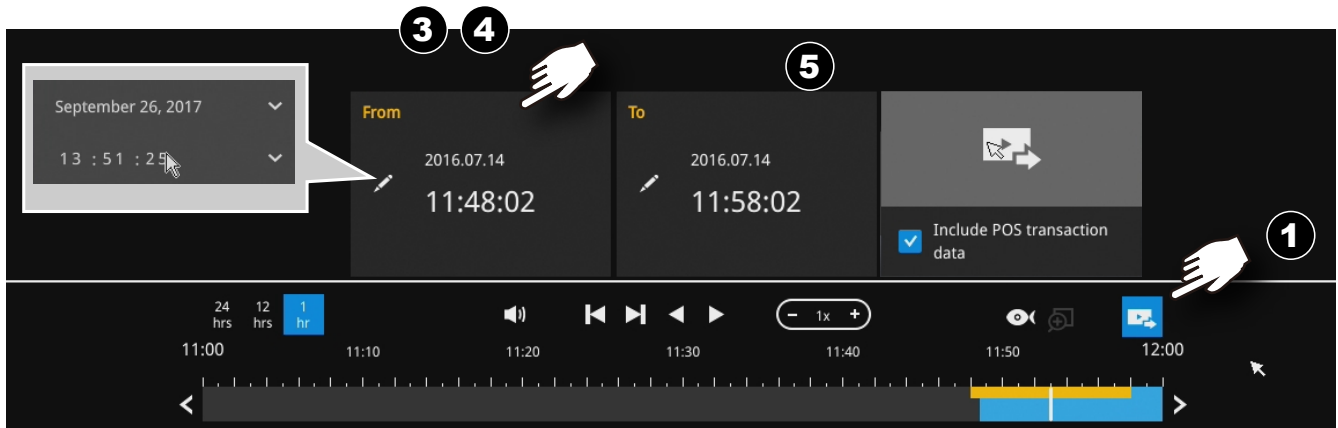

The export process is indicated on the right. Depending on the length of footage to be exported, this process can take several minutes.

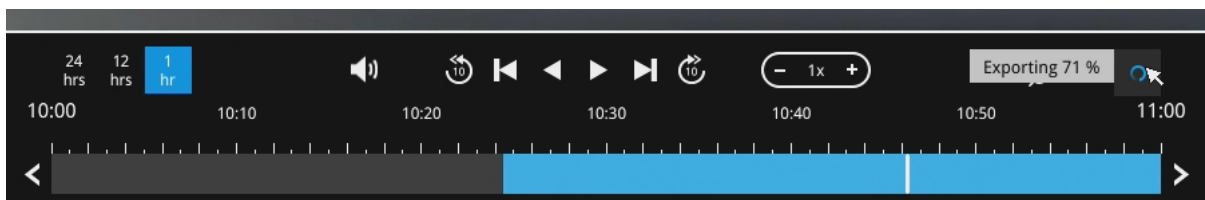


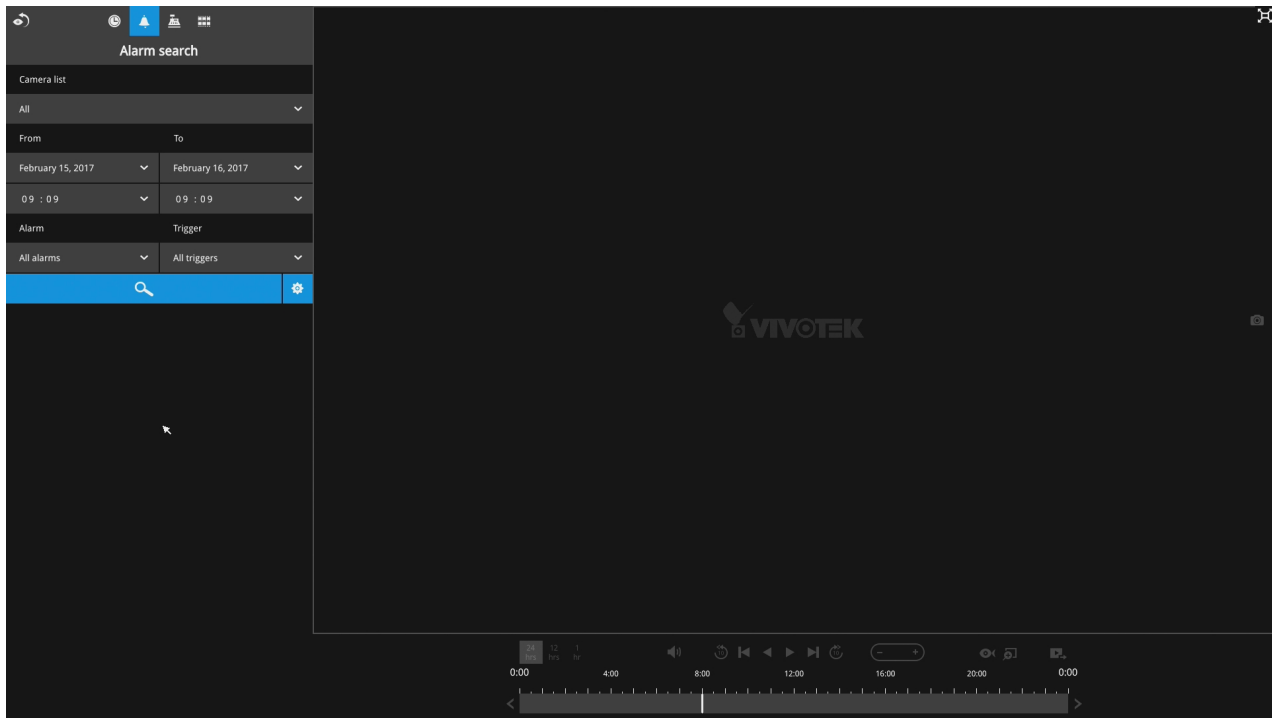
When completed, a message will display on screen.

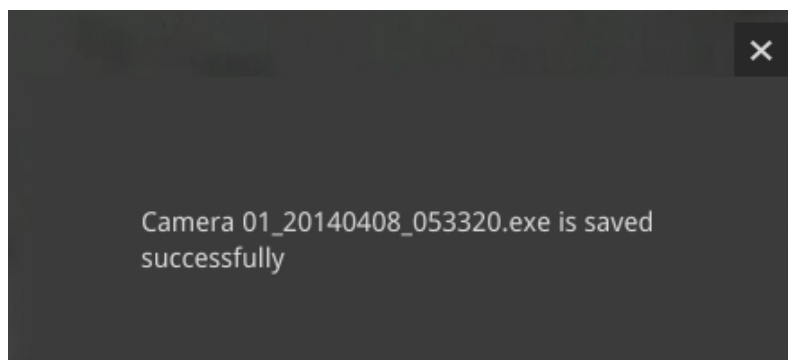


The default for export is the span of time starting from **5 minutes before** and ends at **5 minutes after** the point in time that is currently selected.

3-2-2. Alarm Search


Click on the **Alarm search** button  on the upper left of the screen to enter the Alarm Search panel.




You can specify the search criteria by selecting the devices to be involved in the Alarm search. The default is All.

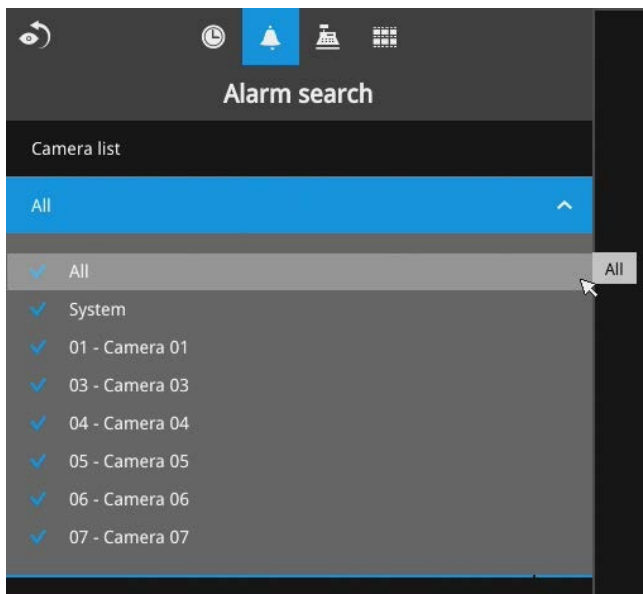

You can then specify the start time and end time to configure a span of time to be searched. Click to expand the calendar view and keypad to specify the From the To time to cover the possible time of occurrences.

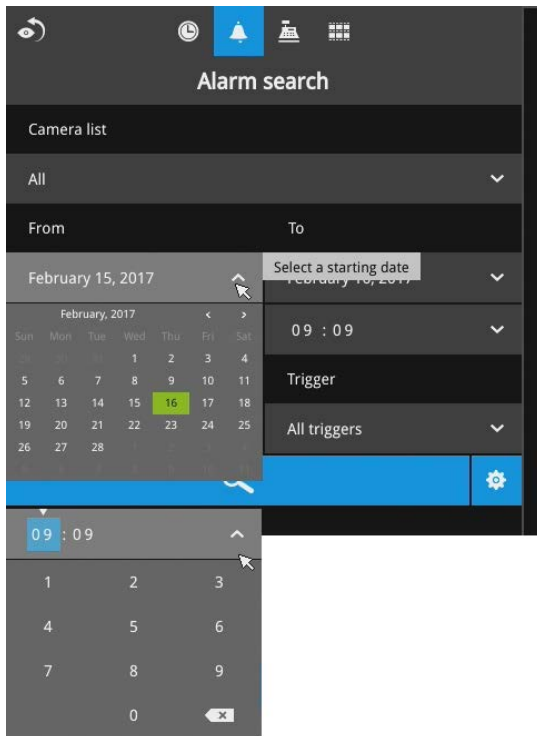

You can also determine what alarms will be included in the search. Select the pre-configured Alarms or select the Trigger types from the pull-down menus.

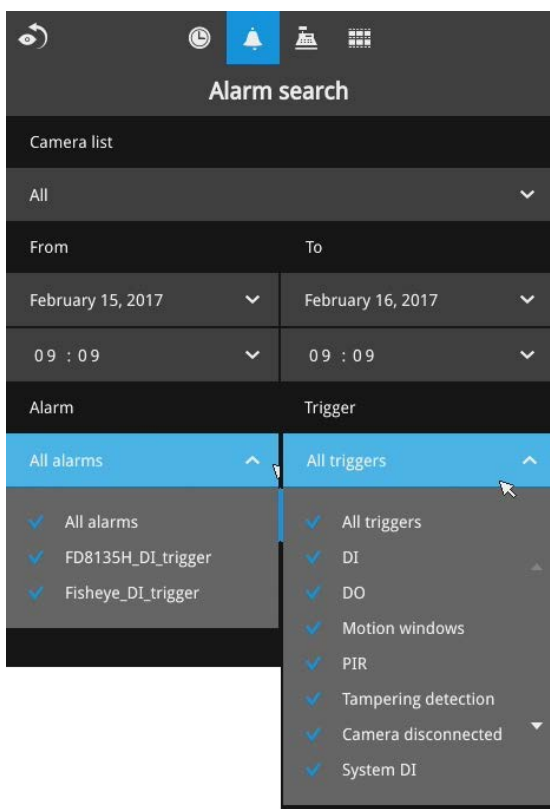

When done with the selection, click on the **Search** button. In the sample screen below, a list of alarms is displayed, and you can click on any of them to replay the moment when the alarm was triggered. The alarm-related recording will typically include a length of 5 seconds of pre-alarm and 20 seconds of post-alarm footage. A maximum of 300 seconds post-event recording is supported.

The screenshot displays the VIVOTEK NVR interface. On the left, the 'Alarm search' window is open, showing a list of 13 search results. The results table is as follows:

Alarm name	Trigger	Time
Fisheye_DI_trigg...	Camera 04 Camera DI	2017.02.16 09:05:48
Fisheye_DI_trigg...	Camera 04 Camera DI	2017.02.16 08:49:08
FD813SH_DI_tri...	Camera 07 Camera DI	2017.02.16 08:48:40
Fisheye_DI_trigg...	Camera 04 Camera DI	2017.02.15 17:26:33
FD813SH_DI_tri...	Camera 07 Camera DI	2017.02.15 17:26:19
FD813SH_DI_tri...	Camera 07 Camera DI	2017.02.15 17:24:49
Fisheye_DI_trigg...	Camera 04 Camera DI	2017.02.15 17:23:18
FD813SH_DI_tri...	Camera 07 Camera DI	2017.02.15 17:23:11
FD813SH_DI_tri...	Camera 07 Camera DI	2017.02.15 17:22:55
Fisheye_DI_trigg...	Camera 04 Camera DI	2017.02.15 17:00:23
Fisheye_DI_trigg...	Camera 04 Camera DI	2017.02.15 16:54:03
Fisheye_DI_trigg...	Camera 04 Camera DI	2017.02.15 16:46:58
Fisheye_DI_trigg...	Camera 04 Camera DI	2017.02.15 16:42:41

The main video area shows a high-angle view of a crowded store interior with people browsing at long wooden tables. Overlaid text on the video indicates the selected alarm: '03 - Camera 03', '2016.05.16', '17:15:41', and '1x'. At the bottom, a playback timeline is visible, showing a range from 17:00 to 18:00, with a current position at 17:15:41.

Up to 200 search result entries will appear. If more than 200 entries have been found, click on the New results button on the last entry page.

If two cameras participate in the recording of an alarm-related event, the footage of one camera will be played first, and then that of the other.

If user's operation takes place (pause, rewind, etc.) during the playback, the system will stop the consecutive playback of multiple alarm footages.



NOTE:

When the **Search** window is left unattended for 10 minutes, the NVR will return to the live view display. To enter the Search window, you will have to enter the user credentials again.


3-2-3. POS Search

Search by POS transaction: The NVR station can collect coordinated database information from a POS machine. This function provides access to the video clips associated with the sales records on the POS machine. Details of transaction can be listed on screen so that a manager can see the live view when controversial events occur.

To search the POS-related recordings,

1. Select the connected POS machine, if there are multiple (via the Settings > POS configuration).
2. If you know the approximate time of occurrence (bill void, content adjusted, shortage of products, and other frauds), use the calendar to select a time span.
3. Select a search condition, such as item name, subtotal, or the transaction number.
You can use the >, <, or = signs to specify the amount you are searching for. For example, key in >100 for amounts larger than \$100.
4. You can click the add button below to append more search conditions.
5. When done, click the search button.

* Note that when you need to search an item by its name, you can not enter Chinese on the local console. You can install VAST 2 CMS software and search the Chinese item name.

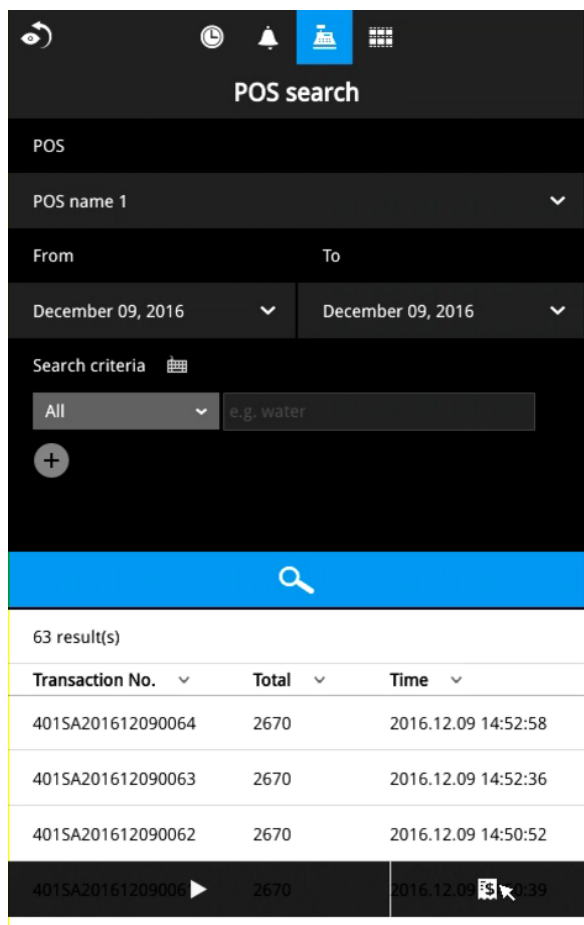

The screenshot shows the 'POS search' interface. At the top, there are icons for camera, clock, alarm, POS machine, and a grid. Below the title 'POS search', there is a 'POS' section with a dropdown for 'POS name 1'. Underneath, there are 'From' and 'To' date pickers, both set to 'December 09, 2016'. A 'Search criteria' section includes a dropdown set to 'All' and a text input field containing 'e.g. water'. Below this is a '+' button to add more criteria. A large blue button with a magnifying glass icon is used to execute the search. Below the button, it says '63 result(s)'. A table displays the results with columns for 'Transaction No.', 'Total', and 'Time'. The first three rows are highlighted in yellow, and the fourth row is highlighted in black.

Transaction No.	Total	Time
401SA201612090064	2670	2016.12.09 14:52:58
401SA201612090063	2670	2016.12.09 14:52:36
401SA201612090062	2670	2016.12.09 14:50:52
401SA201612090061	2670	2016.12.09 14:50:39

6. You can click on any of the search results to display the transaction data or playback the associated video.

The screenshot displays the VIVOTEK POS search interface. On the left, the 'POS search' panel shows filters for 'POS name 1', 'From' (December 09, 2016), and 'To' (December 09, 2016). The search criteria are set to 'All' and 'e.g. water'. A list of 63 results is shown, with columns for 'Transaction No.', 'Total', and 'Time'. The selected transaction is 401SA201612090061, which occurred on 2016.12.09 at 14:50:39.

Clicking on the transaction number opens a detailed view of the transaction data, including a list of items, quantities, and prices. The items listed are:

ITEM	QTY	PRICE
招牌蕎麥冷麵	1	140
日式山菜蕎麥冷	1	210
櫻花蝦芙蓉蕎麥	1	220
蕎麥麵冷	1	370
稻庭烏龍麵 冷	1	500
明太子山藥泥蕎	1	240
招牌蕎麥湯麵	1	140
日式山菜蕎麥湯	1	210
讃岐烏龍麵 溫	1	430
昆布山藥蕎麥冷	1	210
TOTAL	2670	
PAYMENT	2670	
CHANGE	0	

The video playback interface shows a fisheye view of the restaurant interior. A callout box labeled 'Playback' points to the video player, and another callout box labeled 'Displays transaction data' points to the transaction details panel.

7. You can export the related video if the need should arise. Make sure you select the "Include POS transaction data" checkbox when exporting the video.

The screenshot displays the VIVOTEK POS search interface. On the left, the 'POS search' panel shows filters for 'POS name 1', 'From' (December 09, 2016), and 'To' (December 09, 2016). The search criteria are set to 'All' and 'e.g. water'. A list of 63 results is shown, with columns for 'Transaction No.', 'Total', and 'Time'. The selected transaction is 401SA201612090061, which occurred on 2016.12.09 at 14:50:39.


Clicking on the transaction number opens a detailed view of the transaction data, including a list of items, quantities, and prices. The items listed are:

ITEM	QTY	PRICE
招牌蕎麥冷麵	1	140
日式山菜蕎麥冷	1	210
櫻花蝦芙蓉蕎麥	1	220
蕎麥麵冷	1	370
稻庭烏龍麵 冷	1	500
明太子山藥泥蕎	1	240
招牌蕎麥湯麵	1	140
日式山菜蕎麥湯	1	210
讃岐烏龍麵 溫	1	430
昆布山藥蕎麥冷	1	210
TOTAL	2670	
PAYMENT	2670	
CHANGE	0	

The video playback interface shows a fisheye view of the restaurant interior. A callout box labeled 'Playback' points to the video player, and another callout box labeled 'Displays transaction data' points to the transaction details panel.

The export video dialog box is open, showing the 'From' and 'To' time range (14:45:42 to 14:55:42). The 'Include POS transaction data' checkbox is checked, indicating that the transaction data will be included in the exported video.


8. Once exported, you should contact VIVOTEK's technical support for a custom-made StandalonePlayer. Copy the standalone player to the same folder of your exported video. Use it to playback the exported video.

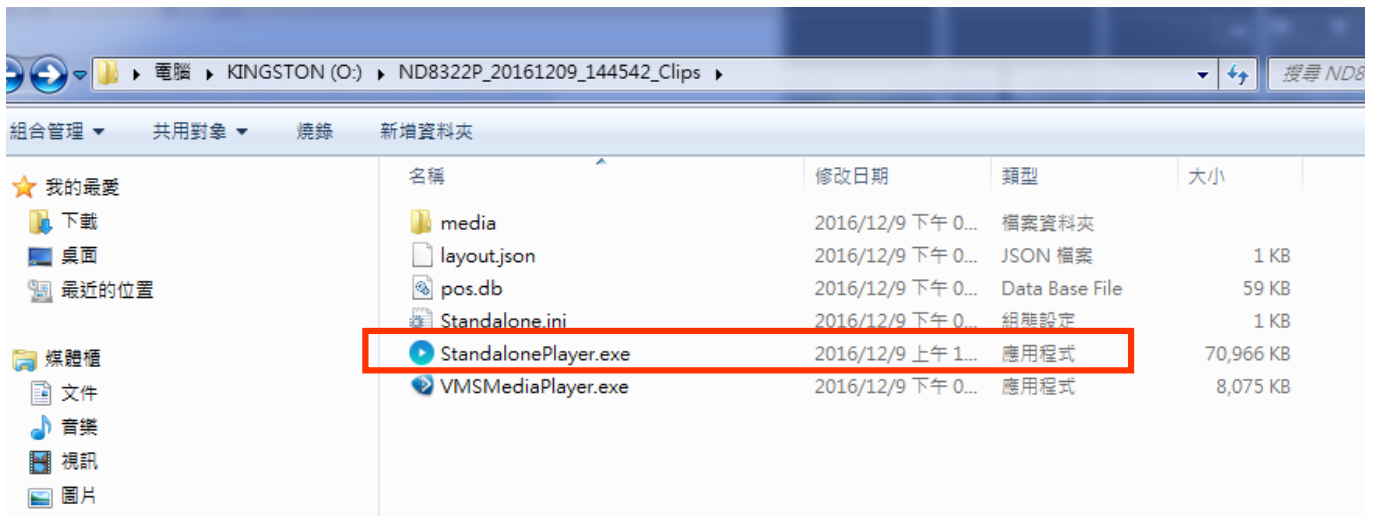

9. The transaction details will display along with the exported video.




3-2-4. Storyboard


The **Storyboard** interface  provides a glimpse of past recordings over a timeline. It looks like doing the film editing after a film was shot.

To enter the Storyboard window, click on the **Storyboard** shortcut on the upper-left of screen.

Below are the screen elements of the Storyboard window:

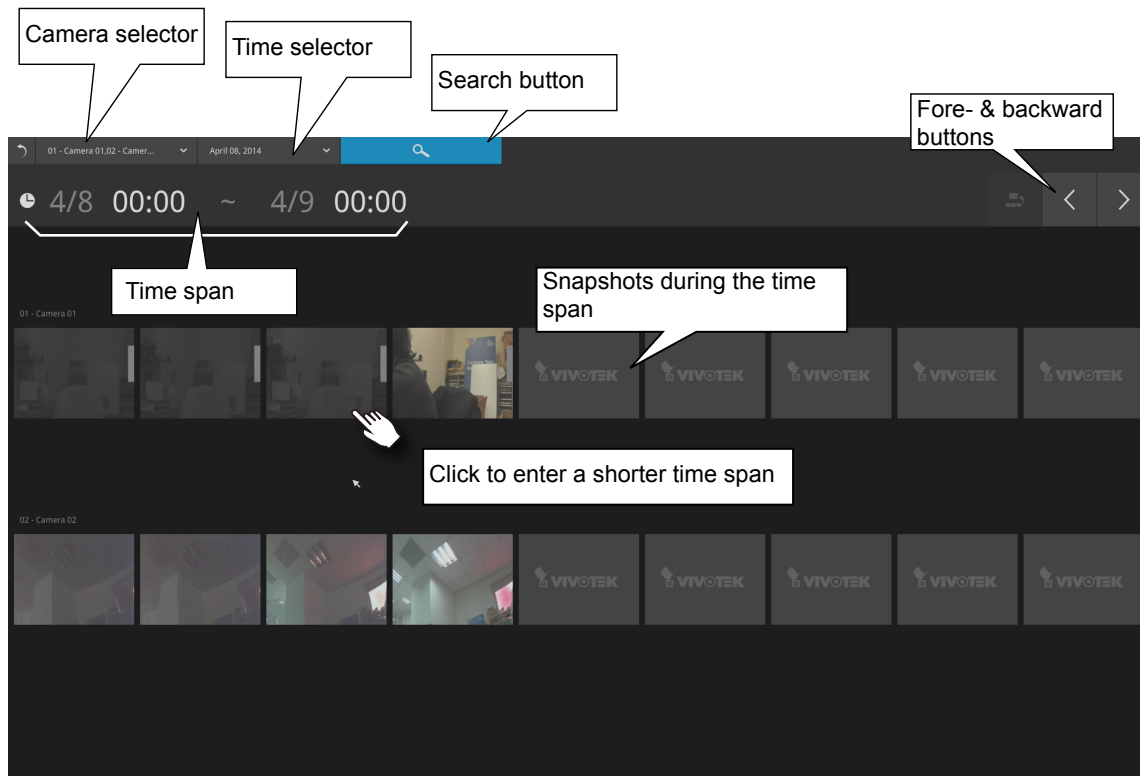


To search for a particular video footage, select the target cameras and the time of recording. On the Storyboard, the timelines of up to two cameras can be displayed.

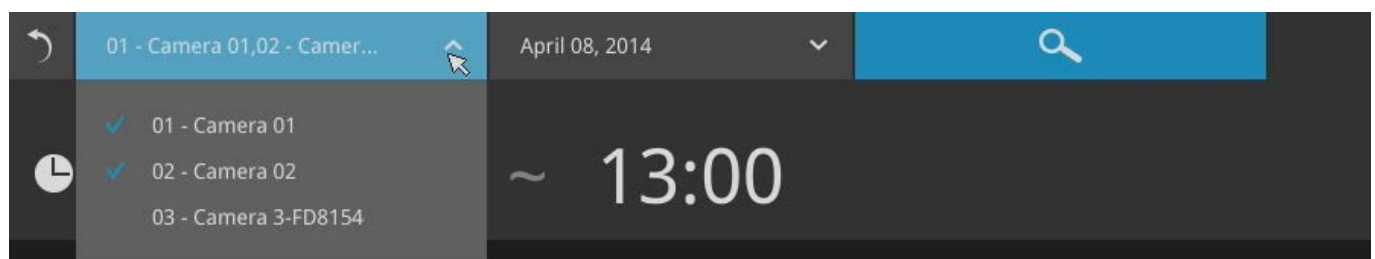

Click on the **Search** button .

Mouse over the line of snapshots to display its time of recording. Click on a snapshot of your interest. The time of recording is immediately displayed on top of it.

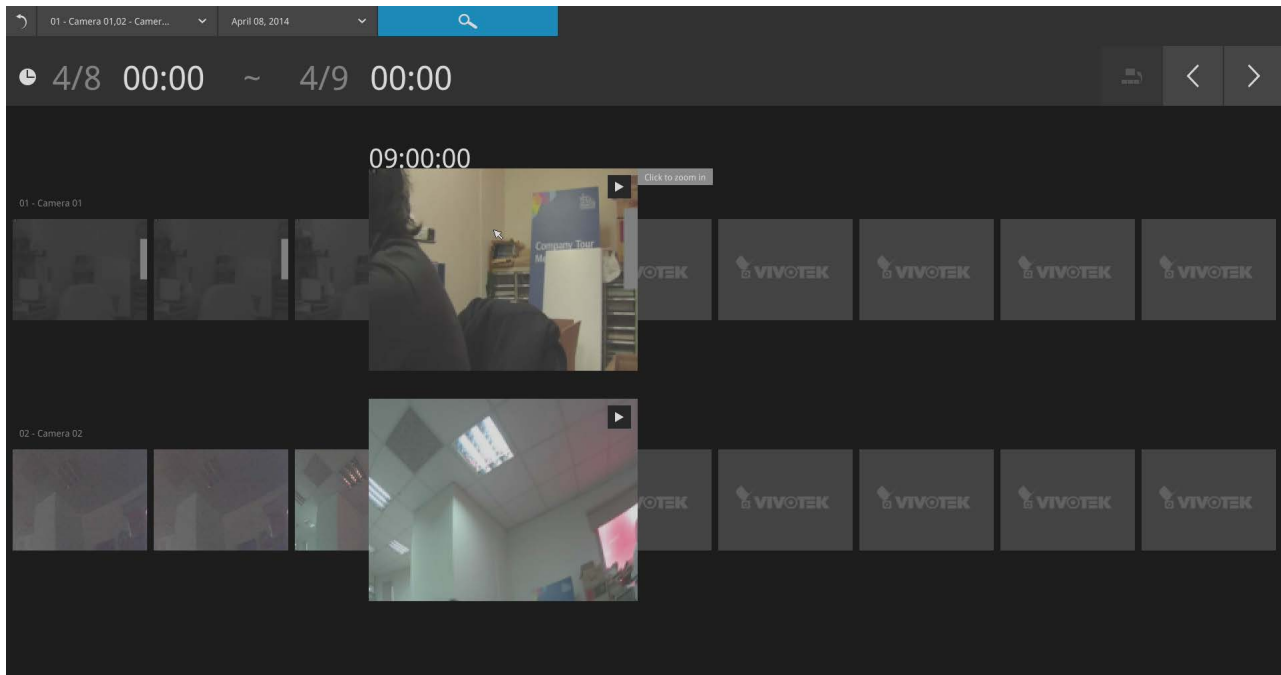


The detailed search is based on a narrow-down criteria. The search begins from a 24-hour time span, and then moving in to a 4-hour, 1-hour, 10-minutes, and 2-minutes span. When the screen displays a 24-hour span, each snapshot represents a 3-hour time span.

Each click on a snapshot brings you deeper into the timeline.

24 hour
↓
4 hour
↓
1 hour
↓
10 mins
↓
2 mins

Below is a sample screen showing the screen of a 60 minutes time span. Each snapshot represents a point in time 7.5 minutes apart. Click on a snapshot of your interest to get deeper into the timeline.

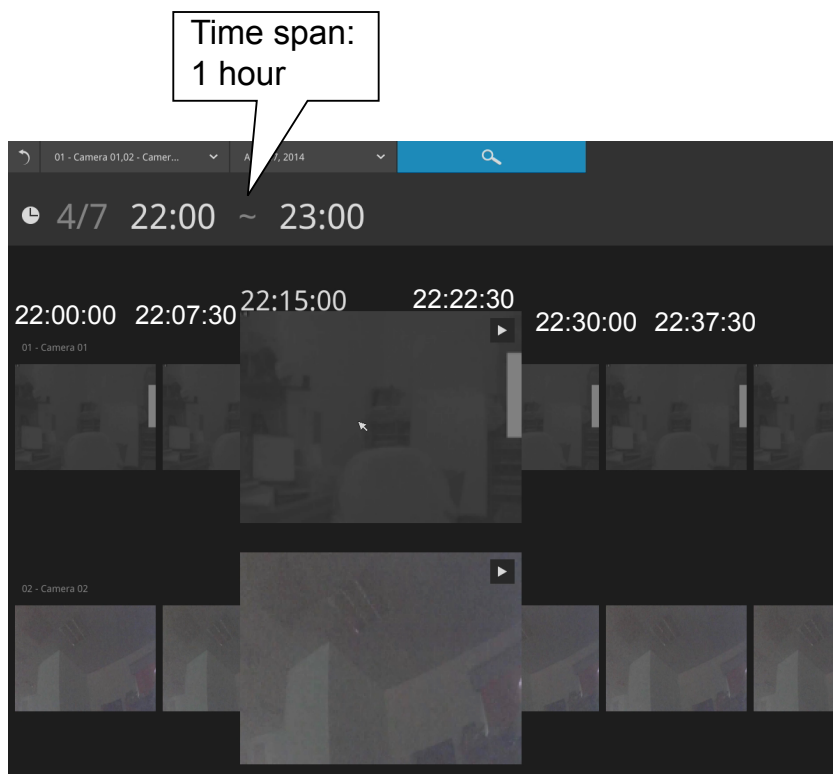


If you find yourself in the wrong segment on the timeline, use the buttons on the upper-right of the screen to travel.

The definitions of these buttons depend on the time span of your current position. For example, if you are in a 4-hour time span, the "Back to previous state button" will bring you back to the 24-hour time span.






The smallest time span is 2 minutes. And on the screen of 2-mins span, each snapshot represents a 15 seconds video footage.

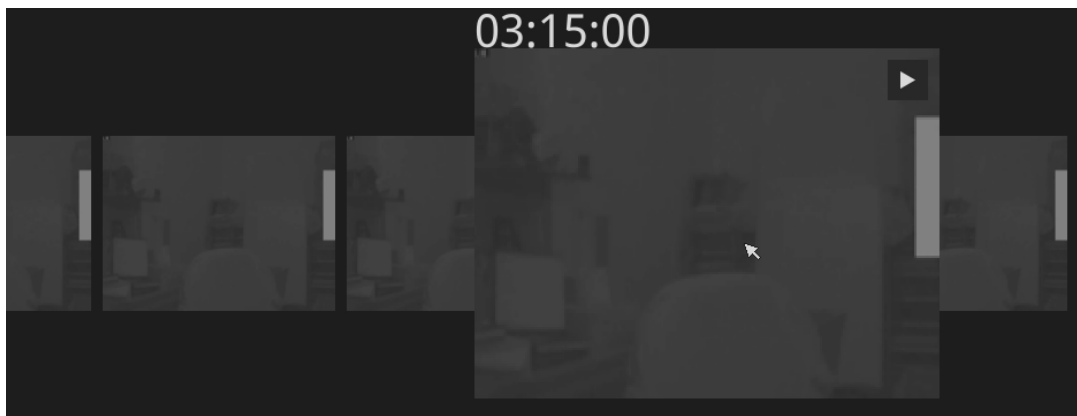You can then click on the **Play** button  to playback the recorded footage.

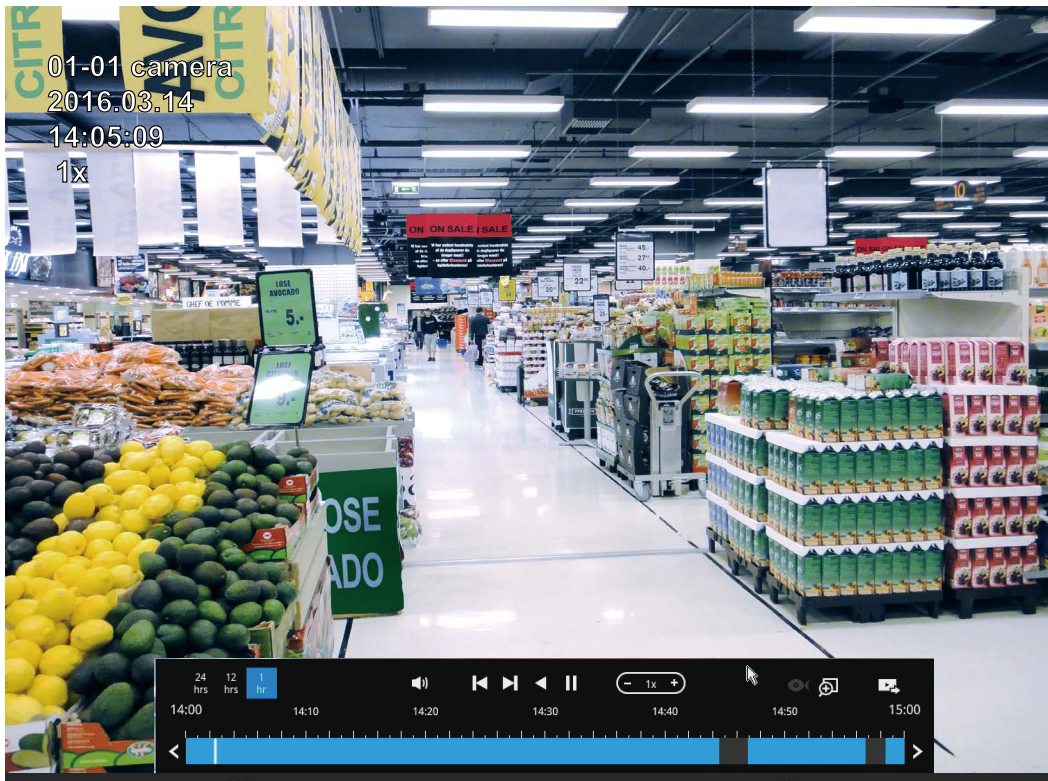

The playback window will appear. Please refer to page 48 for the operation details.



To return to the Live View window, click on the **Back to Search recording clips** button  and the **Back to Liveview** button  on the upper-left of the screen.


3-3. Export recordings

The **Export recordings** button allows users to directly select a piece of recordings by a specific camera, and export that to a USB thumb drive. Users can select one or multiple cameras, select a period of time in which the recording took place, and then click export.

The max. length of recording export is 24 hours.


To export recordings:

1. Attach a USB thumb drive formatted in FAT format to the NVR's USB port.
2. Select one or multiple cameras from the list.

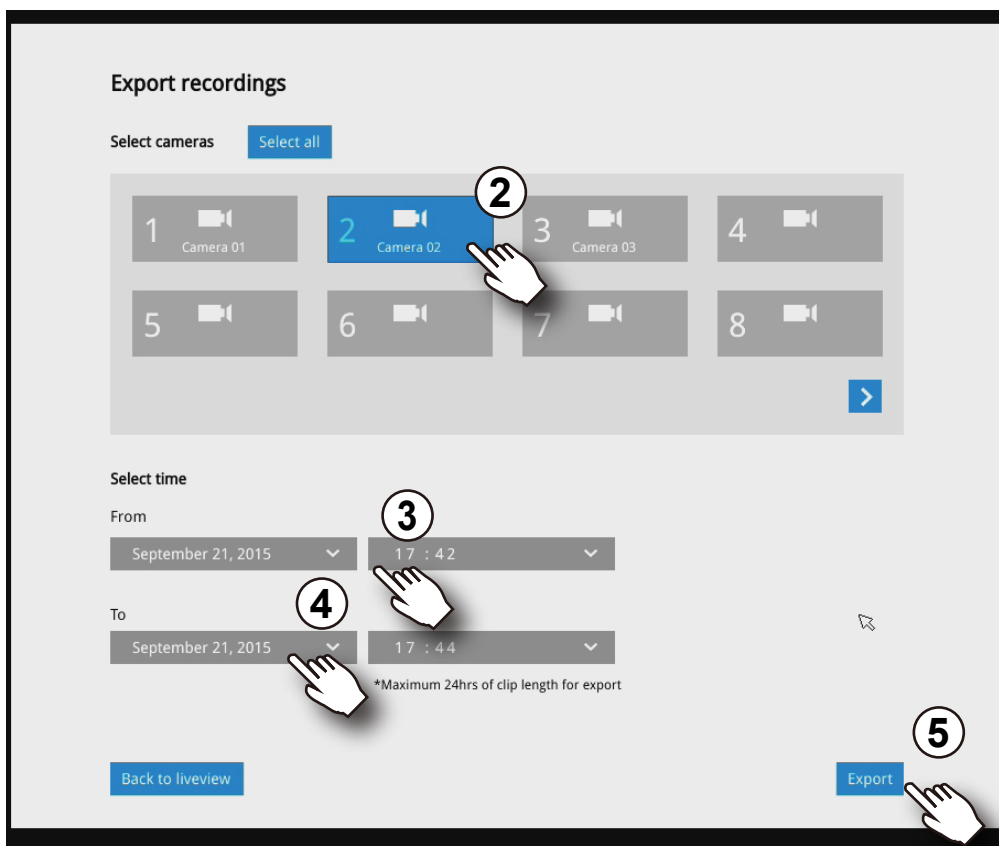


3. Select the start time of the period of recording time.
4. Select the end time of the period of recording time.
5. Click the Export button.

6. The Export progress will be shown.

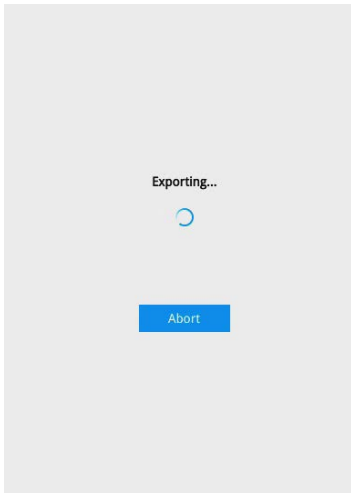


7. When the Export process is done, select to resume another export or go back to the live view.

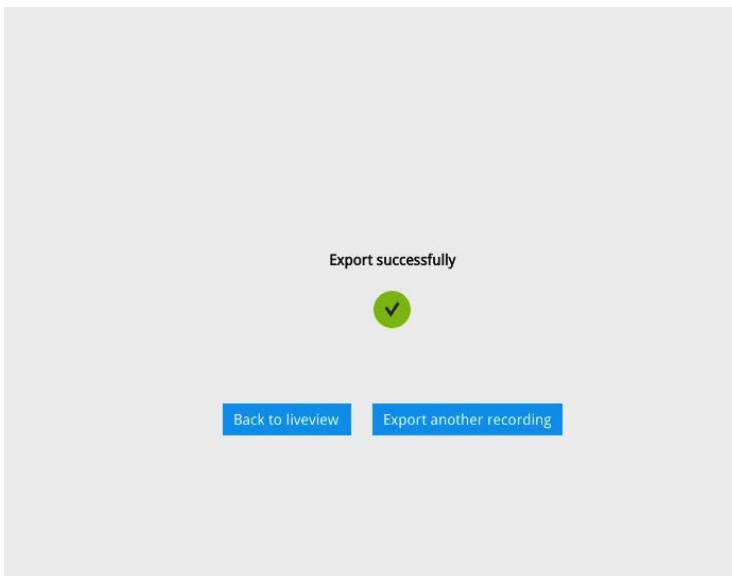


Note that the Export process can take a long time if the time span of the selected video is very long.


3-4. Settings

 3-4-1. Settings - Overview




Click the **Settings** button to start the camera and system settings window. A confirm box will prompt. Enter User name and Password to proceed.

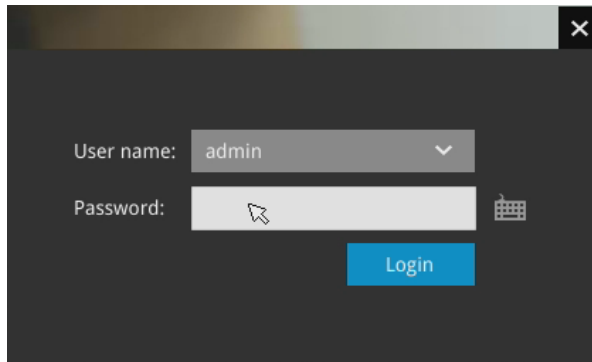


The system will default to the overview page displaying the camera connection and storage statuses. An empty position will be left in blank, and a disconnected camera will be indicated as . The storage volume usage is displayed as the used and unused spaces.

The **Stop Buzzer**, **Reboot**, and **Power-down** buttons are also available on this page. There are critical conditions that can sound the system buzzer, such as a disk failure.

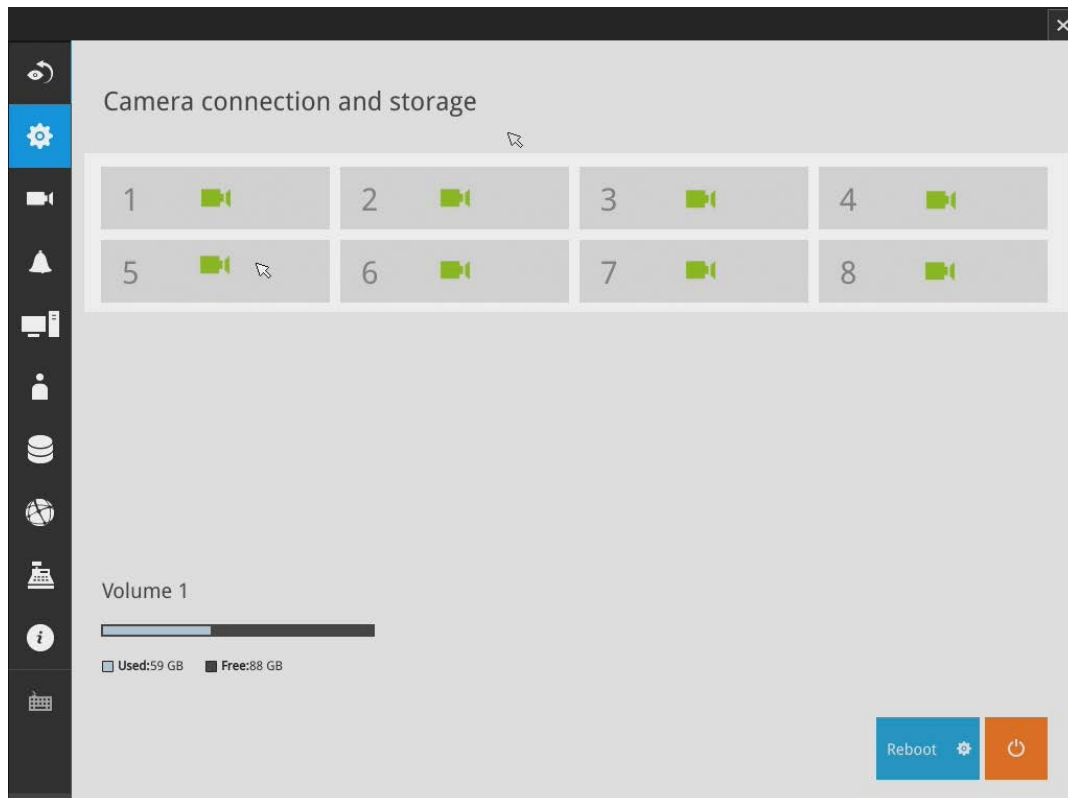


The Camera menu provides access to **Management**, **Recording**, **Media**, **Image**, **Motion detection**, and **PTZ settings** pages.

3-4-2. Settings - Camera - Management

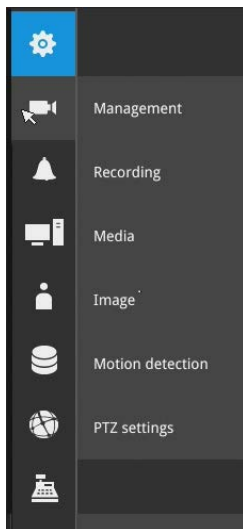


On the camera Management page, you can configure the following:


1. Recruit or disband cameras.
2. Create a camera name.
3. Assign User name and Password, or apply the credentials to all cameras in your configuration.
4. Change the Network settings.
5. Change the cameras' positions on the layout screen.

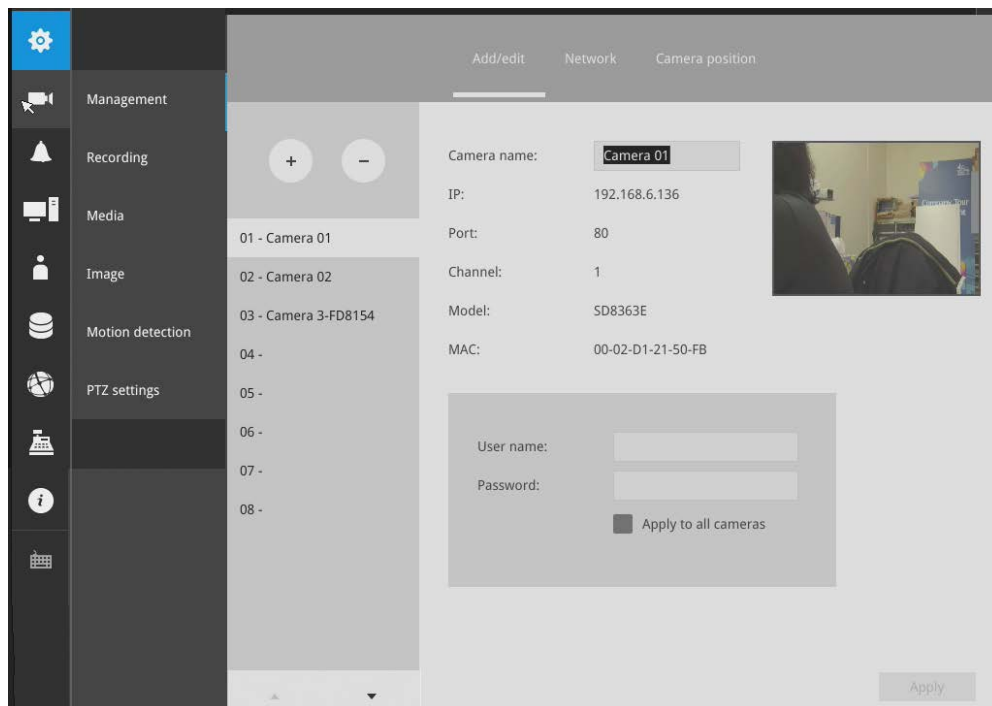


For camera name, you can enter up to 64 alphabetic and numeric characters including [0-9][a-z][A-Z][_][] . For user name and password, you can enter up to 64 alphabetic and numeric characters including [0-9][a-z][A-Z][!][\$][%][-][.][@]["][~].

 To recruit cameras:


1. Click on the Add  button. A list of cameras in the same subnet will appear.

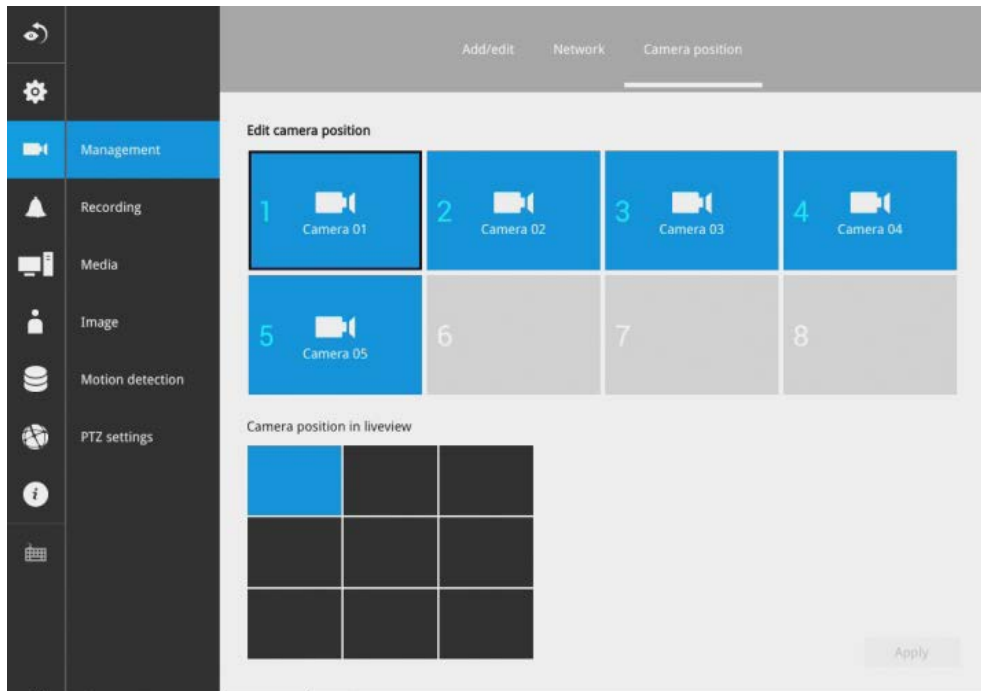


2. Click the **Add** button, the camera will be placed at an unoccupied position. You may also expand the menu on the side of the Add button to select a position number.
3. When a camera is added, it should appear on the graphical placement below.
4. Click the Apply button after you added cameras.
5. You may click the page back button  to return to the previous window.

To disband cameras:


1. Click on the Remove  button. A list of cameras will appear.

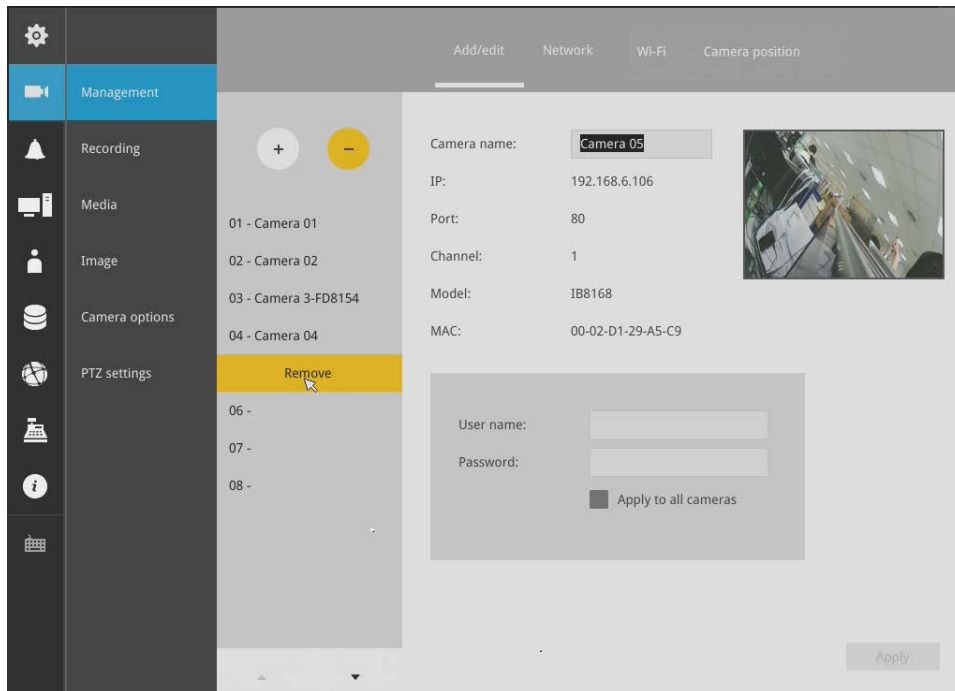

2. The **Remove** button will turn yellow . Mouse over to the camera you want to remove, and its entry will display the **Remove** message.
3. Click on the Remove message. The camera should then disappear from the camera list. The recording from that camera will also be discontinued.

Network

On the **Network** tabbed window, you can configure the network type, IP address, and the connection ports for video streaming.

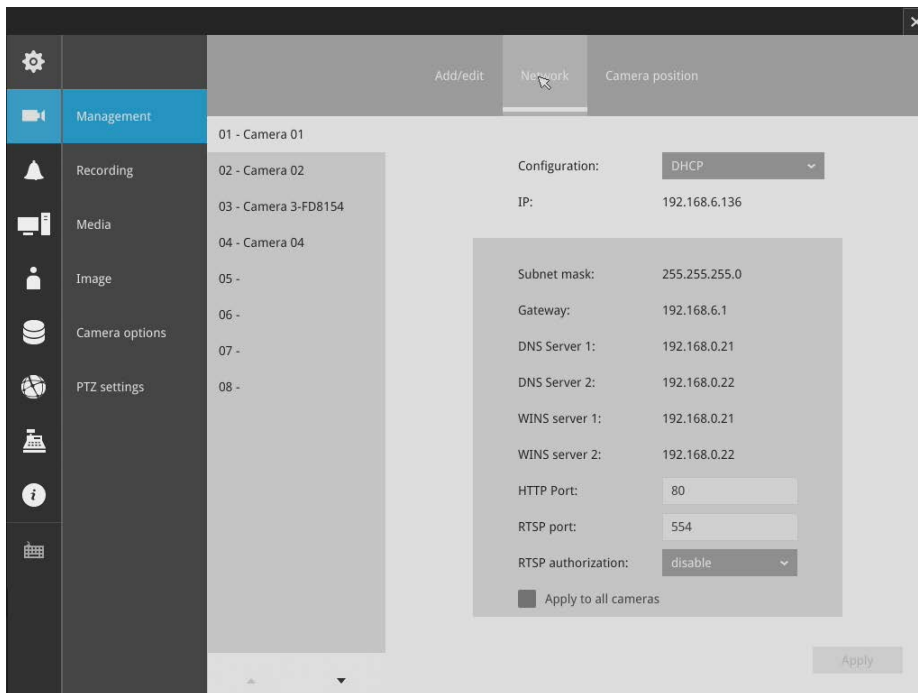


You can select DHCP as the method for cameras to acquire IP addresses, or you can manually configure static IPs for a single or all cameras. Using static IPs is recommended. Although the NVR can remember the MAC addresses of cameras, if IPs are changed under the DHCP configuration, your NVR may still fail to connect the cameras. Please consult your network administrator for details about network settings.

It is usually not necessary to change port numbers for the HTTP and RTSP ports unless there is a conflict in your network environment.

Wi-Fi

If wireless cameras are recruited by the NVR, its wireless connection details are shown in here.

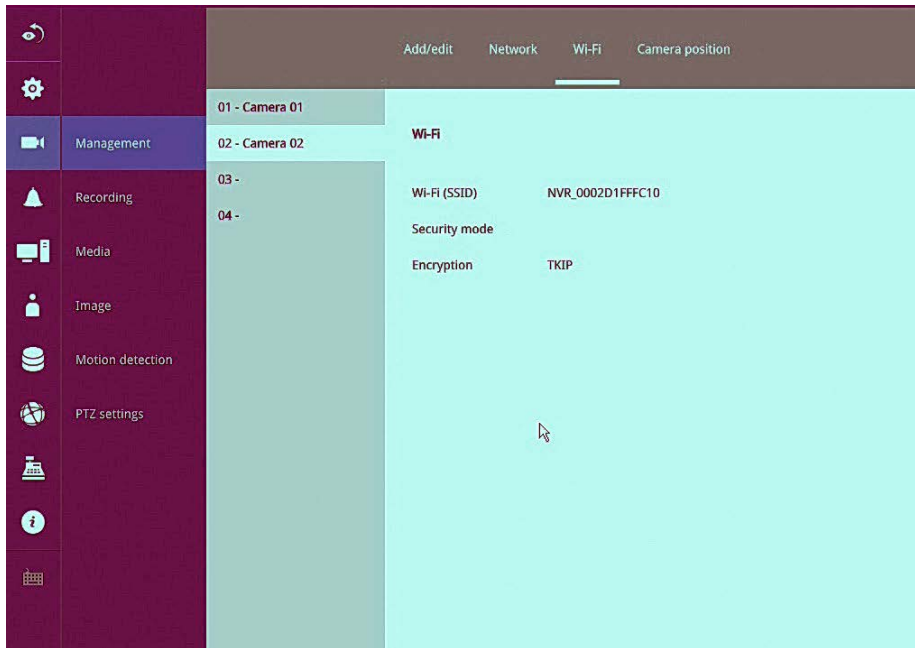


1. **Wi-Fi (SSID):** Displays the AP (Access Point) this camera is connected to.
2. **Security mode:** Displays the security mode used for the security encryption.
3. **Encryption:** Displays the encryption standard currently applied.

Camera position

To change a camera's position on the Liveview layout, click and drag a camera to an unpopulated position. Note that you cannot swap the positions of two cameras by dragging a camera onto a position already populated by the other. Also, the camera index number on the management list is not affected by the change of positions.

Click the **Apply** button for the configuration change to take effect. The position screen displays the current layout on the Liveview screen.

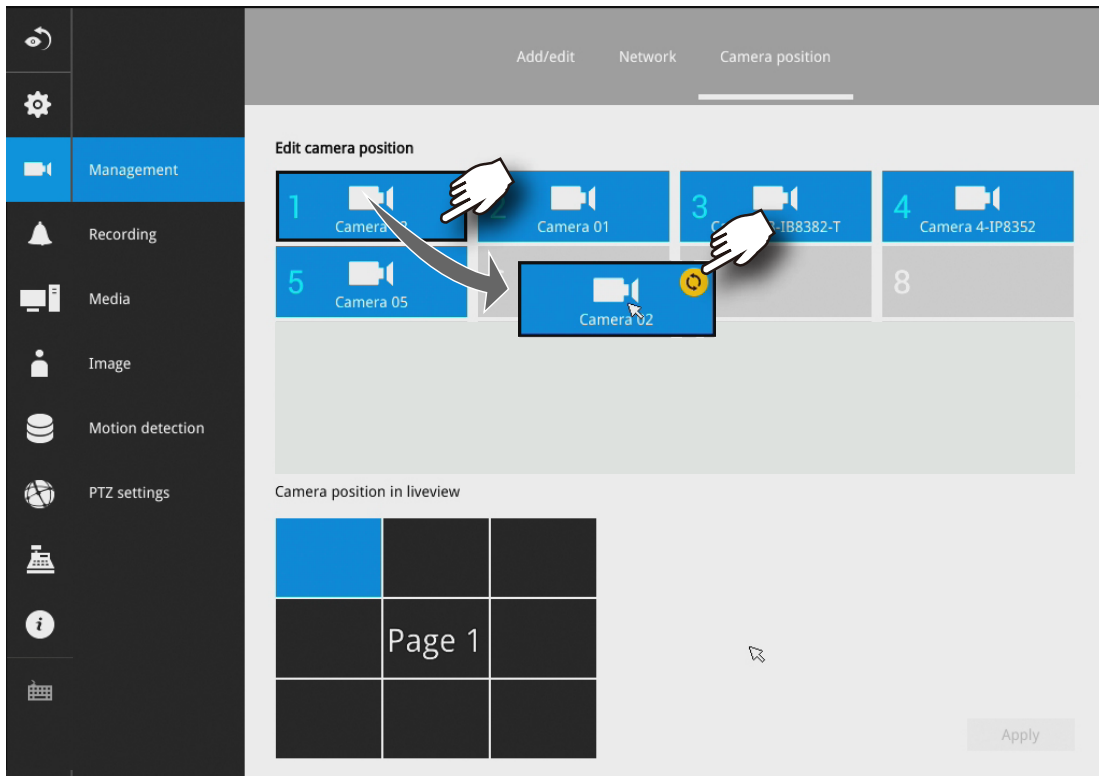


3-4-3. Settings - Camera - Recording


Recording options

On the camera Recording page, you can configure the following:

1. Configure the duration of camera events, for the concern that camera events can be too frequently triggered.
2. Enter the Pre- and Post-event recording time. The triggering events can be DI, DO, Motion detection, PIR, or Tampering detection. The max. length for pre- and post-event recording is 10 and 300 seconds.
3. The default recording stream is Stream 1, and the system automatically adjusts the frame rate, resolution, etc., for optimum performance. However, you can still change the streaming characteristics. Note that you can not assign the recording task to other video stream.
4. Watermark password: Configure a password in a length of 16 to 64 characters. You can use it to verify the authenticity of exported videos using the included video player.

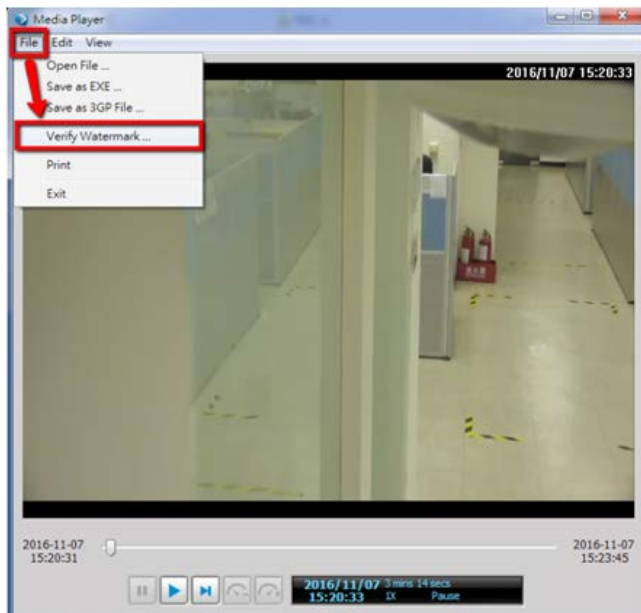

Select File > Verify Watermark.

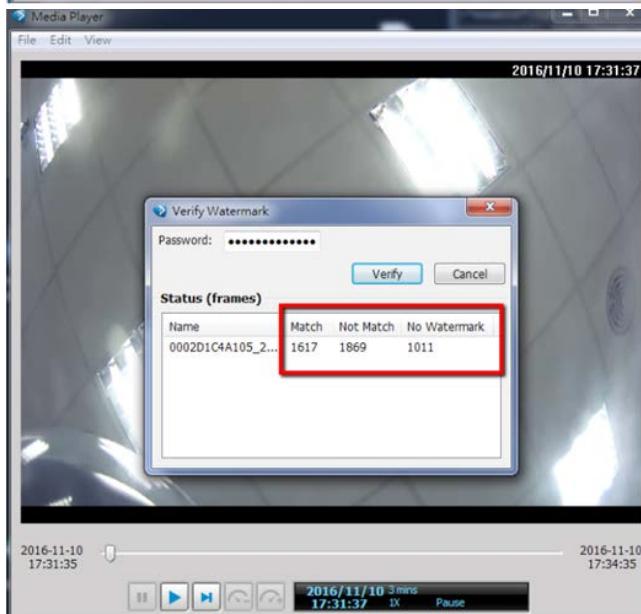


Enter the password to verify. If the Not match value is 0, the video is the original and has not been tampered with.

5. Enable the **Activity Adaptive Streaming** feature. This feature records the I-frames only when there are no activities detected. When activities or alarm are triggered, the camera raises the recording stream to the full frame rate. This feature can save tremendous amount of bandwidth.
6. Enable or disable audio recording. Note that audio transmission through HDMI cable is now available.
6. Change the life expectancy of the recording data. Default is 180 days. The minimum is one day. The maximum is 999 days.

When disk is becoming full or when the recored video reaches the preset days of preservation, recycle will take place. The recording for the oldest day will be deleted.

Note that your recording task will temporarily stop until server and cameras re-make the connection after you change your recording settings.

7. You can apply a typical configuration to all cameras using the Apply to all cameras checkbox.

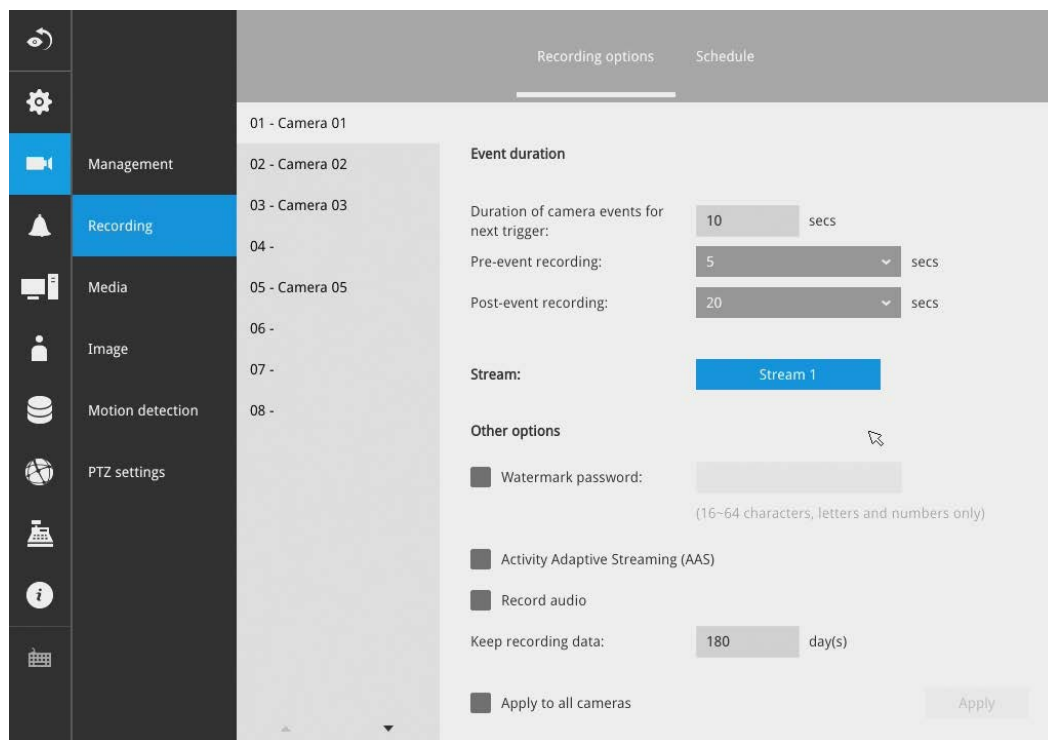




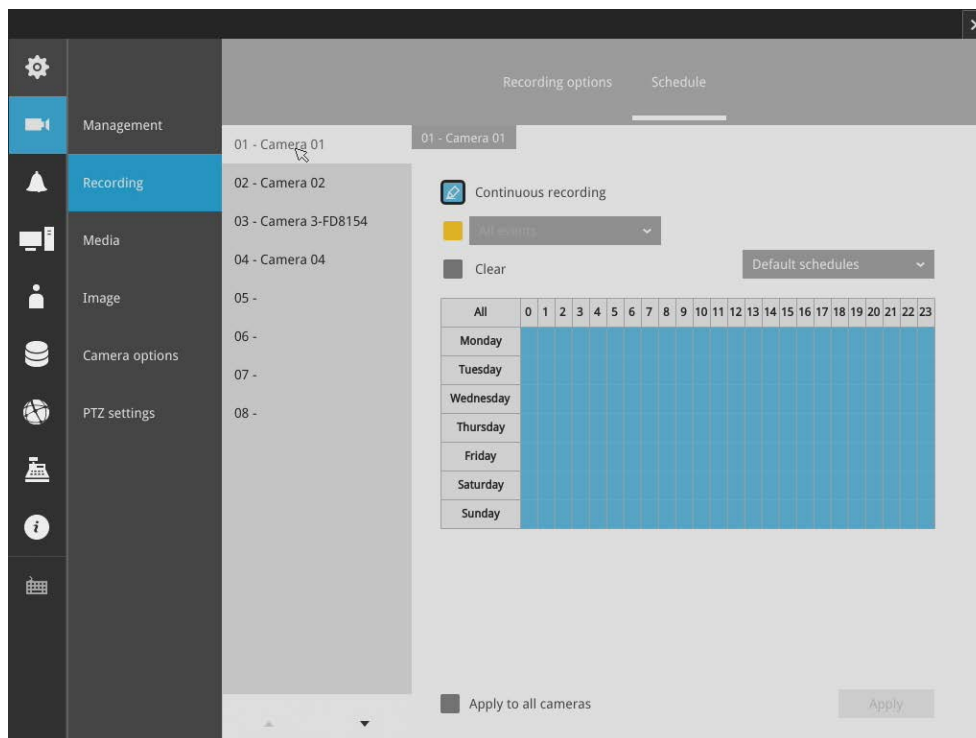
You can refer to the User Manuals that come with your network cameras for more discussions of these configurable options.

Note that the max. stream resolution is 8 megapixel.

Recording Schedule


By default, all video feeds from cameras are recorded at all time. You can modify the recording task using the schedule tool:

1. Click to select a recording condition's checkbox - 1. Continuous recording , 2. Event recording , and 3. Clear  (no recording).
2. Click and drag on the cells on the time table. For example, to stop the recording during a period of time, select the the Clear checkbox and move the cursor across the time table. The minimum unit on the table is half an hour.



3. You may also use the scheduler tool on the right to facilitate the process. You can select a condition checkbox, and then select the All day, Work hour, Off duty, Working day, Weekend options to apply a time selection.
4. Repeat the process on individual cameras or select the **Apply to all** checkbox if the schedule can apply to all cameras.
5. When done with the configuration, click on the Apply button.

Note that Event-triggered recording and continuous recording can not be take place at the same time.

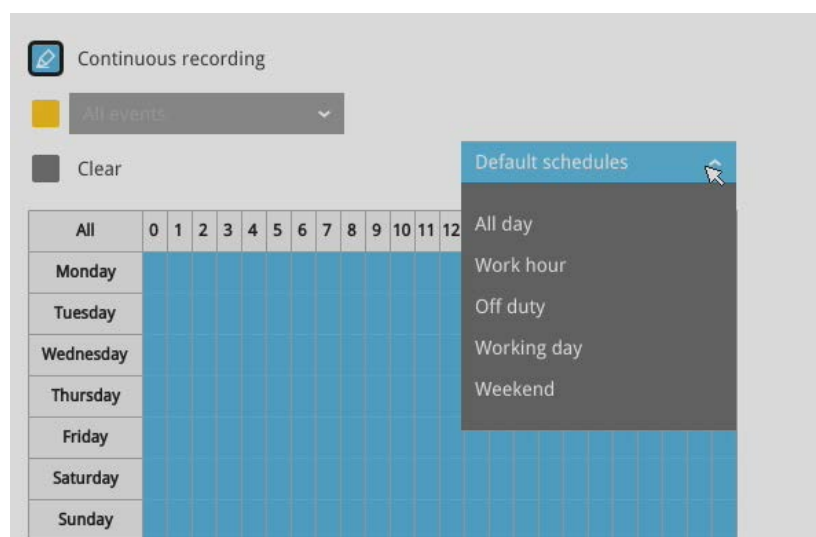

3-4-4. Settings - Camera - Media


Stream management

The stream here refers to the recording stream, namely, Stream 1. You can use these preset conditions to configure the resolution, image quality, frame rate, and the bandwidth consumption of the recording stream on this window.

Recommended setting	Configuration
Default	Medium resolution; full frame rate
High Quality	Guaranteed video quality set as Good; full frame rate
Economical	Medium to low resolution; frame rate at 5fps
High quality w/ economical	High resolution, Good image quality; frame rate at 5fps

With each recommended configuration applied, the estimated bandwidth consumption value is immediately calculated and displayed at the lower screen.

Click the **Apply** button for the configuration change to take effect.

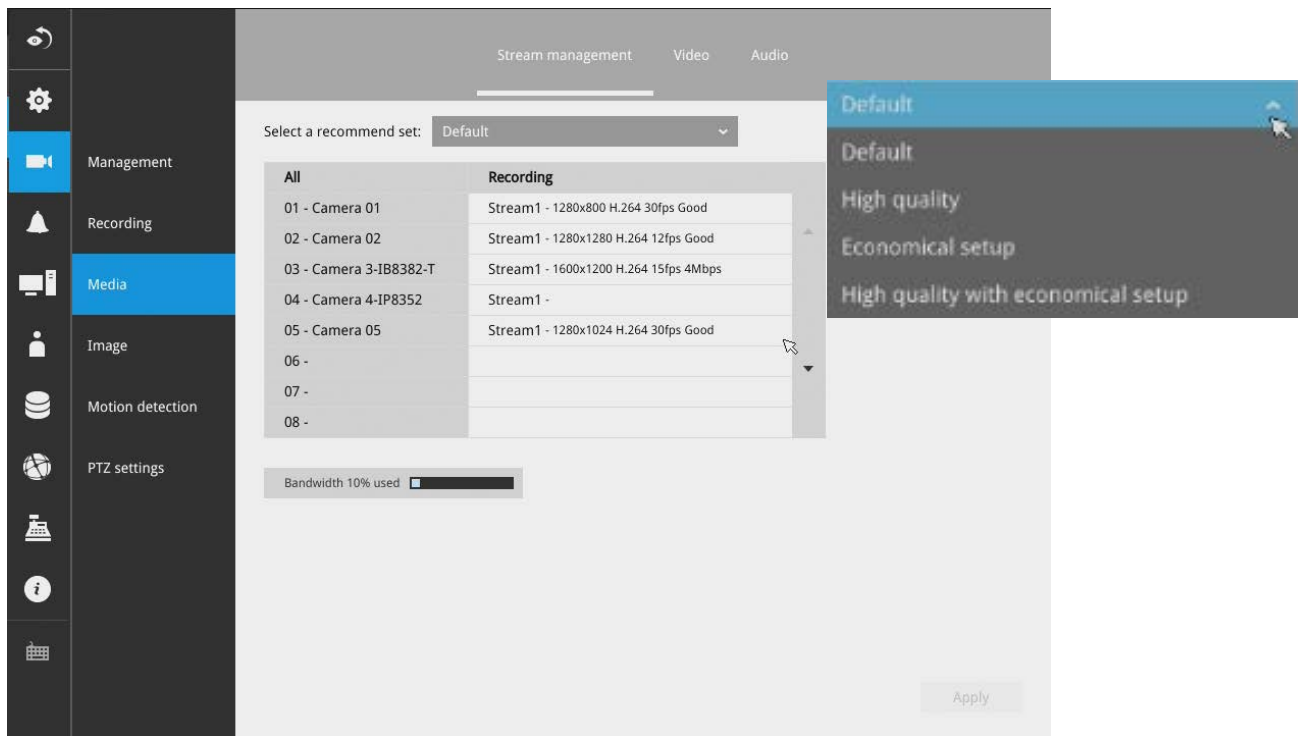


Video

The Video window allows you to configure all video streams (the no. of stream available can be different for different models). You can configure the following:

1. Codec: video compression codec in H.264, MPEG-4, or MJPEG. Note that MPEG-4 is not supported for Liveview.
2. Frame size: video resolution. Note that due to the limited CPU resources, you may not be able to change the resolution to a very high value, e.g., 5MP in the 1920x1920 resolution.
3. Maximum frame rate: the highest frame rate.
4. Intra frame period: How often an I-frame will be inserted into the video stream.
5. Smart Stream II: Some newer camera models come with Smart Stream features. Please refer to the next page for detailed information.
6. Video quality: You may either select Constant bit rate or Fixed Quality as the defining rules for video transmission:

Constant bit rate	Places a packet size threshold on video frames; This guarantees the frame rate per second performance, yet image quality can be compromised if bandwidth is not sufficient in your network environment.
Fixed Quality	Guaranteed video quality, and to ensure image quality, some frames may be dropped when bandwidth is not sufficient.


When done with the configuration, click the **Apply** button.

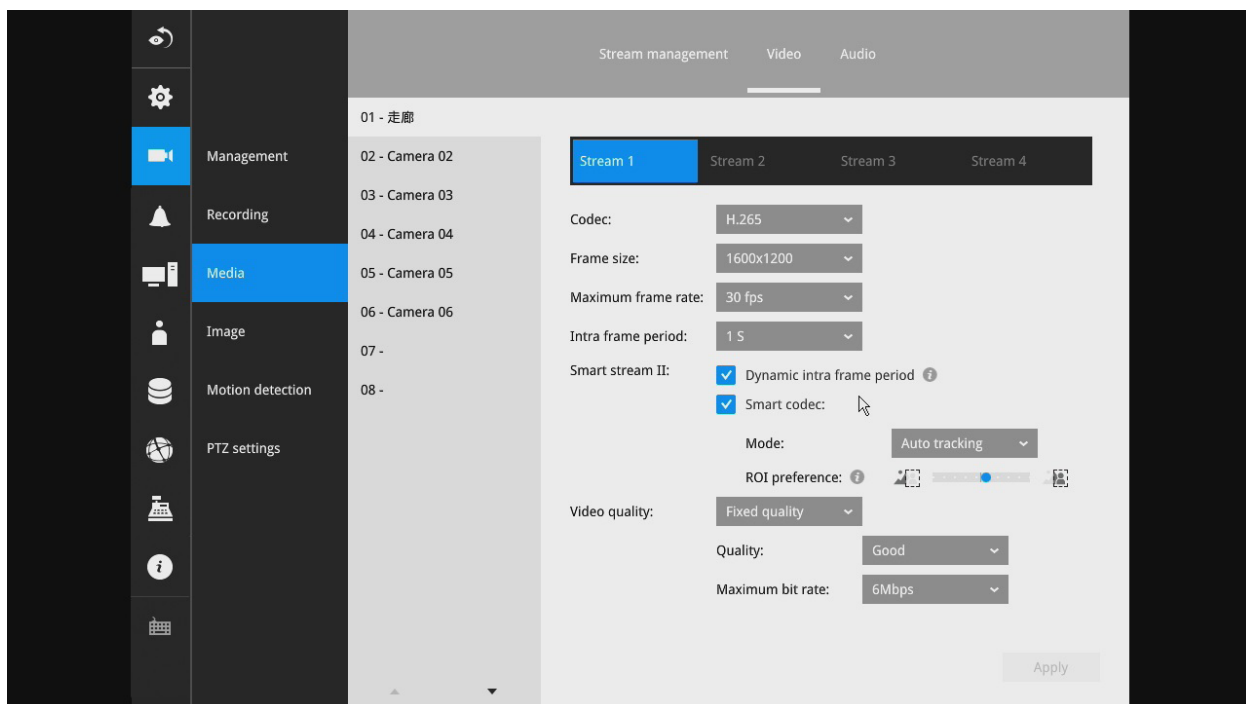

■ Dynamic Intra frame period

High quality motion codecs, such as H.265, utilize the redundancies between video frames to deliver video streams at a balance of quality and bit rate.


The encoding parameters are summarized and illustrated below. The **I-frames** are completely self-referential and they are largest in size. The **P-frames** are predicted frames. The encoder refers to the previous I- or P-frames for redundant image information.

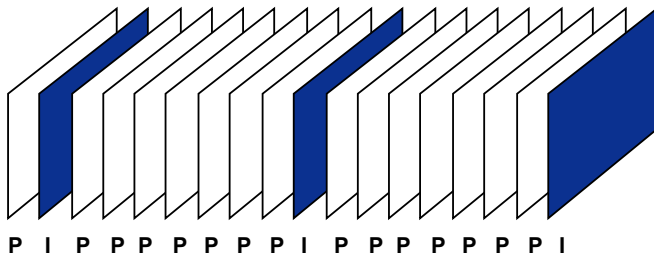

H.264/265 Frame Types


By dynamically prolonging the intervals for I-frames insertion to up to 10 seconds, the bit rates required for streaming a video can be tremendously reduced. When streaming a video of a static scene, the Dynamic Intra frame feature can save up to 53% of bandwidth. The amount of bandwidth thus saved is also determined by the activities in the field of view. If activities occur in the scene, firmware automatically shortens the I-frame insertion intervals in order to maintain image quality. In the low light or night conditions, the sizes of P-frames tend to be enlarged due to the noises, and hence the bandwidth saving effect is also reduced.

Streaming a typical 2MP scene normally requires 3~4Mb/s of bandwidth. With the Dynamic Intra frame function, the bandwidth for streaming a medium-traffic scene can be reduced to 2~3Mb/s, and during the no-traffic period of time, down to 500kb/s.

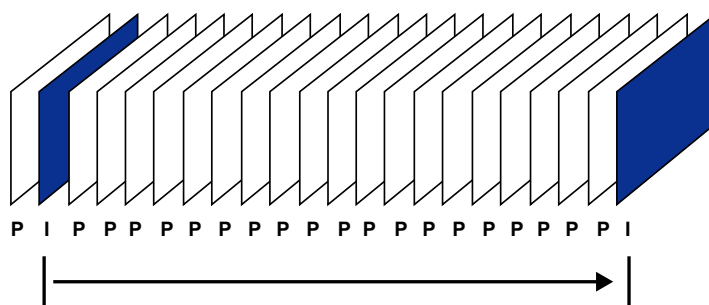

Static scene

Dynamic Intra Frame w/
static scenes

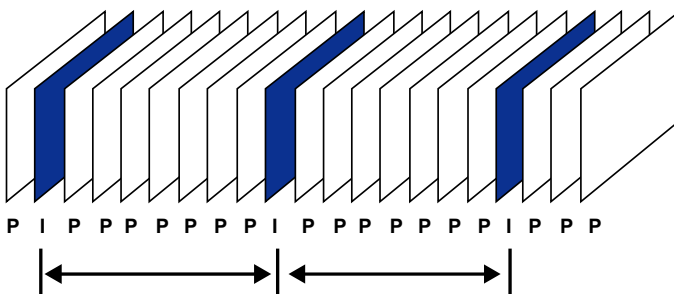

Activities

Dynamic Intra Frame w/
activities in scenes

- **Smart codec** effectively reduces the quality of the whole or the non-interested areas on a screen and therefore reduces the bandwidth consumed.

You can manually specify the video quality for the foreground and the background areas.




Slide bar to the right - higher quality in the ROI areas
Slide bar to the left - higher quality in the non-ROI areas.

Select an operation mode if Smart codec is preferred.

- **Auto tracking:** The Auto mode configures the whole screen into the non-interested area. The video quality of part of the screen returns to normal when one or more objects move in that area. The remainder of the screen where there are no moving objects (no pixel changes) will still be transmitted in low-quality format.
- **Manual:** The Manual mode allows you to configure 3 ROI windows (Region of Interest, with Foreground quality) on the screen. Areas not included in any ROI windows will be considered as the non-interested areas. The details in the ROI areas will be transmitted in a higher-quality video format.

As illustrated below, the upper screen may contain little details of your interest, while the sidewalk on the lower screen is included in an ROI window.

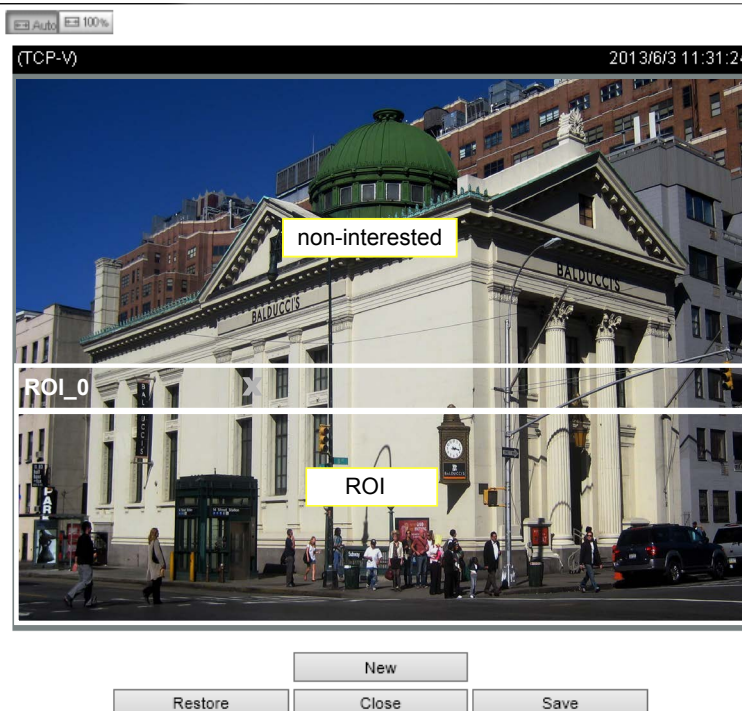

As the result, the lower screen is constantly displayed in high details, while the upper half is transmitted using a lower-quality format. Although the upper half is transmitted using a lower quality format, you still have an awareness of what is happening on the whole screen.



- **Hybrid:** The major difference between the “Manual” mode and the “Hybrid” mode is that:

In the “**Hybrid**” mode, any objects entering the non-interested area will restore the video quality of the moving objects and the area around them. The video quality of the associated non-interested area is immediately restored to normal to cover the moving objects.

In the “**Manual**” mode, the non-interested area is always transmitted using a low-quality format regardless of the activities inside.

Quality priority: ([Help](#))



- **Quality priority:** Use the slide bar to tune the quality contrast between the ROI and non-interested areas.


The farther the slide bar button is to the right, the higher the image quality of the ROI areas. On the contrary, the farther the slide bar button to the left, the higher the image quality of the non-interested area.

In this way, you may set up an ROI window as a privacy mask by covering a protected area using an ROI window, while the remaining screen become the non-interested area. You may then configure the non-interested area to have a high image quality, or vice versa.

You should also select the Maximum bit rate from the pull-down menu as the threshold to contain the bandwidth consumption for both the high- and low-quality video sections in a smart stream.

Audio

The Audio window allows you to configure all audio codec, sampling rate, and Microphone input gains. Depending on design of the camera models, some codecs may not be available. Also, there are cameras that come without embedded microphones.

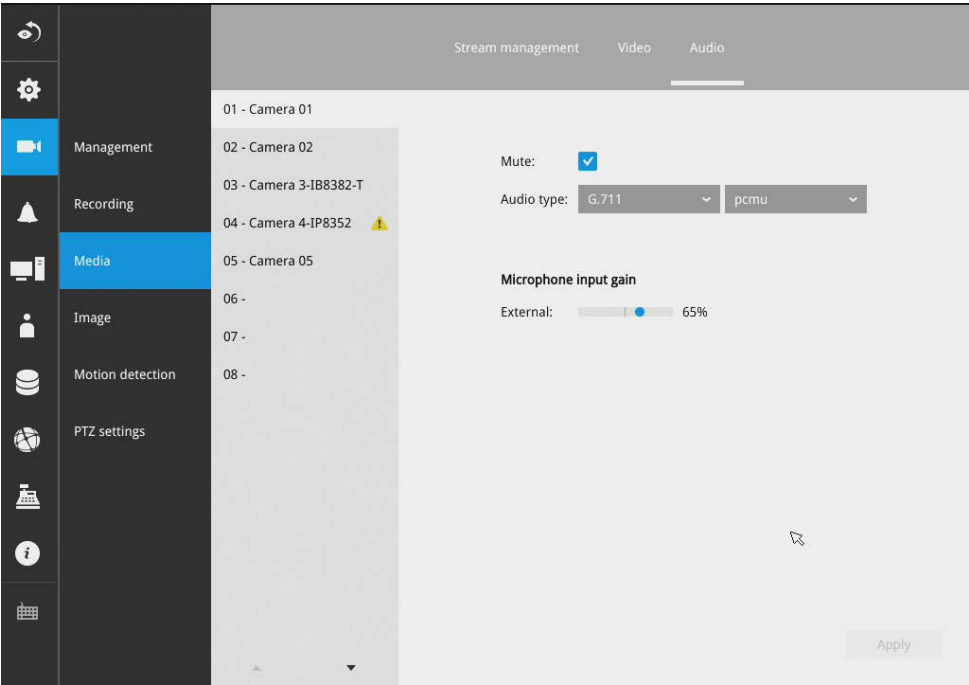


3-4-5. Settings - Camera - Image

Display

The Display window allows users to tune the image display options:

 1. Video name: the video name is displayed on the title bar that is displayed on each view cell. The screen shot below shows a name as "Speed dome."



2. Video name and timestamp: Default is enabled. If enabled, the video name and time is displayed on the view cell.
3. Power line frequency: Depending on power line frequency of your country, select a matching option, NTSC 60Hz or PAL 50Hz, to avoid image flickering due to unmatched electricity.
4. Video orientation: select these options if the image from camera needs to be vertically or horizontally flipped.
5. Click Restore to poll for the original settings or click the Apply button to finish the process.


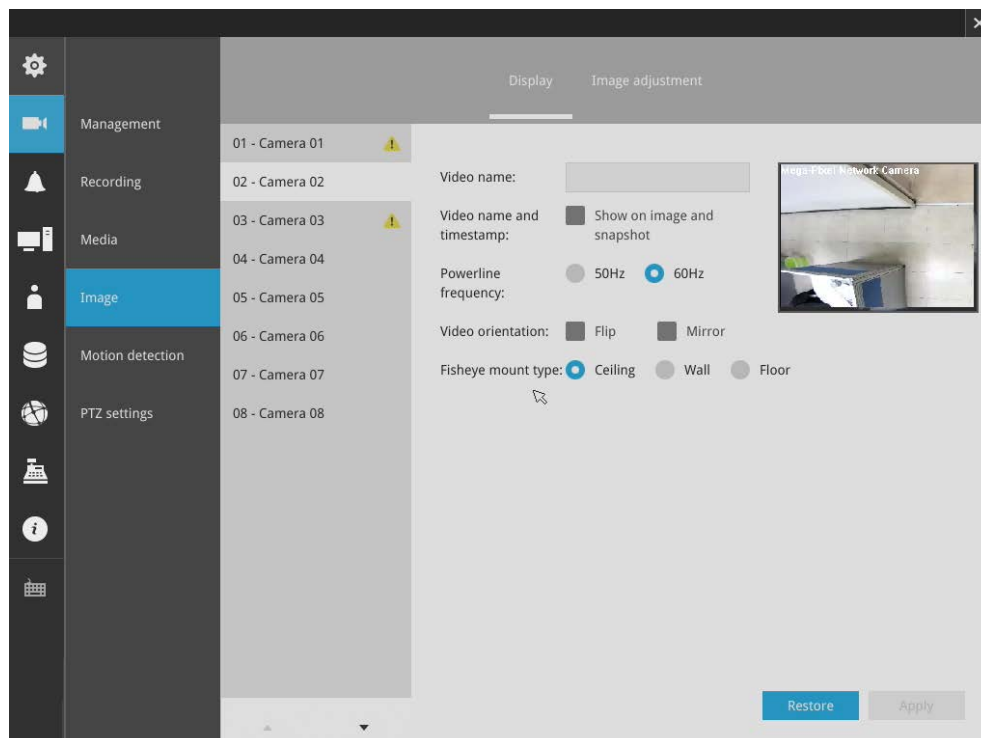


Image adjustment

The Image adjustment window allows users to tune the basics about image display options:

1. Color: Select to display image as color or black and white.
2. Brightness.
3. Saturation.
4. Contrast.
5. Sharpness.
6. High TV line, Gamma curve, low light compensation, etc. The rest of the options depend on the lens and image sensor type of each individual camera. Therefore, the options here can vary. For unique options coming with each individual camera, please refer to their User Manuals for more information.

Click Restore to poll for the original settings or click the **Apply** button to finish the process. For features common among cameras, you may select the **Apply to all cameras** checkbox.

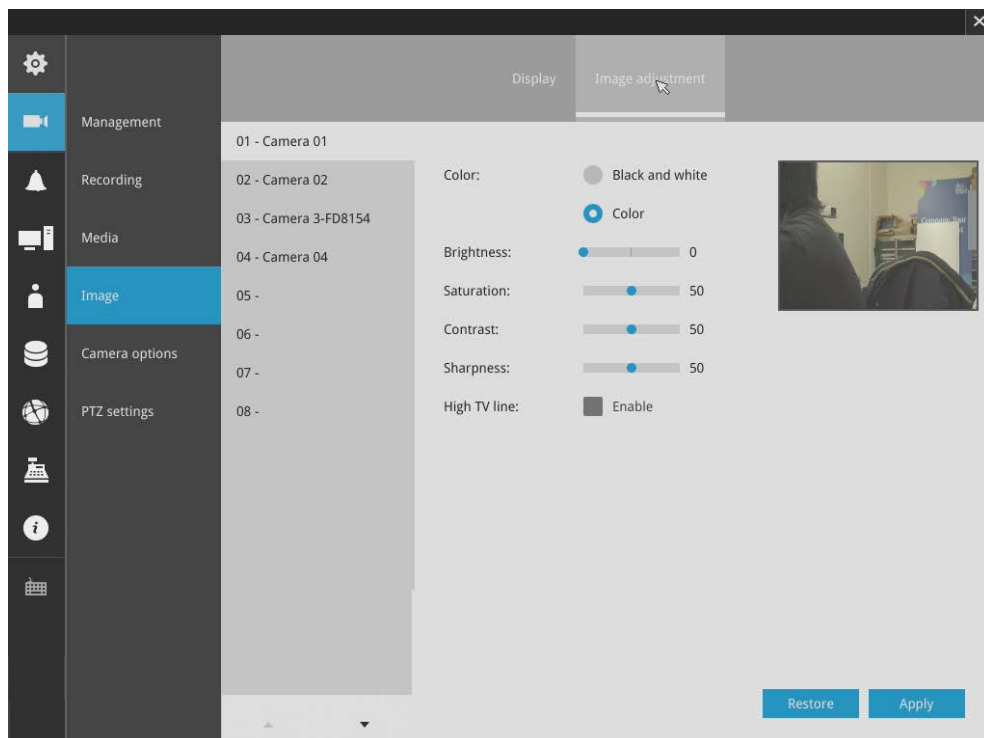

3-4-6. Settings - Camera - Motion Detection


Motion Detection

To set up a detection window:

1. Select a camera by a single click.
2. Use the PTZ panel to move to a field of view where you want to place a detection window. (if using a PTZ camera).
3. Click and drag to draw a rectangular or polygon detection window.
4. Pull the detection area level up to a preferred position. An object must be larger than the detection area to trigger an alarm.
5. Select a Sensitivity level using the slide bar.
6. Click the **Apply** button for the configuration to take effect.

The sample screen shows a connection with a speed dome camera.

If you already configured Preset positions, expand its menu and click on the presets to move to a position.

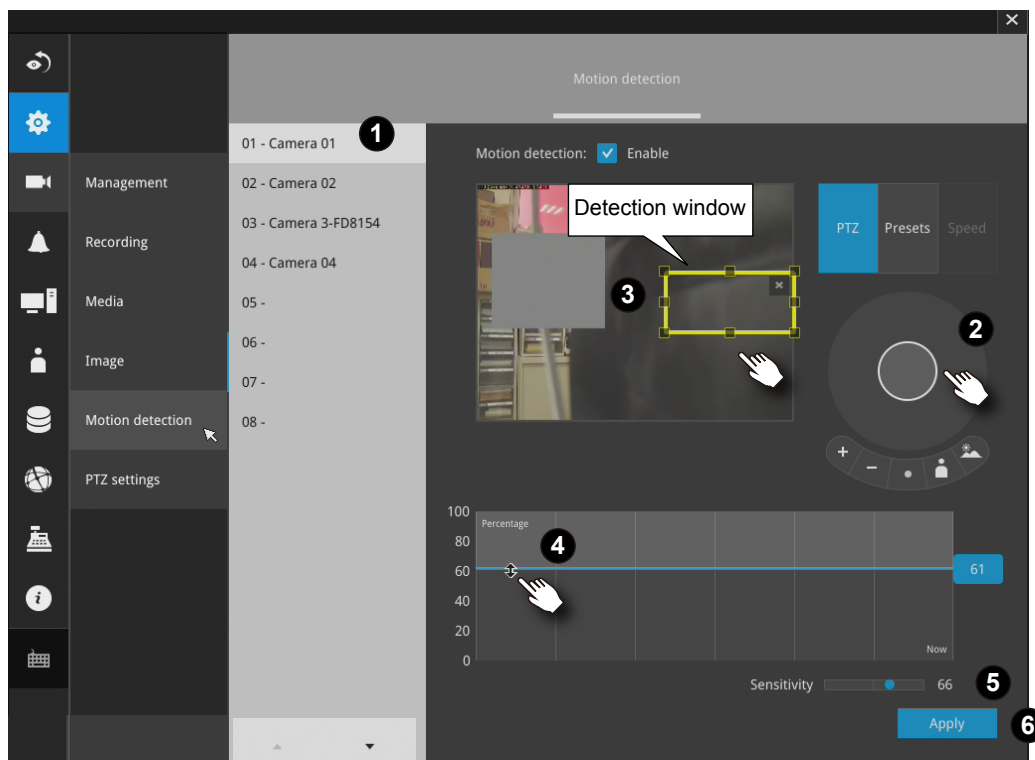


3-4-7. Settings - Camera - PTZ settings

To configure PTZ preset positions:


1. Select a PTZ camera by a single click.
2. Use the PTZ panel or your joystick to move to a field of view where you want to designate as a preset position.
3. Click the add button, and enter a name for the position. Press Enter to proceed.
Repeat the configuration to create more positions.
4. Click the **Apply** button for the configuration to take effect.

Note that the PTZ panel can vary with different PTZ cameras.

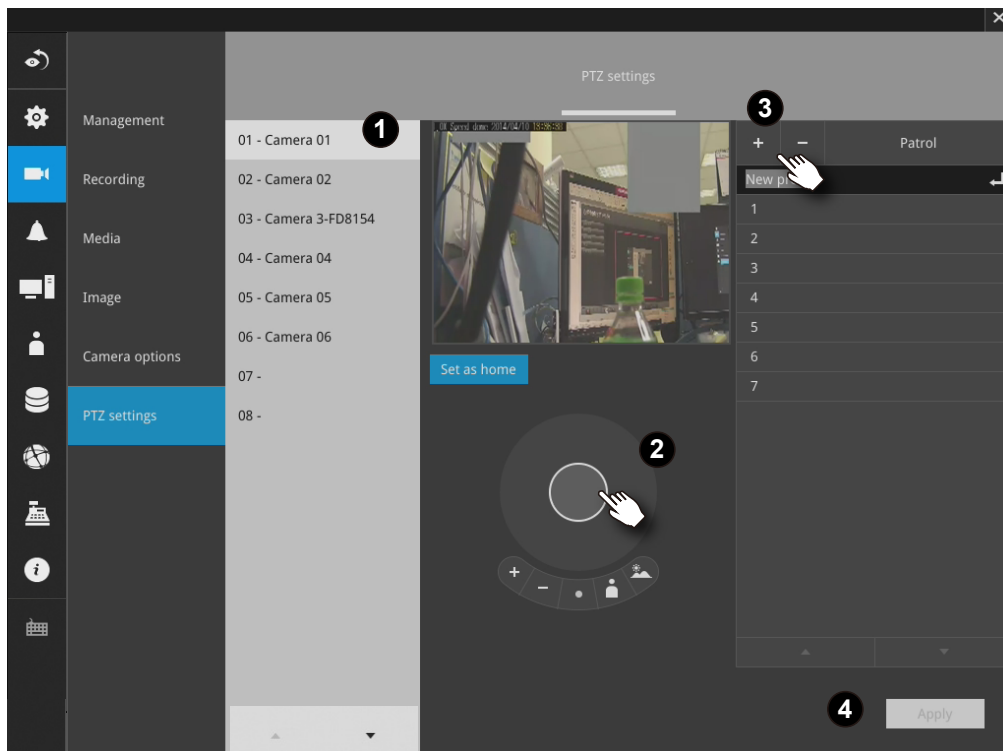


To configure a patrol:

1. Click to enter the **Patrol** menu. Select a preset position if you want to change its position on the patrolling order.
2. Click the up and down buttons to change the position on the order, or click the remove button to disband a position from the order. You can also change the interval to stay before moving from one position to the next position.
3. You may then click on the Preview patrol button to see if it runs as expected.
4. Click the **Apply** button for the configuration to take effect.
5. Click on the Back to preset list button to return to the preset window.

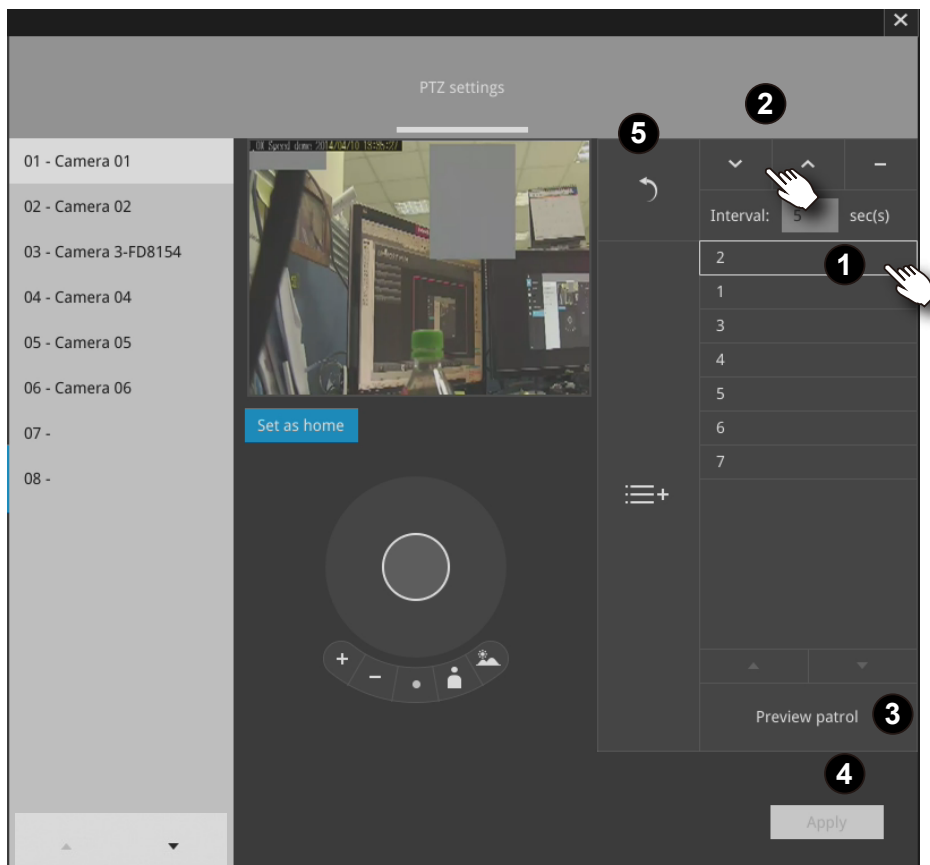

Fisheye camera has its unique options such as the mount types.

Please refer to page 135 or the camera's User Manual for fisheye display mode options.

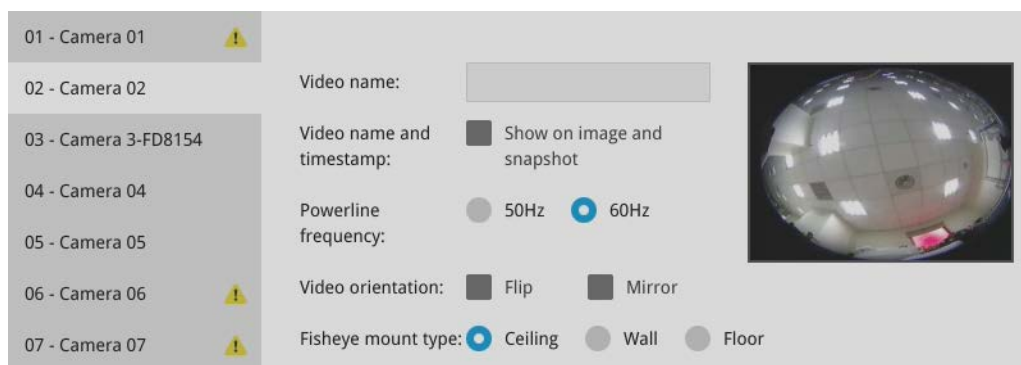


3-4-8. Settings - Alarm - Alarm

The events reported from individual cameras' digital inputs, digital outputs, and motion detection can be accommodated in the NVR system's alarm settings. These events will then be reported or trigger corresponding actions as follows:


1. Reporting events via Email or system buzzer.
2. Triggering video snapshot and text message by the occurrences of events to an FTP site.
3. Triggering the camera(s) for its lens to move to a preset position.
4. Triggering the cameras' digital output.
5. Triggering an event push to VIVOCLOUD (VIVOCLOUD v1.0 and above)

You can create up to 10 instances of alarm.

Hardware connections to DIs or DOs, e.g., window sensors, should be made separately. The motion detection configuration can be made in the Camera configuration window.

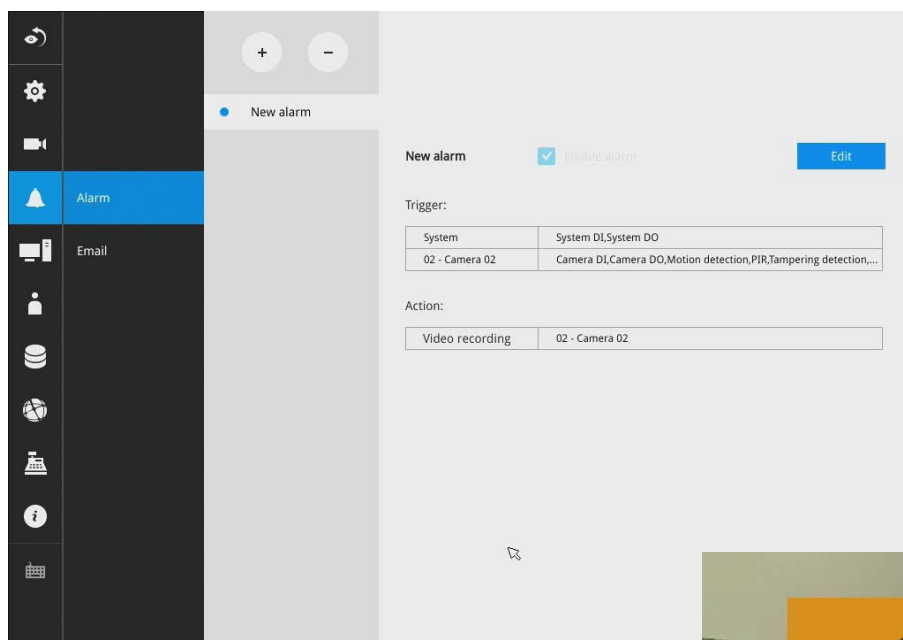

When an alarm is triggered, a message prompt will appear on the Liveview or any configuration window.

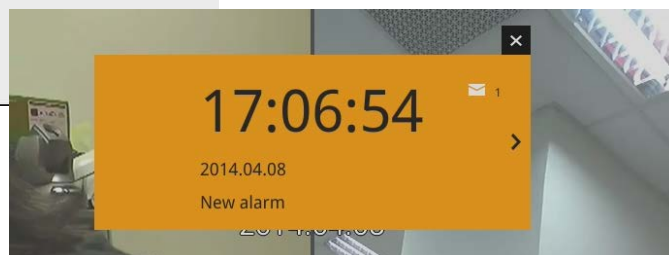


Below is a glimpse of alarm sources and alarm actions:

Sources		Actions	
DI	▶	Video recording	▶ video footage
DO		Email	▶ snapshots
Motion detection		Buzzer	
Network failure		FTP	▶ snapshots
Disk full		Camera preset points	▶ Pan-Tilt-Zoom
Disk failure		Camera DO	
PIR		Event push to VIVOCLOUD	
Tampering		VIVOCLOUD app notification	

To create an alarm,

1. Click on the **Add** button .

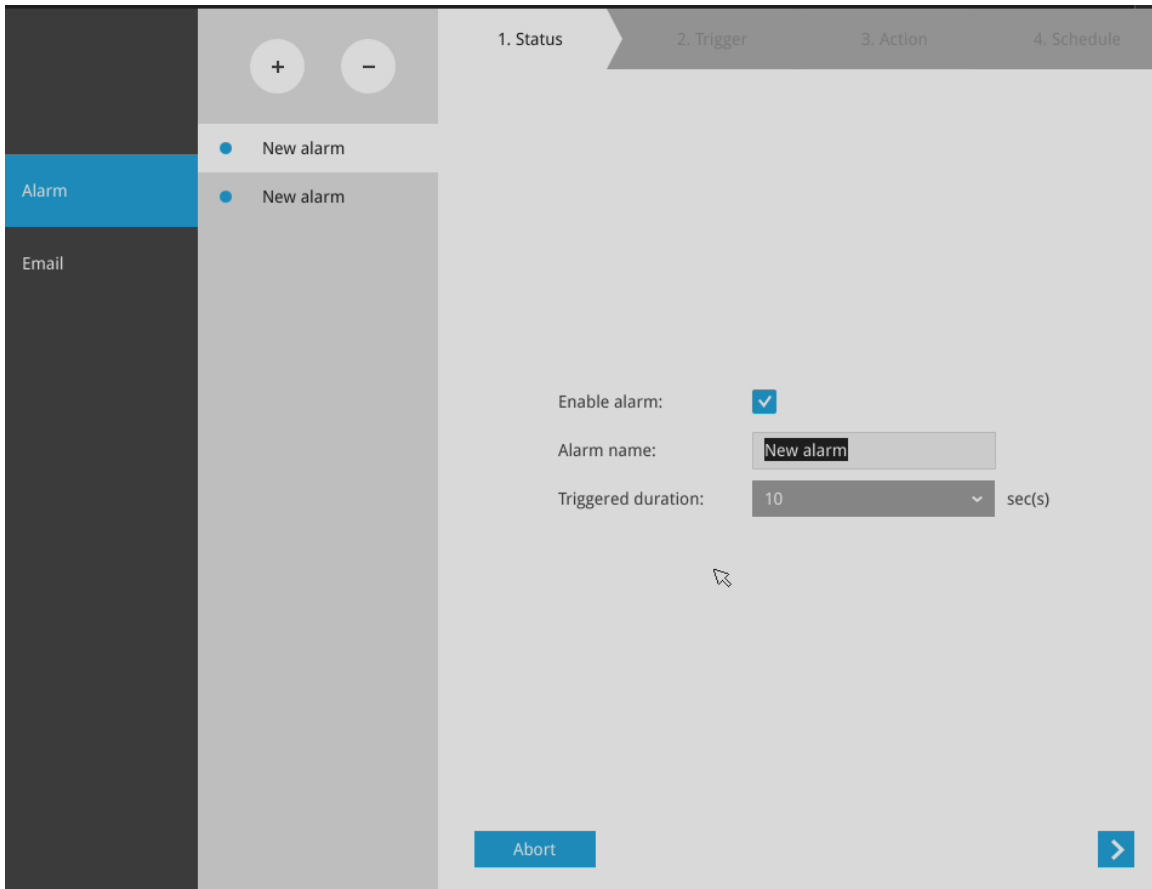


You can manually enter a name for the current setting. You can enter up to 16 numeric or alphabetic characters for the name, including symbols such as [0-9][a-z][A-Z][_] . You can also designate the interval between one alarm and the next triggered alarm to avoid the situation that the alarms can be too frequently triggered.

Click on the next button  to proceed.

Please note that on a fisheye camera's Motion window, you can click and move the corner marks of a window to change its coverage. The Motion window does not have to be a square.

3. On the **Trigger** window, select system triggering conditions, or one or more cameras by selecting their checkboxes. The number of DI or DOs on each camera is automatically detected and displayed through individual checkboxes. The **Motion detection** function, if there are many detection windows configured on a camera, is all triggered by one checkbox.

Note that the triggering sources will be listed even if the camera is currently not connected.

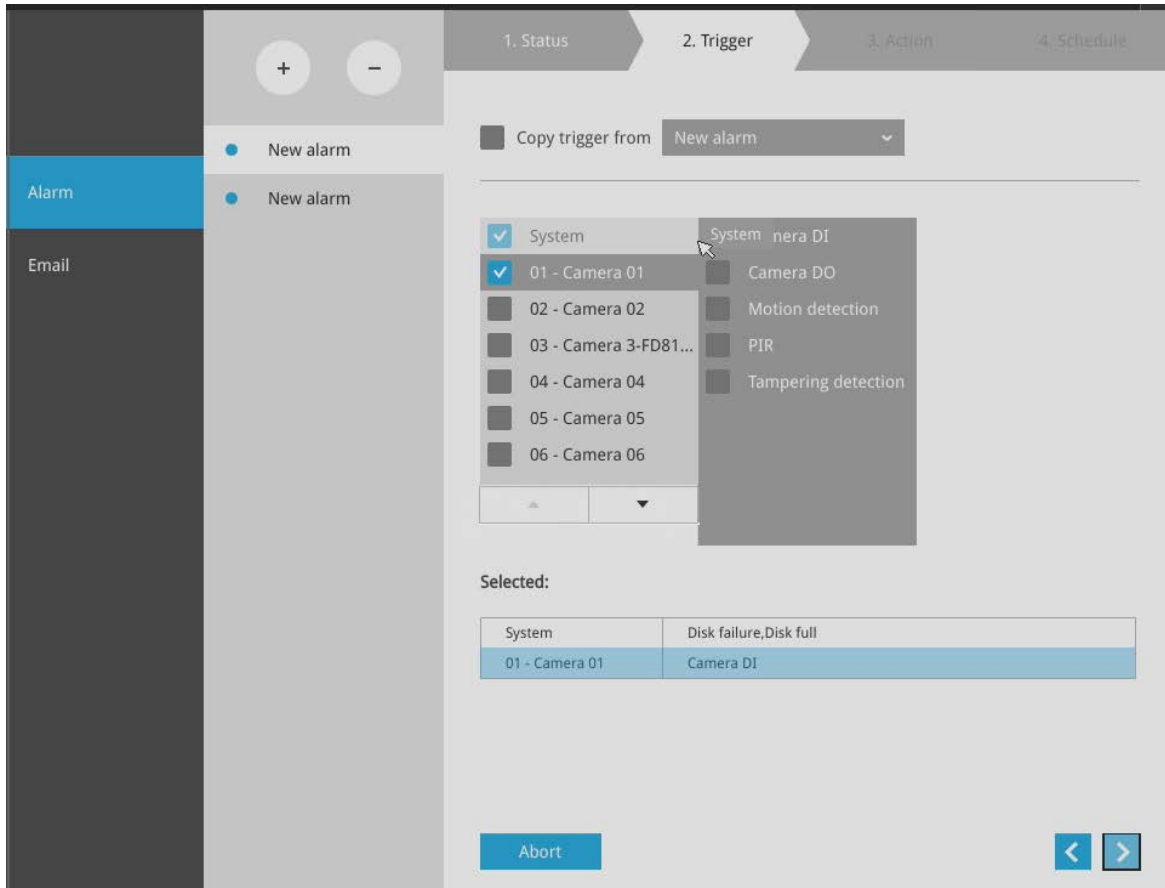


You may also select the "Copy trigger from" menu to borrow the setting you previously configured.

Click on the next button  to proceed.

NOTE: Camera connection status is polled every 10 seconds. The time span for detecting a camera disconnection can be as long as 10 seconds.



4. On the **Action** window, you can select the Action type from a drop-down menu. The configuration details of each action type is discussion below.

4-1. **Recording** - When an event is triggered, the selected camera will record a video footage of the length defined by the pre-/post-event setting, to the NVR system.

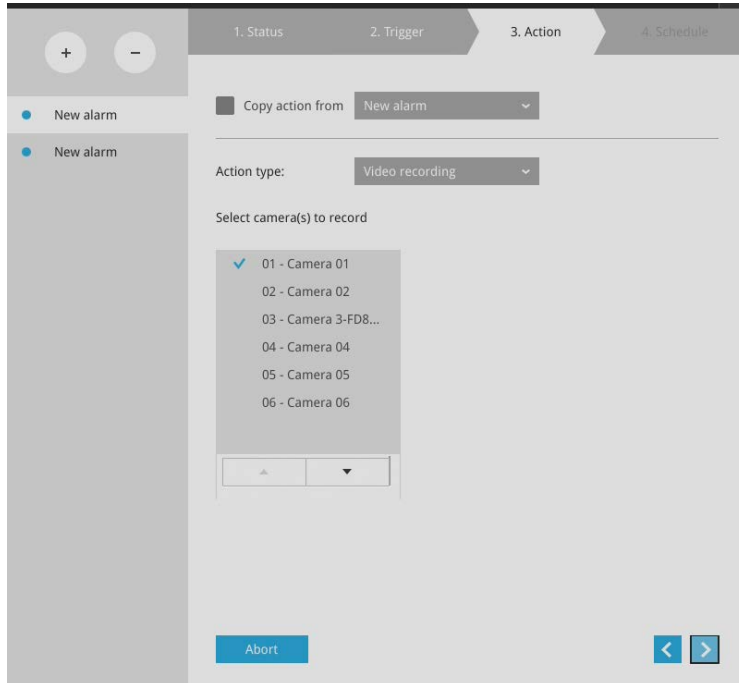

4-2. **Email** - The Email action sends an Email to the administrator along with a snapshot of the event.

To configure Email notification, enter valid Email addresses as the Sender and Recipient addresses, an Email subject, and the SMTP server address through which the Email will be delivered. If you need to log in to SMTP server to deliver an Email, enter the User name and password for access to that account.

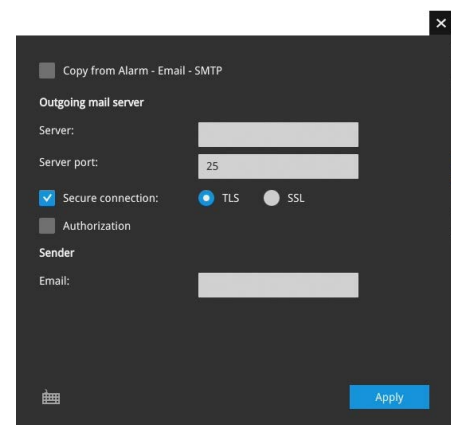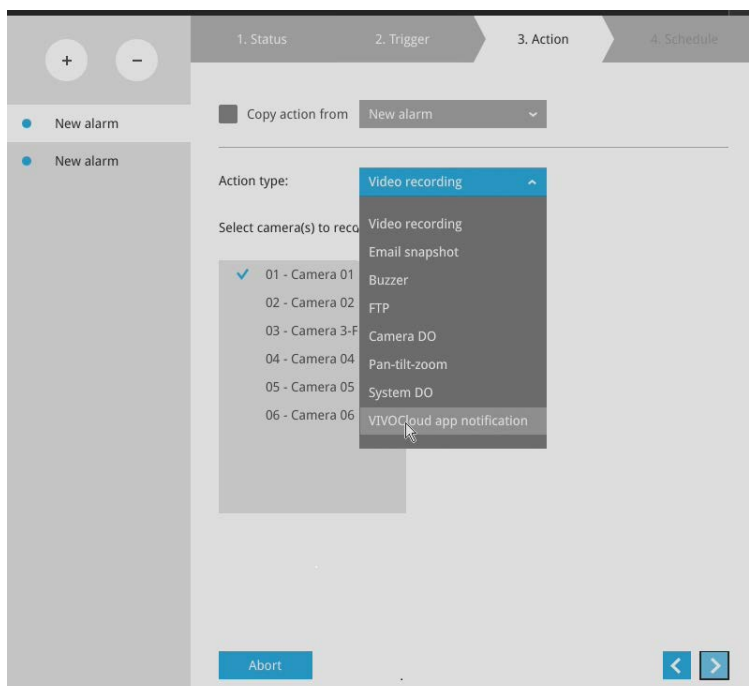

The Email subject and addresses can be composed of 254 characters in numeric or alphabetic characters including: [0-9][a-z][A-Z][_][][-].[,][@]. You can enter the addresses of multiple recipients. Use semicolons, (;), to separate the addresses of multiple recipients.

- 4-3. **Buzzer** - The buzzer is sounded on the occurrence of the event. The buzzer tones are categorized into: **Critical** (1 long, 1 sec interval) **Major** (1 long 2 shorts, 1 sec interval), **Normal** (3 shorts, 2 sec interval), **Minor** (2 shorts, 2 sec interval), and **Notify** (2 very shorts) depending on the importance of an event. Select a Buzzer modulation from the drop-down list. A long tone has a duration of 1 second, while a short tone 0.5 second. A very short tone lasts only for 0.1 second.

Select how many times the buzzer tones will be repeated on the occurrence of an event.

If events of different importance are issued at the same time, e.g., one major and one minor event, system will ignore the minor event and sound the buzzer tone for the major event only. The buzzer can be sounded either by the Alarm actions or the system events. If Alarm actions and system service events occur at the time, Alarm actions have the higher priority.

If multiple Alarm actions occur, the currently-sounded events can be depleted by the new event.

There are conditions that the system will sound the buzzer, and the conditions are not configurable.

1. Disk failure - missing drives or SMART detected failures.
2. Disk full - the free space is too small for recording tasks.

- 4-4. **FTP** - Snapshots from specified cameras can be uploaded to an FTP site on the occurrence of an event. Enter the FTP site address in the dotted-decimal notation, e.g., 159.22.151.20. Enter the login name and password for the user account. You can enter a directory name you prefer on the FTP site. The server port default is 21, a different number between 1025 and 65535 can also be assigned.

The snapshot thus delivered has a size of 320x240 pixels.

If authentication is not applied, login will proceed using the [anonymous] account. The file names of the snapshot jpeg files will look like this:

[MAC]_[DATE]_[TIME]_[CAMERA_INDEX].jpg - If similar files already exist, an additional index number will be added to the end of file name.

The screenshot shows the '3. Action' configuration step in a multi-tabbed interface. The tabs are '1. Status', '2. Trigger', '3. Action', and '4. Schedule'. Under 'Copy action from', 'New alarm' is selected. 'Action type' is set to 'FTP'. On the left, under 'Select camera(s) to snapshot', a list of cameras is shown with '01 - Camera 01' selected. On the right, under 'FTP setup', the 'FTP Server' field is empty, 'Port' is set to '21', 'Authorization' is checked and labeled 'Enable', and 'Upload folder' is set to '/'. An 'Upload test file' button is at the bottom right.


4-5. **Camera DO** - A triggered alarm triggers a camera's DO, e.g., an alarm siren.

The screenshot shows the '3. Action' tab of a configuration interface. At the top, there are four tabs: '1. Status', '2. Trigger', '3. Action', and '4. Schedule'. Below the tabs, there is a section for 'Copy action from' with a dropdown menu set to 'New alarm'. Below this, there are three dropdown menus: 'Action type:' set to 'Camera DO', 'Camera:' set to '01 - Camera 01', and 'DO:' set to 'DO - 1'. A mouse cursor is pointing at the 'Camera DO' dropdown.

4-6. **Camera pan-tilt-zoom** - A PTZ capable camera can move its lens to the preset position in case of a triggered alarm. For example, a triggered sensor may indicate an area of interest has been intruded, and a camera's field of view should be moved to cover that area. The precondition is that you properly set up preset positions on your PTZ cameras using a local or a web console.


The screenshot shows the '3. Action' tab of a configuration interface. At the top, there are four tabs: '1. Status', '2. Trigger', '3. Action', and '4. Schedule'. Below the tabs, there is a section for 'Copy action from' with a dropdown menu set to 'New alarm'. Below this, there are two dropdown menus: 'Action type:' set to 'Pan-tilt-zoom' and 'Select camera angle:' set to '01 - Camera 01'. Below the dropdowns, there is a large image showing a camera's field of view of a supermarket aisle. To the right of the image, there is a vertical list of numbers 1 through 7, representing preset positions. At the bottom left, there is a blue 'Abort' button. At the bottom right, there are two navigation buttons: a blue '<' button and a grey '>' button.

4-7. **System DO** - A triggered alarm can be used to toggle the NVR's digital output, e.g., to sound an alarm siren.

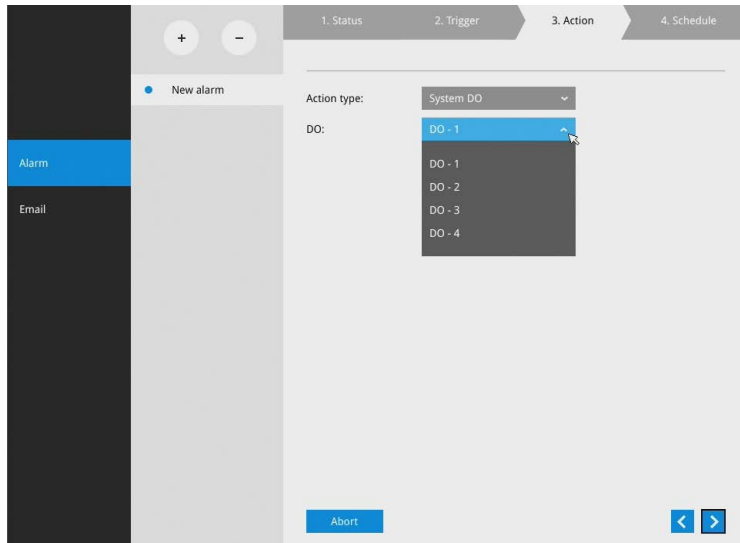

4-8. **VIVOCLOUD app notification** - A triggered alarm can be used to toggle an event notification to the VIVOCLOUD utility. You will then be able to receive event notifications from your cell phone.

To receive push notifications on your mobile device, turn on the VIVOCLOUD service in **System > VIVOCLOUD service**.

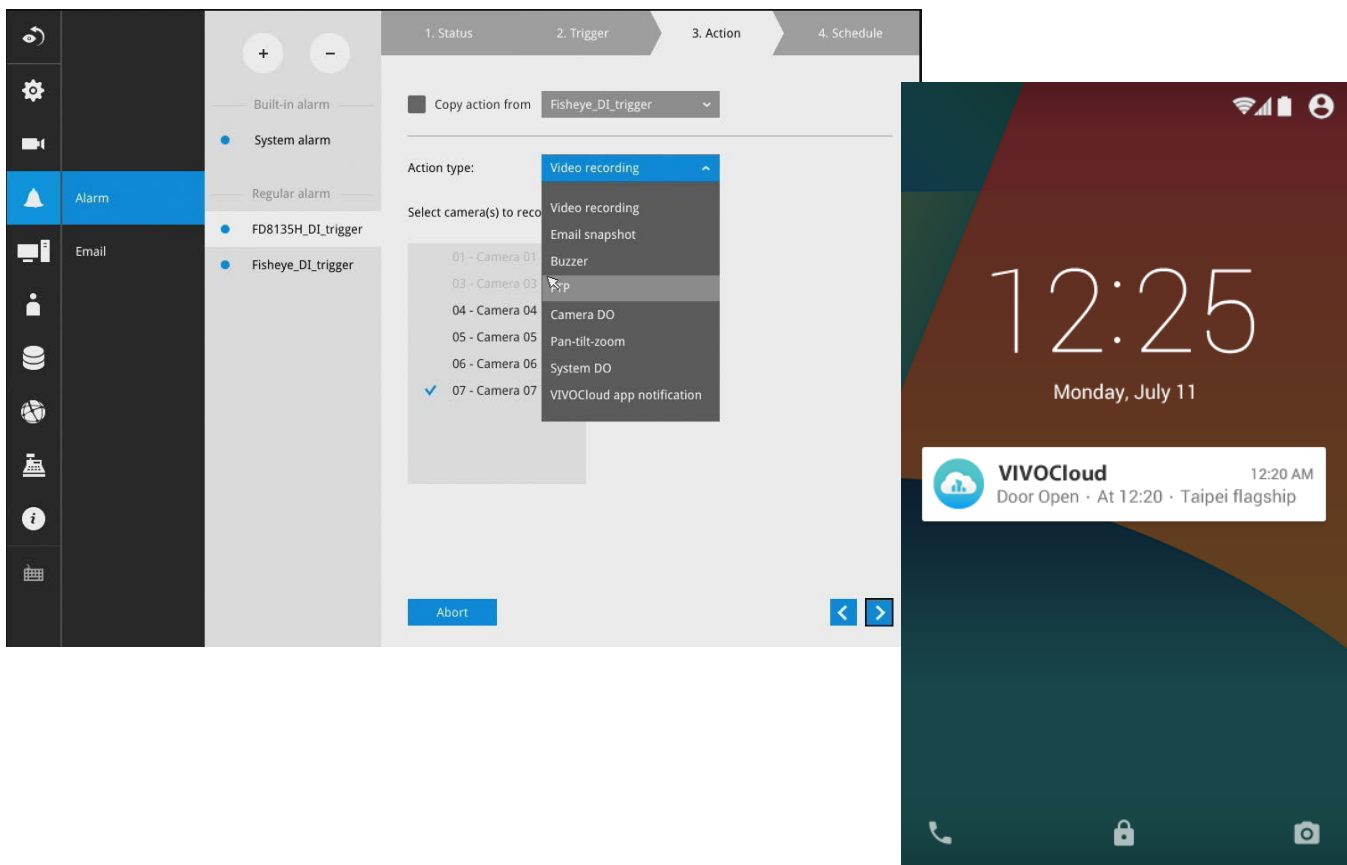

5. On the **Schedule** page, you can select to activate or de-activate alarm triggers throughout a specific timeline. For example, in some situations you can disable the alarm triggers during the office hours, and choose to enable the triggers only during the off-office hours.

The screenshot shows the '4. Schedule' step of a configuration process. At the top, there are four tabs: '1. Status', '2. Trigger', '3. Action', and '4. Schedule'. Below the tabs, there are three options: 'Copy schedule from' with a dropdown menu showing 'New alarm', 'Apply Alarm' with a calendar icon, and 'Clear' with a dropdown menu showing 'Default schedules'. Below these options is a calendar grid with days of the week (Monday through Sunday) and hours (0 to 23). The grid is currently empty, indicating no schedule is applied. At the bottom, there are two buttons: 'Abort' and 'Finish'.

All	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23
Monday																								
Tuesday																								
Wednesday																								
Thursday																								
Friday																								
Saturday																								
Sunday																								

6. Click **Finish** to end the configuration.
7. Repeat the process above to create more alarms according to the needs in your surveillance deployment.

3-4-9. Settings - Alarm - Email

This window provides an interface where you can configure the connection to a Mail server. Via the Mail server, the system can deliver Emails containing system alarm messages to multiple receivers. A reachable Mail server and Email accounts must be provided before you can apply the settings.

The screenshot shows the 'Email' configuration window within the 'Alarm' settings. The window has a dark sidebar on the left with icons for various settings, and the 'Email' option is highlighted. The main area is titled 'SMTP' and contains the following configuration fields:

- Outgoing mail server**
 - Server: smtp.gmail.com
 - Server port: 465
 - Secure connection: ☒ TLS ☒ SSL
 - Authorization: ☒
 - User name: [empty]
 - Password: [masked with asterisks]
- Sender**
 - Email: hung@gmail.com

An 'Apply' button is located at the bottom right of the configuration area.

The configuration options are identical to those found in the Email configuration in Settings - Alarm window.

3-4-10. Settings - System - Information

On this window, you can configure the following:

1. Change the system name.
2. Select the UI text language.
3. Configure system time, time zone, and if you are connected to a DNS server where Auto Daylight Saving time can be applied, you can acquire the associated setting from a server within your network.
4. Click the **Apply** button for the configuration to take effect.

Note that if **NTP** time server configuration (Auto) is preferred, the system will automatically configure all cameras to be listening to the system, and therefore to the same time server.

Name and language

System name: ND8422P

Language: English

Time

Set system date and time: Manual setup

February 16, 2017 15 : 07 : 32 Now

Time zone: Asia/Taipei (CST, GM...)

Auto setup Daylight Saving Time

Set up Network - IP - DNS server to update Daylight Saving Time

Manual setup

- 1 Download update file from <https://www.iana.org/time-zones>
- 2 Save file to USB device
- 3 Import file to update

Apply



IMPORTANT:

Changing system time can produce disruptions to the existing recordings. Turning the current system time back to a time when video recording was taking place can generate duplicate files. And those files may not be playable.


3-4-11. Settings - System - Maintenance

If the need arises for updating system firmware, acquire the update from VIVOTEK's technical support or download site. Locate the firmware binaries, and click the Import button. The upgrade should take several minutes to complete. Note that during the upgrade, the recording task will be interrupted.

On this window, you can perform 4 maintenance tasks:

1. **Update firmware** - Download firmware and save it to a USB drive in the FAT format, attach the USB device to the NVR for firmware upgrade.
2. **Update device pack** - A device pack allows you to import associated configurations and parameters for new camera models so that these cameras can be integrated into your NVR configuration. The information in the device pack is related to some tunable parameters.
3. **Backup** - You can backup your system configuration using the Backup function. Click Backup, a message window will prompt. Click Save to preserve your system configurations.

Select a location for your backup file, then click Save to complete the process. If you back up to a USB thumb drive, that thumb drive must be formatted using the FAT format.

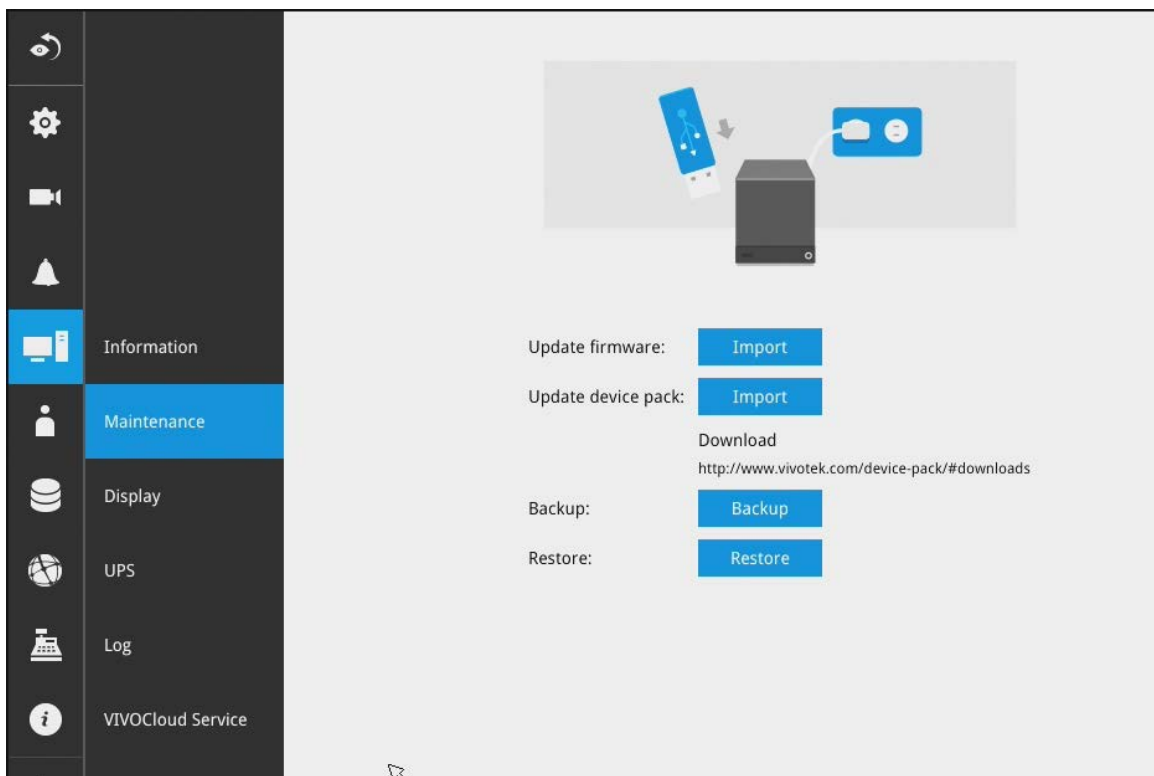

Note that the backup action does not involve the following:


1. Recorded videos and database,
 2. Alarm records, bookmarks, and bookmarked footages.
4. **Restore** - If you have a previously-saved profile, you can restore your previous configuration. Click the Restore button.

A file location window will prompt. Locate the backup file, and click Open. The Restore process will take several minutes to complete, and system operation will be interrupted during the process.


3-4-12. Settings - System - Display

On this page, you can configure the system to consecutively display (rotate) cameras' view cells on the Liveview window. For example, if you have 8 cameras in 2 2x2 layouts, the rotation can let you see the live views of all cameras by every few seconds.

You can also enable or disable the Alarm notification.

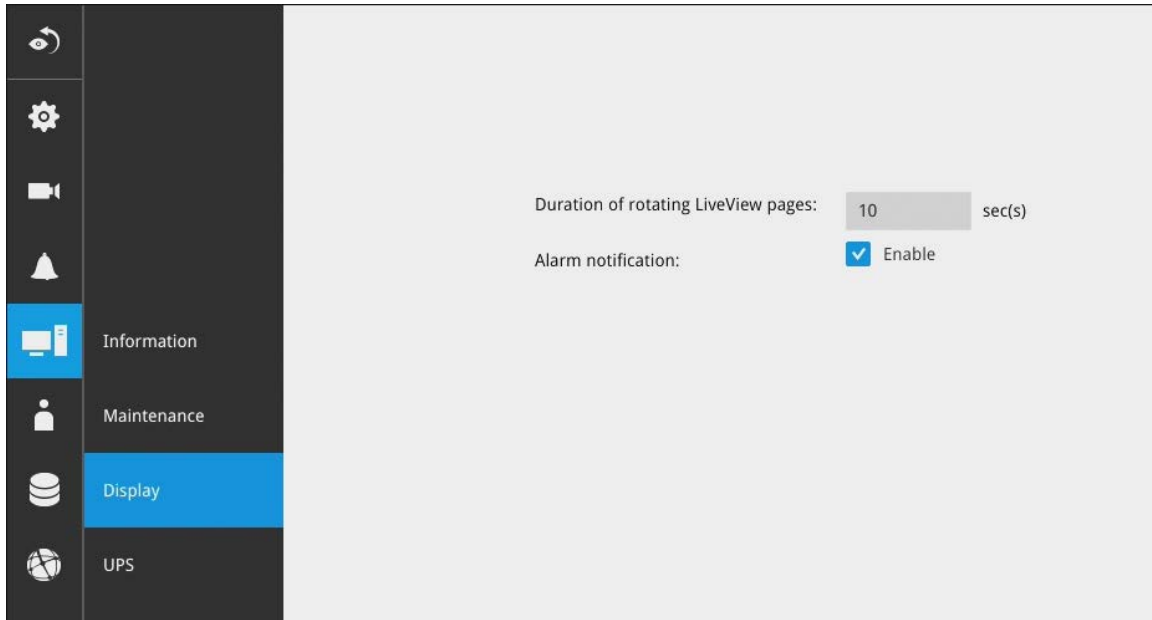

To enable the rotate function, click on the rotate button on the layout panel.

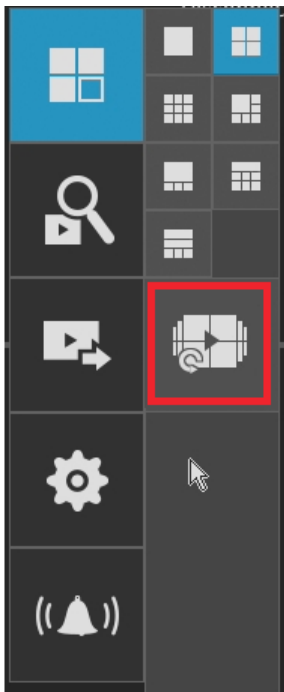

3-4-13. Settings - System - UPS


On this page, you can configure the system to gracefully shut down when UPS battery is lower than a certain level. You may also let it shut down when the estimated sustainable time is reached. We support APC Black 500 UPS.

The screenshot shows the VIVOTEK system settings interface. On the left is a dark sidebar with icons and labels: Information, Maintenance, Display, UPS (highlighted in blue), Log, and VIVOCLOUD service. The main content area is white and displays the following information:


- Back-UPS ES 500
- Battery status: 82% (1:8 remaining)
- Section: Turn off system
- Two radio button options:
 - ☒ When current battery charge is lower than: 40% (dropdown menu)
 - ☐ When estimated time remaining: 5 (dropdown menu) min(s)
- An "Apply" button at the bottom right.

3-4-14. Settings - System - Log

System logs are categorized as **System**, **Recording**, **User**, and **Error**. To display system logs, select a range of time and click on the Search button.

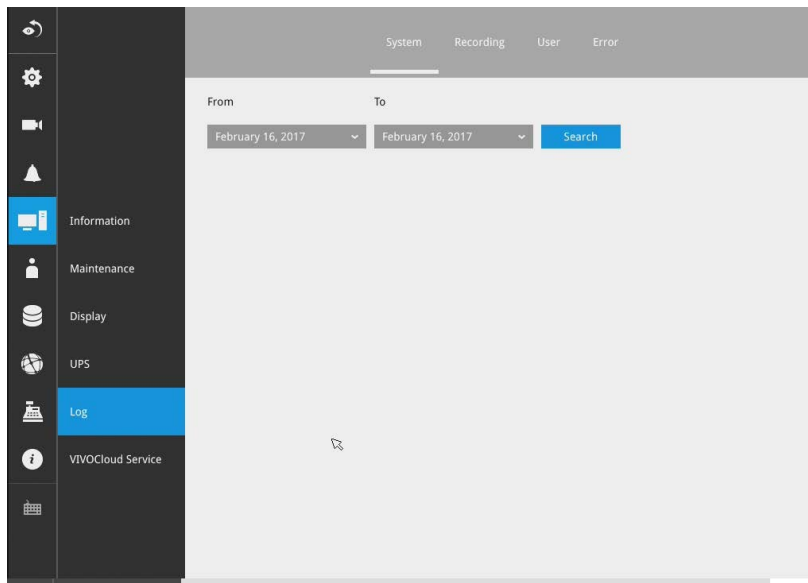

You can search for past logs in each category window.

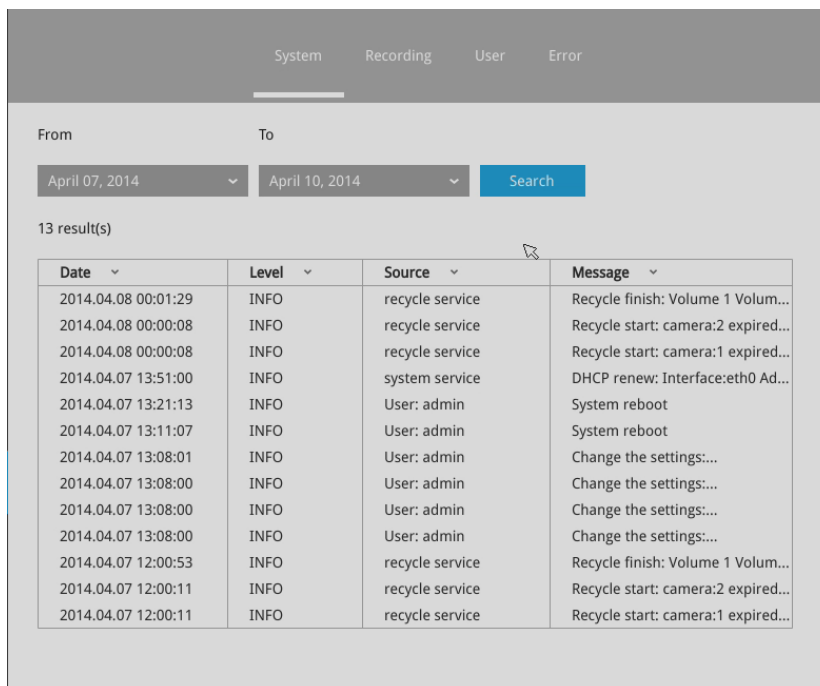

System
Recording
User
Error

From
To

April 07, 2014
April 10, 2014
Search

76 result(s)

Date	Camera	Source	Message
2014.04.10 16:27:25	1	recording service	Recording stop: RTSP Fail
2014.04.10 16:03:30	4	camera service	Camera online
2014.04.10 16:03:28	4	camera service	Camera offline
2014.04.10 16:02:23	4	camera service	Camera offline
2014.04.10 16:02:04	4	recording service	Recording stop: RTSP Fail
2014.04.10 15:59:08	4	camera service	Camera online
2014.04.10 15:59:04	4	camera service	Camera offline
2014.04.10 15:57:53	6	camera service	Camera online
2014.04.10 15:57:07	6	camera service	Camera offline
2014.04.10 15:56:55	6	recording service	Recording stop: RTSP Fail
2014.04.10 15:56:42	4	camera service	Camera offline
2014.04.10 15:56:40	4	recording service	Recording stop: RTSP Fail
2014.04.10 15:56:34	4	recording service	Recording stop: RTSP Fail
2014.04.10 15:56:16	4	recording service	Recording stop: RTSP Fail
2014.04.10 11:19:22	1	camera service	Camera online
2014.04.10 11:19:08	1	camera service	Camera offline

System
Recording
User
Error

From
To


April 07, 2014
April 10, 2014
Search

4 result(s)

Date	Source	User name	Message
2014.04.08 08:49:19	192.168.6.135	admin	Login
2014.04.07 13:17:15	169.254.132.244	admin	Login
2014.04.07 13:08:54		admin	Update layout: {"view":...
2014.04.07 13:06:55	169.254.132.244	admin	Login

3-4-15. Settings - System - VIVOCloud service

This window provides access to the VIVOCloud configuration. Please refer to page 19 for how to configure system access using the VIVOCloud functionality.

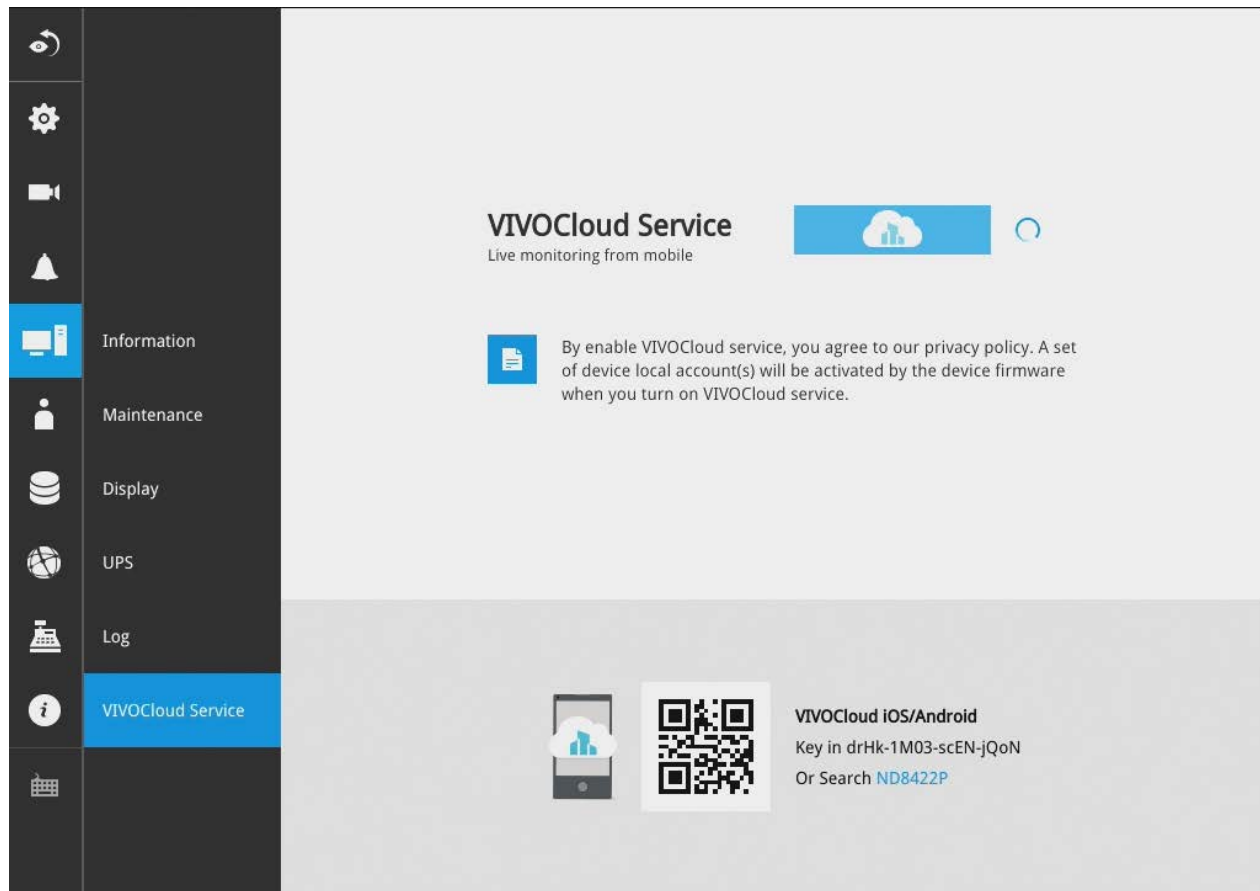


3-4-16. Settings - User

The User window allows you to create more users, to change user password, and place limitations on users' privileges and administration rights. Up to 16 users can be created, including the default administrator.

1. By default, there are two user groups: **Administrator** and **Regular user**.
2. The regular users cannot access the **Settings** window, meaning that regular users can not add or remove cameras, make changes to alarm, network, and all other system settings.

When users try to access the Settings window, the login window prohibits regular users to log in. There is simply no regular user's name on the login window.

3. The administrator users can access all cameras recruited in the configuration; while the regular users can be configured to have access to some or all cameras.
4. The system blocks out the video feeds from users who are denied of the access to particular cameras. The alarms and the alarm-triggered recordings from those cameras will also be inaccessible for unauthorized users.

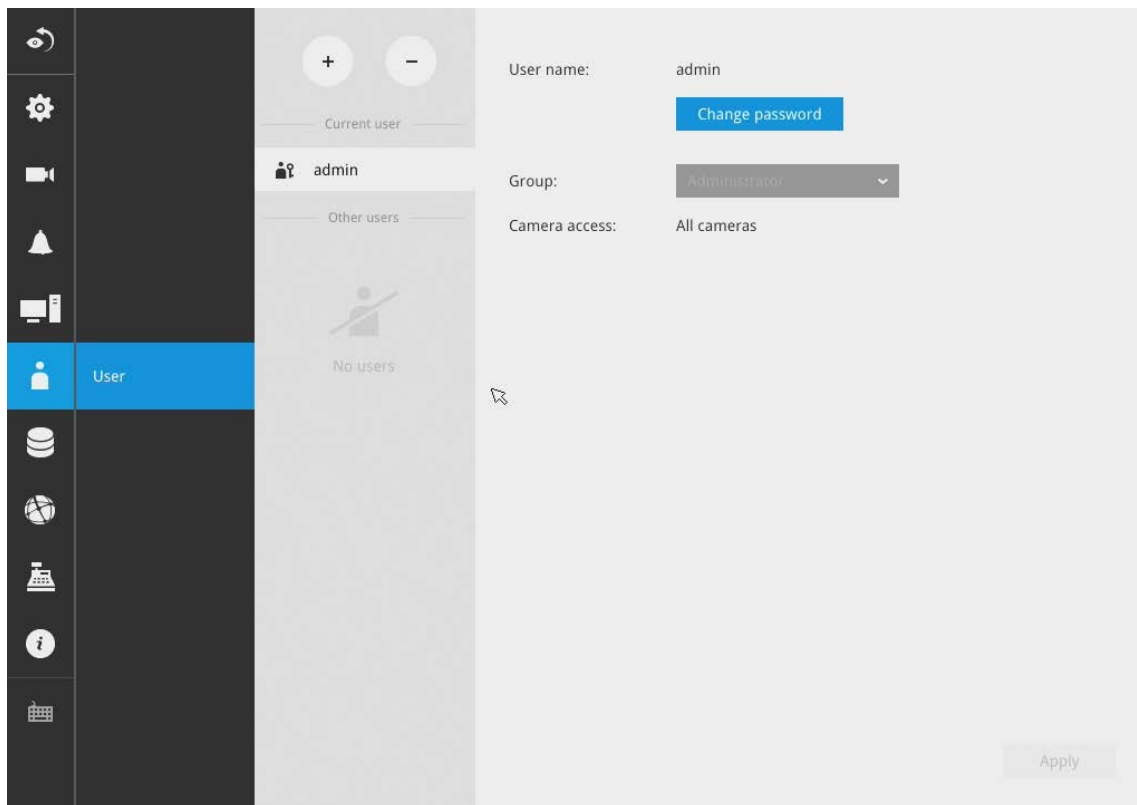

⚠ IMPORTANT:

It is highly recommended to change the default password to prevent unauthorized access to the system.

To create or edit users,

1. Select a User group by unfolding its pull-down menu. Select either an Administrator or regular user as the user group. Enter and re-enter a strong password that is composed of numeric and alphabetic characters.

The screenshot shows the 'New user' form in the Vivotek interface. On the left, a sidebar lists users: 'admin' (Current user), 'New user 1', and 'New user'. The main form has the following fields:

- Username:** New user
- Password strength indicator:** At least 8 characters with no space, 1 alphabet character (uppercase or lowercase), and 1 numeric character.
- New password:** [Input field]
- Confirm password:** [Input field]
- Group:** Administrator (dropdown menu is open, showing 'Administrator' and 'Regular user' options)
- Camera access:** All cameras

2. Enter the User name and password. The max. number of characters for a user name is 64, with alphabetic and numeric characters including [0-9][a-z][A-Z][_][][-].[,][@]. The max. number for password is also 64.

The screenshot shows the 'New user' form with the 'Group' dropdown set to 'Regular user'. The 'Camera access' section is expanded, showing a table of camera authorization options.

Authorization	All
01 - Camera 01	<input checked="" type="checkbox"/>
02 - Camera02	<input checked="" type="checkbox"/>
03 - Camera 03	<input checked="" type="checkbox"/>
04 - Camera 04	<input checked="" type="checkbox"/>
05 - Camera 05	<input checked="" type="checkbox"/>
06 - Camera 06	<input checked="" type="checkbox"/>
07 - Camera 07	<input checked="" type="checkbox"/>
08 - Camera08	<input checked="" type="checkbox"/>


At the bottom right, there is an 'Apply' button.

3. If you are creating a regular user with limited access to cameras, deselect the checkboxes by the cameras to deny the user access.
4. Click **Apply** to close the configuration window. Repeat the process to create more users.

3-4-17. Settings - Storage

The storage page displays the volume information including physical position, total capacity, used and free space, and associated commands such as Format and Delete. Since each volume contains only 1 hard drive, details information about the hard drive is also displayed on this page.

You can format an existing storage volume in situations such as when you need to re-deploy the system elsewhere.

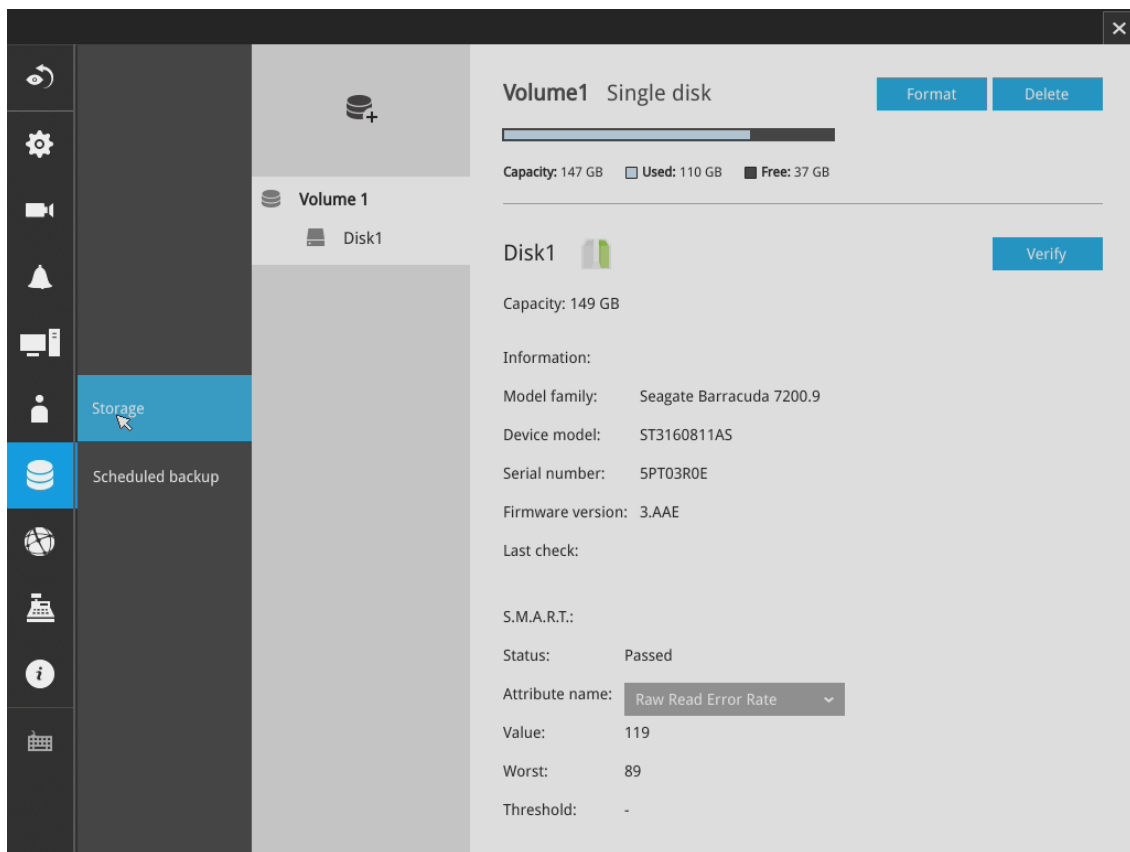

Disk Information:

Model family: The brand name of the HDD manufacturer.

Device model: The disk model name.

Serial number: Serial number assigned to the disk drive.

Firmware version: The version of firmware running on this disk drive.

Last check: The bad block check or S.M.A.R.T. test previously executed on this drive.

Status: S.M.A.R.T. status polled from the disk drive. This is not the results from a manually-executed S.M.A.R.T. test.

Attribute: The various attributes can vary from different HDD manufacturers.


Value: Value for the currently selected attribute.

Worst: Worst value acquired for that attribute.

Threshold: A predefined threshold or triggering value. The threshold below which the normalized value will be considered exceeding specifications.


Raw value: The detected parameters for that attribute.

Status: The judgement made to deem the current reading as OK or failed.

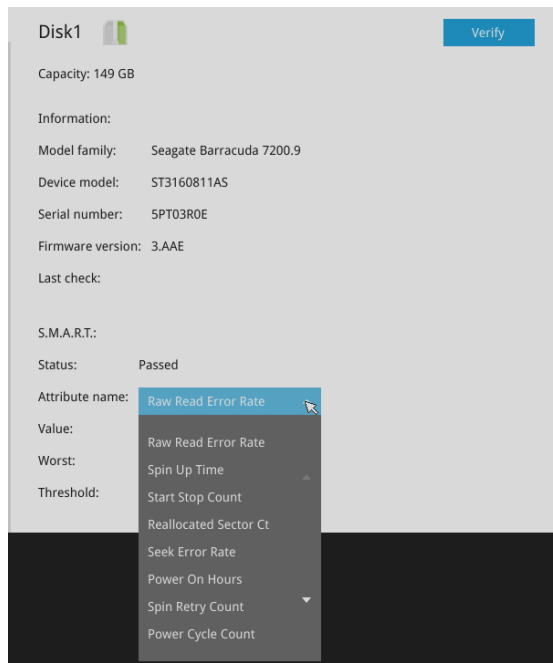

Verify:

Three types of check disk actions can be initiated through this button.

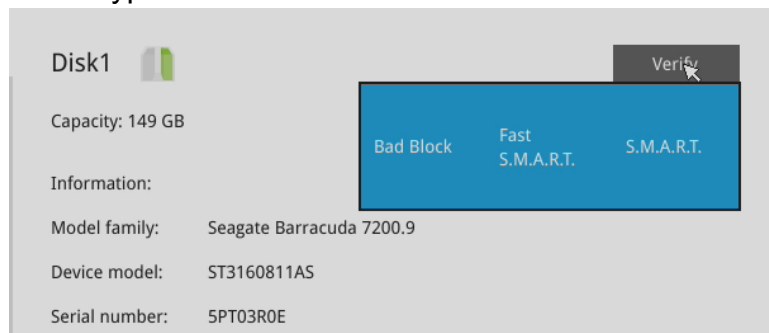

Bad block check: Performs read/write test to drive sectors to locate bad blocks. This action may take several hours to complete.

Fast S.M.A.R.T. test: Tests the electronic and mechanical performance and disk read performance, including those on disk buffer, read head, seek time, and integrity of drive sectors. The short test is performed on a small section of disk platters, and takes about 2 minutes to complete.

S.M.A.R.T. long test: The long test is more thoroughly and is performed to all drive sectors. The actual completion time depends on drive sizes and the attributes put to test.

The Check disk functions mentioned above, when performed during active I/Os, can consume system resources and cause dropped frames with the recording tasks.


! IMPORTANT:

There are conditions that disk drives will not be available for storage configuration:


1. The disk drives are performing the Verify process.
2. The disk drives considered as "failed" drives by the S.M.A.R.T. self detection.
3. The NVR does not support disk drives in an external storage enclosure.

If you have not created a storage volume during the initial setup, you can manually create a volume. To create a volume:


1. Click on the **Create Volume** button on top of the listed disk drives. The Create Volume window will prompt

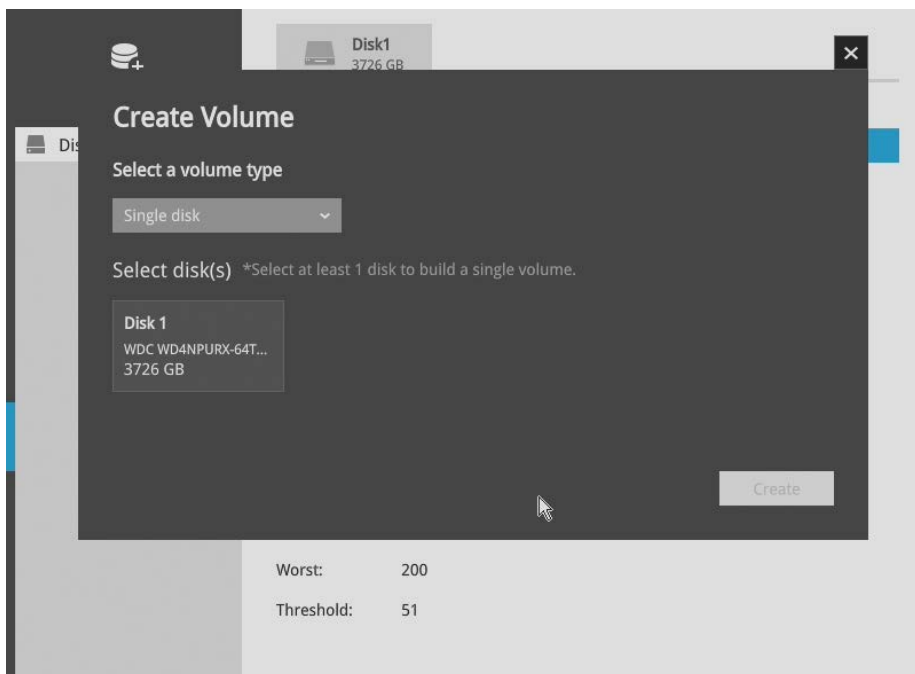


2. Click to select the member for the volume. When done, click **Create** to begin the process.

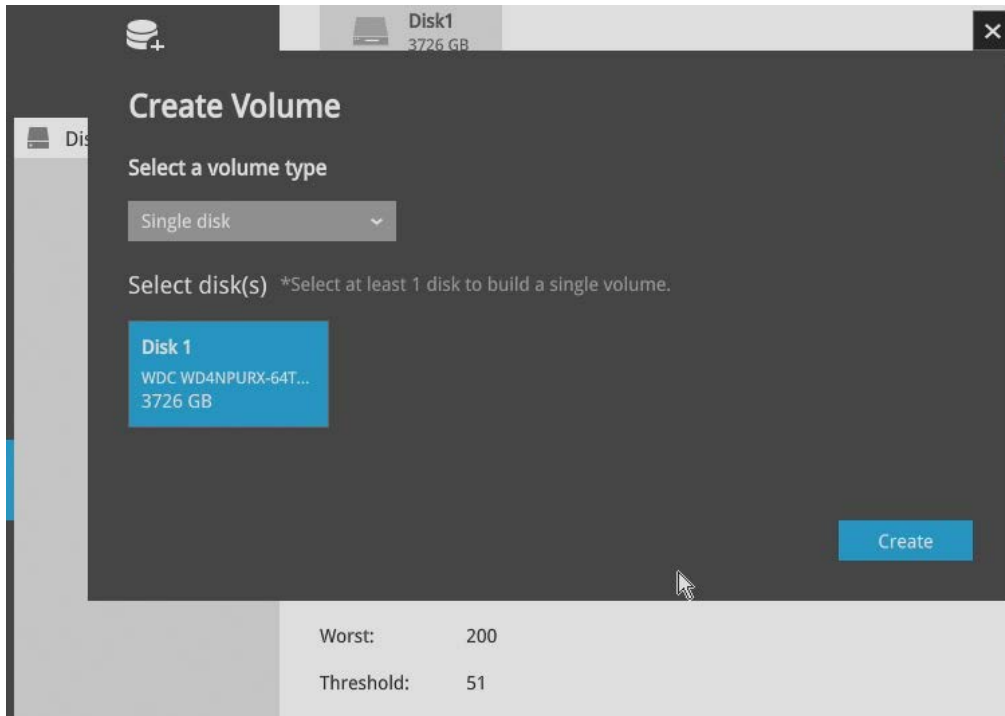


4. Creating a volume will erase all data on the member drive. A message prompt will remind you of the situation. Click Create to continue.

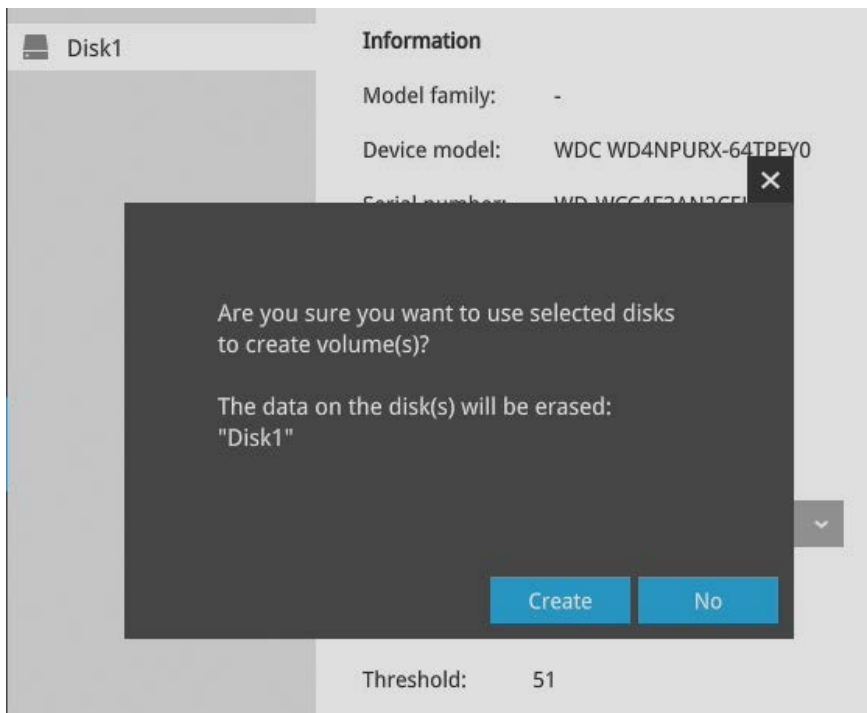

5. The volume should be created in a short while. When a volume is created, video recording should also start immediately.

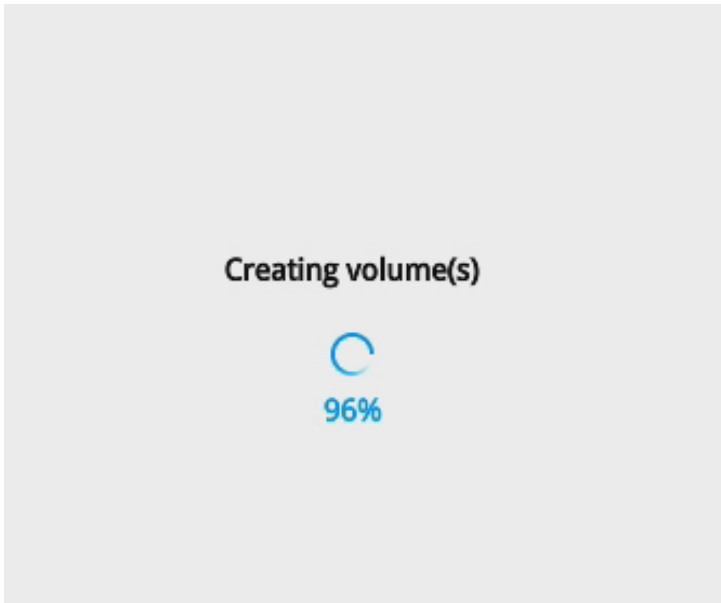

6. You can see the volume contains a disk member, with all related information.

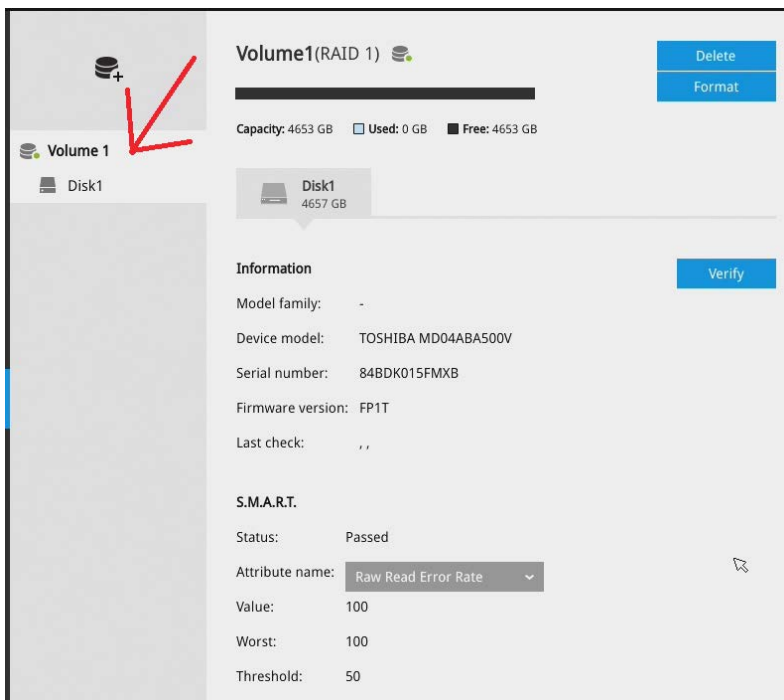

3-4-18. Settings - Storage - Scheduled backup

Enable: Default is not selected. The scheduled backup function is not enabled by default. You must click to enable the configuration options.

Type: Currently the NVR supports the backup to an FTP server.

Enter the Static IP, domain name, and other parameters for access to an FTP server.

Site: the fully qualified domain name of a network host, or its IP address. The max. length is 253 characters. Note that hyphen “-” cannot be used at the beginning or the end of the address.

Port: The port that the remote FTP server listens on. The default ports (which are the most commonly used) are 21 for standard FTP and explicit FTPS, 990 for implicit FTPS and 22 for SFTP via SSH. If necessary, change the port number. The range is 1 ~ 65535.

Path: The path is effectively a pathname of a resource and corresponds to a series of FTP commands, such as a directory tree: “ftp://jon:apple@bigcompany.com”. The applicable alpha-numeric characters are [0-9][a-z][A-Z][_]/, with a max. length of 64 characters. If not specified, destination will be the root directory.

Authorization: Click to enter user name and password for the FTP site. Click the Test FTP button to test a connection with the FTP server. The applicable alpha-numeric characters are [0-9][a-z][A-Z][_], with a max. length of 64 characters.

Daily backup time: Default is 2:00 AM. Click to reveal the pull-down menu to specify a time when the daily backup will take place, such as that system can perform the backup in the off-office hours when network load is lower.

Backup Recording: Select the Recording cameras each by a single click. The recorded videos from the selected cameras will be backed up according to your configuration.

Scheduled backup: ☒ Enable

Backup location

Type: FTP

Site:

Port:

Path:

Authorization: ☐ Enable Test FTP

Daily backup time

Time: 02 : 00

Back up recording

Recording cameras: ☒ 01 - Camera 01

Apply Cancel

Recording time frames: Select the span of time of the recorded video to back up. Default is all around the clock. You can use the Apply and Clear buttons to edit the applicable span of time. You may also select a preset schedule from the pull-down menu on the right, e.g., select to back up only the recordings of the work hours.

Scheduled backup: ☒ Enable

Recording time frames:

All	0	1	2	3	4	5	6	7	8	9	10	11	12
Monday													
Tuesday													
Wednesday													
Thursday													
Friday													
Saturday													
Sunday													

Default schedules:

Connection
 Upload limits: ☒ Enable

Upload limits: If network bandwidth is of the concern, enter an upper threshold for the bandwidth.

The backup related messages are shown below:

Scheduled backup is starting
Scheduled backup has been completed successfully
Scheduled backup settings have been changed
Failed to connect to FTP server
Succeed to connect to FTP server
FTP server error (error code)


If the FTP backup errors occur, the system will retry the connection every 5 minutes until the connection is remade or cancelled. Error messages will display on every failed attempt. For errors not related to connection problems, retry takes place every 3 seconds for 5 times for each recording file. Error messages will display on every failed attempt.

In the event of backup failures, failures will be recorded into system logs. The possible causes can be:

1. The previous backup is not finished when the succeeding backup starts, due to very slow upload speed or network problems.
2. The on-going sheduled backup is cancelled.
3. Errors occur on the storage volume while the backup is taking place. For example, when the hard disk is disconnected, formatted, or the system detects an unconfigured volume.
4. Path errors. The destination directory does not exist.

When finished with the network settings, click on the **Apply** button.

A proceeding backup can be manually cancelled.

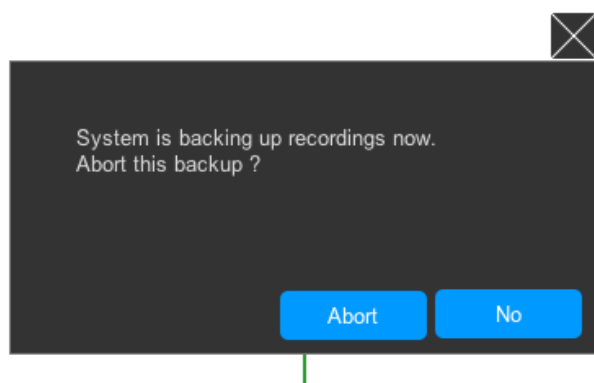


3-4-19. Settings - Network


Settings - Network - Connection mode

There are 3 Connection modes:

1. Ethernet cable - NVR connects to local router via a wired connection.

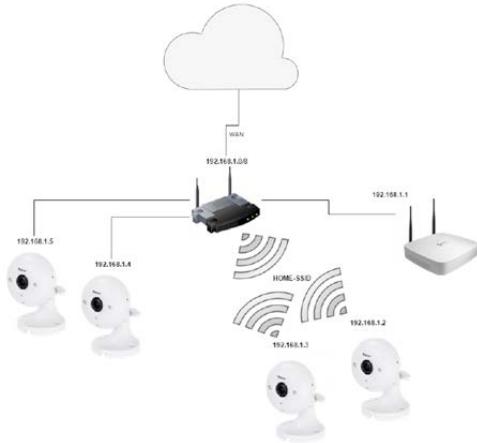


2. Access point (AP) - NVR serves as an AP, and connects to local router via a wired connection. This mode allows wireless cameras to directly connect the NVR.

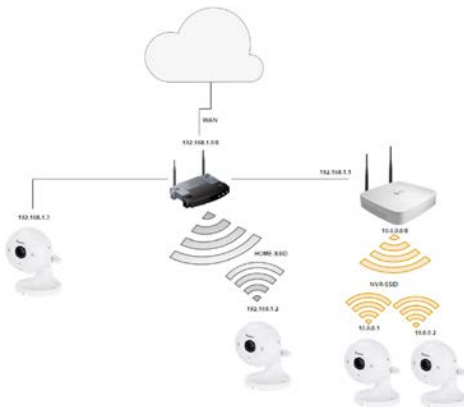

The default SSID and password for the NVR are:
"VVTK-XXXXXX/VVTK-XXXXXX", where XXXXXX stands
for the last 6 digits of the system MAC address.

3. Station - NVR connects to a router via the Wi-Fi connection.

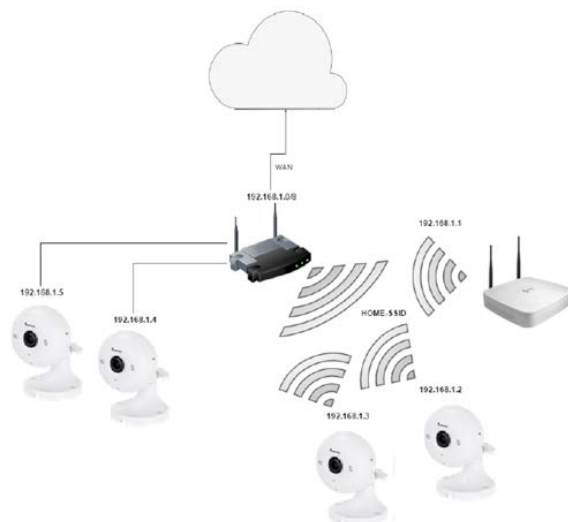

Configuration options:


Wi-Fi (SSID): Enter a known SSID. If your NVR runs in the AP mode, an ID will be automatically generated. The SSID and password should look like this: VVTK-XXXXXX/VVTKXXXXXX, where XXXXXX stands for the last 6 digits of the system MAC address. The applicable alpha-numeric characters are [0-9][a-z][A-Z][-], with a max. length of 64 characters.

Password: The applicable alpha-numeric characters are [0-9][a-z][A-Z][-], with a max. length of 64 characters.

Hide SSID: Hide this NVR (AP)'s SSID.

Channel:

The options are: Auto, 1 ~ 11.

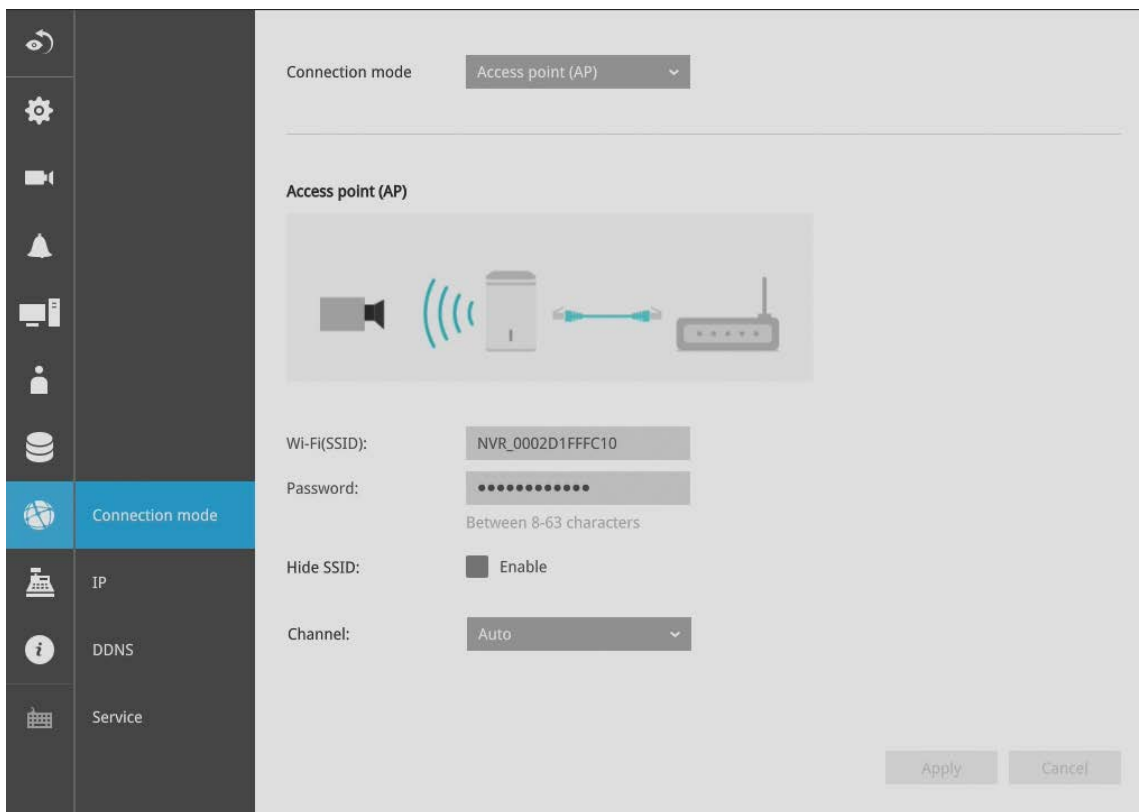

The screenshot displays the 'Connection mode' configuration page in the VIVOTEK NVR web interface. On the left is a dark sidebar with various icons, including a globe icon for 'Connection mode'. The main area has a light gray background. At the top, 'Connection mode' is set to 'Access point (AP)' in a dropdown menu. Below this, a section titled 'Access point (AP)' contains a diagram showing a camera connected to a wireless router. The configuration fields are as follows:

- Wi-Fi(SSID):** A text box containing 'NVR_0002D1FFFC10'.
- Password:** A text box with masked characters (dots), with a note below it stating 'Between 8-63 characters'.
- Hide SSID:** A checkbox labeled 'Enable' which is currently checked.
- Channel:** A dropdown menu set to 'Auto'.

At the bottom right of the main area are two buttons: 'Apply' and 'Cancel'.

When in the Station mode, and you want to connect to an AP, the applicable alpha-numeric characters are [0-9][a-z][A-Z][-], with a password length between 8 and 63 characters.

Settings - Network - IP

DHCP: Default is selected, the server obtains an available dynamic IP address assigned by the DHCP server each time the system is connected to the LAN.

Manual setup: Select this option to manually assign a static IP address to the NVR.

Enter the Static IP, Subnet mask, Default router, and Primary DNS provided by your ISP.


Subnet mask: This is used to determine if the destination is in the same subnet. The default value is "255.255.255.0".

Default router: This is the gateway used to forward frames to destinations in a different subnet. Invalid router setting will fail the transmission to destinations in different subnet.

Primary DNS: The primary domain name server that translates hostnames into IP addresses.

Secondary DNS: Secondary domain name server that backups the Primary DNS.

When finished with the network settings, click on the **Apply** button.

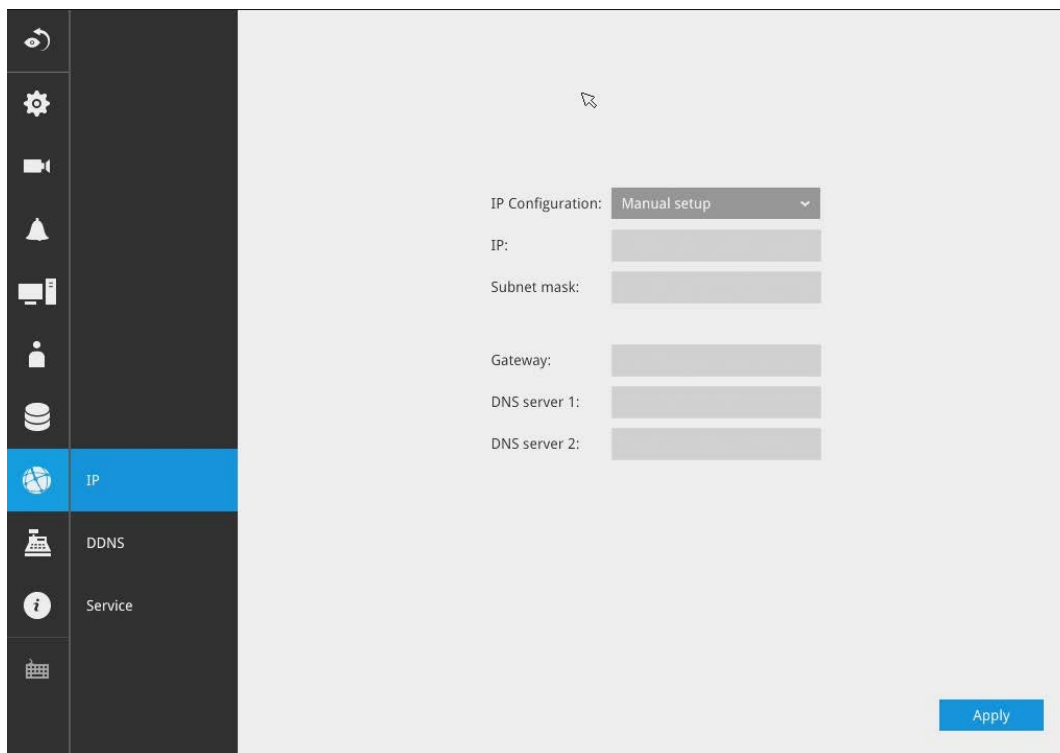

The screenshot shows the 'IP' configuration page in the VIVOTEK settings interface. On the left is a dark sidebar with various icons; the 'IP' icon (a globe) is highlighted in blue. Below it are 'DDNS' and 'Service' options. The main area has a light gray background. At the top, there's a 'Manual setup' button with a dropdown arrow. Below this are input fields for 'IP:', 'Subnet mask:', 'Gateway:', 'DNS server 1:', and 'DNS server 2:'. Each field is currently empty. At the bottom right of the main area is a blue 'Apply' button.


Settings - DDNS

VIVOTEK provides Safe100.net, as a free DDNS dynamic domain name service for users who want access from the internet or a domain name service for the NVR. VIVOTEK maintains a database of product MAC addresses for the Safe100.net service, and you can apply one domain name for each NVR system.

DDNS Enable: Select this checkbox to enable the DDNS setting.

Enter a Host name, Email address, and password twice, and then click **Apply** to proceed.

Make sure you have internet access.

Click the **Register** button. The terms of service agreement window is selected from a checkbox at the bottom. Click  to read the license agreement terms.

The acceptable characters for email address are: [0-9][a-z][A-Z][!][#][\$][%]['*][+][-]/[=][?][^]_['][{}|[]][~][.]. Two successive periods, [..], are not acceptable. The address field can accommodate up to 256 characters.

Use only alphabetic and numeric characters for the password. The maximum number of characters is 64.

When completed, a confirm message will prompt. You will also receive a confirm Email. You can now access your NVR system using the xxxx.safe100.net domain name address. Note that access from the Internet should be routed to the private IP assigned to your NVR, using methodologies such as port forwarding, etc.

Settings - Service

By default, the NVR service and video streaming are accessed via HTTP port 80 and RTSP port 554. You can designate a different port number if the need arises. Usually it is not necessary to change these ports. HTTPS encrypted connection is enabled by default.

HTTP port: 80

HTTPS port: 443

RTSP port: 554

CMS & iViewer: ☒ Allow access

This password is only for CMS connection. iViewer login account is the same as NVR

Port: 3454

CMS password: [Reset](#)

[Apply](#)

Instead of a web console, you can also access the NVR and the subordinate cameras using the **iViewer** and VIVOTEK's **VAST** software. The NVR can be managed as one of the sub-stations in a hierarchical device structure.

Set up a password for access from the VAST server before you can join the NVR to a VAST centralized management configuration. For access from the iViewer, you log in using the same user name and password for the login to the NVR.

Below is the screen showing the sub-station recruitment process from a VAST server.

Station Tree for VVTK_Station1

- VVTK_Station1(127.0.0.1)
 - ND8321(192.168.6.208)

Address: 192.168.6.208

Password:

Communication Port: 3454

[List Substation Hierarchy](#) [Insert](#) [Search...](#)

Hierarchical management tree

[Delete](#) [Update](#) [Close](#)

Search Stations

☒ List the stations which are not inserted

☐ List all stations [Refresh](#)

Station List

Name	Address	Model	HTTP Port
RD1_NEIL_5235	192.168.6.207	VAST	12345
ND8321	192.168.6.208	ND8321	3454

3-5. POS

This window allows the integration of a customized POS machine with the NVR.

The benefits of NVR POS integration benefits include:

1. POS exception report that includes item void, bill void, abnormal bill clear, customer returns, contents changed after sale, unmatched amount of products in stock, unusual transactions in a short time, aborted bill attempts.
2. Exception report with video.
3. Managing the sales of retail goods and record the transactions.
4. The register acquires the information of members and products from each transaction, then sends data to a POS server (for management and later analysis). POS should be able to list abnormal situations and notify the manager
5. Disputes between cashiers and customers can be resolved with video evidence.

Note that the integration between NVR and a POS machine requires management of POS data. Please contact VIVOTEK for the supported POS machines.

To configure the association with a POS machine.

1. Enter a name for the POS machine and the machine/server's IP address. The default port number, 23, need not be changed.
2. Select a related camera, e.g., one that has its field of view covering the checkout area.
3. Select a data directory, a storage volume, where transaction data will be kept.
4. Enter the transaction details that will be highlighted on the live view window. For example, you can choose to highlight the amounts larger than a preset number, >\$1000, or enter the item name. You can enter multiple highlighting criteria.

POS name 1

Name: POS name 1

IP: 192.168.6.151

Port: 23

Related camera: 05 - Camera 05

Data directory: Volume 1

Keep transaction data: 60 day(s)

Highlight transaction details on Liveview

Press "Enter" for each keyword

All >1000


All pineapple beer candy whisky

Apply Cancel

For example, for an amount exceeding \$2000, the number on screen is highlighted in a different color.


ITEM	QTY	PRICE
2944x2944		
H. 招牌蕎麥冷麵	1	140
S. 日式山菜蕎麥冷	1	210
● 櫻花蝦芙蓉蕎麥	1	220
蕎麥麵冷	1	370
稻庭烏龍麵 冷	1	500
明太子山菜泥蕎	1	240
招牌蕎麥湯麵	1	140
日式山菜蕎麥湯	1	210
鹽岐烏龍麵 湯	1	430
昆布山菜蕎麥冷	1	210
TOTAL		2670
PAYMENT		2670
CHANGE		0

To allow remote access from a VAST2 server, go to **Settings > Service**. Select the Allow access checkbox and provide a CMS password to allow remote access.

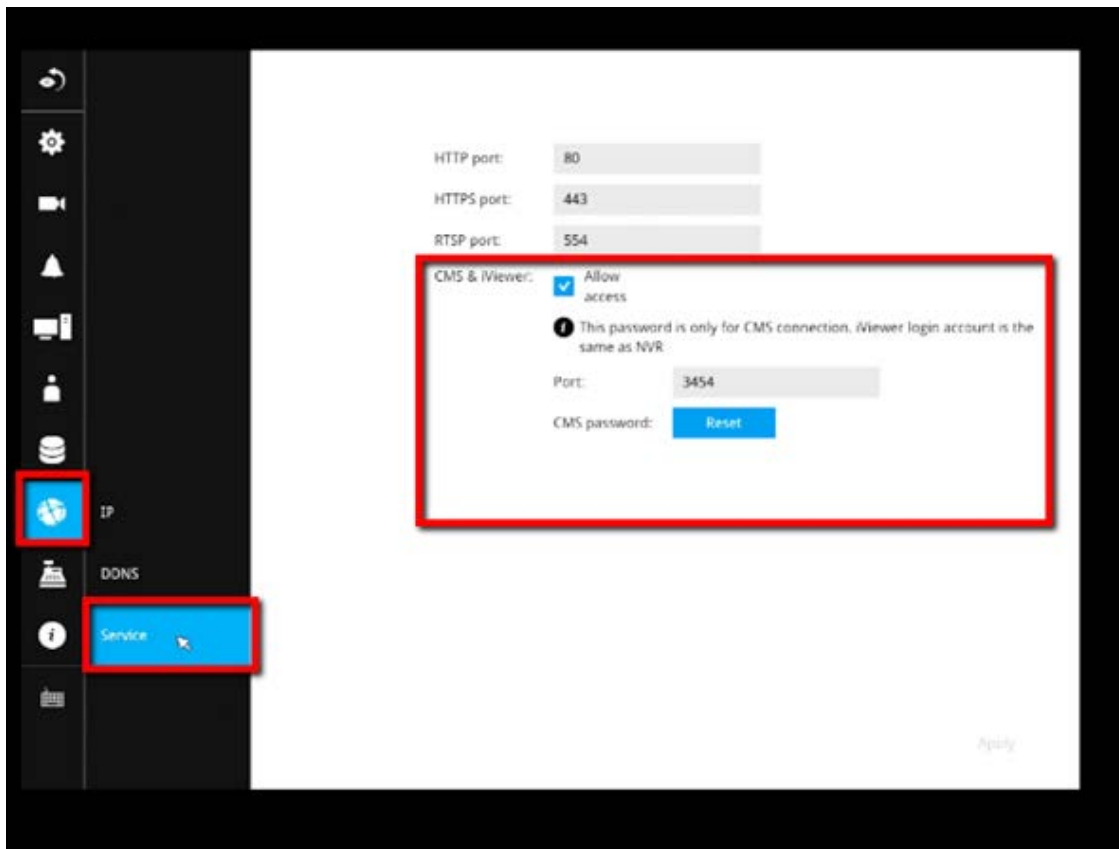

3-6. Information

This window shows the revision number of the firmware running on this machine.

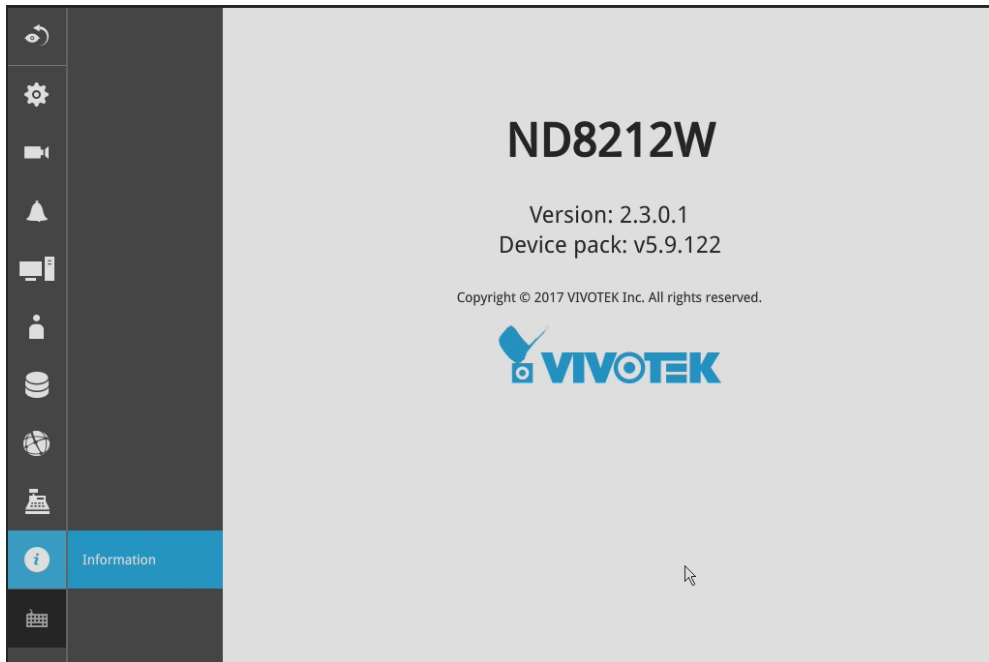


Section Two

Management over a Web Console


There are two different interfaces on the system:

1. One is connecting mouse and keyboard, and an HDMI cable to a TV screen or monitor. The local management thus made is described in **Section One** of this manual.
2. The other is accessed through the Ethernet connection. Management via a web console will be described in **Section Two** of this manual.

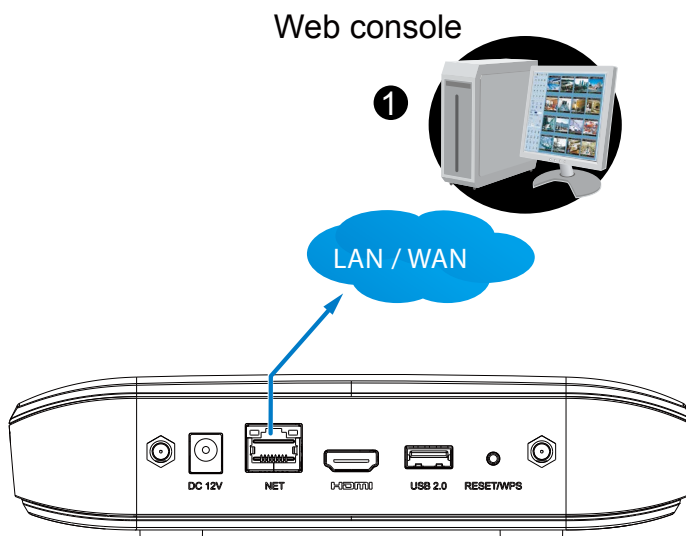

Chapter Four Login and Getting Started


4-1. Login

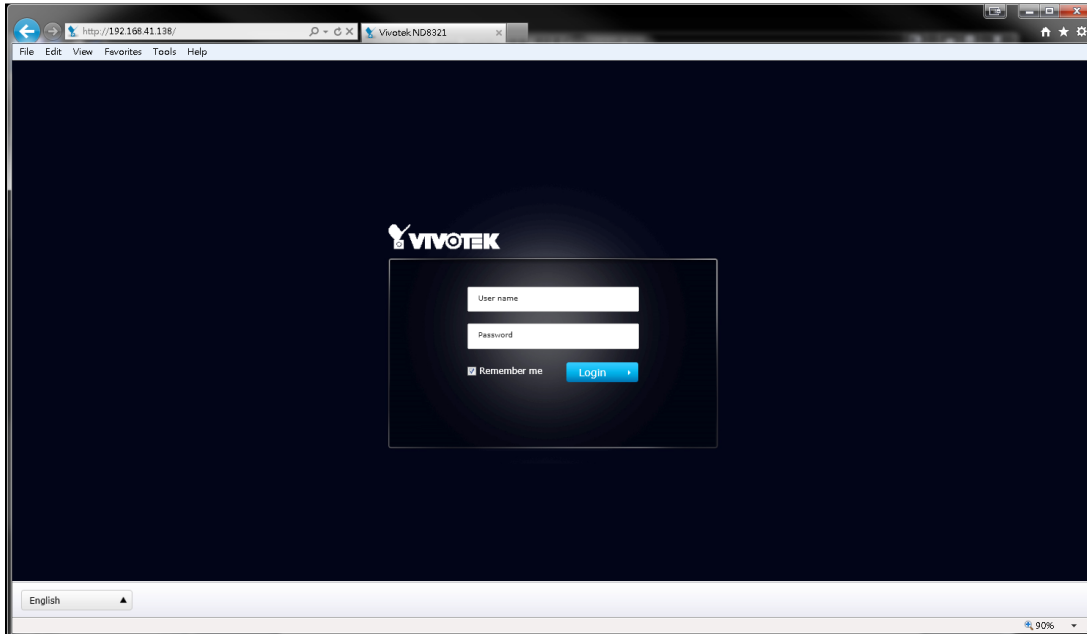


This is the login page on the browser. The minimum for resolution is 1280x960.

If you enable the IE7 compatible mode when using the IE8 browser, please disable the compatibility function. While you are in the browser, press F12 to check its status.

 It is highly recommended that you should change the default password. Please refer to **Settings > Security > User account** on page 101 to see how to prevent unauthorized access. The system will prompt you if you entered an incorrect user name or password.



Remember me: Your user name will be preserved in browser cookies for two days if you select the Remember me checkbox. The user name will be automatically erased if you do not log in to the system for two days.

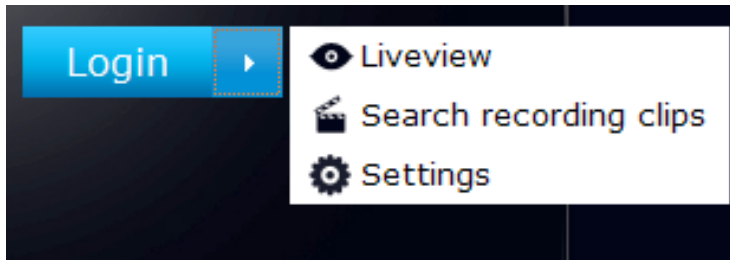


You may login to a different software utility by unfolding the side panel on the **Login** button.

You can also select a different language using the **Multilingual** selector menu on the **lower left** corner of the Login screen. The functional items, menus, and dialogues will then be displayed using the selected language.




Remember me:


Select the checkbox to save your user name for use on the next login. The user name will be preserved in browser cookies for two days. If you do not login within the next two days, the user name will be erased.

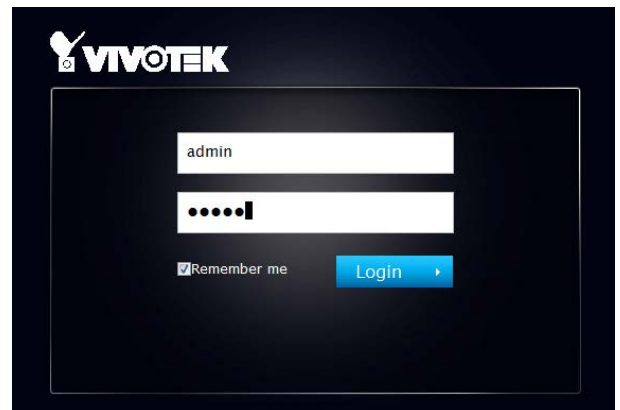

Login errors: below are the login errors that might occur.

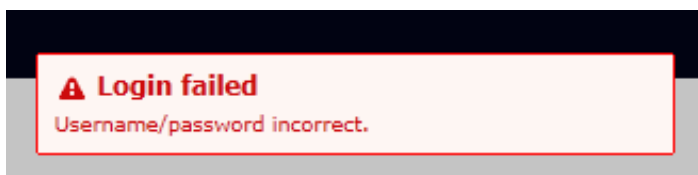


A Login failure can result from the incorrect user name and passwords.

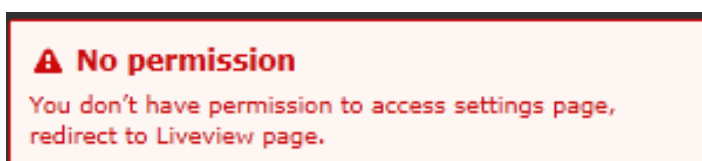


The No permission error occurs when a user logs in using an authentication that has no access rights to the Settings page. He will then be re-directed to the Liveview page.

Login options:

You may also mouse over the Login button to display the login options. You can then enter the Liveview, Playback, or Settings window.

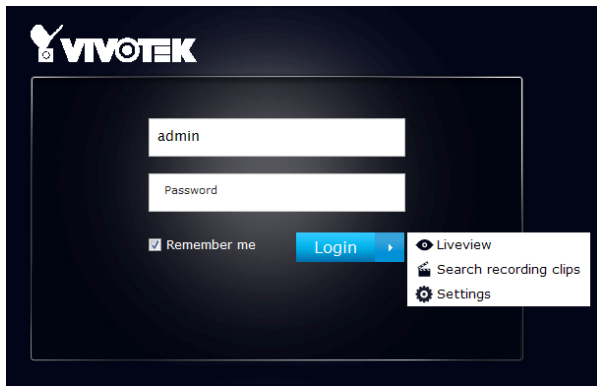


The NVR system features a simple UI structure which consists of a Liveview window, a Playback utility, and a system Settings window. Once logged in, you can move from one window to another by selecting the hot link buttons on the upper right of the screen.

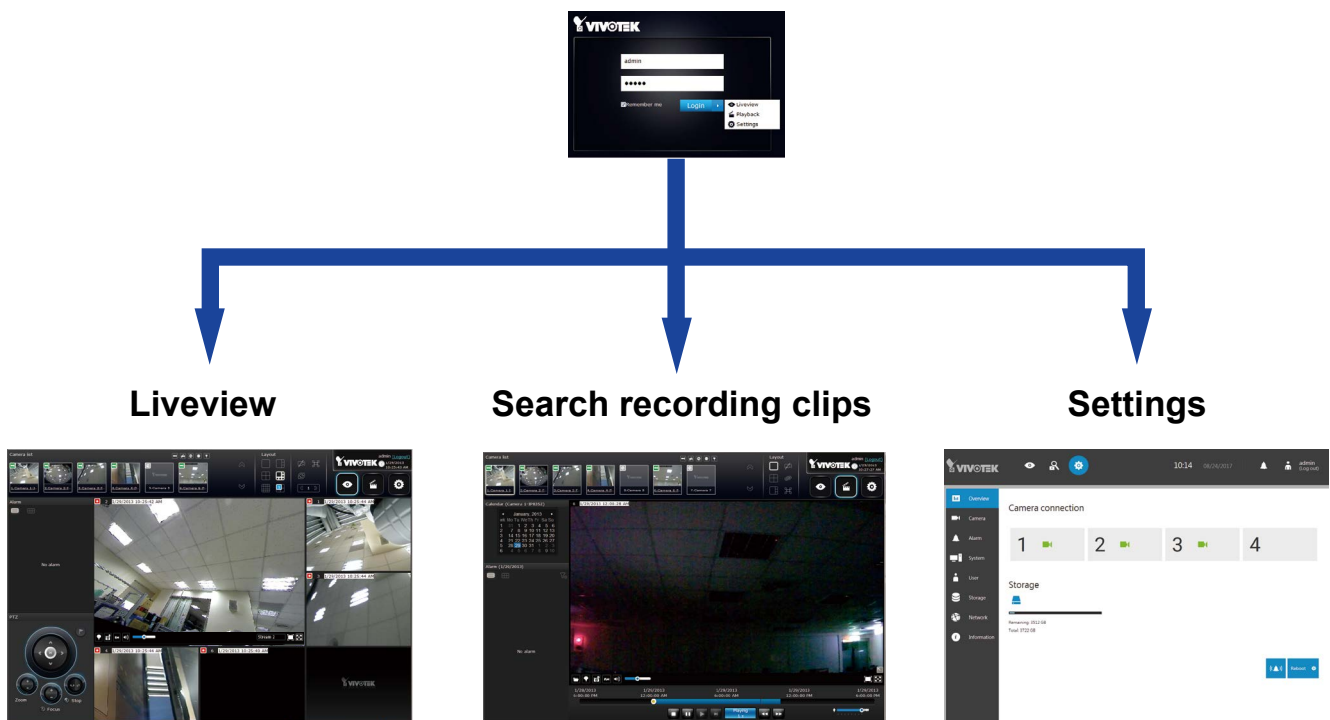


⚠ IMPORTANT:

1. Before operating the NVR, make sure you have properly installed hard drives and configured the storage volumes. Otherwise, you will not be able to operate some of the system's functionality.
2. Since the NVR system comes with 32-bit plug-ins for screen control, if your PC runs a default 64-bit IE browser and you manually enter the NVR's address on the browser, your browser session may malfunction. Instead, if you double-click on the discovered NVR on the IW2 utility, a 32-bit IE browser will open.
3. When you log in to the Liveview or Playback interface to stream a live or recorded video, install the ActiveX plug-ins. If it does not prompt when you log in, install plug-ins when you try to playback a recorded video. You may then need to re-start the IE browser console.

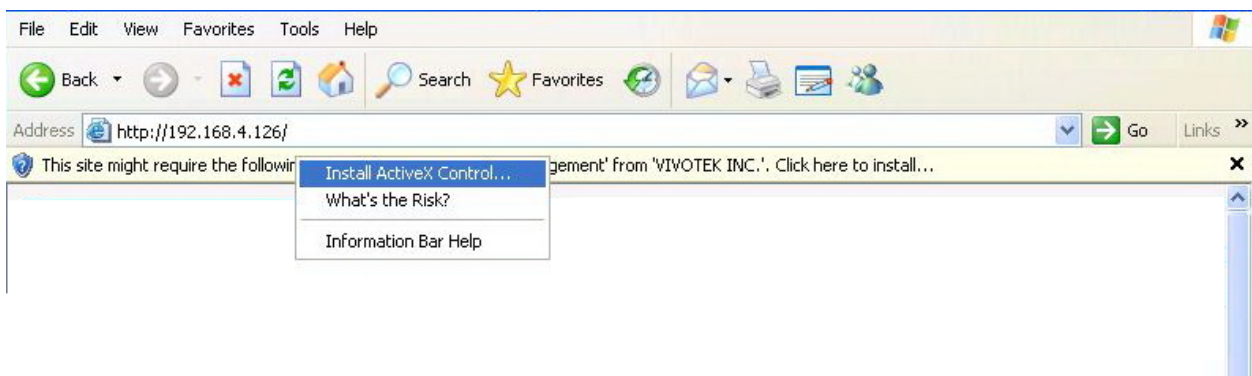

4-2. Graphical Layout and Screen Elements - Liveview

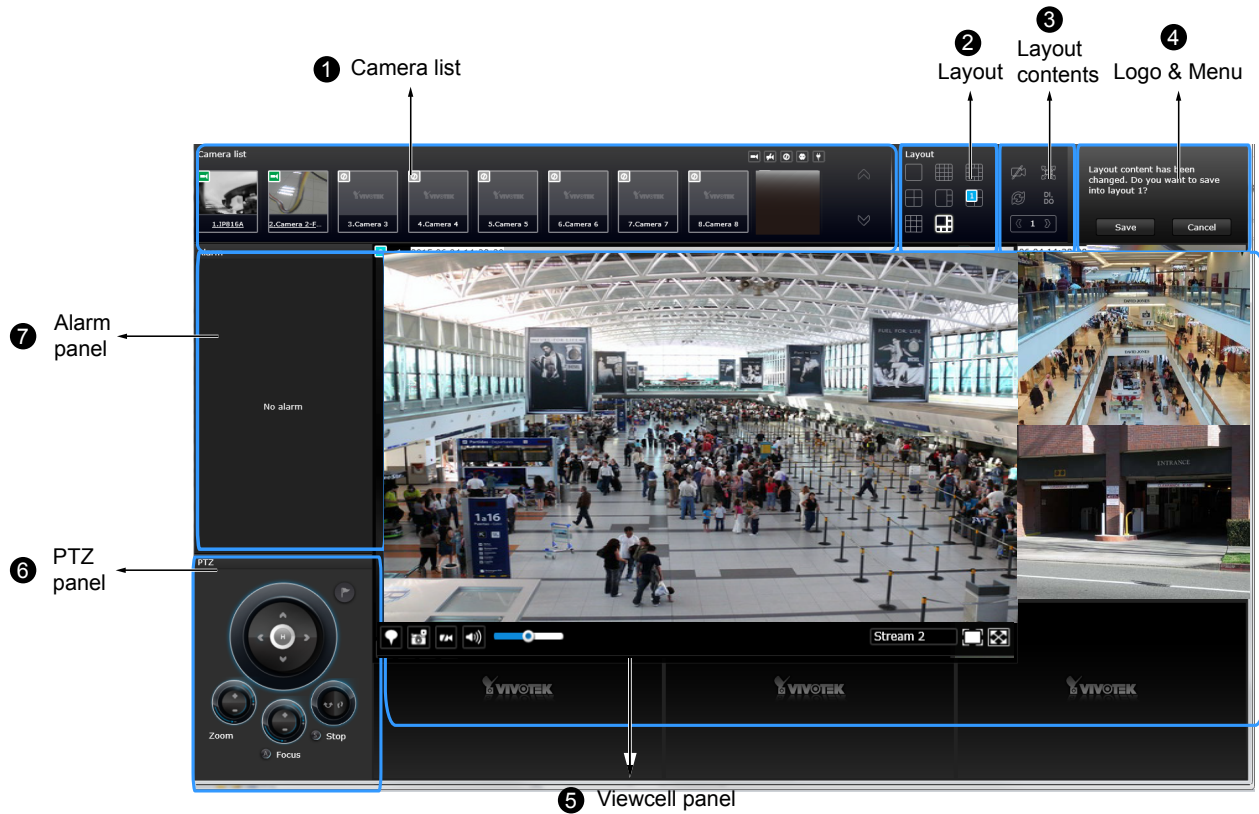


Once you log in, the system defaults to the Liveview page, which provides access to other configuration utilities, live view screen, and other functional panels. The screen elements are described as follows:

Item	Name	Description
1	Camera List	Provides a glimpse of all cameras inserted into your configuration. Basic information is also provided along with a screenshot.
2	Layout	Provides access to various layouts
3	Layout contents	Provides functions to extend, rotate, and redo the layout. System DI/DOs are also shown in here.
4	Logo & Menu	Provides access to the Playback and System Settings utilities, as well as system time and logout function.
5	View cell panel	Displays video streams from one or multiple cameras. Snapshot, streaming, bookmark, and audio control functions are also available on individual view cells.
6	PTZ panel	Exerts Pan/Tilt control on a selected view cell if the camera comes with mechanical PTZ mechanism. Note that the use of joystick is currently not available.
7	Alarm panel	Reports alarms transmitted via cameras' DI connections or those by the Motion Detection, Tampering, etc.

Each panel will be described in further discussions.

4-2-1. Camera List Panel

The camera list displays the recruited cameras by the sequential numbering order you configured in the System Settings utility.


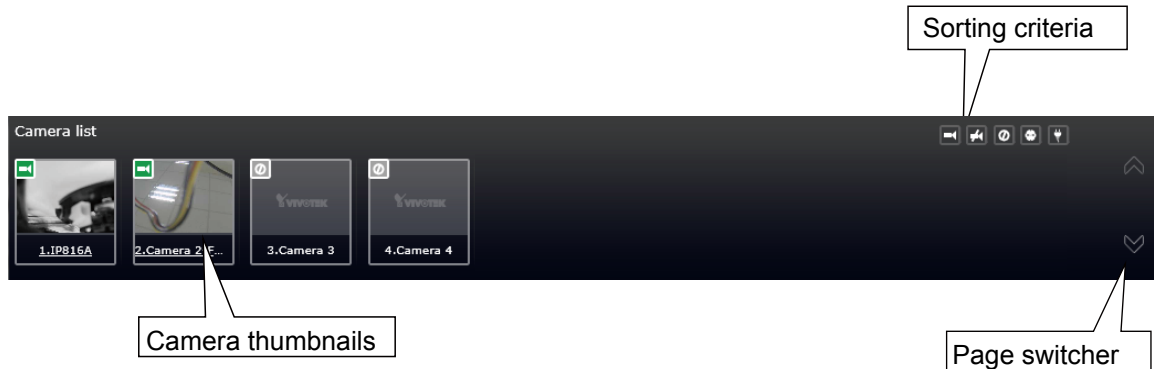


Depending on the size and screen resolution of your monitor, the snapshots of 8 cameras are displayed in this panel. If a user logged in using a credential of a limited access, he may only see cameras that he can access instead of all of the cameras.







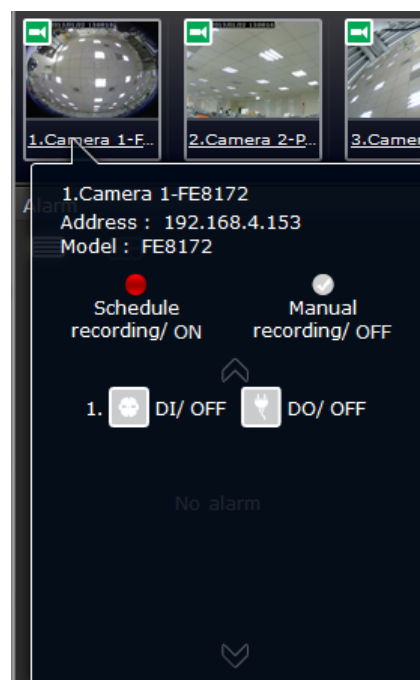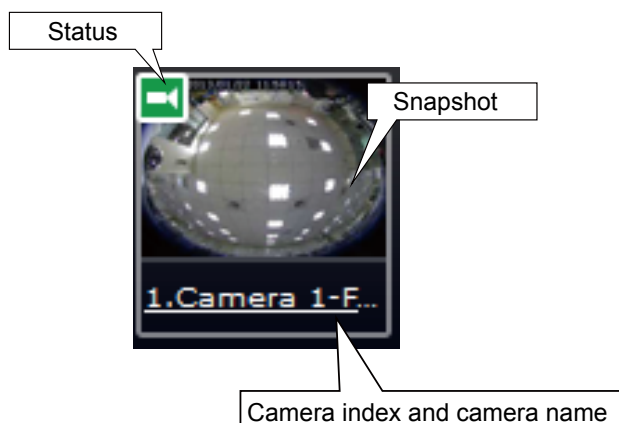


To arrange a view cell layout, users can click and drag a camera to a view cell. Once connected, a camera's video stream is displayed in the view cell.

Camera Thumbnail:

A mouse click on the camera name under the thumbnail brings forth the summary of IP address, model name, recording setup and DI/DO information.


 





- * **Snapshot:** the camera's image snapshot is replenished every 5 minutes. If a camera is disconnected, the last image taken will be used to represent a camera.
- * **Camera index & Camera name:** Placing the mouse cursor on top of a camera text displays the camera index number and the camera name. You can click on the camera index to display the information box.
- * **Status:**

	Online: the online status can be accompanied by the DI/DO icon  
	Offline: camera is disconnected.
	An unconfigured camera instance
	Digital input is triggered
	Connected and recording video to system storage
	Connected with live streaming
	Disconnected or trying to establish a connection

Sorting criteria

Use the sorting buttons to re-arrange the order of the cameras on the list. Cameras that match the condition will be brought to higher places on the list (front of the order) regardless of its original camera index.








 
	Online: the online cameras.
	Offline: the offline cameras.
	Unconfigured camera instances
	Cameras whose Digital inputs have been triggered
	Cameras whose Digital outputs have been triggered



NOTE:

For online cameras, the snapshots on the camera list are refreshed by every 5 minutes, and therefore may not represent the latest occurrences on the surveillance areas.




4-2-2. Layout

Layout	1x1
	2x2
	3x3
	1+3
	1+5
	User layout #1
	User layout #2
	User layout #3
	User layout #4

By default, 5 typical layouts are provided for the user. They include: 1x1, 2x2, 3x3, 1+5, 1+3, 1P+6, 2P+3. System default is the 2x2 layout. Cameras that do not fit into the first page of a layout, say, a 3x3 layout, will be displayed on the succeeding layout pages.

The ND8212W supports 4 channels, some of the layout options will be unavailable.


Each functional button on the screen is activated by a mouse hover. For example, the below states designate user's operation on a button:

1. : not selected.
2. : moused over, and is ready for selection.
3. : selected, and is taking effects.

Because the maximum number of supported cameras is 8 (ND8312), the last view cell on the 3x3 page configuration will be useless.


Only an administrator can change and preserve a custom layout, and every user can designate a specific layout to be displayed when he/she logs in. The default layout for each user is stored in a browser's cookies.

Whenever changes are made to the current layout, a message prompt will appear on the side of the layout panel reminding you to save your current setting.

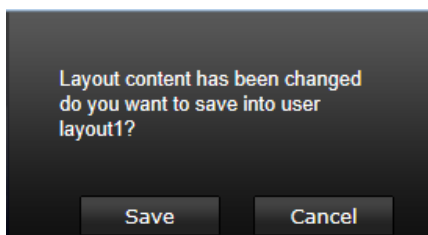

Note that a user who did not log in as an administrator can change a layout, but his configuration changes (with cameras placed on view cells) **will not** be saved.

User Layouts

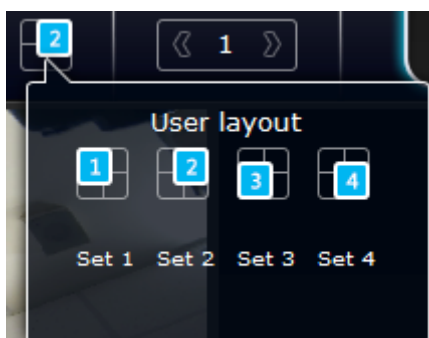


 
 



There are another 4 user layouts that can be individually configured. An administrator can insert camera views into these layouts, and save the configuration. These user layouts can be seen by all users.

If you click the **Rotate** button before the configuration changes can be saved, your configuration changes will be lost.

4-2-3. Layout contents


A few functional buttons are available on the Layout contents page.

	Clears all view cells on the current layout.
	Full view: extends the view cells on the current layout to the full of the screen.
	<p>Rotate: the rotate function lets system display successive layout pages by the intervals of 10 seconds. The layout page that does not contain camera views will be skipped.</p> <p>A Rotate action will stop when you</p> <ol style="list-style-type: none"> 1. move to another page, 2. move to a user layout, 3. click to select a view cell, 4. remove a camera from view cell.
	Click to display the NVR's DI/DO statuses.
	If your current layout spans across multiple pages, use the arrow buttons to switch from one page to another. The index number of the current page will be shown between the arrow buttons.

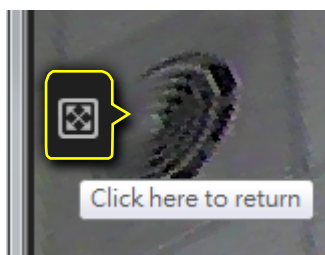

When your current layout is displayed in a full view, move your cursor to the left center of the screen to return to the default Liveview screen. The **Return** button will appear.

4-2-4. Logo & Menu

A logout button, system time panel , and 3 hot link buttons to access the **Liveview**, **Search recording clips**, and **System Settings** utilities.



The system date and time refers to the date and time kept on the NVR system's real time clock.

Due to the limited space for the user name, user name may be partially displayed until you hover your mouse cursor.


IMPORTANT:

Your configuration changes will be lost if you click one of the hot link buttons to move to another utility window. For example, you have changed your Live View layout and then click on the Playback button, you will enter the Playback window without saving your configuration. **Save your changes before you use these buttons.**


4-2-5. View Cell panel

A single view cell is shown below. Each view cell contains a video stream display area, an information bar, and functional buttons at the bottom. A view cell is displayed in Normal, Focused, or Maximized mode.

1. **A single click** selects a view cell from the View Cell panel, enables its function buttons, and turn it into the Focused mode.
2. **The 2nd click** maximizes the size of the view cell to the full of the panel.
3. **The 3rd click** shrinks the maximized view back into the focused mode.

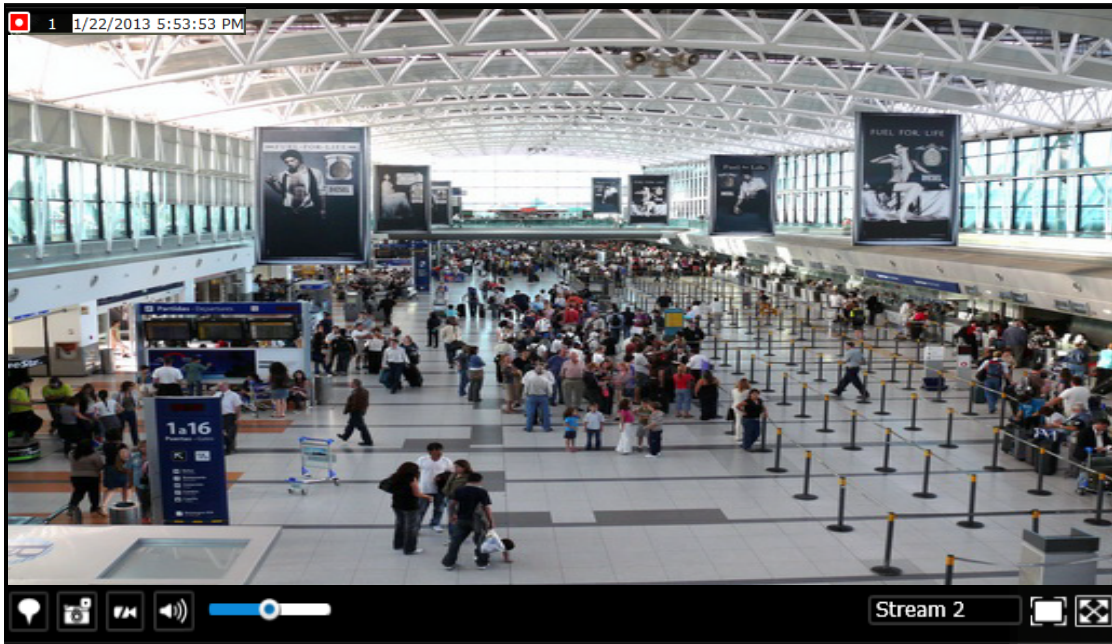


Although the system automatically selects the video stream to display on the view cell, you can still manually select a different video stream from the Stream tab below.

To deselect a view cell and return to the normal view, click on the **Restore**  button at the lower right of the window.


Adding Cameras to View Cells

1. Click and drag a camera from the camera list to an unoccupied view cell.
2. Double-click a camera on the camera list. The camera will be added to the first available view cell.

To deselect a view cell and return to the normal view, click on the **Restore** button at the lower right of the window. You can also click on another view cell to continue adding other cameras.

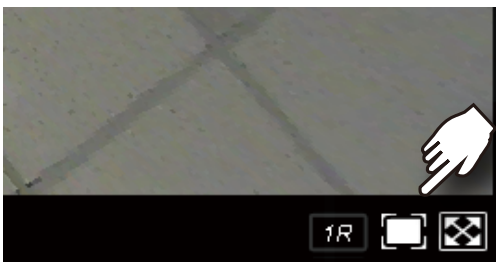


A view cell attempting to connect to a network camera will look like this. If the connection attempt takes a long time, it may result from network problems or incorrect configuration with video streaming. For example, you may have configured the camera to be streaming a 5MP stream. The NVR uses video stream #1 for recording, and stream #2 from cameras for live viewing. You should then open an individual web console with the network camera to change its video streaming configuration.

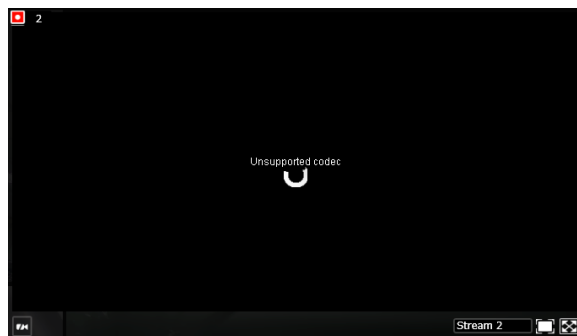


IMPORTANT:


A camera can be inserted into multiple view cells. This way, a camera with a wide field of view, , can simultaneously display different regions of interest on different view cells.

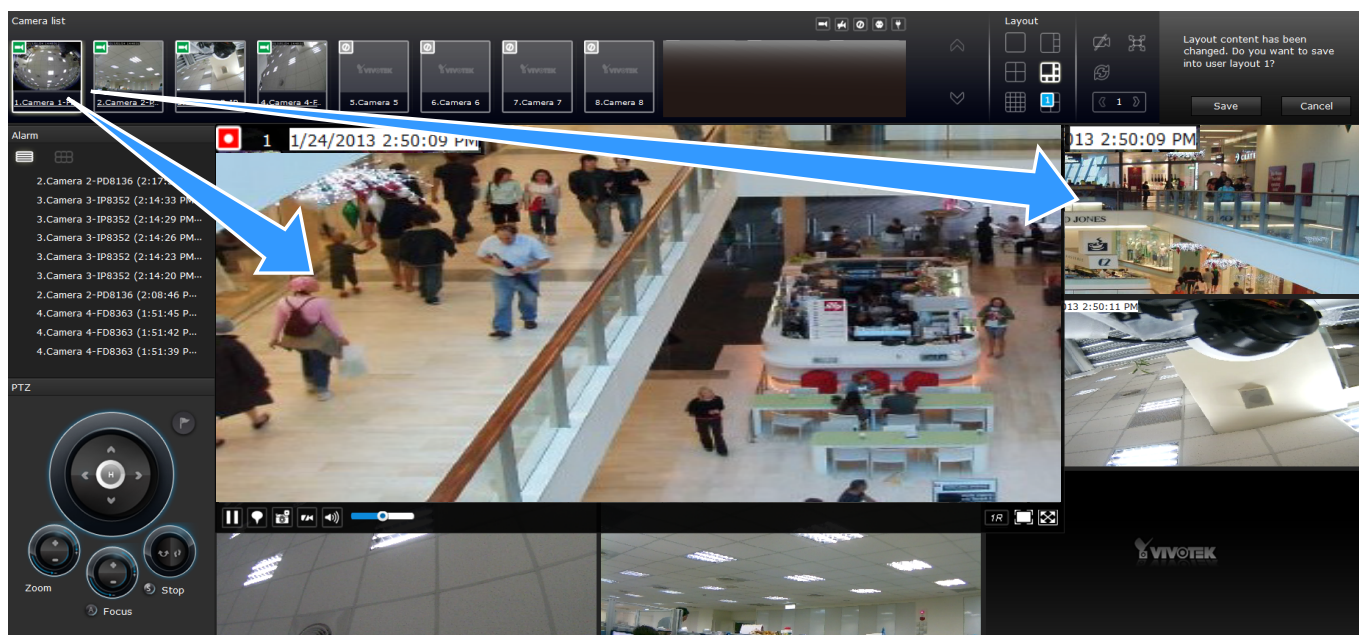

If the current layout already contains the max. number of cameras - the following message will prompt.

 **Not able to add camera**
Current layout already has 16 cameras.

If you are using the 8-CH model, there can be more than 8 view cells across multiple layout pages, e.g., on the second page of the 1+5 layout. Placing a camera in the 9th to 11th view cells will bring out the following message.

 **Not able to add camera**
Could not place camera here. Try other view cells.

Information Bar



Status icon	Description
	Connected with live streaming; a single click on this icon can trigger a manual recording.
	Connected and recording video to system storage.
	Disconnected or trying to establish a connection.

A mouse hover over the status icon will produce the following messages:

1. "Connecting..." or "Cannot connect"	Connecting to a camera, or connection problem might have occurred.
2. "Live streaming"	Video is being streamed.
3. "Recording"	Currently recording the video stream.

 
Camera index: an index number appointed to a camera following the order you inserted cameras during the initial setup.








 






Video time: The time configured on the NVR system is displayed here.

The time display format is as follows:

yyyy/m/d/yyyy	hh:mm:ss	2014.05.05 16:15:41
---------------	----------	---------------------

Tool Bar Buttons



Buttons	Description
	Resumes streaming.
	Pauses a video stream.
	Adds a Bookmark (that saves a short description and a one-minute footage from the current feed)
	Takes a snapshot.
	Removes camera from the view cell.
	Mutes (if there is audio input from the camera.)
	Unmutes
	Stream selector.
	Restores the view cell's original position on the Liveview panel.
	Maximize the size of current view cell.
	Activates the PiP function.
	Disables digital zoom (PiP).
	<p>Fisheye display modes - if the view cell contains video from a fisheye camera, the fisheye display mode selector will be available:</p> <p>1O: the original circular view. 1P: the panoramic view. 1R: the regional view.</p> <p>Please refer to the fisheye camera's User Manual for more information.</p>
	Volume controller

Tool Bar Functions in Details

1. **Play** and **Pause** buttons:


These buttons pause and resume a video stream currently being played on your web browser. Note that this operation does not affect the video recording taking place between a camera and the NVR system.

2. **Bookmark:**


This function allows you to place a bookmark on a recorded stream when you observe a situation from your live view window. The bookmark is preserved as a one-minute footage along with a short description of a particular incident. The precondition of using this function is that the video stream, while you are watching it on the view cell, must be recorded to the NVR at the same time.

To add a bookmark,


1. Click on the button,
2. Enter a short description that can be as long as 120 characters.

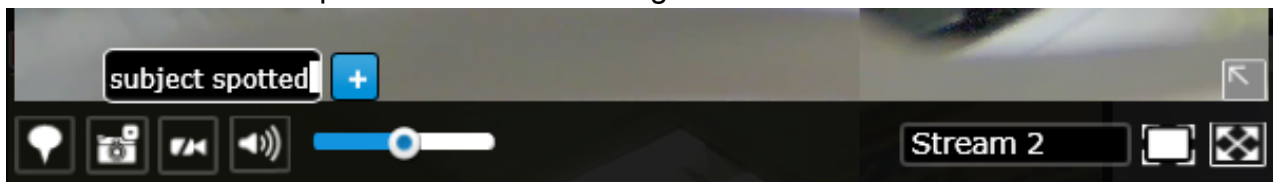

3. A confirm message will prompt at the lower right of the screen.

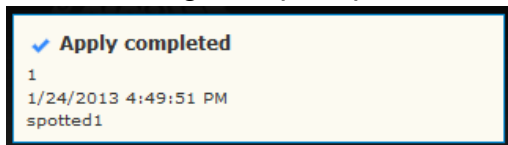


If the current video feed is not being recorded to storage, you will receive the following message:

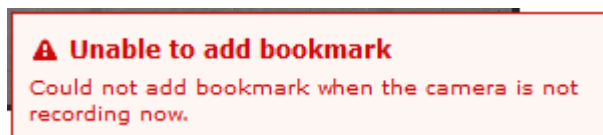

Errors with creating bookmarks may also result from network and server errors.


Below are two bookmarks (yellow tags) shown along with a recorded video in the Playback utility screen. Bookmarks help find and retrieve important moments in a recorded video.

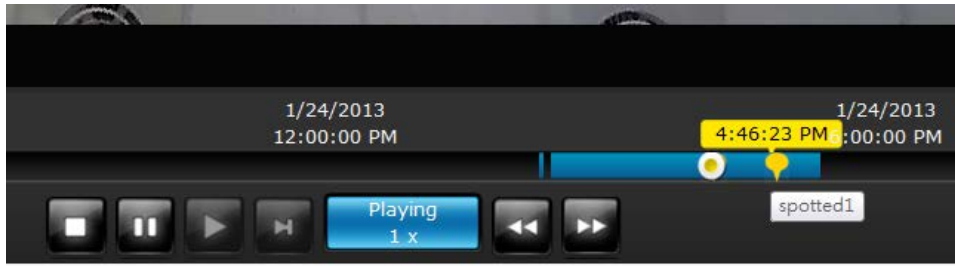**NOTE:**

Bookmarks will be erased if the user/system erases the video clips they were appended to. For example, system will recycle storage space by deleting old videos along with their bookmarks.

3. Snapshot:

This button produces a snapshot prompt. You may then right-click on the snapshot image to save it to a preferred location.

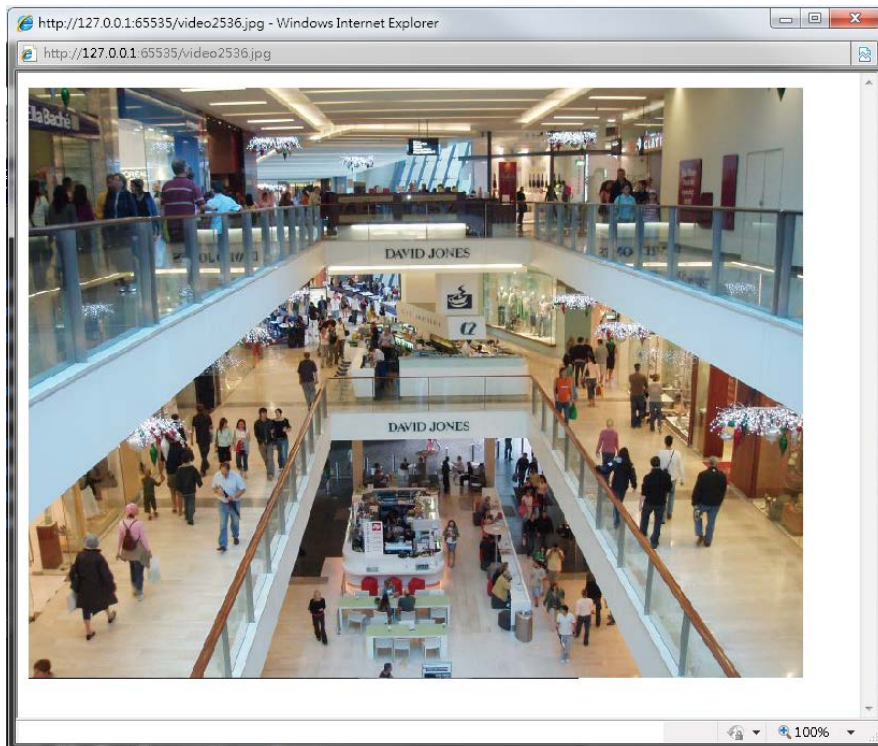

Note that the size of a snapshot is equal to the frame size set for the video stream.

4. Clear:

This button removes camera from the current view cell. The view cell will then be available for other cameras

5. Mute and Unmute:

These buttons stops or resumes audio from a live stream.

6. Restore:

This button restores the view cell's original position on the Liveview panel.

7. Maximize:


This button extends the size of current view cell to the full of the Liveview panel.

8. Activate and Deactivate PiP function:

PiP is short for **Picture in Picture**, a function that provides digital zoom into a live video. When activated, a Global view window will appear at the lower right of the view cell as shown below. You can display only a portion of the complete video frame as an area of your interest. Using a click and drag on the ROI window, you can instantly move to other areas within the video frame.

You can resize the ROI window by a mouse hover on the lower-right corner of the window until the resize mark appears. The default size of the ROI window is 25% of the Global view.

Click on the deactivate  button to close the PiP window.

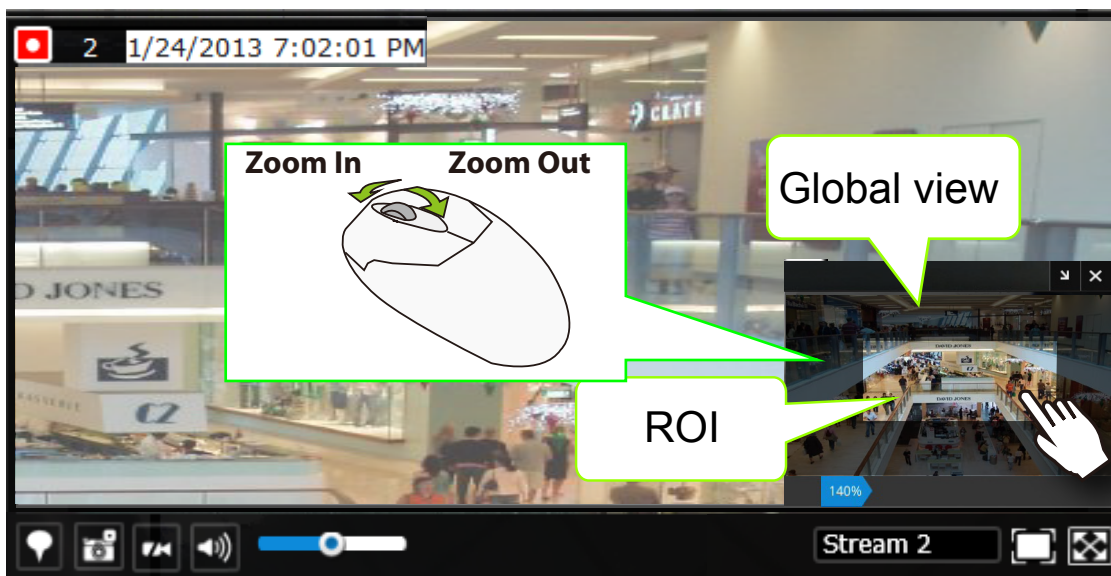

Note that not every camera supports the PiP function.

NOTE:

The Talk function in the two-way audio is currently not supported.



9. Volume controller:

The volume control takes effect when audio input from the network camera is available. Audio is heard only from a focused window, one that you selected by a mouse click from the Liveview panel. Some network cameras do not come with an embedded microphone, and its audio is disabled by system default. The actual sound level is also dependent on the system volume of the PC having a web console with the NVR.


The sound volume configuration will not be preserved when a camera is removed from a view cell, web console is restarted, or when the Liveview layout is re-configured.

10. Fisheye display modes:

A view mode selector icon appears in a view cell of a fisheye camera. You can click to select a viewing mode. The viewing modes are illustrated as follows:

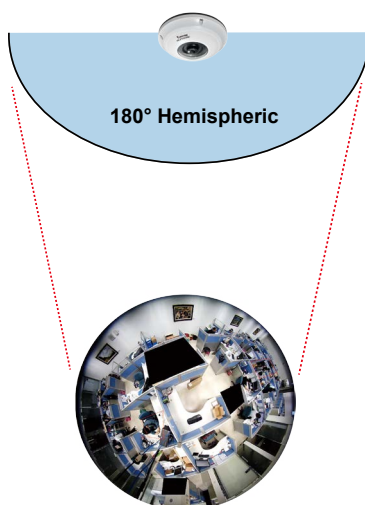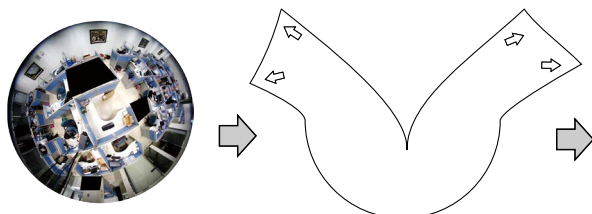1O (Original view)**1O View (Original View)****1P (Panoramic view)**

1R (Regional view)

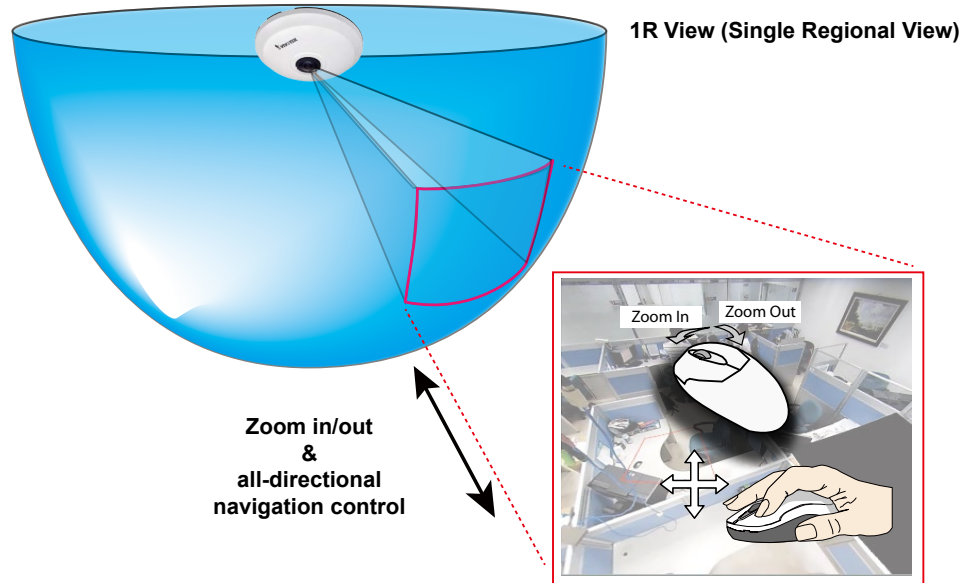

The 1R mode (or rectilinear) provides access to one image section within the hemisphere. You can zoom in or out (using the mouse wheel or PTZ panel) or travel through to other areas within the hemisphere using simple mouse clicks and drags. A single click on a particular object can bring the object to the center of your view window. Click and hold down the left mouse button, and you can swipe the view both horizontally and vertically.


Note that if your fisheye mounting type is set to the **Wall Mount** type, your screen control in the view cell will be limited to 90° pan and tilt. Make sure your mounting type and camera settings have been properly configured.

Because fisheye lens can cover a wide surveillance area, you can insert a fisheye camera into multiple view cells, and let different regional views display in these view cells. In this way, you can have a glimpse of multiple areas of interest, and the configuration of these different view windows will be preserved when you save your layout settings.

4-2-6. PTZ panel

The PTZ panel takes effect for cameras that come with mechanical PTZ functions. It does not support digital PTZ functions. To utilize its functions, select a view cell populated by a PTZ camera, such as a speed dome.

Depending on the individual functions that come with PTZ cameras, some functions will not be available for every cameras. For example, the zoom controller will not apply for a PTZ camera that comes without a mechanized zoom module, such as PD8136 and PT8133.

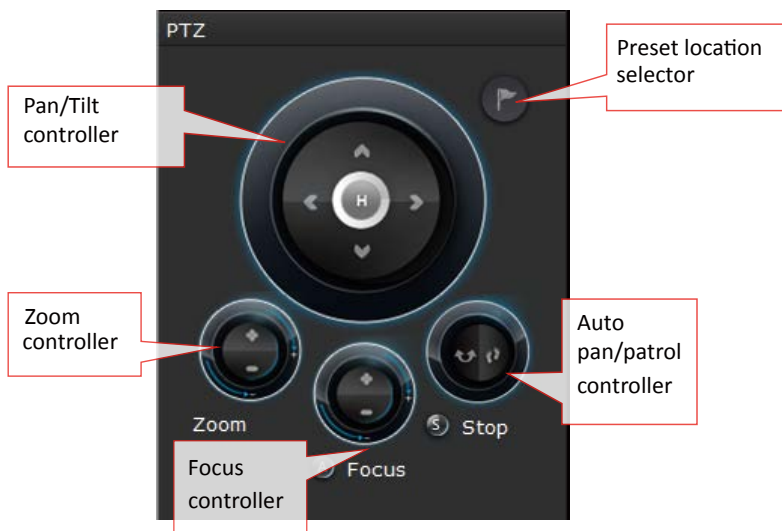

Listed below are the camera models and the types of supported PTZ controls:

Model (series)	Pan/tilt controller	Preset location	Zoom controller	Focus controller	Auto Pan/Patrol controller
PD	Yes	Yes	No	No	Yes
VS (VS8100 and 8102)	* Depends	Depends	Depends	Depends	No
VS84xx/88xx	Depends	Depends	Depends	Depends	Depends


* If the analogue cameras connected through the video server support PTZ mechanism.




NOTE:

On the Liveview window, currently the Continuous Move and the Click-on-image functions for PTZ cameras are not supported. Neither can you zoom in/out using the mouse wheel.


PTZ presets: If your PTZ cameras have preset locations, click on the button to unfold the preset menu. Click on any of the preset locations to move to the area of your interest. Refer to your camera's User Manual for how to configure preset locations.

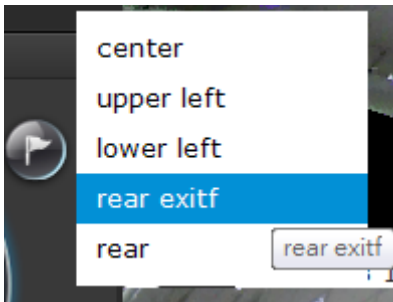

The following message will prompt if the camera has no preset locations.

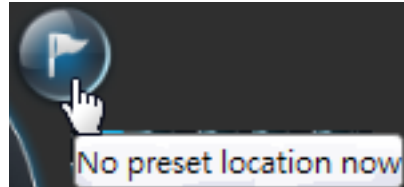


Pan/Tilt controller: A mouse hover over the arrow buttons activates the arrow button. Use the buttons to navigate to a preferred location.

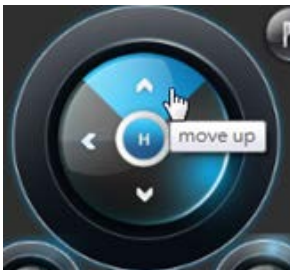

Zoom controller: The zoom controller buttons only apply to cameras that come with an optical zoom module, such as a speed dome camera.



Focus controller: The focus controller buttons apply to cameras that come with focus control over its lens module, such as a speed dome camera.

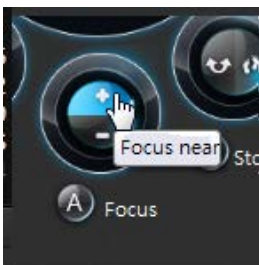

Auto Focus: If your camera supports the auto focus function, use this button to acquire an optimal focus point.

Auto pan/patrol controller: These buttons provides pan and patrol functions provided that preset locations have been configured on the camera. For a speed dome camera, the pan command tells the camera to continuously pan 360 degrees until it is stopped by a user command. For PZ or PT series cameras, the pan action only takes place once to cover reachable areas.




The **Stop** button ends a pan or patrol tour.

4-2-7. Alarm panel

To receive alarms from cameras, you need to configure alarm triggers in the **Settings > Alarm** configuration window (see page 84). Network cameras' digital inputs, digital outputs, or motion detection can all be used to detect conditions in external environments. When the alarms are triggered, you can configure certain kind of actions to take place in response to the alarms, such as:

1. **recording** the immediate image,
2. sending an **Email**,
3. sounding the **buzzer**,
4. sending snapshots to an **FTP** server,
5. sending event messages to **web server**,
6. moving camera lens to a **preset** location,
7. triggering a camera **digital output**.


The alarm panel displays the latest 10 alarm entries with the latest alarm on top of the list. The alarm list keeps up to 200 events. Older events will be erased if the number exceeds 200.

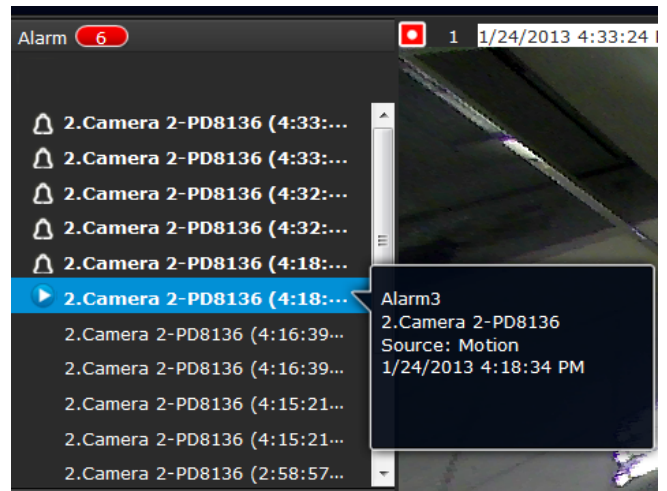


The alarm panel is polled every 10 seconds. A mouse hover on an alarm entry displays full information of the event.



Note that multiple alarms can be triggered by one incident. See page 84 for how to configure the alarm settings.

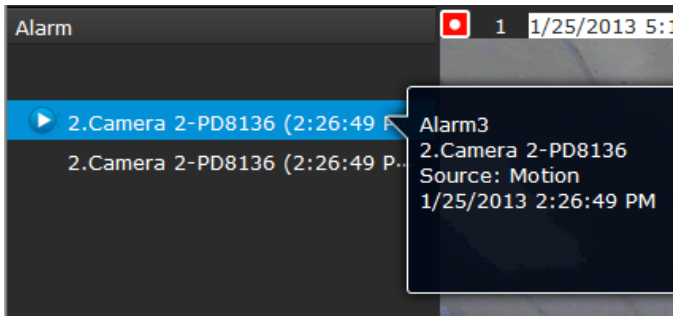
If an event is configured with a recording action, there will be a play button to the left of the alarm message.

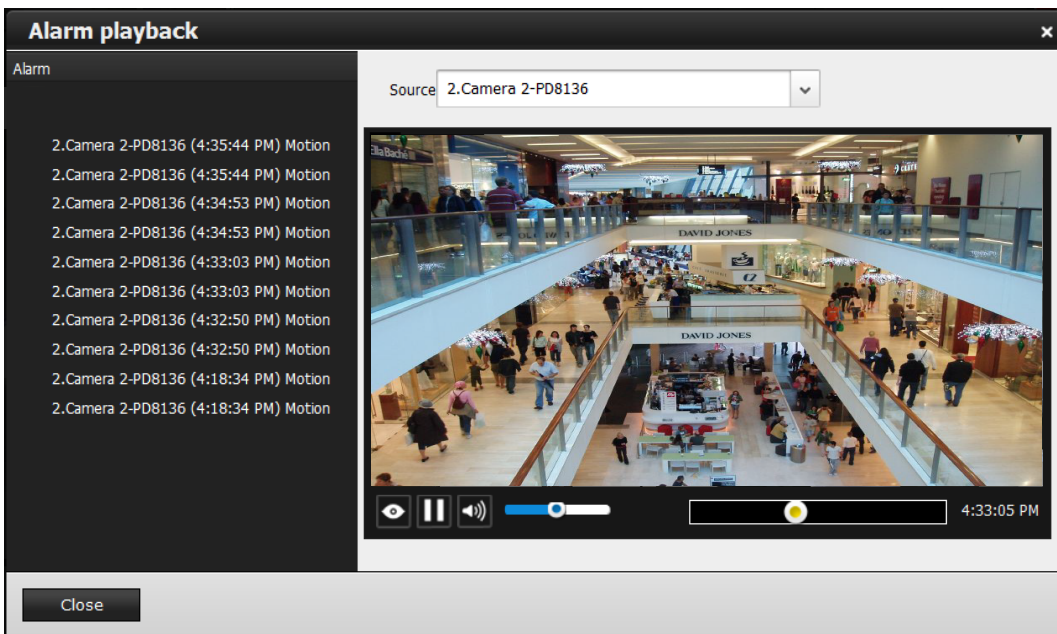



The alarm playback window will begin playback of a footage taken **10 seconds** before the occurrence of an alarm. The playback of an alarm-triggered recording will normally last for **one minute**. If, however, you configured a shorter pre- and post-alarm recording time, your alarm recording may be slightly shorter. The default for **pre-** and **post-alarm** buffer time are 5 seconds and 20 seconds. Up to 300 seconds post-event recording is supported.





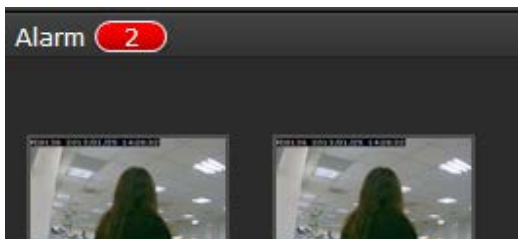


 
Click and read a text-only alarm will turn off the alarm icon . The alarm icons  indicate unread alarms. The number of unread alarms will be listed on the title bar.

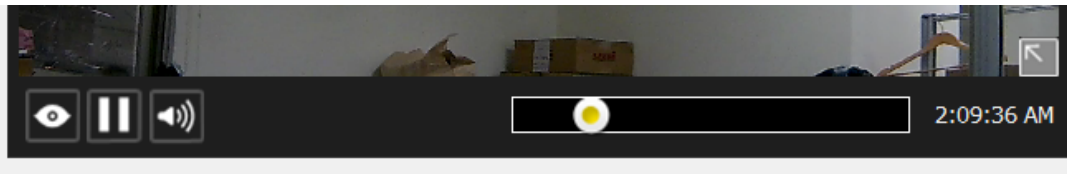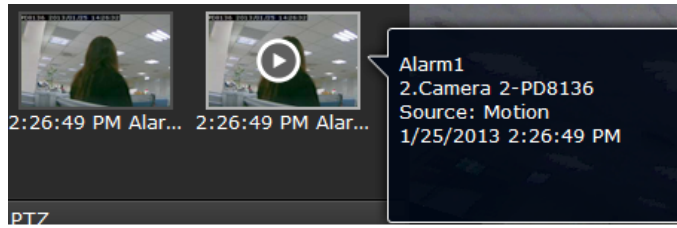

Move your cursor over an alarm with a recorded footage. The Play button will become available.




The following buttons are available in the alarm playback window.


Buttons	Description
	View live video: displays the live view streaming instead of the alarm recording.
	Resumes the alarm playback.
	Begins the alarm playback.
	Pauses the current playback.
	Mute or unmute the audio with the current playback. Drag the controller to change the audio volume level.
	Use the playback slider to quickly change the playback position.

Incoming Alarms

New alarms will be indicated by the messages in bold letters, the alarm bell icons, and the increasing number of unread messages **3** on the title bar.

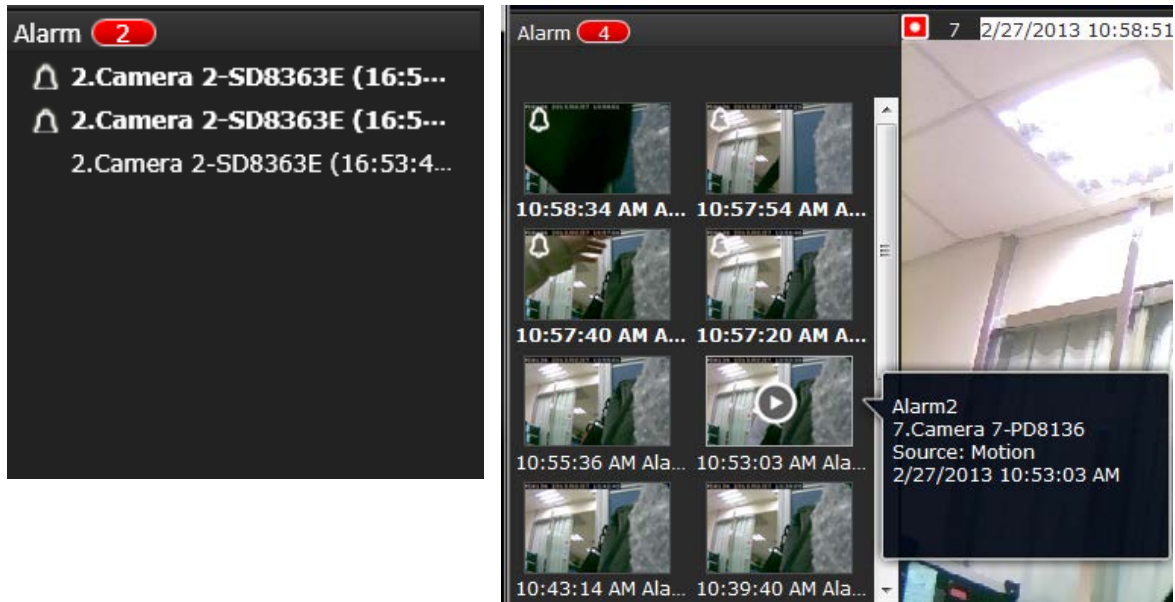

4-3. Graphical Layout and Screen Elements - Search recording clips

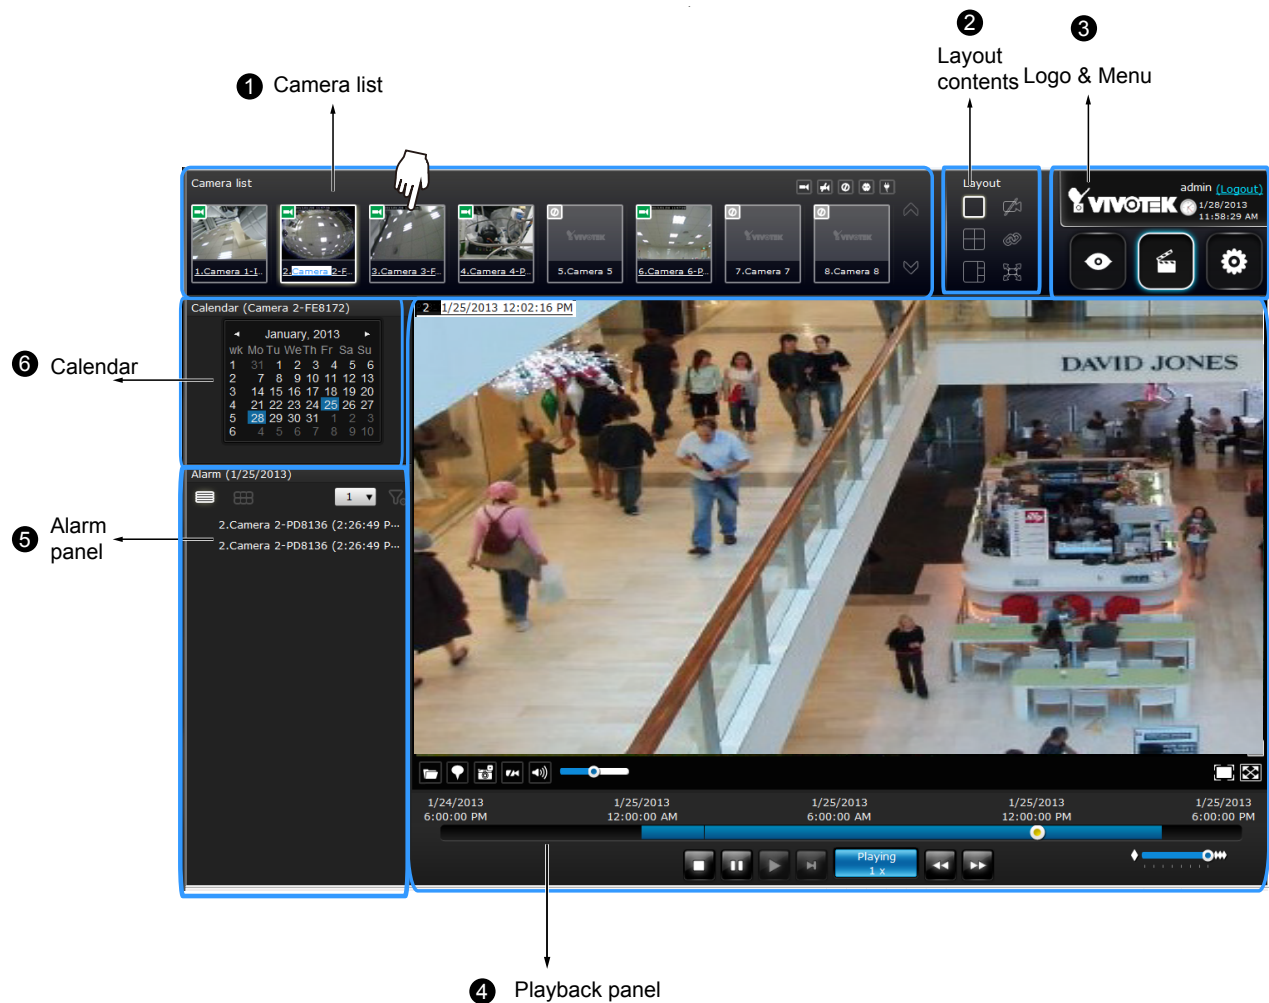

The screen elements of the **Playback** window are described as follows:

Item	Name	Description
1	Camera List	Provides a glimpse of all cameras that have recorded data. Basic information is also provided along with a screenshot.
2	Layout contents	Provides functions to extend, rotate, redo the layout, and the synchronous playback.
3	Logo & Menu	Provides access to the Playback and System Settings utilities, as well as system time and logout function.
4	Playback panel	Displays the playback functions. Snapshot, bookmark, and export functions are also available on individual view cells.
5	Alarm panel	Reports alarms transmitted via cameras' DI connections or those by the Motion Detection, etc.
6	Calendar	Shows when the recording took place, and thus enables users to quickly locate a specific part of recording in history.

4-3-1. Camera List Panel


The camera list displays the 8 recruited cameras by the sequential numbering order you configured in the System **Settings** window on page 63. The elements in the Camera list on a **Search recording clips** window are identical to those on a **Liveview** window. Please refer to page 125 for details on the Camera list panel.

There are two key differences between the Camera List on Liveview and that on the Playback window:

1. Users **can not** click and drag a camera thumbnail to a playback view cell.
2. A double-click on a camera **does not** display video in a view cell. A double-click displays a **calendar** where days with recorded videos are shown.

To begin playback and search for past recordings,

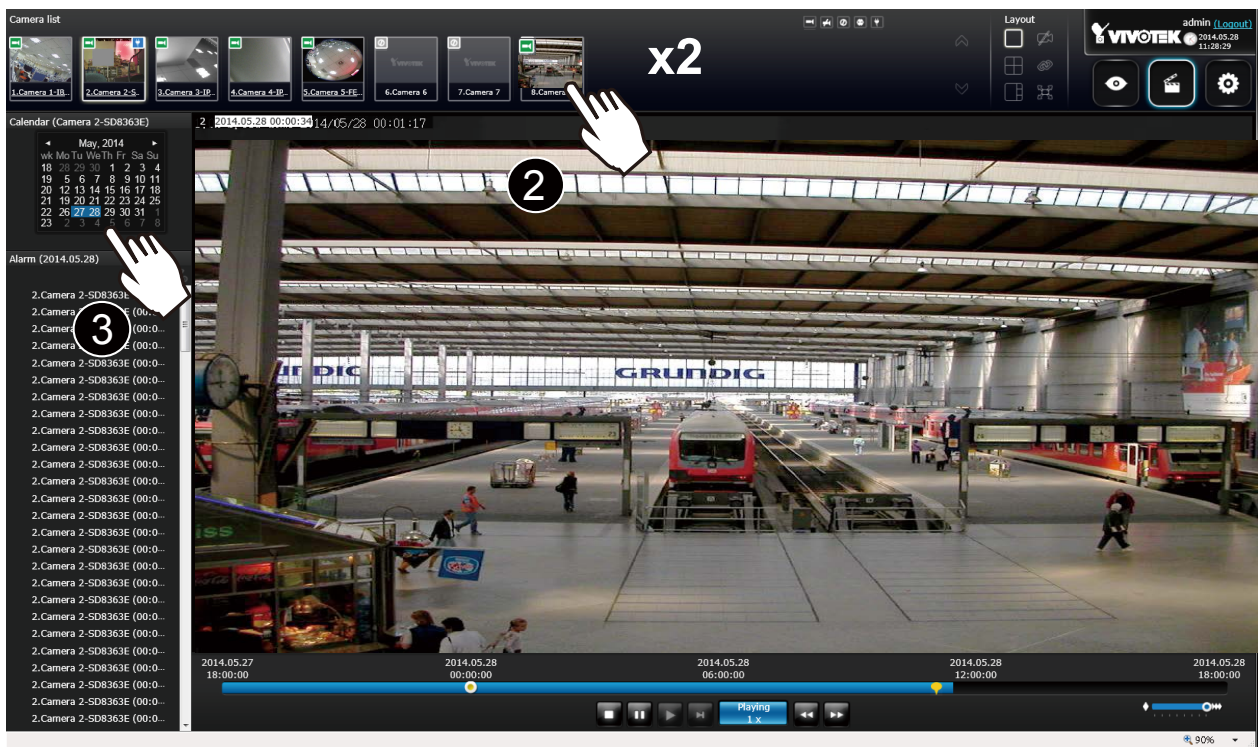


1. Double-click on a camera.
2. The **Calendar** panel will display the days video recording actually took place. And those days will be highlighted by a blue background (as the 25th and 28th in the screen below.)




4-3-2. Search Recording Clips Layout

3 types of layouts are provided for the Search recording clips window: 1x1, 2x2, 1+3, and 1V+3.


In the Search recording clips window, users can simultaneously playback up to 4 recorded video streams.

	Clears all view cells on the current layout
	Starts or stops the Synchronous playback.
	Full view: extends the view cells on the current layout to the full of the screen.

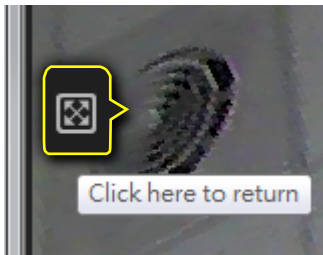

When your current layout is displayed in a full view, move your cursor to the left center of the screen to return to the default Liveview screen. The **Return** button will appear.

4-3-3. Logo & Menu













A logout button, system time panel , and 3 hot link buttons to access the **Liveview**, **Playback**, and **Settings** utilities. This panel is identical to that on the Liveview window.

4-3-4. View Cells in Search Recording Clips


The view cells in Liveview and Playback windows are similar. Their differences are listed as follows:

1. 4 simple layout types are supported as previously described.
2. The information bar displays camera index and video time information only.
3. The Play and Pause buttons are not available on the Tool bar. One Export function is added on a playback view cell.







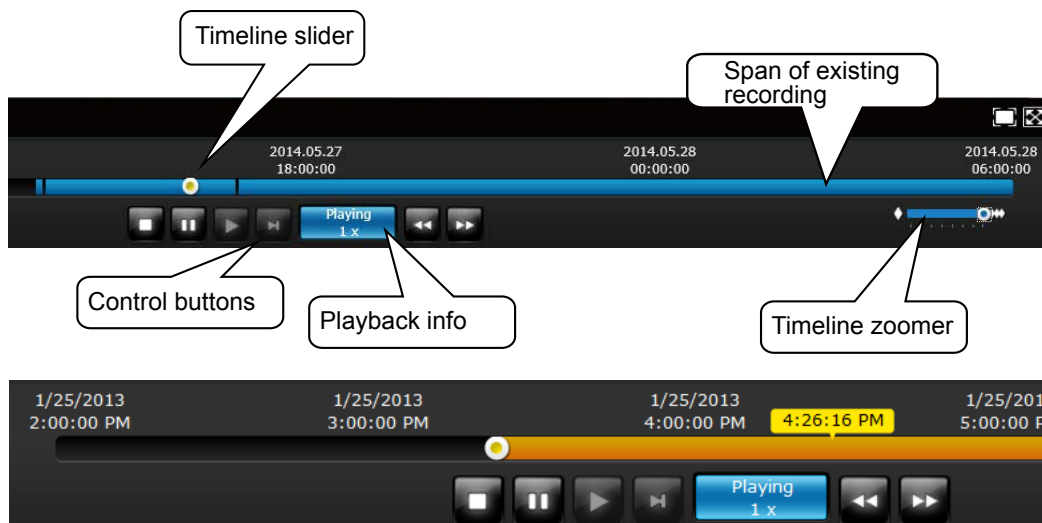


The functional buttons on an individual view cell are described as follows:

Buttons	Description
	Exports a section of the video into a 3GP or Windows exe file. The length of exported video is configurable to 1, 3, 5, or 10 minutes.
	Adds a Bookmark (that saves a short description and a one-minute footage from the current feed)
	Takes a snapshot.
	Removes camera from the view cell.
	Mutes (if there is audio input from the camera.)
	Unmutes
	Restores the view cell's original position on the liveview panel.
	Maximizes the size of current view cell.
	Enables the digital zoom.
	Disables digital zoom (PiP).
	Fisheye viewing modes - if the view cell contains video from a fisheye camera, the fisheye display mode selector will be available: 1O: the original circular view. 1P: the panoramic view. 1R: the regional view. Please refer to the fisheye camera's User Manual for more information.
	Volume controller

 Search Recording Clips Control Panel




The time slide bar enables quick skimming through the recording. Its functional buttons are described as follows:

Buttons	Description
	Pause
	Play. This button is available after you manually pause a playback.
	Stops the current playback.
	Next frame. After you paused a playback, use this button to browse video frame by frame.
	Speeds down by 1/2. The slowest speed is 1/8.
	Speeds up. Increases the playback speed, to 2x, 4x, 8x, 16x, and then to a maximum of 32x.
	Displays the current playback status, such as Playing, Pause, play speed, or Stop.
	Timeline zoomer. Use the zoomer to zoom in for more precise skimming.
	Timeline slider thumb. Click and drag this thumb button to move along and reach a specific point in time. A click on the time line will also work.

The time line shows the length of existing recording taken on a specific time span. You can use the timeline zoomer to scale down the span of time. For example, if the time span is reduced to 1 hour, then each section on the time line represents 15 minutes of recording. The total time span of a timeline starts from the minimal of 4 minutes, 20 minutes, 40 minutes, 1 hour, and up to a maximum of 24 hours.


In the Synchronous play mode, a change to the zoomer will be reflected by all synchronously playing view cells.

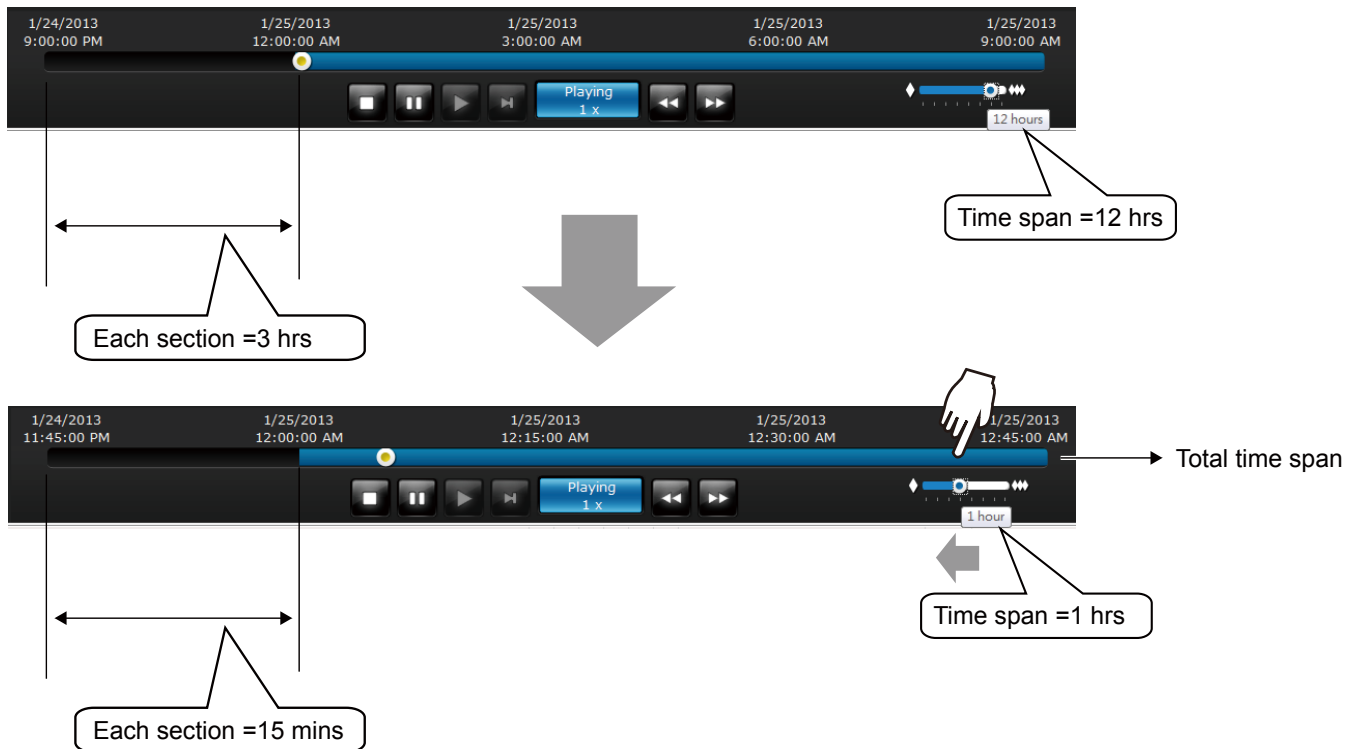

If recordings take place by an event-triggered recording, the intervals between recordings can be down to 1 minute, and the individual recordings will not be easily discernible. In this situation, you can mouse over the timeline to pinpoint individual recording instances.

4-3-5. Alarm Panel

The alarm panel displays the alarms or bookmarks recorded by the day of recording. Two additional buttons are available: **Page selector** and **Alarm filter**.

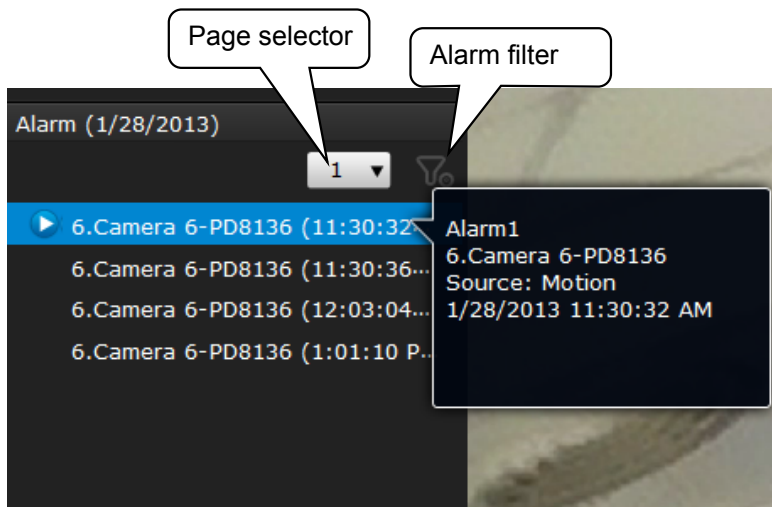

See page 84 for how to configure alarms.


- A playback button will be available with an alarm-triggered recording. The alarm panel in the Playback window also supports the List mode and Icon mode that are similar to that in the Liveview window.
- There can be numerous alarms occurring in a day. Use the page selector to display different pages of alarm entries. Up to 200 entries can appear on one page. Note that the new alarms that occurred seconds or minutes ago may not be instantaneously listed on the page.

If bookmarks are listed in the Alarm list, a bookmark entry will look like this:

[Camera index. camera name \(time\) - bookmark](#)

Alarm filter:


Use the alarm filter to find out specific alarms. Use the check circles below to narrow down your search criteria by Alarm name or alarm type by Motion detection, DI, DO, Tampering, PIR, or those manually marked down as Bookmarks.

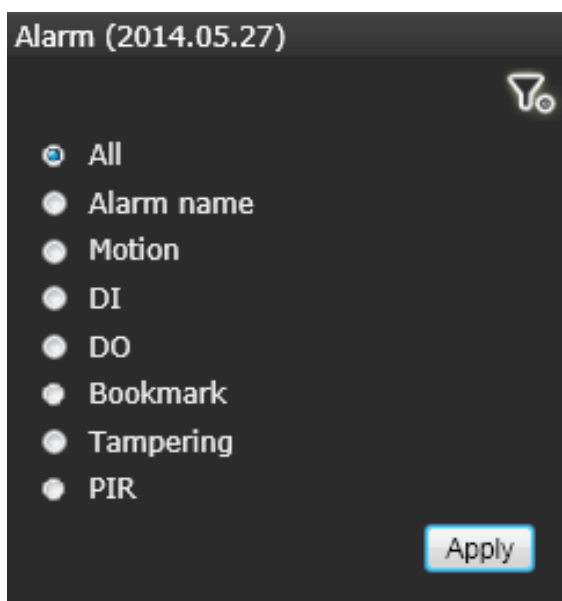

The alarm name is defined by users in the **Settings** > **Alarm** page.

4-3-6. Calendar Panel

Double-click on any of the existing cameras to display the Calendar panel. Days with recorded videos will be highlighted in blue regardless of the length of existing recordings that occurred in that day. You may then click on a day to begin viewing the past recordings.

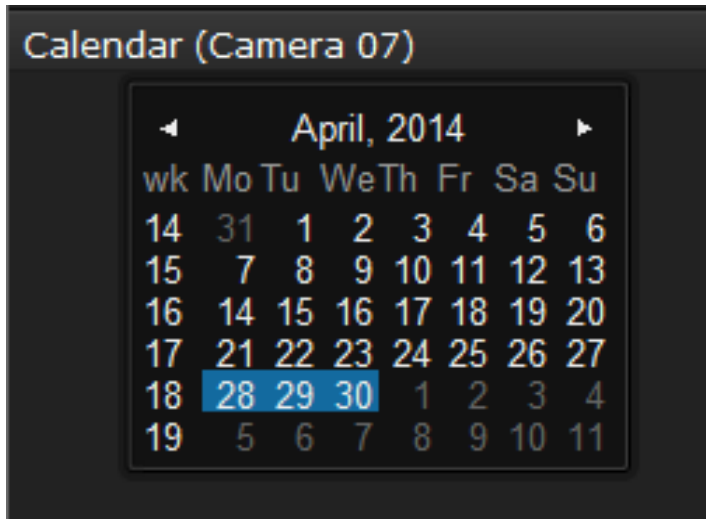


You may use the arrow button to view the records in other months. If there are no recordings in the current month, the recordings taken in the days of the following month will be shown instead.

Chapter Five System Settings

Since revision 2.0.0.x, the System Settings pages are made identical to those on the local console. Since the Setting pages are identical, the following pages will be omitted. Please refer to page 63 for the description of the same details in System Settings via a local console.

Some minor differences between the web console and local console exist. One is the Restore Factory default function. It is only available on the web console.


On the chassis, you can press the Restore/WPS button for longer than 10 seconds to restore system defaults.

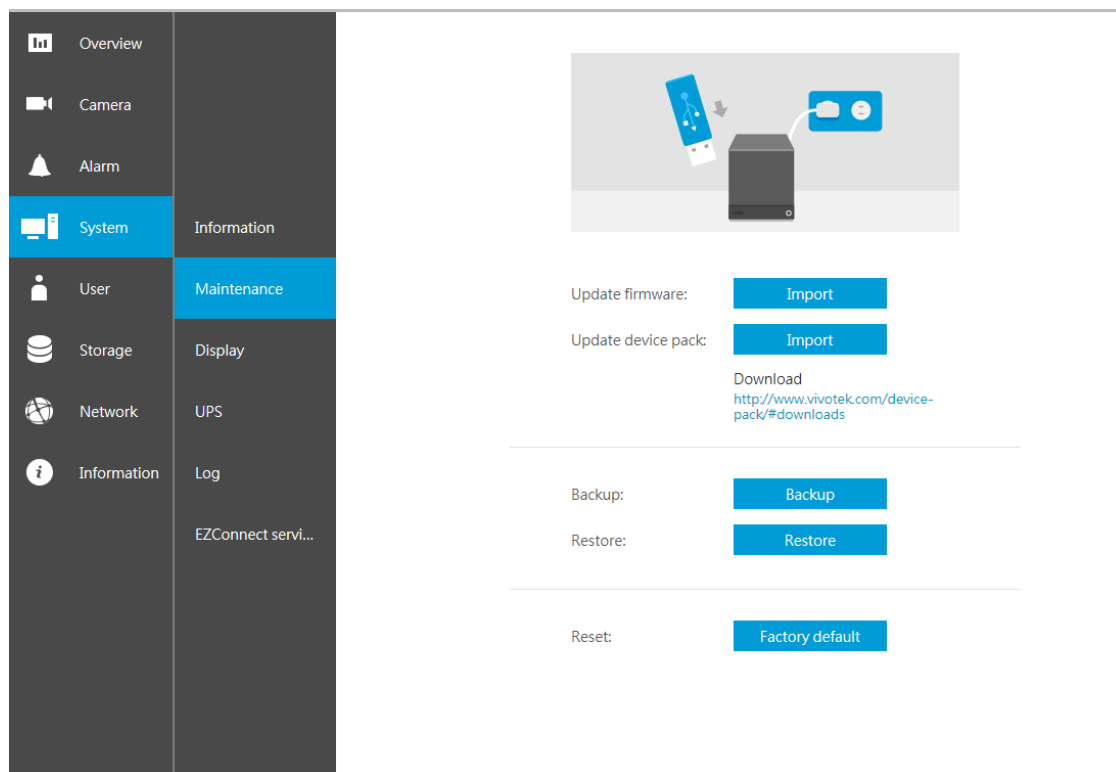

Another difference is the ability to enter a camera or system name using languages other than English. The NVR's system name also supports the use of other languages. This is only achievable through a web console.

The following characters are not supported:

[>][<][()](["']["%][;][#][&][+][~][\]

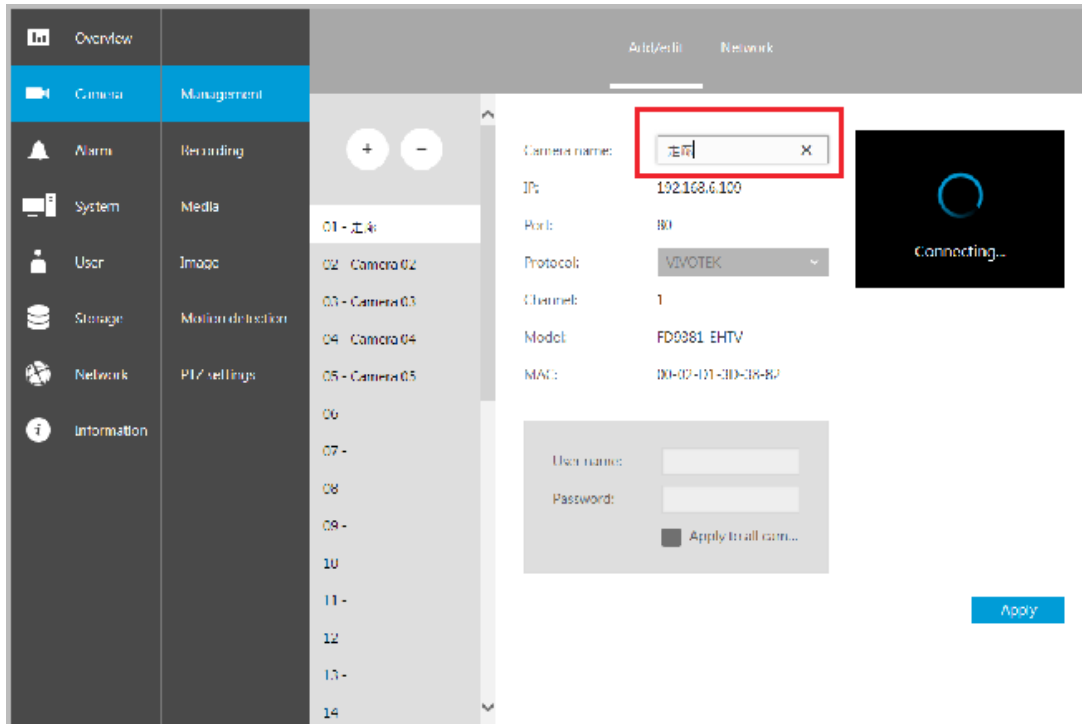

Chapter Six Operation

IMPORTANT:

1. Before operating the NVR, make sure you have properly installed hard drives and configured the storage volumes. Otherwise, you will not be able to operate most of the system's functionality.
2. Since the NVR system comes with 32-bit plug-ins for screen control, if your PC runs a default 64-bit IE browser and you manually enter the NVR's address on the browser, your browser session may malfunction. Instead, if you double-click on the discovered NVR on the Shepherd or IW2 utility, a 32-bit IE browser will open.


6-1. Liveview

6-1-1. Placing Cameras into the Layout

Legends and definitions of icons on the layout panel have been described on page 127.

It is presumed that you have properly inserted all network cameras in your deployment as previously described on page 64. All 8 cameras should be listed on the Camera list.


Please note that ND8312 supports 8 channels, the ND8212W 4 channels.

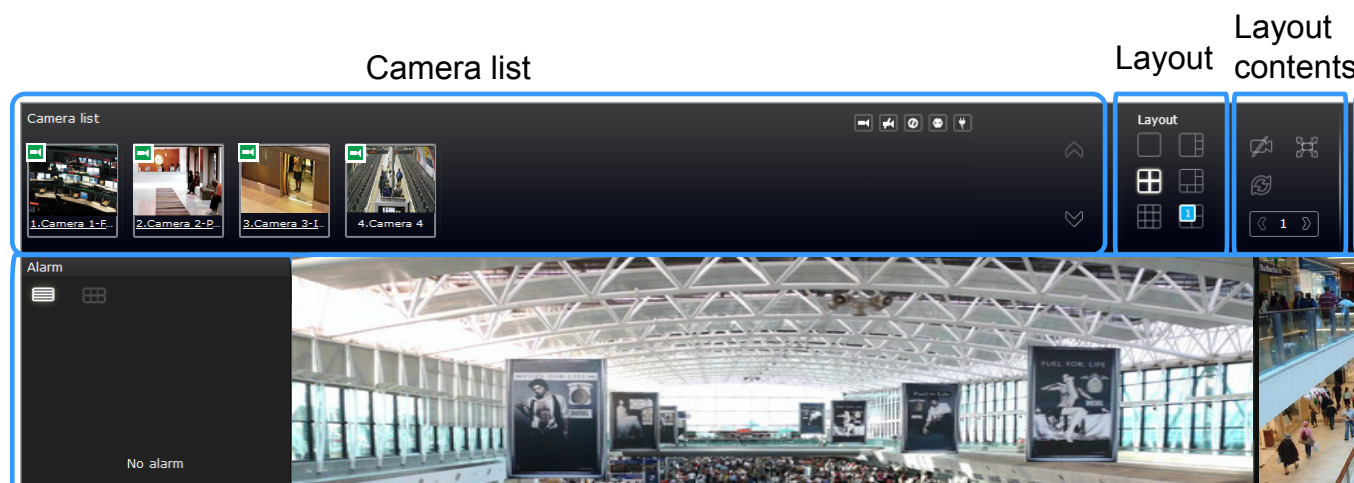


Note that layout design can only be performed by the system administrator.

To begin the design of your layout,

1. Select a layout pattern by a single click. The options are: 1x1, 2x2, 3x3, 1+5, 1+3, 1P+6, 2P+3, 3V. Since ND8212W supports 4 channels, some of the view cells in the multi-cell layouts will not be available.

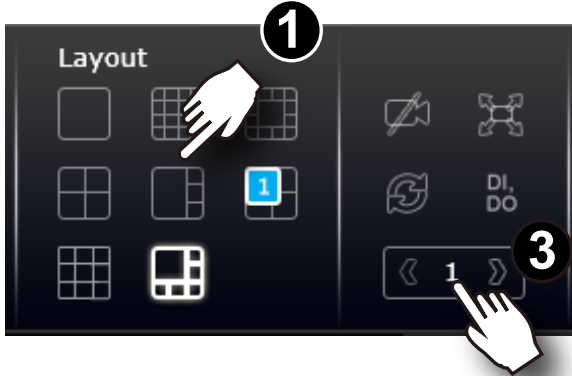


2. Click and drag cameras from the Camera list to empty cells on your layout. Repeat the action until you placed all your cameras into the layout. You may also double-click on a camera's thumbnail to fill it into the first unoccupied view cell.

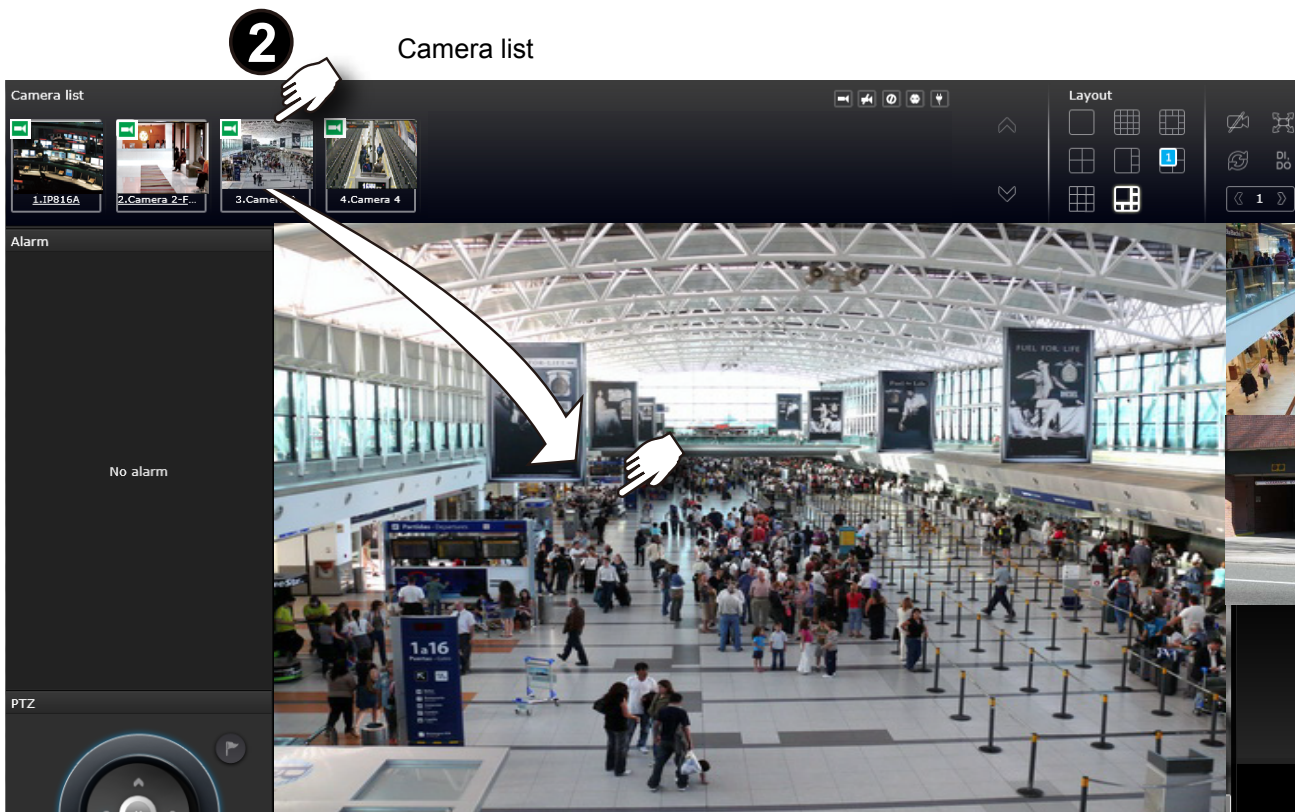

3. When you filled up the current layout, click the page switch ⏪ 1 ⏩ button to continue on the next layout page.

5. On completion, click **Save** to preserve your setting.

Placing different regional views of a fisheye camera into view cells will look like this:

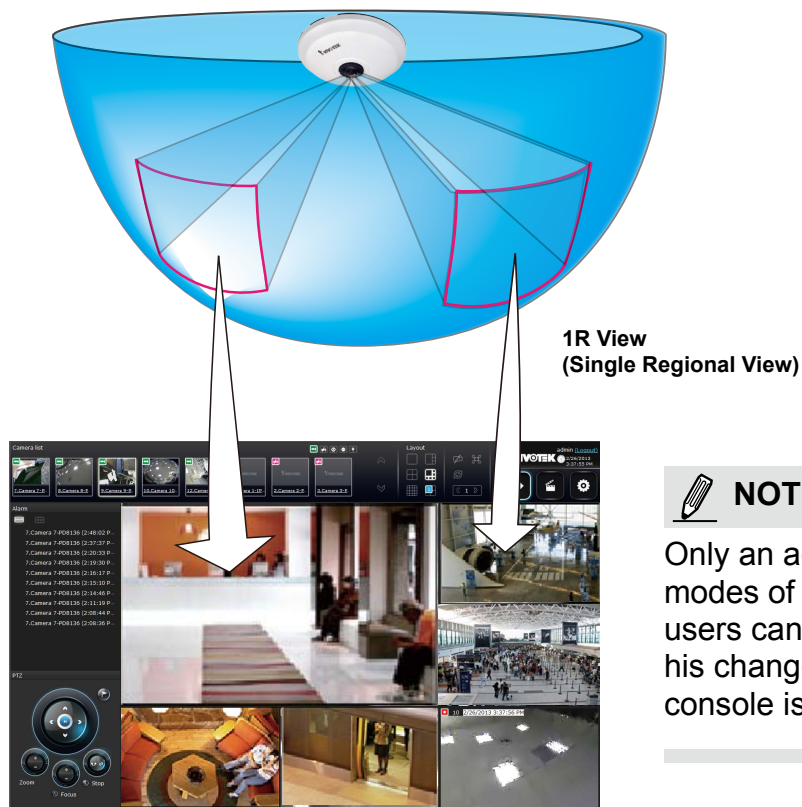


NOTE:


Only an administrator can alter the display modes of fisheye cameras. Although ordinary users can make changes to a regional view, his changes will not be preserved after a console is re-started.

In addition to fisheye cameras, if a camera has a wide field of view, you may also display its different fields of view in multiple view cells. Some view cells may also contain a PiP view that is digitally zoomed.

The fisheye mode button is available on the view cell where you inserted a fisheye camera. When a regional view is displayed, the shooting angle and image orientation is kept with the layout. See page 136 to see more about fisheye viewing modes.

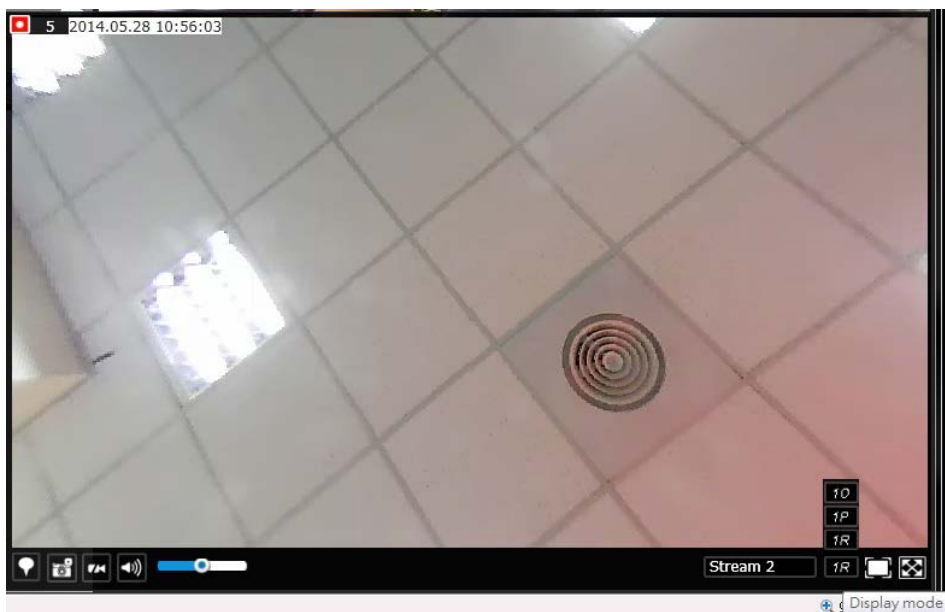


4. When you are done with the current layout design, i.e., [the user layout 1](#), click **Save** to preserve your settings. This message prompts on the screen whenever any change is made to the current layout.

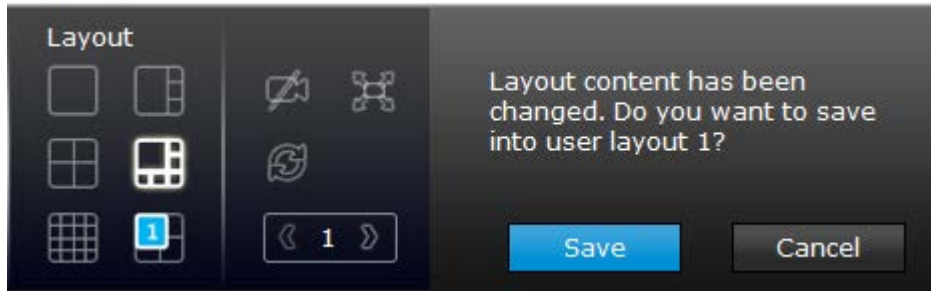

5. You can create more user layouts by mouse-overing the user layout button. You may create more user layouts for different purposes, such as for the use of different users, or playing different views of a camera on multiple view cells.



If users were created and some cameras are excluded from their access, a user may log in and see the locked-on cells as shown below:

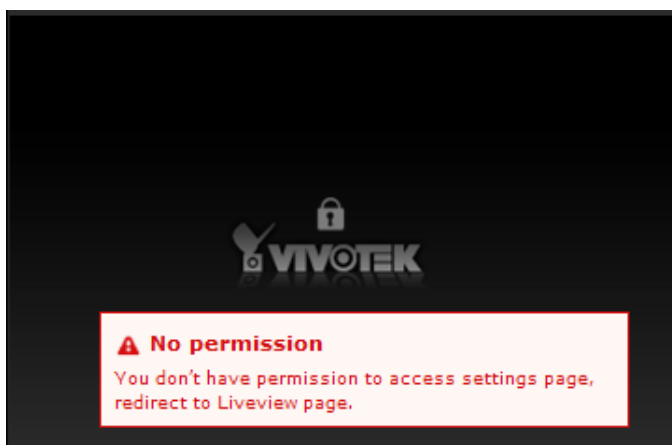

A user who has limited access rights may still re-arrange the layout of view cells. However, his configuration change will not be saved after he leaves the current console.


**NOTE:**

By default, every users or administrator logs in to the Live view window to the last layout page he visited. The last layout page a user visited during the previous console becomes the default layout.


6-1-2. PTZ and Other Screen Controls

Note that the PTZ control panel only applies when you select a view cell with a camera that comes with mechanical PTZ functions. Currently the e-PTZ function is not supported by the NVR system.

With a PTZ camera, the buttons on the PTZ panel become functional when you mouse over its GUI elements. For all compatible cameras and exerting Zoom, Focus, and Patrol functions, please refer to page 138 for details. The Zoom function, for example, requires a camera that comes with a motorized zoom module, and may not be applicable to every PTZ camera.

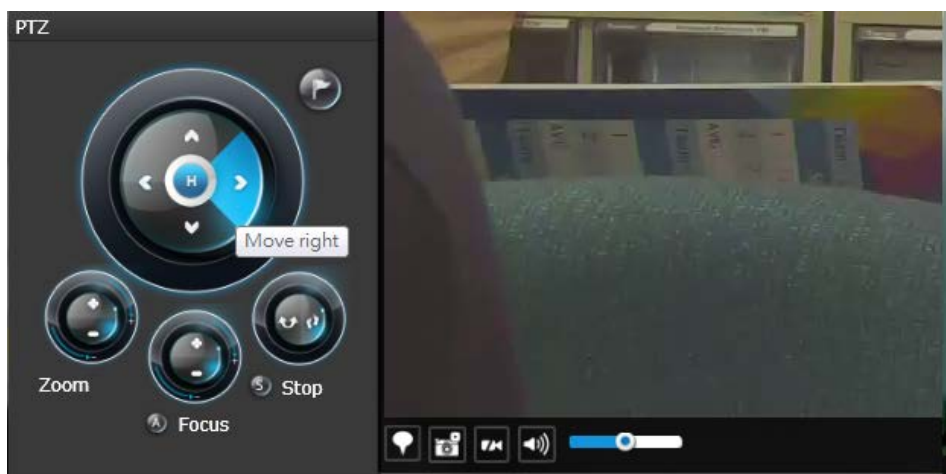


The preset positions and the patrol functions require the associated configuration on the cameras via a web console. Before you make use of these functions, you should set up the preset positions on a web console with the camera. The NVR GUI does not provide the configuration options with PTZ preset positions.

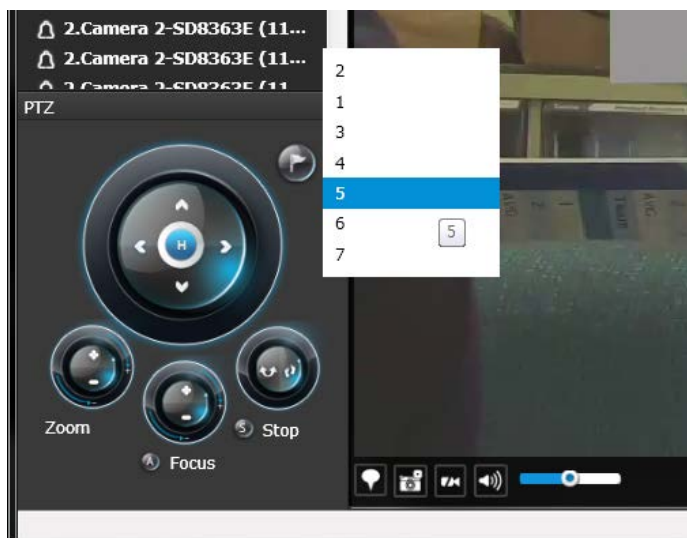

You can use **Preset** button to display preset positions and tell the camera to move and point at the preset direction, and to perform a camera tour to visit these positions in a consecutive order.

To access live view control,

1. **Click** on a view cell. The view cell will become a focused view cell. The streaming control buttons will be listed at the bottom of a view cell. These buttons have been discussed on page 132.
2. **The 2nd click** on a view cell enlarges it to the full of the live view area. **The 3rd click** reduces its size to the original focused view.
3. To deselect a view cell, you can click on another view cell in the display area or click on the Restore  button.




A selected, focused, view cell.

**NOTE:**

If you have concerns with the display quality and frame rate per second, refer to page 74 for how to configure video feeds for live viewing as well as for video recording. The configuration options can be found in **Settings > Camera > Video**.

Note that the constant bit rate methodology is applied in this system and it sets an upper threshold on the size of IP packets sent with the video streams. Image quality will be slightly compromised if reaching the ceiling of allowable bandwidth.


To place bookmarks and exert screen controls,

On a focused view cell, you can place a bookmark  that saves a short description and a one-minute footage from the current feed. The bookmark is also displayed along with the recorded video, and therefore it is easier to look for a specific moment in time when you need to trace back for a scenario later.

The bookmark function can be executed on a live or recorded stream when you observe a situation from your Live view or Playback window. The precondition of using this function is that the video stream, while you are watching it on the view cell, must be recorded to the NVR at the same time.

To add a bookmark,

1. Click on the button,
2. Enter a short description that can be as long as 120 characters.
3. Click on the + button or simply press Enter on your keyboard.

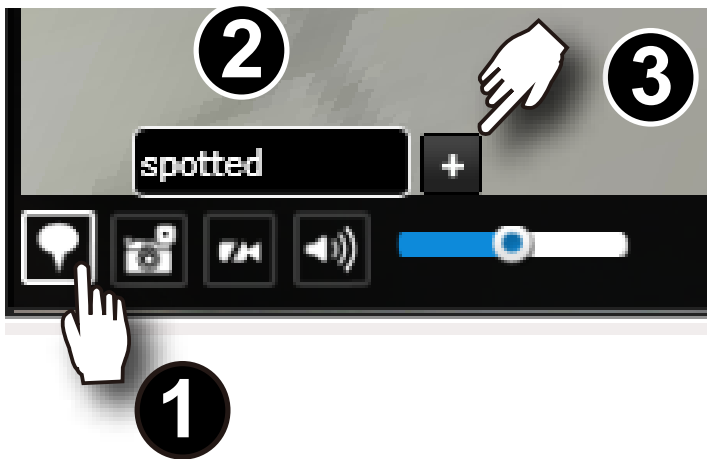


To Activate and Deactivate PiP function,

PiP is short for Picture in Picture, a function that provides digital zoom into a live video. When activated, a Global view window will appear at the lower right of the view cell as shown below. You can display only a portion of the complete video frame as an area of your interest. Using a click and drag on the ROI window, you can instantly move to other areas within the video frame.

You can resize the ROI window by a mouse hover on the lower-right corner of the window until the resize mark appears. The default size of the ROI window is 25% of the Global view.

Click on the deactivate  button to close the PiP window.

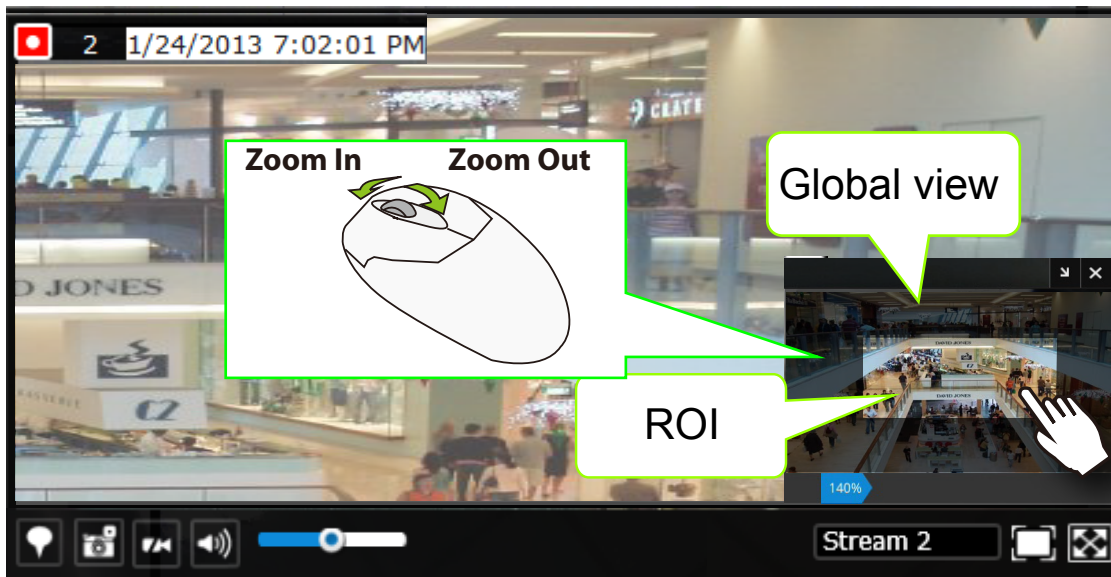



Note that not every camera supports the PiP function. For example, PTZ cameras do not support the PiP feature.


Refer to page 132 for GUI legends and individual functionality.


6-1-3. Audio


Audio is only transmitted through the camera in a view cell that is currently selected. You can manually tune the volume level, mute, or unmute the audio feed through a view cell.

6-1-4. Camera Properties and Controls

You can click on the underlined name entry of a camera on the camera list to open its properties window. Here you can find a short description of the camera name, address, and model name. You can also enable or disable the scheduled or continuous recording set for the camera. Click on their associated icons, , , to change their recording status.

For a camera that is not performing a continuous recording, you can click on the Manual Recording button, , to start a manual recording. The recording will stop using the same button.

You can also manually turn on the digital output , e.g., to trigger an external alarm that is connected to a specific camera.

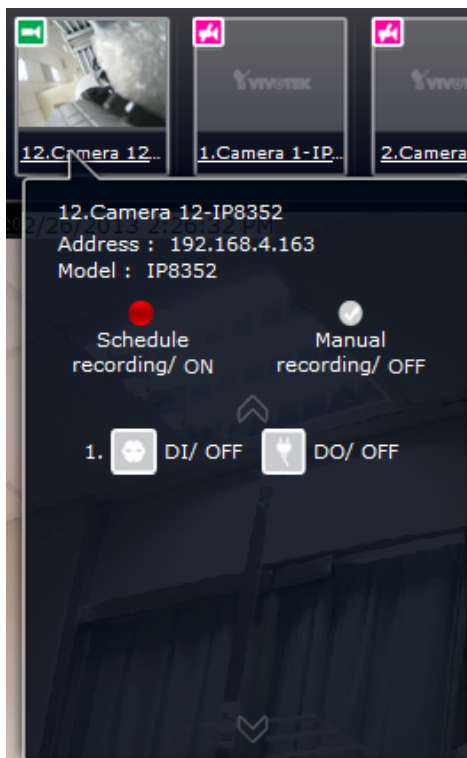


6-1-5. Alarm Panel


To receive alarms from cameras, you need to configure alarm triggers in the **Settings > Alarm** configuration window (see page 84). Network cameras' digital inputs, digital outputs, or motion detection can all be used to detect conditions in external environments. You can configure certain kind of actions to take place in response to the alarms: such as




1. recording the immediate image,
2. sends an Email notification,
3. sounds the onboard buzzer,
4. sends snapshots to an FTP server,
5. sends videos to web server,
6. moves camera lens to a preset location,
7. triggers a camera's digital output.

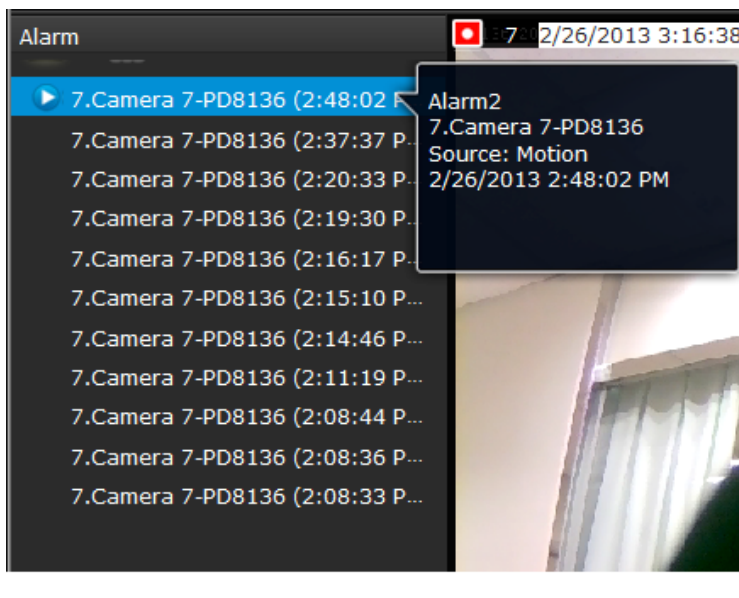The operation details of the **Alarm panel** and **Alarm Playback** utility have been described on page 140.

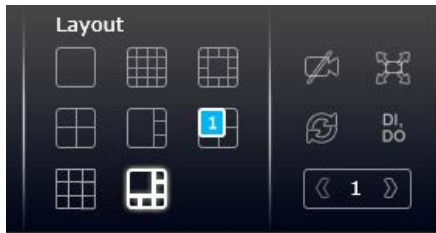


6-1-6. Layout view Control Buttons



1.  When editing a user layout, you can use this button to clear all view cells of inserted cameras.
2.  This button extends the current layout to the full of the screen.
3.  The Rotate function lets system display successive pages in a user layout [by the intervals of 10 seconds](#). The layout page that does not contain camera views will be skipped.

A Rotate action will stop when you

 1. move to another page in the user layout,
2. move to another user layout,
3. click to select a view cell,
4. remove a camera from view cell,
5. click to disable the rotation function.

When your current layout spans across multiple pages, use the arrow buttons  to switch from one page to another. The index number of the current page will be shown between the arrow buttons.

6-2. Search Recording Clips

The elements in the Camera list on a **Search recording clips** window are similar to those on a **Liveview** window. Please refer to page 125 for details on the Camera list panel.

However, on a Search recording clips window, you can not:

1. Users **cannot** click and drag a camera thumbnail to a playback view cell.
2. A double-click on a camera does not display video in a view cell. A double-click displays a **calendar** where days with recorded videos are shown.


6-2-1. Begin Playback and Search for Past Recordings

1. Select a layout. You can display the playback views of multiple cameras on one screen.
2. Double-click on a camera.
3. The **Calendar panel** will display the days video recording actually took place. And those days will be highlighted by a blue background (as the 25th and 28th in the screen below.)



NOTE:

If a video stream is recorded in the **MPEG-4** format, it will not be playable on the Playback window.

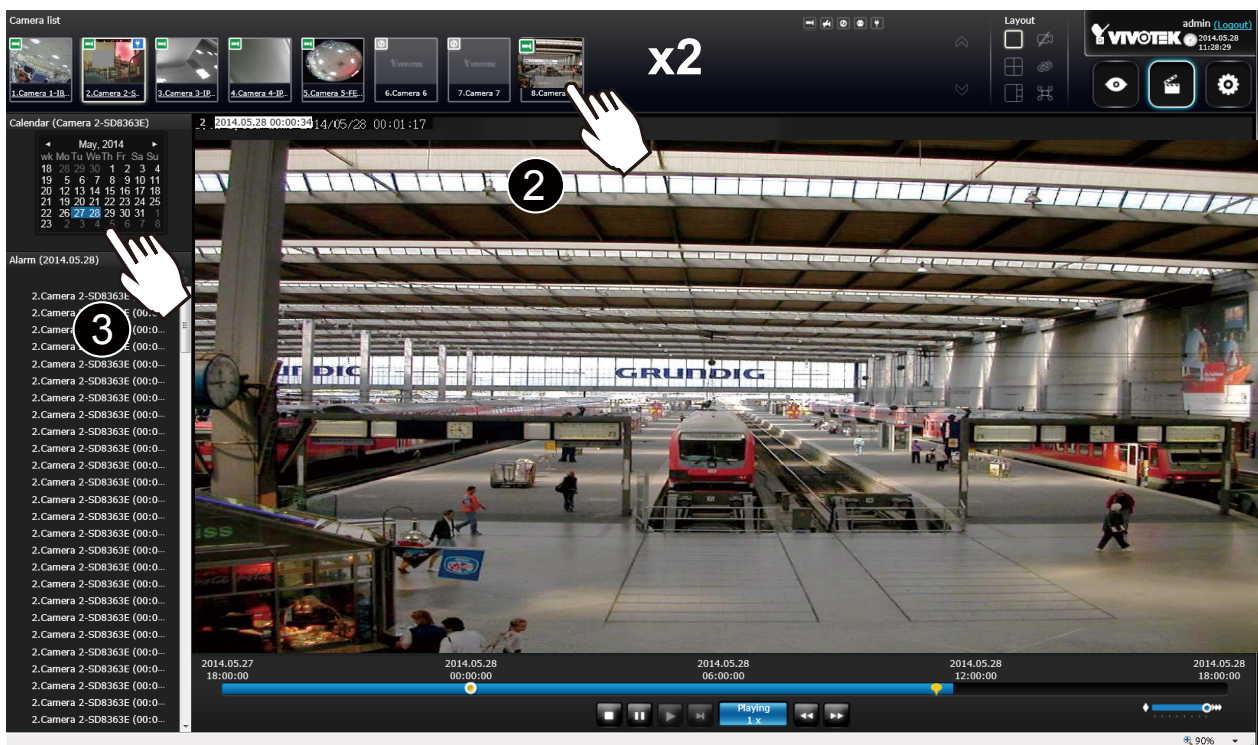


6-2-2. Past Alarms and Bookmarks

When you selected a day when alarms took place on a camera, the alarms will be listed on the Alarm panel. Up to 200 entries can be listed on a single page, and a max. of 1,000 entries across multiple pages.

You may then,


1. Mouse over the alarm thumbnails and click on the play button. The Playback window will then play back the video recorded by the time of the occurrence.
2. Unlike the **Alarm playback** function on the Liveview window, which only plays back the related video for only one minute, the alarm playback will continue throughout the recording of that day.

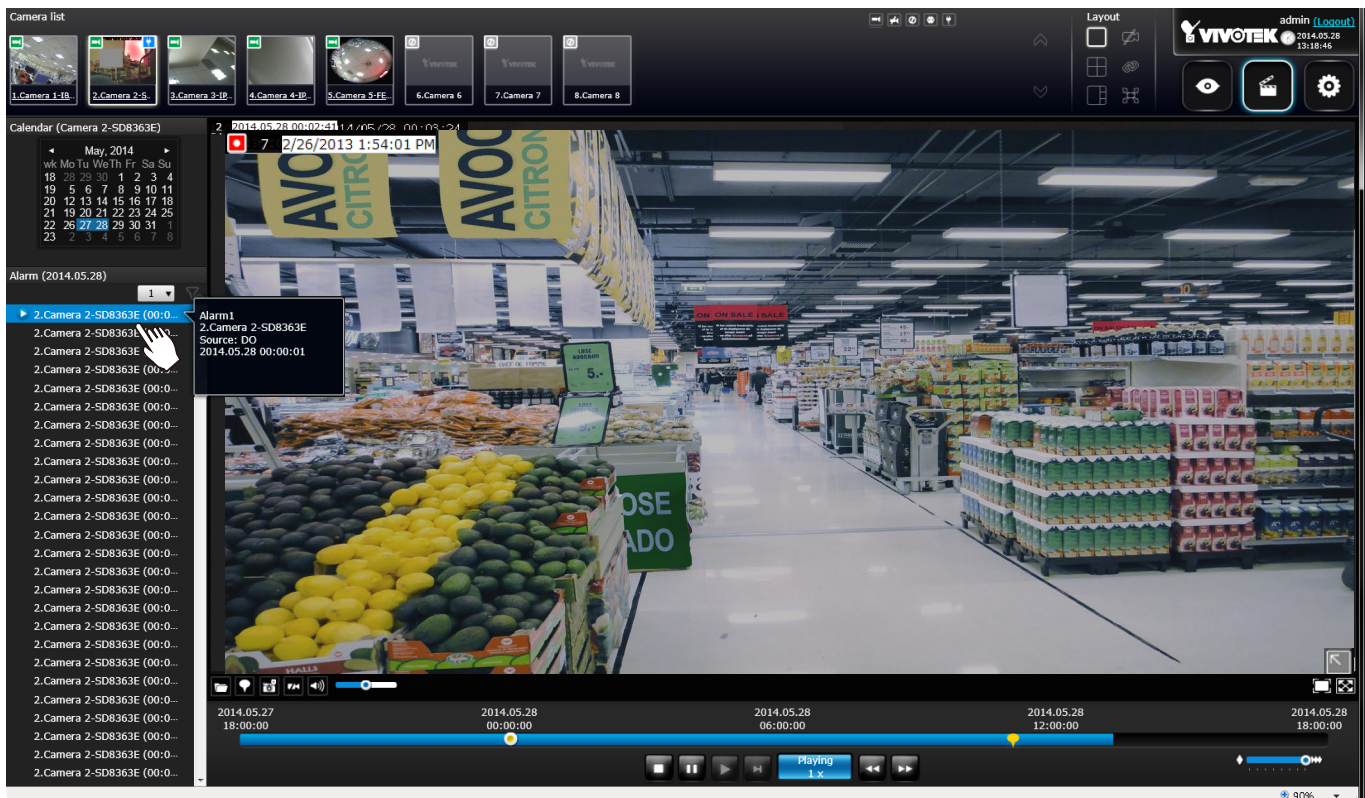

Alarm (2014.05.28)

- ☒ All
- ☐ Alarm name
- ☐ Motion
- ☐ DI
- ☐ DO
- ☐ Bookmark
- ☐ Tampering
- ☐ PIR

Apply


If you set up multiple triggering sources on a camera, you can use the **Alarm filter**  button to find the alarms of a specific type.

You can select the check circles to narrow down the types of listed alarms using search criteria by **Alarm name**, **Motion**, **DI**, **DO**, **Bookmark**, **Tampering**, or **PIR**.

Note that if searching by the Alarm name, the search does not apply to the camera model name that is automatically appended to the description of an alarm. Only the name of an alarm should apply in the search.

Note that the bookmarks you inserted on the Liveview window will be listed on the Alarm panel, and the bookmarks will also appear on the slide bar of the Playback window.

To retrieve or view the video clip tagged by the bookmark, click on it to play the video that was recorded by the time bookmark was inserted.

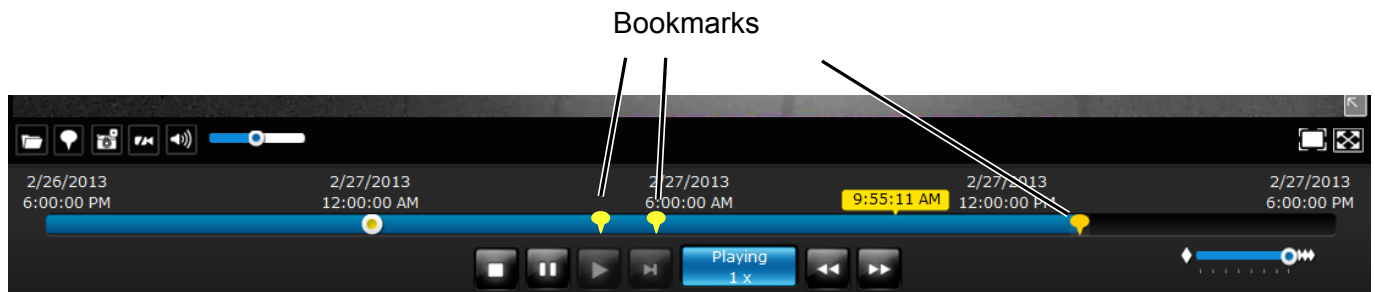


6-2-3. Synchronous Playback

The NVR supports synchronous playback, which allows you to review video clips from up to 4 cameras at the same time. These video clips will be retrieved simultaneously all playing for a specific point in time.

To perform synchronous playback:

1. Select a layout from the Layout panel, e.g., a 2x2 layout.
2. Click on the **Synchronous playback** button.
3. Double-click to select a camera from the camera list. This camera becomes the Master camera.
4. When the Calendar panel appears, click to select a date you prefer.
5. Click and drag other cameras from the camera list to the empty view cells. These cameras will play back videos according to your operation on the Master camera.

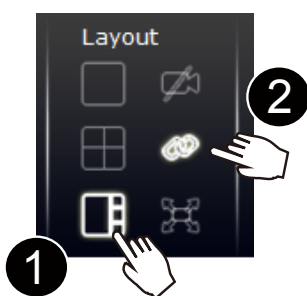


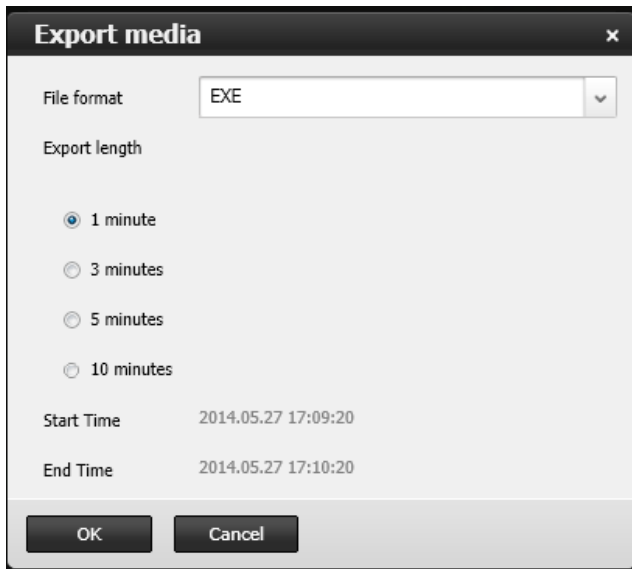
Note the following when using the Synchronous playback:

1. Only the alarms triggered on the Master camera will be shown. In the Synchronous mode, you can not find the alarms or bookmarks generated for other cameras.
2. The playback speed, selection of video clips, and alarm playback of all cameras are made synchronous.

 
6-2-4. Export media

To export video clips,

1. Click on the **Export media**  button on the tool bar, while the Playback window is playing a video section of your interest.
2. An Export media window will prompt.



3. Select the file format using the pull-down menu. An **EXE** file is an self-executable file playable by an embedded Media Player. The 3GP format is a multimedia container format for 3G UMTS services. These files can be played on QuickTime, RealPlayer, and VLC. The file name will look like this: [MAC]_ [DATE]_[TIME]_ [CAMERA_INDEX].[3gp/exe].
4. Select an export length of video by 1, 3, 5, or 10 minutes. The actual length can be longer due to the fact that the program needs to trace back to the previous I-frame for a complete rendering of video frames into the media.
5. Click **OK** to proceed.
6. System will prompt you for the EXE file. Click **Save** to proceed.




7. The exported media file should be saved to the default download folder.
8. A self-executable EXE file should look like this.




6-2-5. Time Search



Use the time line slide bar to find the nearest recording from a specific point in time.

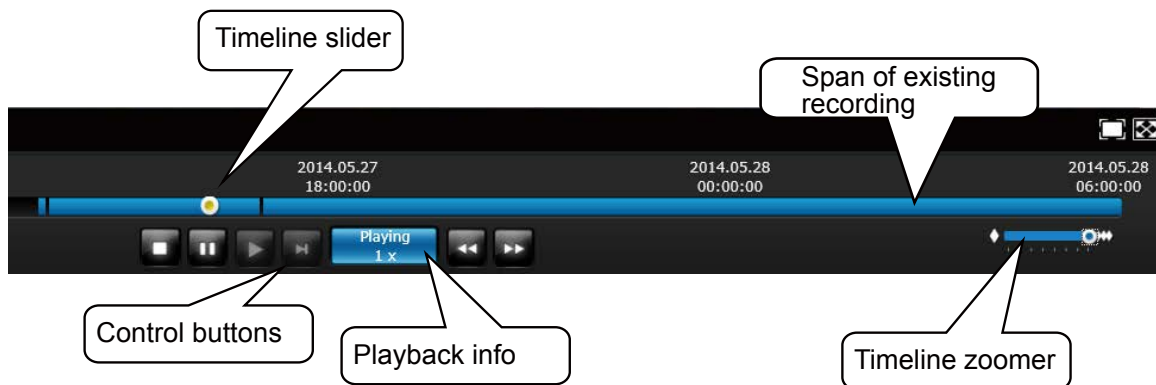

Details of the control bar in the Playback window can be found on [page 148](#).

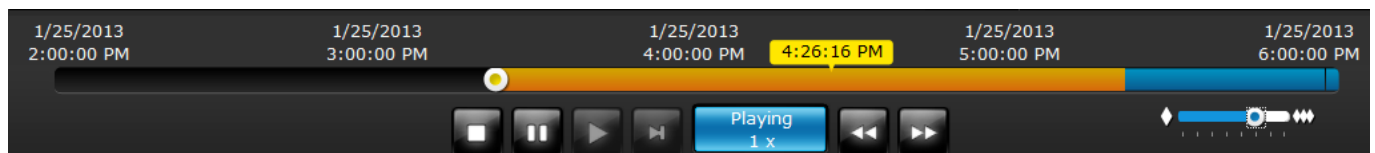


If the need arises to more accurately pin-point the occurrence of an event, you can use the Timeline zoomer and the slider thumb on the time line for a closer view into the existing recording.

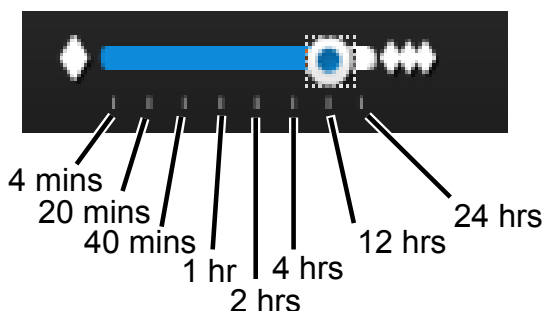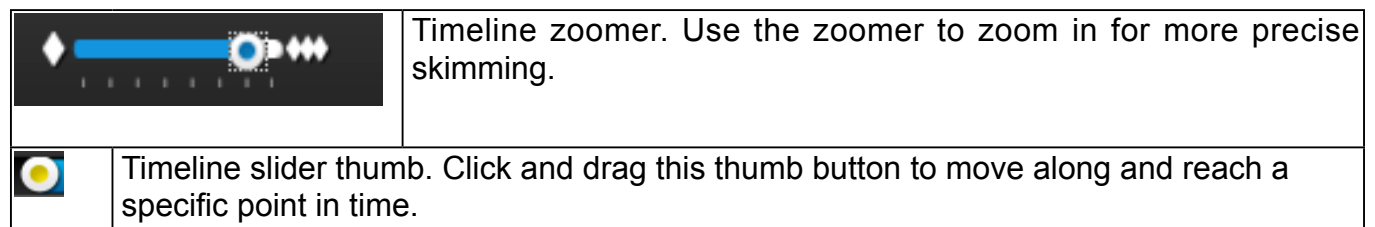

You can use the timeline zoomer to scale down the span of time. For example, if the time span is reduced to 1 hour, then each section on the time line represents 15 minutes of recording. The total time span on a timeline starts from the minimal of 4 minutes, 20 minutes, 40 minutes, 1 hour, and up to a maximum of 24 hours.

In the Synchronous play mode, a change to the zoomer will be reflected by all synchronously playing view cells.

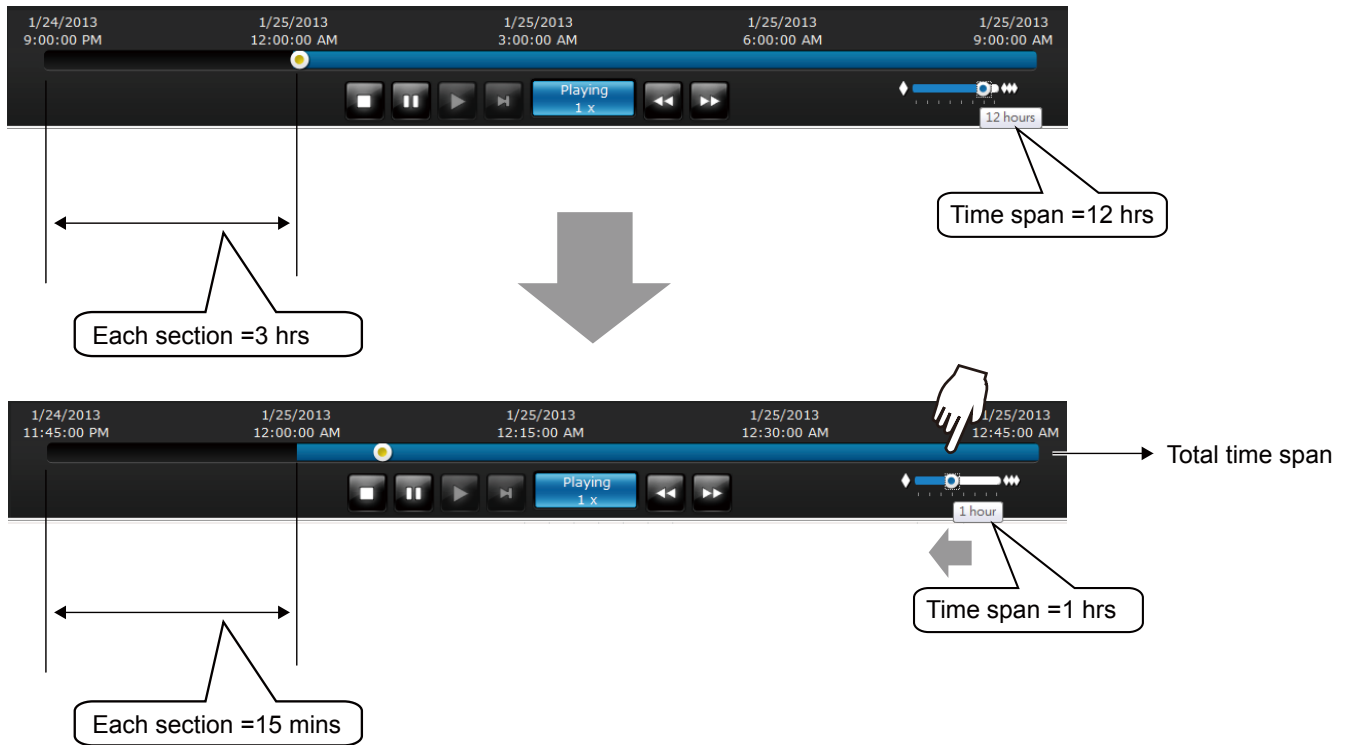

If recordings take place by an event-triggered recording, the intervals between recordings can be down to 1 minute, and the individual recordings will not be easily discernible. In this situation, you can mouse over the timeline to pin-point individual recording instances.

Technical Specifications

Technical Specifications

Hardware Information

Model ND8212W

System

OS Embedded Linux

CPU ARM Processor

Flash 256 MB

RAM 1GB

Watchdog Hardware + Software

Power Restoration System Restart Automatically after Power Recovery

Storage

HDD Devices Internal x1

HDD Max. Capacity 6TB x1

Disk Management Create, Format and Remove Disk
HDD S.M.A.R.T

Video & Audio

Video Output HDMI x1

Resolution 3840x2160, 1920x1080, 1280x720

Graphics Decoder Hardware decoding

Decoding Capacity H.264:
3840x2160 @ 30 fps (1CH)
1920x1080 @ 120 fps (4CH)
1280x720 @ 240 fps (8CH)

Camera Position Change the viewcell position on the Live View screens

External Interface

USB Interface Front: 1 (USB 2.0)
Back: 1 (USB 2.0)

Audio HDMI Audio Output

Network

Network Interface 10/100Mbps Ethernet (RJ-45) x 1

Wi-Fi 2.4Ghz 802.11 b/g/n

Protocols IPv4, TCP/IP, HTTP, HTTPS, UPnP, RTSP/RTP/
RTCP, SMTP, FTP, DHCP, NTP, DNS, DDNS, IP
Filter, WPS

Power

Power Input DC 12V 3A

Power Consumption Max. 15.6 W

LED Indicator

LED Indicator Power, Status, NET, Wi-Fi, WPS

Mechanic

Form Factor Desktop

Operation Buttons Reset/WPS (Back)

Dimensions 198 (W) x 200 (D) x 47(H) mm

Weight 560 g (without HDD)

Operating Temperature 0°C ~ 40°C (32°F ~ 104°F)

Humidity 0 ~ 95%

General

Safety Certifications CE, LVD, FCC, VCCI, C-Tick, MIC, NCC, BSMI

Warranty 24 months

Client PC Requirements

Operating System Microsoft Windows OS:
XP/Vista/7/8/10/2008/2012

CPU Intel Celeron or above

Memory 2 GB or above

Ethernet 10/100Mbps

Display Resolution 1024x768 pixels or above

Web Browser Internet Explorer 10 (32 bit) or above

Software AP Installation Wizard 2, Shepherd, VAST,
VAST 2


Mobile/Tablet App VIVOCLOUD, iViewer (iOS)
VIVOCLOUD, iViewer (Android)

Cloud Connection VIVOCLOUD Portal

Accessories

Others Power adaptor, QIG, 8 x HDD screw,
2 x HDD Brackets, 1 x USB Mouse, 2 x 2.4Ghz
Wi-Fi Antenna

Dimensions

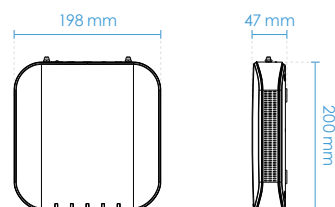

Software Information

Record

Maximum Channel Up to 8 (4CH Wi-Fi + 4CH Wired)

Record Throughput (MB) 24 Mbps,
default settings: 1920X1080 @ 32 fps (4CH)

Network Throughput (MB) 40 Mbps

Audio Format G.711, G.726

Technical Specifications

Video Format	MJPEG, H.264
Video Resolution	UP to 8MP Camera
Recording Time (sec.)	Pre-Record: 5 (Max. 10) Post-Record: 20 (Max. 300)
Recording Stream	Single
Recording Mode	Continuous, Schedule, Manual, Event, Activity Adaptive Streaming
Recording Setting	Recycle (unit: day)
Recording Path	Local Path
Record Video Format	3GP
Watermark	Supported
Schedule Backup	Supported

LiveView (Local Display)

Stream Application	Constant/Auto Adaptive Stream
LiveView Display	8 Channels (4CH Wi-Fi + 4CH Wired) Multiple Layout Display: 1x1, 3V, 2x2, 3x3, 1P+3, 2P+3, 1M+5, 1P+6
Monitor Enhancement	OSD Display (NVR), OSD Display (Camera), Camera Information, Remote I/O Control, Event Notification, Aspect Ratio, Fisheye Dewarp (1O, 1P, 1R, 1O3R, 1P3R, 1O8R)
PTZ Control	Panel Control/Joystick
PTZ Operation	Direction Control, Home, Iris, Preset, Patrol (Group), PiP Control

Playback (Local Display)

Playback Display	4 Channels Multiple Layout Display: 1x1, 2x2, 1P+3, 1V+3
Playback Control	Regular (Play, Pause, Stop), Rewind, Next/ Previous Frame, Speed Control, Calendar, Event, Timeline, Timeline Scale, Thumbnail (Storyboard)
Video Search	By Calendar, Date/Time, Alarm
Thumbnail Explorer (Storyboard)	Listing the thumbnail of recorded video (Max. 2 CH)
Monitor Enhancement	OSD Display (Camera), Event Notification, Aspect Ratio, PiP Control, Fisheye Dewarp (1O, 1P, 1R, 1O3R, 1P3R, 1O8R)
Snapshot	JPEG
Video Clip Export	EXE

LiveView (Remote)

Stream Application	Stream Selection
Audio Capability	One Way
LiveView Display	4 Channels Multi Layout Display: 1x1, 2x2, 1V+3
Monitor Enhancement	OSD Display (NVR), Drag & Drop, Image Freeze, Audio Control, Remote I/O Control, Event Notification, Bookmark, Fisheye Dewarp (1O, 1P, 1R)

PTZ Control	Panel Control
PTZ Operation	Direction Control, Home, Zoom, Focus, Iris, Preset, Patrol (Group), PiP Control
Snapshot	JPEG

Playback (Remote)

Playback Display	4 Channels Multiple Layout Display: 1x1, 2x2, 1V+3
Playback Control	Regular (Play, Pause, Stop), Next Frame, Speed Control, Calendar, Timeline, Timeline Scale, Bookmark
Monitor Enhancement	OSD Display (NVR), Drag & Drop, Audio Control, PiP Control, Fisheye Dewarp (1O, 1P, 1R)
Snapshot	JPEG
Video Clip Export	EXE

Alarm Management

Schedule Type	Continuous, Schedule, Manual
Event	Motion Detection, PIR Detection, Tampering Detection, Digital Input (Camera), Digital Output (Camera), Connection Abnormal, Storage Abnormal, Storage Full, Camera Network Loss
Action	Record, Email (Text), Email (Snapshot), FTP, Buzzer, ePTZ Control (Go to Preset), Camera DO, VIVOCLOUD APP Notification
Recording Time (sec.)	Pre-Record: 5 (Max. 10) Post-Record: 20 (Max. 300)

Backup

Manual	USB Dongle (FAT Format), FTP Server Upload
--------	--

System

User Management	User Account: 16 User Account Time Limit: 10 mins User Level: Administrator/Regular User User Feature Definition: By Camera
Log	System, Recording, User, Error
Date&Time	Time Zone, Manual, Automatic Sync NTP, Daylight Saving Time
Firmware	Manual update
Restore Default	Supported
Backup/Restore (Configuration)	Supported
Language	Czech, English, French, German, Italian, Japanese, Korean, Portuguese, Russian, Spanish, Simplified Chinese, Traditional Chinese, Polish

Camera Integration


Insert Camera	Manual, Search
Video (Media) Setting	Compression, Resolution, FPS, Video Quality
Image Setting	Image Display, Image Adjustment

Technical Specifications


PTZ Control	Panel Control	ONVIF Recording	Continuous, Schedule, Manual
PTZ Operation	Direction Control, Home, Preset, Patrol (Group)	ONVIF Discover	Discover other brand camera through "Insert Camera & Batch Insert"
Motion Detection	Supported	Device Integration	
ONVIF Core SPEC.	Version 2.2 or above (By Project)	UPS	APC Model Compatible
ONVIF Stream	Video (H.264 & MJPEG)	Joystick	AJ-001, AJ-002

Mechanical Information

Front View

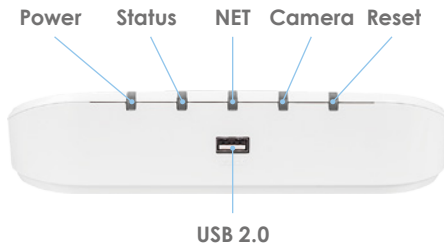

Back View

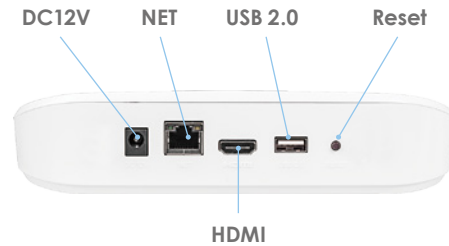

Technical Specifications

Hardware Information

Model	ND8312
-------	--------

System

OS	Embedded Linux
CPU	ARM Processor
Flash	256 MB
RAM	1GB
Watchdog	Hardware + Software
Power Restoration	System Restart Automatically after Power Recovery

Storage

HDD Devices	Internal x1
HDD Max. Capacity	6TB x1
Disk Management	Create, Format and Remove Disk HDD S.M.A.R.T

Video & Audio

Video Output	HDMI x1
Resolution	3840x2160, 1920x1080, 1280x720
Graphics Decoder	Hardware decoding
Decoding Capacity	H.264: 3840x2160 @ 30 fps (1CH) 1920x1080 @ 120 fps (4CH) 1280x720 @ 240 fps (8CH)
Camera Position	Change the viewcell position on the Live View screens

External Interface

USB Interface	USB 2.0 x 2 (Front x1, Back x1)
Audio	HDMI Audio Output

Network

Network Interface	10/100Mbps Ethernet (RJ-45) x 1
-------------------	---------------------------------

Protocols	IPv4, TCP/IP, HTTP, HTTPS, UPnP, RTSP/RTP/RTCP, SMTP, FTP, DHCP, NTP, DNS, DDNS, IP Filter
-----------	--

Power

Power Input	DC 12V 3A
Power Consumption	Max. 15 W

LED Indicator

LED Indicator	POWER, STATUS, NET, CAMERA, RESET
---------------	-----------------------------------

Mechanic

Form Factor	Desktop
Operation Buttons	Reset
Dimensions	198 (W) x 200 (D) x 47 (H) mm
Weight	530 g (without HDD)
Operating Temperature	0°C ~ 40°C (32°F ~ 104°F)
Humidity	0 ~ 95%

General

Safety Certifications	CE, LVD, FCC, VCCI, C-Tick
Warranty	24 months

Client PC Requirements

Operating System	Microsoft Windows OS: XP/Vista/7/8/10/2008/2012
CPU	Intel Celeron or above
Memory	2 GB or above
Ethernet	10/100Mbps
Display Resolution	1024x768 pixels or above
Web Browser	Internet Explorer 10 (32 bit) or above
Software AP	Installation Wizard 2, Shepherd, VAST, VAST2
Mobile/Tablet App	VIVOCLOUD, iViewer (iOS) VIVOCLOUD, iViewer (Android)


Technical Specifications

Cloud Connection	VIVOCLOUD Portal
------------------	------------------

Accessories

Others	Power adaptor, QIG, 8 x HDD screw, 2 xHDD Brackets, 1 x USB Mouse
--------	---

Dimensions

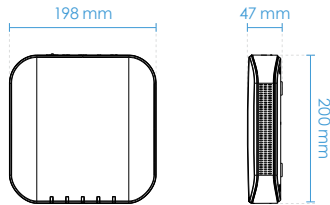

Software Information

Record

Maximum Channel	8
Record Throughput (MB)	48 Mbps, default setting: 1920x1080 @ 64 fps (8-CH)
Network Throughput (MB)	40 Mbps
Audio Format	G.711, G.726
Video Format	MJPEG, H.264
Video Resolution	UP to 8MP Camera
Recording Time (sec.)	Pre-Record: 5 (Max. 10) Post-Record: 20 (Max. 300)
Recording Stream	Single
Recording Mode	Continuous, Schedule, Manual, Event, Activity Adaptive Streaming
Recording Setting	Recycle (unit: Day)
Recording Path	Local Path
Record Video Format	3GP
Watermark	Supported
Schedule Backup	Supported

LiveView (Local Display)

Stream Application	Constant / Auto Adaptive Stream
LiveView Display	8 Channels Multi Layout Display: 1x1, 3V, 2x2, 3x3, 1P+3, 2P+3, 1M+5, 1P+6
Monitor Enhancement	OSD Display (NVR), OSD Display (Camera), Camera Information, Remote I/O Control, Event Notification, Aspect Ratio, Fisheye Dewarp (1O, 1P, 1R, 1O3R, 1P3R, 1O8R)
PTZ Control	Panel Control/Joystick
PTZ Operation	Direction Control, Home, Iris, Preset, Patrol (Group), PiP Control

Playback (Local Display)

Playback Display	4 Channels Multi Layout Display: 1x1, 2x2, 1P+3, 1V+3
Playback Control	Regular (Play, Pause, Stop), Rewind, Next/Previous Frame, Speed Control, Calendar, Event, Timeline, Timeline Scale, Thumbnail (Storyboard)
Video Search	By Calendar, Date/Time, Alarm
Thumbnail Explorer (Storyboard)	Listing the thumbnail of recorded video (Max. 2 CH)
Monitor Enhancement	OSD Display (Camera), Event Notification, Aspect Ratio, PiP Control, Fisheye Dewarp (1O, 1P, 1R, 1O3R, 1P3R, 1O8R)
Snapshot	JPEG
Video Clip Export	EXE

LiveView (Remote)

Stream Application	Stream Selection
Audio Capability	One Way
LiveView Display	8 Channels Multi Layout Display: 1x1, 2x2, 3x3, 1V+3, 1M+5
Monitor Enhancement	OSD Display (NVR), Drag & Drop, Image Freeze, Audio Control, Remote I/O Control, Event Notification, Bookmark, Fisheye Dewarp (1O, 1P, 1R)
PTZ Control	Panel Control
PTZ Operation	Direction Control, Home, Zoom, Focus, Iris, Preset, Patrol (Group), PiP Control
Snapshot	JPEG

Playback (Remote)

Playback Display	4 Channels Multi Layout Display: 1x1, 2x2, 1V+3
Playback Control	Regular (Play, Pause, Stop), Next Frame, Speed Control, Calendar, Timeline, Timeline Scale, Bookmark
Monitor Enhancement	OSD Display (NVR), Drag & Drop, Audio Control, PiP Control, Fisheye Dewarp (1O, 1P, 1R)
Snapshot	JPEG
Video Clip Export	EXE

Alarm Management

Schedule Type	Continuous, Schedule, Manual
Event	Motion Detection, PIR Detection, Tampering Detection, Digital Input (Camera), Digital Output (Camera), Connection Abnormal, Storage Abnormal, Storage Full, Camera Network Loss
Action	Record, Email (Text), Email (Snapshot), FTP, Buzzer, ePTZ Control (Go to Preset), Camera DO, VIVOCLOUD APP Notification
Recording Time (sec.)	Pre-Record: 5 (Max. 10) Post-Record: 20 (Max. 300)

Technical Specifications

Backup

Manual	USB Dongle (FAT Format)/FTP Server Upload
--------	---

System

User Management	User Account: 16 User Account Time Limit: 10 mins User Level: Administrator/Regular User User Feature Definition: By Camera
-----------------	--

Log	System, Recording, User, Error
-----	--------------------------------

Date&Time	Time Zone, Manual, Automatic Sync NTP, Daylight Saving Time
-----------	---

Firmware	Manual update
----------	---------------

Restore Default	Supported
-----------------	-----------

Backup/Restore (Configuration)	Supported
--------------------------------	-----------

Language	Czech, English, French, German, Italian, Japanese, Korean, Portuguese, Russian, Spanish, Simplified Chinese, Traditional Chinese, Polish
----------	--

Camera Integration

Insert Camera	Manual, Search
---------------	----------------

Video (Media) Setting	Compression, Resolution, FPS, Video Quality
-----------------------	---

Image Setting	Image Display, Image Adjustment
---------------	---------------------------------

PTZ Control	Panel Control
-------------	---------------

PTZ Operation	Direction Control, Home, Preset, Patrol (Group)
---------------	---

Motion Detection	Supported
------------------	-----------

ONVIF Core SPEC.	Version 2.2 or above (By Project)
------------------	-----------------------------------

ONVIF Stream	Video (H.264 & MJPEG)
--------------	-----------------------

ONVIF Recording	Continuous, Schedule, Manual
-----------------	------------------------------

ONVIF Discover	Discover other brand camera through "Insert Camera & Batch Insert"
----------------	--

Device Integration

UPS	APC Model Compatible
-----	----------------------

Joystick	AJ-001, AJ-002
----------	----------------

Safety and Compatibility



Federal Communications Commission (FCC) Statement

This Equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Warning:

[A shielded-type power cord is required in order to meet FCC emission limits and also to prevent interference to the nearby radio and television reception. It is essential that only the supplied power cord be used.]

[Use only shielded cables to connect I/O devices to this equipment.]

You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

[]: depend on EUT condition.



Information on Disposal for Users of Waste Electrical & Electronic Equipment (private households)

This symbol on the products and/or accompanying documents means that used electrical and electronic products should not be mixed with general household waste.

For proper treatment, recovery and recycling, please take these products to designated collection points, where they will be accepted on a free of charge basis. Alternatively, in some countries you may be able to return your products to your local retailer upon the purchase of an equivalent new product.

Disposing of this product correctly will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point.

Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

For business users in the European Union

If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.

Information on Disposal in other Countries outside the European Union

This symbol is only valid in the European Union. If you wish to discard this product, please contact your local authorities or dealer and ask for the correct method of disposal.

Japan VCCI Class A statement

この装置は、クラス A 情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

VCCI-A



ACA (Australian Communications Authority)

CAUTION

**RISK OF EXPLOSION IF BATTERY IS REPLACED
BY AN INCORRECT TYPE.**

DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS