



User Manual for
 USB PORT LOCK [CSK-UL10], USB TYPE B PORT LOCK [CSK-BUL10],
 FIBER OPTIC MODULE LOCK [CSK-FO10], SD PORT LOCK [CSK-SDD10]
 HDMI Port Lock [CSK-HMD10], E-SATA Port Lock [CSK-ETD10], CF Port Lock [CSK-CFD10]
 DISPLAY PORT Lock [CSK-DLD10]

1. Applicable products

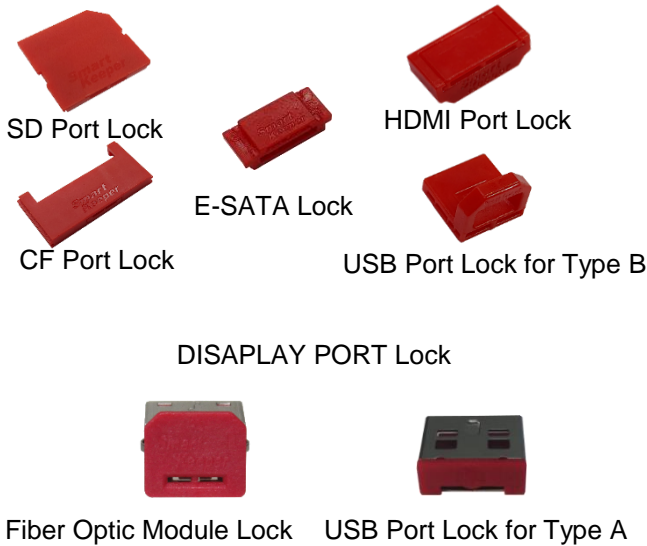


2. Key insertion direction and depth (per product)

- See images below for key direction and insertion depth
- For proper orientation, Smart Keeper logos always faces up on both the key as well as the lock

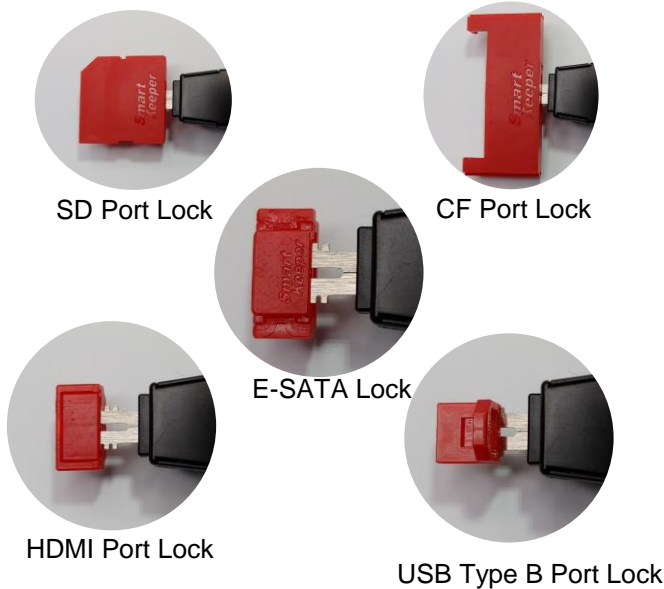

- For proper orientation, Smart Keeper logos always face up.

3. How to install (refer to Lock Key user guide)

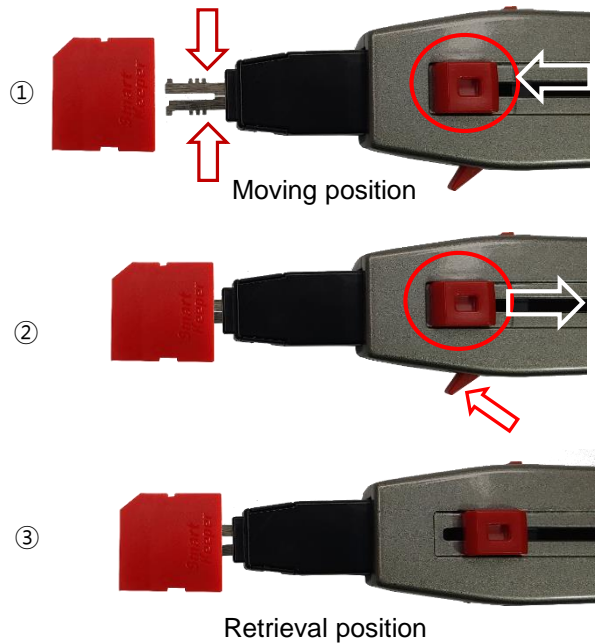

4. Example Installation and Removal

