 
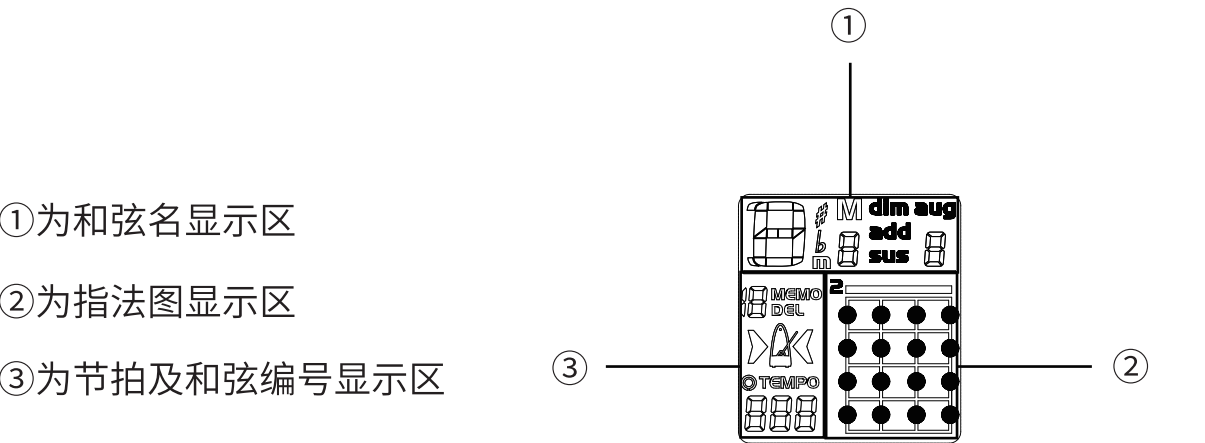 


使用说明书

Button A

感谢购买本款和弦练习器, 在使用本款和弦练习器之前, 请详细阅读说明书, 以便更好的使用与保护, 请将本说明书妥善保管以备参考。

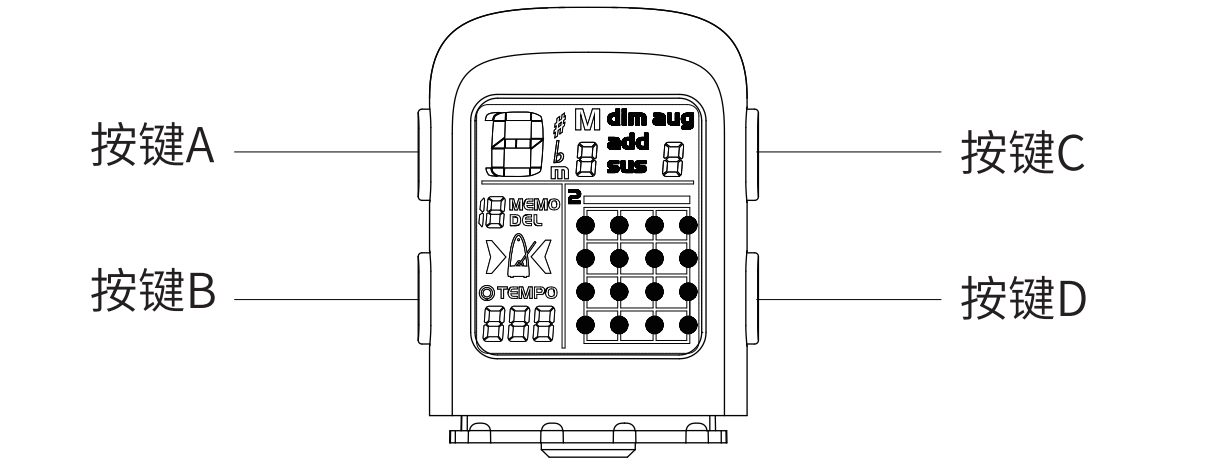

使用方法

- 长按“按钮A” 2 秒开机,任何模式下长按 2 秒关机
- 和弦表模式:区域①和②亮, 区域③不亮
- 循环模式:区域①和②和③全部亮
- 任何模式下长按“按钮B” 2 秒切换 和弦表模式/循环模式

• 和弦表模式

选择和弦

单按“按钮B”选择和弦根音(C、D、E、F、G、A、B)
单按“按钮C”键选择细分和弦
单按“按钮D”键选择大小和弦

存储和弦

长按“按钮C” 键2秒松开区域③和弦编号闪烁, 单按“按钮D”可调整要存储和弦的顺序, 确认和弦再次长按“按钮C” 键2秒确认所要存储的和弦。

清除和弦

同时按住“按钮C”、“按钮D” 键2秒, 此时区域 ①、②不亮, 区域③闪烁。
存储和弦全部清除。(注意:清除和弦功能只能在和弦表模式下使用)

• 循环模式



单按“按钮A”循环播放储存的和弦。此时区域③节拍器开始闪烁。再次单按“按钮A” 键暂停。
单按“按钮C” 键节拍速度+1, 长按“按钮C” 键加快选择节拍速度。
单按“按钮D” 键节拍速度-1, 长按“按钮D” 键加快选择节拍速度。
同时按“按钮C” 键、“按钮D” 键随机选择节拍循环速度。

注:除播放储存和弦以外, 5 分钟若无任何操作则自动关机。

中国制造

Instructions for use

Welcome to use this chord trainer SCT-80! Before using, please kindly read through this instructions to use it correctly, at the same time, keep this instructions safe for future reference.

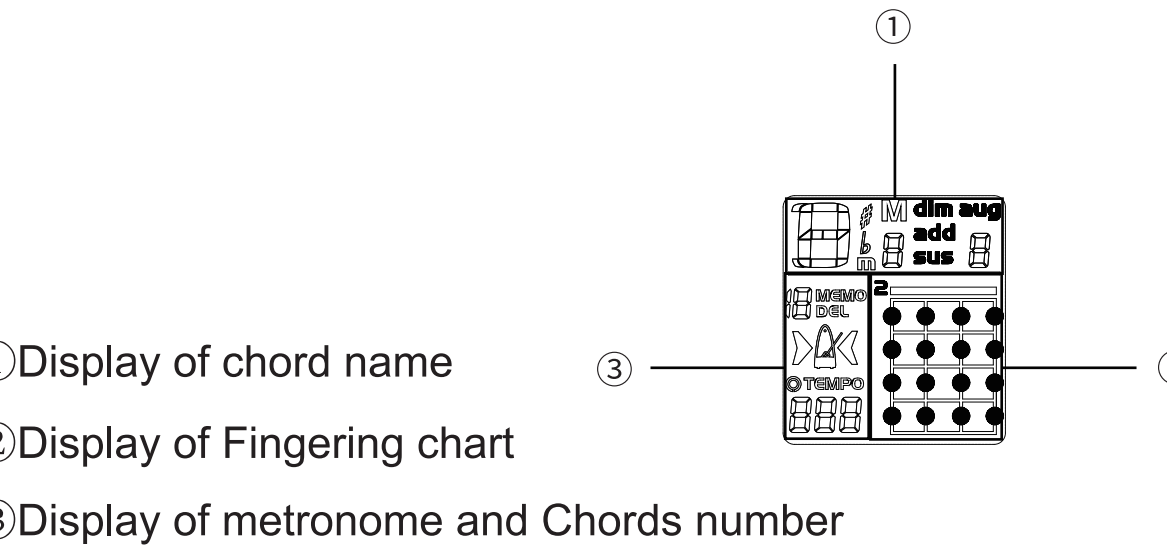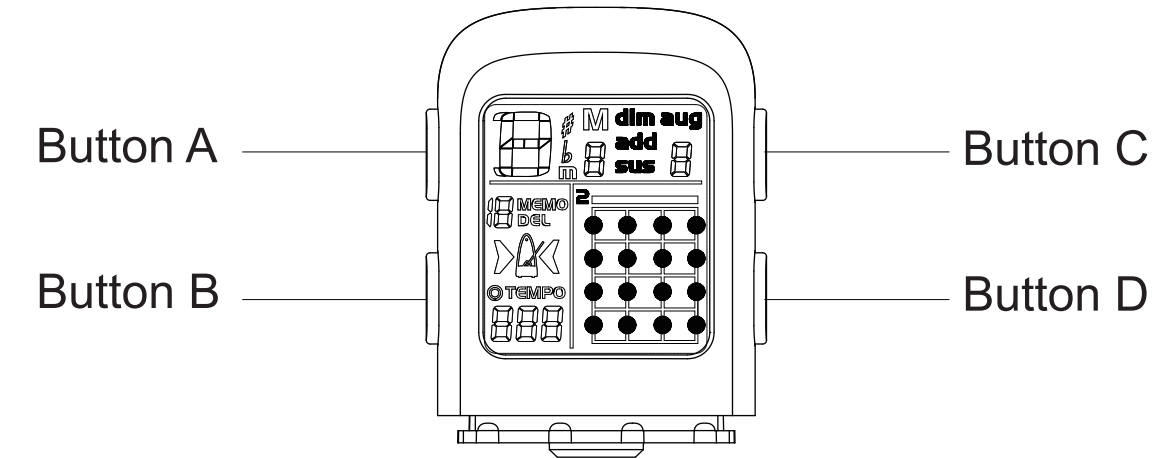

How to use

1. Press 'Button A' for 2 seconds to open, and another 2 seconds to shut down (no matter what modes the device is in).
2. Press 'Button B' for 2 seconds, you can switch between Chord table mode and Circulation mode.
3. When it is in Chord table mode, Area ① and ② in light, area ③ in darkness.
4. When it is in Circulation mode, area ①,② and ③ all in light.

• Chord Table Mode

How to choose chords

Press 'Button B' button to choose C, D,E,F,G,A,B
Press 'Button C' to choose segment chords
Press 'Button D' to choose major and minor chords

How to reserve chords into device

Press 'Button C' 2 seconds, and chords number in area ③ flashes, then press 'Button C' again for 2 seconds to confirm reserving the chords into device.

How to eliminate the chords

Press'Button C' and 'Button D' buttons at the same time for 2 seconds, and area ③ flashes, and the stored chords are eliminated successfully.

• Circulation Mode

Press 'Button A' button to start playing the stored chords, at the same time, the metro-nome in area 3 starts flashing. Press 'Button A' button again to suspend playing.

Press 'Button C', the metronome tempo +1, press longer to increase the tempo.
Press 'Button D', the metronome tempo -1, press longer to decrease the tempo.

Note: The device will shut down automatically after 5 minutes if it is left without any operations (except in circulation mode).

MADE IN CHINA

182*459mm