

EX-word Electronic Dictionary (Series C)

EX-word TextLoader Library Function

User's Guide

Important!

This manual covers operation of various different CASIO electronic dictionary models. Operations in this manual that apply to specific models are noted accordingly. The series of an electronic dictionary is indicated by the letter immediately after the number part of a model name.

- Example: EW-B2000C is indicated as “Series C”.
- For details about series names and applicable model names, visit the CASIO EX-word TextLoader software download site.

CASIO[®]

Introduction

This User's Guide explains how to use the EX-word TextLoader software and the EX-word Electronic Dictionary's Library function. Be sure to read this User's Guide before attempting to use the EX-word TextLoader Library Function.

Keep this User's Guide in a safe place for future reference.

Features

■ **Read Free eBooks downloaded from the Internet**

You can use your electronic dictionary to read text (txt) format eBooks that you can download for free from various websites on the Internet. Simply download the text and transfer it to your electronic dictionary. →Page 4

■ **Read text files**

Simply transfer a text (txt) file to your electronic dictionary and you can take it along and read it just about anywhere. →Page 10

■ **MicroSD memory card data storage**

Commercially available microSD memory cards can be used to expand the storage capacity of your electronic dictionary.

→Page 14

- The expression "microSD memory card" as used in this manual refers to both microSD memory cards and microSDHC memory cards.
- Text file transfer requires EX-word TextLoader software. →Page 4
- A Series C electronic dictionary can store up to 200 text files.
- A microSD memory card can store up to 200 eBooks and text files.
- The remaining memory capacity displayed by the electronic dictionary is intended for reference purposes only. There may be times when you will not be able to transfer a file, even though it is smaller than the remaining memory capacity value.

- Be sure to keep backup copies of any data you transfer from a computer to the electronic dictionary or a microSD memory card. Do not delete the data from your computer after transferring it. Malfunction or repair of the electronic dictionary can cause all of its memory contents to be deleted.

For details about other functions and operations, see the User's Guide that comes with your electronic dictionary.

Manual Precautions

- CASIO COMPUTER CO., LTD. will not be held liable for any monetary damages suffered by you or any third party arising out of the use of this manual.
- No reproduction of this manual either in part or in its entirety is allowed without the written consent of CASIO COMPUTER CO., LTD.
- The contents of this manual are subject to change without notice.
- The screen shots shown in this manual may differ somewhat from the screen contents actually produced by the product. Most of the illustrations and screen shots in this manual show a Series C electronic dictionary.
- This manual does not contain any explanations of basic Windows functions.

It assumes that you are already familiar with the following basic Windows Functions.

- Mouse operations such as: click, double-click, right-click, drag, drag and drop, etc.
- Menu operations using the mouse
- Keyboard input
- General window operations

If you are not familiar with the above operations, see the user documentation that came with the version of Windows you are running.

Registered Trademark and Trademark Marks

All of the terms described below are registered trademarks or trademarks of the applicable companies.

- Windows and Windows Vista are trademarks or registered trademarks of Microsoft Corporation of the United States in the United States and other countries.
- Macintosh and Mac OS are registered trademarks of Apple Inc. in the United States and other countries.
- microSDHC Logo is a trademark of SD-3C, LLC.
- Other company names and product names used in this manual are trademarks or registered trademarks of others.

Software Precautions

- All rights to this software and manual revert to CASIO COMPUTER CO., LTD.
- This software is designed to run on Windows. It will not run on a Macintosh or Mac OS.

Minimum Computer System Requirements

Operating System (English Versions): Windows® XP Home Edition, Windows® XP Professional, Windows Vista®, Windows® 7, and Windows® 8

- Proper operation may not be possible under certain system configurations (CPU, hard disk capacity, memory capacity, etc.).
- Proper operation is not guaranteed under a computer whose operating system has been upgraded to Windows XP Home Edition, XP Professional, Windows Vista, Windows 7, or Windows 8.
- Operation is supported under Windows Vista, Windows 7, and Windows 8 32-bit and 64-bit versions.
- Operation is not supported under Windows XP Professional x64 Edition.

Reading a Free eBook

Before connecting your electronic dictionary to a computer, be sure to install EX-word TextLoader on the computer first.

What is a Free eBook?

A Free eBook is a book in electronic form whose copyright has expired or whose copyright holder has permitted to be published electronically for free.

You can find out more about Free eBooks at the following website.

- Project Gutenberg

http://www.gutenberg.org/wiki/Main_Page

Be sure to read the terms and conditions on each website and be aware of your obligations whenever you download a Free eBook.

- 1 Download the file of the book you want to read from the website.
 - On the Internet, access the site where the Free eBook you want to read is located, and download it.
 - Note that only text (txt) files can be transferred to your electronic dictionary.
 - Some files may be compressed (zip or other compressed format) when you download them. Opening a compressed file will uncompress it.
 - If the name of a text file is longer than eight characters, change its name so it is no longer than eight single-byte characters.
- 2 Go to <http://casioindiacompany.com/cic/index.php> and download EX-word TextLoader to your computer.
 - Follow the instructions provided at the website to download the software.

3 Install EX-word TextLoader on your computer.

- ① Double-click  to uncompress the file.
- ② Follow the instructions that appear on your computer screen to install the software.
 - If your computer is running Windows Vista, Windows 7, or Windows 8, a "User Account Control" screen will appear. Click [Yes] or [Allow].
 - If your computer is running Windows Vista, Windows 7, or Windows 8, and the message shown in the nearby screen shot appears, click [Install].



- ③ Your computer's desktop screen (with EX-word TextLoader icon ) will appear after installation is complete.

4 On your computer, double-click the EX-word TextLoader icon to start up EX-word TextLoader.

- You can check your current EX-word TextLoader version by pressing the [F5] function key on your computer's keyboard. This will display the "Version" screen.




5 Connect the electronic dictionary to your computer.

- Be sure to use the USB cable that comes with the electronic dictionary.

Important!

Make sure that EX-word TextLoader is installed on your computer before connecting your electronic dictionary.

- ① Make sure that EX-word TextLoader is running on the computer.
- ② Turn off the electronic dictionary.
- ③ Plug one end of the USB cable directly into the USB port of your computer. Plug the other end into the USB cable connector of the electronic dictionary.

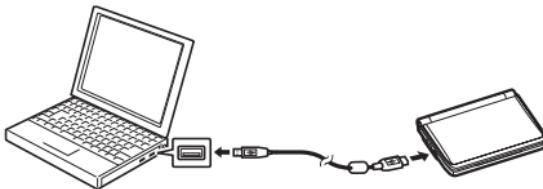

Be sure to plug the cable directly into the computer's USB port.

Proper operation may not be possible with an indirect connection (via a USB hub, etc.).

6 Establish a connection between the electronic dictionary and computer.

- ① Turn on the electronic dictionary.
- ② Press **SHIFT** and then press **LIBRARY** to display the “Library” screen.
- ③ On the electronic dictionary, press **▶** to highlight “PC Link” and then press **ENTER**.
 - If a “Note” message appears, use the electronic dictionary’s **▲** and **▼** keys to select the option you want and then press **ENTER**. Next, press **ENTER** again.

Important!

If your computer is running Windows XP, a warning message like the ones shown below may appear the first time you connect the electronic dictionary to your computer.

If your computer is running Windows XP Service Pack 1 (SP1)



Select “Install the software automatically (Recommended)” and then click [Next].




If your computer is running Windows XP Service Pack 2 (SP2) or higher



Select “No, not this time” and then click [Next].



Select “Install the software automatically (Recommended)” and then click [Next].

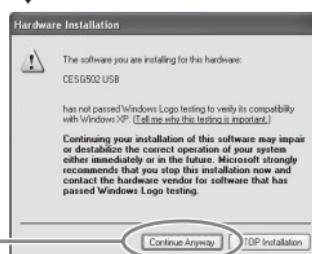


Click




Click [Continue Anyway] to continue with the installation.

Electronic Dictionary Screen

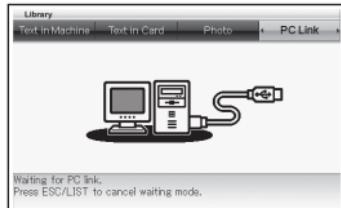

Computer Screen/Message

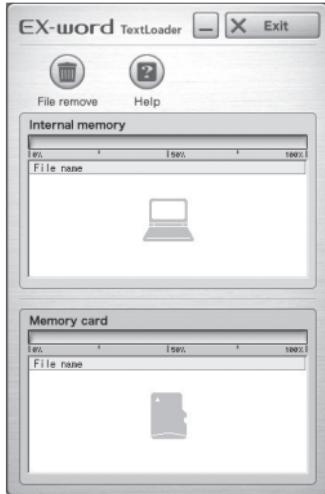

7 Transfer the Free eBook file you downloaded in step 1 to the electronic dictionary.

- On your computer screen drag the Free eBook file to the EX-word TextLoader dialog box.

Drop here to transfer to the electronic dictionary main memory.

Drop here to transfer to the microSD memory card loaded in the electronic dictionary.




8 After data transfer is complete, exit EX-word TextLoader.

9 Turn off the electronic dictionary and then disconnect the USB cable.

10 View the Free eBook on the electronic dictionary.

- ① Turn on the electronic dictionary.
- ② Press **SHIFT** and then press **MENU/LIBRARY** to display the “Library” screen.
- ③ Use **◀** and **▶** to select “Text in Machine” to view the files in main memory or “Text in Card” to list the files on the microSD memory card.
- ④ Use **▲** and **▼** to move the highlighting to the file you want to view and then press **ENTER**.
 - This will display the file text.

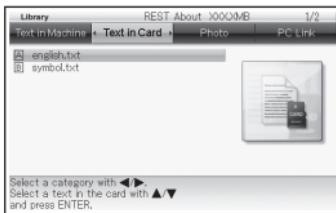

- The following are the specifications for the type of text that can be viewed on the electronic dictionary.
Western Europe (ISO) text format file; file name of up to eight single-byte alpha-numeric characters; txt file name extension; maximum file size of 5 MB.
- The following electronic dictionary functions are supported during text display.
Jump Search, Layout Switching Function, Zoom, Pronunciation Feature
- Bookmarks are also supported for displayed text.
Bookmarks → Page 11

Reading Text Data

Before connecting your electronic dictionary to a computer, be sure to install EX-word TextLoader on the computer first.

What is text data?

Text data is data in a file with the file name extension “txt”.

- 1 On your computer, create the text data and save it.
- 2 If you have EX-word TextLoader installed on your computer yet, perform the procedure from step 4 under “Reading a Free eBook”.
If do not have EX-word TextLoader installed on your computer yet, perform the procedure from step 2 under “Reading a Free eBook”.


- The following are the specifications for the type of text that can be viewed on the electronic dictionary.
Western Europe (ISO) text format file; file name of up to eight single-byte alpha-numeric characters; txt file name extension; maximum file size of 5 MB.
- The following electronic dictionary functions are supported during text display.
Jump Search, Layout Switching Function, Zoom, Pronunciation Feature
- Bookmarks are also supported for displayed text.
Bookmarks →Page 11

Bookmarks

You can use the electronic dictionary's Bookmark feature to insert bookmarks into text (txt) files, which makes it easy to find specific information when you need it.

To insert a bookmark

- 1 While the text is on the electronic dictionary screen, press **SHIFT** and then press **SETUP** **DEL**.

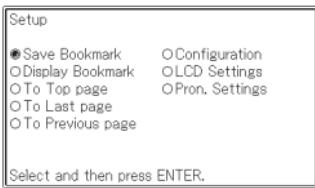

- 2 Use the cursor keys to move the cursor (●) to "Save Bookmark" and then press **ENTER**.
- 3 Use the cursor keys to move the cursor (●) to the name of the bookmark you want to insert and then press **ENTER**.
 - This will insert the bookmark.
 - If the text where you insert the bookmark is stored on the microSD memory card, removing the memory card from the electronic dictionary will cause the bookmark to be deleted.


To jump to a bookmark

- 1 While the text is on the electronic dictionary screen, press **SHIFT** and then press **SETUP** **DEL**.
- 2 Use the cursor keys to move the cursor (●) to "Display Bookmark" and then press **ENTER**.
- 3 Use the cursor keys to move the cursor (●) next to the bookmark you want and then press **ENTER**.
 - This will display the page where the bookmark is located.

Deleting a Text File

Use the procedure below to delete individual text files that have been transferred to the electronic dictionary (built-in memory and memory card).

- 1 Start up EX-word TextLoader on your computer.
- 2 Connect the electronic dictionary to your computer.
After confirming that “PC Link” is highlighted on the electronic dictionary screen, press the electronic dictionary’s **ENTER** key.
 - After preparation for data communication is complete, the computer will show all text files that have been transferred to the electronic dictionary with EX-word TextLoader.
- 3 On the EX-word TextLoader screen, select the text file you want to delete.
- 4 Click .
 - In response to the confirmation message that appears, click [Yes].
 - The name of the file will disappear from the screen after deletion is complete.
- 5 Exit EX-word TextLoader, turn off the electronic dictionary, and disconnect the USB cable.

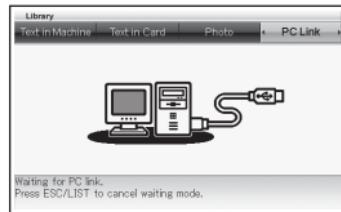

Uninstalling EX-word TextLoader

Windows XP

On the Windows [Start] menu, click [Control Panel] → [Add or Remove Programs].

Windows Vista/Windows 7

On the Windows [Start] menu, click [Control Panel]. Next, under [Programs], select [Uninstall a program].

Windows 8

Align the mouse pointer with the upper right corner or lower right corner of the screen. On the menu that appears, select [Settings] and then [Control Panel].

Next, under [Programs], select [Uninstall a program].

- Perform the procedure as instructed on your computer screen.
- Be sure to restart your computer after deletion is complete.

Using a microSD Memory Card

- For information about loading and removing a microSD memory card, see the electronic dictionary's User's Guide.



Commercially available microSD memory cards or microSDHC memory cards can be used to expand storage capacity.

Important!

- Use only a microSD memory card. Proper operation is not guaranteed when any other type of memory card is used.
- Never do any of the following while microSD memory card text is on the display of the electronic dictionary.
 - Insert or remove the memory card
 - Connect or disconnect the USB cable
 - Turn off the electronic dictionary or computer
 - Exit EX-word TextLoader or Windows
- Note that the microSD memory card must be oriented correctly when you insert it into the card slot. Forcing the card can damage it.
- Be sure to read the documentation that comes with the microSD memory card before using it.
- Some microSD memory cards may require formatting before use. If formatting instructions appear after you load a microSD memory card and display the "Library" screen (Page 6), it means that the card needs to be formatted. Follow the instructions to format the card. Note that formatting a microSD memory card will delete all data currently stored on it. Data deleted by a format operation cannot be recovered. Make sure you no longer need the current contents of a memory card before formatting it.
- The storage capacity consumed by a file transferred from a computer to a microSD memory card is different when the same file is transferred from a computer to electronic dictionary memory. This is due to limitations imposed by the microSD memory card. Because of this, a file transferred to a microSD memory card loaded in the electronic dictionary may take up more memory card space than is indicated by the file size on your computer.
- Depending on the type of microSD memory card you are using, the display may simply go blank without displaying a message when battery power goes low. If this happens, replace the batteries.
- A microSD memory card can be swallowed by small children, presenting a choking risk. Keep microSD memory cards out of the reach of small children.

Screen Messages

The following explains why certain messages appear on your computer or electronic dictionary display while you are using the Library feature, and the actions you need to take in response.

■ Computer

Message	Cause	Action	Page
An unsupported model is connected, or the electronic dictionary is not ready for communication.	The electronic dictionary connected to your computer is not supported by this software.	Check the model name of the connected electronic dictionary to make sure it is a supported model.	—

■ Electronic Dictionary

Message	Cause	Action	Page
PC link error has occurred. Please wait.	The USB cable was disconnected during data communication.	Correctly connect the USB cable and perform data communication again.	6
	Some problem occurred during data communication.	Make sure the USB cable is connected correctly and perform data communication again. If the same message appears, contact your nearest CASIO service centre.	6
Abort connection.	Data communication was interrupted because you performed some operation on the electronic dictionary during data communication.	Perform the required operation on your computer to exit EX-word TextLoader.	—

Message	Cause	Action	Page
Error has occurred.	The microSD memory card is not loaded correctly in the card slot.	Load the microSD memory card correctly.	14
	Some problem occurred with the data.	Try performing the same operation again.	—
No content	There is nothing stored in electronic dictionary main memory or on its memory card.	Use EX-word TextLoader to transfer text files from your computer.	—

- For information about messages that appear while a microSD memory card is in use, see the electronic dictionary's User's Guide.

Troubleshooting

Whenever the electronic dictionary stops operating while using the Library feature, the first thing you should check is if there are batteries loaded, and that battery power is not low.

Next, check the points described below.

Symptom	Cause	Action	Page
Cannot perform data communication.	Something wrong with the USB cable connection.	Check to make sure that the USB cable connection between the electronic dictionary and computer is secure and proper.	6
Cannot access the microSD memory card.	The microSD memory card is not loaded correctly in the card slot.	Load the microSD memory card correctly.	14
Cannot transfer a text file.	The text file is compressed.	Decompress the text file and try again.	4 8

CASIO[®]

MO1302-B