



ASSEMBLY & USE INSTRUCTIONS

TC 160 LED MULTI FUNCTION WIFI LIGHTS

THESE INSTRUCTIONS ARE FOR YOUR SAFETY. PLEASE STUDY ALL INSTRUCTIONS AND WARNING LABELS BEFORE USING AND RETAIN FOR FUTURE REFERENCE.

Frequency band range:2412.0MHz–2462.0MHz

Maximum radio-frequency power:0.0143dBm

Caution

- 1) **PRODUCT IS INTENDED FOR INDOOR AND OUTDOOR USE.**
- 2) Plug the adaptor into an **INDOOR** mains socket.
- 3) **This product is intended for use in Christmas decoration only, and not suitable for household room illumination. The chromaticity coordinates of the coloured bulbs fall within the range of special purpose product. WARNING. Do not use the product other than its intended use.**
- 4) Never place the product near a wet location.
- 5) Do not allow the product near/ contact with a source of heat or flame, e.g. gas or electric heaters, fireplaces, candles or other similar heat sources.
- 6) Do not cover the product with cloth, paper or any other material not part of the product when in use. e.g. curtains, nets or bedding.
- 7) Do not connect the product to the power supply while the product is in the packaging.
- 8) **Keep out of reach of small children and pets.**
- 9) This light set is constructed with replaceable LED light.
- 10) Only operate this product with the adaptor supplied.
- 11) Do not connect the light set to any other light set by cutting or joining the sets together.
- 12) Unplug the LED light chain when leaving the house, when retiring for the night, or if unattended.
- 13) Do not secure the wiring with sharp hooks or nails. This can cut or damage the wire insulation.
- 14) The external flexible cable or cord cannot be replaced. If part of light set or cable is damaged, the product **MUST** be destroyed.
- 15) Do not let lamps rest on the supply cord or any other wire.
- 16) To reduce risk of fire, do not deliberately reposition either lamp holder contact.
- 17) This product is for decoration use only. Not to be used by children as a toy.
- 18) To avoid the risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
- 19) Please refer to the packing or product rating label for product class, specifications and rating.
- 20) **IF YOU ARE IN ANY DOUBT ABOUT INSTALLING THIS PRODUCT, CONSULT A QUALIFIED ELECTRICIAN.**

No tools required for assembly.

Before You Start

- 1) Study the Caution carefully.
- 2) Decide on an appropriate location for your product, make sure that you have plenty of space and a clean dry area.
- 3) Check the pack and make sure you have all of the parts.
- 4) Remove all plastic bags and dispose of safely.
- 5) Retain the instructions for future use.

Assembly

- 1) Connect the light string to the transformer and secure with the screw cap.
- 2) Plug the transformer into a mains socket and switch on.
- 3) Scan the below QR code with your mobile device to download the “LitLightApp” (As shown **Fig.1**). QR code as shown in **Fig.2** is for Android devices. QR code as shown in **Fig.3** is for Apple devices. You can download the apps in Google Play store or Apple App store by searching “LitLightApp”



Fig.1



Fig.2



Fig.3

- 4) Search WiFi connections on your mobile device and connect to “Clickbrights” manually. The password is 12345678
- 5) Turn on the LitLightApp, press “Clickbrights” to enter the control interface (As shown **Fig.4**).
- 6) Please wait a moment for the key code to be shown then you can remote control the lights. If key code can't show, please try again above connection steps. If still failed, please check your device is compatible.
- 7) Press the “ON/OFF” button to control the light set On and Off.
- 8) Press the “8 LIGHTING FUNCTIONS” button to choose a different light function. Press the “CANCEL” button to return to the control interface at any time. (As shown **Fig.5**).
- 9) Press the “WHITE/MULTI” button to alternate between colours.
- 10) Slide the “TIMER” button from left to right to select the duration you wish the light set to remain on. The light set will automatically turn off when the time elapses.
- 11) Slide the “BRIGHTNESS” button from left to right to adjust the brightness of the LEDs.
- 12) It will be disconnected automatically if it doesn't have any operation more than 3 minutes. After that, you need to connect again by step 4 and 5.

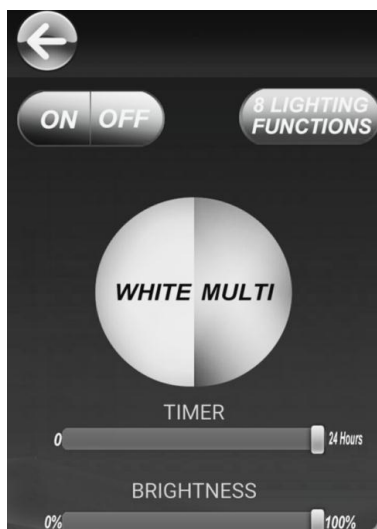 


Fig.4

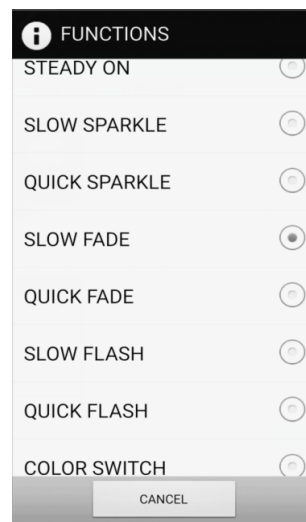 


Fig.5

- 13) When change bulb, pull up on the bulb lock unlatching the bulb from the bulb socket. Gently pull the bulb straight out (**Fig.6**). Carefully insert new bulb into socket and push down bulb lock until it snaps into place (**Fig.7**).

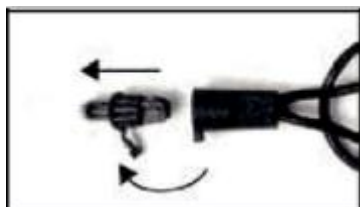 


Fig.6

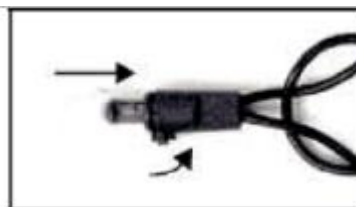 


Fig.7

Care & Use

- 1) Before using or re-using, inspect the product carefully. Throw away the product if any parts are damaged or there is frayed wire insulation or cords, loose connections or exposed copper wire.
- 2) Before storing the product, carefully remove the product from wherever it is placed to avoid undue strain or stress on the product conductors, connections and wires.

Storage

- 1) Unplug the transformer from the mains socket which has been switched off.
- 2) Unscrew the screw cap and detach the light string from the transformer.
- 3) Carefully place the light set back in the original box and tape it shut. STORE THE PRODUCT IN A COOL AND DRY LOCATION PROTECTED FROM SUNLIGHT AND WHERE THE TEMPERATURE DOES NOT EXCEED 40°.

Trouble shooting

If the lights does not work properly, please check the following connections:

- 1) Make sure that the product is securely plugged in to the power supply.
- 2) Make sure the light chain is securely connected to the adaptor.

If your device cannot connect to the lights, please check and follow below.

- 1) Check if your device is compatible
- 2) Check if your device WiFi connect to "Clickbrights"
- 3) Reboot your device and follow the assembly step
- 4) It will be disconnected automatically if it doesn't have any operation more than 3 minutes.
- 5) Maximum 3 device can be connected to the lights at the same time
- 6) Walk close to the lights in order to get a strong signal

Disposal and recycling



Waste electrical products should not be disposed of with household waste.
Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.

PRODUCED FOR ARGOS LTD.
AVEBURY BOULEVARD MILTON
KEYNES MK9 2NW
www.argos.co.uk