


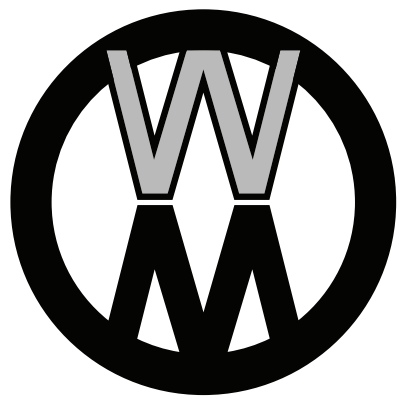

WALKER

Illustrated Parts Manual

S18



Beginning S/N: 148901
P/N 5000-40

KEY TO ABBREVIATIONS USED IN THIS MANUAL

<i>Abbreviation</i>	<i>What it Represents</i>
° (Dimension)	Degrees (Angle)
" (Dimension)	inches
(-)	Negative (Polarity)
(+)	Positive (Polarity)
AT	All-Terrain
CCW	Counter-clockwise
Conn.	Connector
CW	Clockwise
D	Diameter
DC	Deck, Collection (number refers to size in inches)
DM	Deck, Mulching (number refers to size in inches)
DR	Deck, Rear Discharge (number refers to size in inches)
DS	Deck, Side Discharge (number refers to size in inches)
DU	Garlock (Bearing)
ESNA (Fastener)	Nylon Insert Locknut
FSC	Forward Speed Control
GA	Gauge
gal.	gallon
GHS	Grass Handling System
GR (Fastener)	Grade
HD	Heavy Duty
HP	Horse Power
ID	Identification or Inside Diameter
L	Length
LH	Left Hand (orientated with operator on seat)
LP	Low Profile
mm (Dimension)	millimeters
MS (Fastener)	Machine Screw
NS (as part number)	Item is not sold by Walker Manufacturing
OD	Outside Diameter
oz.	ounce
PFH (Fastener)	Phillips Flat Head
P/N	Part Number
PPH (Fastener)	Phillips Pan Head
PTH (Fastener)	Phillips Truss Head
PTO	Power Take-Off
QKS	Quick Slide
qt.	quart
RH	Right Hand (orientated with operator on seat)
SAE (Fastener)	Society of Automotive Engineers
SBH (Fastener)	Socket Button Head (Bolt)
SD	Side Discharge
SFH (Fastener)	Slotted Flat Head
SHC (Fastener)	Socket Head Cap
SHL (Fastener)	Shoulder (Bolt)
SM (Fastener)	Sheet Metal (Screw)
S/N	Serial Number
Spg.	Spring
SQH (Fastener)	Square Head
SS (Fastener)	Stainless Steel
ST (Fastener)	Self-Tapping (Screw)
Term.	Terminal
V	Volts

NOTE: In some instances, combinations of abbreviations may be used (e.g. PPHMS - Phillips Pan Head Machine Screw).

ILLUSTRATED PARTS LIST

<i>Section of Tractor Covered</i>	<i>Page</i>
Decals	
Tractor Decals	2
Body / Chassis Assemblies	
Body / Chassis Assembly	4
Rear Body Assembly	6
Tractor Components	
Main Component Power Transmission	8
Engine Group	10
Hydrostatic Ground Drive Assemblies.....	12
Steering Control Assemblies.....	14
GHS Group	16
GHS Powerfil® Assembly (7.0)	18
GHS 7.0 Bushel Catcher Assembly.....	20


<i>Section of Tractor Covered</i>	<i>Page</i>
Electrical Components	
Electrical Assembly	22
Electrical Assemblies (GHS 7.0 Bushel Components).....	24
Electrical Connectors.....	26
Maintenance	
Lubrication Points	28
Wiring Schematic	30
Maintenance And Service Record Sheet.....	31
Warranty	
Limited Warranty	33

TRACTOR DECALS

ITEM NO.	PART NO.	DESCRIPTION	LOCATION	NO. REQ'D GHS
Walker Product Decals				
1	5800-11	Walker (8" Round)	7.0 Bushel Catcher (one on each side)	2
2	9804-1	Axle Lockout	Chassis	2
3	8600-44	LH Fender	Body, LH near Seat	1
4	8821-21	Decal, S18	Body	1
5	5856-1	Made in USA	Body	1
6	8600-45	RH Fender	Body, RH near Seat	1
Danger Decals Warning Decals Caution Decals				
7	8600-10	Danger, Pinch Point	7.0 Bushel Catcher Mounting Frame Assembly (one on each side)	2
8	8600-12	Danger, Engine Exhaust	Engine	1
9	8600-4	Danger, Rotating Blower Blades	Body, Near Body Chute	1
Maintenance Decals				
10	5869	Removable Screen	7.0 Bushel Catcher Removable Screen	1
11	6875	PTO Alignment Arrow	Universal Joint Tube Assembly	1

NOTE: All parts requiring decals are shipped with decals applied.


TRACTOR DECALS

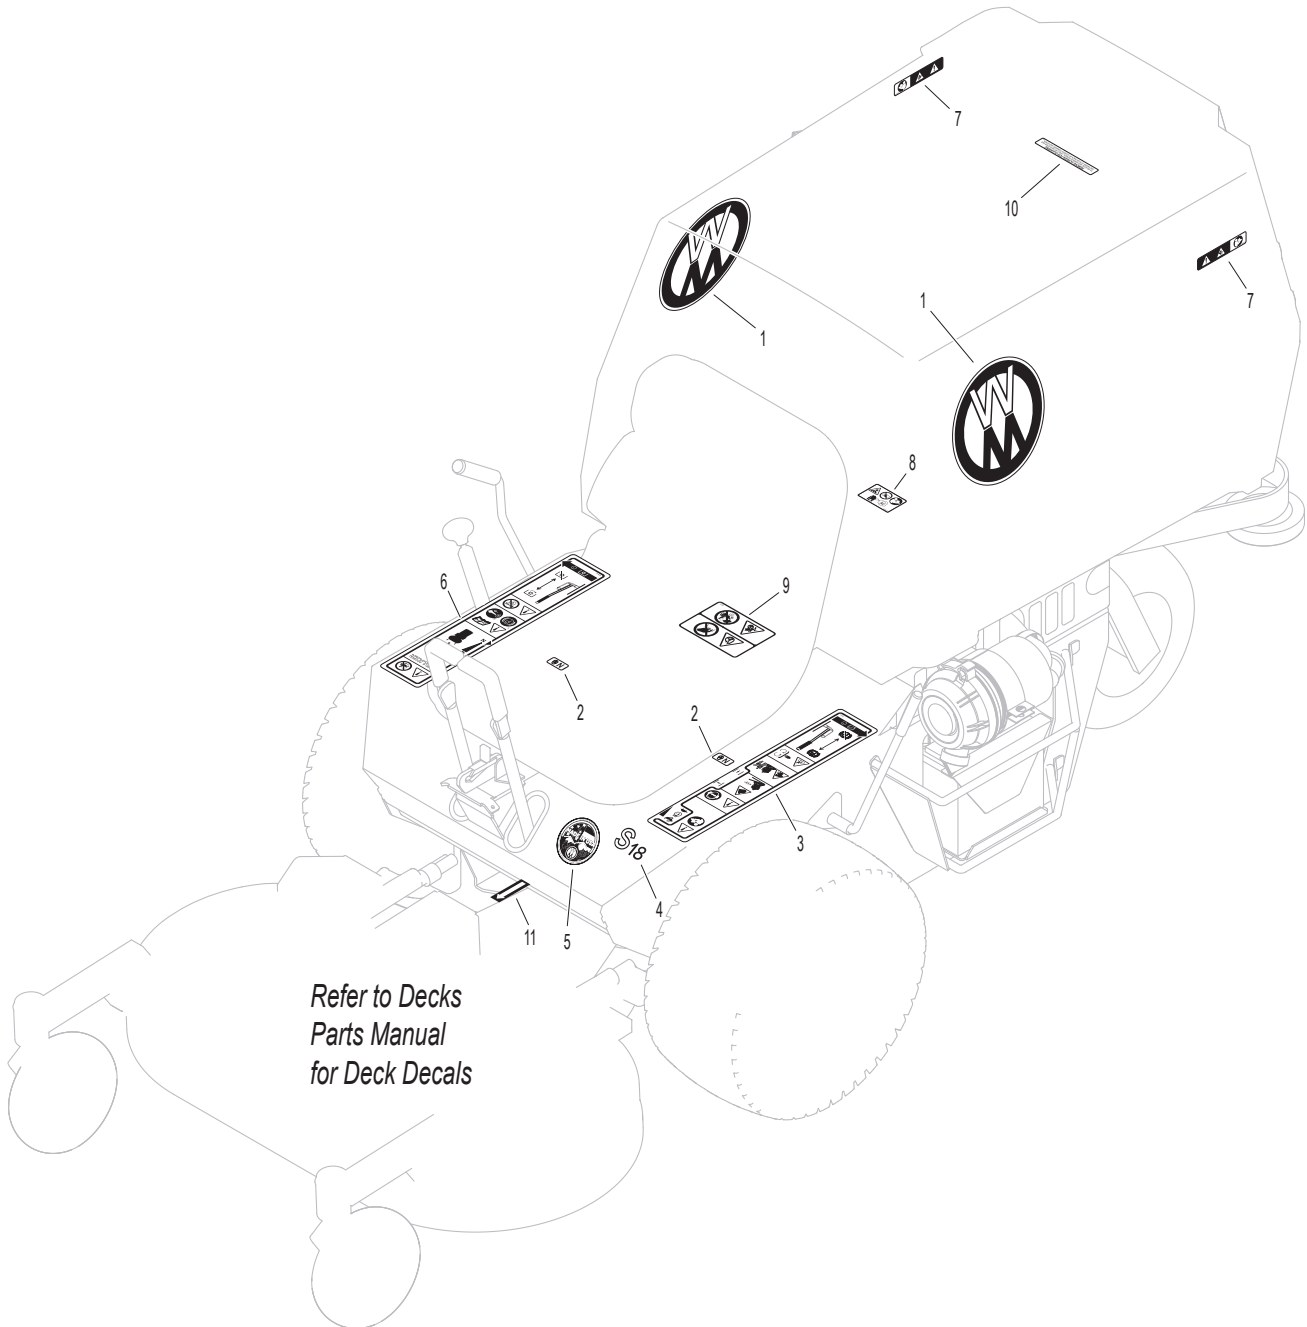

BODY / CHASSIS ASSEMBLY

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Seat Assembly				Deck Support Arm & Hitch Assemblies			
1	5103	Seat	1	40	5830	Grease Fitting	2
2	7223-4	Compression Spring	2	41	6840-1	Support Arm Bushing (2-1/16)	2
3	5841-1	Retainer Washer	4	42	6431-5	Deck Arm Mount	2
4	7434	Washer (3/8 x 1-1/4 x 1/4)	2	43	6431-3	Deck Support Arm, LH (Includes Item # 40)	1
5	7845-1	Rubber Bumper (1.375 x .750)	2	44	5775-2	Hitch Pin (#6)	2
6	7440-5	Shock Mount (1-1/4 x 3/4)	2	45	5303-5	Deck Arm Hydro Mount, LH	1
Rear Bumper Assembly				46	5303-6	Deck Arm Hydro Mount, RH	1
7	7516-5	Catcher Pivot Bushing	2	47	6431-4	Deck Support Arm, RH (Includes Item # 40)	1
8	5517-6	Rear Bumper	1	Fasteners			
9	7517-3	Catcher Pivot Plate	2	F002	10-24 Keps Nut		2
10	5162	Roller Wheel (5" Rubber)	2	F004	1/4-20 Keps Nut		14
Body Assembly				F005	1/4-20 ESNA Nut		1
11	2505	Leaf Spring	1	F009	5/16-18 Whiz Locknut		26
12	5100-17	Welded Body	1	F013	3/8-16 Whiz Locknut		2
13	4102-1	Body Guide, Upper	1	F014	3/8-16 ESNA Nut		2
14	7844	Rubber Bumper (1.25 x .250)	2	F016	1/2-13 Self-Locking Nut		1
15	NS	Body ID Plate	1	F020	5/16-18 ESNA Nut		1
16	5180	Edge Molding, Lever Opening	2	F025	10-24 x 3/8 PPHMS		2
17	4504-3	Hinge (19")	1	F029	1/4-20 x 1/2 Hex Bolt		4
Tilt-Up Latch Assembly**				F034	5/16-18 x 3/4 Hex Bolt		14
18	5847	Plastic Tip	1	F038	3/8-16 x 1 Hex Bolt		2
19	5744-20	Spring Arm, Tilt-Up Latch	1	F041	3/8-16 x 1-3/4 Hex Bolt		2
20	5744-10	Spring Pivot Bushing	1	F042	3/8-16 x 2-1/4 Hex Bolt		2
21	5744-15	Compression Spring (3/8 x 5/8)	1	F048	1/2 SAE Washer		2
22	5744-13	Mount Angle, LH	1	F049	5/16 SAE Washer		8
23	5744-12	Hook, Tilt-Up Latch	1	F053	7/16 Int. Star Lock Washer		2
24	5744-14	Mount Angle, RH	1	F059	3/8 Wave Spring Washer		2
Chassis Assembly				F093	5/16-18 x 1 Hex Bolt		1
25	9046	Gas Tank Mount	1	F116	1/4-20 x 1-1/4 Hex Bolt		1
26	5300-17	Chassis Frame	1	F151	3/8-16 x 7/8 Hex Bolt		2
27	5267-1	Retainer Collar (1") (Includes Item # F413)	1	F183	.312 x .700 x .074 Washer		2
28	5270-1	Pivot Bearing	2	F200	7/16-20 x 3 Grade 8 Bolt		2
29	5420-2	Tail Wheel Fork	1	F206	#2 x 3/16 Drive Pin		2
30	5037-1	Bearing, Tail Wheel	2	F227	3/8 x 1-1/4 x 1/8 Washer		2
31	5035	Tail Wheel & Tire Assembly (13 x 6.50-6)	1	F241	.375 x .875 x .10 Washer		4
	5035-1	Tail Wheel Tire (13 x 6.50-6)	*	F246	1/4-20 x 1/2 PTHMS		8
	5036	Tail Wheel & Hub (6 x 4.5)	*	F257	3/8 x 1-11/16 Shoulder Bolt		2
32	5038-1	Axle Spacer Tube (6-5/8)	1	F292	1/2-13 x 8-1/2 Hex Bolt, GR 5		1
33	6390-4	Battery Guard	1	F341	Coil Roll Pin (7/64 x 9/16)		1
34	5146	10mm Ball Stud	2	F342	5/16 Conical Washer		2
35	5145-4	Gas Spring Assembly (Includes Item # 34)	1	F413	5/16-24 x 5/16 Set Screw		2
36	7383-1	Body Latch Hook	1	F438	5/16-18 x 2-3/4 Hex Bolt		4
37	7854	Plastic Tip, Red	1	F477	1/4-20 x 5/8 Carriage Bolt		2
38	7222	Extension Spring (1/4 x 3)	1	F570	3/8-16 Flange Top Lock Nut		4
39	4102-2	Body Guide, Lower	1	* Service Part Only			
				** Complete Tilt-Up Latch Assembly Kit available by ordering kit # 5747.			

BODY / CHASSIS ASSEMBLY

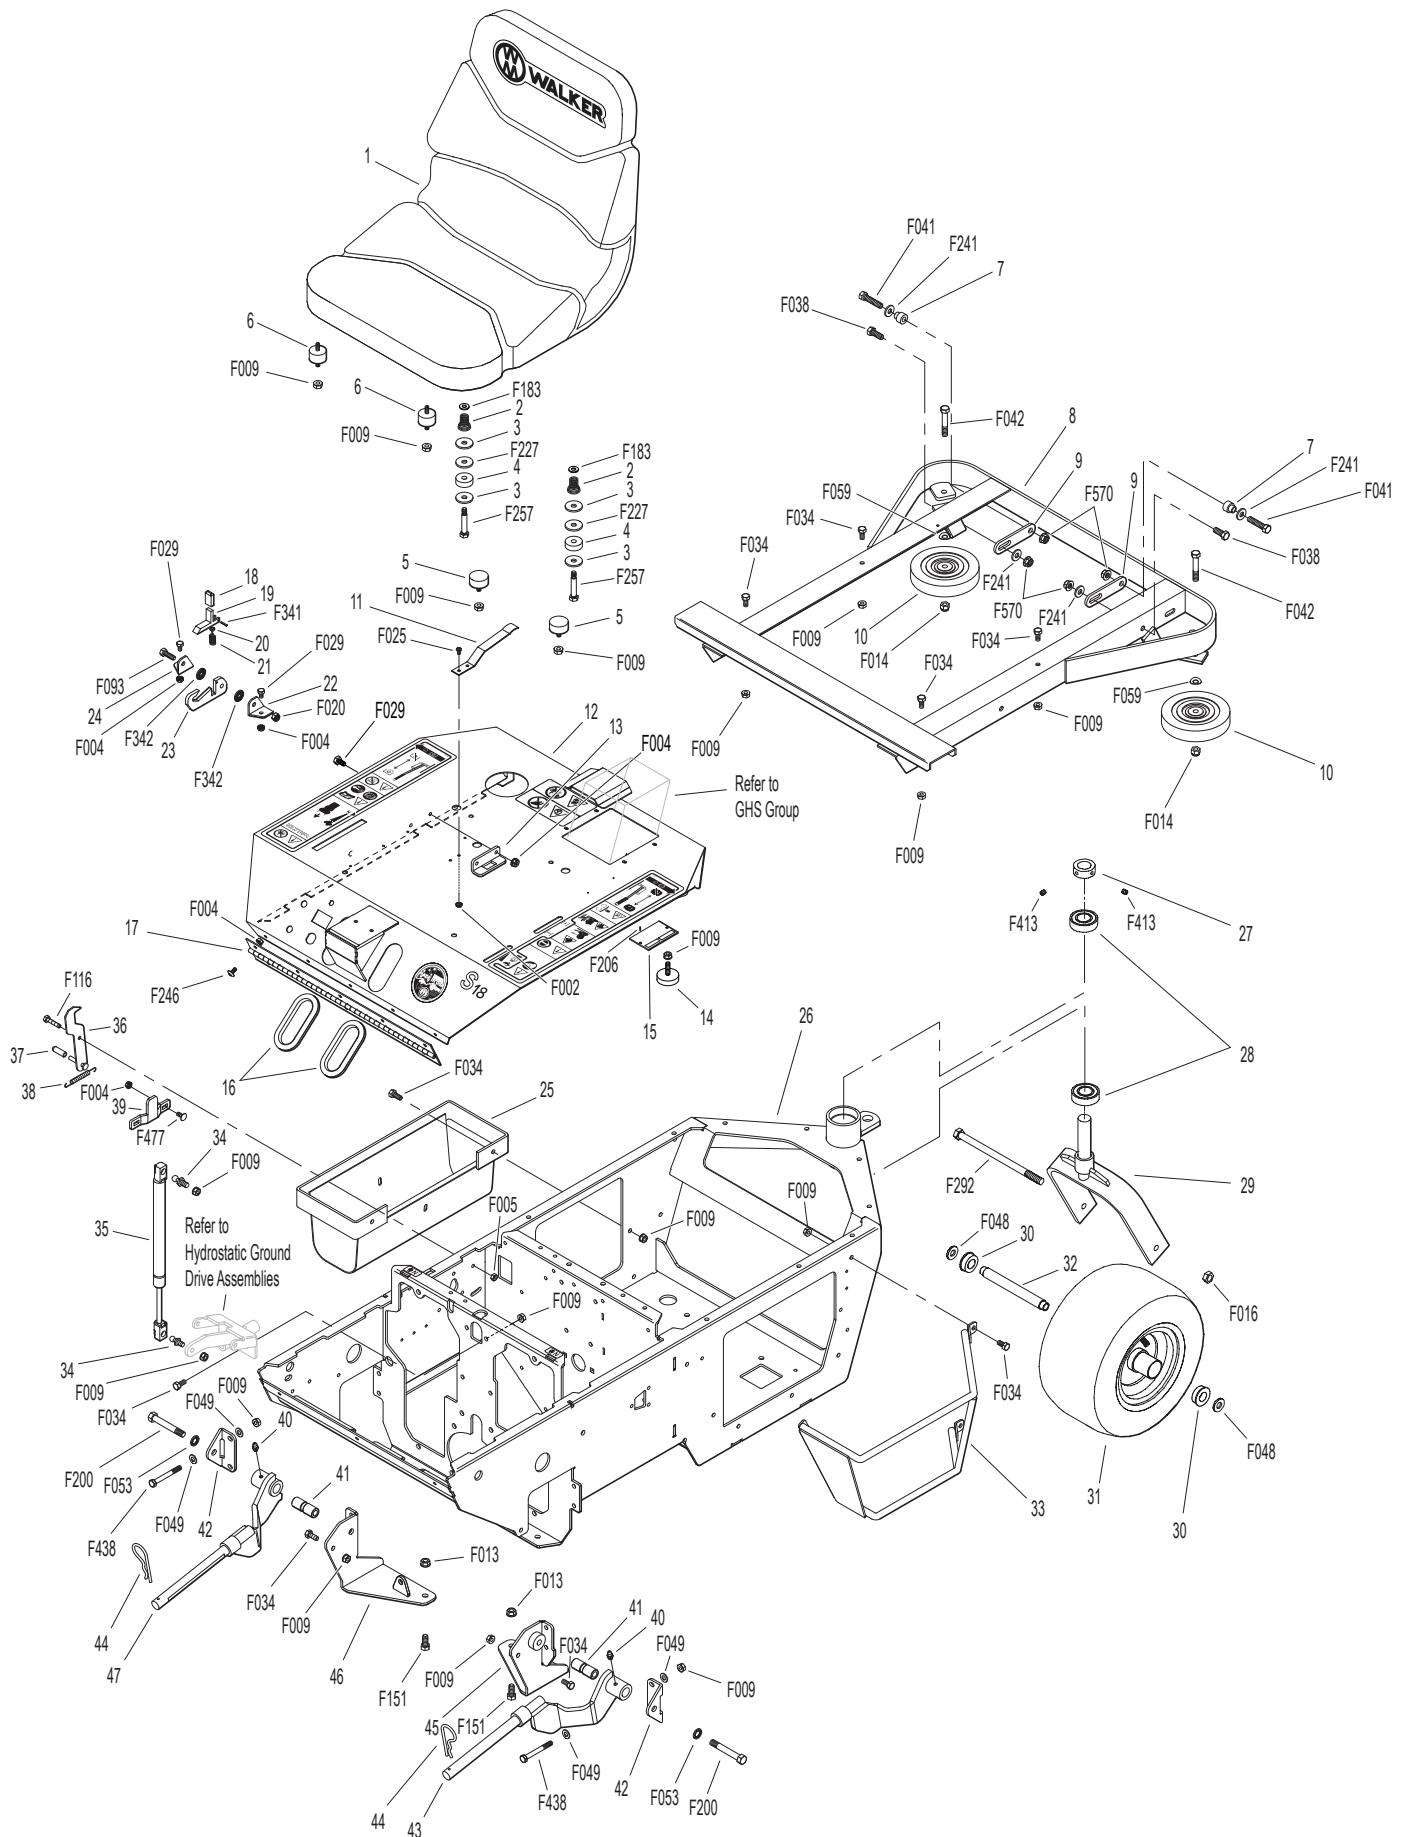

Beginning S/N 148901
Use only genuine **Walker®** replacement parts.

REAR BODY ASSEMBLY

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
-------------	-------------	-------------	--------------

Rear Body Assembly

1	6515	Catcher Support Frame	1
2	5100-13	Rear Body Tie-In	1
3	5100-11	Rear Body Panel, LH	1
4	5100-12	Rear Body Panel, RH	1
5	5977-8	Grommet (1 x 1-3/4)	1
6	8515-14	Catcher Handle Plate, RH	1
7	8515-13	Catcher Handle Plate, LH	1
8	7147	Spring Clip	2
9	7146	13mm Ball Stud	2
10	7145	Gas Spring Assembly (Includes Items # 8 & 9)	1


ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
-------------	-------------	-------------	--------------

Fasteners

F002	10-24 Keps Nut	2
F004	1/4-20 Keps Nut	5
F009	5/16-18 Whiz Locknut	12
F025	10-24 x 3/8 PPHMS	2
F031	1/4-20 x 5/8 Hex Bolt	3
F034	5/16-18 x 3/4 Hex Bolt	9
F390	1/4-20 x 7/8 Carriage Bolt	2


NOTE: Rear Bumper Assembly for GHS Models is not shown here.
Refer to **BODY / CHASSIS ASSEMBLY**, Page 4.

REAR BODY ASSEMBLY

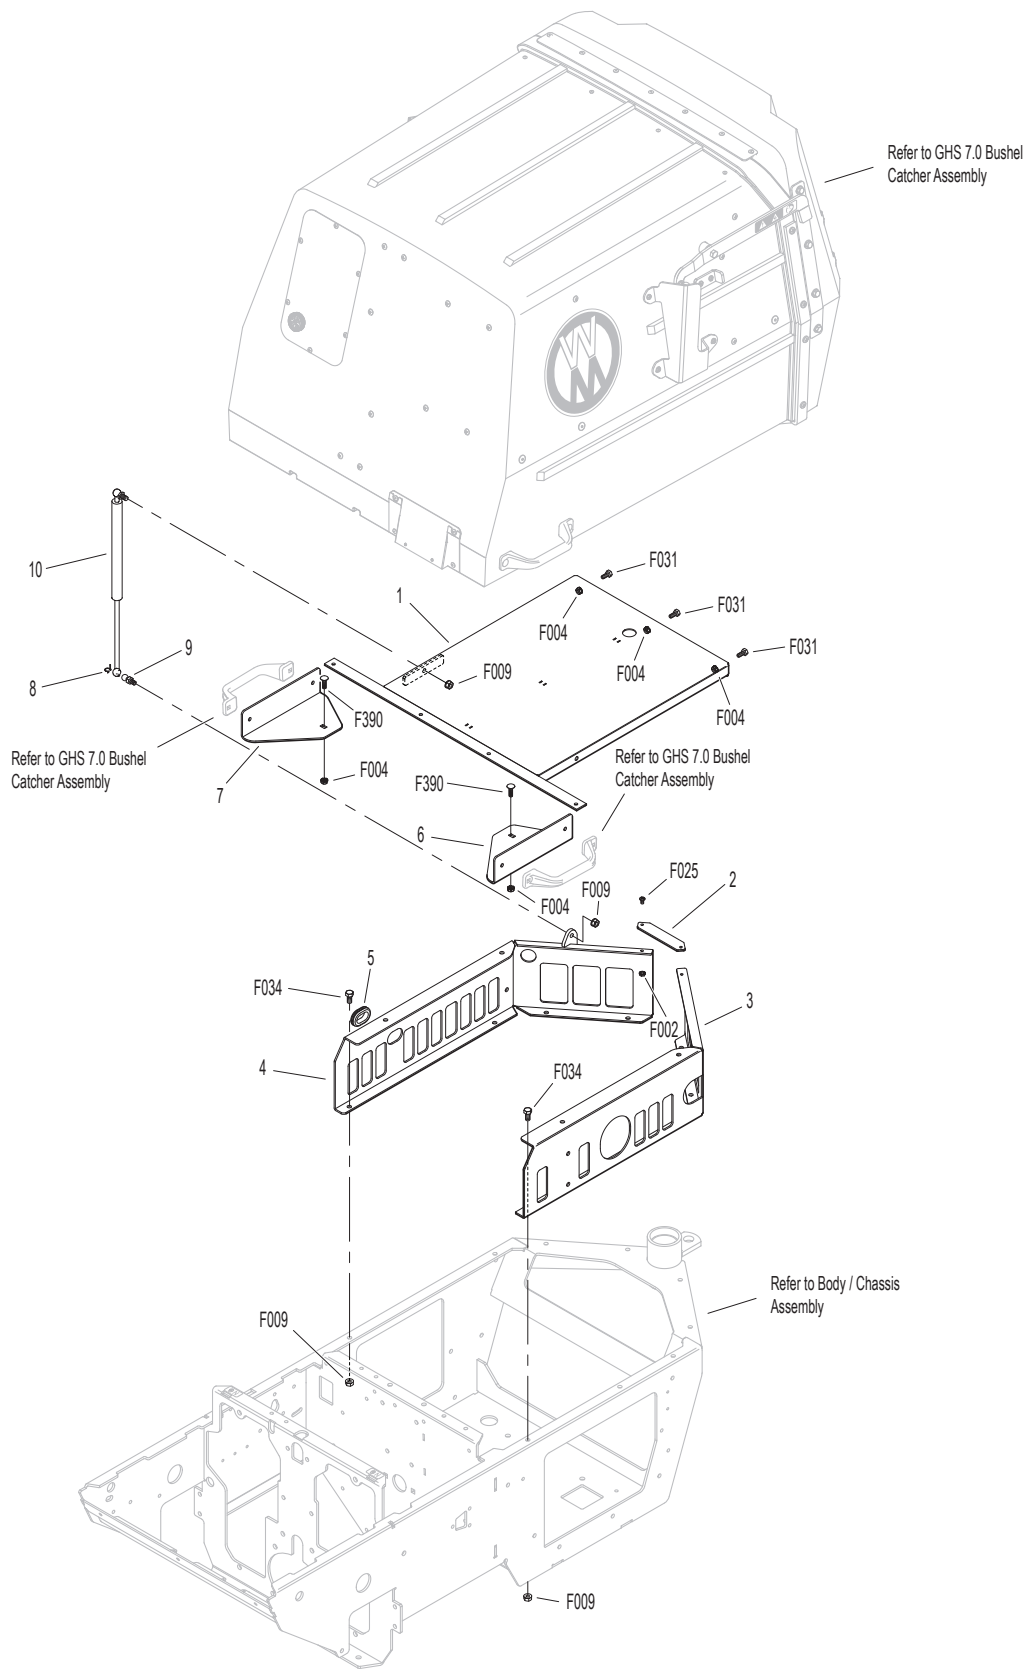

MAIN COMPONENT POWER TRANSMISSION

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
PTO Drive Assembly				Blower Brake Assembly			
1	4850	Handle Grip, Black	1	46	7523-2	Clevis Pin W/Hole (1/4 x 5/8)	1
2	6358-29	Clutch Lever	1	47	8304	Brake Band (14-1/2)	1
3	5830	Grease Fitting	2	48	4359-1	Brake Band Link, Front	2
4	4303-7	Clutch Actuator Bolt (5/16)	1	Fasteners			
5	7380	Knuckle Joint	1				
6	5830-4	Grease Fitting (90 Degree)	1	F004	1/4-20 Keps Nut		9
7	2358-6	5/16-18 x 1-3/4 Stud	2	F005	1/4-20 ESNA Nut		1
8	5103-2	Pivot Bushing (5/16 ID)	2	F009	5/16-18 Whiz Locknut		9
9	6325-5	Clutch Arm	1	F010	5/16-24 ESNA Nut		3
10	7377	Plastic Washer (1 x .438 x .025)	2	F012	3/8-16 Keps Nut		1
11	7378	Pivot Bearing (7/16 x 9/16)	1	F013	3/8-16 Whiz Locknut		3
12	5214-3	Ball Joint (5/16-24LH) (Nylon Lined)	1	F019	1/4-20 ESNA Wing Nut		2
13	6325-6	Clutch Arm Support Bracket	1	F024	5/16-24 Jam Nut		2
14	6410-3	Clutch Pull Rod 8-5/8	1	F029	1/4-20 x 1/2 Hex Bolt		1
15	5214-2	Ball Joint (5/16-24) (Nylon Lined)	1	F031	1/4-20 x 5/8 Hex Bolt		6
16	5221	Extension Spring (3/4 x 4)	1	F032	1/4-20 x 3/4 Hex Bolt		1
17	5214-4	Ball Joint (5/16-24) W/O Stud	1	F034	5/16-18 x 3/4 Hex Bolt		6
18	5226-1	Spring (3/4 x 2-1/2)	1	F035	5/16-18 x 1-1/4 Hex Bolt		1
19	6325-10	Spacer / Stop (3/8 x 7/8 x 1/2)	1	F038	3/8-16 x 1 Hex Bolt		1
20	5247-2	V-Groove Idler (4")	1	F040	3/8-16 x 1-1/2 Hex Bolt		1
21	5234-7	PTO Drive Belt (B31-K)	1	F041	3/8-16 x 1-3/4 Hex Bolt		1
22	5238-22	PTO Drive Pulley (5/B)	1	F042	3/8-16 x 2-1/4 Hex Bolt		2
23	5830-3	Grease Fitting (45 Degree)	1	F050	1/4 SAE Washer		2
24	6358-4	PTO / Clutch / Brake Actuator (Includes Items # 23 & 28)	1	F051	3/8 SAE Washer		2
25	5300-11	Guide Top	1	F054	AN960616 Washer		2
26	5300-12	Belt Guide Base	1	F060	AN960516 Washer		2
27	6358-5	PTO / Clutch / Brake Support	1	F061	1/4 Star Lock Washer		1
28	7201-3	Fiberglide Bearing	4	F063	3/8 Int. Star Lock Washer		2
29	7201-5	Inner Race (2-1/4)	1	F067	3/16 x 3/16 x 1 Key		2
30	5303-3	Belt Guide Mount	1	F069	3/32 x 1/2 Cotter Pin		1
Engine Belt Tightener Assembly				F106	3/8-16 x 5/8 Hex Bolt		2
31	6394-5	Jackshaft Washer	1	F171	5/16-18 x 3/8 Set Screw		2
32	5240-3	Compound Pulley, 4B	1	F178	1/4 x 1 Fender Washer		1
33	4230-1	Engine/PTO Belt	1	F183	.312 x .700 x .074 Washer		1
34	9051	Washer (5/16 x 1-3/8)	2	F187	1/4-20 x 1-1/2 Hex Bolt		1
35	5237-3	Engine Pulley (4.25 / AA)	1	F241	.375 x .875 x .10 Washer		1
36	4245-1	Idler Pulley (4 / Flat)	2	F350	1/4-20 LP Nylock		1
37	6325-3	Spacer Bushing (9/16)	1	F373	5/16-24 Hex Nut, LH		1
38	5221-1	Extension Spring (3/4 x 5)	1	F393	3/8-16 x 3-1/4 Hex Bolt		1
39	6345-5	Idler Arm (Includes Items # 3 & 28)	1	F477	1/4-20 x 5/8 Carriage Bolt		2
40	7201-4	Inner Race (1-1/2)	1				
41	5841	Retainer Washer (3/8 x 1-1/4)	1				
42	5270	Bearing W/Collar (1")	1				
43	6273-3	Jackshaft (1 x 12-13/16)	1				
44	6394-4	Jackshaft Bearing Housing	1				
45	6273-4	Bearing (7/8")	1				

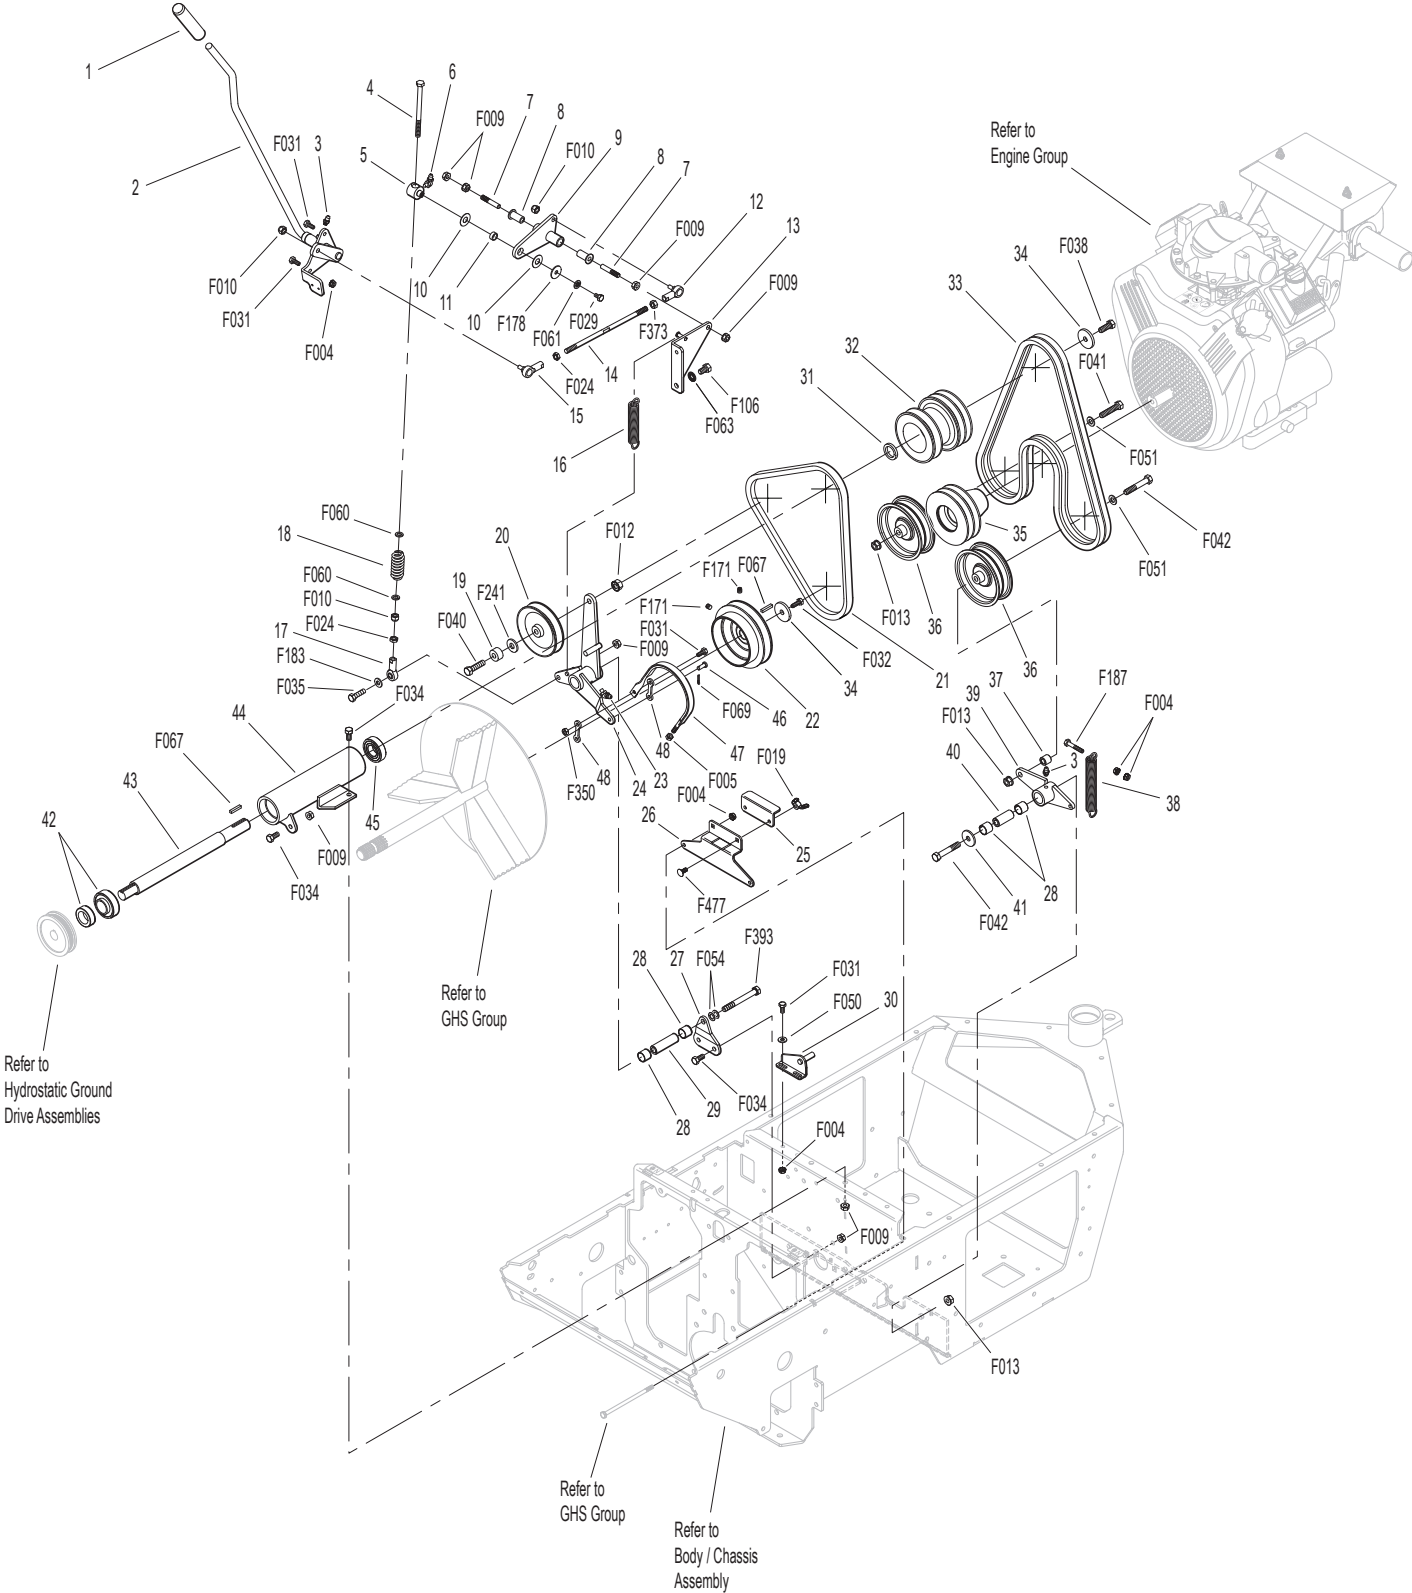


Beginning S/N 148901
Use only genuine **Walker®** replacement parts.

ENGINE GROUP

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Fuel Tank Assembly				Throttle and Choke Assemblies			
1	5082-4	2-1/4 Ratchet Fuel Cap	1	36	4108-1	Throttle/Choke Cable (56-1/2")	1
2	8055-2	Fuel Tank Gauge	1	37	5122-3	Choke Cable (58")	1
3	M246	Fuel Line, Tank to Filter (1/4 x 8-1/2")	1**	38	5108-1	Control Lever, Throttle and Choke	2
4	5879-3	Hose Clamp (1/2)	3	39	5108-5	Throttle Control Knob, Red	1
5	5083-8	Tank Tube (13")	1	40	5108-11	Friction Washer (.062)	1
6	8043-8	Roll Over Valve	1	41	5108-6	Choke Control Knob, Black	1
7	5083-1	Bushing, Rubber (Fits 5083)	1	42	7108	Control Assembly, Throttle and Choke (Includes Items # 38, 40, 43-45 & F201)	*
8	5977-7	Roll Over Grommet (.900 x 1-1/2)	1		2108-2	Throttle Control and Cable Assembly (Complete Control and Cable Assembly)	*
9	5020	Fuel Filter	1		5121-3	Choke Control and Cable Assembly (Complete Control and Cable Assembly)	*
10	5975-3	Cable Tie (#50 x 7")	3				
11	4010-5	3/8 NPT Street L	1	43	5108-8	Control Bracket	2
12	7833-2	Cable Clamp (1 x 1/4)	2	44	5108-10	Friction Washer (.125)	1
13	M246	Fuel Line, Filter to Engine (1/4 x 21")	1**	45	5108-7	Control Lock Tab	2
14	M113	Fuel Line (3/16 x 26")	1**	46	5172	Bearing, Delrin (.255 x .379 x .250)	2
15	5086-7	Hose (1/4 x 6)	1	Fasteners			
16	5020-2	Fuel Filter, In Tank	1				
17	6055-2	Fuel Tank, 4.0 Gal. Gas (Black) (Includes Items # 2, 5, 6, 8, 15 & 16)	1	F002	10-24 Keps Nut		6
Engine Assembly				F004	1/4-20 Keps Nut		4
18	5303-11	Engine Support Brace	1	F005	1/4-20 ESNA Nut		2
19	4104-9	Heat Shield, Aluminum	1	F009	5/16-18 Whiz Locknut		9
20	NS	18 HP Engine (Briggs & Stratton)	1	F025	10-24 x 3/8 PPHMS		4
21	5013-16	Exhaust Clamp (1-1/4")	1	F034	5/16-18 x 3/4 Hex Bolt		5
22	5013-13	Muffler Pipe Extension	1	F049	5/16 SAE Washer		1
23	6545-3	Engine Pulley Washer	2	F050	1/4 SAE Washer		4
24	5270-1	Pivot Bearing	1	F115	#8 SAE Washer		2
25	5237-4	Engine Pulley Bushing	1	F164	10-24 x 1/4 x 3/8 SHL Bolt		2
26	5237-5	Engine Pulley Mount Plate	1	F183	.312 x .700 x .074 Washer		4
Precleaner Assembly				F184	1/4-20 x 1/2 Hex Bolt, SS		2
27	6029	Hose Clamp (1-3/4 to 2-1/4)	2	F185	1/4 Internal Star Lock Washer, SS		2
28	6087-7	Air Intake Hose	1	F201	1/4 Belleville Spring Washer		4
29	2090-21	Air Cleaner Assembly (Includes Items # 32-35)	1	F316	5/16-18 x 1-3/4 Hex Bolt		4
30	5088-15	1/8" Female NPT Brass Cap	1	F328	M6 x 1.0 x 16 Hex Bolt		2
31	7854-1	Plastic Tip, Black (.218 ID)	1	F392	1/4-20 x 1 Set Screw, SS (Cup Point)		2
32	5088-3	Air Cleaner Band	1	F435	1/4 x 1/4 x 1-1/4 Key		1
33	2090-3	Safety Filter Insert	1	F467	2" Internal Snap Ring		1
34	2090-1	Air Cleaner Cartridge	1	F481	Washer 5/16 x 1 x .125		1
35	2088-2	Air Cleaner Cap	1	F497	M8 x 20 Hex Bolt		1
				F572	3/8-24 x 5/8 SFH Cap Screw		2
				F573	3/8-24 x 1-1/4 SFH Cap Screw		1
				* Service Part Only			
				** Required hose specifications:			
				M113 - 3/16" ID fuel/oil/vapor hose (Gates 4219-0093 or equivalent)			
				M246 - 1/4" ID low permeation (<15g/m^2/day) fuel hose (Parker 38904 or equivalent)			

ENGINE GROUP

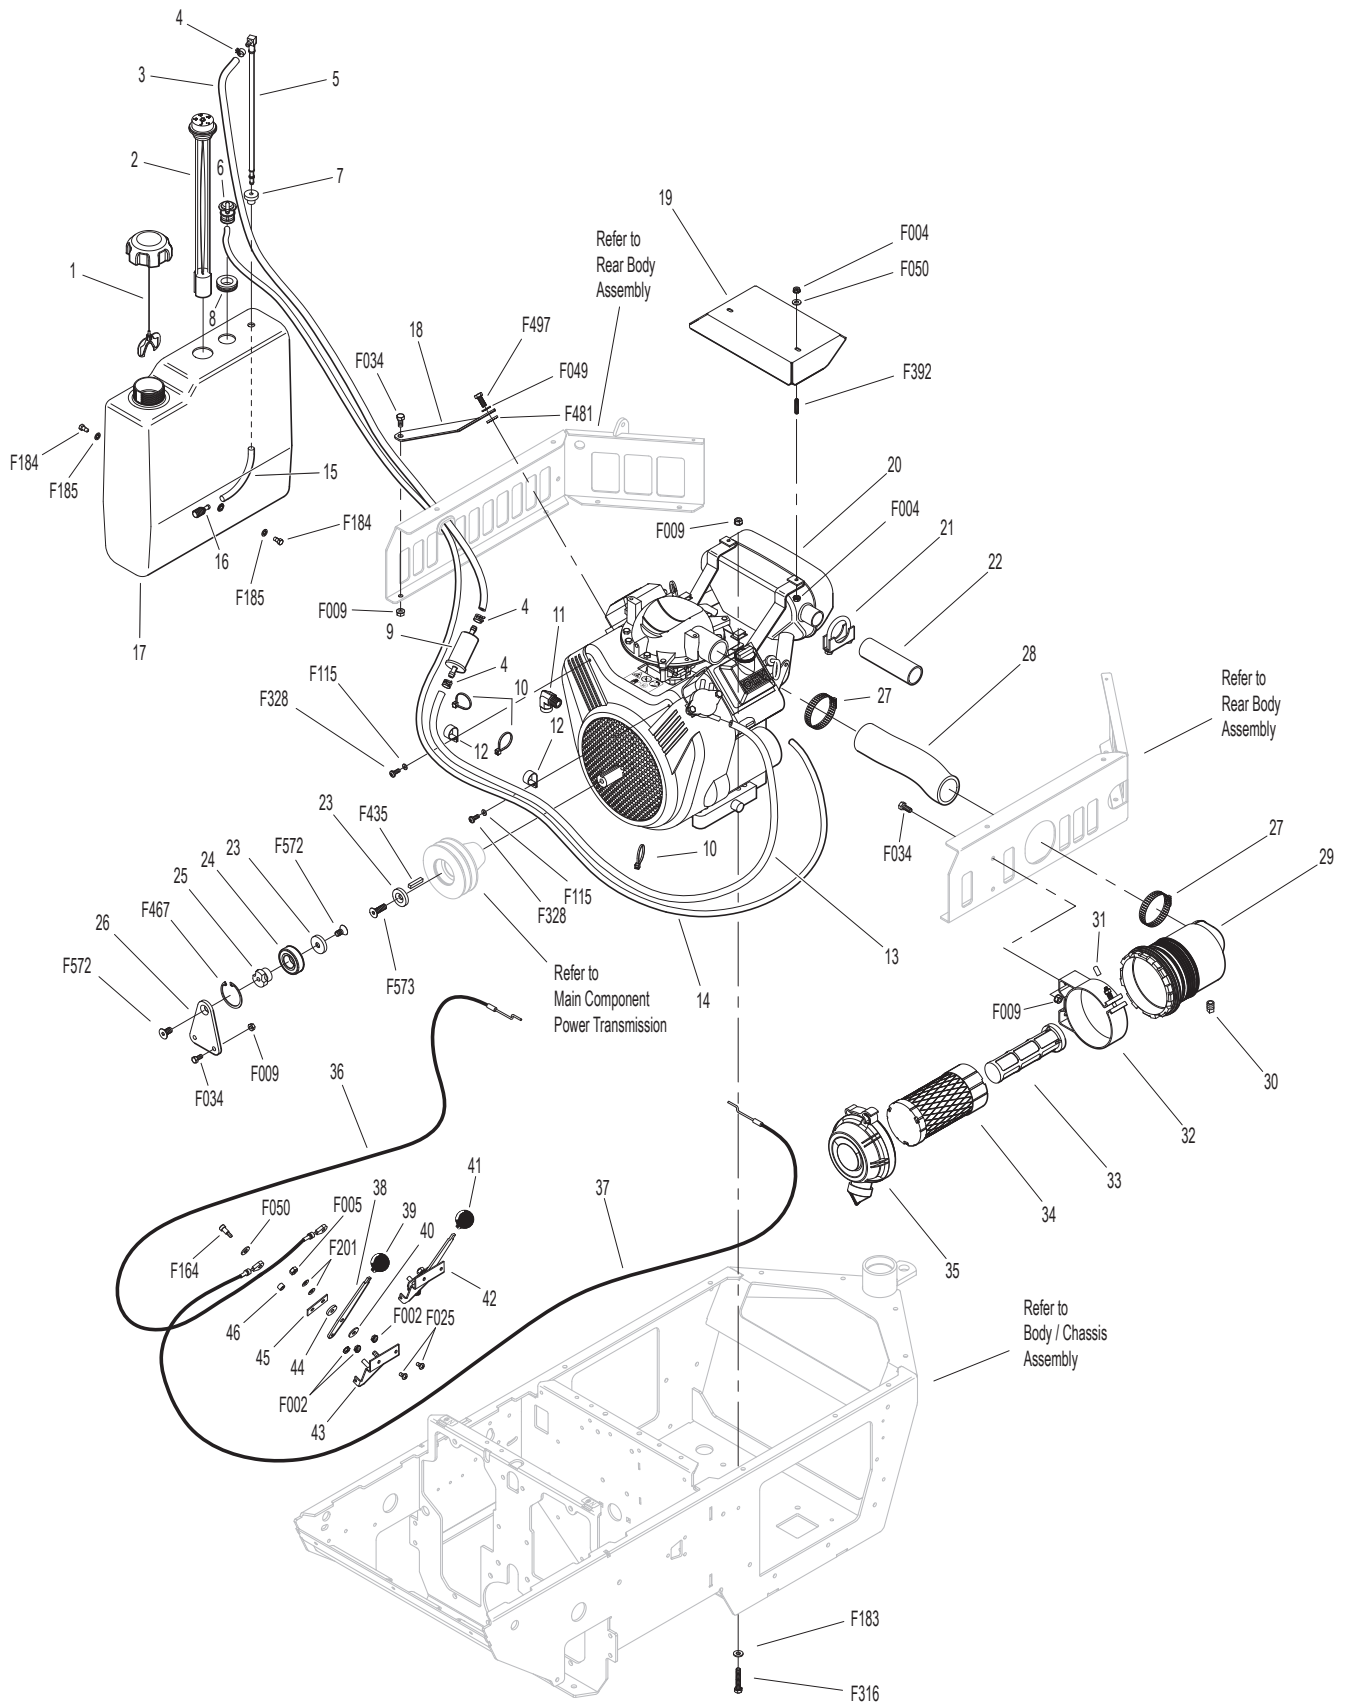

HYDROSTATIC GROUND DRIVE ASSEMBLIES


ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Transaxle Reservoir Assembly				36	8655-4	Clevis Pin (5/16 x 3/4)	5
1	2025-1	Oil Expansion Reservoir (71327)	1	37	6406-1	Brake Actuator Pull	1
2	4025-2	Reservoir Bottle Mount	1	38	2280	Clevis (3/8)	1
3	5879-8	Hose Clamp (13/16)	3	39	6406-2	Parking Brake Pull Rod	2
4	2025-8	Reservoir Bottom Caps	1	40	6406-4	Parking Brake Pull Mount, Inner	2
5	4025-3	Elbow (1/4 x 1/2)	1	41	6406-5	Parking Brake Pull Mount, Outer	2
6	5879-3	Hose Clamp (1/2)	4	42	5665-1	Compression Spring (2-1/2)	2
7	M111	Hose (1/4 x 14")	1**	43	5222	Extension Spring (1/2 x 3-1/4)	2
8	2025-17	Straight Thread Hose Fitting	2	44	2406-4	Clevis Pin (5/16 x 1-1/8)	1
9	5879-4	Hose Clamp (7/16)	2	45	6406-3	Parking Brake Actuator	1
10	M111	Hose (1/4 x 6-5/8")	1**	Wheel Assembly			
11	8043-9	1/4 x 1/4 x 1/4 Tee	1	46	5075-1	LP Wheel & Tire Assembly (18 x 8.50-10)	2
12	M111	Hose (1/4 x 1-5/8")	1**		5075-2	LP Tire (18 x 8.50-10)	*
13	7364-9	Reservoir Hose Guide	1		5075-5	LP Wheel (10 x 7)	*
14	5087-1	Hose (1/2 x 1-3/4)	1	Fasteners			
Ground Drive Assemblies					F004	1/4-20 Keps Nut	7
15	5026-21	Hydro-Gear ZT3100, RH	1		F005	1/4-20 ESNA Nut	2
16	2028-6	Lockout Arm, RH	1		F009	5/16-18 Whiz Locknut	6
17	4407-4	Bow Tie Cotter Pin	3		F013	3/8-16 Whiz Locknut	5
18	7364-3	Idler Spring Bushing	1		F015	1/2-20 Wheel Lug Nut	8
19	7364-2	Torsion Spring	1		F020	5/16-18 ESNA Nut	2
20	5025-18	Hydro Fan Washer	2		F029	1/4-20 x 1/2 Hex Bolt	1
21	5025-17	Hydro Fan	2		F031	1/4-20 x 5/8 Hex Bolt	7
22	7244-21	Hydro Pulley (4.075) Splined	2		F032	1/4-20 x 3/4 Hex Bolt	2
23	5025-19	Hydro Fan Nut	2		F034	5/16-18 x 3/4 Hex Bolt	2
24	7241-2	Transmission Drive Pulley (3-1/4MV) (Includes Items # F067 & F171)	1		F041	3/8-16 x 1-3/4 Hex Bolt	1
25	5232-1	Ground Drive Belt (Micro V)	1		F042	3/8-16 x 2-1/4 Hex Bolt	2
26	5245-1	Idler Pulley	1		F050	1/4 SAE Washer	2
27	6325-2	Spacer Bushing (5/16)	1		F067	3/16 x 3/16 x 1 Key	1
28	6345-4	Idler Arm	1		F069	3/32 x 1/2 Cotter Pin	5
29	2028-5	Lockout Arm, LH	1		F129	10-24 x 1/2 PTHMS	6
30	5025-21	Hydro-Gear ZT3100, LH	1		F171	5/16-18 x 3/8 Set Screw	2
31	9430-1	Spacer Tube	4		F182	1/4 x 5/8 x 1/8 Washer	2
32	6215	Shock Mount / Body Lift Arm (Includes Item # 22)	1		F183	.312 x .700 x .074 Washer	2
33	5830	Grease Fitting	2		F336	3/8-16 Jam Nut	1
Parking Brake Assembly					F388	3/8-16 x 2-1/2 Hex Bolt	2
34	7406-1	Handle Grip, Red	1		F489	Washer 1/4 x 7/8 x .090	1
35	6406-6	Parking Brake Lever (Includes Item # 33)	1		F529	Washer 1.0 OD x .515 ID x 1/8	2
					F533	Socket Cap Bolt 5/16-18 x 3-1/2	4

* Service Part Only

** Required hose specifications:

M111 - 1/4" ID fuel/oil/vapor hose (Gates 4219-0103 or equivalent)


HYDROSTATIC GROUND DRIVE ASSEMBLIES

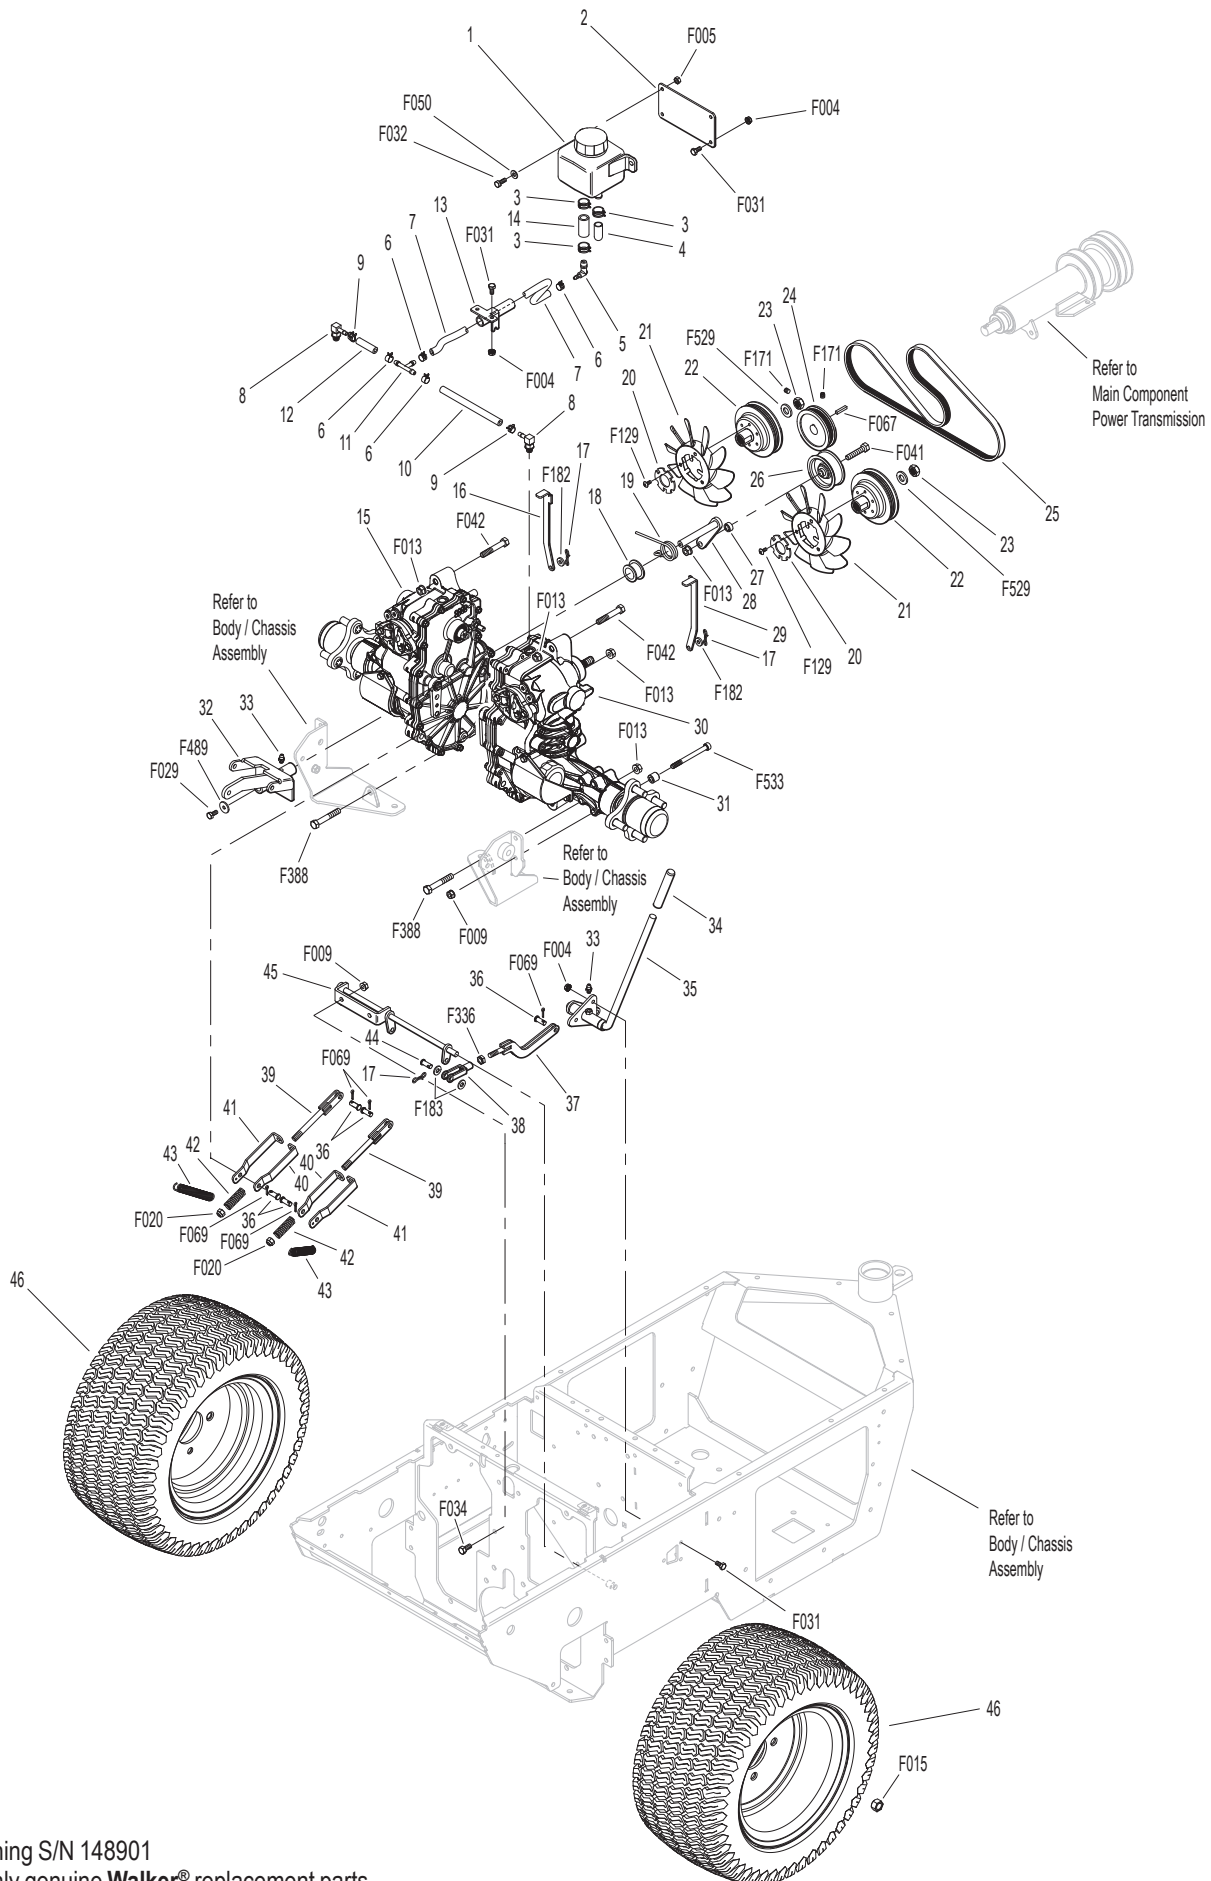

STEERING CONTROL ASSEMBLIES


ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Steering Lever & FSC Assemblies				Fasteners			
1	5862	FSC Knob	1	F004	1/4-20 Keps Nut		2
2	4170	FSC Lever Assembly (Includes Item # 4)	*	F005	1/4-20 ESNA Nut		2
3	2170-1	Step Washer	1	F009	5/16-18 Whiz Locknut		8
4	5830	Grease Fitting	1	F010	5/16-24 ESNA Nut		2
5	5214-5	Ball Joint (5/16-24/LH) W/O Stud	1	F024	5/16-24 Jam Nut		3
6	4173-2	Control Rod (4-15/16)	1	F035	5/16-18 x 1-1/4 Hex Bolt		1
7	5214-4	Ball Joint (5/16-24) W/O Stud	3	F044	5/16-24 x 3/4 Hex Bolt		2
8	4219	Extension Spring (3/4 x 6-1/2)	1	F059	3/8 Wave Spring Washer		1
9	4451-9	FSC Friction Actuator	1	F093	5/16-18 x 1 Hex Bolt		4
10	8201-3	Fiberglide Bearing	4	F146	1/4-20 Jam Nut		2
11	6451-2	Speed Control Actuator, RH (Includes Items # 10 & 13)	1	F167	5/16-18 Hex Nut		1
12	4452-6	Steering Pivot (1/4-20 x 1-5/8)	2	F183	.312 x .700 x .074 Washer		8
13	5830-3	Grease Fitting (45 Degree)	2	F188	1/4-20 Self-Locking Nut		4
14	5146	10mm Ball Stud	4	F192	3/8-24 Self-Locking Nut		1
15	4199-2	Steering Lever Dampener Assembly	2	F198	.250 x .625 x .040 Washer, SS		2
16	5463-6	Washer 5/16 x 3/4 x .250	2	F211	1/4-20 x 7/8 Hex Bolt		1
17	5463-5	Steering Arm Pivot Bushing (SS)	2	F226	5/16-18 x 7/8 Hex Bolt		2
18	7201-2	Fiberglide Bearing (1/2")	2	F312	3/8 x 3/8 Shoulder Bolt		1
19	5463-4	Steering Lever Actuator	2	F345	1/4-20 x .770 Knurled Bolt		4
20	5665-1	Compression Spring (2-1/2)	2	F373	5/16-24 Hex Nut, LH		1
21	4213-2	Control Rod (6-3/4)	2	F385	1/4 x 1-1/4 Roll Pin		1
22	2212-3	Seal Retainer	2	F386	5/16-18 x 1-1/2 x 3/8 Shoulder Bolt		1
23	2212	Transmission Control Arm Stop	2	F391	1/4-20 x 1/2 Set Screw, SS		2
24	6212-2	Transmission Control Arm, RH	1	F407	Belleville Washer 3/8 x 1.187, SS		1
25	6212-3	Transmission Control Arm, LH	1	F427	5/16-18 Flange Nut		1
26	6451-1	Speed Control Actuator, LH (Includes Items # 10 & 13)	1	* Service Part Only			
27	4451-1	Steering Pivot Shaft W/Stop	1				
28	9704-3	Pivot Rod Bushing / Plastic	2				
29	4142-2	FSC Friction Washer (1-1/2 x 1-1/32 x 1/16)	1				
30	5141	FSC Friction Washer (1-1/2 x 3/8 x 1/16)	1				
31	4142-1	FSC Cam	1				
32	5222	Extension Spring (1/2 x 3-1/4)	2				
33	5450	D-Clip	2				
34	6452-1	Steering Lever Tube W/Tab	2				
35	5453-10	Steering Lever Handle / Adjustable (Includes Items # 36 & F345)	2				
36	5850-2	Handle Grip, Foam (5-1/2)	2				

STEERING CONTROL ASSEMBLIES

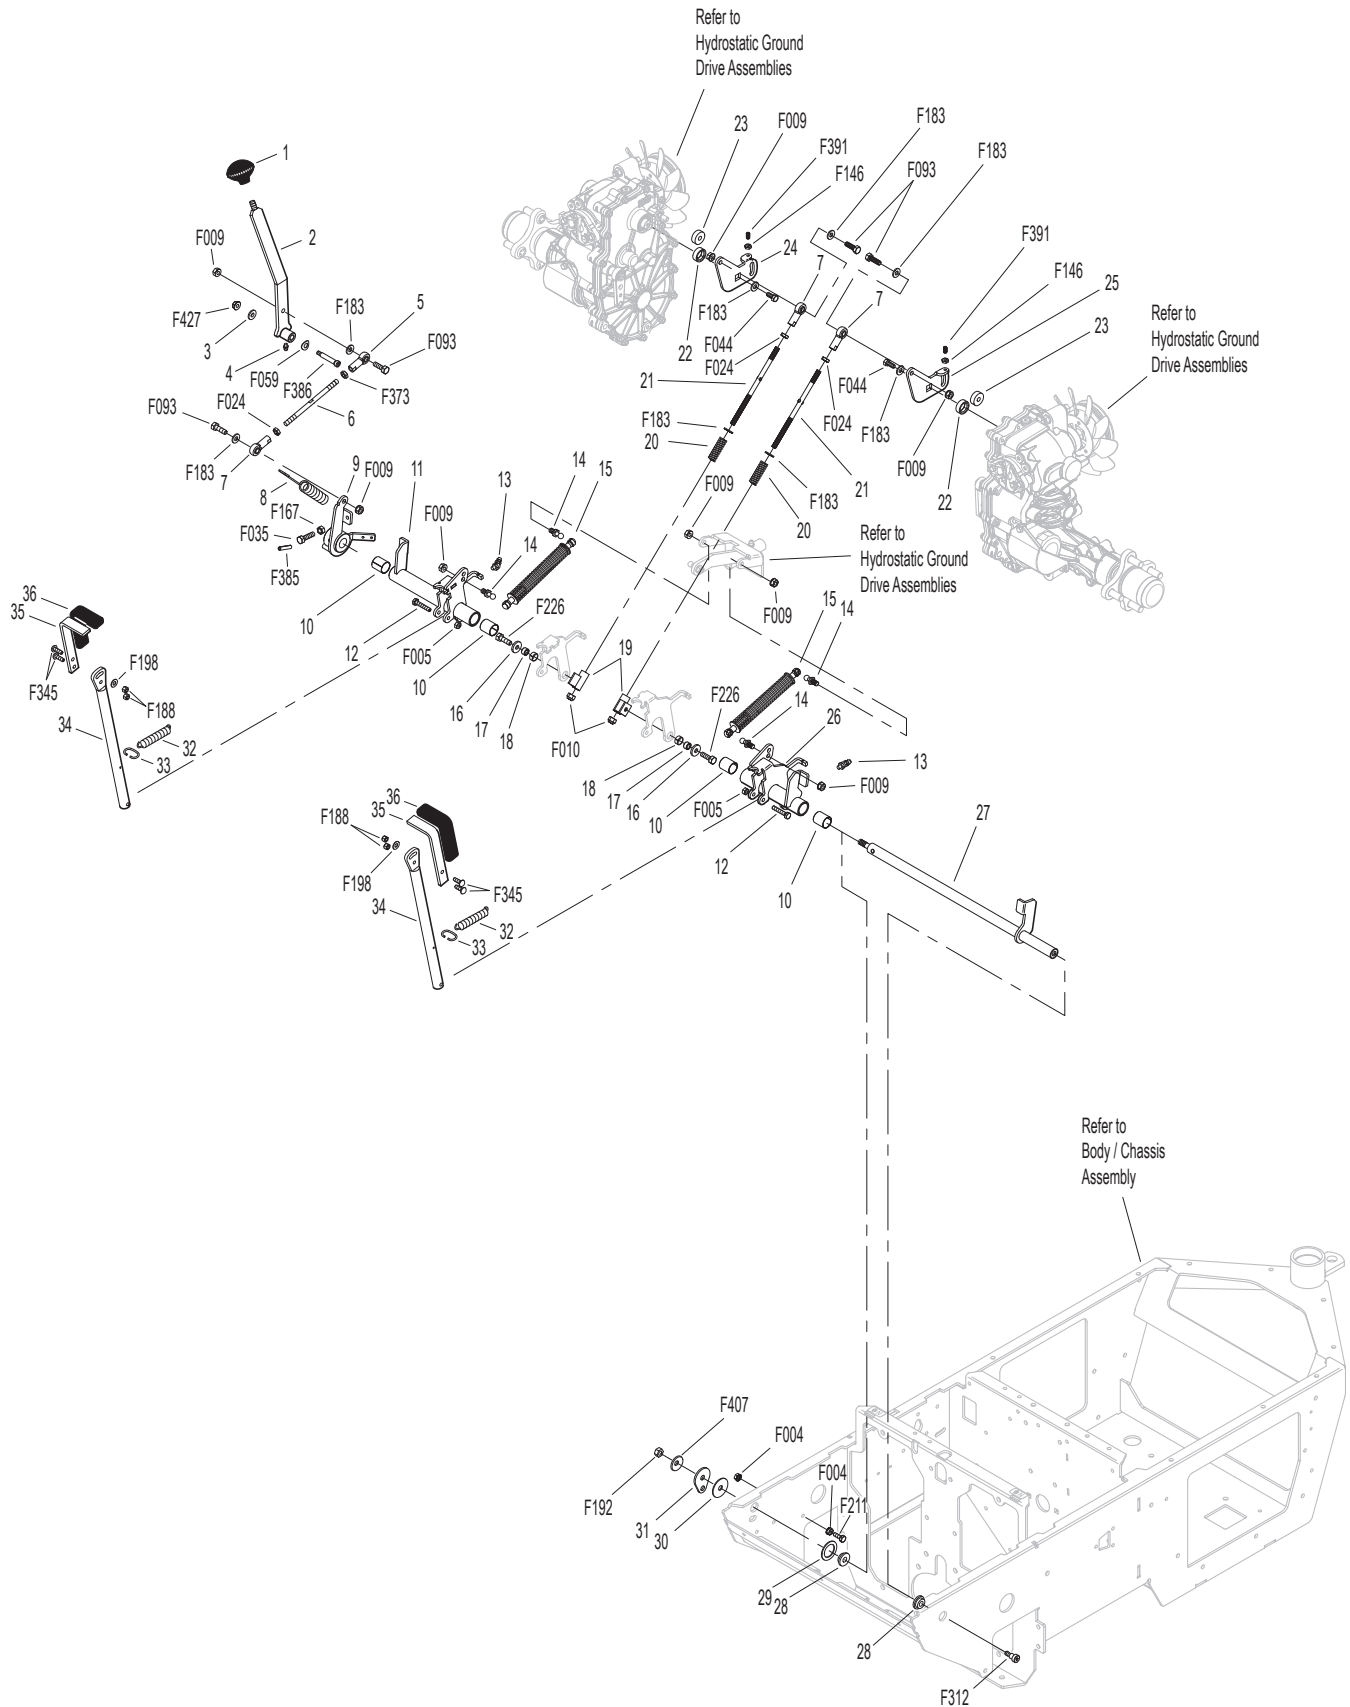

GHS GROUP


ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Delivery Chute Assembly				Fasteners			
1	5515-4	Elbow Delivery Spout	1	F002	10-24 Keps Nut		6
2	5592-24	Backing Plate, Grass-Pak® Switch	1	F004	1/4-20 Keps Nut		14
3	5592-23	Grass-Pak® Housing Spacer	1	F009	5/16-18 Whiz Locknut		2
4	5578-1	Rear Clip Notched, Chute Mount	1	F013	3/8-16 Whiz Locknut		2
5	5577	Side Clip, Chute Mount	2	F025	10-24 x 3/8 PPHMS		4
6	6530-6	Body Chute	1	F031	1/4-20 x 5/8 Hex Bolt		2
7	7511-5	Outside Chute Cover Lip	1	F032	1/4-20 x 3/4 Hex Bolt		4
8	7511-4	Inside Chute Cover Lip	1	F039	3/8-16 x 1-1/4 Hex Bolt		2
9	7511-2	7.0 Delivery Chute W/Clips (Includes Items # 4, 5, F079 & F411)	1	F050	1/4 SAE Washer		2
Blower Assembly				F079	A/A66D Aluminum Pop Rivet		8
10	6543-5	Blower Scroll	1	F411	3/16 Bulbex Rivet		6
11	6349-2	Flanged Bearing (3/4")	1	F420	5/16-18 x 1-1/4 Carriage Bolt		2
12	6349-1	Sleeve .3150 x .375 x 3/8	2	F531	1/4-20 x 5 Hex Bolt		11
13	4349-14	Flanged Bearing (1") Machine Flat	1	F532	1/4-20 x 5-1/2 Hex Bolt		1
14	5526-9	Receiver Cone	1	F577	10-24 x 5/8 Carriage Bolt		2
15	7275-3	U-Joint Tube, Splined	1	* The Quick Coupler Installation Tool is used to assist the installation of the Quick Coupler Tube and PTO Shaft connection by holding the disconnect ring in the retracted position when joined to the tractor spline shaft on the PTO gearbox.			
16	7275-9	Quick Coupler Installation Tool	*				
17	6545-7	Blower Wheel	1	NOTE: Refer to ELECTRICAL CONNECTORS , Page 26, for identification of all Electrical Wiring Service Parts.			
18	6543-8	Blower Faceplate	1				
19	5794-5	Fixed Chute	1				

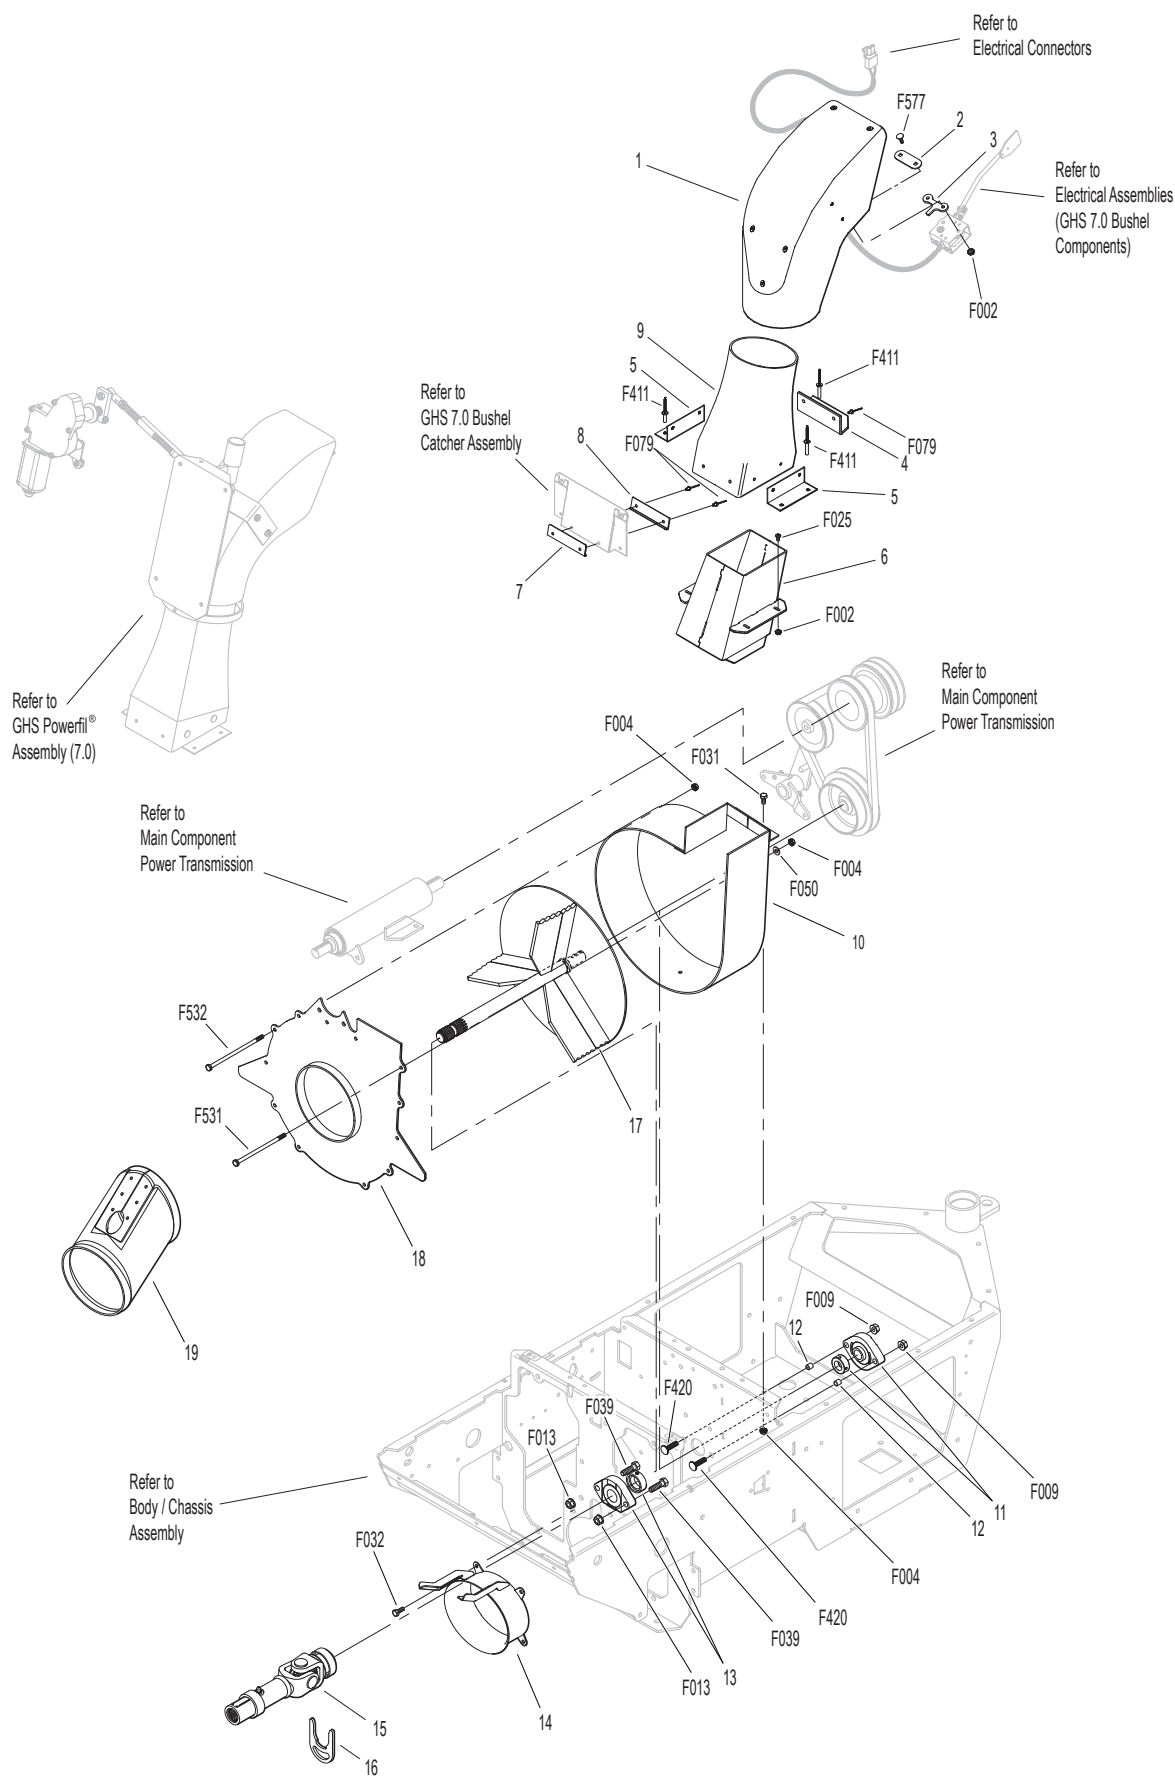

GHS POWERFIL® ASSEMBLY (7.0)

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
7.0 GHS Powerfil® Assembly				Fasteners			
1	5552	Ball Joint (1/4-28)	2		F002	10-24 Keps Nut	10
2	5553-3	Bushing, Powerfil® Actuator	4		F003	1/4-28 Hex Nut	3
3	5553-1	Compression Spring (1/2 x 2)	2		F026	10-24 x 1/2 PPHMS	1
4	5558-2	Powerfil® Actuator Rod	1		F037	10-24 x 5/8 PTH Screw	2
	5549	Actuator Rod Assembly (Includes Items # 1-5 & F003)	*		F054	AN960616 Washer	1
5	5558-1	Powerfil® Push Rod	1		F085	3/16 Rivet Backup Washer	1
6	5551-3	Bearing Cap, Powerfil®	1		F101	10-24 x 1-1/4 SHC Screw	1
7	5551-1	Pivot Bearing (#S3PP)	2		F109	1/8 x 5/8 Roll Pin	1
8	5518-2	Pivot, Delivery Spout	1		F129	10-24 x 1/2 PTHMS	6
9	5517-2	Pivot Mount	1		F261	AN960616L Washer	1
10	5519-5	Actuator Motor (12V) (Includes Items # 11 & 12)	1		F287	1/4-28 Keps Nut	1
11	5519-2	Motor Mount Washer	*	* Service Part Only			
12	5519-3	Motor Mount Nut (5/8-24)	*				
13	5554	Actuator Arm	1				


GHS POWERFIL® ASSEMBLY (7.0)

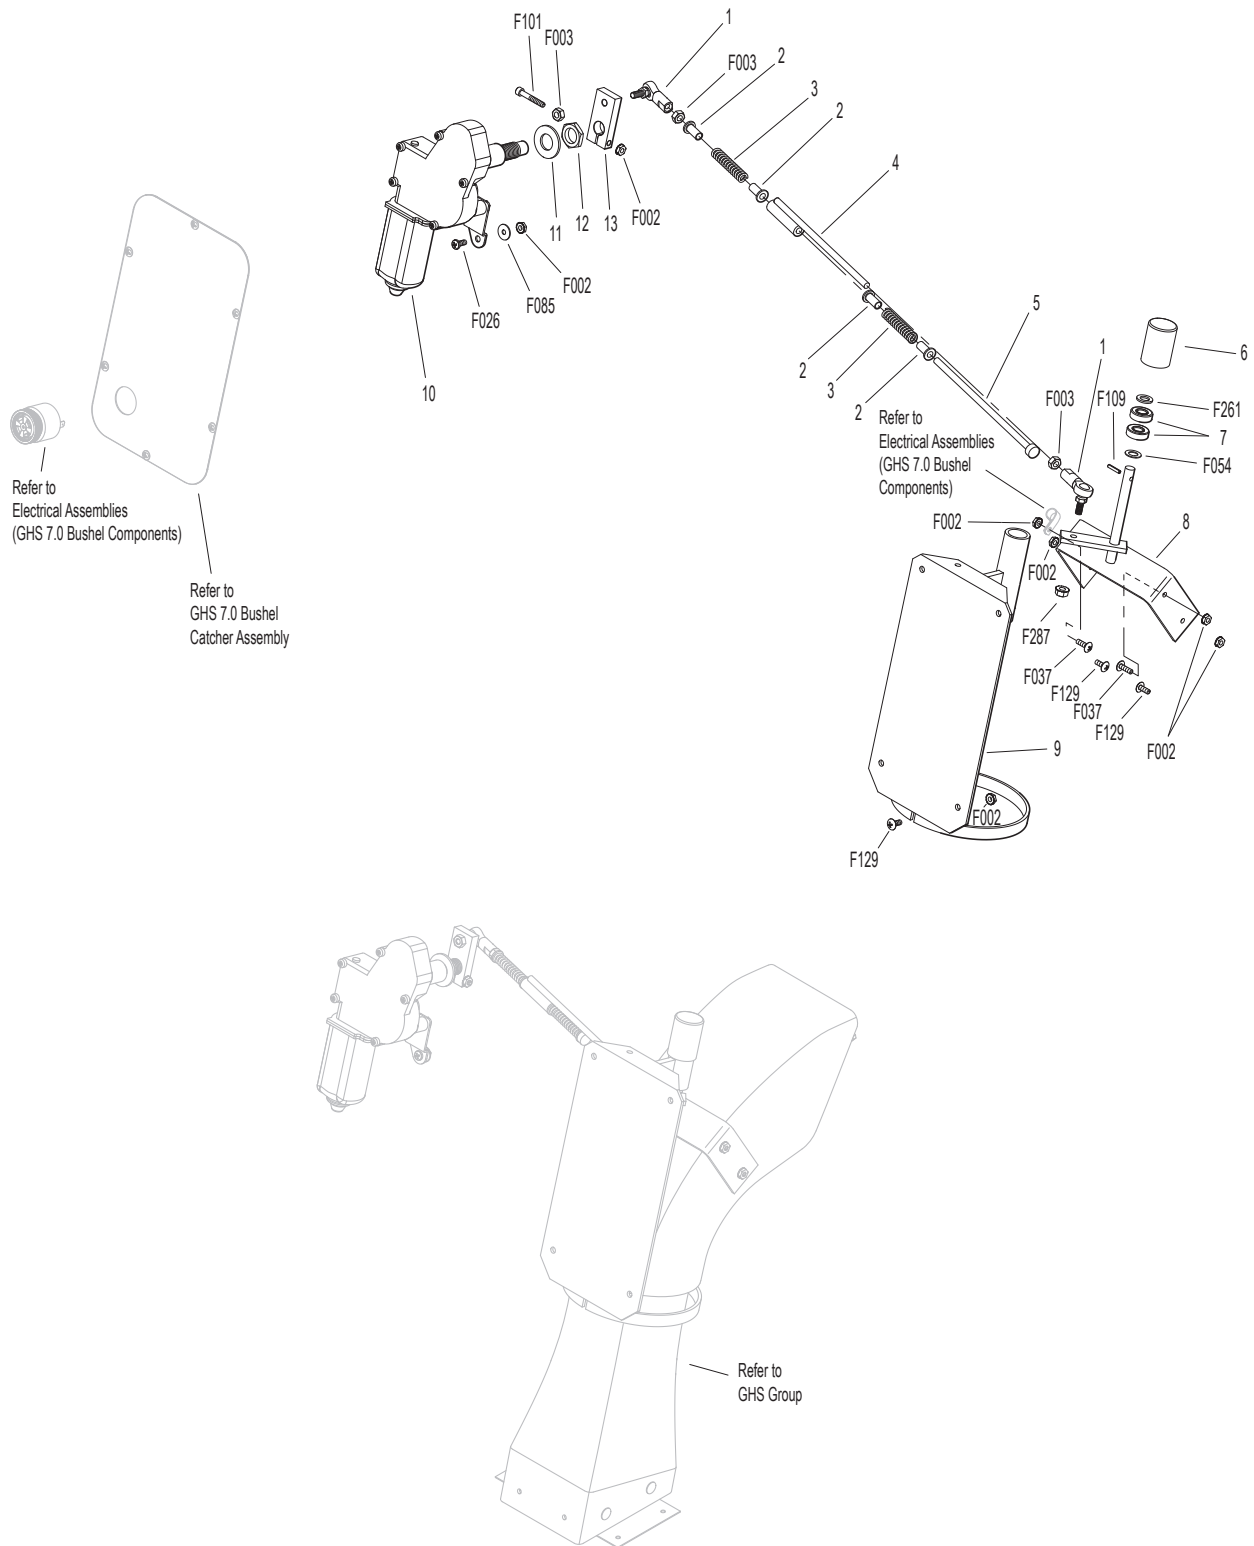

GHS 7.0 BUSHEL CATCHER ASSEMBLY

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Upper Baffle Screen Assembly (Removable)				39	7510-3	7.0 Bushel Catcher Box	1
1	7512-6	Removable Screen (3/16 Hole) (Includes Items # 2, F025 & F190)	1**		7502-6	7.0 Catcher W/Powerfil® (Includes Door)	*
2	7506	Knob / Threaded Insert (10-24)	2	40	7607-8	Powerfil® Cover Plate	1
3	7509-2	Channel Top	2	41	7608-4	Hinge Plate, RH	1
4	8606-2	Channel Bottom	2	42	8155-8	7.0 Gas Spring Cover, RH	1
5	6856-1	Edge Molding (21-3/4")	1	43	7607-14	Catcher Door Arm, RH	1
6	6507	Screen Seal (23-1/4")	1	44	7584-3	Reinforcing Strap	1
7	7505	Mustache Spring	2	45	5801-3	Decal Plate, Round (Set of 2)	1
8	7509-6	C-Channel With Spring (Includes Items # 7 & F340)	1	46	7608-5	Door Arm Stop	2
7.0 Exhaust Deflector Door Assembly				5598-2 Optional Dump Bag (Not Shown)			
9	7607-3	Upper Door Seal	1	May be ordered as an option. Contact your Walker dealer.			
10	7510-4	7.0 Catcher Box Door (Includes Frame) (Includes Items # 9, 11, 12, 14, F085, F330 & F411)	1	Fasteners			
11	5583	Handle	1	F002	10-24 Keps Nut		25
12	7607-6	Lower Door Stiffener (7.0)	1	F004	1/4-20 Keps Nut		15
13	8607-8	Door Guide	1	F009	5/16-18 Whiz Locknut		2
14	7607-5	Upper Door Stiffener	1	F020	5/16-18 ESNA Nut		2
GHS 7.0 Bushel Catcher Assembly				F025	10-24 x 3/8 PPHMS		6
15	7503-7	Center Strap (7.0)	1	F027	10-24 x 5/8 PPHMS		10
16	7503-6	Upper Frame Doubler (7.0)	2	F029	1/4-20 x 1/2 Hex Bolt		4
17	7503-5	Lower Frame Doubler (7.0)	2	F049	5/16 SAE Washer		4
18	7503-4	Outside Box Strap (7.0)	2	F050	1/4 SAE Washer		6
19	8608-11	Catcher Door Finger	1	F079	A/A66D Aluminum Pop Rivet		3
20	8608-4	Center Frame Doubler	1	F085	3/16 Rivet Backup Washer		4
21	7503-11	Catcher Mount	1	F094	8-32 x 1/2 PTHMS		6
22	7610-4	Catcher Dump Flap Spacer (7.0)	1	F129	10-24 x 1/2 PTHMS		14
23	7610-8	Catcher Dump Flap With Plate	1	F178	1/4 x 1 Fender Washer		4
24	8610-3	Backing Plate / Dump Flap	1	F190	#10 Internal Star Lock Washer		2
25	7620-3	Pivot Bushing (1/2 x 9/16)	4	F196	1/4-20 x 1 PPHMS, SS		4
26	7607-7	Bushing	2	F230	1/4-20 x 1-1/4 PPHMS, SS		4
27	7608-3	Hinge Plate, LH	1	F242	1/4-20 x 7/8 PPHMS, SS		10
28	7607-15	Catcher Door Arm, LH	1	F275	5/16-18 x 2 Hex Bolt		2
29	8155-7	7.0 Gas Spring Cover, LH	1	F330	3/16D x 21/32L Rivet, SS		4
30	5147	Spring Clip	4	F340	Rivet, Aluminum		4
31	5155-5	Gas Spring	2	F351	Aluminum Pop Rivet		6
32	5155-13	3/4 Ball Stud	2	F360	1/4-20 x 3/8 Hex Bolt		2
33	5523-6	Gas Spring Plate	2	F390	1/4-20 x 7/8 Carriage Bolt		4
34	5155-12	5/16 Ball Stud	2	F411	3/16 Bulbex Rivet		32
35	5155-15	Box Support, Gas Spring	2	F477	1/4-20 x 5/8 Carriage Bolt		4
36	7532-1	Handle, Catcher Lift	2	F504	1/4-20 Whiz Locknut		12
37	7511-6	Chute Cover	1	F524	3/16 x 3/8 Aluminum Rivet, Black		6
38	7557-1	7.0. Wire Harness Channel	1	F540	1/4-20 x 1-3/4 PPHMS, SS		1
				* Service Part Only			
				** This screen can be replaced by P/N 7512-7 Removable Screen (3/4" holes) for improved air flow performance in wet conditions.			

GHS 7.0 BUSHEL CATCHER ASSEMBLY


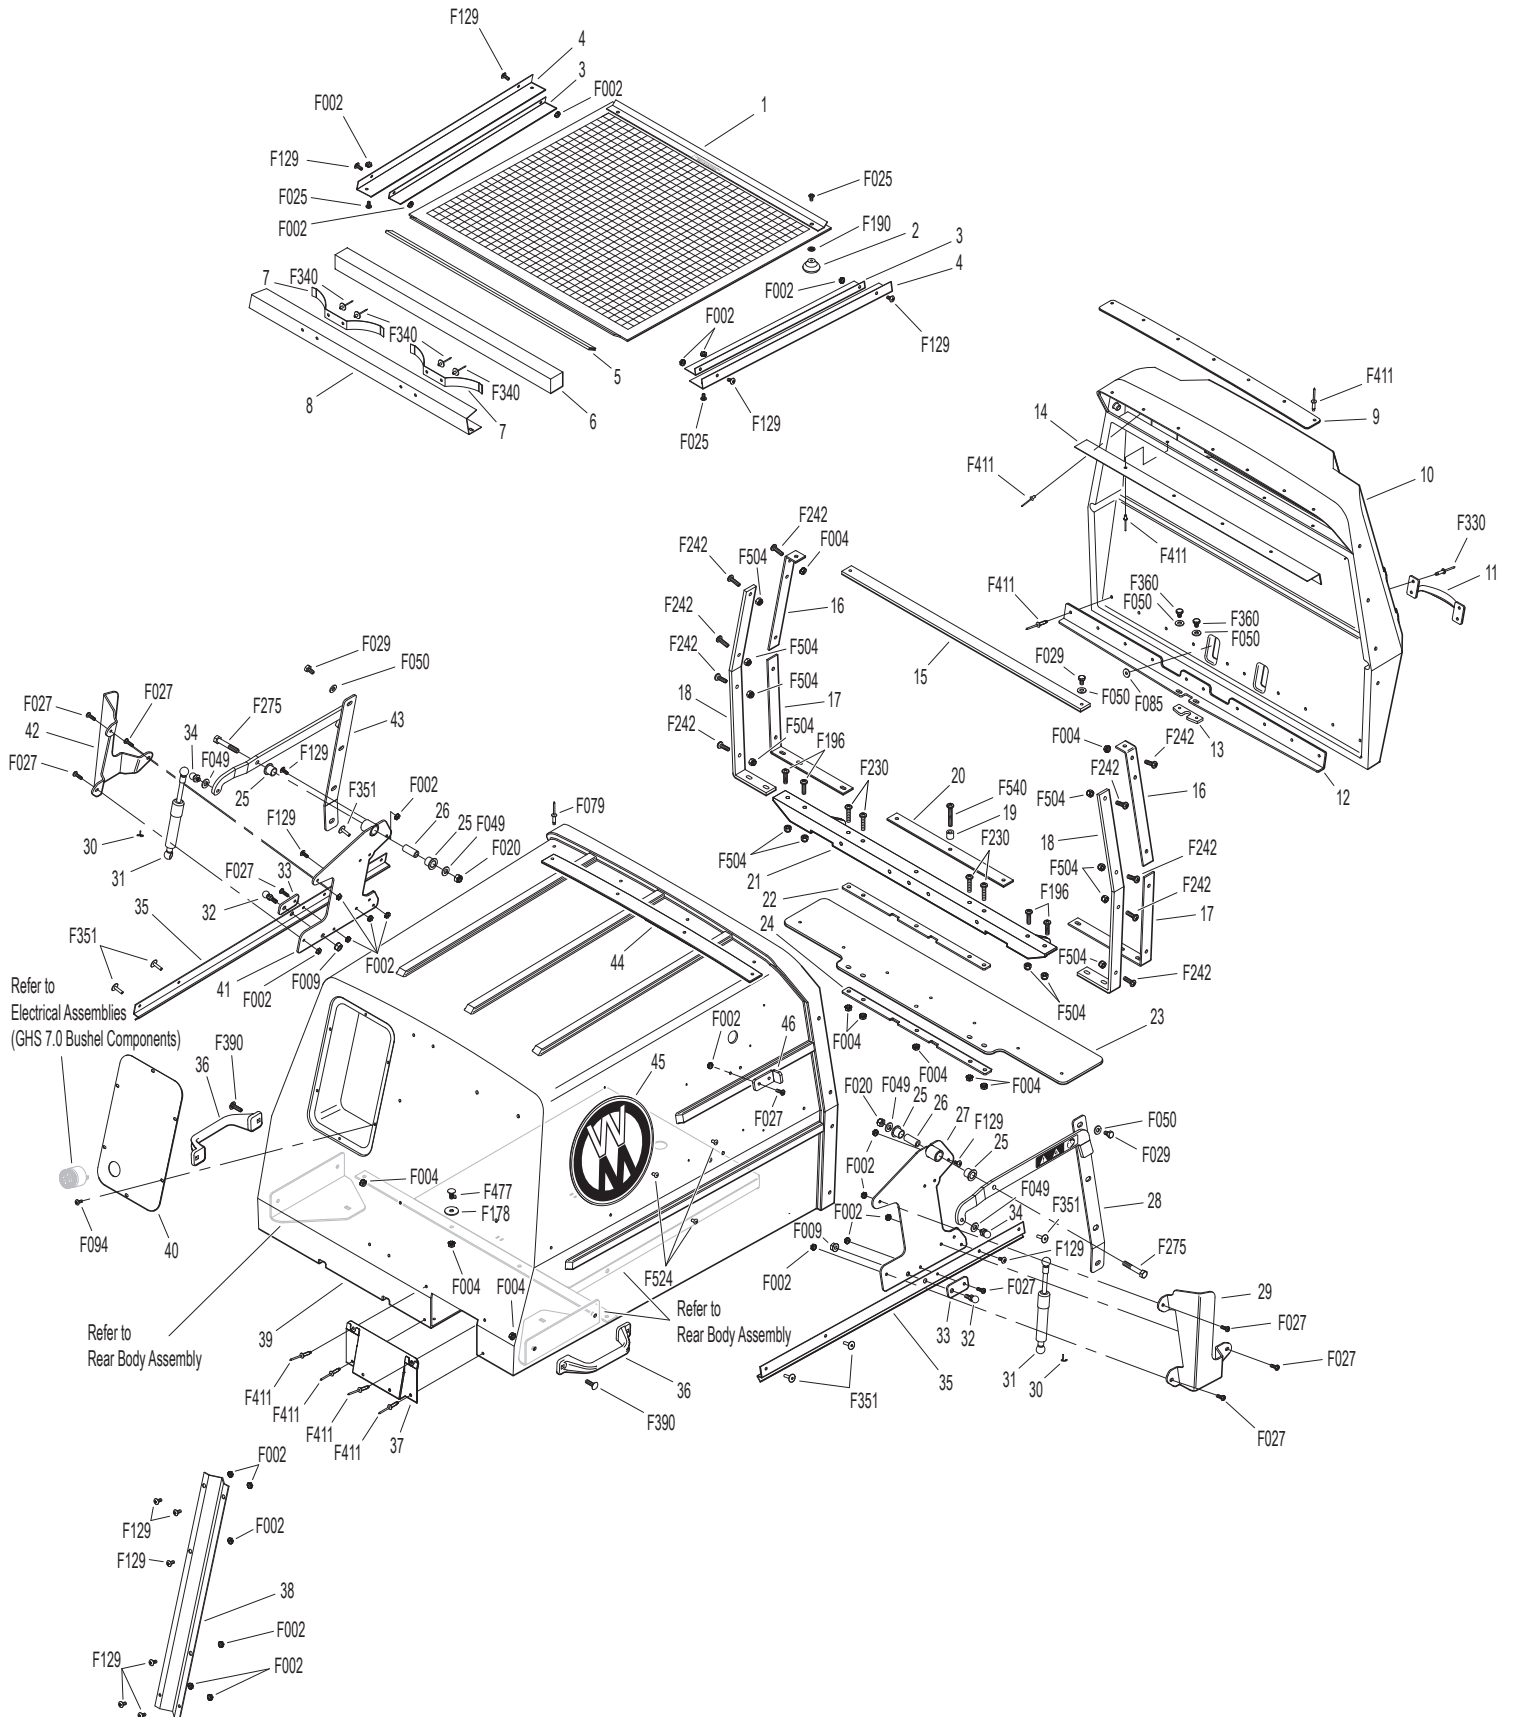


Beginning S/N 148901
Use only genuine **Walker®** replacement parts.


ELECTRICAL ASSEMBLY

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Electrical Assembly				Fasteners			
1	7834-3	Wire Saddle (3 Wires)	4	F002	10-24 Keps Nut		8
2	5942-11	Delta Hex Nut	1	F004	1/4-20 Keps Nut		8
3	5942-9	Safety Switch (NO), Delta Threaded	1	F013	3/8-16 Whiz Locknut		2
4	5832	Cable Clamp (1/2)	3	F019	1/4-20 ESNA Wing Nut		2
5	5975-1	Cable Tie (18# x 3-3/4")	3	F025	10-24 x 3/8 PPHMS		1
6	8404-8	Plastic Cover, Red	3	F026	10-24 x 1/2 PPHMS		5
7	8941	Circuit Breaker (30 Amp) (Auto Reset/Sealed)	1	F027	10-24 x 5/8 PPHMS		2
8	6922	Battery Cable (+)	1	F029	1/4-20 x 1/2 Hex Bolt		2
9	4929	Starter Solenoid	1	F031	1/4-20 x 5/8 Hex Bolt		2
10	6681-23	Plastic Cap, Black	2	F050	1/4 SAE Washer		2
11	4940-15	30A Fuse, Jumper Wire Assembly	1	F112	5/8 x 1-1/4 x .03 Washer		3
12	5943-8	Wire Harness Assembly	1	F146	1/4-20 Jam Nut		1
13	5835-4	Cable Clamp (1/2) .343 Hole	1	F182	1/4 x 5/8 x 1/8 Washer		2
14	5942-10	Safety Switch (NC), Delta Side Mount	1	F187	1/4-20 x 1-1/2 Hex Bolt		1
15	5942-8	Safety Switch (NO), Delta Side Mount	1	F211	1/4-20 x 7/8 Hex Bolt		1
16	4024-13	Safety Switch Plate	1	F232	10-32 Keps Nut		2
17	6942	Relay Switch 20/40 Amp (NC)	3	F306	3/8-16 x 3/4 Hex Bolt		2
18	8990-1	Hourmeter (Global)	1	F349	Washer .835 ID 1.122 OD, SS		1
19	8960-15	Ignition Switch (With Keys) (Includes Items # 20, 21 & F349)	1	F505	6-32 x 7/8 Hex Trim MS, SS		4
20	7854	Plastic Tip / Red	1	F506	6-32 Nylock Nut		4
21	8960-3	Key Set W/Umbrella	1	NOTE: Refer to ELECTRICAL CONNECTORS , Page 26, for identification of all Electrical Wiring Service Parts.			
22	7941-3	Boot, Circuit Breaker	1	NOTE: Decals for this assembly are not shown here. Refer to TRACTOR DECALS , Page 2, for Decal listing and placement information.			
23	7941-8	Circuit Breaker (5 Amp)	1				
Battery Assembly							
24	5844-3	Battery Hold-Down Bar	1				
25	5839	Hook Bolt	2				
26	5933	Battery Terminal Insul., Red (+)	1				
27	4940-8	Started Solenoid Cable	1				
28	NS	Battery (12V/300.CA/Wet)	1				
29	6390-3	Battery Pan	1				
30	6923	Battery Cable (-)	1				
31	5932	Battery Terminal Insul., Black (-)	1				

ELECTRICAL ASSEMBLY

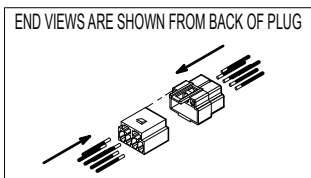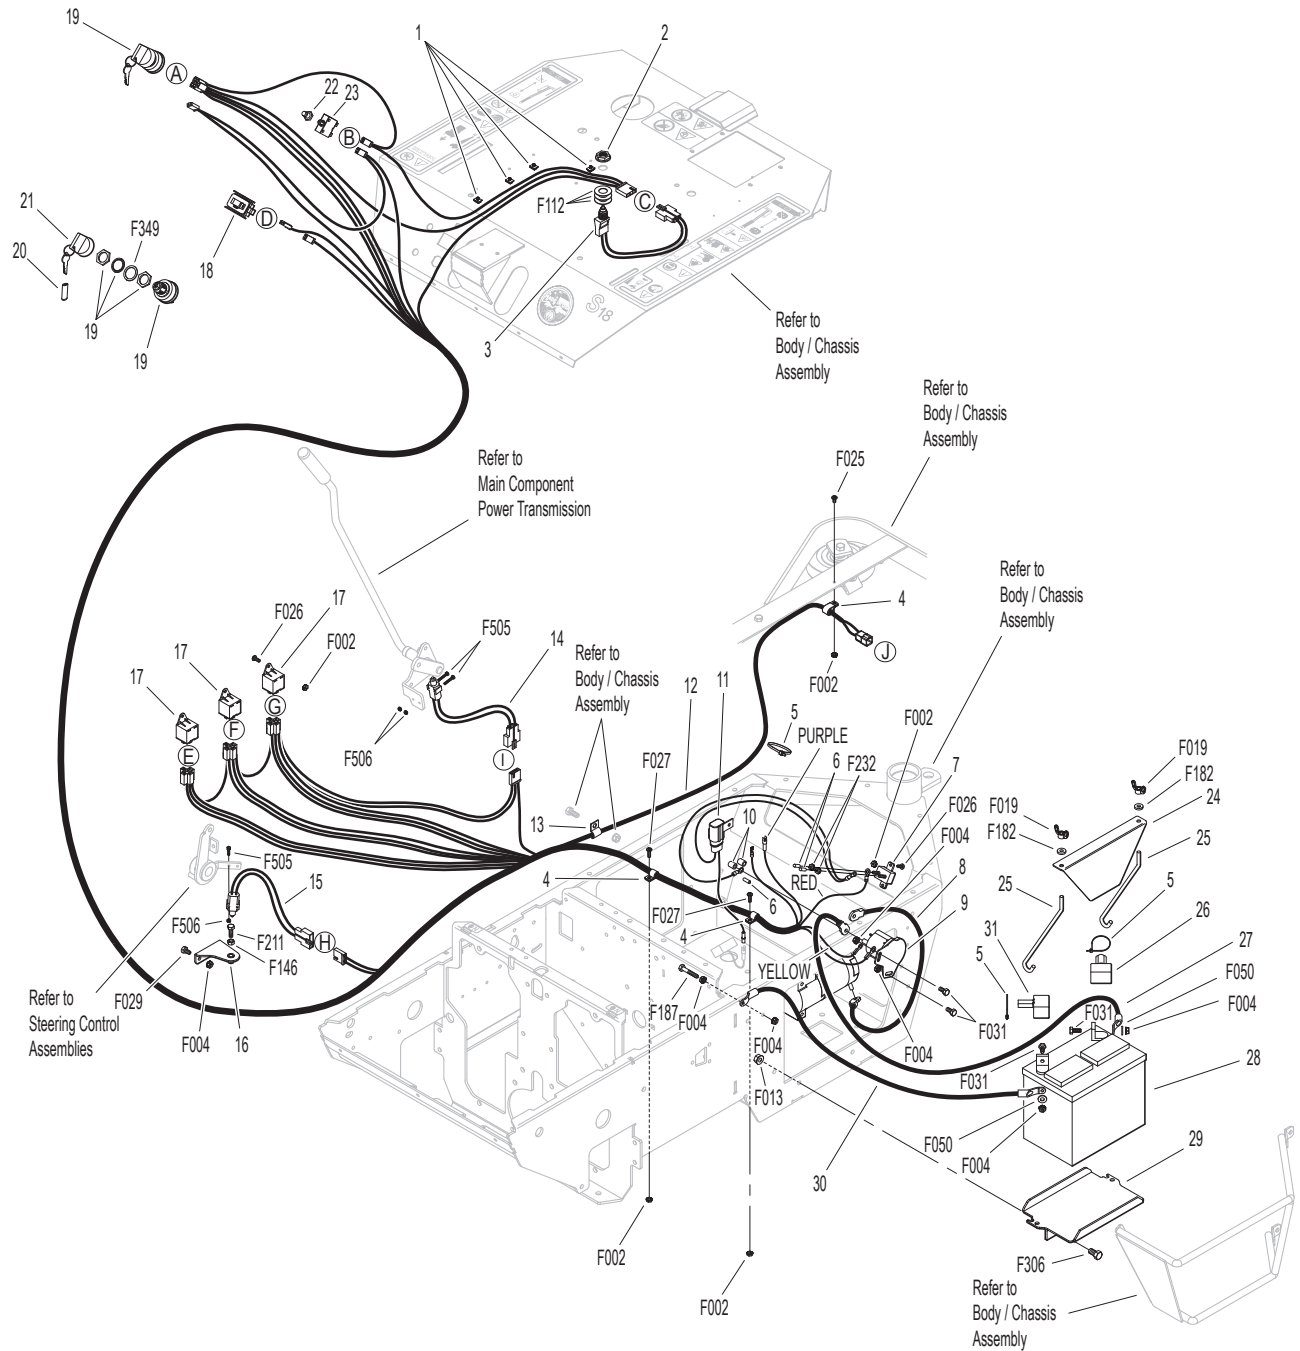

DETAIL A

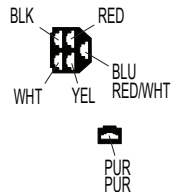

DETAIL B




DETAIL C




DETAIL D




DETAIL E

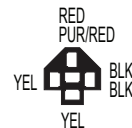

DETAIL F

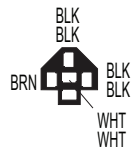

DETAIL G

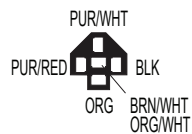

DETAIL H



DETAIL I



DETAIL J



ELECTRICAL ASSEMBLIES (GHS 7.0 BUSHEL COMPONENTS)

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
----------	----------	-------------	-----------

Horn & Harness Channel Assemblies

1	5536-2	Horn, Full Signal	*
2	5976-2	Grommet (3/16 x 3/4)	2
3	5975-1	Cable Tie (18# x 3-3/4")	1

Harness & Grass-Pak® Switch Assemblies

4	8950-4	Powerfil Wire Harness (7.0/10.0)	1
5	5833	Cable Clamp (1/4)	2
6	5594-6	Aluminum Shaft & Vane Assembly	1
7	5592-20	Grass-Pak® Switch Assembly	1

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
----------	----------	-------------	-----------


Fasteners

F002	10-24 Keps Nut	4
F025	10-24 x 3/8 PPHMS	1
F037	10-24 x 5/8 PTH Screw	1
F129	10-24 x 1/2 PTHMS	2
F508	4-40 Keps Nut, SS	2
F509	4-40 x 1/2 Hex Head, SS	2

* Service Part Only

NOTE: Refer to **ELECTRICAL CONNECTORS**, Page 26 for identification of all Electrical Wiring Service Parts.


ELECTRICAL ASSEMBLIES (GHS 7.0 BUSHEL COMPONENTS)

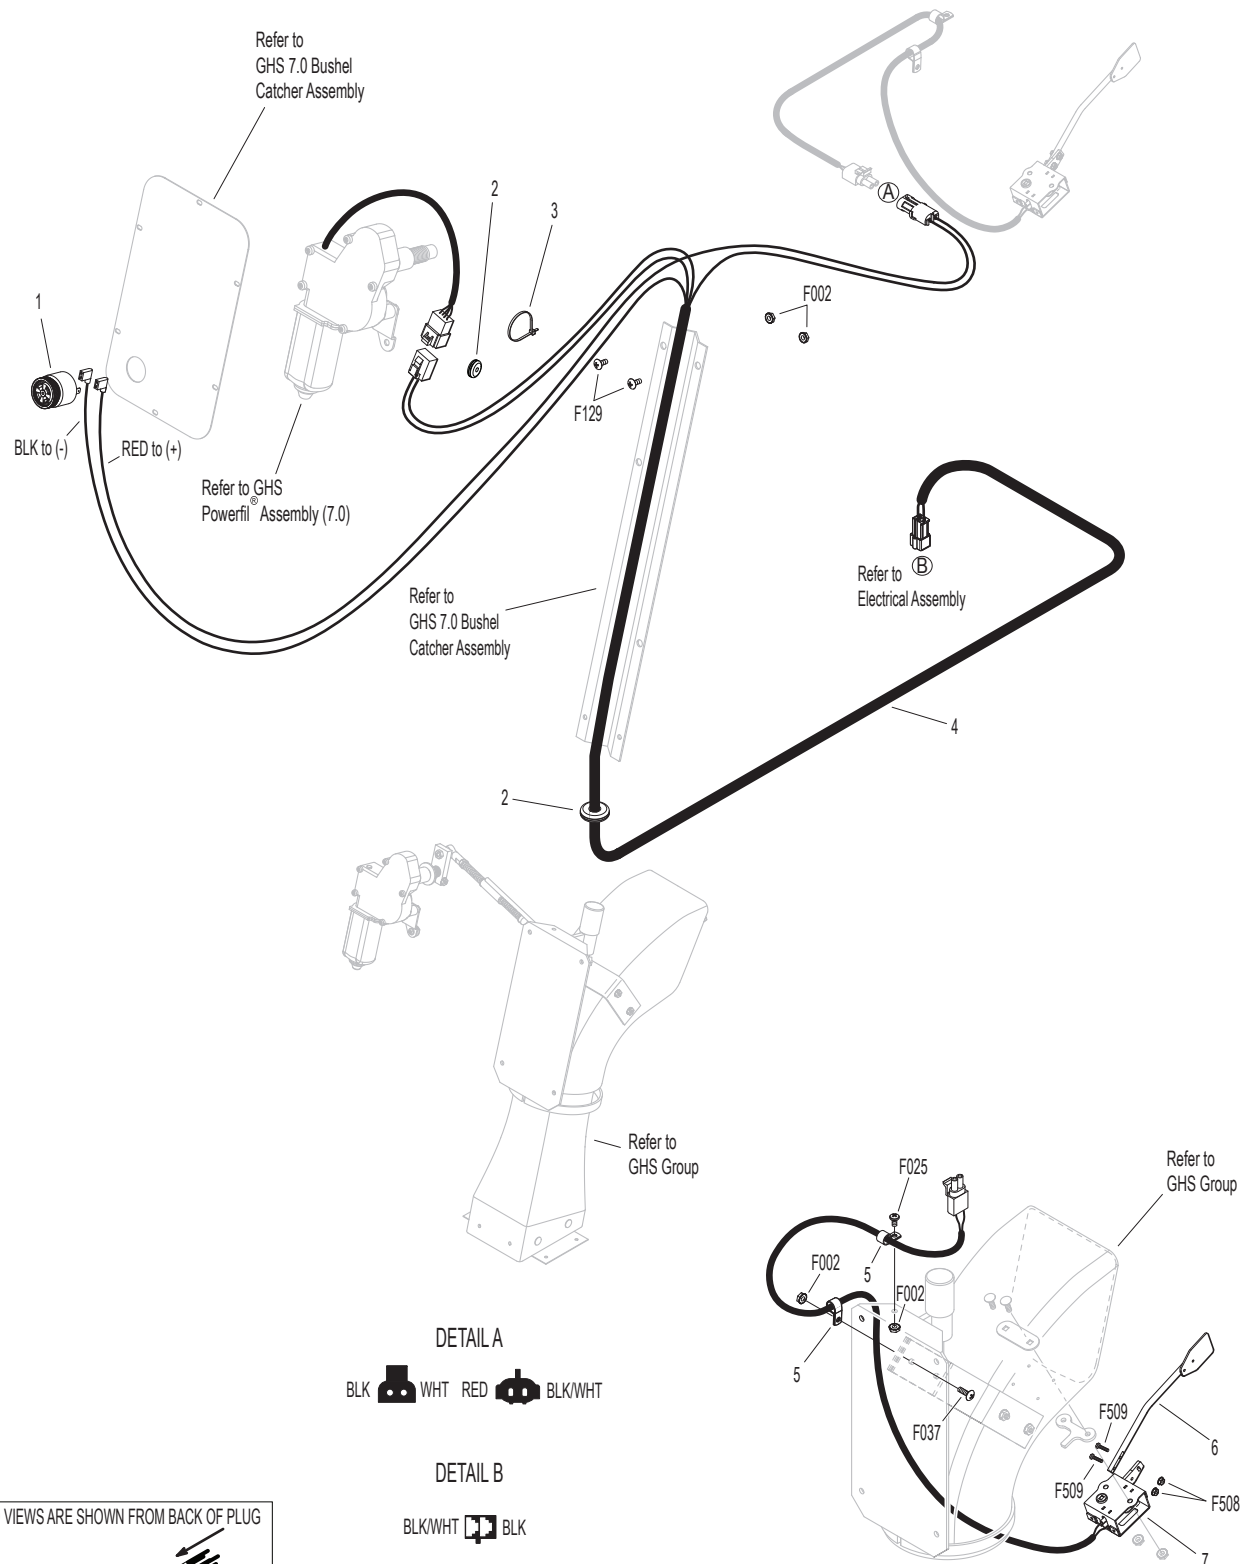

ELECTRICAL CONNECTORS

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Electrical Wiring Service Parts				29	7942-1	2-Way Locking Connector, Female	*
1	5996-1	16-14 GA Butt Connector	*	30	7942-2	2-Way Connector, Male	*
2	5996-11	12-10 GA Butt Connector	*	31	7942-3	2-Way Connector, Female	*
3	7942-14	16-14 GA Shrink Connector	*	32	7942-10	2-Way Locking Connector, Male	*
4	7942-13	12-10 GA Shrink Connector	*	33	5940-8	3-Way Connector, Male	*
5	5995-1	Wire Terminal Adapter	*	34	7942-9	3-Way Connector, Male	*
6	5996-4	16-14 GA Bullet Conn., Male	*	35	8944	3-Way Locking Connector, Male	*
7	5996-5	16-14 GA Bullet Conn., Female	*	36	8944-1	3-Way Locking Connector, Female	*
8	5940-4	16-14 GA Spg. Loaded Term., Female	*	37	7942-11	4-Way Connector, Male	*
9	5940-7	Wire Clip, Female	*	38	7942-12	4-Way Connector, Female	*
10	5996	1/4 x 16-14 GA QDF Terminal	*	39	7942-5	5-Way Connector, Male	*
11	5996-2	3/16 x 22-18 GA QKS Term., Female	*	40	5940-2	5-Way Connector, Male	*
12	7996	16-14 GA QKS Term., Female	*	41	8942-1	5-Way Connector, Female	*
13	5940-5	16-14 GA Spg. Loaded Term., Male	*	42	7942-6	6-Way Connector, Male	*
14	5996-0	1/4 x 22-18 GA QKS Term., Male	*	43	7942-7	6-Way Connector, Male	*
15	5996-18	16-14 GA Ring Term. (#8) Nylon Insulated	*	44	7942-8	8-Way Connector, Male	*
16	7996-1	1/4 x 16-14 GA QKS Term., Male	*	45	8942-2	8-Way Connector, Female	*
17	5996-8	6 GA Ring Lug (5/16) Insulated	*	46	8942-3	5-Way Connector, Male	*
18	5996-9	22-18 GA Ring Term. (#10)	*	47	5940-9	3-Way Connector (M)	*
19	5996-10	16-14 GA Ring Term. (5/16) Insulated	*	48	7942-15	6-Way Connector (Female)	*
20	5996-12	12-10 GA Ring Term. (5/16)	*	49	7940-3	Packard Plug (Male)	*
21	5996-13	16-14 GA Ring Term. (#10) Insulated	*	50	7940-4	Packard Plug (Female)	*
22	5996-15	12-10 GA Ring Term. (1/2)	*	* Service Part Only			
23	5996-16	6 GA Ring Terminal (1/4)	*	NOTE: Not all Electrical Connectors are used with all assemblies.			
24	5996-17	16-14 GA Ring Term. (1/4)	*	NOTE: Refer to ELECTRICAL ASSEMBLY , Page 22, for locations of Wiring Harness, Electrical Components and of all Electrical Wiring Service Parts.			
25	5996-20	12-10 GA Ring Term. (1/4) Insulated	*				
26	5996-21	12-10 GA Ring Term. (#10) Insulated	*				
27	7942-4	Single Connector, Male	*				
28	8942	2-Way Connector, Male	*				


ELECTRICAL CONNECTORS

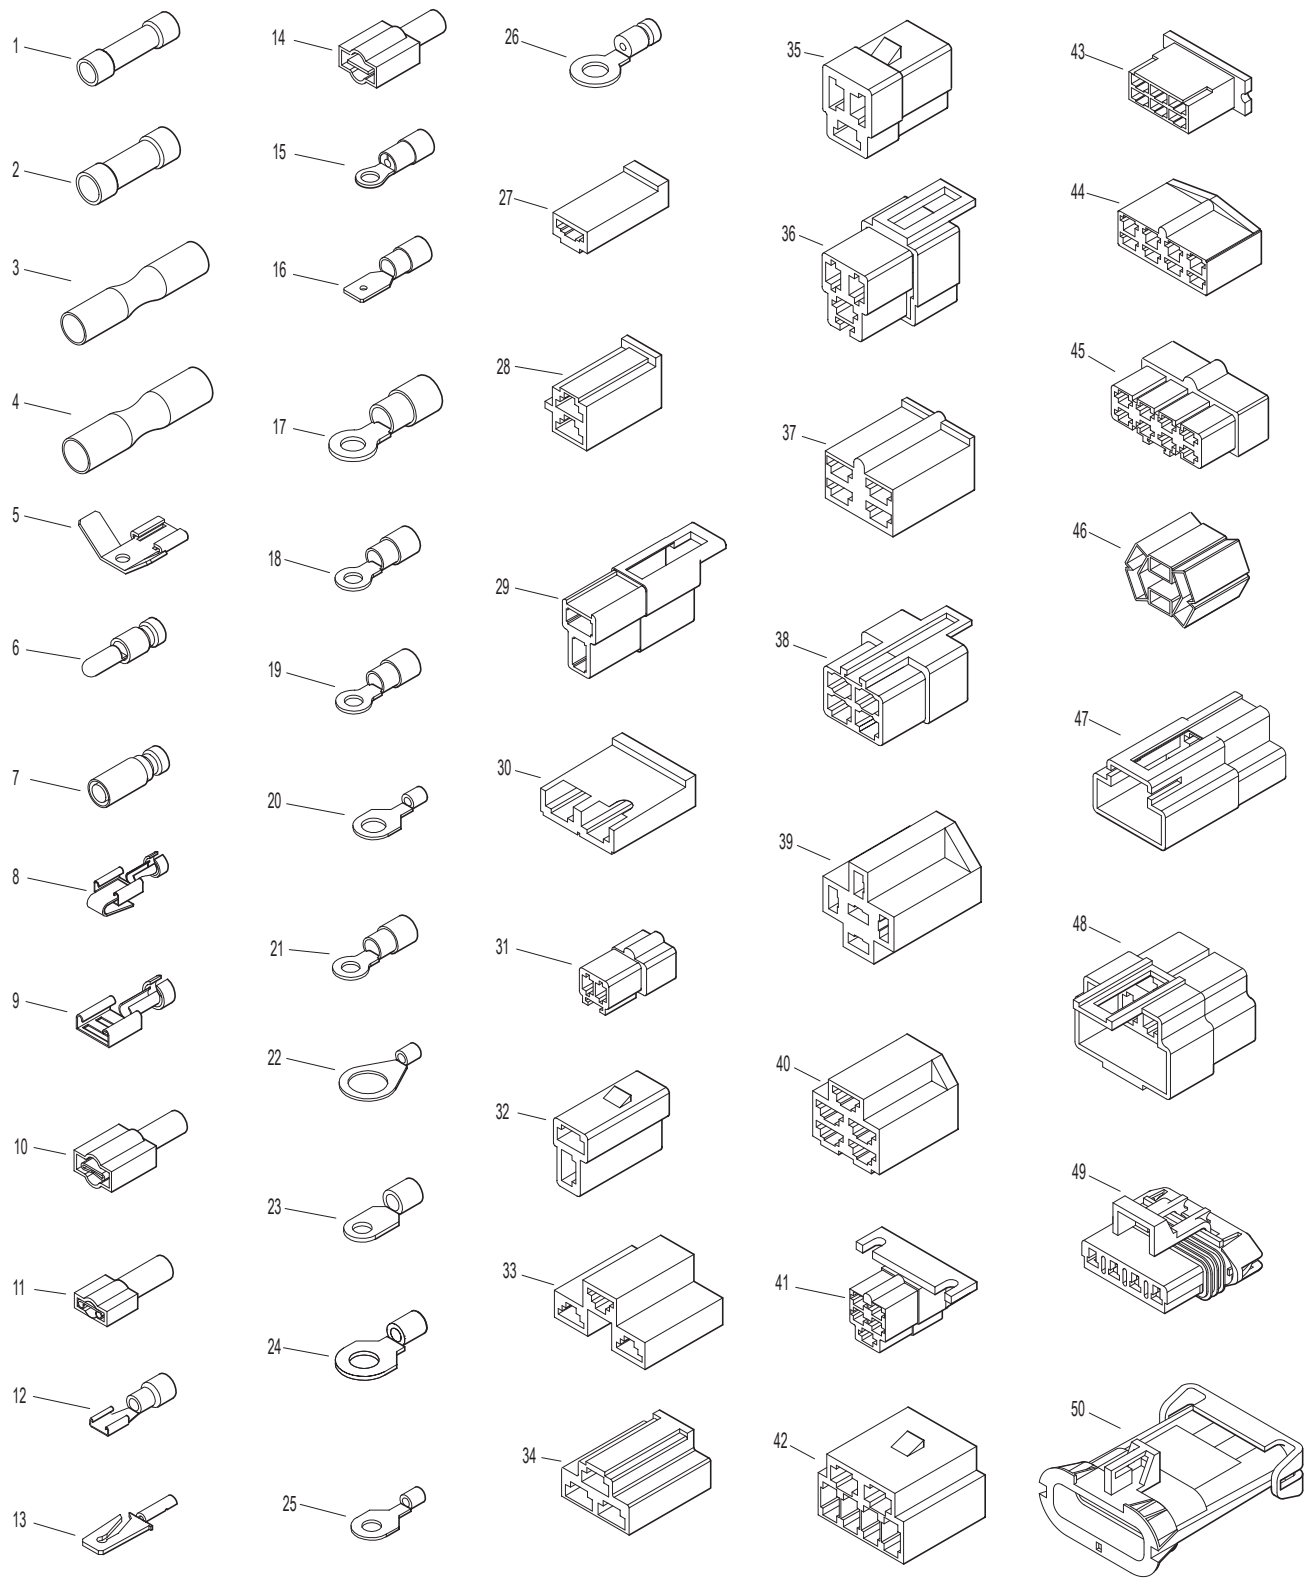

LUBRICATION POINTS

ITEM NO.	LOCATION	LUBRICATION TYPE	NO. PLACES	ITEM NO.	LOCATION	LUBRICATION TYPE	NO. PLACES
Lubrication Points				13	Catcher Hinge Point	Oil	2
1	Steering Lever Pivot	Grease	2	14	Throttle Control Cable Ends	Oil	2
2	FSC Lever Pivot	Grease	1	15	Engine Dipstick / Oil Filler	Oil**	1
3	Deck-to-PTO Coupling (Grease Spline Slide Area)	Grease	1	16	Choke Control Cable Ends	Oil	2
4	Universal Joint Tube Assembly	Grease*	1	17	Engine Idler Pivot	Grease	1
5	Deck Support Arm Pivot	Grease	2	18	Parking Brake Lever	Grease	1
6	Hydro Idler Pivot	Grease	1	19	Choke Control Pivot	Oil	1
7	PTO Clutch Lever Pivot	Grease	1	20	Throttle Control Pivot	Oil	1
8	Transaxle Oil Reservoir	Oil/20W-50	1	* Grease every 25 hours.			
9	Body Latch Pivot	Oil	1	** Refer to S18 Operator's Manual for procedure for checking and changing oil in Engine Crankcase.			
10	Clutch Actuator Push Rod (Grease Slide Area)	Grease	1	NOTE: See Model S18 Operator's Manual (5000-33) for proper lubrication intervals.			
11	PTO Belt Tightener Pivot	Grease	1				
12	Brake Band Pivot Pins (Clevis)	Oil	2				

LUBRICATION POINTS

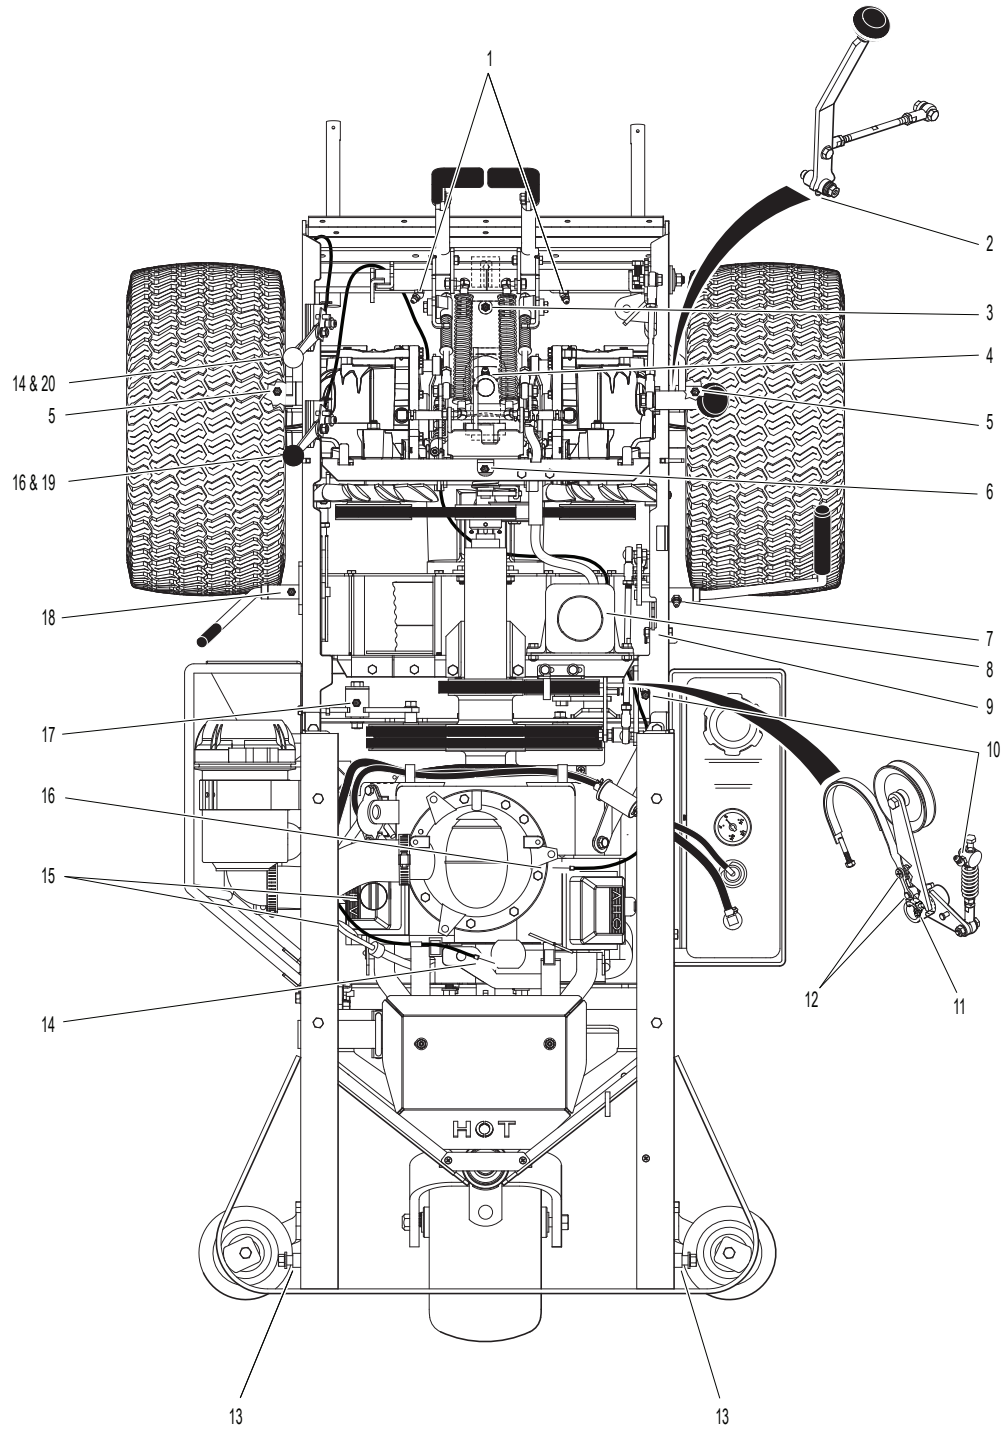

WIRING SCHEMATIC

WALKER MODEL S18 Beginning S/N 2018-148901


IGNITION SWITCH CIRCUITS	
OFF	G + M
START	B + A / S1 + S2
RUN	B + A

S1 = START CIRCUIT
S2 = START/ACCESSORY CIRCUIT
M = MAGNETO GROUND CIRCUIT
B = BATTERY CIRCUIT
A = ACCESSORY CIRCUIT
G = GROUND CIRCUIT

RELAY - A	
START RELAY	
OFF	30 + 87A
START	30 + 87
RUN	30 + 87
PTO ON	30 + 87A

RELAY - B	
IGNITION RELAY	
OFF	30 + 87A
START	30 + 87
RUN	30 + 87
PTO ON	30 + 87A

RELAY - C	
PTO INTERLOCK RELAY	
OFF	30 + 87A
START	30 + 87
RUN	30 + 87
PTO ON	30 + 87

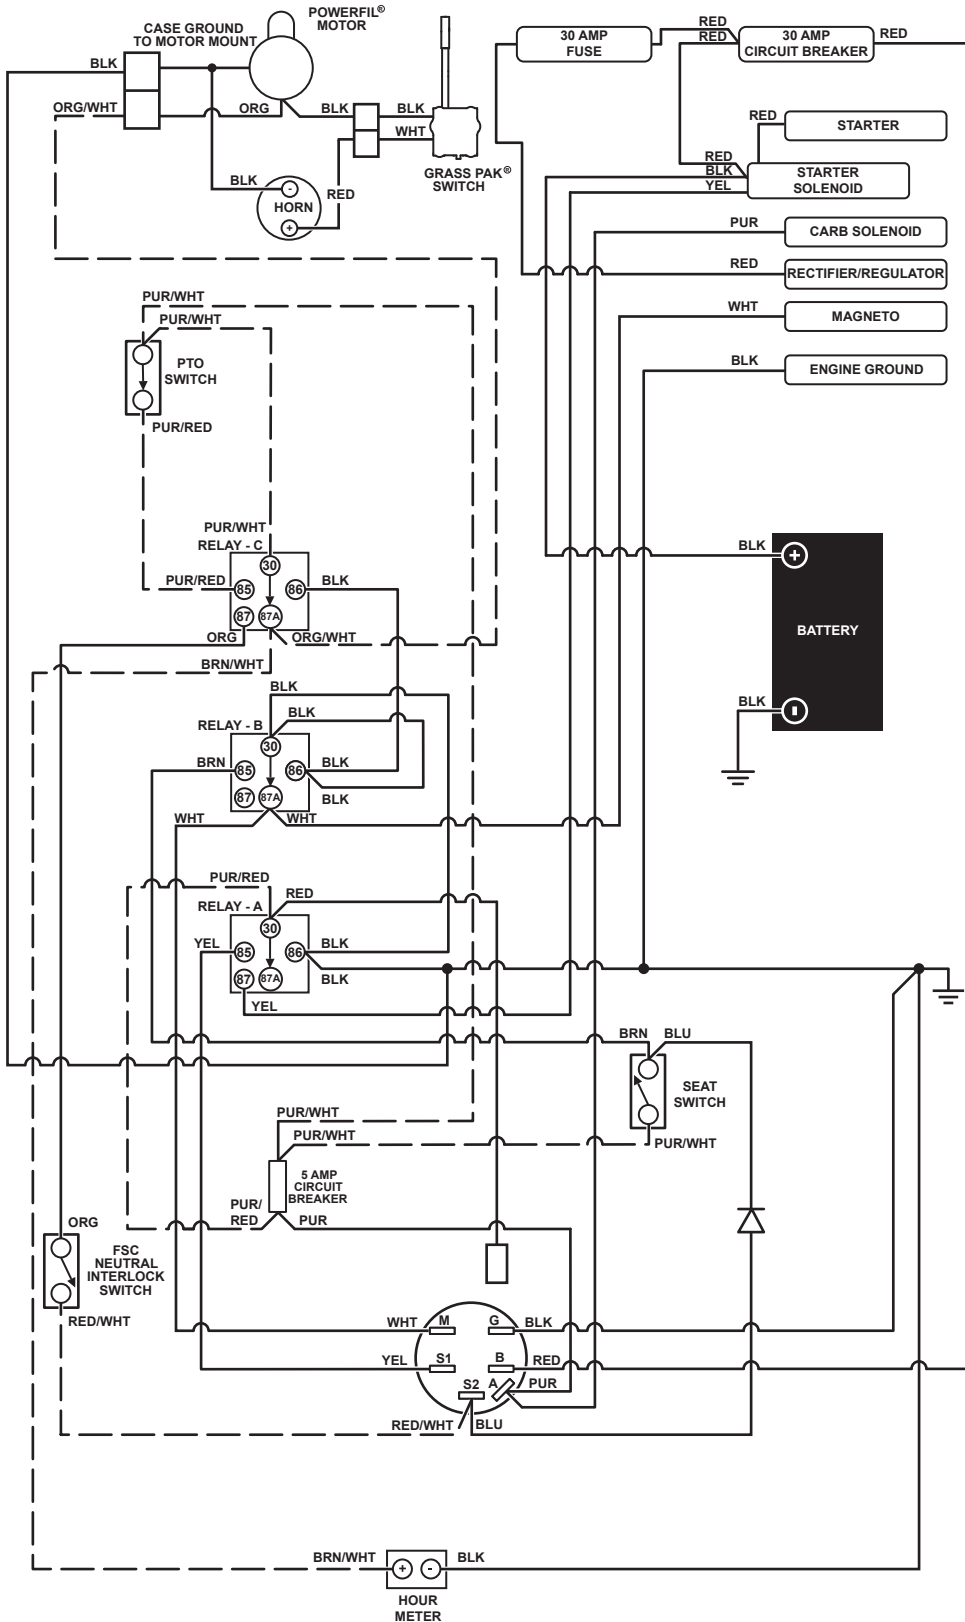

MAINTENANCE AND SERVICE RECORD SHEET

[illegible]

MAINTENANCE AND SERVICE RECORD SHEET

[illegible]

LIMITED WARRANTY FOR WALKER MODEL S18 RIDER MOWER

1. WHAT THIS WARRANTY COVERS, AND FOR HOW LONG:

Walker Manufacturing company will, at its option, repair or replace, without charge, any part covered by this warranty which is found to be defective in material and/or workmanship within one (1) year* after date of sale to the original retail purchaser unless the product is used for rental purposes, in which case this warranty is limited to ninety (90) days. At Walker's request, customer will make the defective part available for inspection by Walker and/or return the defective part to Walker, transportation charges prepaid. All parts and components of the Walker Mower are covered by this warranty **except** the following components which are warranted separately by their respective manufacturers:

Briggs & Stratton Engine
Battery

The available warranties covering these items are furnished with each mower. Walker does not assume any warranty obligation, liability or modification for these items, which are covered exclusively by the stated warranty of the respective manufacturers noted above.

* A two (2) year or 2000 hour (whichever comes first) warranty is offered for Hydro-Gear ZT3100 hydrostatic transmissions; covers full cost of replacement up to 1000 hours of use, and after 1000 hours warranty coverage is prorated against 2000 hours.

2. WHAT THIS WARRANTY DOES NOT COVER:


- A. This warranty does not cover defects caused by depreciation or damage caused by normal wear, accidents, improper maintenance, improper use or abuse of the product, alterations, or failure to follow the instructions contained in the Operator's Manual for operation and maintenance.
- B. The customer shall pay any charges for making service calls and/or for transporting the mower to and from the place where the inspection and/or warranty work is performed.

3. HOW TO OBTAIN SERVICE UNDER THIS WARRANTY:

Warranty service can be arranged by contacting the dealer where you purchased the mower or by contacting Walker Manufacturing Company, 5925 East Harmony Road, Ft. Collins, CO 80528. Proof of the date of purchase may be required to verify warranty coverage.

4. WARRANTY LIMITATION:

- A. **THERE IS NO OTHER EXPRESS WARRANTY. ANY WARRANTY THAT MAY BE IMPLIED FROM THIS PURCHASE INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE IS HEREBY LIMITED TO THE DURATION OF THIS WARRANTY AND TO THE EXTENT PERMITTED BY LAW ANY AND ALL IMPLIED WARRANTIES ARE EXCLUDED.** Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.
- B. **WALKER WILL NOT BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, OR SPECIAL DAMAGES AND/OR EXPENSES IN CONNECTION WITH THE PURCHASE OR USE OF THE MOWER.** Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation(s) or exclusion(s) may not apply to you.
- C. Only the warranty expressed in this limited warranty shall apply and no dealer, distributor, or individual is authorized to amend, modify, or extend this warranty in any way. Accordingly, additional statements such as dealer advertising or presentations, whether oral or written, do not constitute warranties by Walker, and should not be relied upon.
- D. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

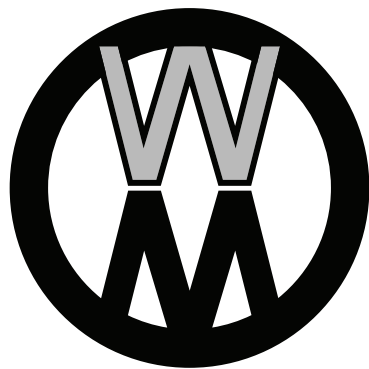

WALKER

WALKER MFG. CO. • 5925 E. HARMONY ROAD, FORT COLLINS, CO 80528 • (970) 221-5614
FORM NO. 062618 PRINTED IN USA www.walker.com ©2018 WALKER MFG. CO