

RX-V367/HTR-3063 How to program remote control codes For TV Control Key Operations

TRANSMIT LIGHT



NOTE: The following steps must be completed within 1 minute. Settings will be automatically stopped after 1 minute passes since the last operation and steps 2 through 4 will have to be repeated.

1 Use the remote codes listed in this document to find your TV manufacturer code.

2 Press the Code Set button on the remote using a small pointed object such as a ball point pen or small paper clip.



 
3 Press the TV Power button on the remote.



4 Enter in your TV remote control code using the Numeric Keys on the remote control.



Once the remote control code is registered successfully the Transmit light will blink twice. If the Transmit light blinks more than twice the code registration has failed. Steps 2 through 4 will need to be repeated.



If multiple control codes exist, start with the first one on the list. If it does not work, cross it off and try the next code until one works.

List of remote control codes

TV		Baird	0282	Condor	0161, 0277, 0320, 0323, 0342, 0350, 0351	Elite	0320, 0340, 0350
A.R. Systems	0320	Bang & Olufsen	0180, 0339			Elman	0341
Acme	0342	Basic Line	0282, 0320, 0323, 0340, 0343, 0350	Contec	0179, 0277, 0323, 0342, 0343, 0344	Elta	0277, 0323, 0343
Acura	0323, 0343	Bastide	0282, 0342	Contec/Cony	0012, 0058	Emerson	0000, 0007, 0008, 0012, 0013, 0019, 0026, 0031, 0037, 0051, 0058, 0059, 0161, 0179, 0320, 0339
ADC	0337	Baur	0320, 0349	Continental Edison	0345		
Admiral	0054, 0178, 0336, 0337, 0339, 0346, 0347	Beko	0161, 0269, 0294, 0302, 0311, 0320, 0328, 0351	Cosmel	0323, 0343	Emprex	0154
Advent	0158	Belcor	0008	Craig	0058, 0179	Envision	0008, 0026, 0050
Adventura	0057	Bell & Howell	0019, 0054	Crosley	0010, 0037, 0171, 0339	Epson	0155, 0206, 0359
Adyson	0277, 0282, 0342	Benq	0097, 0242, 0361	Crown	0058, 0161, 0171, 0179, 0320, 0323, 0343, 0349, 0350, 0351	Erres	0320, 0349, 0350
Agashi	0277, 0282	Beon	0320, 0349, 0350			ESA	0051
Agazi	0337	Best	0161	CS Electronics	0277, 0340, 0342	ESC	0282
Aiko	0277, 0282, 0320, 0323, 0342, 0343	Bestar	0161, 0320, 0350	CTC Clatronic	0341	Etron	0343
Aim	0320	Binatone	0282, 0342	CTX	0205	Eurofeel	0282
Aiwa	0078, 0379	Blue Sky	0320, 0340	Curtis Mathes	0007, 0008, 0010, 0019, 0021, 0026, 0049, 0050, 0178	Euro-Feel	0337
Akai	0050, 0055, 0109, 0159, 0181, 0277, 0282, 0320, 0323, 0340, 0343, 0349, 0350	Blue Star	0348			Euroline	0349
		Boots	0282, 0342	CXC	0058, 0179	Euroman	0161, 0277, 0282
Akiba	0320, 0340	BPL	0320, 0348	Cybertron	0340	Euromann	0320, 0337, 0342, 0350
Akura	0320, 0323, 0337, 0340	Bradford	0058, 0179	Cytron	0152	Expert	0321
Alaron	0277	Brandt	0322, 0345	Daewoo	0007, 0008, 0026, 0037, 0053, 0167, 0266, 0275, 0277, 0282, 0315, 0320, 0323, 0331, 0335, 0342, 0343, 0350, 0381, 0465	Exquisit	0320
Alba	0161, 0277, 0320, 0323, 0340, 0342, 0343, 0344, 0349, 0351, 0372, 0382	Brilliant	0182			Fenner	0323, 0343
Albatron	0140	Brinkmann	0320	Dainichi	0277, 0340	Ferguson	0322, 0345, 0349
Alcyon	0171	Brionvega	0320, 0339, 0349, 0350	Dansai	0277, 0282, 0320, 0337, 0349, 0350	Fidelity	0277, 0320, 0342, 0346
Alleron	0059	Britannia	0277, 0282, 0342	Dantax	0161, 0349	Filsai	0282
Allorgan	0282	Brockwood	0008	Dawa	0320	Finlandia	0346
Allstar	0320, 0350	Broksonic	0109, 0179	Daytron	0007, 0008, 0026, 0323, 0343	Finlux	0171, 0282, 0320, 0339, 0341, 0342, 0349, 0350
America Action	0179	Bruns	0339			FIRST LINE	0342, 0343, 0350
AMOI	0276	BTC	0340			Firstline	0277, 0282, 0320, 0323
Amplivision	0161, 0282, 0321, 0342	Bush	0269, 0282, 0283, 0304, 0320, 0323, 0328, 0332, 0340, 0343, 0344, 0346, 0348, 0349, 0350, 0372, 0382, 0463, 0470, 0472	De Graaf	0346	Fisher	0019, 0161, 0282, 0339, 0342, 0344, 0351
Amstrad	0320, 0323, 0337, 0340, 0343	Candle	0008, 0026, 0050, 0057	Decca	0282, 0320, 0342, 0349, 0350	Flint	0320, 0350
Amtron	0058	Capsonic	0337	Dell	0145, 0245	Formenti	0171, 0277, 0336, 0339, 0342, 0349
Anam	0179, 0343	Carena	0320	Denver	0358, 0362		
Anam National	0052, 0058	Carnivale	0050	Desmet	0320, 0349, 0350	Formenti/Phoenix	0277
Anglo	0323, 0343	Carrefour	0344	Diamant	0320	Fortress	0336, 0339
Anitech	0171, 0320, 0323, 0337, 0343	Carver	0010	Diamond	0277	Fraba	0161, 0320
Ansonic	0161, 0168, 0320, 0323, 0341, 0343	Cascade	0320, 0323, 0343	DiamondVision	0135, 0143	Friac	0161
AOC	0008, 0026, 0050, 0053	Casio	0367	Dimensia	0049	Frontech	0282, 0323, 0337, 0343, 0346, 0347
Apex	0039, 0111, 0217	Cathay	0320, 0349, 0350	Disney	0219	Fujitsu	0059, 0069, 0074, 0075, 0282
Arcam	0277, 0282	CCE	0183, 0282	Dixi	0282, 0320, 0323, 0343, 0349, 0350	Fujitsu General	0282
Arcam Delta	0342	Celebrity	0055, 0107	Dream Vision	0461, 0498	Fujitsu Siemens	0504, 0505, 0507, 0510, 0511
Aristona	0320, 0349, 0350	Celera	0039	DTS	0323, 0343		
Arthur Martin	0321	Centurion	0320, 0349, 0350	Dual	0282, 0320, 0342	Funai	0051, 0058, 0059, 0112, 0113, 0115, 0118, 0119, 0179, 0337
ASA	0339, 0347	Century	0339	Dual-Tec	0342, 0343		
Asberg	0171, 0320, 0350	CGE	0161, 0171	Dumont	0008, 0030, 0062, 0282, 0339, 0341, 0342	Futuretech	0058, 0179
Astra	0343	Changhong	0039	Durabrand	0031, 0051, 0179, 0215	Galaxi	0320, 0351
Asuka	0277, 0282, 0337, 0340, 0342	Chimei	0273	Dux	0349	Galaxis	0161, 0320
Atlantic	0277, 0320, 0342, 0349, 0350	Cimline	0323, 0343	Dwin	0178	Gateway	0176, 0177, 0241
Atori	0323, 0343	Citizen	0007, 0008, 0026, 0050, 0058	Dynatron	0320, 0349, 0350	GBC	0323, 0343, 0344
Auchan	0321	Clarion	0179	Dynex	0228, 0231	GE	0008, 0021, 0023, 0026, 0027, 0031, 0034, 0049, 0052, 0056, 0209
Audiosonic	0161, 0282, 0320, 0340, 0342, 0343, 0349, 0350	Clatronic	0349	Elbe	0161, 0168, 0282, 0320	Geant Casino	0321
			0161, 0171, 0282, 0320, 0323, 0337, 0340, 0342, 0343, 0350, 0351	Elcitra	0339	GEC	0282, 0320, 0342, 0347, 0349, 0350
AudioTon	0161, 0282, 0342	CMS	0277	Electa	0348	Geloso	0323, 0343, 0346
Audiovox	0058, 0179, 0194	CMS Hightec	0282	ELECTRO TECH	0343	General Technic	0323, 0343
Ausind	0171	Coby	0197	Electroband	0055, 0107	Genexxa	0320, 0340, 0347, 0350
Autovox	0171, 0282, 0337, 0339, 0342	Colortyme	0008, 0026	Electrograph	0176		
Aventura	0051	Commercial Solutions	0021	Electrohome	0008, 0026, 0052, 0055	GFM	0128, 0227
Awa	0277, 0282	Concerto	0008, 0026	Element	0230	Giant	0282
Axon	0156	Concorde	0323, 0343	Elin	0277, 0320, 0323, 0342, 0349, 0350		

Gibraltar	0008, 0030, 0050, 0062	Ingersol	0323, 0343	Loewe	0161, 0168, 0265, 0320, 0330, 0352	Naonis	0346
GoldHand	0277	Initial	0153			NEC	0008, 0026, 0050, 0052, 0053, 0072, 0103, 0282, 0344
Goldline	0320	Inno Hit	0171, 0282, 0320, 0323, 0340, 0342, 0343, 0349, 0350	Loewe Opta	0339, 0349, 0350		
GoldStar	0007, 0008, 0012, 0026, 0031, 0050, 0053, 0161, 0277, 0282, 0320, 0323, 0342, 0343, 0346, 0349, 0350	Innovation	0337, 0343	Logik	0054	Neckermann	0161, 0282, 0320, 0339, 0342, 0346, 0349, 0350, 0351
		Insignia	0131, 0228, 0236, 0238	Luma	0320, 0323, 0346, 0349		
		Inteq	0030	Lumatron	0282, 0320, 0346, 0349, 0350	NEI	0320, 0349, 0350
Goodmans	0246, 0272, 0282, 0320, 0323, 0337, 0343, 0344, 0349, 0350, 0462, 0473, 0477	Interactive	0161	Lux May	0350	Net-TV	0176
		Interbuy	0323, 0343	Luxman	0008, 0026	Neufunk	0320, 0323
		Interfunk	0161, 0320, 0339, 0347, 0349, 0350	Luxor	0282, 0342, 0346	New Tech	0343, 0350
		International	0277	LXI	0010, 0019, 0021, 0026, 0027, 0031, 0049, 0111	New World	0340
		Intervision	0161, 0282, 0320, 0337, 0341, 0342	M Electronic	0342, 0343, 0345, 0347, 0349, 0350	NewTech	0282, 0320, 0323
Gorenje	0161, 0351					Nicamagic	0277, 0342
GPM	0340	Irradio	0171, 0320, 0323, 0340, 0343, 0349, 0350	MAG	0096	Nikkai	0277, 0282, 0320, 0323, 0337, 0340, 0342, 0349, 0350
GPX	0129			Magnadyne	0339, 0341, 0349	Nikko	0026, 0031, 0050
Gradiente	0240			Magnafon	0171, 0277, 0341, 0342	Noblisko	0171, 0277, 0341, 0342
Graetz	0347	Isukai	0320, 0340				
Granada	0171, 0282, 0320, 0321, 0342, 0344, 0346, 0349, 0350	ITC	0282, 0342	Magnavox	0008, 0009, 0010, 0013, 0026, 0032, 0033, 0048, 0050, 0128, 0211, 0212, 0224, 0226, 0239	Nokia	0347
		ITS	0277, 0320, 0340, 0348, 0350			Norcent	0201
Grandin	0340, 0343, 0348, 0349	ITT	0343, 0347			Nordic	0282
Gronic	0282	ITV	0320, 0343, 0349			Nordmende	0339, 0345, 0347, 0350
Grundig	0160, 0161, 0171, 0310, 0320	Janeil	0057	Magnum	0337, 0343	Nordvision	0349
		JBL	0010	Majestic	0054	Novatronic	0320
Grunpy	0058, 0059, 0179	JC Penney	0007, 0008, 0026, 0027, 0049, 0053, 0056	Mandor	0337	Oceanic	0321, 0347
Haier	0157, 0233			Manesth	0282, 0320, 0337, 0342, 0349, 0350	Okano	0161, 0320, 0351
Halifax	0277, 0282, 0337, 0342	JCB	0055, 0107	Marantz	0008, 0010, 0026, 0050, 0204, 0320, 0349, 0350	Olevia	0102, 0199, 0200, 0207, 0222
		Jensen	0008, 0026			ONCEAS	0342
Hallmark	0008, 0026, 0031	JVC	0012, 0014, 0015, 0056, 0064, 0065, 0067, 0169, 0174, 0297, 0314, 0344, 0350, 0375	Marelli	0339	Onwa	0058, 0179
Hampton	0277, 0282, 0342			Mark	0277, 0282, 0320, 0323, 0349, 0350	Opera	0320
Hanseatic	0161, 0168, 0282, 0320, 0323, 0342, 0343, 0344, 0349, 0350	Kaisui	0277, 0282, 0320, 0323, 0340, 0342, 0343, 0348	Masuda	0282	Oppo	0130
				Matsui	0282, 0320, 0323, 0342, 0343, 0344, 0346, 0349, 0350, 0455	Optimus	0017, 0019
Hantarex	0320, 0323, 0343					Optoma	0144
Hantor	0320					Optonica	0178
Harman/Kardon	0010	Kamosonic	0342			Orbit	0320, 0350
Harvard	0058, 0179	Kamp	0277, 0342	Matsushita	0017	Orion	0043, 0146, 0283, 0320, 0323, 0328, 0343, 0349, 0350
Harwood	0320, 0323	Kapsch	0347	Maxent	0147, 0176	Online	0320
Havermey	0178	Karcher	0161, 0320, 0342, 0343, 0349	Mediator	0320, 0349, 0350	Osaki	0282, 0320, 0337, 0340, 0342
HCM	0282, 0320, 0323, 0337, 0342, 0343, 0348	Kawasho	0008, 0026, 0055, 0277	Medion	0320, 0337, 0343	Oso	0340
				Megapower	0140	Otto Versand	0282, 0320, 0336, 0342, 0344, 0348, 0349, 0350
Hema	0282, 0323	KEC	0179	Megatron	0026, 0031		
Hewlett Packard	0192	Kendo	0161, 0320, 0341, 0346	MElectronic	0277, 0282, 0320, 0323	Pael	0277, 0342
Higashi	0277					Palladium	0161, 0282, 0320, 0342, 0351
HiLine	0320	Kenwood	0008, 0026, 0050	Melvox	0321	Palsonic	0282
Hinari	0320, 0323, 0340, 0343, 0344, 0349, 0350	KIC	0282	Memorex	0019, 0026, 0031, 0053, 0054, 0137, 0215, 0323, 0343	Panama	0277, 0282, 0320, 0323, 0337, 0342, 0343
		Kingsley	0277, 0342				
Hisawa	0321, 0340, 0348	KLH	0039	Memphis	0323, 0343	Panasonic	0016, 0017, 0020, 0022, 0023, 0035, 0052, 0056, 0084, 0085, 0133, 0163, 0193, 0284, 0286, 0290, 0292, 0320, 0325, 0347, 0356
Hisense	0247	Kloss Novabeam	0057, 0058	Mercury	0320, 0323		
Hitachi	0008, 0012, 0026, 0066, 0084, 0092, 0093, 0120, 0172, 0173, 0255, 0270, 0271, 0282, 0320, 0335, 0338, 0342, 0344, 0346, 0347, 0365, 0382, 0448, 0456, 0467	Kneissel	0161, 0168, 0320	Metz	0339		
		Kolster	0320, 0350	MGA	0008, 0026, 0031, 0050, 0053		
		Konka	0340				
		Korpel	0320, 0349, 0350	Micromaxx	0337, 0343		
		Korting	0161, 0339	Microrstar	0337, 0343		
		Kosmos	0320	Midland	0007, 0021, 0023, 0027, 0030, 0056, 0062		
		Koyoda	0343				
		KTV	0007, 0050, 0058, 0179, 0183, 0282, 0342	Minerva	0171	Panavision	0320
				Minoka	0320, 0350	Pathe Cinema	0161, 0168, 0277, 0321, 0342
Hornlyphon	0320, 0350	Kyoto	0277, 0282	Mintek	0153		
Hoshai	0340	Lasat	0161	Mitsubishi	0008, 0026, 0031, 0053, 0066, 0084, 0093, 0098, 0150, 0178, 0289, 0320, 0339, 0344, 0350, 0376	Pausa	0323, 0343
Huanayu	0277, 0342	Lenco	0323, 0343			Penney	0021, 0023, 0031, 0050, 0111
Hygashi	0277, 0282, 0342	Lenoir	0323, 0342, 0343			Perdio	0277, 0320
Hyper	0277, 0282, 0323, 0342, 0343	Leyco	0320, 0337, 0349, 0350			Perfekt	0320
						Philco	0008, 0009, 0010, 0012, 0026, 0050, 0052, 0053, 0161, 0171, 0320, 0339
Hypson	0282, 0320, 0321, 0337, 0342, 0348, 0349, 0350	LG	0031, 0053, 0066, 0116, 0117, 0140, 0161, 0164, 0175, 0195, 0269, 0277, 0282, 0300, 0309, 0317, 0320, 0323, 0328, 0342, 0343, 0346, 0349, 0350, 0366, 0368, 0377, 0466, 0471, 0478	Mivar	0161, 0168, 0171, 0277, 0282, 0342		
Hyundai	0141			Monivision	0140		
Iberia	0320			Montgomery Ward	0054	Philharmonic	0282, 0342
ICE	0277, 0282, 0320, 0323, 0337, 0340, 0342, 0343, 0350					Philips	0008, 0009, 0010, 0011, 0012, 0032, 0048, 0049, 0052, 0122, 0128, 0134, 0186, 0187, 0213, 0221, 0224, 0226, 0239, 0256, 0257, 0259, 0261, 0263, 0267, 0280, 0281, 0287, 0296, 0299, 0301, 0303, 0305, 0313, 0319, 0320, 0324, 0333, 0339,
ICeS	0277			Motion	0171		
Ilo	0148, 0153			Motorola	0052, 0178		
IMA	0058			MTC	0008, 0026, 0050, 0053, 0161, 0277		
Imperial	0161, 0171, 0320, 0347, 0350, 0351	LG/GoldStar	0164	Multi System	0349		
		Liesenk	0349	Multitech	0058, 0161, 0179, 0183, 0277, 0282, 0320, 0323, 0341, 0342, 0343, 0344, 0346, 0349		
		Liesenkotter	0320				
Indiana	0320, 0349, 0350	Life	0337, 0343				
Infinity	0010	Lifetec	0320, 0323, 0337, 0343				
InFocus	0250, 0327, 0363, 0479, 0508						
		Lloyds	0323	Murphy	0277, 0342		
Ingelen	0347			NAD	0026, 0031, 0111		

	0342, 0349, 0350, 0353, 0357, 0360, 0380, 0383, 0452, 0459, 0460	Saisho	0282, 0323, 0337, 0342, 0343	Sony	0038, 0044, 0045, 0047, 0055, 0104, 0105, 0107, 0110, 0123, 0184, 0220, 0248, 0249, 0251, 0252, 0254, 0326, 0343, 0344, 0371, 0374, 0457, 0475	Thomson	0162, 0188, 0189, 0285, 0320, 0322, 0342, 0345, 0350
Philips Magnavox	0011, 0032, 0033	Salora	0346, 0347			Thorn	0320, 0349
Phoenix	0161, 0277, 0320, 0339, 0349, 0350	Sambers	0171, 0341			TMK	0008, 0026, 0031
Phonola	0277, 0320, 0339, 0349, 0350	Sampo	0007, 0008, 0026, 0050, 0176			TNCi	0030
Pilot	0007, 0008, 0050	Samsung	0004, 0005, 0006, 0007, 0008, 0012, 0026, 0031, 0036, 0050, 0053, 0076, 0077, 0079, 0114, 0124, 0125, 0126, 0127, 0139, 0161, 0183, 0185, 0190, 0191, 0258, 0264, 0277, 0282, 0320, 0323, 0334, 0337, 0342, 0343, 0349, 0350, 0351, 0373, 0453, 0468	Sound & Vision	0340, 0341	Tokai	0282, 0320, 0350
Pioneer	0008, 0026, 0094, 0095, 0161, 0320, 0345, 0347, 0349, 0350, 0458			Soundesign	0008, 0026, 0031, 0058, 0059, 0179	Toshiba	0018, 0019, 0040, 0041, 0046, 0073, 0100, 0103, 0108, 0109, 0111, 0121, 0132, 0166, 0208, 0210, 0214, 0217, 0260, 0268, 0282, 0283, 0293, 0304, 0306, 0307, 0329, 0344, 0355, 0454
Plantron	0320, 0323, 0337, 0350			Soundwave	0320, 0349, 0350		
Playsonic	0282			Squareview	0051	Totevision	0007
Polaroid	0039, 0142, 0202, 0234			SSS	0008, 0058, 0179	Towada	0282, 0347
Poppy	0323, 0343			Standard	0282, 0320, 0323, 0340, 0342, 0343, 0350	Trakton	0282
Portland	0007, 0008, 0026, 0053	Sandra	0277, 0282, 0342	Starlite	0058, 0179, 0320, 0323, 0349	Trans Continents	0282, 0320
Prandoni-Prince	0171, 0346	Sansui	0043, 0109, 0320, 0350	Stenway	0348	Transtec	0277
Precision	0282, 0342			Stern	0346, 0347	Trident	0282
Prima	0157, 0243, 0323, 0343, 0347	Sanyo	0008, 0019, 0068, 0070, 0071, 0099, 0161, 0168, 0223, 0237, 0277, 0282, 0288, 0295, 0323, 0342, 0344, 0369, 0469	Stylandia	0320, 0323	Triumph	0320
Princeton	0140			Sunkai	0343	Uher	0161, 0171, 0320, 0347, 0350
Prism	0023, 0056			Sunstar	0320, 0323	Ultravox	0277, 0320, 0339, 0341, 0342
Profex	0323, 0343			Sunwood	0320, 0323, 0343, 0350	Unic Line	0320
Profi-Tronic	0320, 0350			Superla	0277, 0282, 0342	United	0349
Proline	0320, 0350	SBR	0320, 0349	Superscan	0013, 0178	Universum	0161, 0171, 0282, 0320, 0337, 0349, 0350, 0351
Proscan	0021, 0027, 0049	Sceptre	0235, 0244	SuperTech	0277, 0320, 0323	Univox	0320
Prosonic	0161, 0277, 0282, 0320, 0342, 0349	Schaub Lorenz	0347	Supra	0323, 0343	Vector Research	0050
Protech	0282, 0337, 0341, 0342, 0343, 0349, 0350	Schneider	0282, 0316, 0318, 0320, 0333, 0340, 0342, 0349, 0350, 0382	Supre-Macy	0057	Vestel	0282, 0320, 0346, 0347, 0349, 0350, 0351
Proton	0008, 0012, 0026, 0031	Scotch	0026, 0031	Supreme	0055, 0107	Vexa	0320, 0323, 0343, 0349
Prottron	0196	Scott	0008, 0012, 0026, 0031, 0058, 0059, 0149, 0179	Susumu	0340	Victor	0015, 0344, 0350
PROVIEW	0096, 0246			Sutron	0323, 0343	VIDEOLOGIC	0277
Provision	0320, 0349	Sears	0008, 0010, 0019, 0021, 0026, 0027, 0031, 0049, 0051, 0059, 0111	SVA	0151	Videologique	0277, 0282, 0340, 0342
Pulsar	0008, 0030, 0062			Sydney	0277, 0282, 0342	VideoSystem	0320, 0350
Pye	0256, 0320, 0349, 0350, 0378	SEG	0277, 0282, 0320, 0323, 0337, 0341, 0342, 0344, 0349, 0382	Sylvania	0008, 0009, 0010, 0011, 0013, 0026, 0048, 0050, 0051, 0128, 0227, 0253	Videotechnic	0277, 0282
Pymi	0323, 0343			Symphonic	0051, 0058, 0062, 0128, 0179, 0215	Vidikron	0010
Quandra Vision	0321			Syntax	0199	Vidtech	0008, 0026, 0031, 0053
Quasar	0017, 0023, 0052, 0056	SEI	0320	Syntax-Brilliant	0199	Viewsonic	0176, 0203, 0232, 0364
Quelle	0282, 0320, 0337, 0342, 0349, 0350	SEI-Sinudyne	0339, 0341, 0347	Sysline	0349	Viking	0057
Questa	0344	Seleco	0344, 0346, 0347	Sytong	0277	Viore	0148
Radialva	0320	Sencora	0323, 0343	Tandy	0178, 0282, 0336, 0340, 0342, 0347	Visiola	0277, 0342
RadioShack	0019, 0021, 0031, 0050, 0179, 0320	Sentra	0323	Tashiko	0277, 0282, 0342, 0344, 0346	Vision	0282, 0320, 0350
RadioShack/Realistic	0007, 0008, 0012, 0026, 0049, 0058	Serino	0277	Tatung	0052, 0177, 0282, 0320, 0342, 0349, 0350	Vizio	0008, 0177, 0218, 0242, 0500, 0501, 0502, 0503, 0506
Radiola	0282, 0320, 0349, 0350	Sharp	0000, 0001, 0002, 0003, 0007, 0008, 0012, 0026, 0060, 0088, 0089, 0091, 0138, 0165, 0170, 0178, 0198, 0229, 0262, 0278, 0279, 0291, 0308, 0312, 0336, 0344, 0354, 0370, 0449, 0450, 0451, 0464, 0474, 0476	TCM	0337, 0343	Vortec	0320, 0349, 0350
Radiomarelli	0320, 0339			Teac	0282, 0320	Voxson	0171, 0320, 0339, 0346, 0347, 0350
Radiotone	0161, 0320, 0323, 0350	Sheng Chia	0178	Tec	0282, 0323, 0342, 0343	Waltham	0282, 0320, 0342
Rank	0344	Shogun	0008	Technics	0017, 0023, 0056	Wards	0008, 0009, 0010, 0026, 0031, 0048, 0049, 0050, 0053, 0054, 0059
RCA	0008, 0021, 0024, 0025, 0026, 0027, 0042, 0049, 0052, 0053, 0063, 0136, 0225	Siarem	0320, 0339, 0341	TechniSat	0274, 0496, 0497, 0499	Watson	0320, 0349, 0350
Realistic	0019, 0031, 0050, 0179	Sierra	0320, 0350	Techwood	0008, 0023, 0026, 0056	Watt Radio	0277, 0341, 0342
Recor	0320	Siesta	0161	TEDELEX	0282	Waycon	0111
Redstar	0320	Signature	0054	Teknika	0007, 0008, 0010, 0012, 0026, 0053, 0054, 0058, 0059, 0179	Wega	0320, 0339, 0344
Reflex	0320	Silver	0344	Teleavia	0345	Wegavox	0323
Revov	0161, 0320, 0349, 0350	Singer	0321, 0339, 0341	Telecor	0282, 0320	Weltblick	0282, 0320, 0349, 0350
Rex	0337, 0346, 0347	Sinudyne	0320, 0339, 0341, 0349	Telefunken	0320, 0322, 0345, 0350	Westinghouse	0107, 0216, 0220
RFT	0161, 0168, 0339			Telegazi	0320	White Westinghouse	0037, 0090, 0277, 0320, 0341, 0342, 0349
Rhapsody	0277	Skantic	0347	Telemeister	0320	Wincom	0101, 0106
R-Line	0320, 0349, 0350	Solavox	0347	Telesonic	0320	Xrypton	0320
Roadstar	0323, 0337, 0340, 0343	Sonitron	0161, 0282	Telestar	0320	Yamaha	0008, 0026, 0050, 0053, 0080, 0081, 0082, 0083, 0086, 0087
Robotron	0339	Sonoko	0282, 0320, 0323, 0337, 0342, 0343, 0349, 0350	Teletech	0320, 0323, 0343, 0349	Yamishi	0282, 0320
Rowa	0277, 0282			Teletoon	0282, 0342	Yokan	0320
Royal Lux	0161	Sonolor	0321, 0347	Televideo	0277		
RTF	0339	Sontec	0161, 0320, 0349, 0350	Televiso	0321		
Runco	0030, 0050, 0062			Tensai	0282, 0320, 0323, 0340, 0343, 0350		
Saba	0298, 0322, 0339, 0345, 0347			Tesmet	0350		
				Tevion	0337, 0343		
				Textet	0277, 0282, 0323, 0342		

Yoko	0161, 0277, 0282, 0320, 0323, 0337, 0340, 0342, 0343, 0349, 0350
Yorx	0340
Zanussi	0282, 0346
Zenith	0008, 0028, 0029, 0030, 0031, 0054, 0061, 0062

Note:

If the codes are not available in this code list for your product then the receiver remote will not be able to control it. If it is a CD player you may be able to get it to work by trying the same manufacture DVD player codes. All the IR information on third party products is integrated at the time of manufacture and the Yamaha universal remotes are not re-programmable, meaning that their internal code libraries cannot be updated.