



## CONGRATULATIONS!

You are now the proud owner of a Kone Pure 2017! The Kone Pure was designed for gamers who wanted the fan-favorite design of the Kone in a slimmer package. At 88 grams and 91% the size of its bigger brother, it packs one hell of a punch. Featuring a Pro-Grip surface for maximum mouse control, its champion-grade ergonomics make it a top choice for gamers who take their peripherals seriously. Despite its reduced size, it boasts industry-leading optics with its ROCCAT® Owl-Eye optical sensor plus a powerful MCU.

The Kone Pure is champion grade.

### ROCCAT® OWL-EYE OPTICAL SENSOR

Featuring the world-beating Owl-Eye optical sensor expertly developed by ROCCAT®. Translating your mouse movements on screen with 1:1 accuracy, Owl-Eye delivers unrelenting pointer precision making it a leading optical sensor.

### ROCCAT® SWARM

Swarm is the software incarnation of ROCCAT's future ready philosophy. It'll cover you for all relevant gaming platforms and devices. It's the next-gen system that keeps on top all games, apps and ROCCAT® products in one place.

### 16.8M COLOR ILLUMINATION

Featuring an illuminated ROCCAT® logo in vivid color that lets you design a theme that's totally unique to you. It's configurable in a staggering 16.8m rich colors and boasts an impressive variety of lighting effects.

## QUICK-INSTALLATION GUIDE IMPORTANT DOCUMENT



**CHAMPION  
GRADE.**

## SPECIFICATIONS

### PACKAGE CONTAINS

- ROCCAT® Kone Pure 2017 – Core Performance RGB Gaming Mouse
- Quick-Installation Guide

 
### SYSTEM REQUIREMENTS

- Windows® 7, Windows® 8, Windows® 10
- USB 2.0 port
- Internet connection (for driver installation)

### TECH SPECS


- ROCCAT® Owl-Eye optical sensor with 12000dpi
- 1000Hz polling rate
- 1ms response time
- 50g acceleration
- 250ips motion detection speed
- Mouse acceleration: no

- Angle snapping: no
- Distance Control Unit
- ARM Cortex-M0 50MHz
- 512kB onboard memory
- 1.8m braided USB cable
- Weight 88g



© 2018 ROCCAT GmbH. All rights reserved. Any product names mentioned in this manual may be trademarks or registered trademarks and are the property of their respective owners. Information contained herein is subject to change without notice. ROCCAT GmbH shall not be made liable for any errors that may appear in this manual. This publication or parts of it may not be reproduced without the express consent of the publisher. BSM II RfHS information: <http://bsmi.roccat.org/170>  
FCC Caution: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

 ROCCAT GmbH, Gasstrasse 4, 22761 Hamburg, Germany

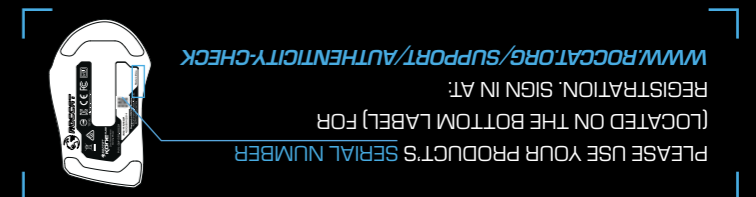

[WWW.ROCCAT.ORG/SUPPORT](http://WWW.ROCCAT.ORG/SUPPORT)

Our support team is ready to help with any technical questions. Just send an e-mail to [support@roccat.org](mailto:support@roccat.org). Or visit our website at:

Should you need assistance ...




## DEFAULT BUTTON ASSIGNMENT

 [no driver installed]

### STANDARD

- 1 = Click
- 2 = Menu
- 3 = Universal scrolling
- 4 = IE Forward
- 5 = IE Backward
- 6 = Scroll up
- 7 = Scroll down
- 8 = DPI up
- 9 = DPI down

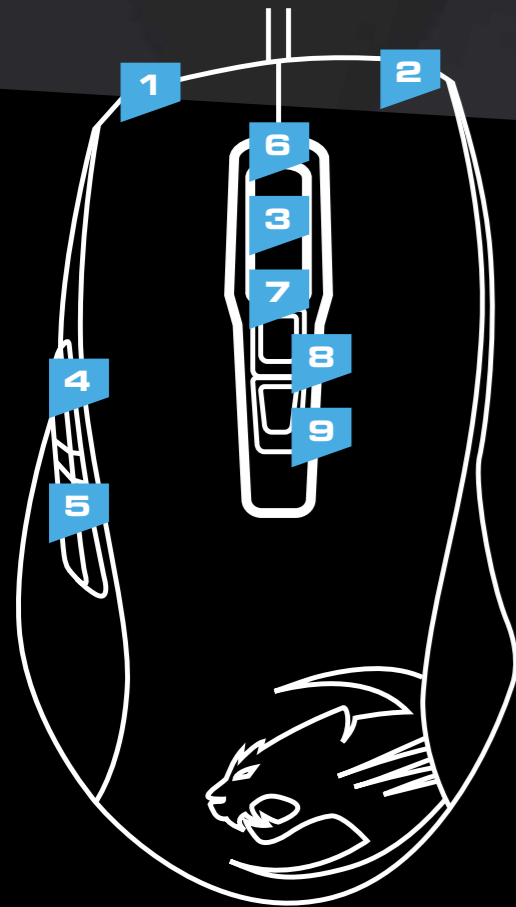

## WHAT'S ROCCAT® SWARM?

Swarm provides next-level ROCCAT® product integration. It works a unified driver suite where you can keep tabs on all of your ROCCAT® devices in one place. Say goodbye to multiple tray icons – with Swarm you have a veritable gaming command HQ for every weapon in your arsenal.



## WHAT'S EASY-SHIFT[+]™?

The Kone Pure features world famous Easy-Shift[+]™ button duplicator technology. It lets you assign a secondary function to your mouse buttons, for a total of 17 possible functions. These secondary functions can be activated by pressing a button while holding down the assigned Easy-Shift[+]™ button. This gives you the power to pack a massive amount of quickly-accessible control into a clean, uncluttered space.



### DE ANLEITUNG

1. Verbinde deine ROCCAT® Kone Pure mit einem freien USB Steckplatz deines Computers.
2. Starte deinen Computer neu und stelle eine Verbindung zum Internet her.
3. Rufe [www.roccat.org/roccat-swarm](http://www.roccat.org/roccat-swarm) auf und lade dir die neueste Swarm Version herunter.
4. Starte die Software Installation und folge den Anweisungen.

### DK INSTRUKTIONER

1. Sæt USB-forbindelsen på din ROCCAT® Kone Pure ind i en ledig USB port.
2. Start computeren op, og forbind den med internettet.
3. Navigér til [www.roccat.org/roccat-swarm](http://www.roccat.org/roccat-swarm), og download den nyeste version af Swarm.
4. Start software-installationen, og følg anvisningerne på skærmen.

### EN INSTRUCTIONS

1. Plug the USB connector on your ROCCAT® Kone Pure into any free USB port.
2. Boot your computer and connect to the internet.
3. Navigate to [www.roccat.org/roccat-swarm](http://www.roccat.org/roccat-swarm) and download the latest version of Swarm.
4. Start the software installation process and follow the on-screen instructions.

### ES INSTRUCCIONES

1. Enchufe el conector USB en un puerto USB libre del ROCCAT® Kone Pure.
2. Reinicie el ordenador y conéctese a internet.
3. Acceda a la página [www.roccat.org/roccat-swarm](http://www.roccat.org/roccat-swarm) y descárguese la última versión swarm.
4. Inicie el proceso de instalación de software y siga las instrucciones de la pantalla.

### FI OHJEET

1. Pistä USB-liitin sisään ROCCAT® Kone Pure -laitteessasi mihin tahansa vapaaseen USB-porttiin.
2. Käynnistä tietokoneesi ja yhdistä internetiin.
3. Siirry osoitteeseen [www.roccat.org/roccat-swarm](http://www.roccat.org/roccat-swarm) ja lataa Swarm-ohjelmiston uusin versio.
4. Käynnistä ohjelmiston asennusprosessi ja seuraa näyttöruudulla näkyviä ohjeita.

### FR INSTRUCTIONS

1. Insérez le connecteur USB de votre ROCCAT® Kone Pure à un port USB libre.
2. Allumez votre PC et connectez-vous à internet.
3. Allez sur [www.roccat.org/roccat-swarm](http://www.roccat.org/roccat-swarm) et téléchargez la dernière version de Swarm.
4. Débutez l'installation du programme et suivez les indications.

### PL INSTRUKCJA

1. Podłącz wtyk USB ROCCAT® Kone Pure do wolnego portu USB.
2. Uruchom komputer i połącz się z Internetem.
3. Przejdź do strony [www.roccat.org/roccat-swarm](http://www.roccat.org/roccat-swarm) i pobierz najnowszą wersję Swarm.
4. Rozpocznij instalację oprogramowania i postępuj zgodnie z instrukcjami na ekranie.

### PT INSTRUÇÕES

1. Ligar o conector USB ao seu ROCCAT® Kone Pure numa porta USB livre.
2. Ligar o computador e estabelecer ligação à internet.
3. Navegar para [www.roccat.org/roccat-swarm](http://www.roccat.org/roccat-swarm) e descarregar a versão mais recente do Swarm.
4. Iniciar o processo de instalação do software e seguir as instruções indicadas no ecrã.

### RU ИНСТРУКЦИИ

1. Вставьте USB-коннектор ROCCAT® Kone Pure в любой свободный USB-порт.
2. Включите компьютер и выйдите в Интернет.
3. Зайдите на [www.roccat.org/roccat-swarm](http://www.roccat.org/roccat-swarm) и загрузите самую новую версию Swarm.
4. Начните процесс установки программного обеспечения и следуйте указаниям на экране.

### SE INSTRUKTIONER

1. Sätt ROCCAT® Kone Pure USB-kontakt i en ledig USB-port.
2. Boota datorn och koppla upp dig på Internet.
3. Gå till [www.roccat.org/roccat-swarm](http://www.roccat.org/roccat-swarm) och ladda ned den senaste versionen av Swarm.
4. Starta programvaruinstallationen och följ anvisningarna på bildskärmen.