



**Gourmia**

## Pour Over Coffee Maker

Model# GCM-4900



**USER  
MANUAL**

Read this manual thoroughly  
before using and save it for  
future reference

Model: GCM-4900

© 2017 Gourmia  
[www.gourmia.com](http://www.gourmia.com)  
The Steelstone Group  
Brooklyn, NY

All rights reserved. No portion of this manual may be reproduced by any means whatsoever without written permission from The Steelstone Group, except for the inclusion of quotations in a media review.

Although every precaution has been taken in the preparation of this manual, The Steelstone Group assumes no responsibility for errors or omissions. Nor is any liability assumed for damages resulting from the use of the information contained herein. Although every effort has been made to ensure that the information contained in this manual is complete and accurate, The Steelstone Group is not engaged in rendering professional advice or services to the individual consumer; further, The Steelstone Group shall not be held responsible for any loss or damage allegedly arising from any information or suggestion in this manual.



## **Welcome to the Practical World of** *Fresh Coffee* **from Gourmia**

Congratulations on your purchase of the Pour Over Coffee Maker from Gourmia, exclusively designed to deliver the perfect cup of coffee every time! Your mornings will become more relaxed as you watch your coffee being filtered and freshly brewed just the way you like it.

The coffee maker's unique design and brewing system contribute to the superior flavor and precise temperature of the coffee.

With its thought out design and easy operation you'll never again have to think twice about which type of hot, fresh drink to make. This coffee maker will provide the perfect coffee to kick-start your morning!

The pages of this manual offer full and comprehensive instructions to guide you through the functions and features of the Gourmia Pour Over Coffee Maker. In this guide you will also find complete step-by-step instructions for the operation, assembly, and maintenance of your appliance.

Please read all safety instructions thoroughly to ensure safe usage at all times.

Thank you for your purchase! We sincerely hope you will enjoy this as well as all the many innovative products brought to you by our family at Gourmia.

## Important Safety Instructions

1. Read all instructions.
2. Remove all packaging from the appliance.
3. Use handles or knobs to operate the appliance.  
Do not touch surfaces; they are hot and can cause you to burn yourself.
4. Check voltage to be sure that it indicated on the name plate agrees with your voltage.
5. To protect against fire, electrical shock or injury, do not immerse cord, plug or main unit in water or any other liquid.
6. Do not leave the machine unattended when in use.
7. Keep the appliance out of reach of children and people with limited capabilities.
8. Do not place on or near a gas or electric burner or in a heated oven.
9. Unplug the appliance when not in use and before cleaning.
10. Allow it to cool down completely before assembling, disassembling and cleaning the appliance.
11. Do not operate the appliance with a damaged cord or plug. If the appliance malfunctions or has been damaged in any manner, do not use it. Return the appliance to the nearest authorized service facility for repair.
12. Do not use any accessories or attachments that were not provided by the manufacturer. They may result in fire or electrical shock.
13. The appliance should be placed on a flat and dry surface. Do not place the machine on the edge of a desk or table.
14. Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
15. Do not touch or move the machine while in use. Hot steam will be escaping from the steam outlet.
16. Do not remove the lid during brewing cycles, you can burn yourself.
17. Do not expose the appliance to extreme cold temperatures, the residual water in the heat pipes and pumps will become ice and damage the machine.
18. When adding water to the water tank, do not exceed the MAX line.
19. If you notice a defect in the machine, unplug immediately and do not use until it is examined by an authorized person.
20. Do not pour hot water into the water tank.
21. Do not use outdoors.
22. Do not use the appliance for other than intended use.

### SAVE THESE INSTRUCTIONS

# TABLE OF CONTENTS

**Know Your Coffee Maker.....6**

**Using Your Coffee Maker.....8**

**Why Pour Over coffee.....11**

 
 
**Cleaning And Maintenance.....12**

 
 
**Troubleshooting.....14**

**Warranty & Services.....15**




# KNOW YOUR COFFEE MAKER

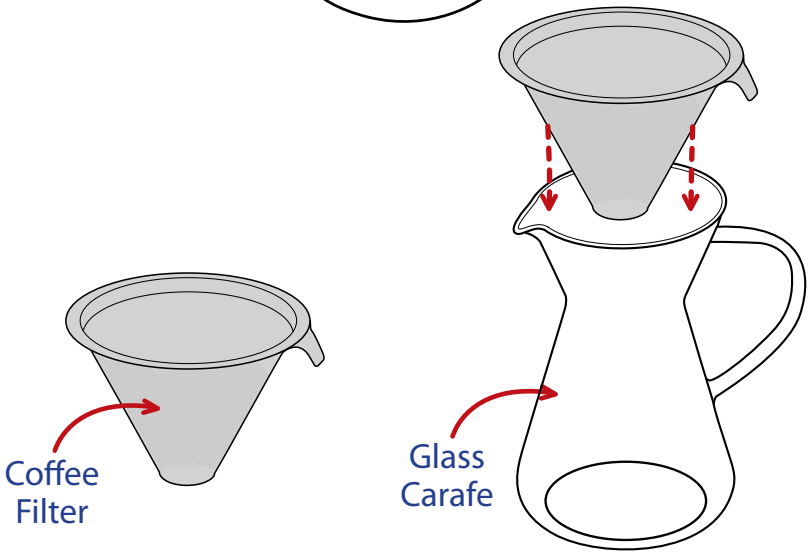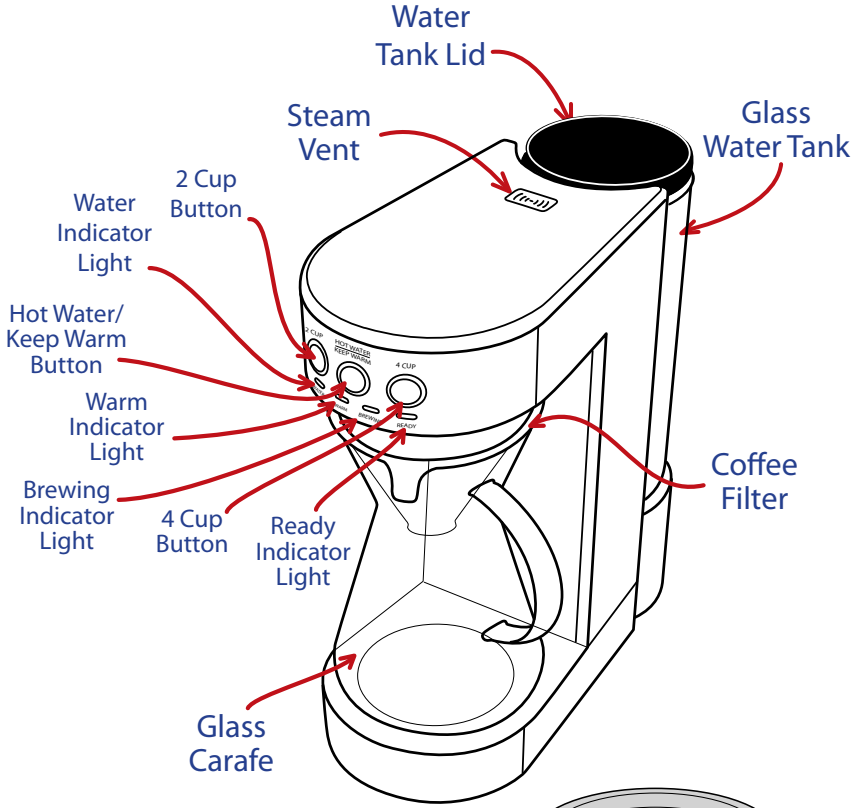

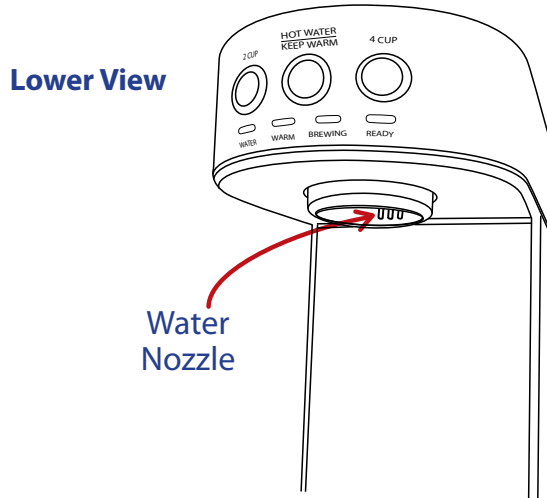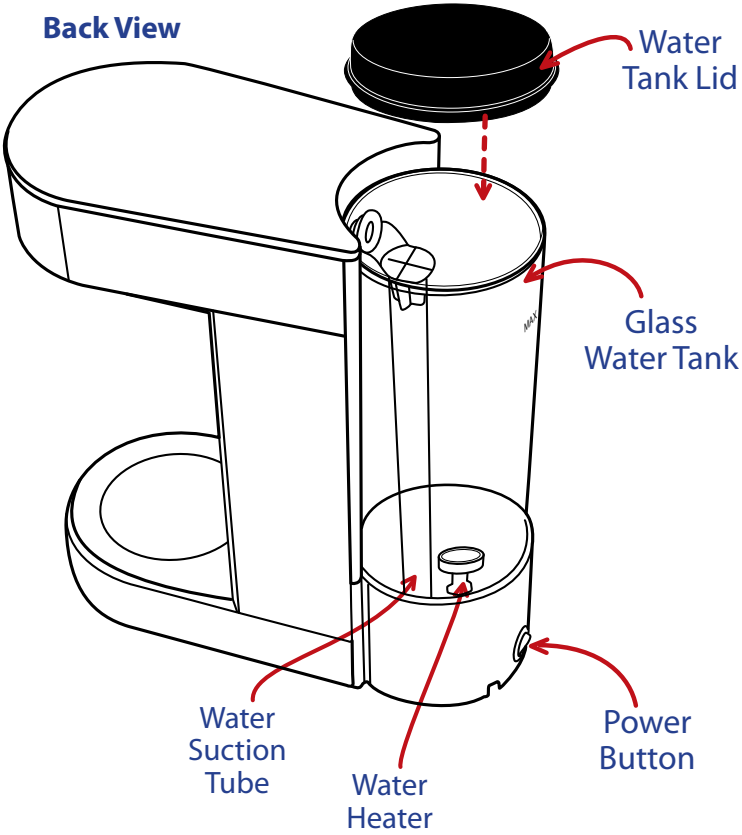


## Using Your Coffee Maker for the First Time

 1. Remove all packaging from the machine and make sure you have all the attachments.
2. Clean all the attachments.
3. Remove the water tank cover.
4. Using the glass carafe, fill the water tank with desired amount of water. Do not exceed the MAX line.
5. Place the cover on the water tank.
6. Run one cycle to boil water to ensure that there is no residue in the machine.

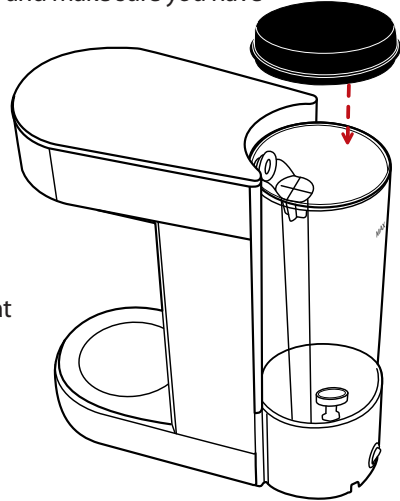

## USING YOUR COFFEE MAKER

 - Plug the appliance into a wall outlet.
- Flip the power switch on the back of the machine to on.
- The 2 cup, 4 cup, and keep warm indicator lights will turn on.
- When the coffee maker is in standby mode, the 2 cup and 4 cup indicator lights will always be on.
- Add water to the water tank.
- The water indicator light will flash until there is enough water in the water tank to begin brewing.

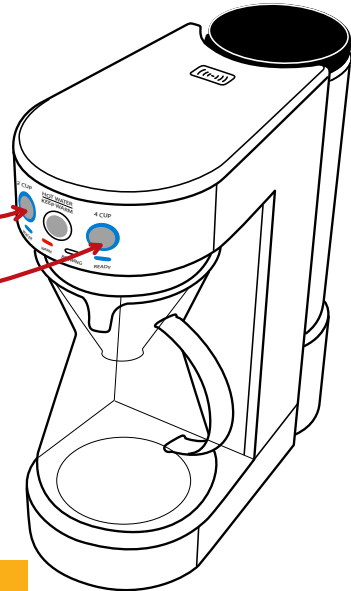

For best results run the hot water cycle a few seconds before brewing coffee.




## USING YOUR COFFEE MAKER

 
- Place the coffee grinds into the filter.
- The suggested ratio of water to coffee grinds is 16ml water/1g of coffee grinds.

Recommended grind size  
Medium/Coarse-Coarse

- Place the filter into the glass carafe.
- Place the carafe on the base of the coffee maker.

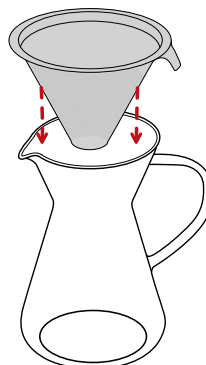


 - The 2 cup, 4 cup and water indicator lights will turn blue until an option is chosen.
- Select 2 cup or 4 cup, depending on how many cups of coffee you are brewing.
- The indicator light of the option you selected will turn on and the other light will turn off.
- The brewing and warm indicator lights will turn red.

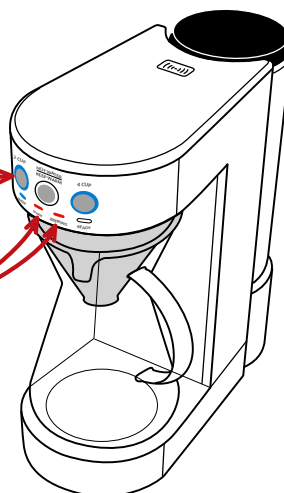


- The machine will then begin to boil the water.
- The water will begin to brew into the glass carafe.
- Ten seconds before the coffee is ready, the ready indicator light will flash blue and then the light will stay on.
- The water may still drip down even once it indicates that it is ready.
- The 2 cup or 4 cup and brewing indicator lights will turn off.
- The coffee maker will automatically go into keep warm mode for a maximum of two hours and then it will go back into standby mode.

 To cancel the hot water/ keep warm option, hold the 2 cup or 4 cup button for three seconds.

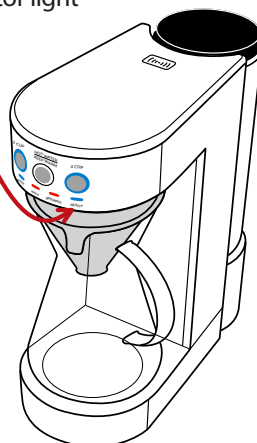


## TO USE KEEP WARM MODE

 1. Under standby mode, place the glass carafe on the base, then press hot water/warm button for three seconds.
2. The 2 cup or 4 cup indicator light will turn off and the keep warm indicator light will turn on.
3. The machine will keep warm for a maximum of 2 hours.
4. The keep warm indicator light will turn off after two hours and the machine will go back into standby mode.

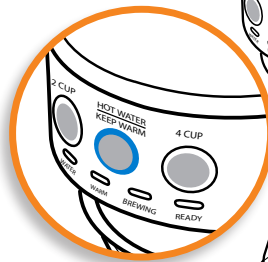


 
After brewing the keep warm stays on by default.

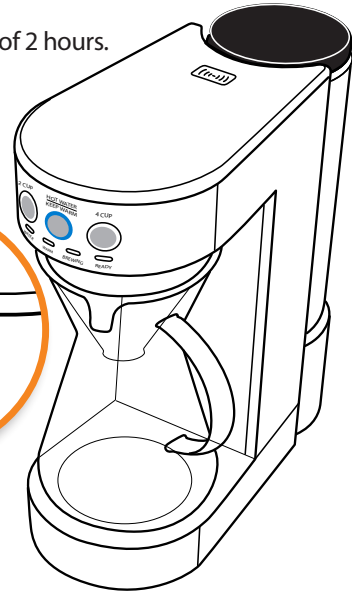

## TO BOIL WATER

1. Place the glass carafe on the base.
2. Fill the water tank with desired amount of water.
3. Press the hot water/keep warm button to begin boiling process.
4. When the water is hot it will pour downward into the glass carafe.

  **CAUTION:** *The appliance gets very hot when in use. Do not touch any surfaces.*

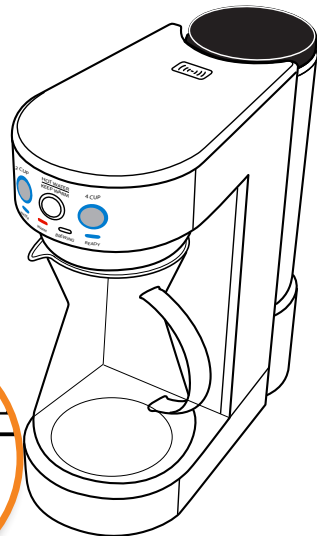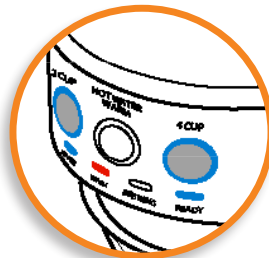

The **Pour Over Coffee Maker** has different features that provide the perfect system to brew coffee.

It **automatically calculates** the different variables that are important for brewing coffee and maintains quality and consistency with each step.

The **way the coffee is brewed** mimics the manual pour over technique which has many benefits over your standard cup of coffee. The pour over method continuously replenishes the liquid surrounding the coffee grounds with new, fresher water. The fresh water evenly wets the coffee grounds and therefore extracts more flavor into the cup without the bitterness that coffee may have. The water then comes down in a pulsing water bath to ensure steady temperature and saturation of the entire coffee.

**Additionally**, it has a faster, more efficient brew than a standard coffee maker.

The **coffee maker** has a filter which is made of fine mesh and eliminates the need for a paper filter and the mess that comes along with it.


The **hourglass design** of the glass carafe lends to the beauty and clean appearance of the machine. The carafe is made of durable glass and with its heat resistant handle, you can bring it straight to the table to serve your coffee.



## CLEANING AND MAINTENANCE

 
1. Unplug the appliance and allow it to cool down completely before cleaning.
2. Clean the exterior of the appliance with a damp cloth.
3. Clean the steam outlet on top of the machine with a damp cloth to make sure there is no residue blocking the outlet.
4. Clean all attachments and dry thoroughly.
5. Use pure water or mineral water to ensure proper cleaning.

**Note:** Do not clean the machine with alcohol or harsh cleaning agents.  
Do not immerse the machine in water.

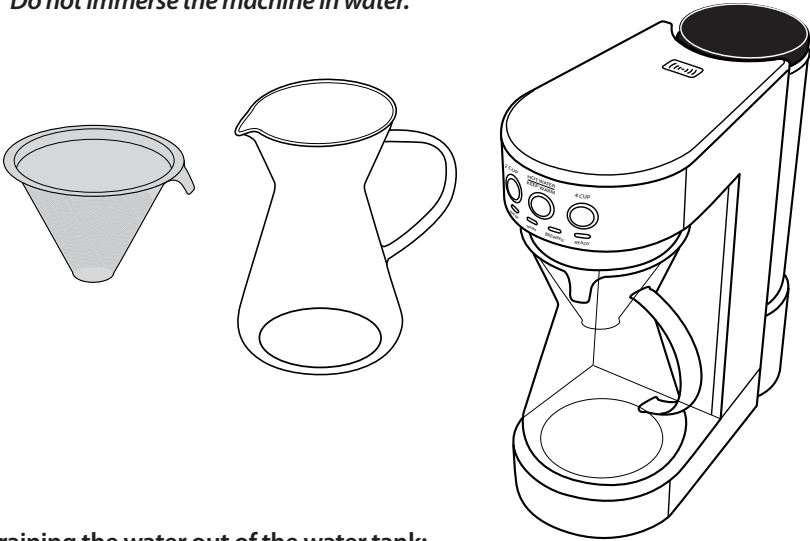

Draining the water out of the water tank:

### Bottom of Machine

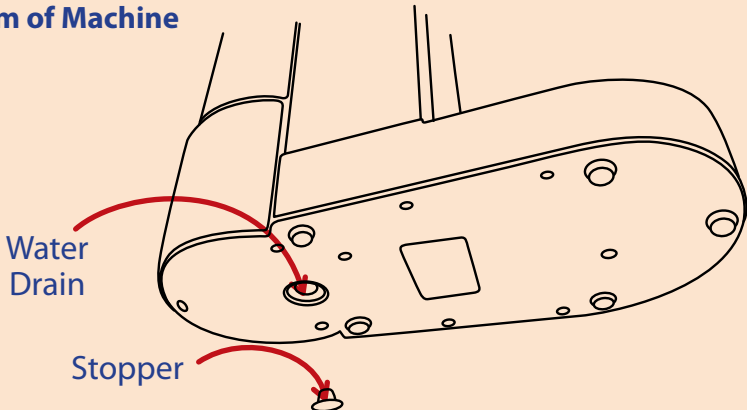 


**CLEANING MINERAL DEPOSITS:**

After using the coffee maker several times, lime scale can begin to build up inside the machine. Descale the machine every 2-3 months.

1. Fill the water tank with water and vinegar or lemon juice till the MAX line (about 1.8L).

The ratio of water to vinegar or lemon juice is 100:3.

 2. Press 2 cup button to boil water.
3. Repeat 3 to 5 times to make sure that the tank is clean.

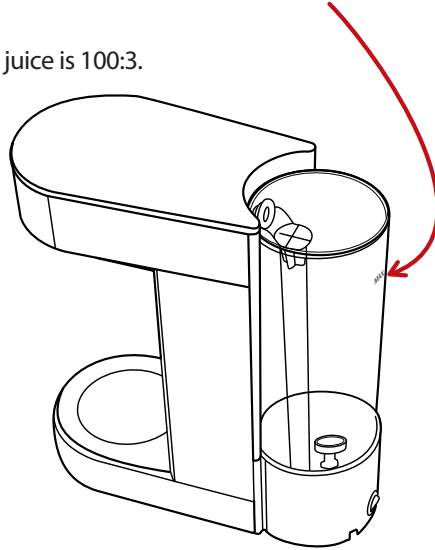

POWER : 1250W  
VOLTAGE: AC120V  
FREQUENCY: 60Hz  
WATER TANK CAPACITY: 1.8 L

**CAUTION:**

- While the appliance is in use, the water is constantly boiling. Therefore, you may hear boiling sounds coming from the machine.
- If the temperature of the water and the environment is very low when using the machine, it will take longer for the water to boil.
- After brewing is complete, water may still drip into the glass carafe.
- There may be some water drops on top of the steam outlet, due to steam that is being released.
- Do not remove the glass carafe from the base while machine is in use.

## TROUBLESHOOTING

<b>PROBLEM</b>	<b>POSSIBLE CAUSE</b>	<b>SOLUTION</b>
No water comes out.	Water tank is empty.	Pour water into the water tank.
	The input voltage or frequency is inconsistent with nameplate.	Make sure the voltage and frequency is consistent with the nameplate.
	Machine malfunctions	Please contact the authorized dealer.
Appliance is making noise.	Water tank is empty.	Pour water into the water tank.
	Pump not working.	Restart the machine by turning it off and allowing it to cool down.
	Implementation of the above operation problems still exist.	Please contact the authorized dealer.
Machine is NOT working.	The power outlet is not plugged in.	Plug the power cord into a wall outlet.
	Machine is overheating, causing the thermostat to malfunction.	Restart the machine by turning it off and allowing it to cool down.
	Machine malfunctions.	Please contact the authorized dealer.
Function button is not working.	Indicator and button lights do not appear.	Please contact the authorized dealer.
	There is no cup or carafe in place.	Place the carafe on the base.

WATER	KEEP WARM	BREWING	READY
Indicator light will flash when there is no water or not enough water	Indicator light is on, and will turn off after 2 hours.	Indicator light is always on for 2 CUP, 4 CUP and hot water	Indicator light will flash for ten seconds before coffee is ready and will stay on until machine goes into keep warm mode.

## **WARRANTY & SERVICE**

This Limited Warranty is for one full year from the date of purchase. It is applicable to the original purchaser only and is not transferable to a third party user. Repair or replacement of defective parts is solely at the seller's discretion. In the event that repair isn't possible, the seller will replace the product/part. If product repair/replacement won't suffice, the seller has the option of refunding the cash value of the product or component returned.

Product defects not covered under the Warranty provisions include normal wear and damage incurred from use or accidental negligence, misuse of instruction specifications or repair by unauthorized parties. The manufacturing company is not liable for any incidental or consequential damages incurred by such circumstances.

**FOR CUSTOMER SERVICE  
QUESTIONS OR COMMENTS  
VISIT US @ [GOURMIA.COM](http://GOURMIA.COM)  
EMAIL [INFO@GOURMIA.COM](mailto:INFO@GOURMIA.COM)  
OR CALL 888.552.0033**

**G** **ourmia**